








5x3 FT Outdoor Storage Shed
MS2608









Scan for Installation Video

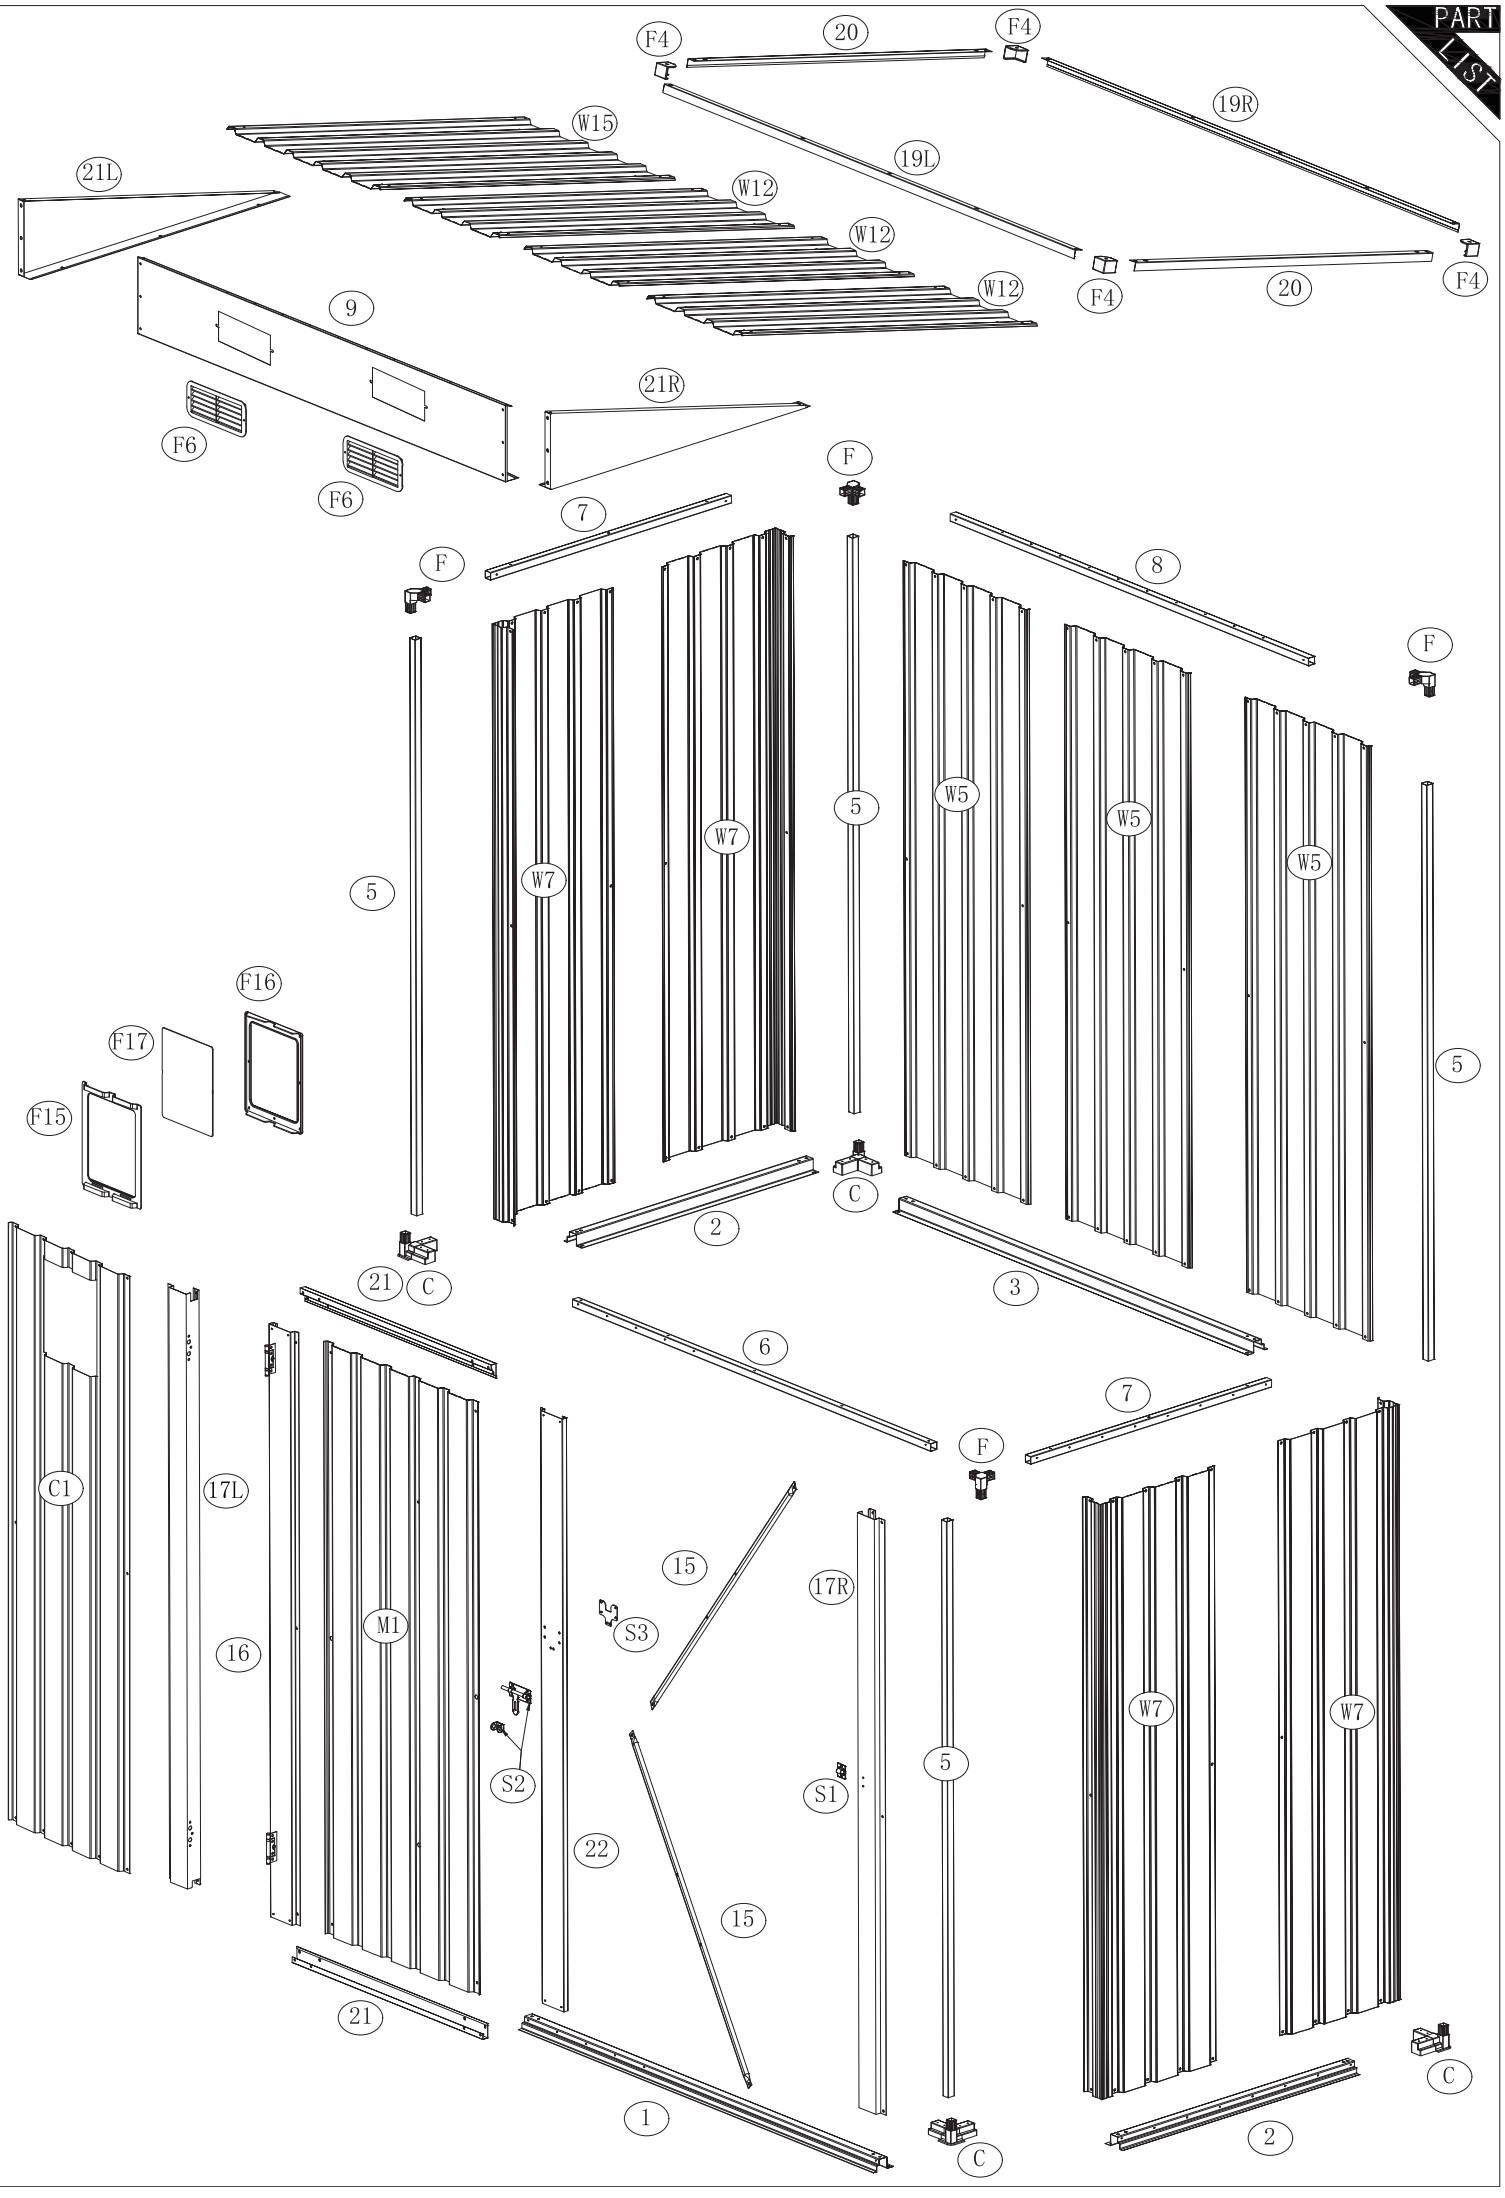



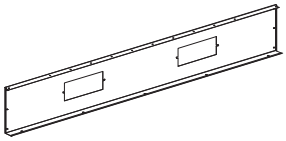
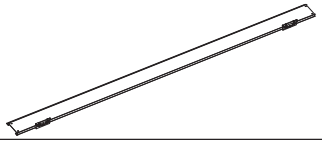
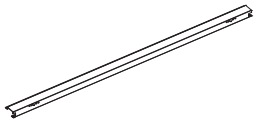
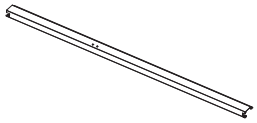






PART LIST


F4
20
F4
19R
W15
19L
21L
W12
W12
W12
F4
20
F4
9
21R
F6
F6
F
7
F
8
F
5
W7
W7
5
W5
W5
W5
5
F16
F17
F15
C
2
3
21
C
6
7
F
C1
17L
M1
16
15
17R
S3
S2
S1
22
15
5
W7
W7
21
1
C
2
C

NO.	PART.	Qty.
1		1
2		2
3		1
5		4
6		1
7		2
8		1
9		1
15		2
16		1
17L		1
17R		1
19L		1
19R		1

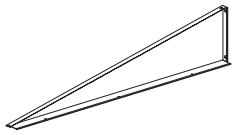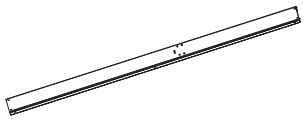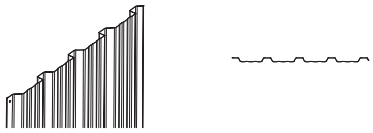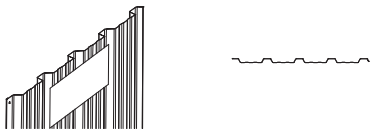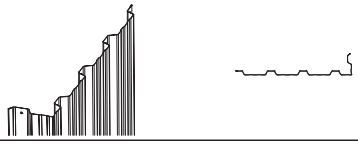NO.	PART.	Qty.
20		2
21		2
21L		1
21R		1
23		1
W5		3
C1		1
W7		4
W12		3
W15		1
M1		1
C		4
F		4
F4		4

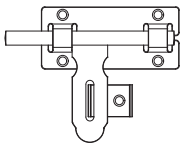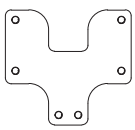NO.	PART.	Qty.
F6		2
F7		38
F8		29
F9		2
F15		1
F16		1
F17		1
S1		1
S2		1
S3		1
S4		159
S6		35
S6A		5
S7		34

NO.	PART.	Qty.
S8		4
S9		4
S12		1
S15		1

Before You Start

* Preparation: Assembly requires 2 people and takes about 2 - 3 hours. Please check all parts against the list before starting.

* Site Requirements: Install on a flat, hard surface. Leave at least 60cm (2 ft) of clearance around the shed for easy access.

* Safety First: Wear gloves throughout the process—metal edges are sharp. Ensure ladders are stable when working at heights.

* Pro Tip: During frame assembly, tighten screws to about 80% first. Fully tighten them only after the entire frame is squared up to prevent misaligned holes.


Step 1: Build the Base Frame


NO.	PART.	Qty.
1		1
2		2
3		1
C		4
S4		16

Step 2: Install Posts


NO.	PART.	Qty.
5		4

Step 3: Install Top Frame


NO.	PART.	Qty.
6		1
7		2
8		1
F		4
S4		8

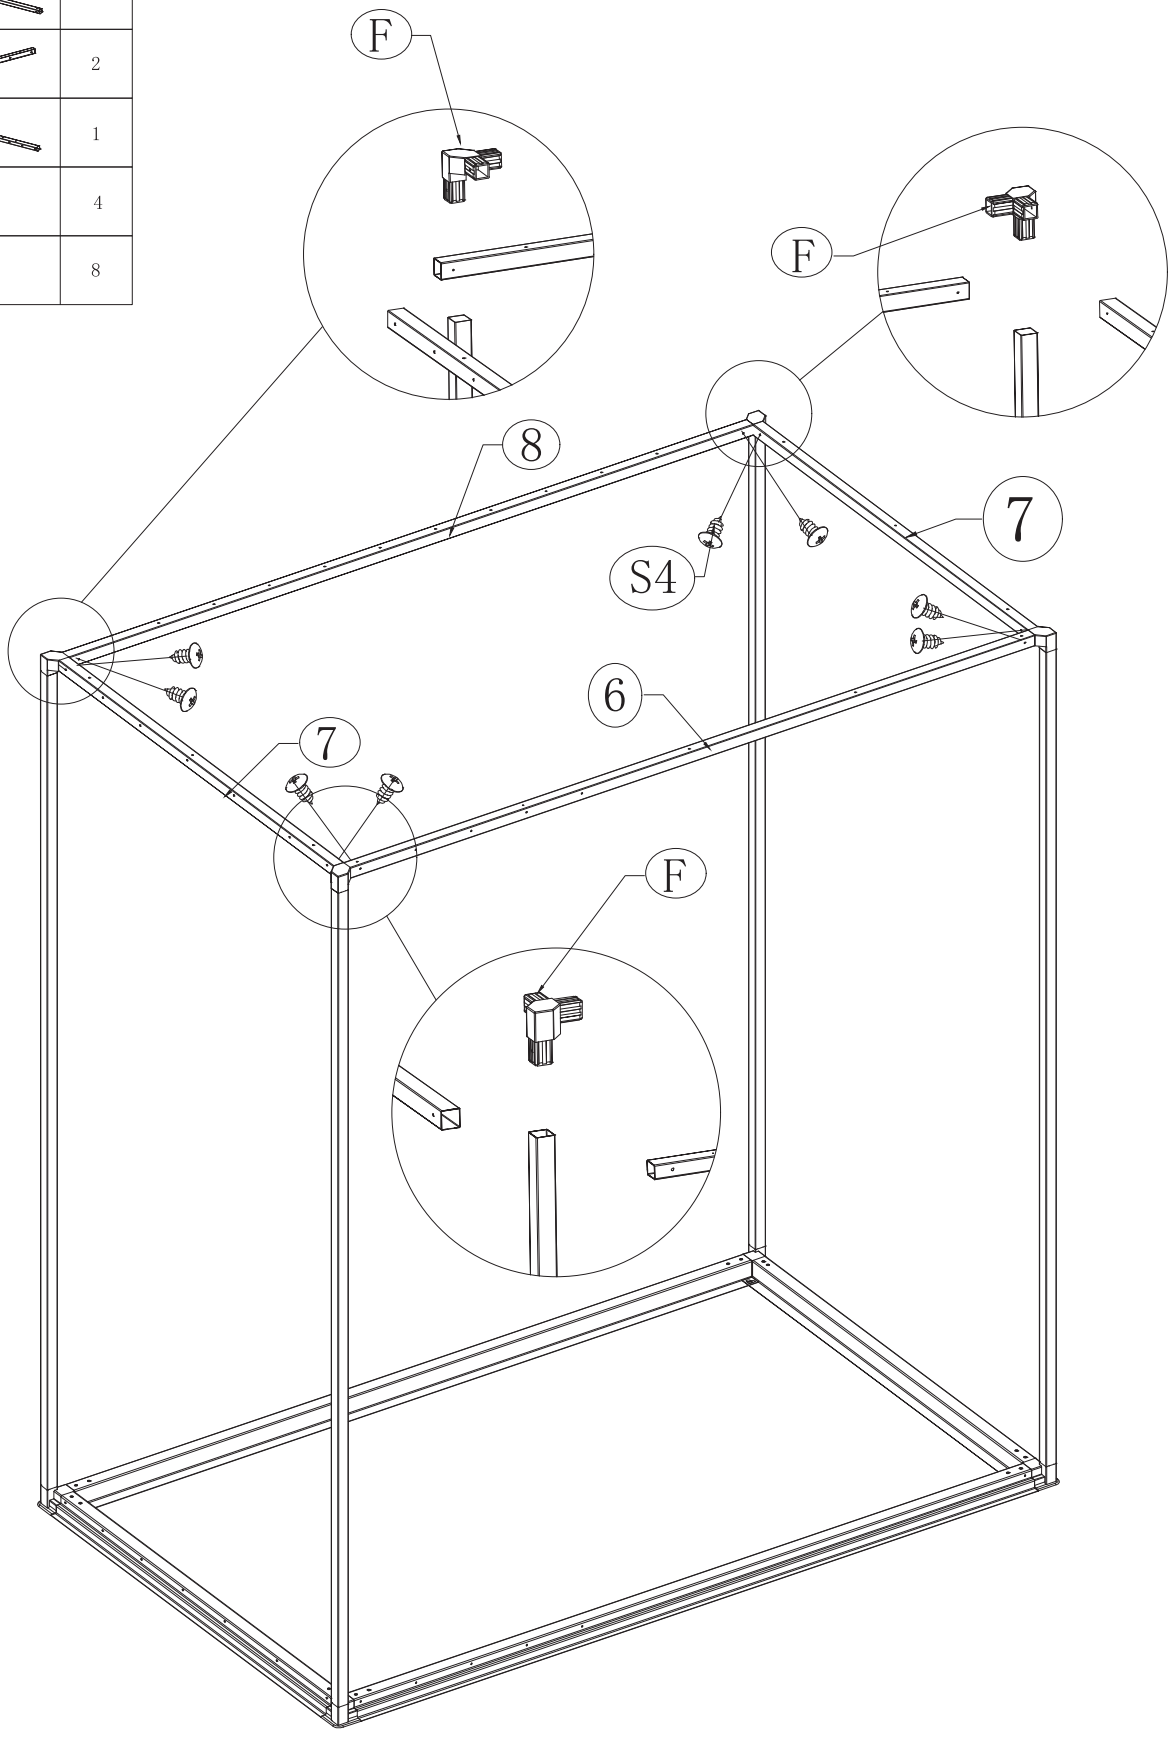



Step 4: Install the Side & Back Wall Panels


NO.	PART.	Qty.
W7		4
S4		14
S6		1
S7		1


Tips: Use S6 screws and S7 nuts for the middle, and S4 screws for the top and bottom.

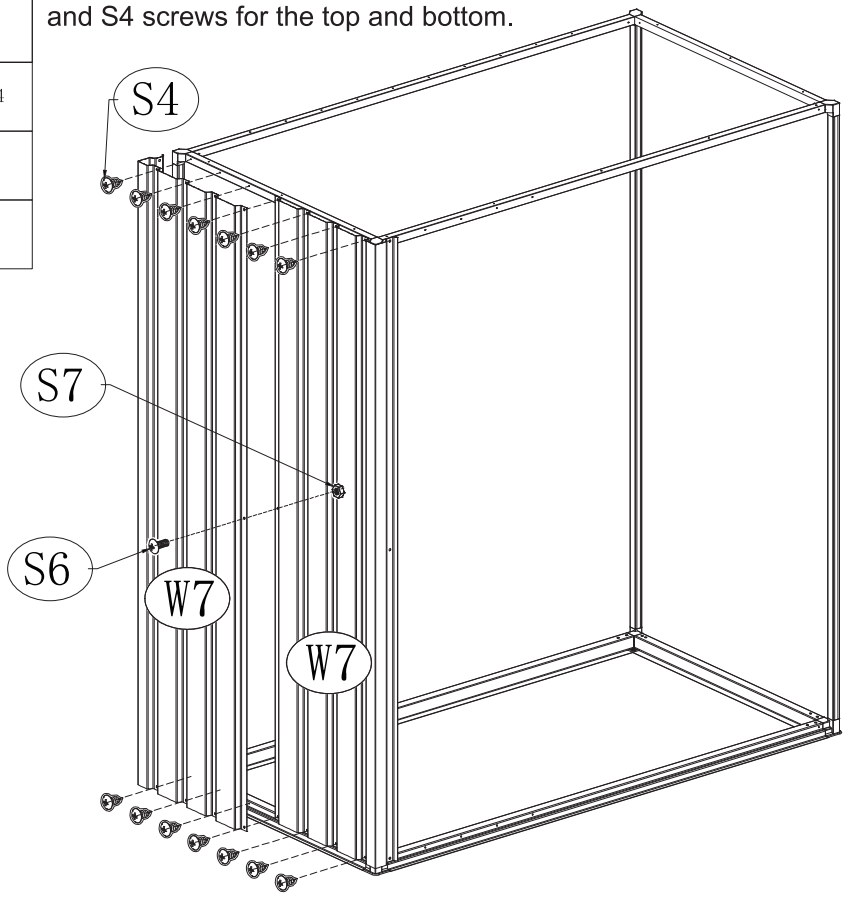



NO.	PART.	Qty.
W7		4
S4		14
S6		1
S7		1

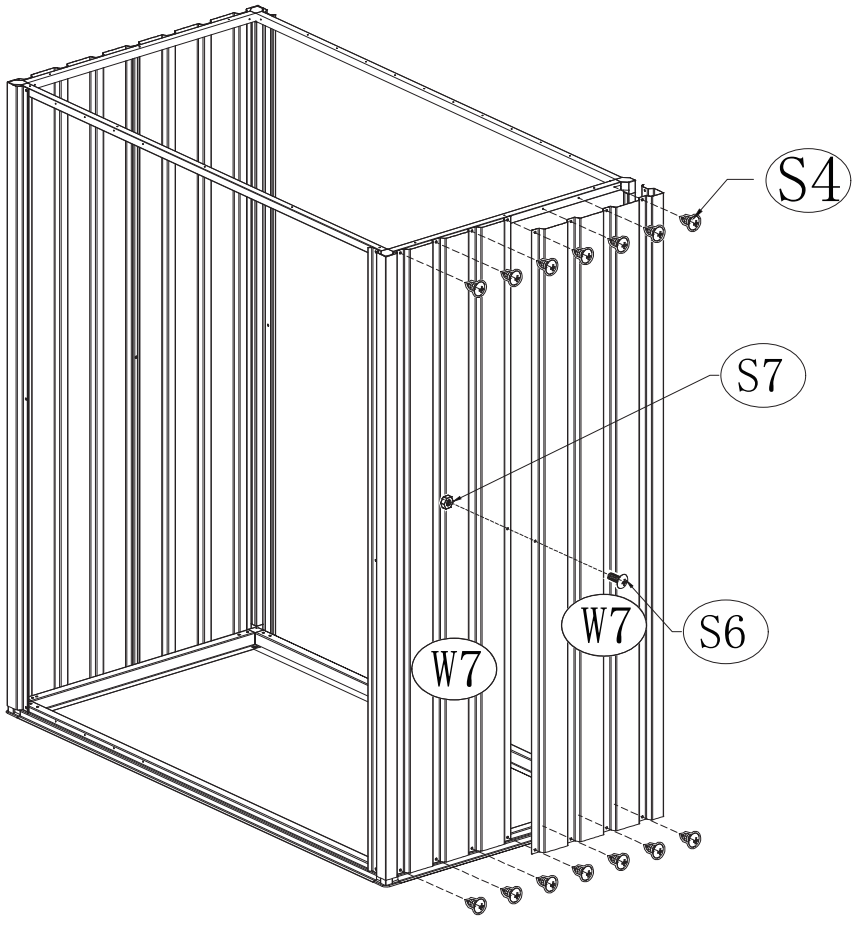

NO.	PART.	Qty.
W5		3
S4		26
S6		3
S7		3

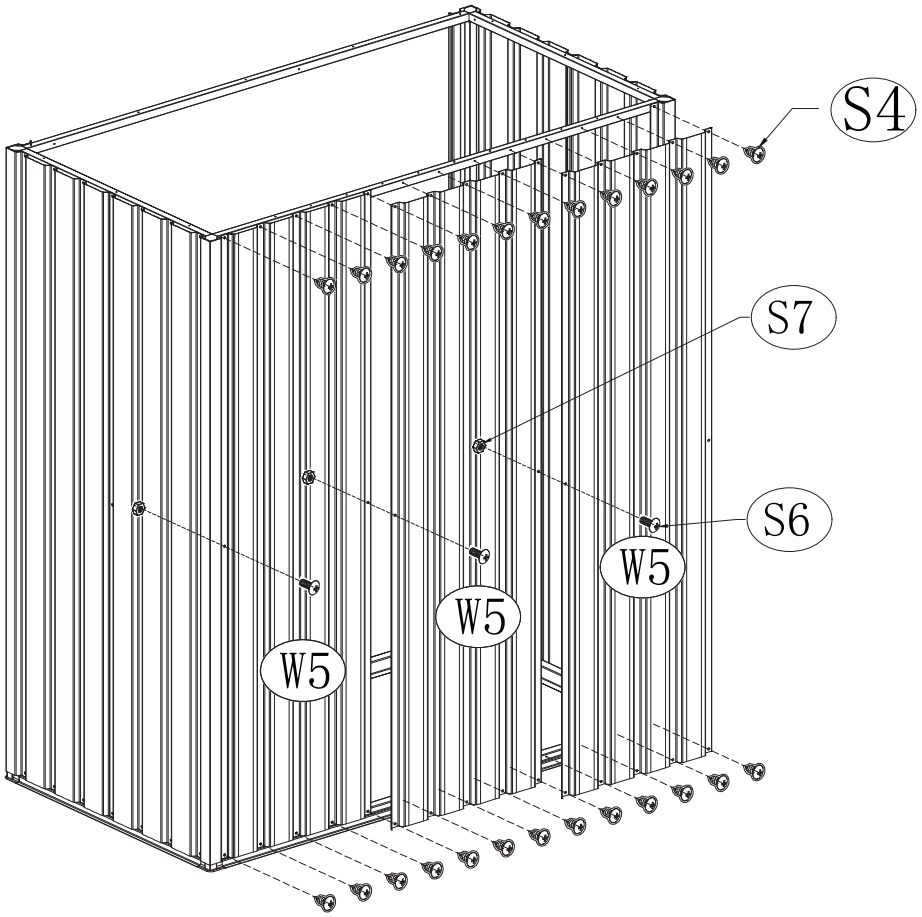



NO.	PART.	Qty.
C1		1
S4		8
S6		1
S7		1


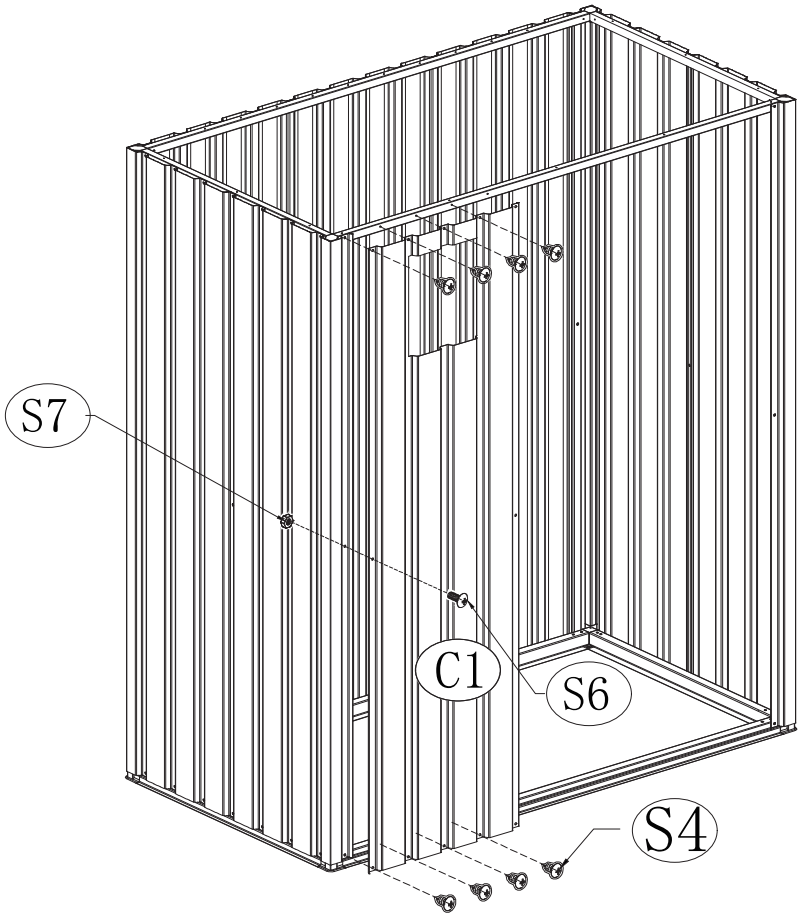



Step 5: Install the Window

NO.	PART.	Qty.
F15		1
F16		1
F17		1
S4		8

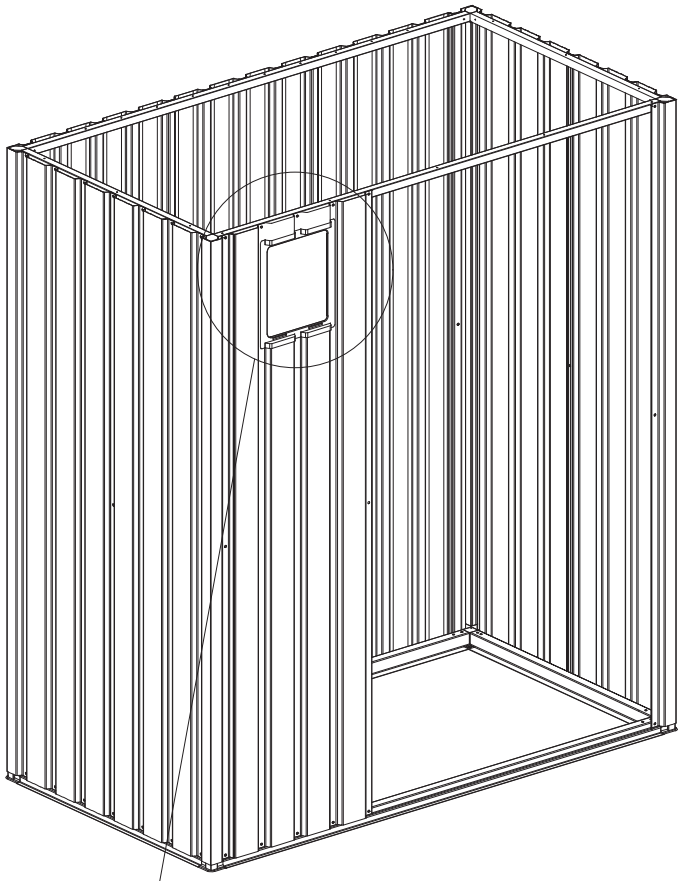

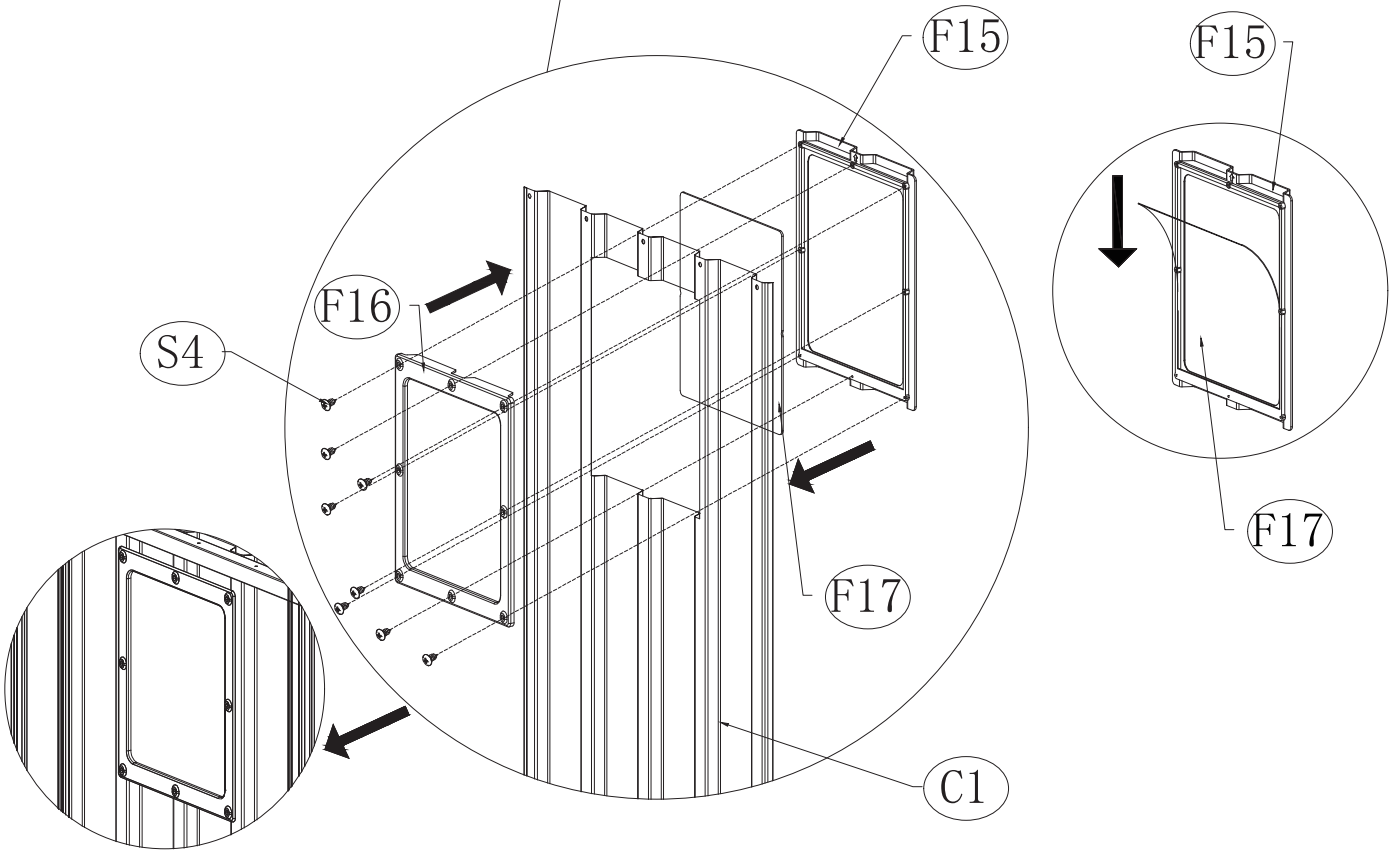



NO.	PART.	Qty.
17L		1
17R		1
S4		8
S6		4
S7		4
S1		1

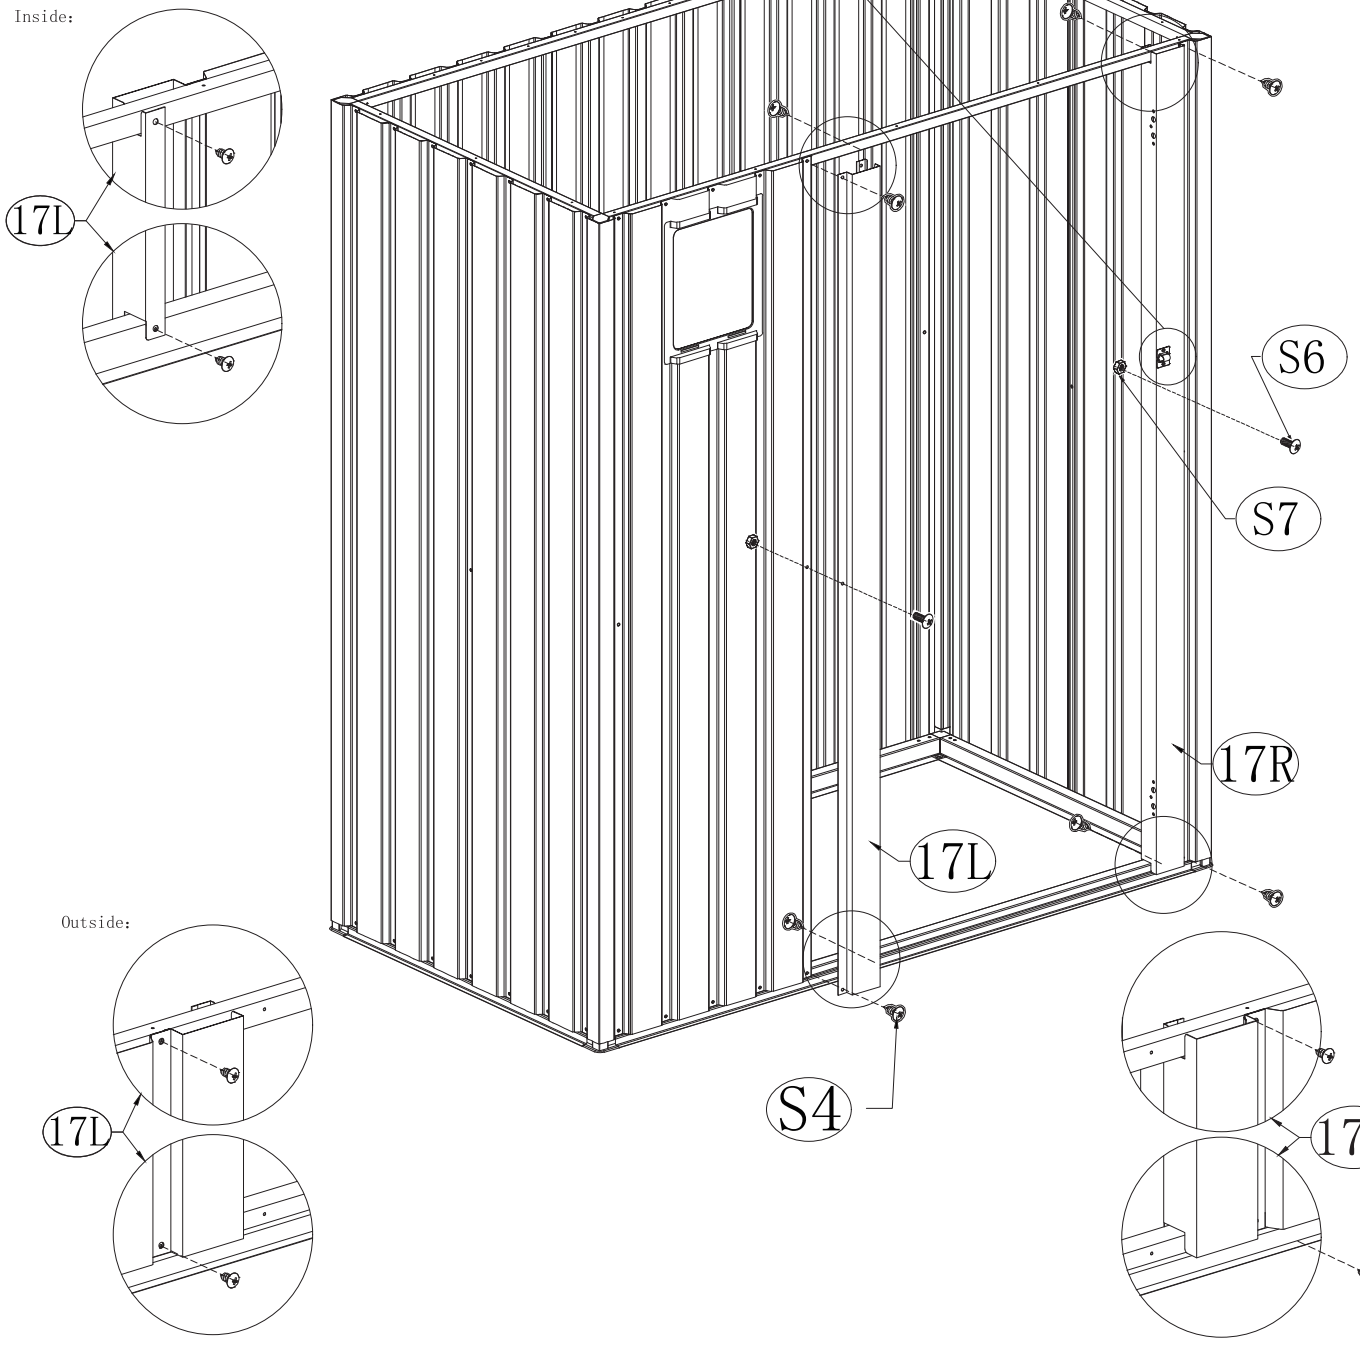

NO.	PART.	Qty.
21L		1
21R		1
S4		6

Tips: Use S4 for downward installation.

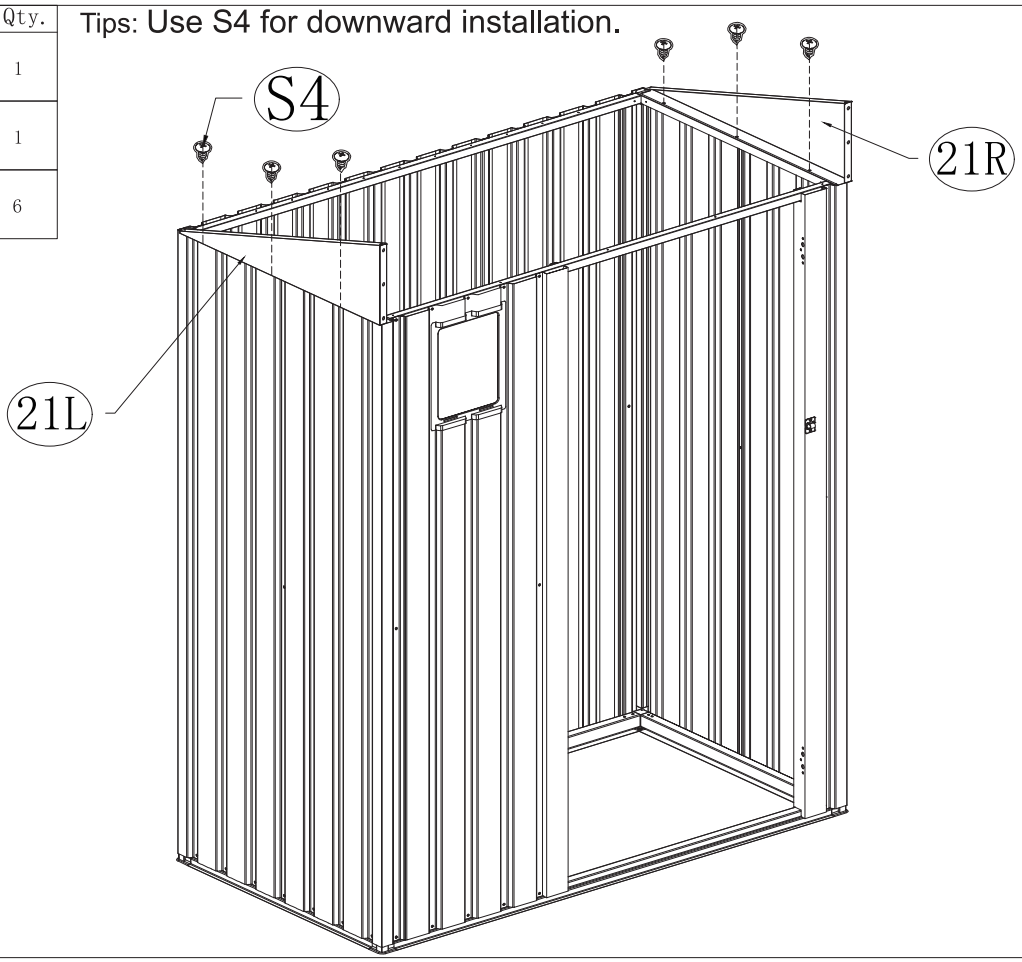


NO.	PART.	Qty.
9		1
S4		5
S6		10
S7		10
F6		2

Use S4 for downward installation, and S6 with S7 for horizontal mounting.

Step 6: Lay the Roof Panels


NO.	PART.	Qty.
W12		3
W15		1
S4		24
F7		24

Use S4 and F7 for all installations.

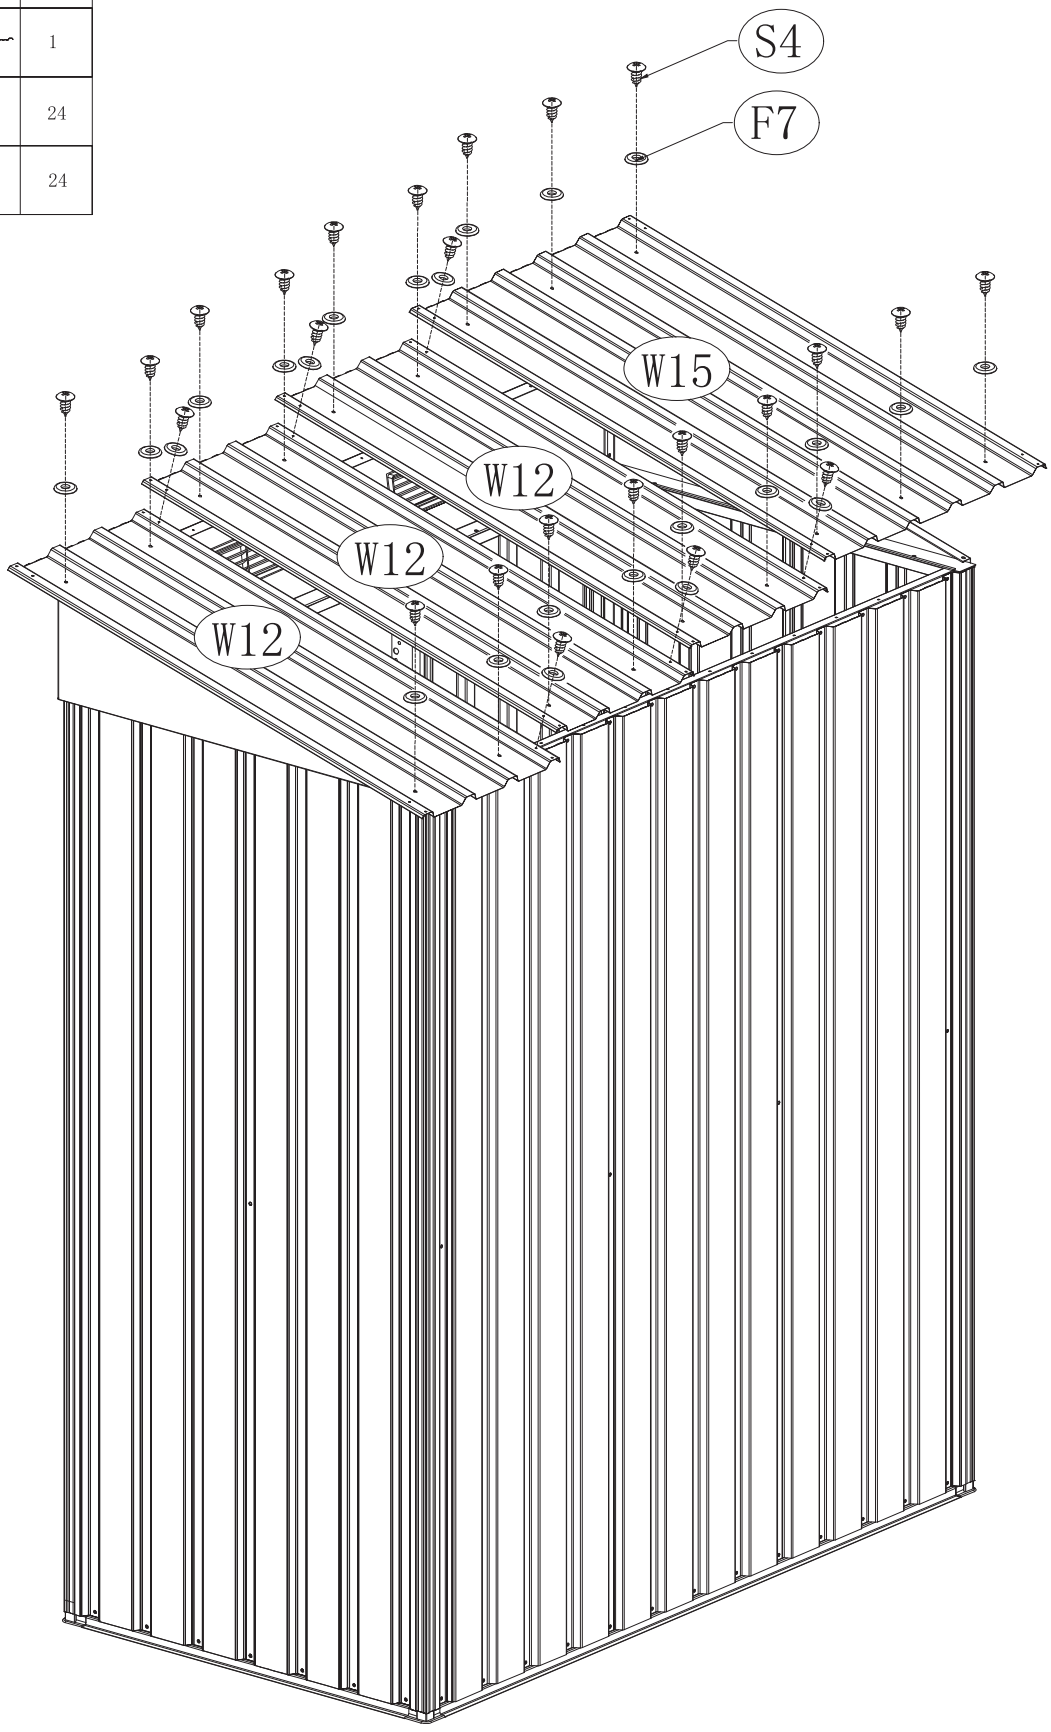


NO.	PART.	Qty.
20		2
S4		4
F7		4

Use S4 and F7 for all installations.

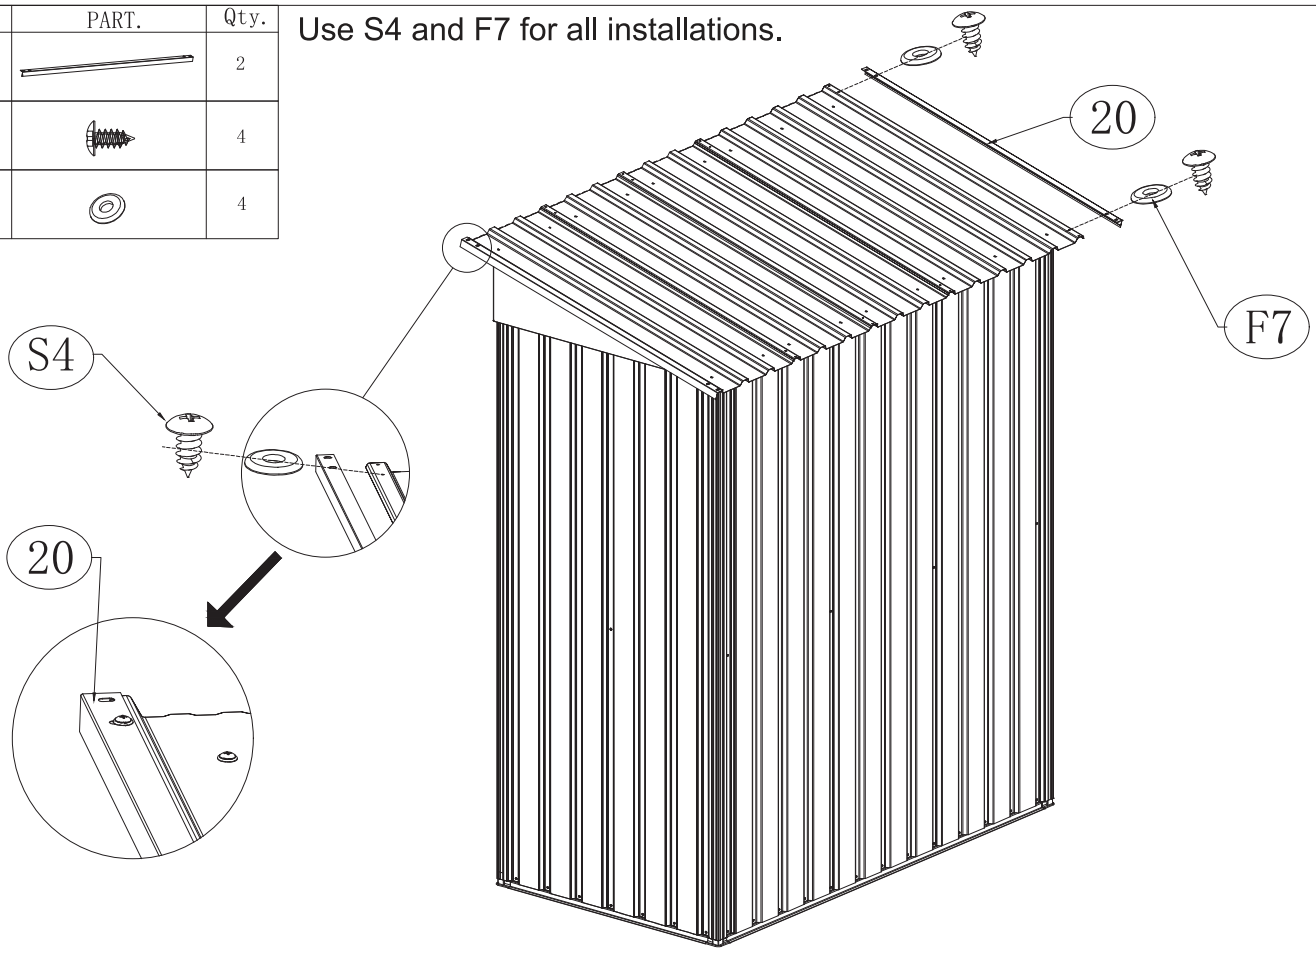


NO.	PART.	Qty.
19L		1
19R		1
S4		6
S8		4
F4		4
F7		10

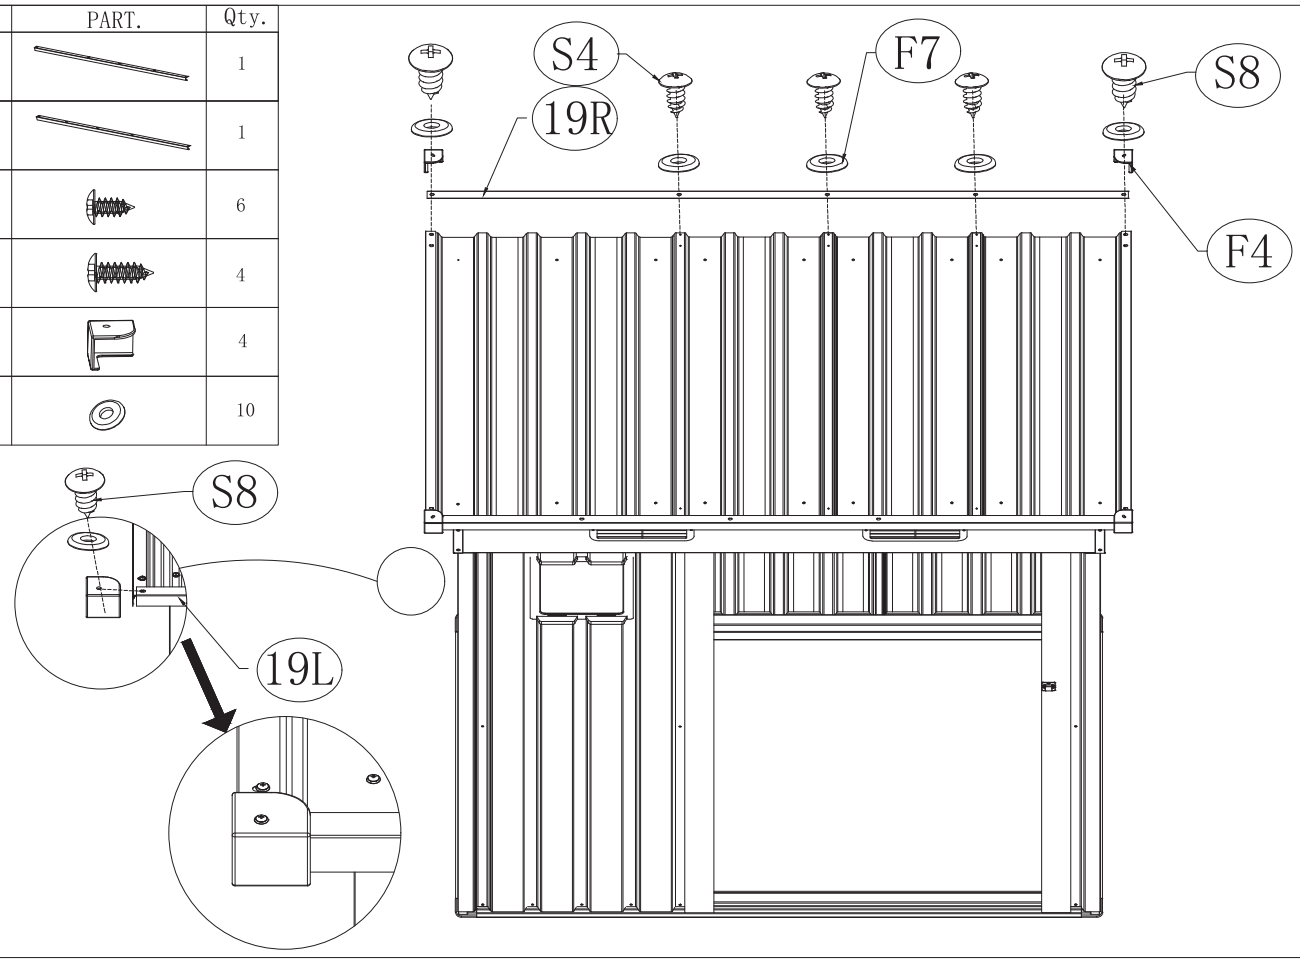

NO.	PART.	Qty.
F8		29


Mount F8 at the bottom of all visible screws under the eaves.

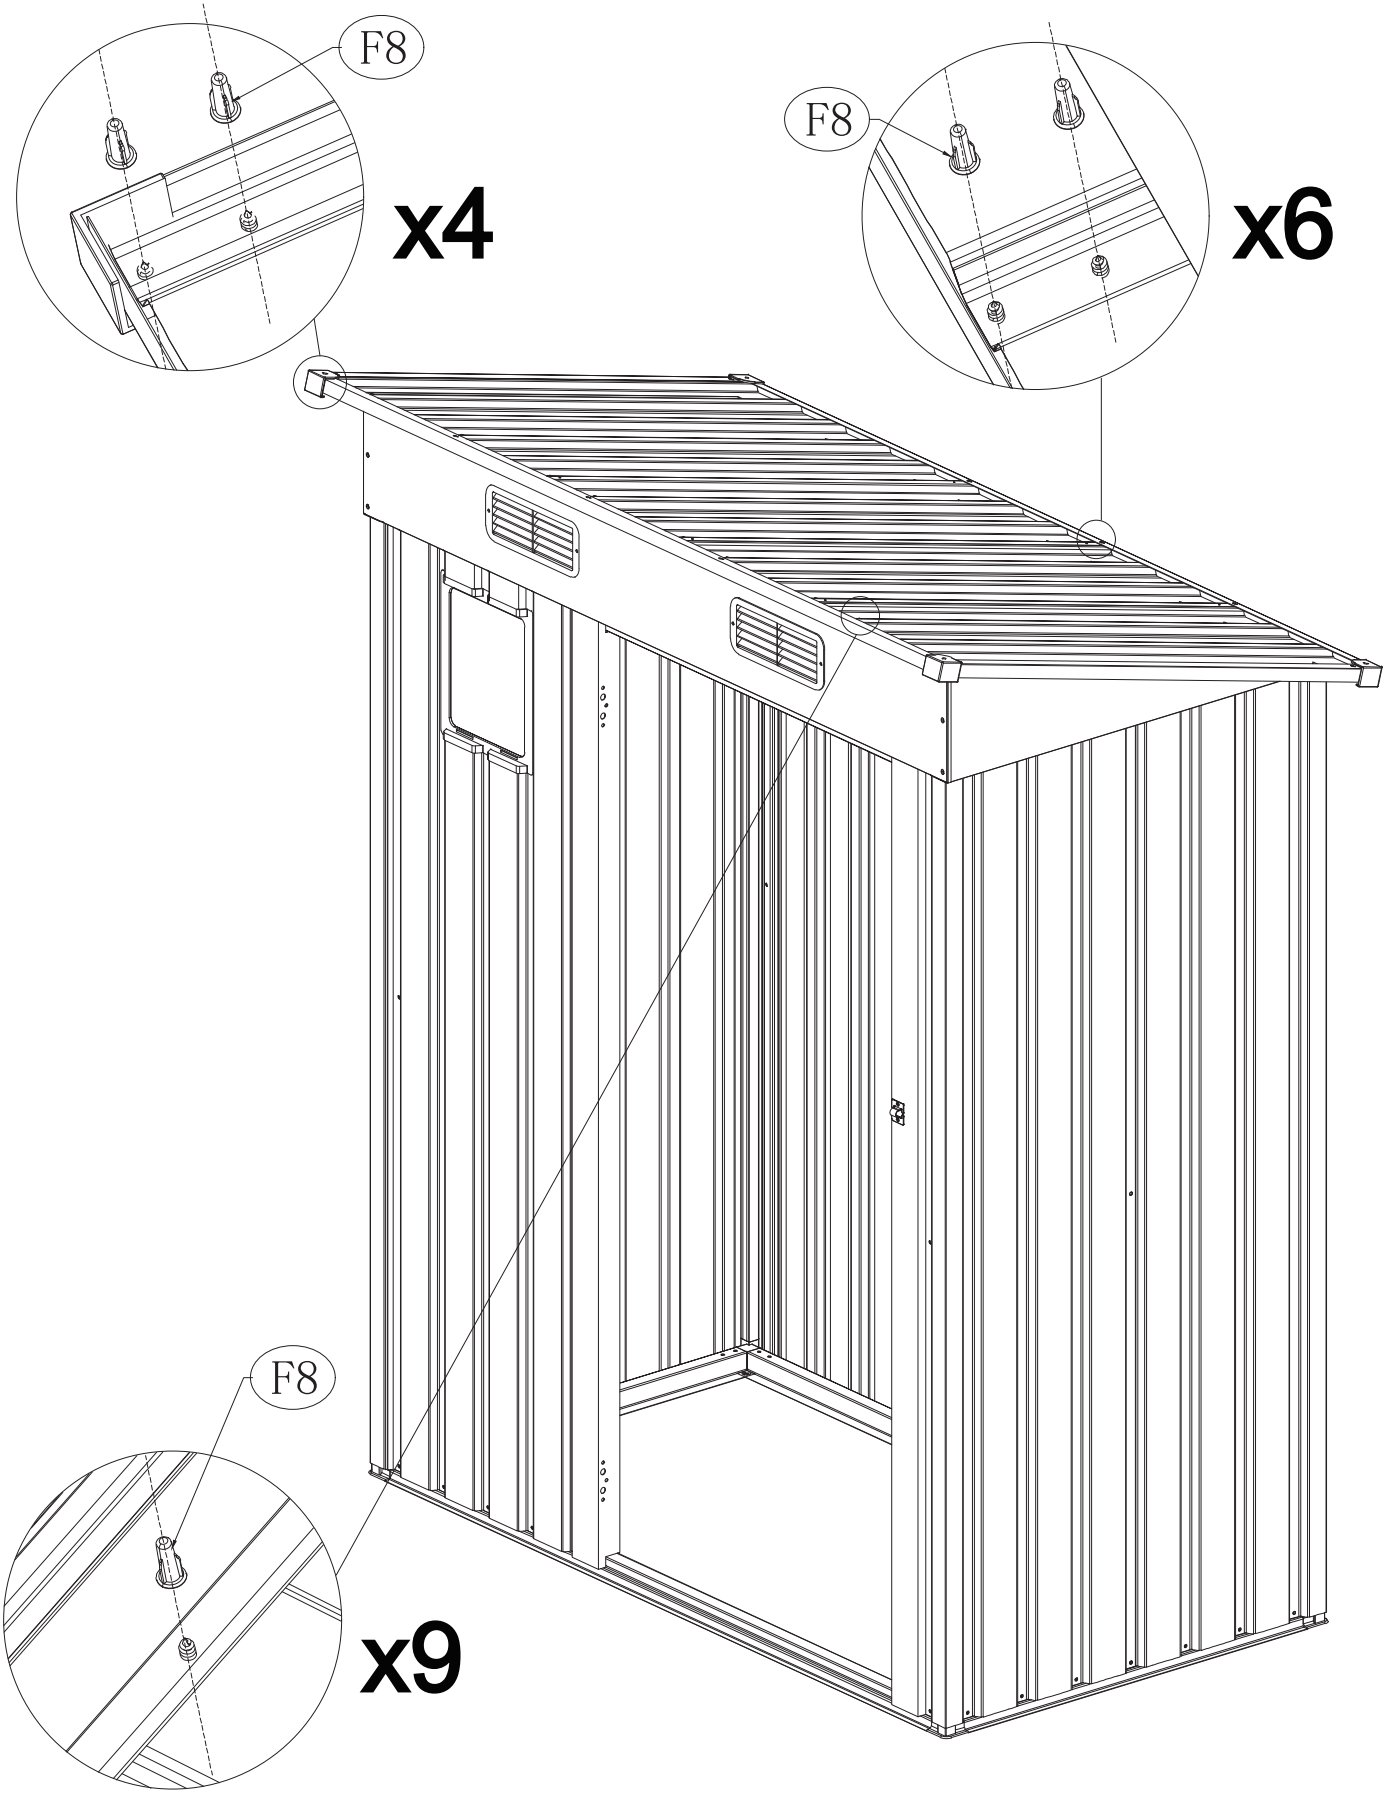


Step 7: Assemble the Door

NO.	PART.	Qty.
21		2
16		1
23		1
M1		1


Put 16 on the side farther from the hole in the center of the tile and 23 on the side nearer.

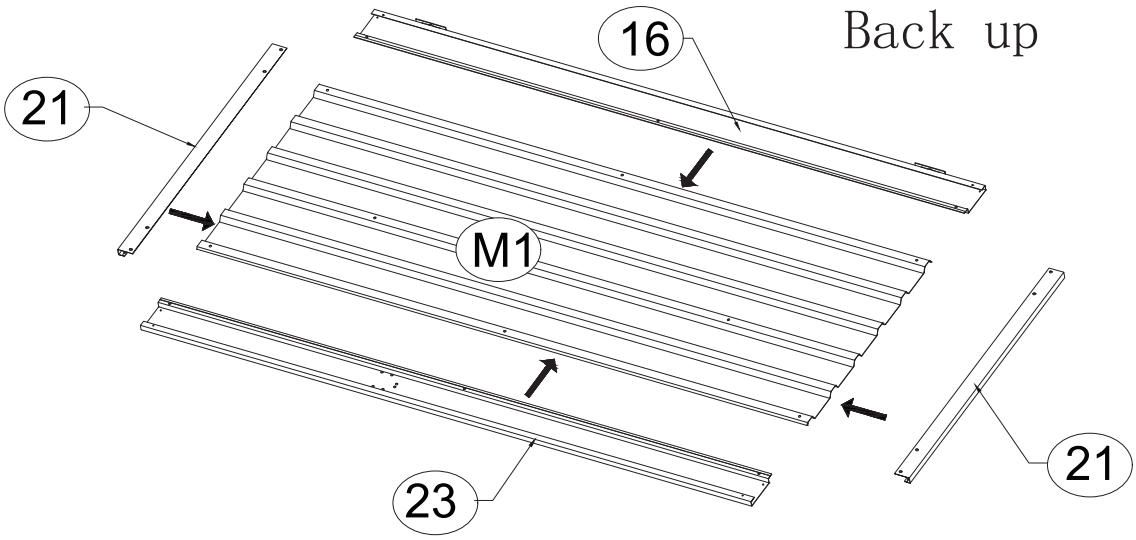


NO.	PART.	Qty.
S4		4

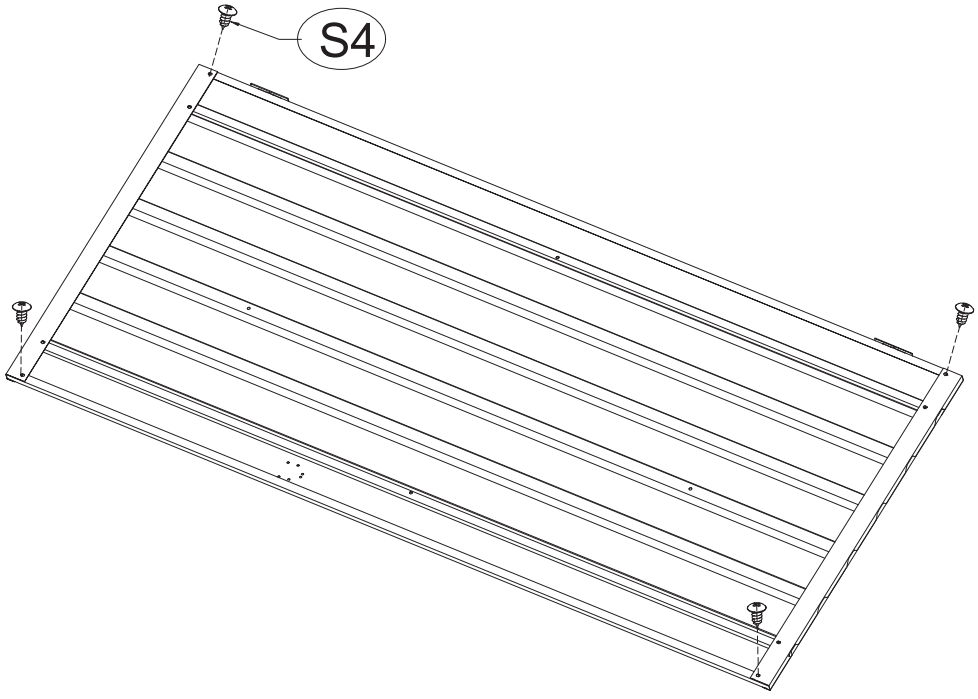

NO.	PART.	Qty.
15		2
S6		3
S6A		5
S7		8

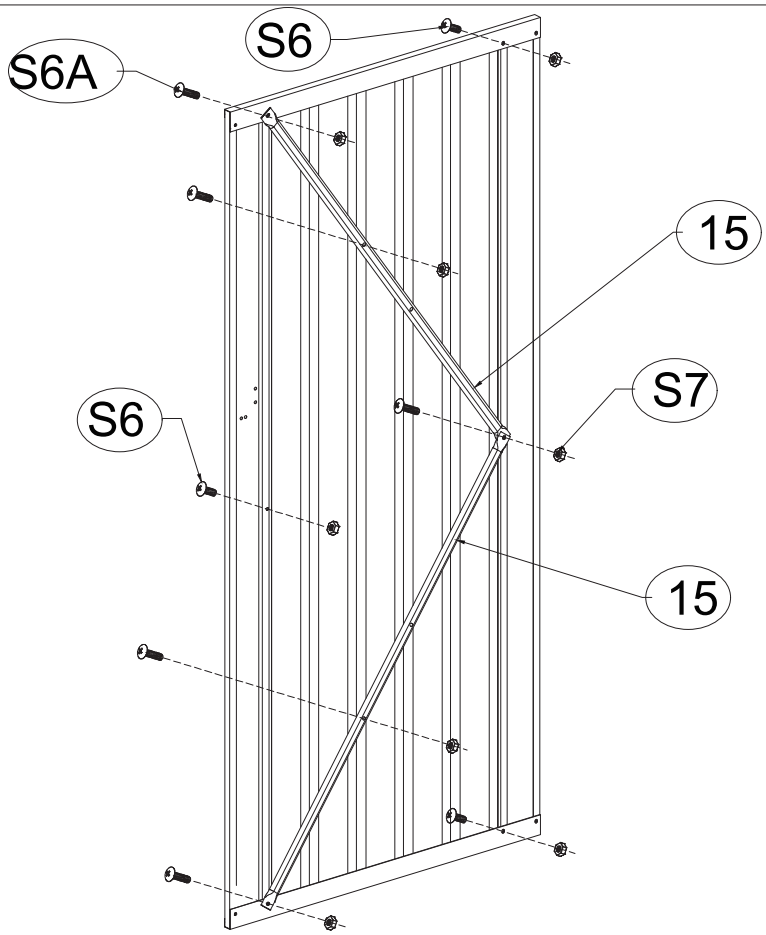



NO.	PART.	Qty.
S2		1
S3		1
S4		8
S6		6

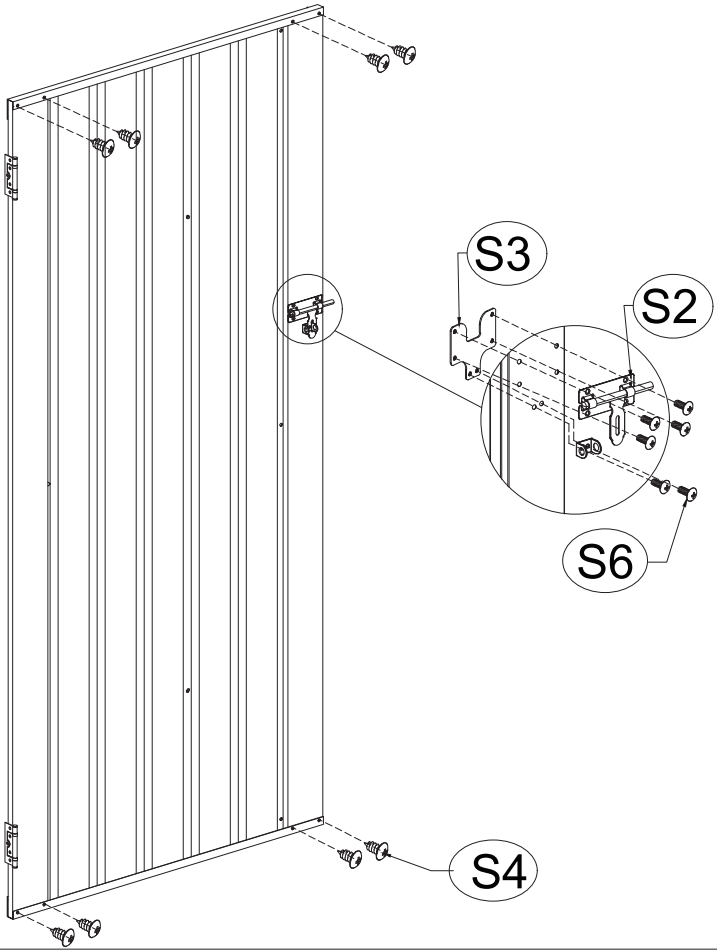


Step 8: Hang the Door & Install Door Stop

NO.	PART.	Qty.
S6		6
S7		6
S9		4

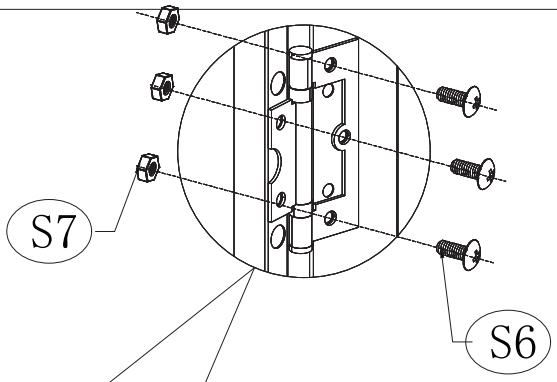

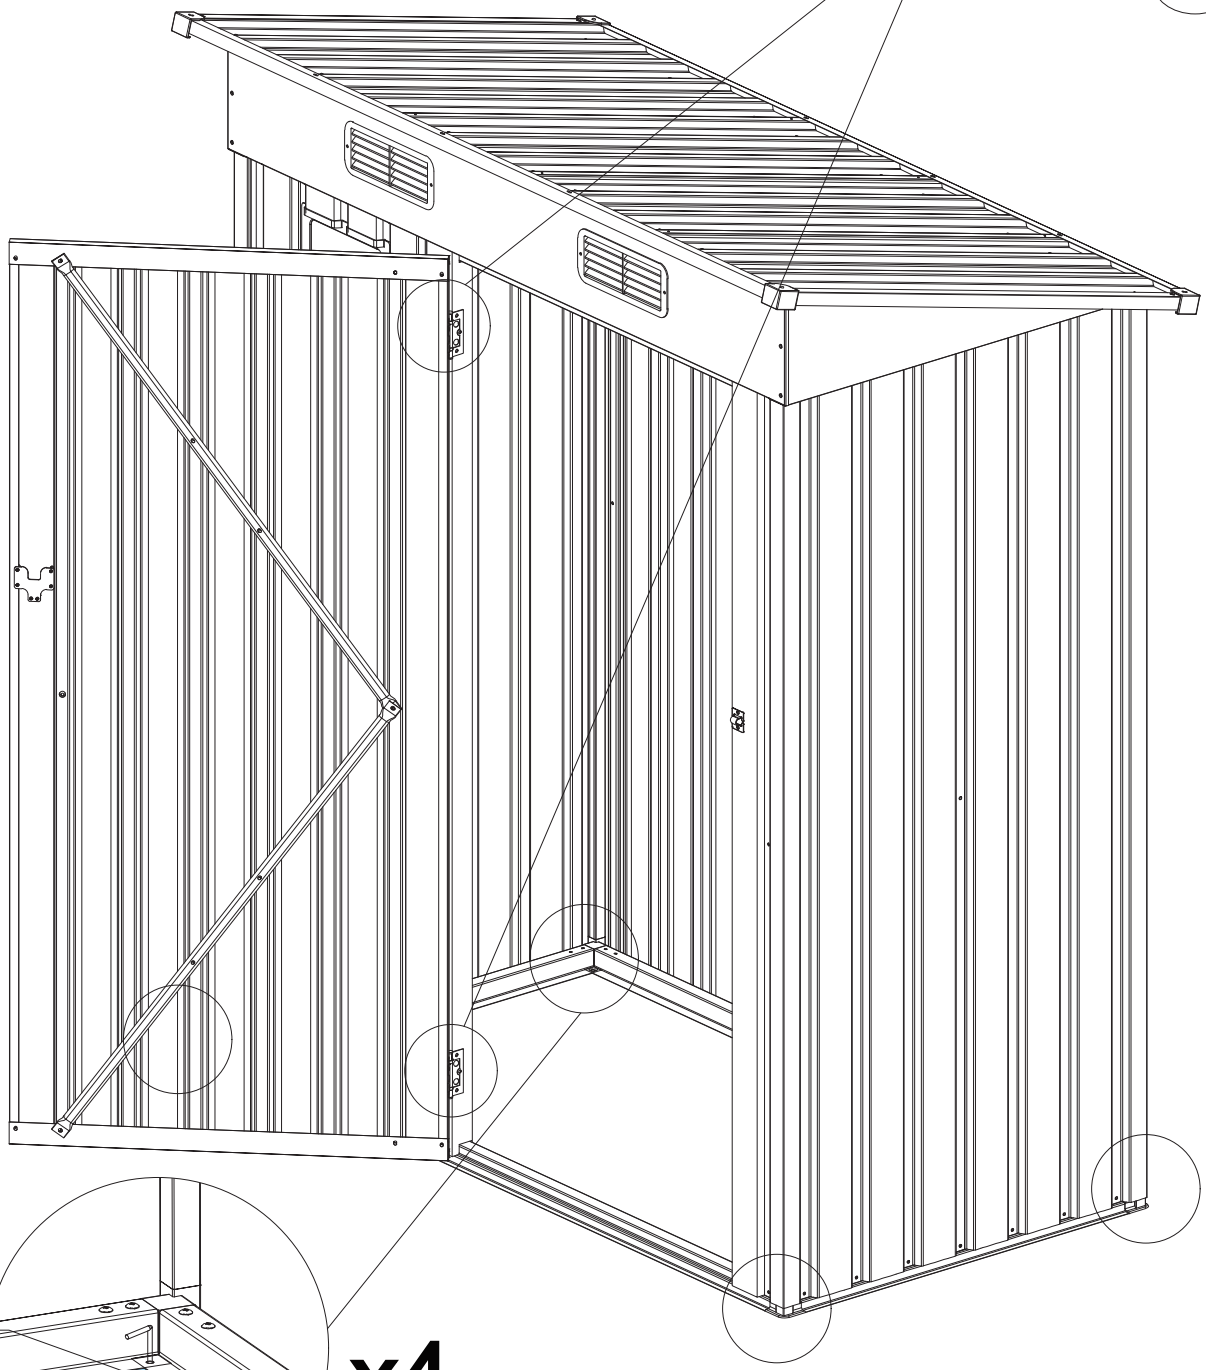

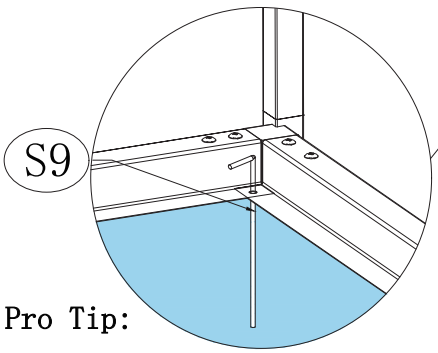

x4

Pro Tip:

Test the door opens and closes smoothly before fully tightening hinge screws — prevents sagging and scraping.