




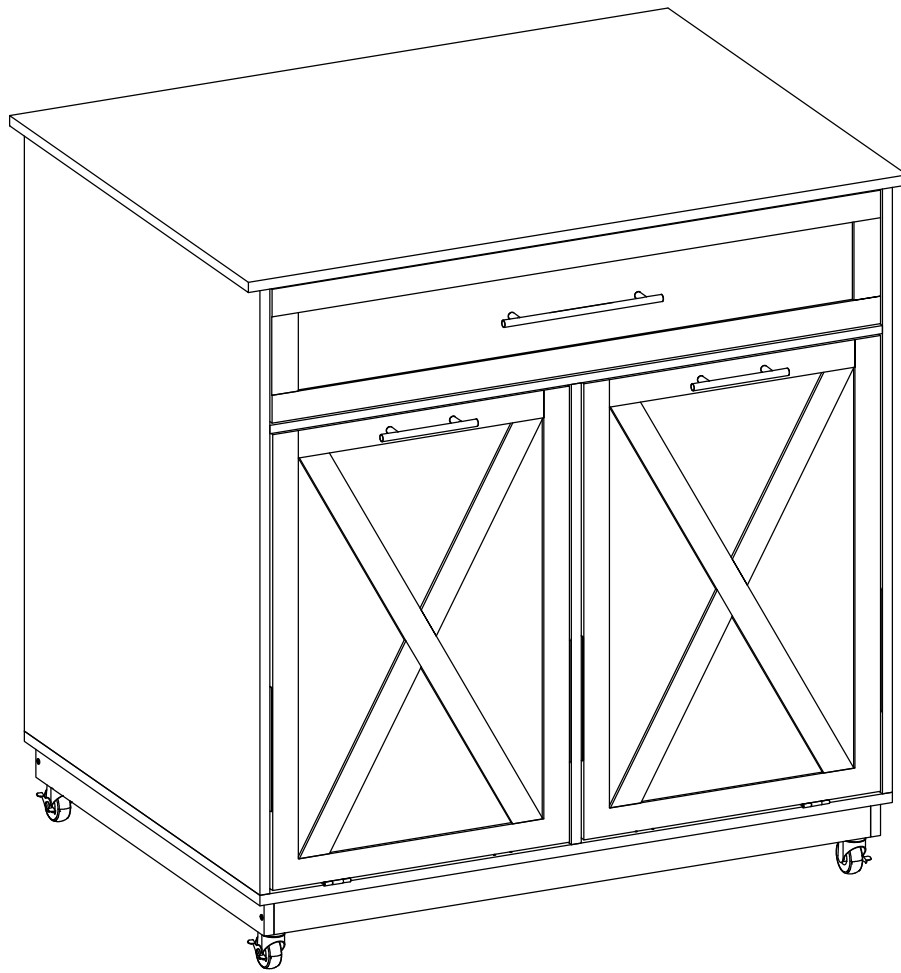


"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"

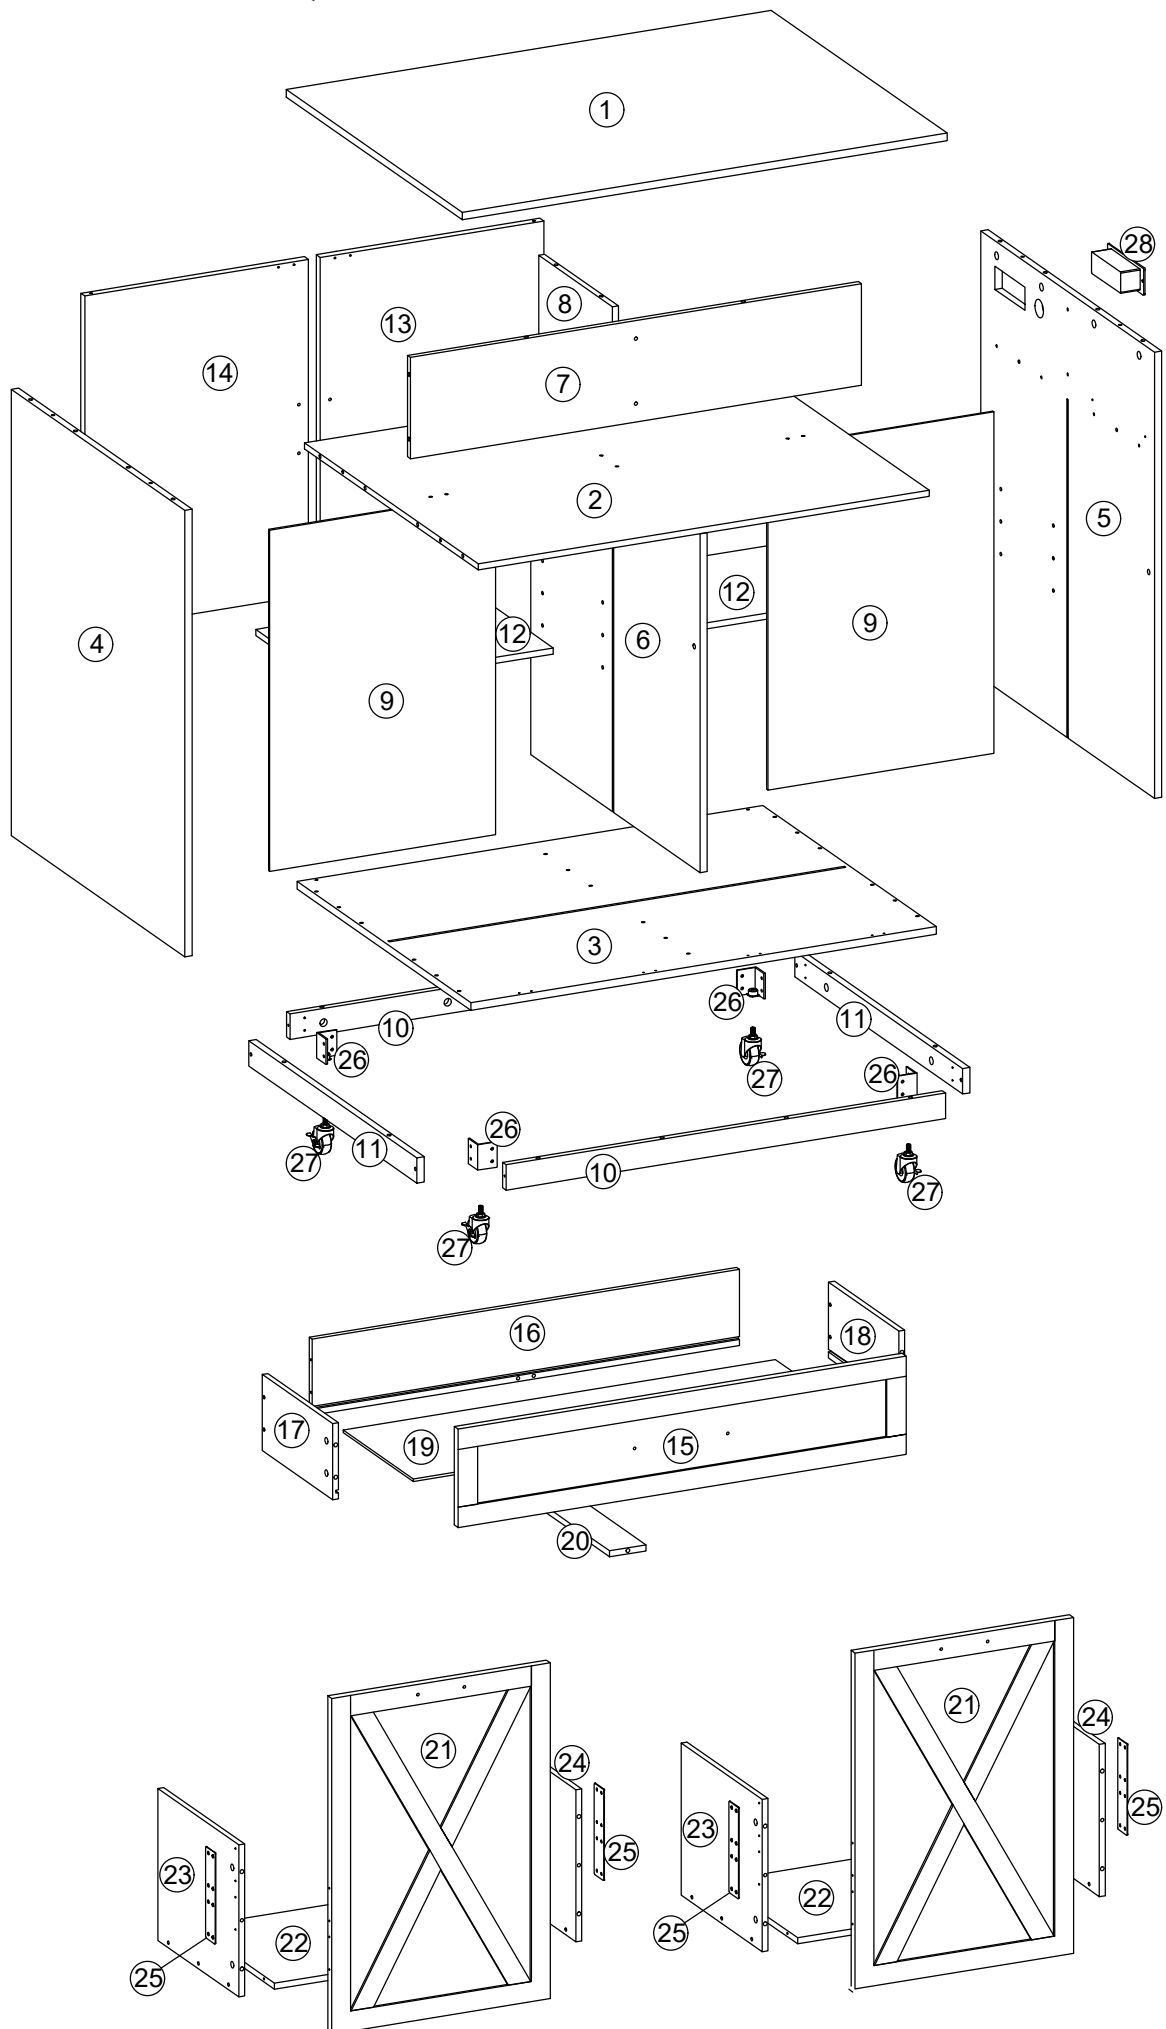


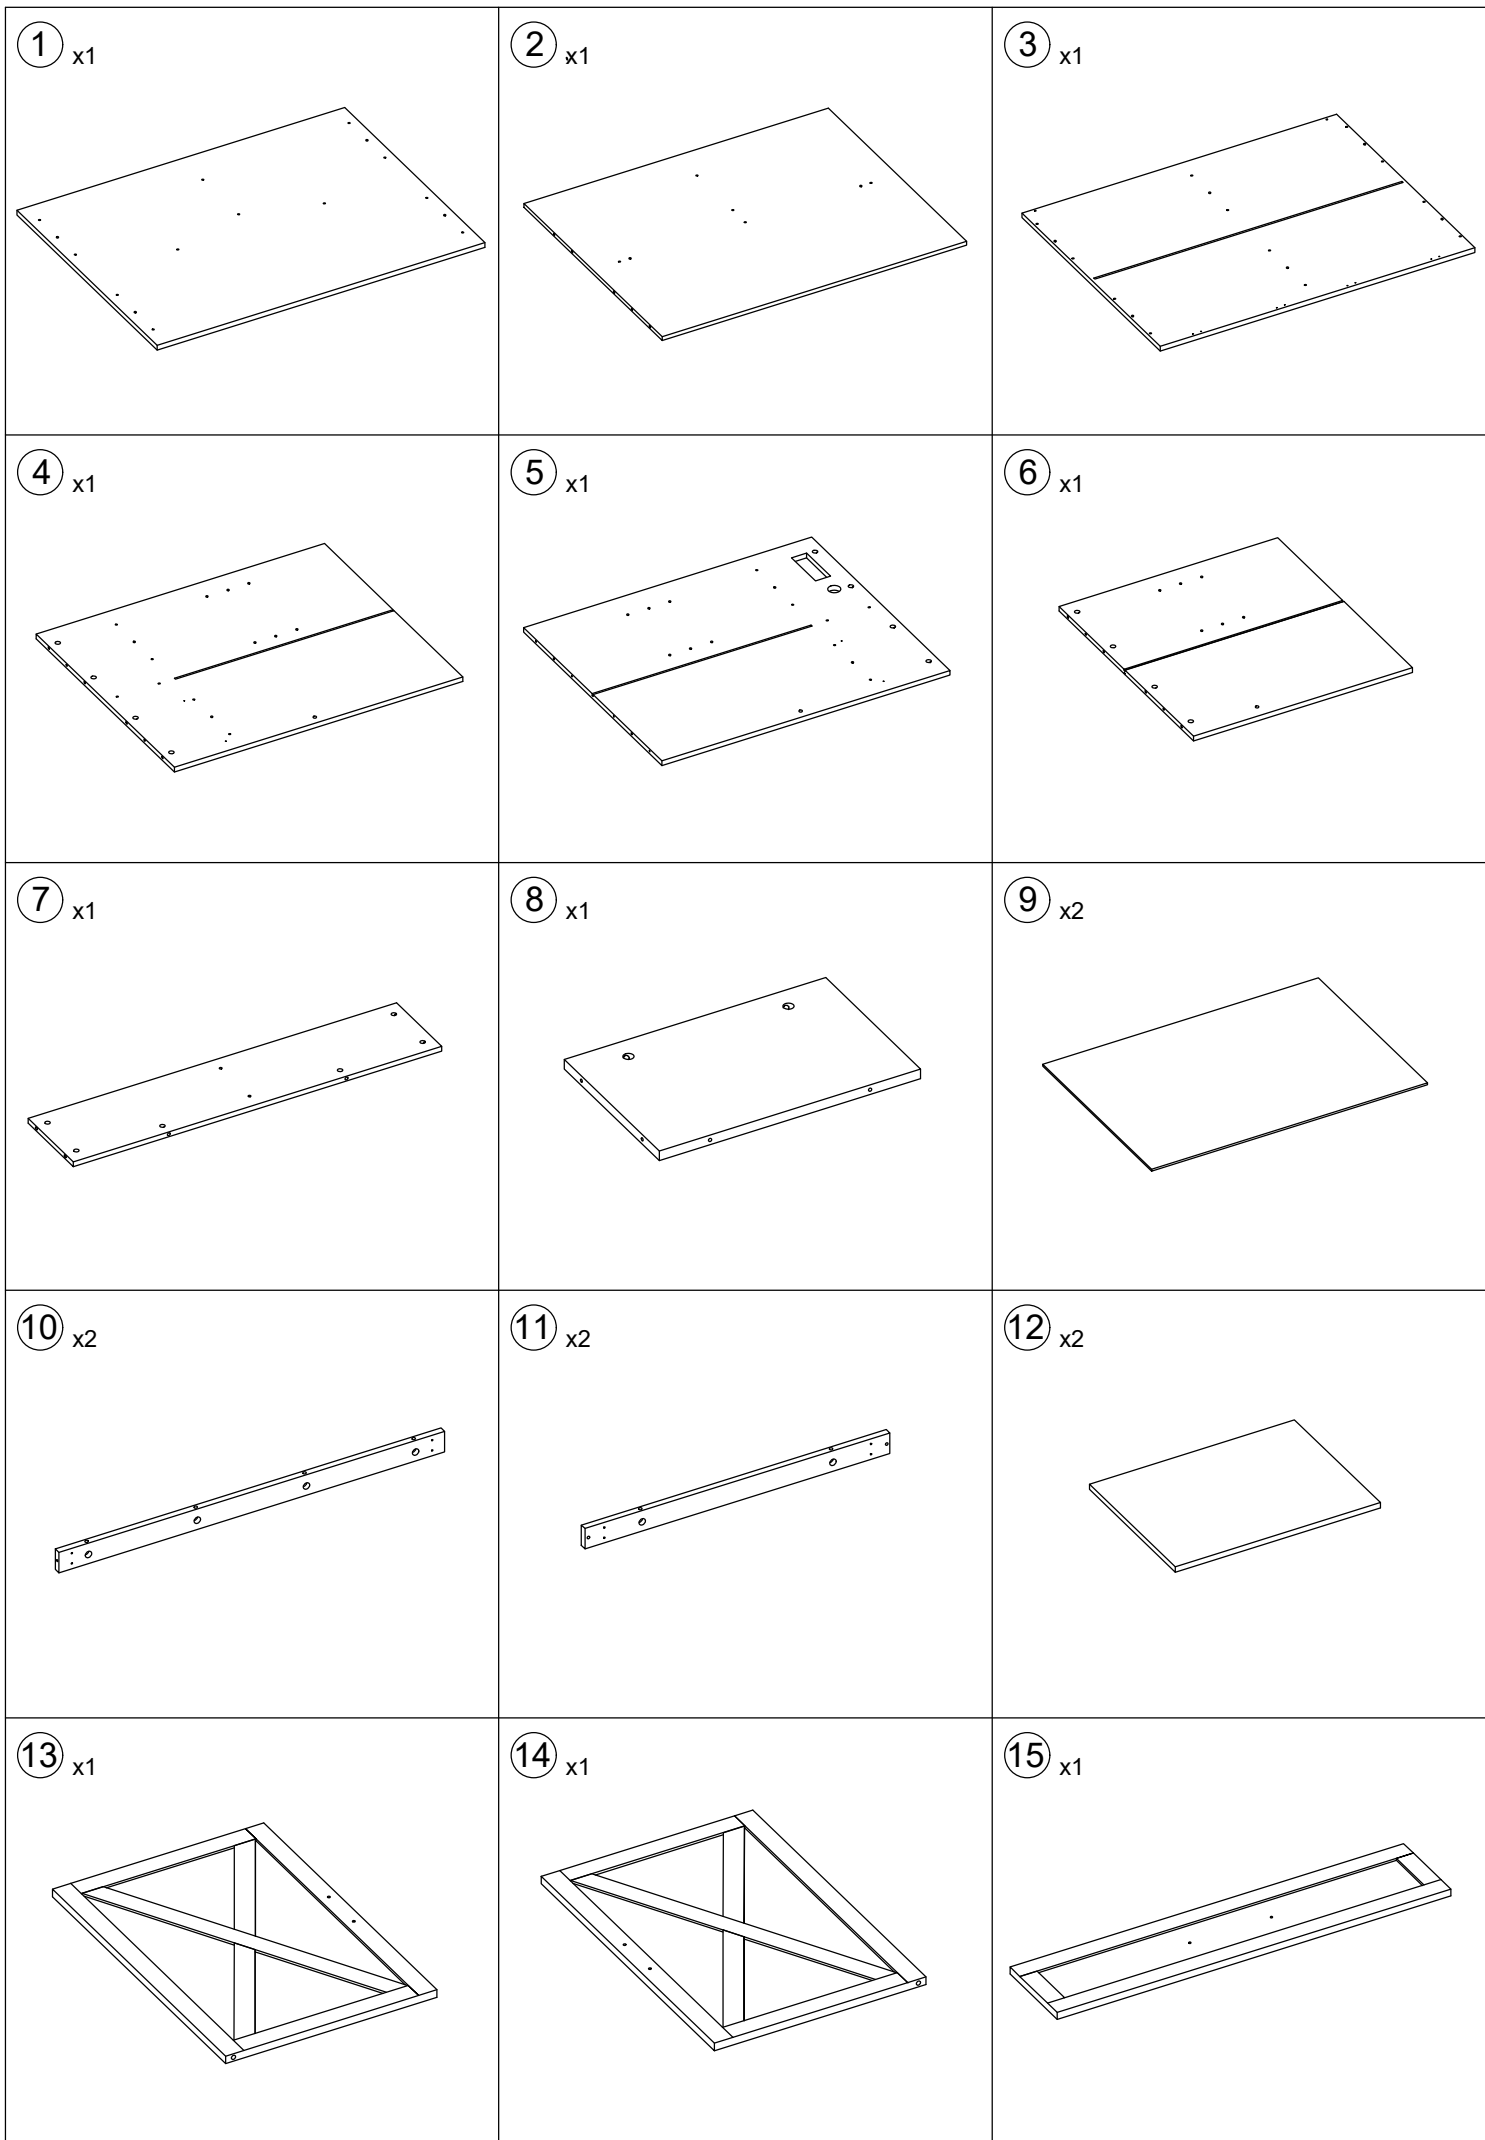


16 x1

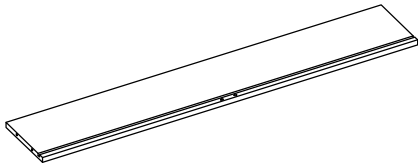


17 x1

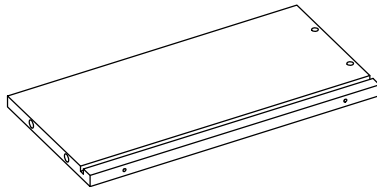


18 x1

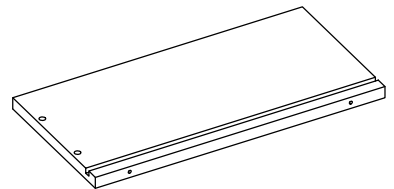


19 x1

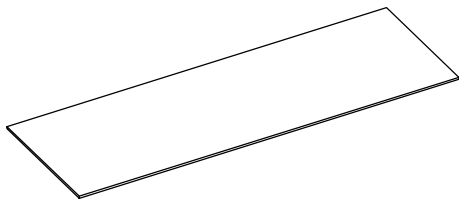


20 x1

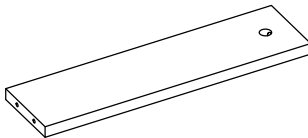


21 x2

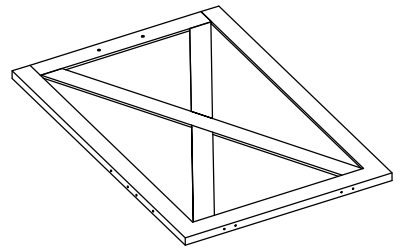


22 x2

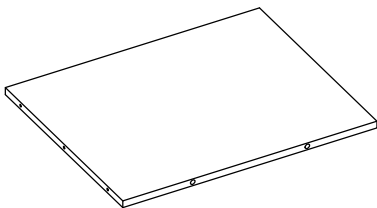


23 x2

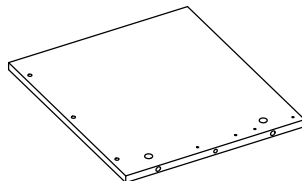


24 x2

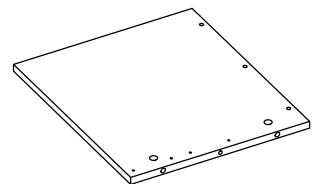


25 x4

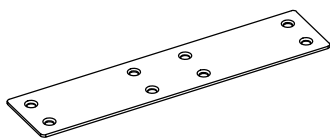


26 x4















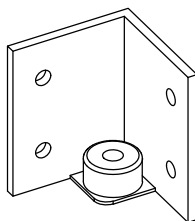


27 x4


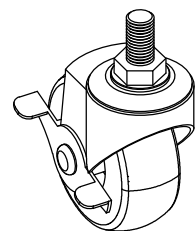


28 x1

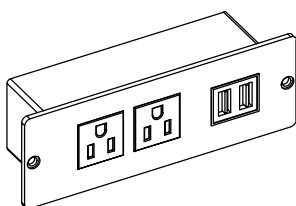


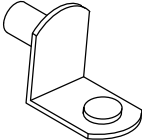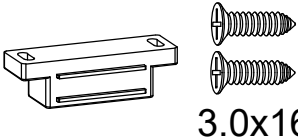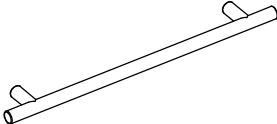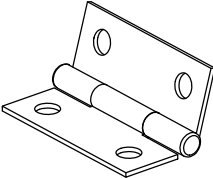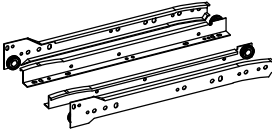A x 41+3  Ø5x40	B x 22+2  Ø6x35	C x 24+2  Ø15	D x 33+3  Ø12
E x 57+3  Ø6x35	F x 2  M4x10	G x 16+1  3.5x12	H x 60+3  3.0x12
I x 2+1 	J x 2+1 	K x 8+1 	L x 2  3.0x16
M x 2 	N x 4+1 	O x 1 	P x 4 
Q x 8+1  M4x25	R x 4 	S x 1  300mm	T x 2  M4x20

TOOL

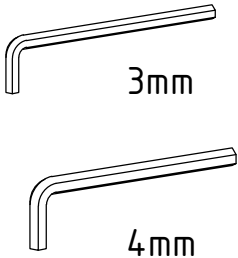


STEP 1

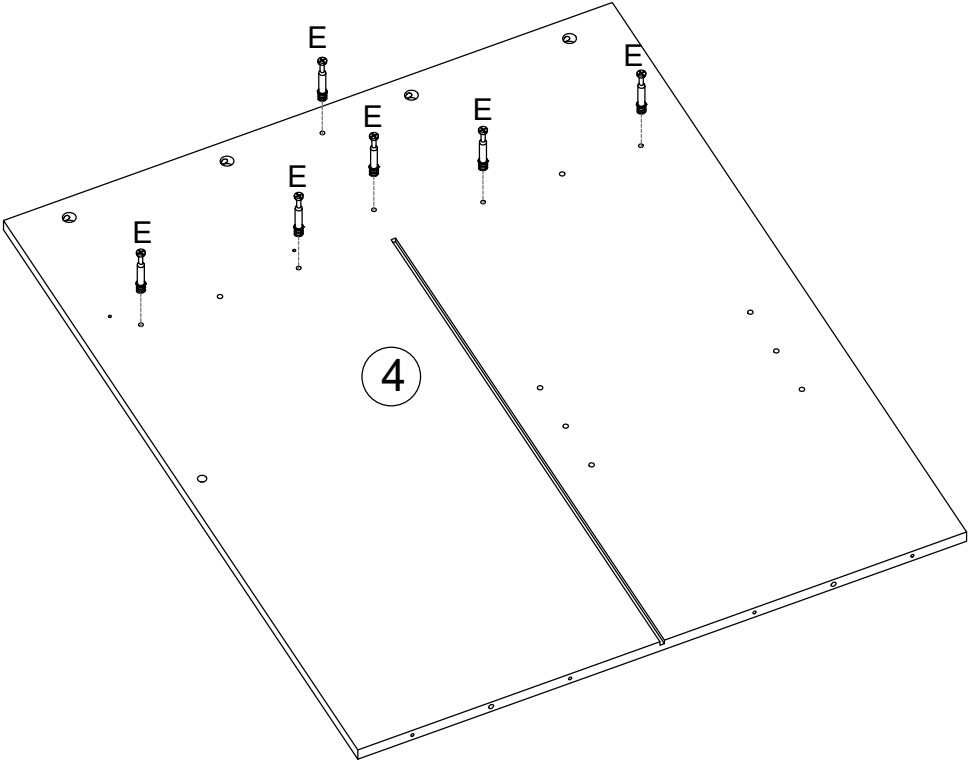


		
E		x6

STEP 2

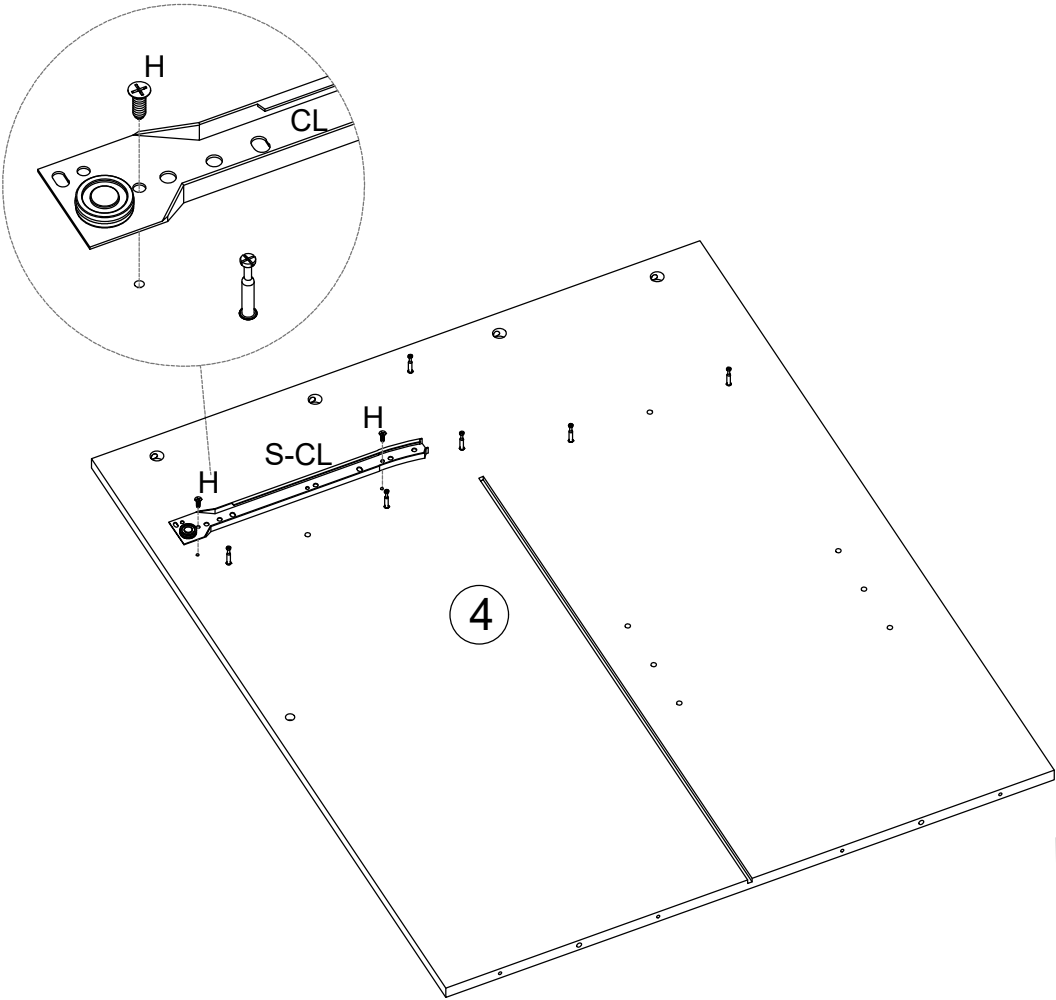


		
H		x2
S		x1

STEP 3

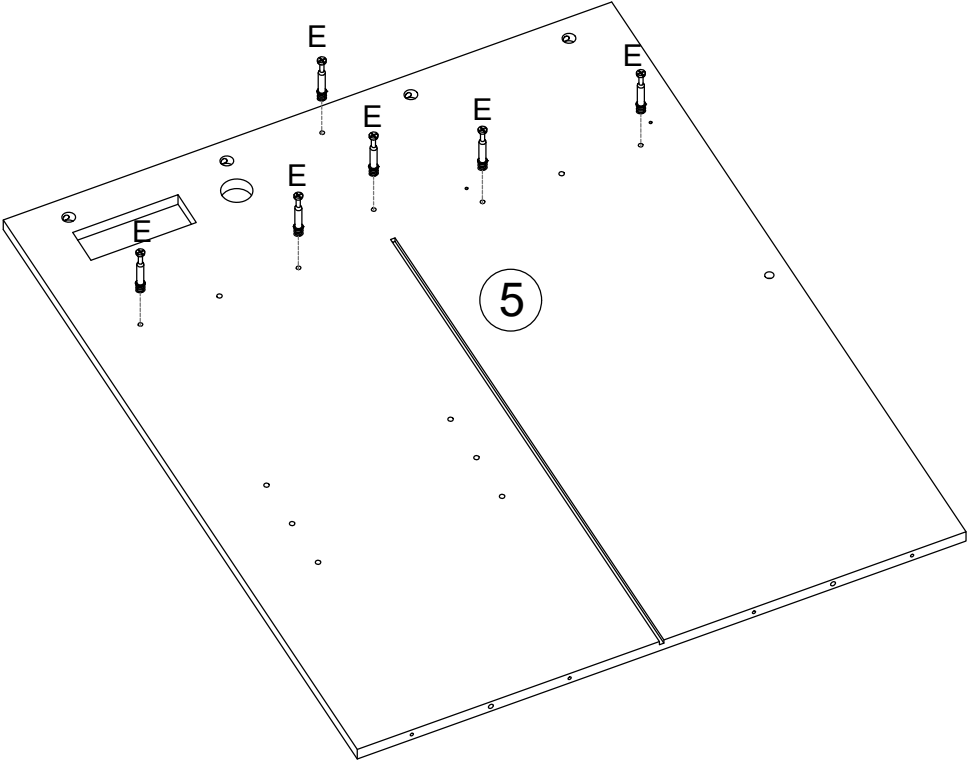


		
E		x6

STEP 4

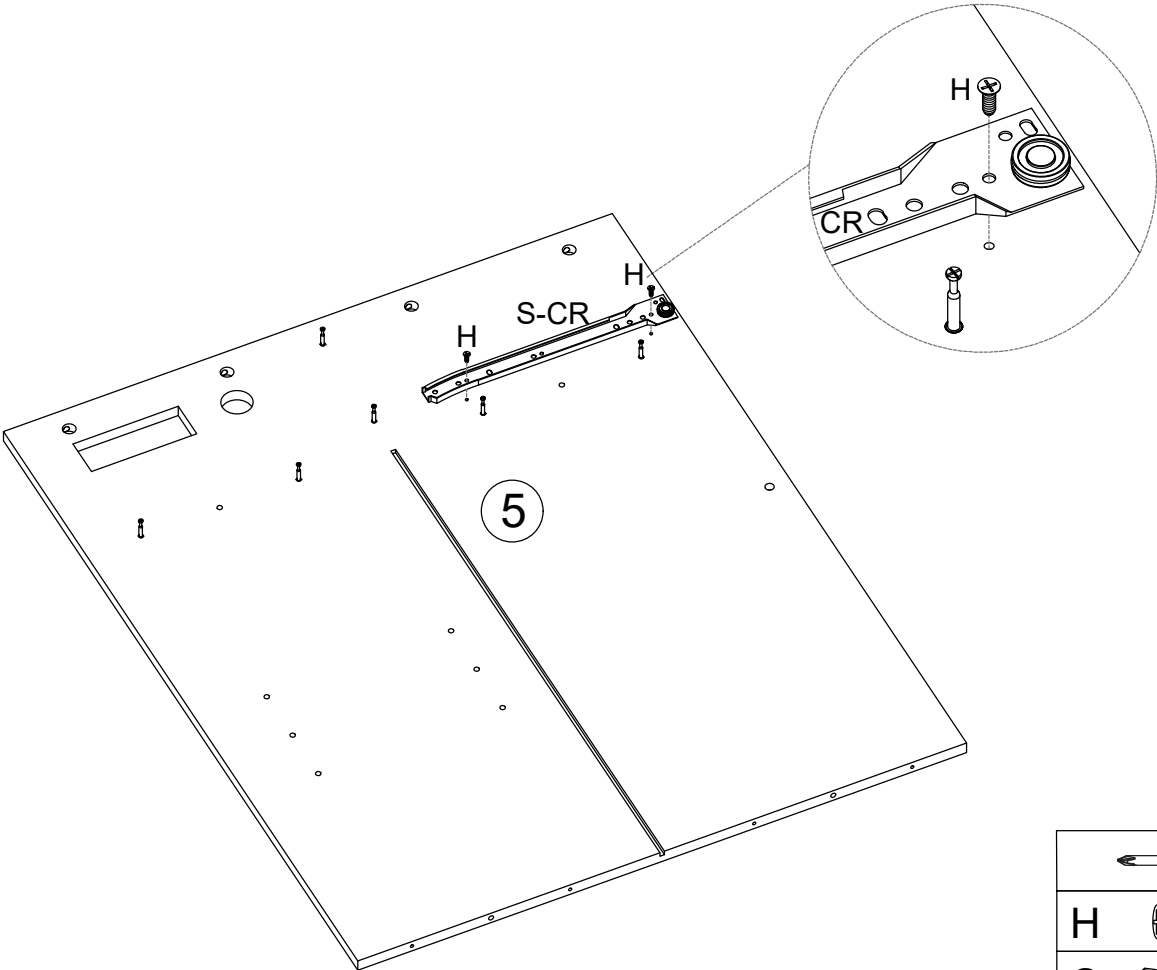


		
H		x2
S		x1

STEP 5

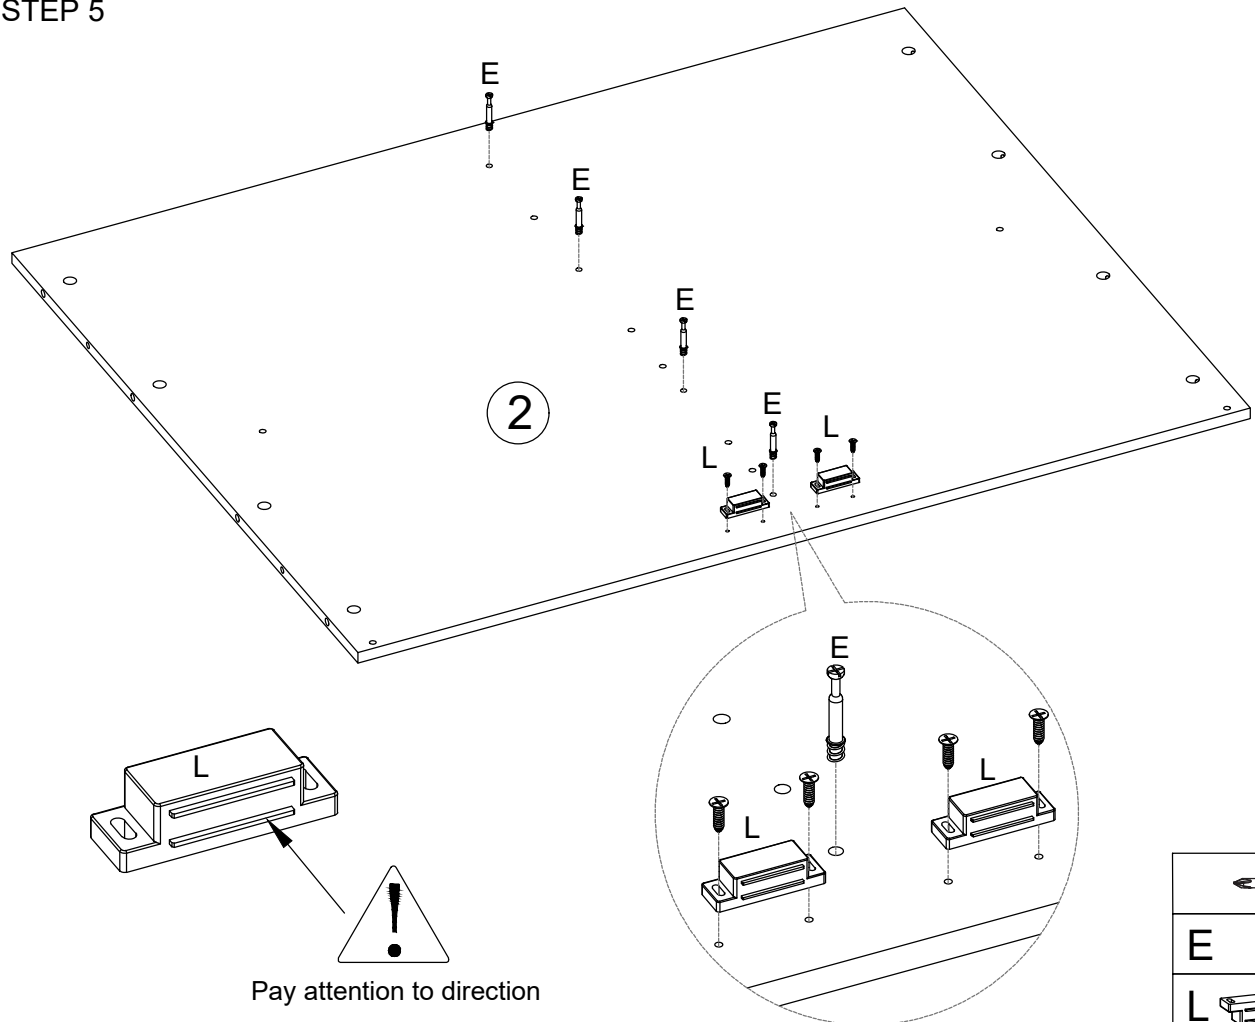


		
E		x4
L		x2

STEP 6

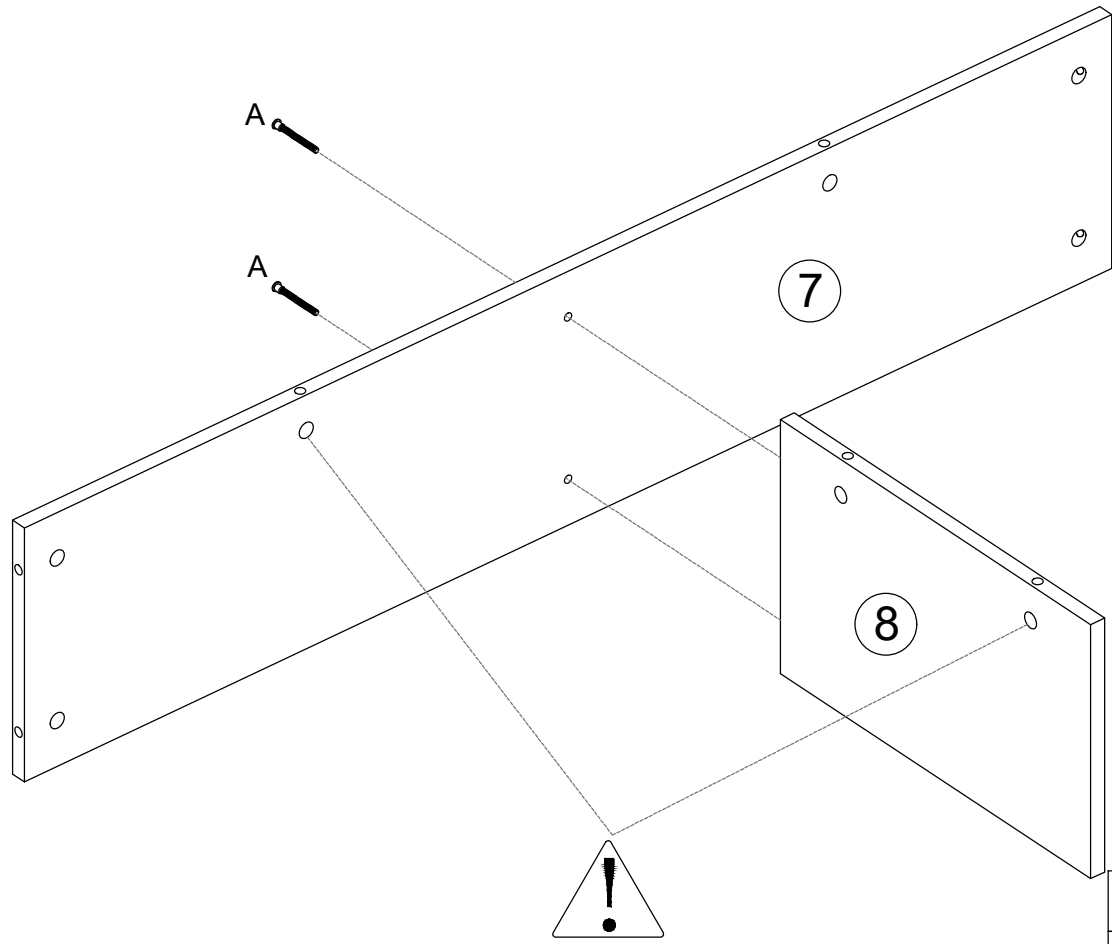


 3mm		
A		x2


STEP 7

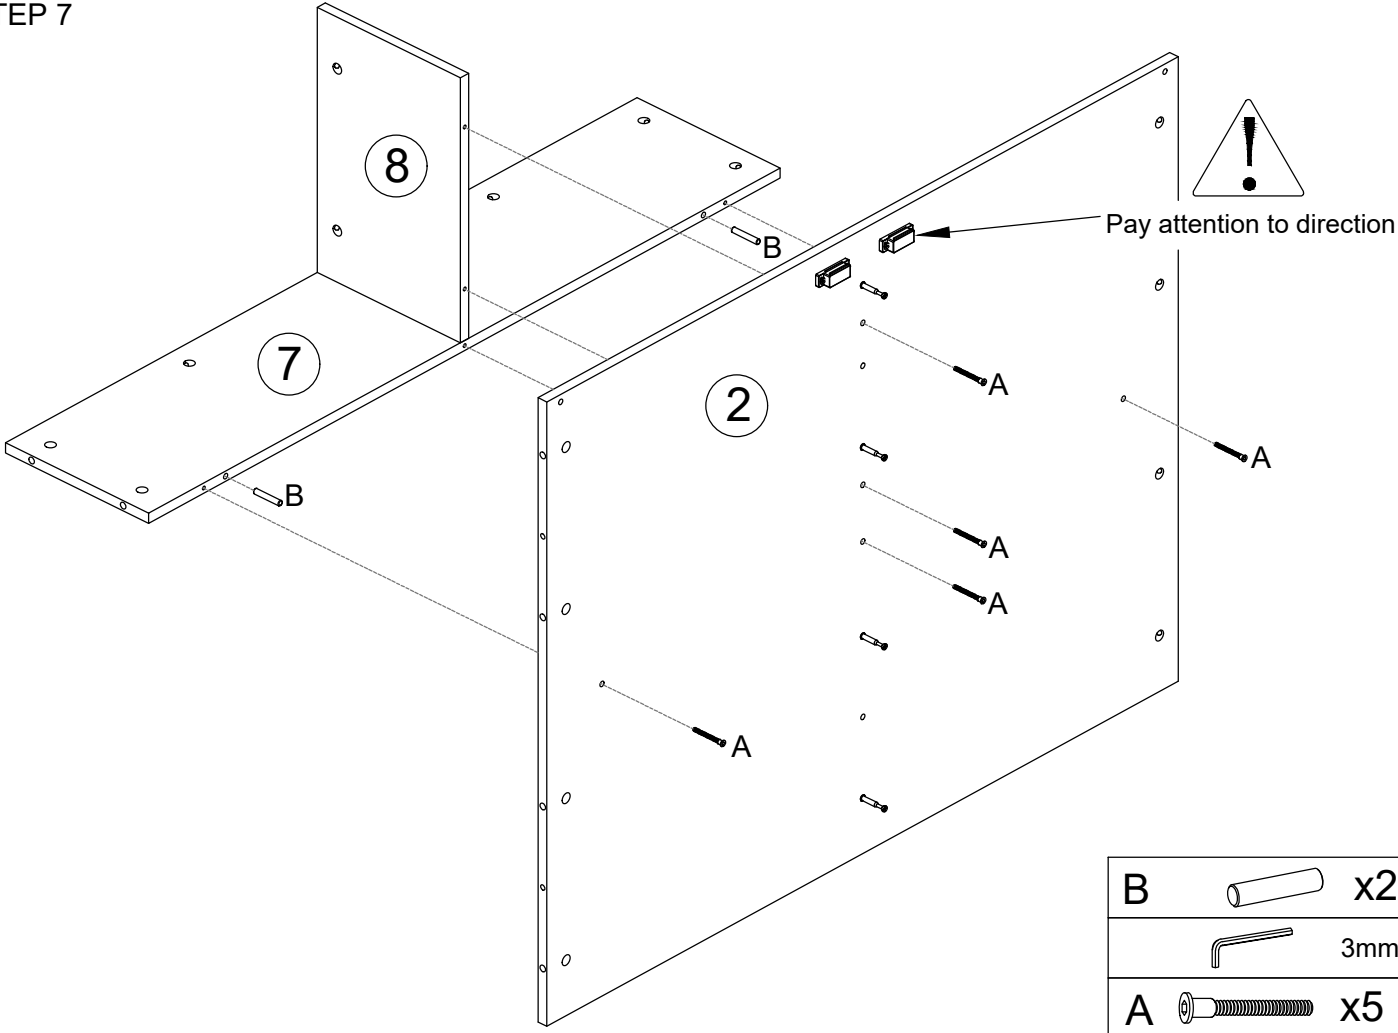

STEP 8

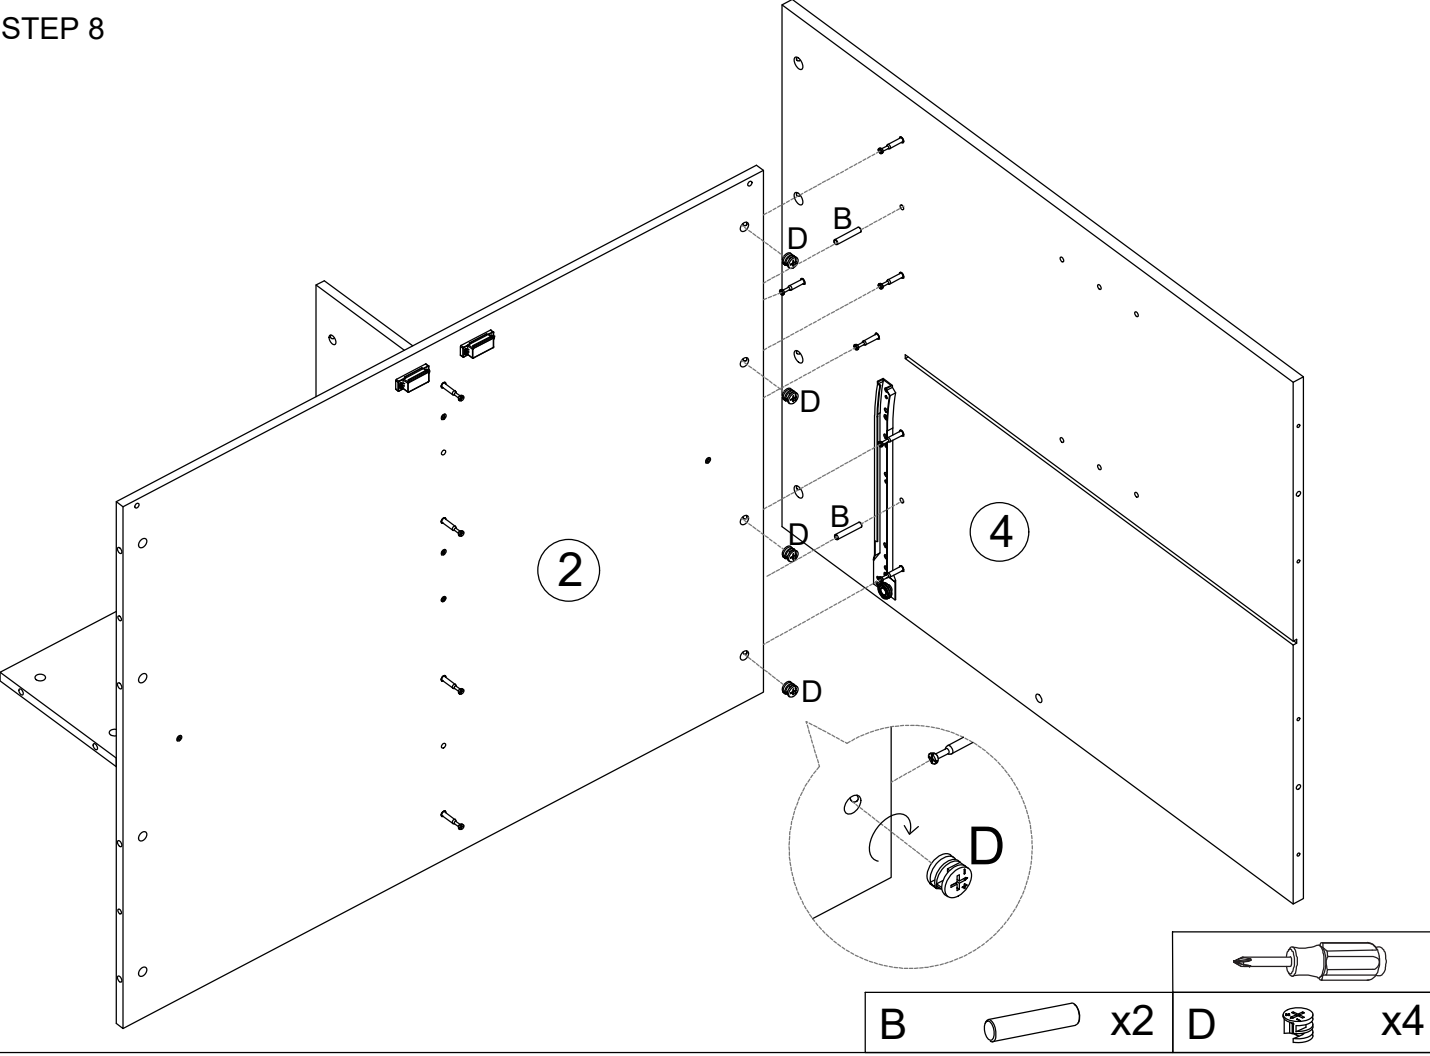


STEP 9

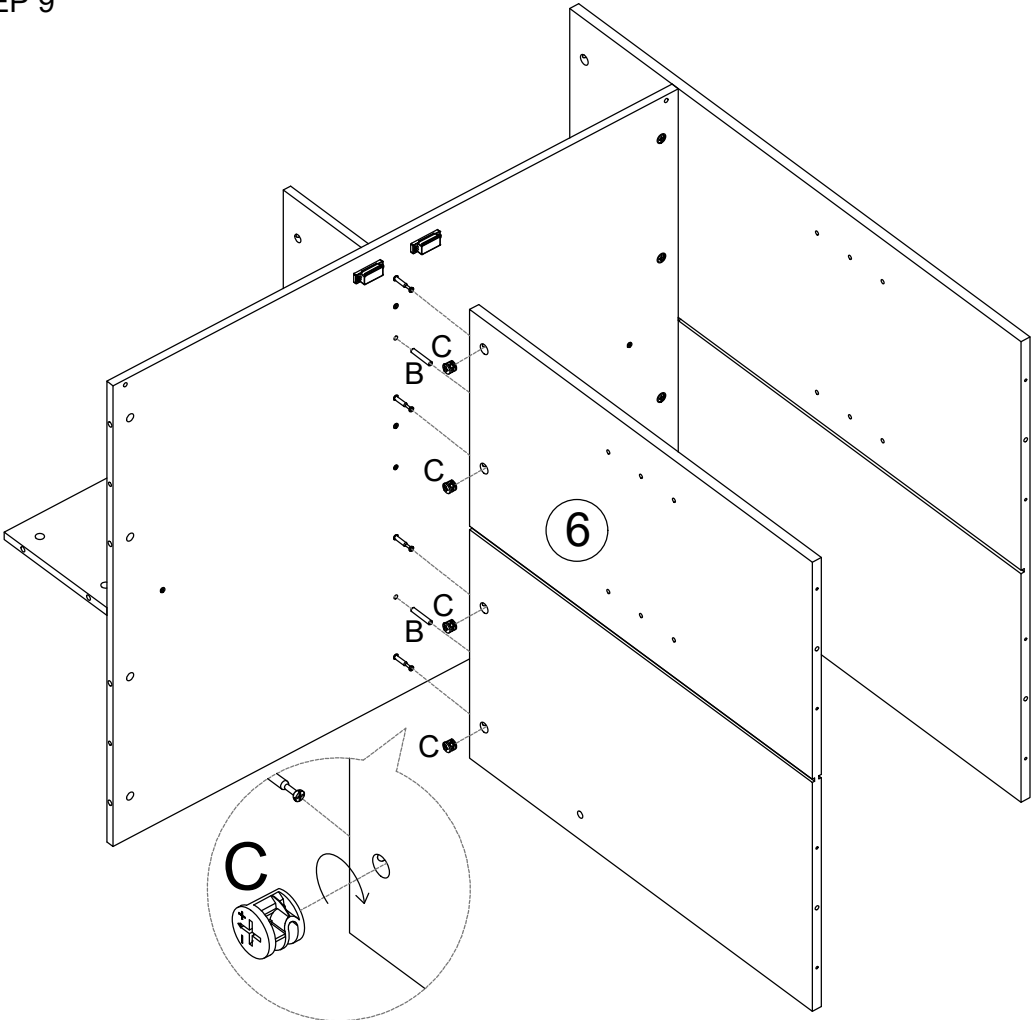


B		x2
		
C		x4

STEP 10

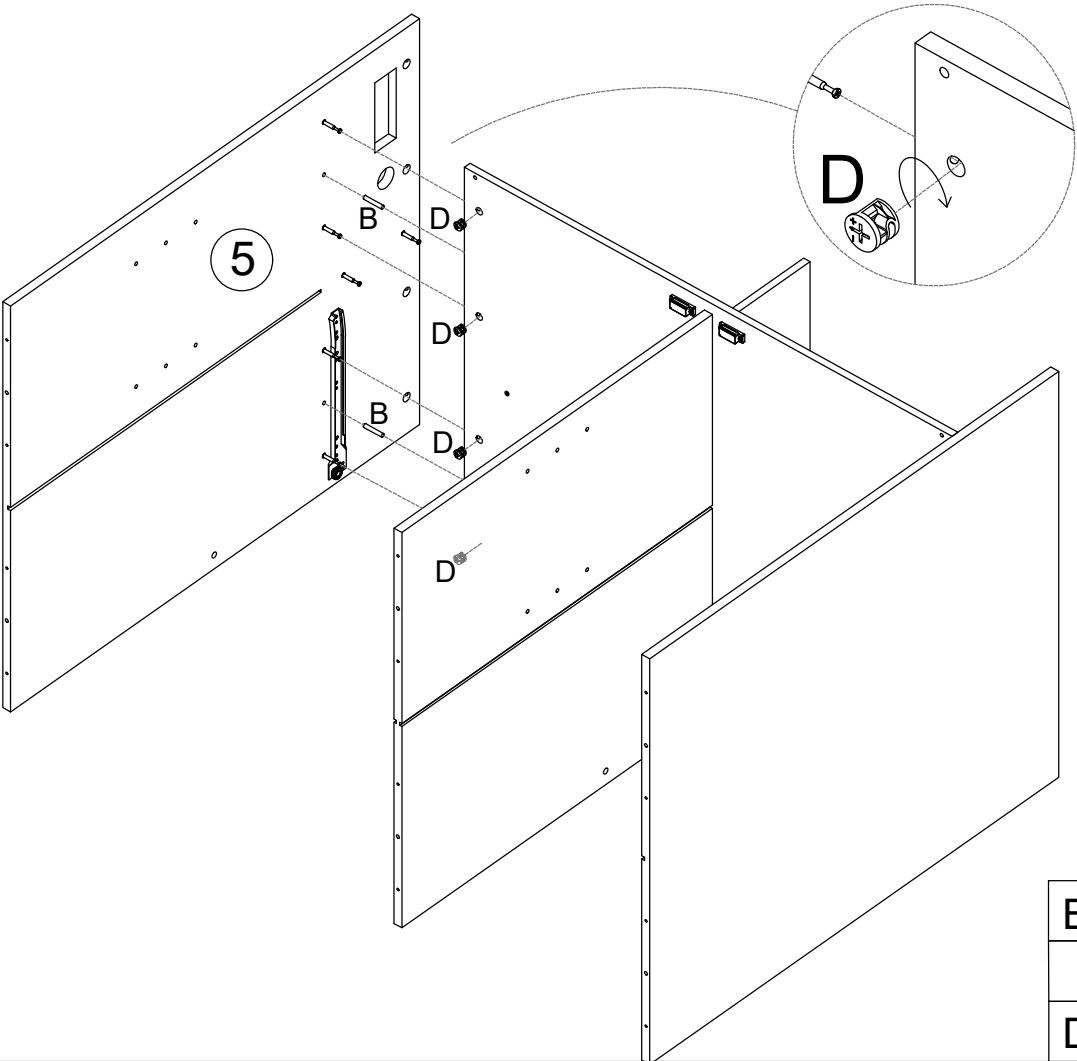


B		x2
		
D		x4



STEP 11

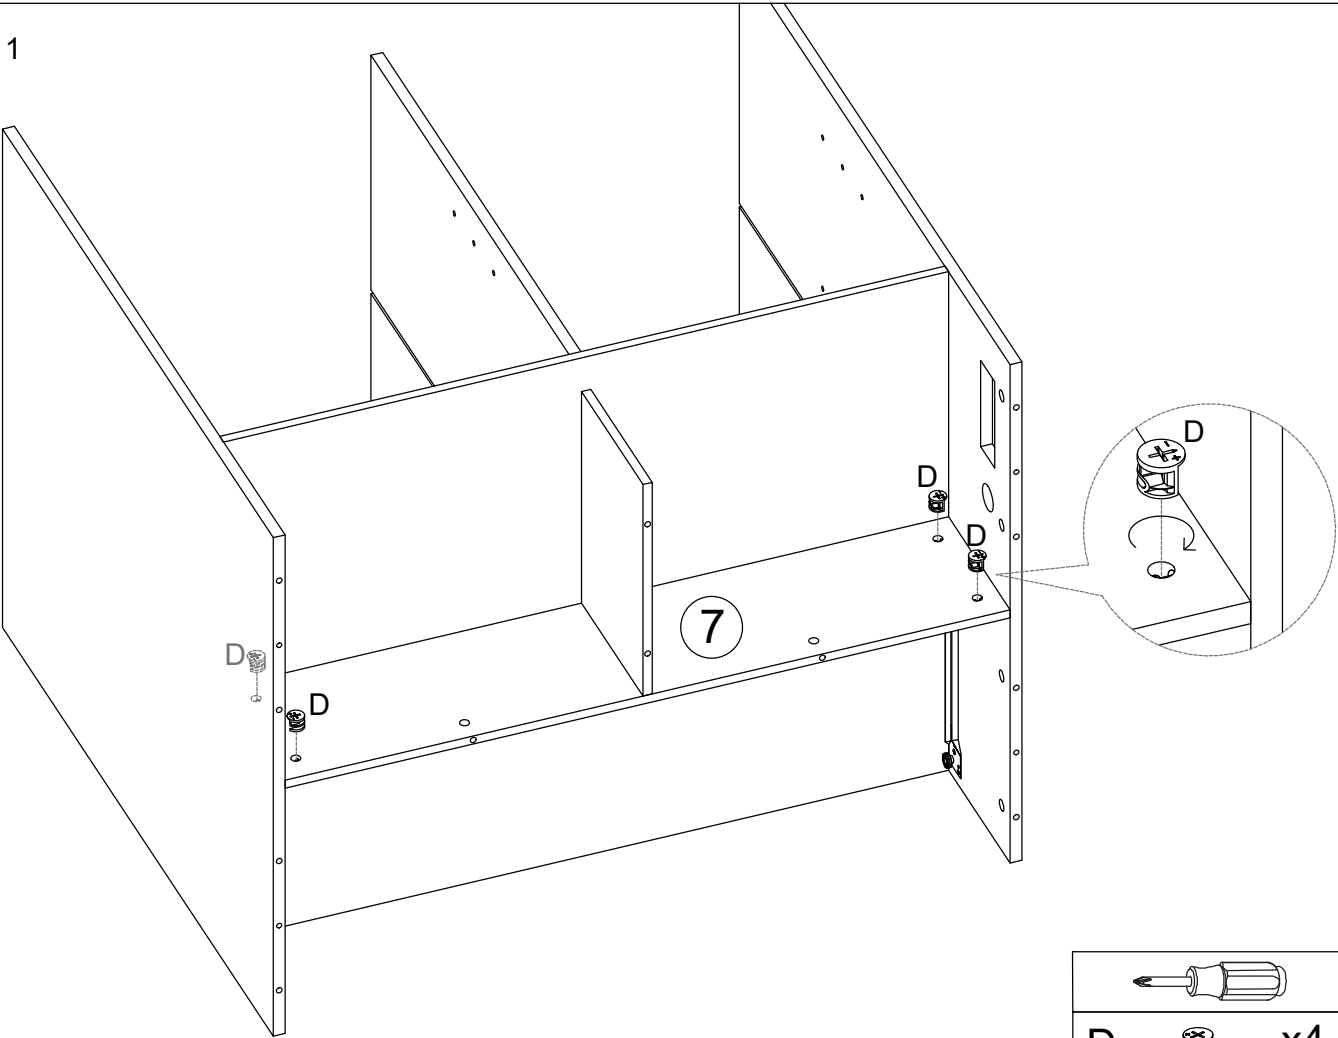




STEP 12

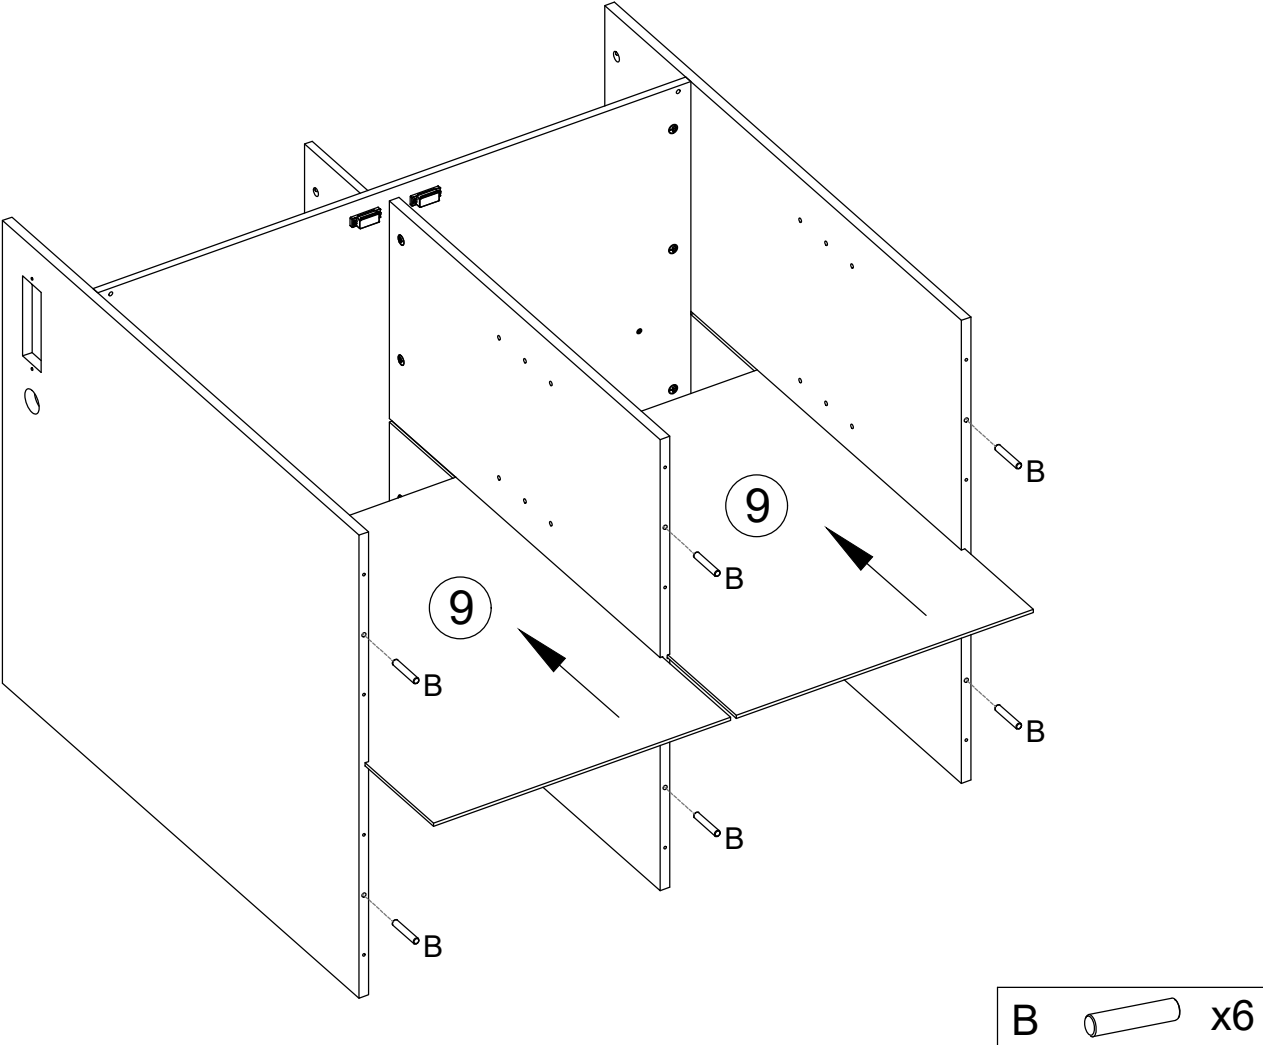


STEP 13

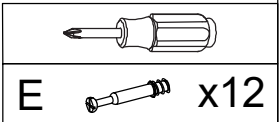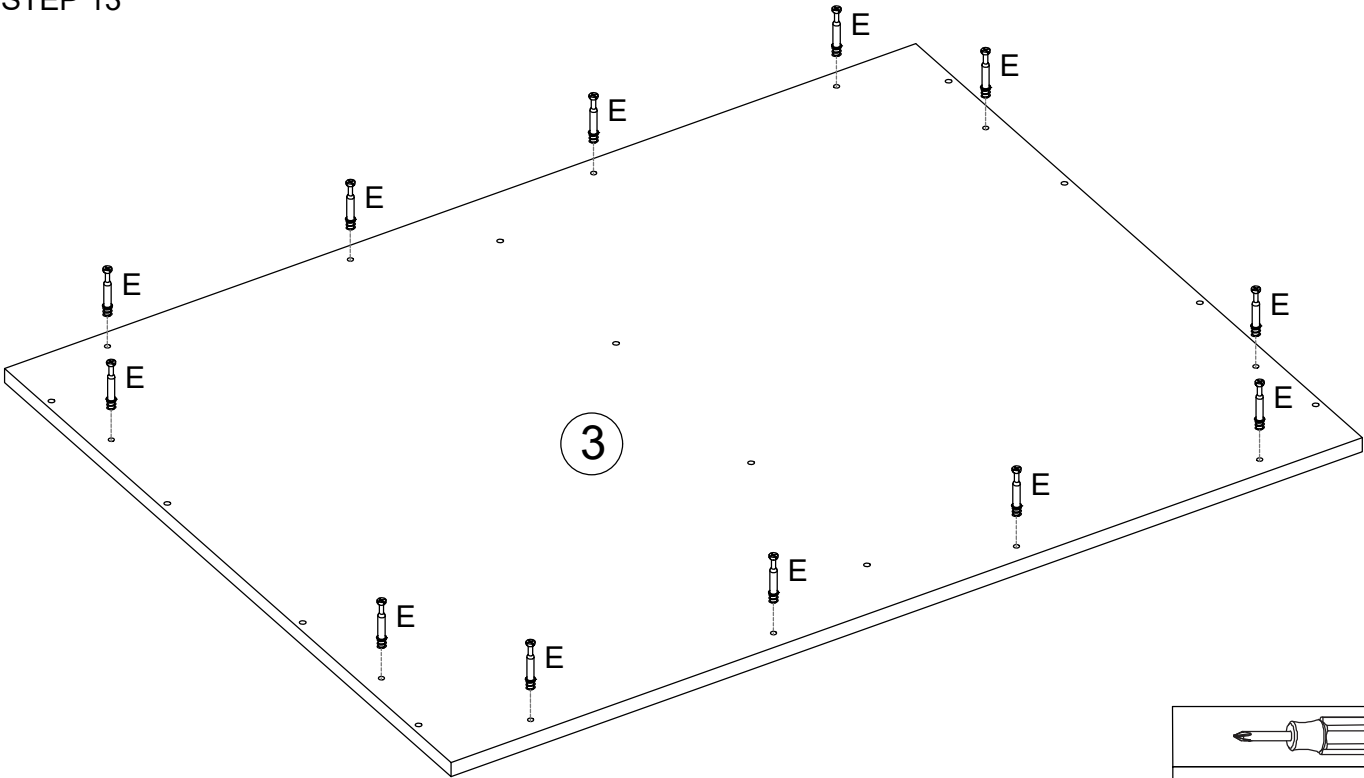

STEP 14

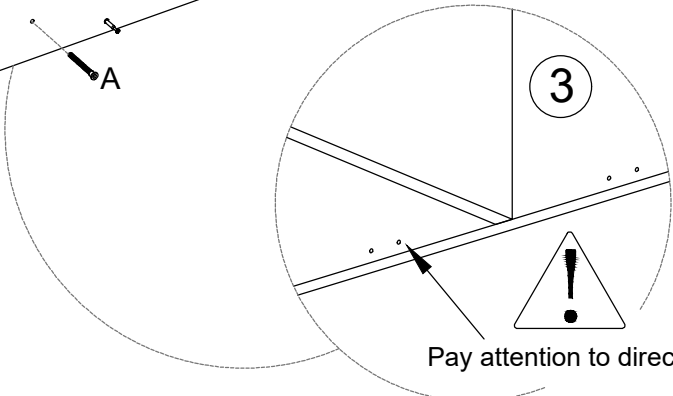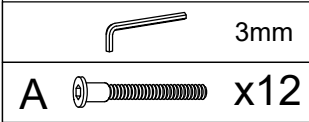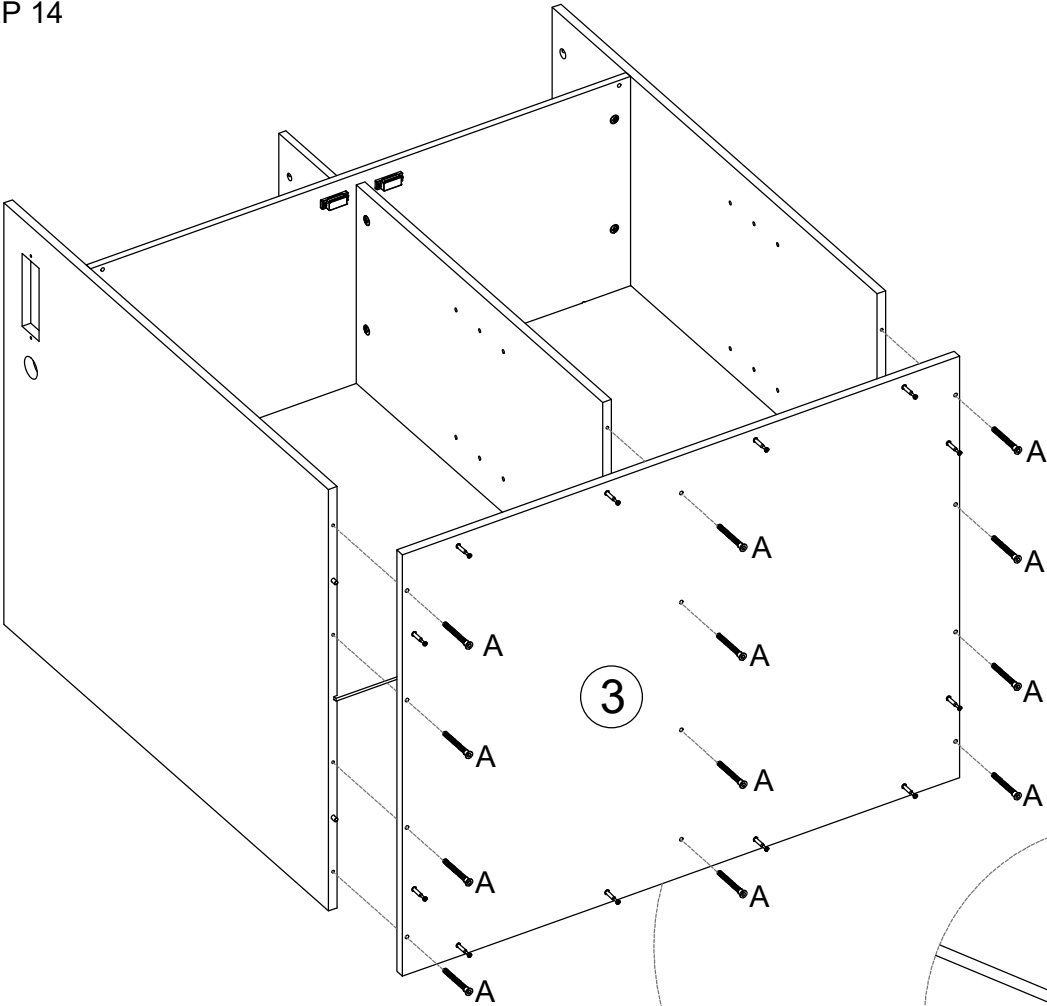


STEP 15

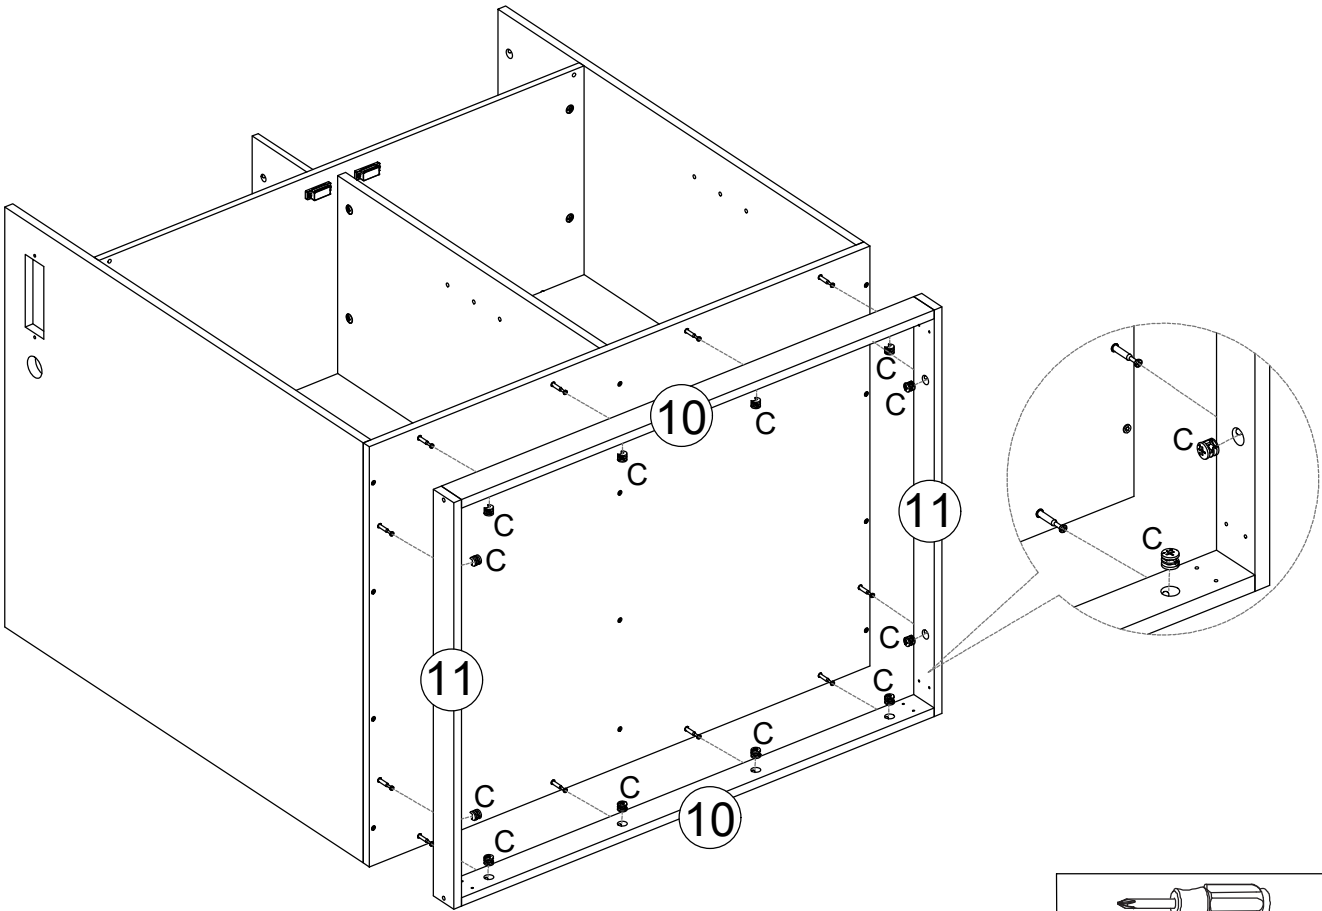


C		x12

STEP 16

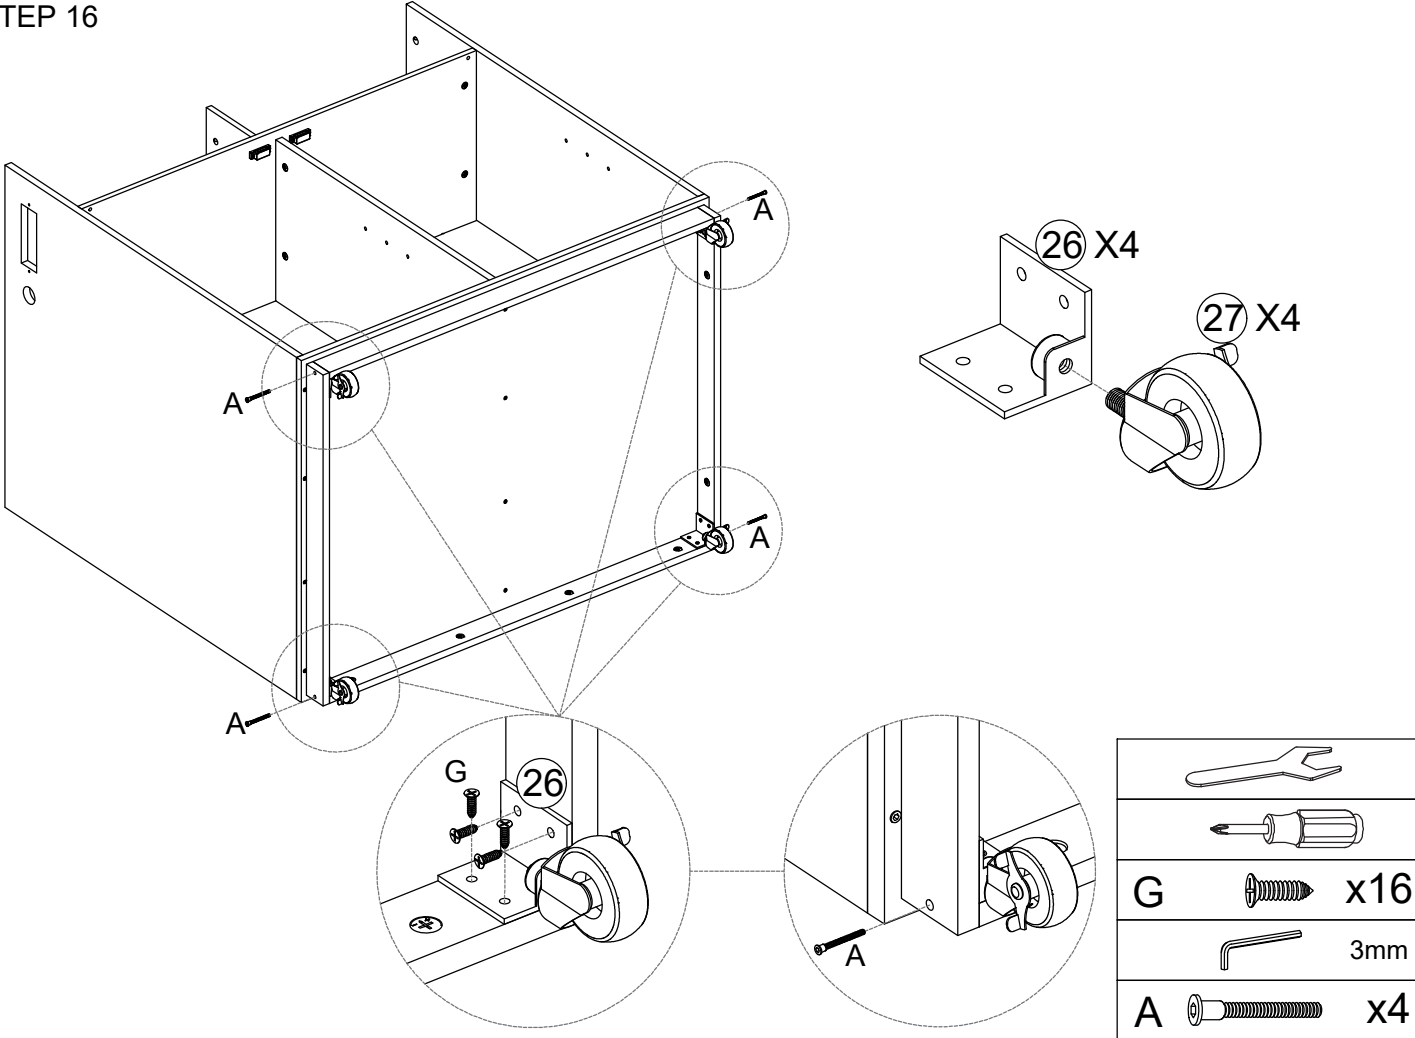


G		x16
		3mm
A		x4

STEP 17

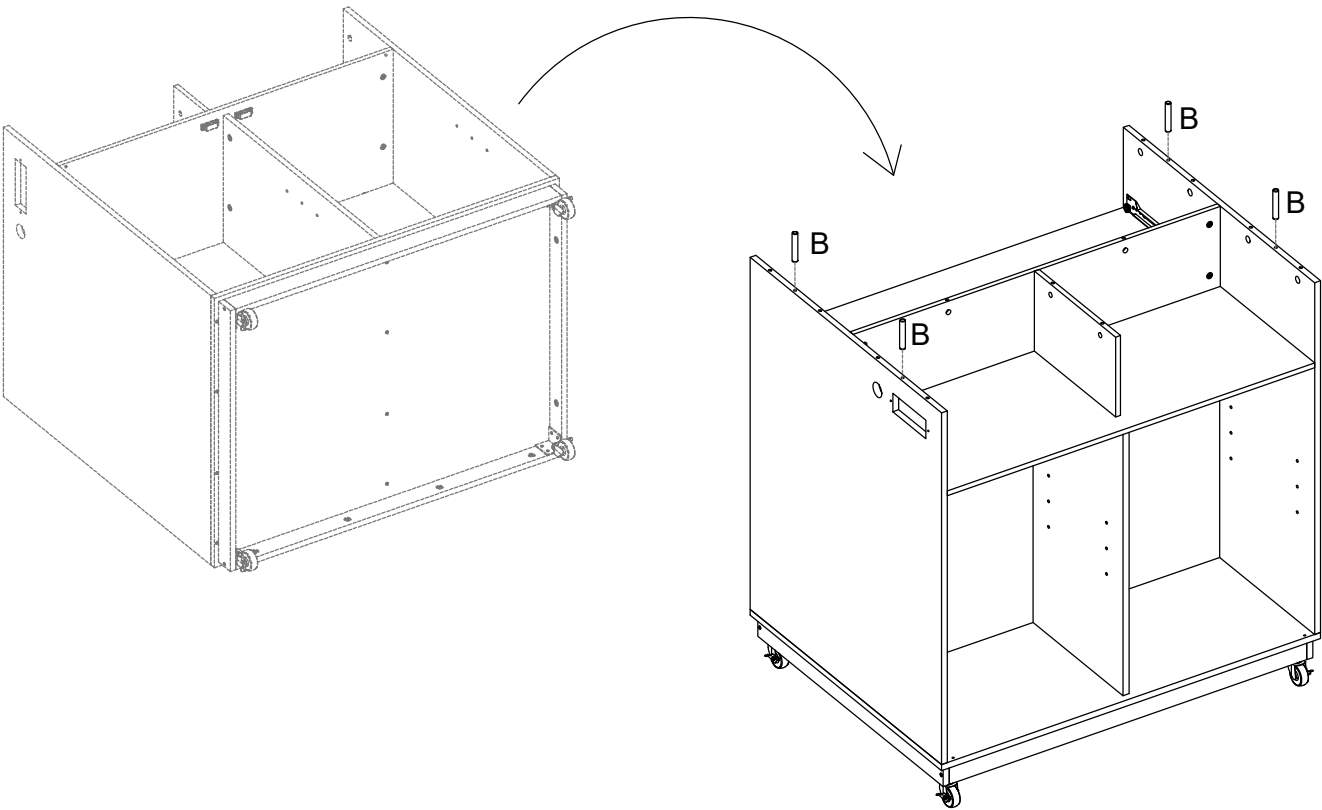



B  x4

STEP 18

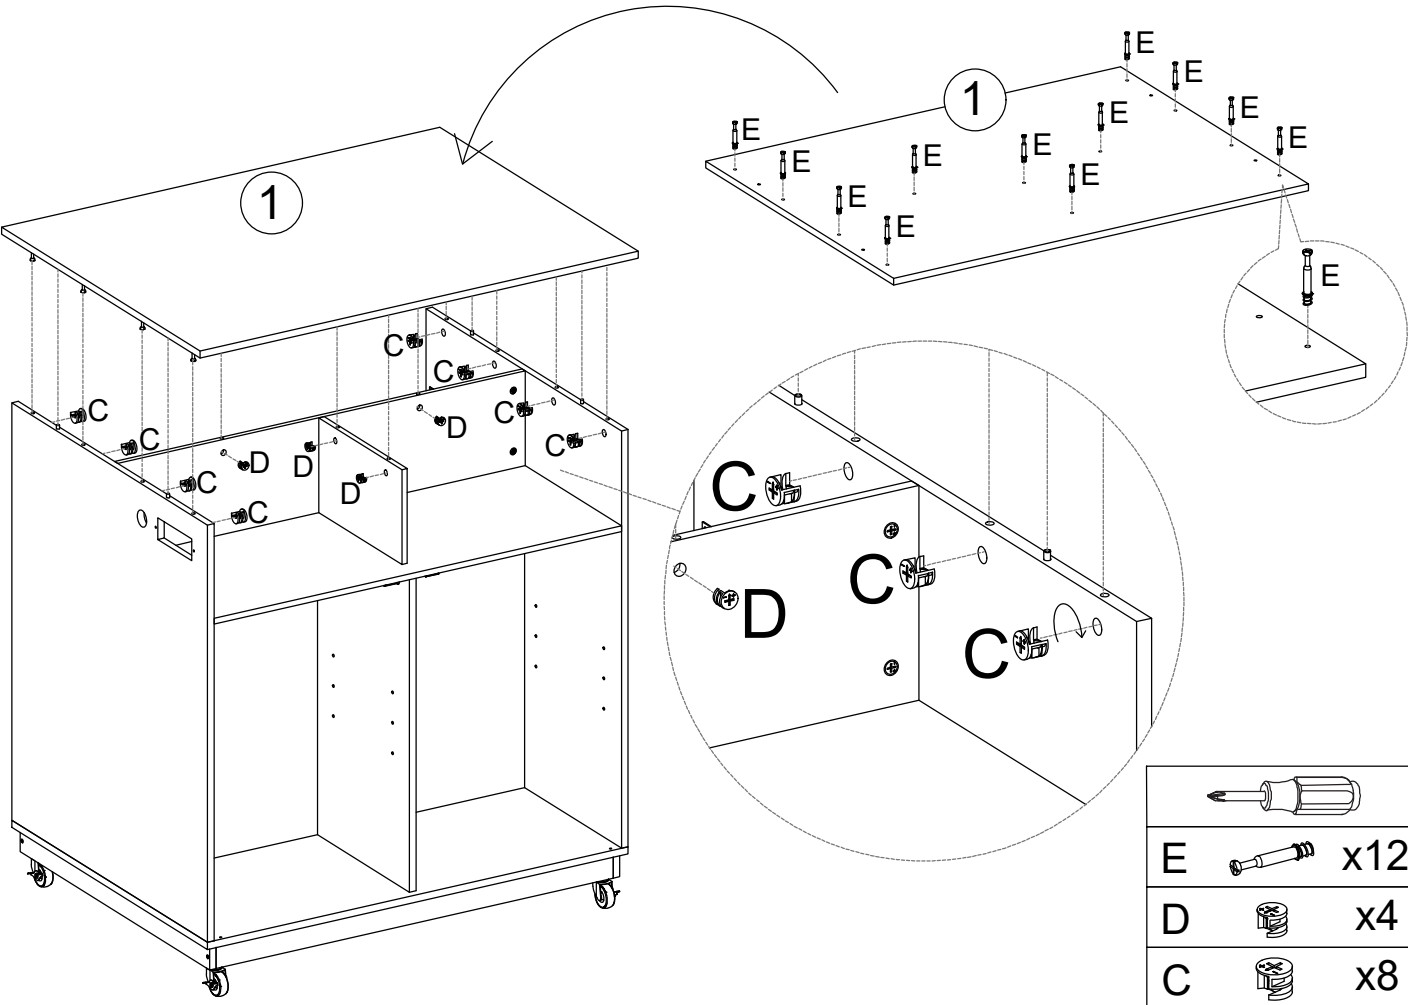







		
E		x12
D		x4
C		x8

STEP 19

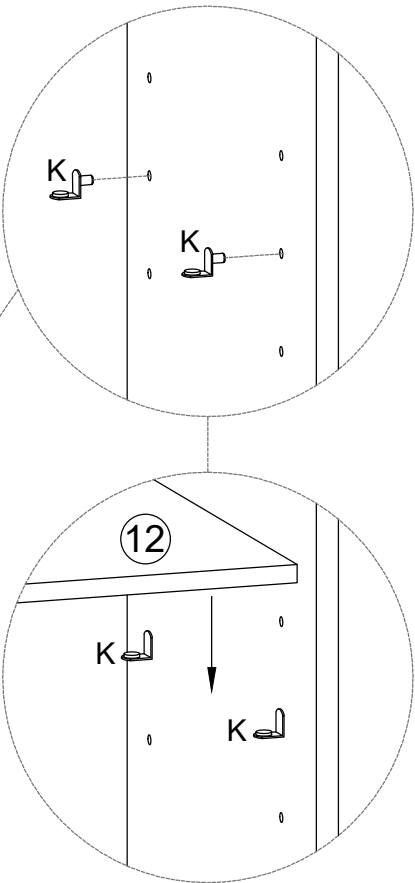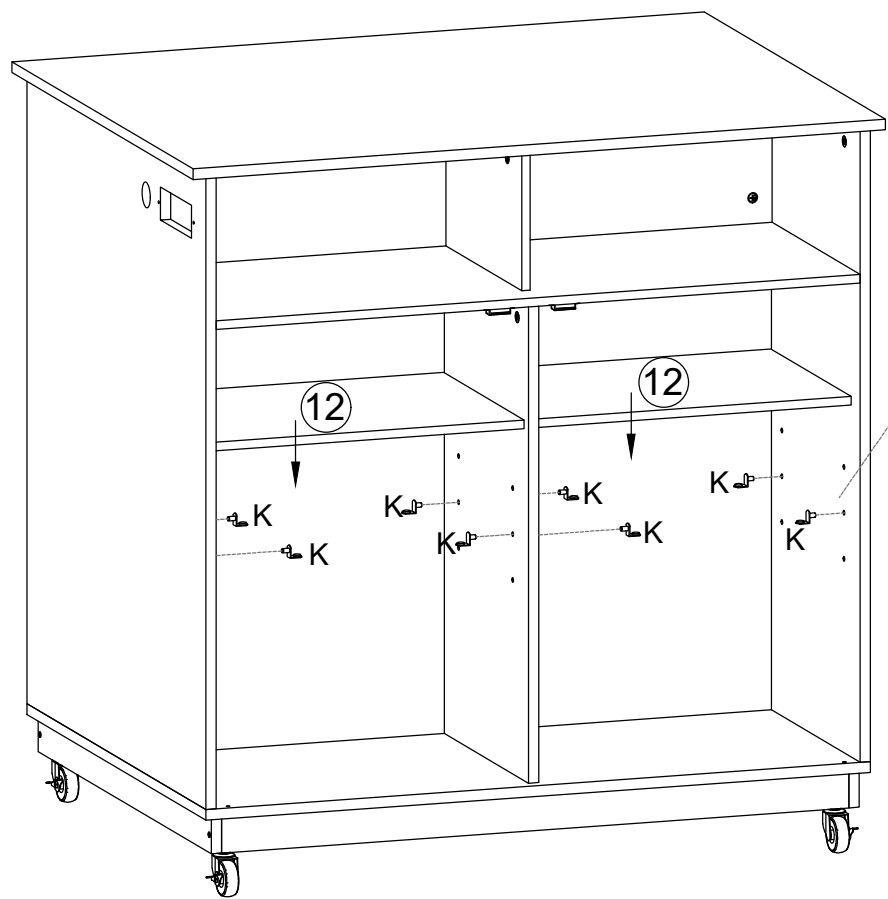


K  x8

STEP 20

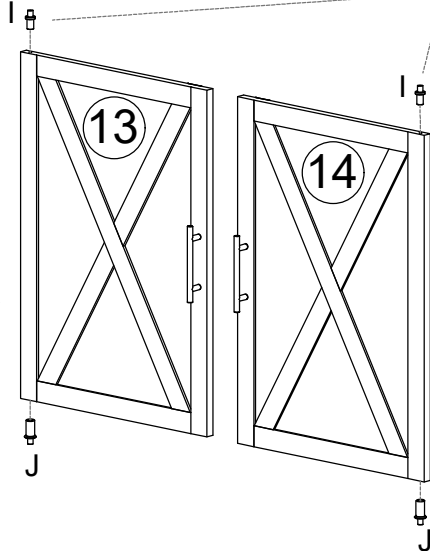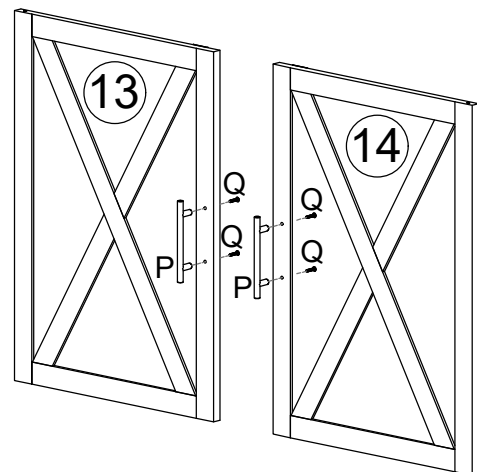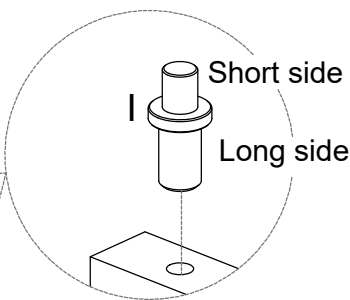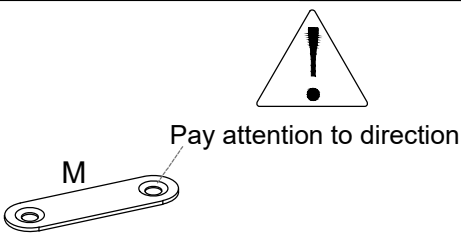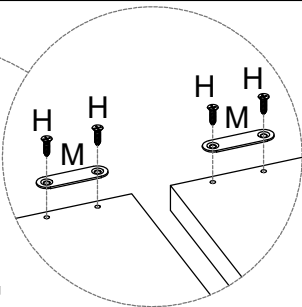
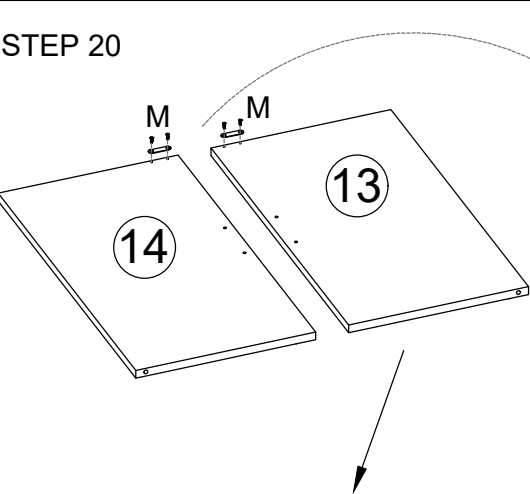


		
J		x2
I		x2
M		x2
H		x4
Q		x4
P		x2


STEP 21

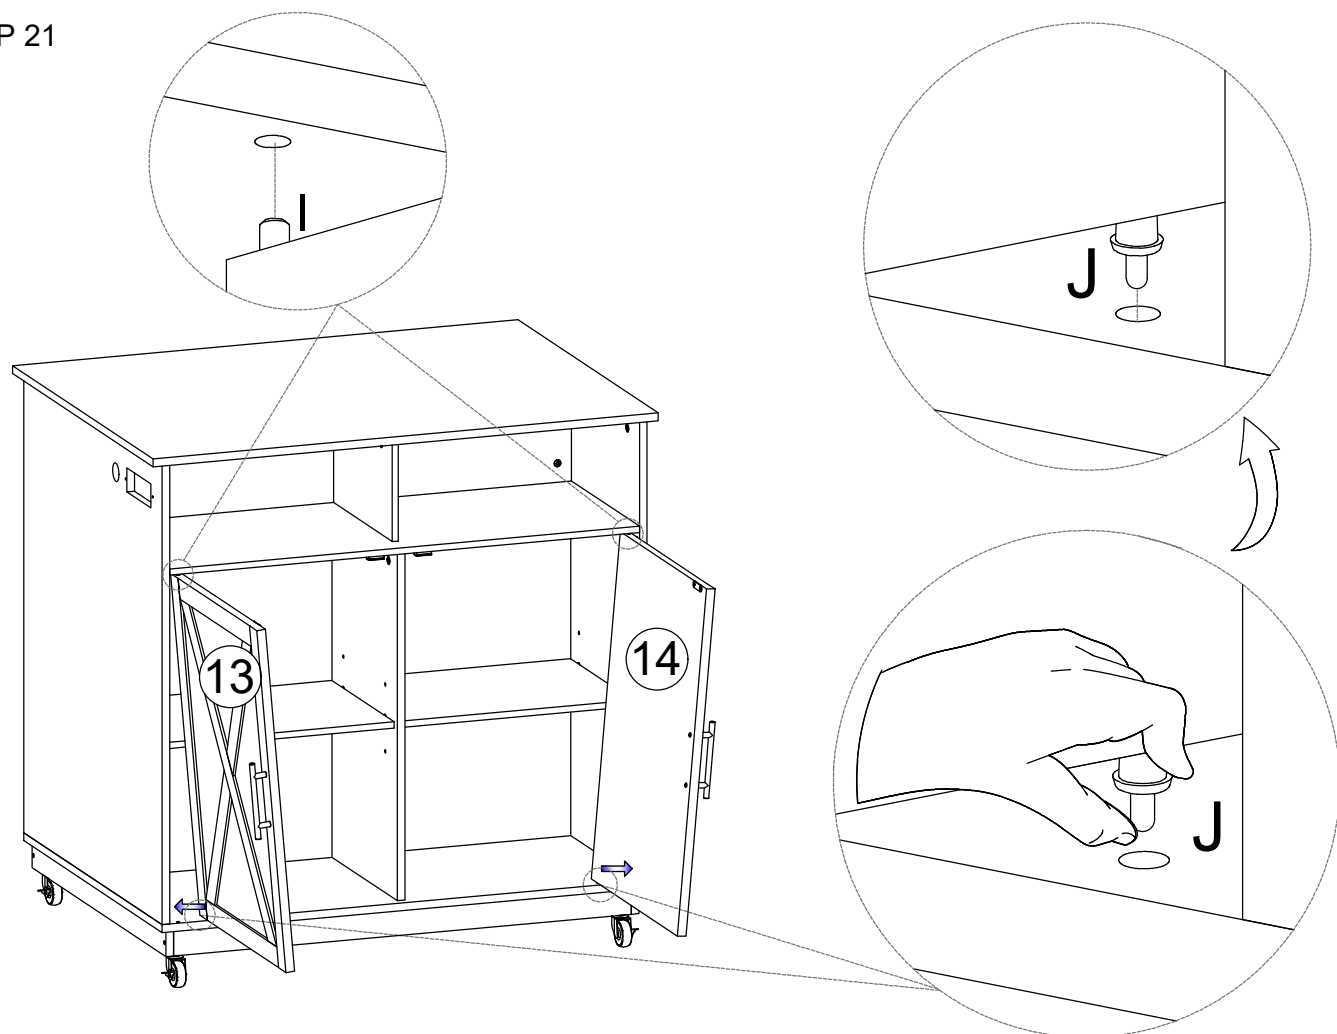

STEP 22

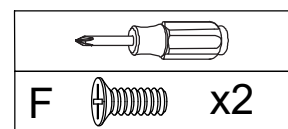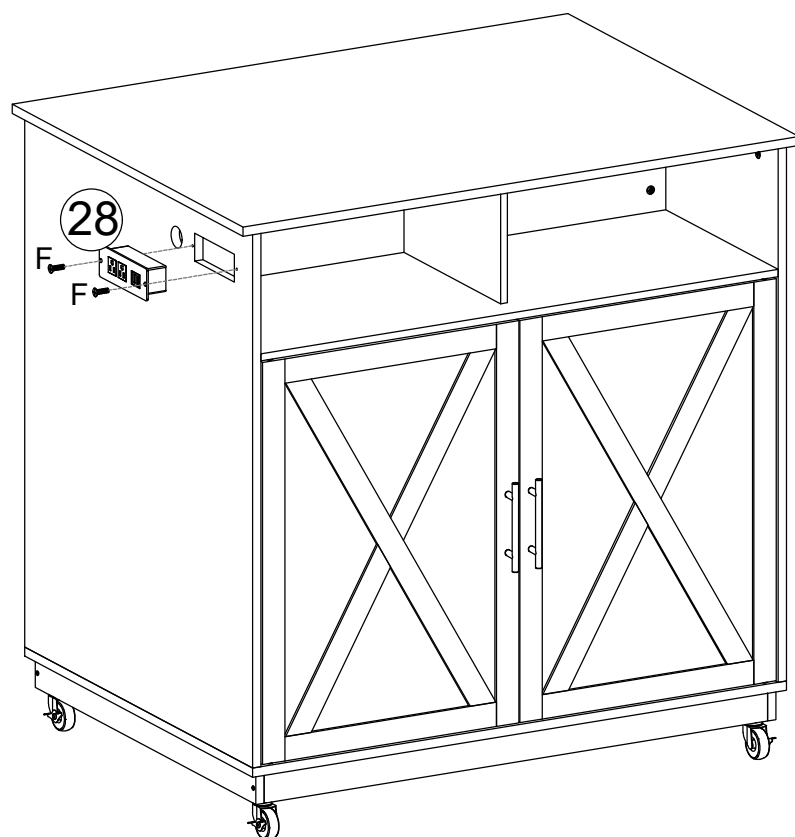


STEP 23

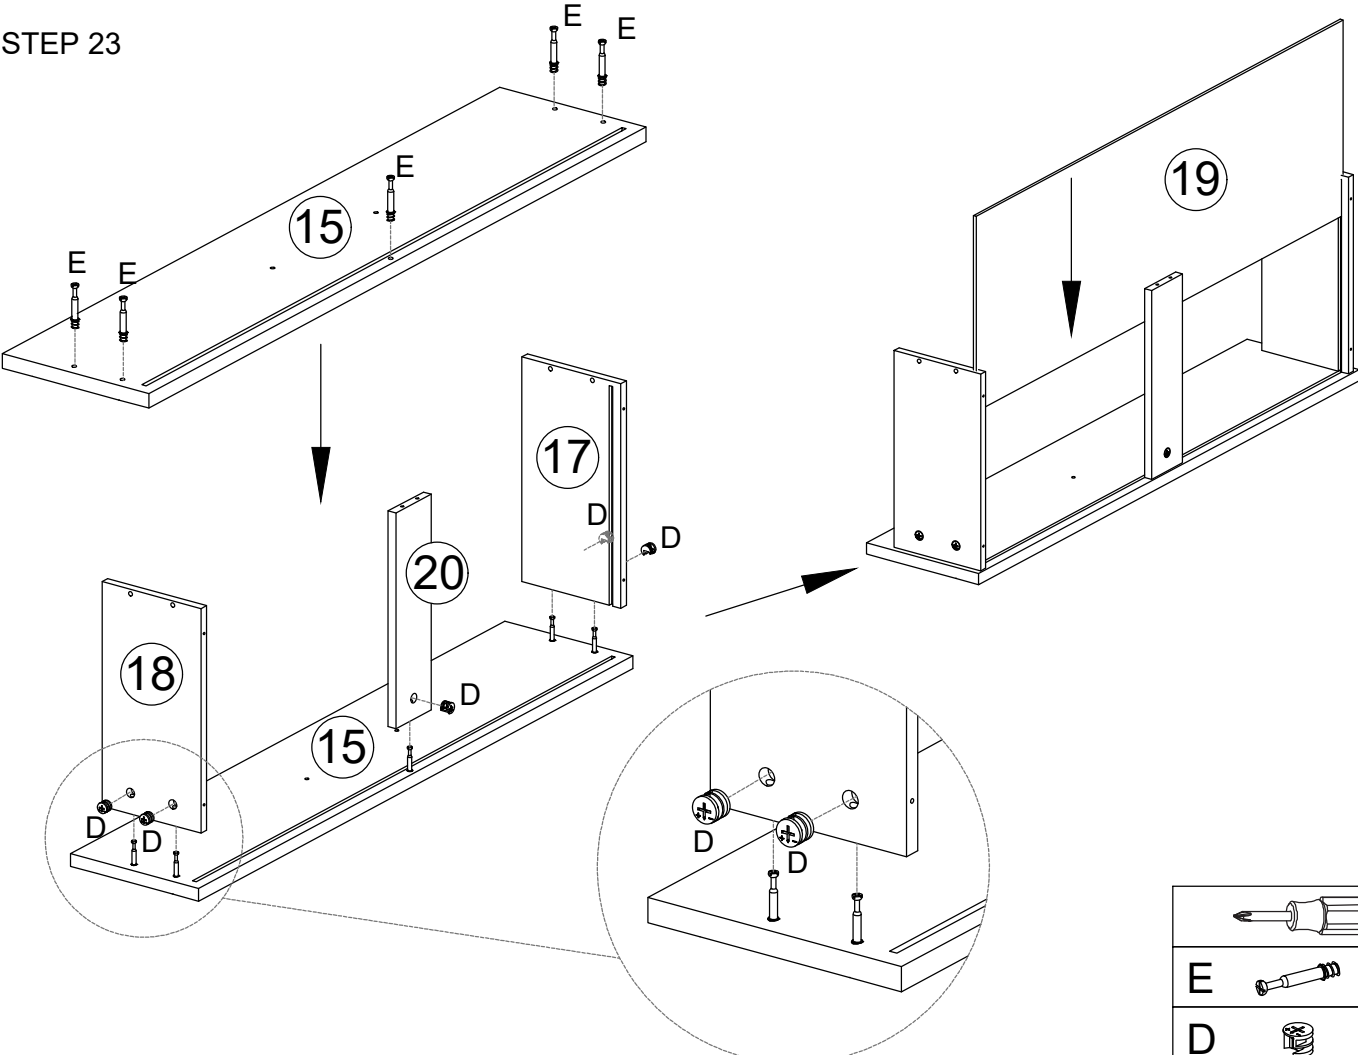


E		x5
D		x5

STEP 24

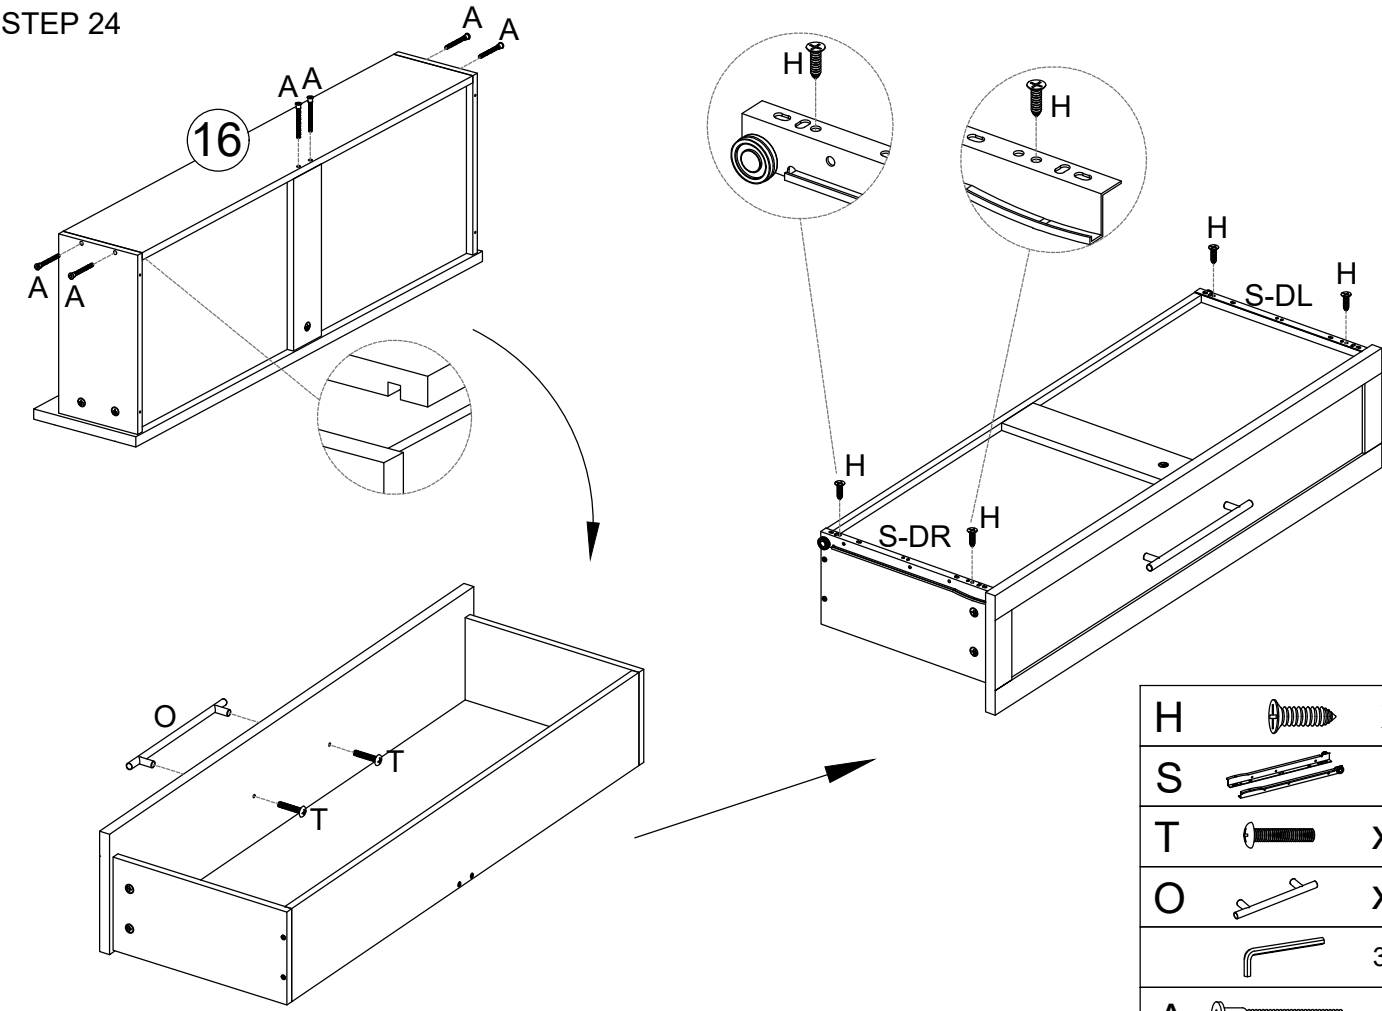


H		x4
S		x1
T		x2
O		x1
		3mm
A		x6

STEP 25

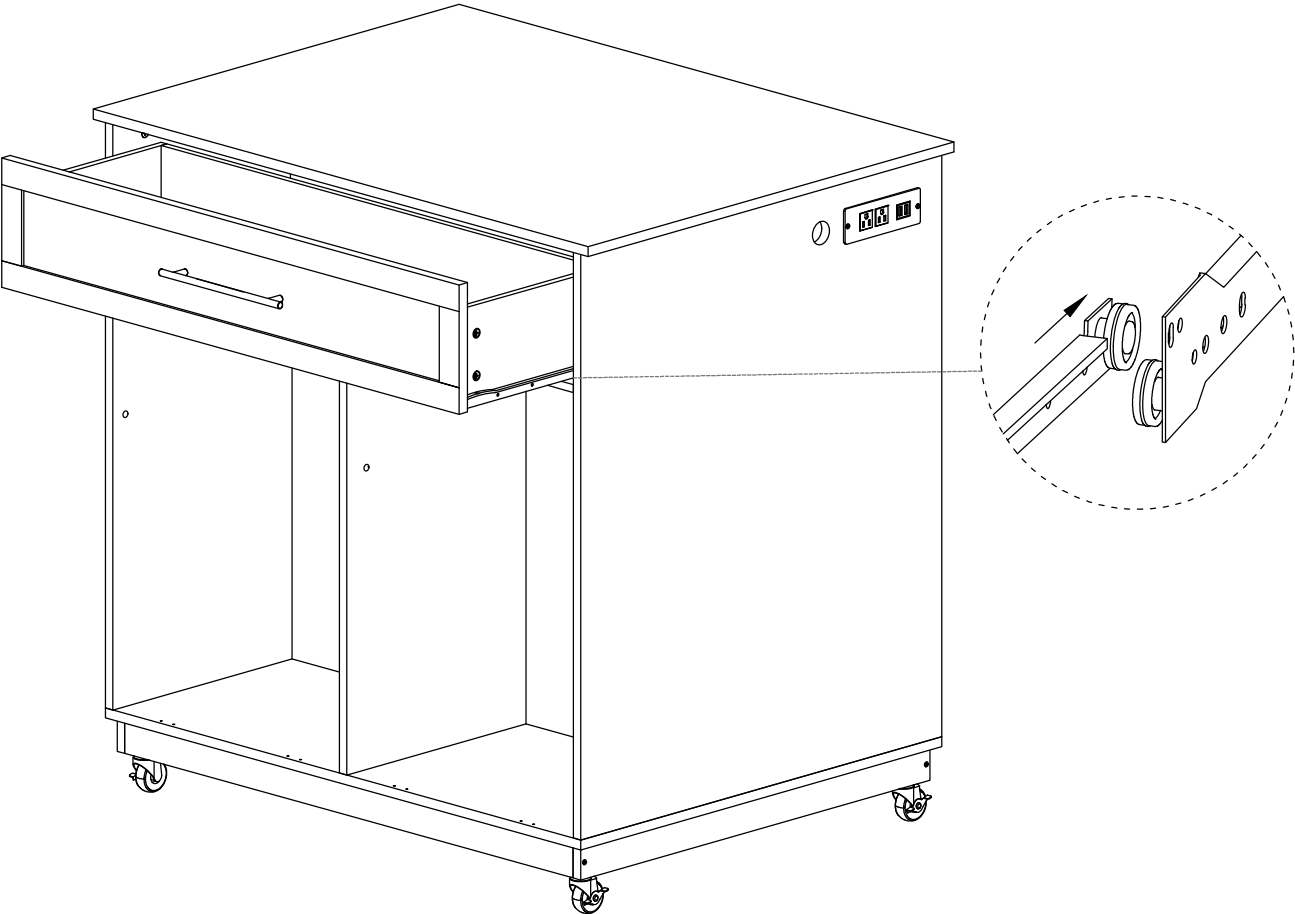

STEP 26 **x2**

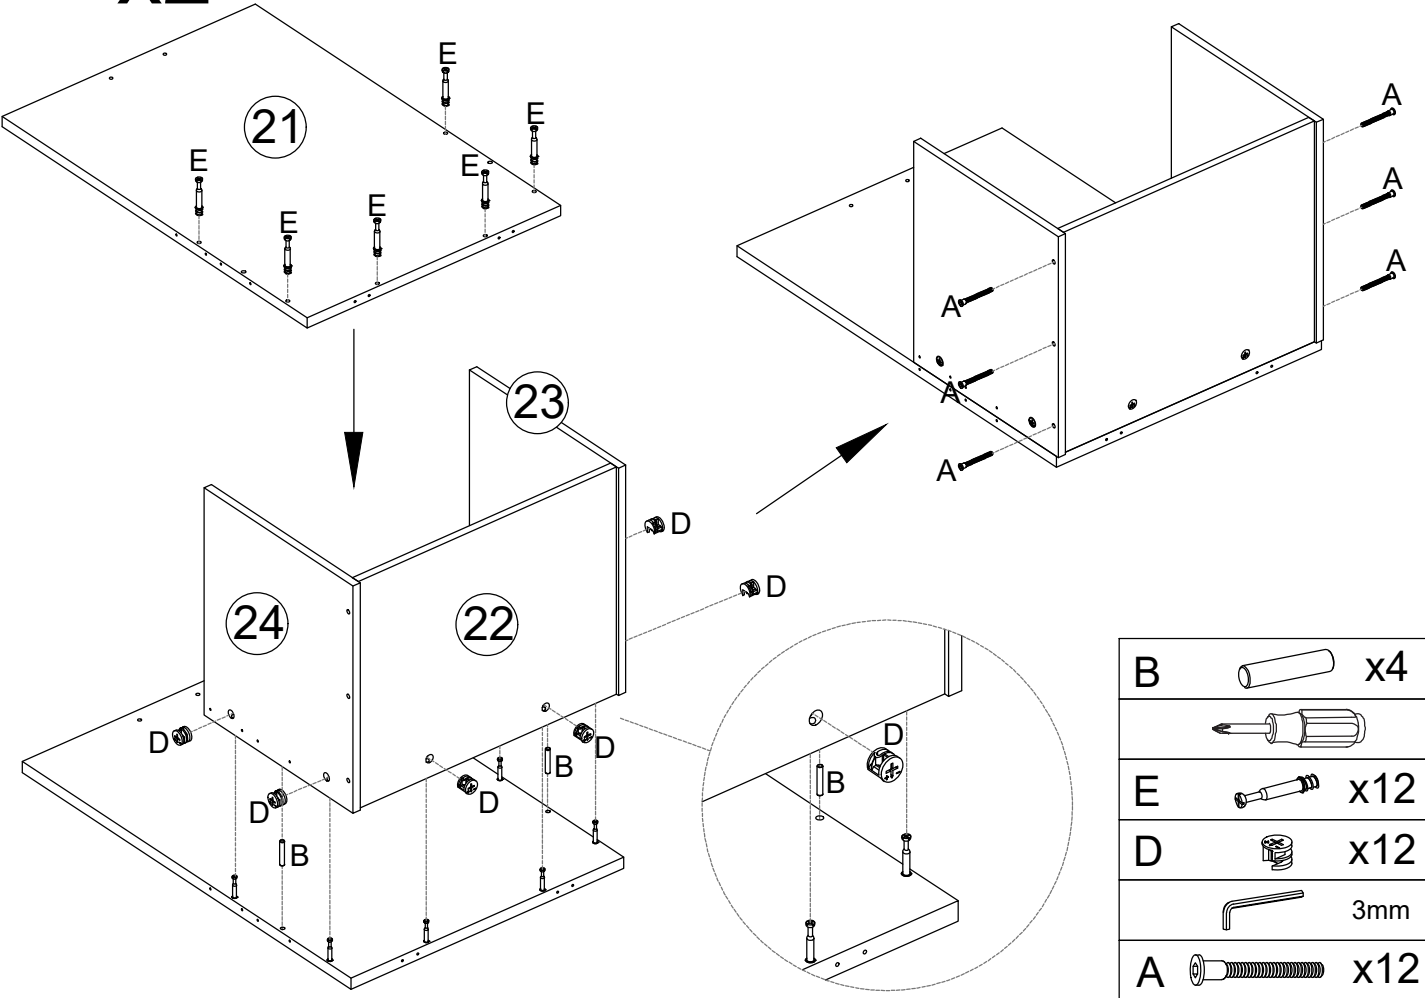

STEP 27 **x2**

Diagram illustrating the assembly of a cabinet door (Step 27). The door is attached to the cabinet frame using screws (Hx8) and hinges (R). The door is shown in two positions: closed and open. The assembly involves attaching the door to the frame using screws (Hx8) and hinges (R). A warning triangle indicates "Pay attention to direction".


R		x4
H		x40
Q		x4
P		x2

STEP 28

Diagram illustrating the assembly of a cabinet drawer (Step 28). The drawer is shown being inserted into the cabinet frame. The assembly involves attaching the drawer to the frame using screws (H) and hinges (R). A warning triangle indicates "Pay attention to direction".


H		x4
---	--	----

STEP 29

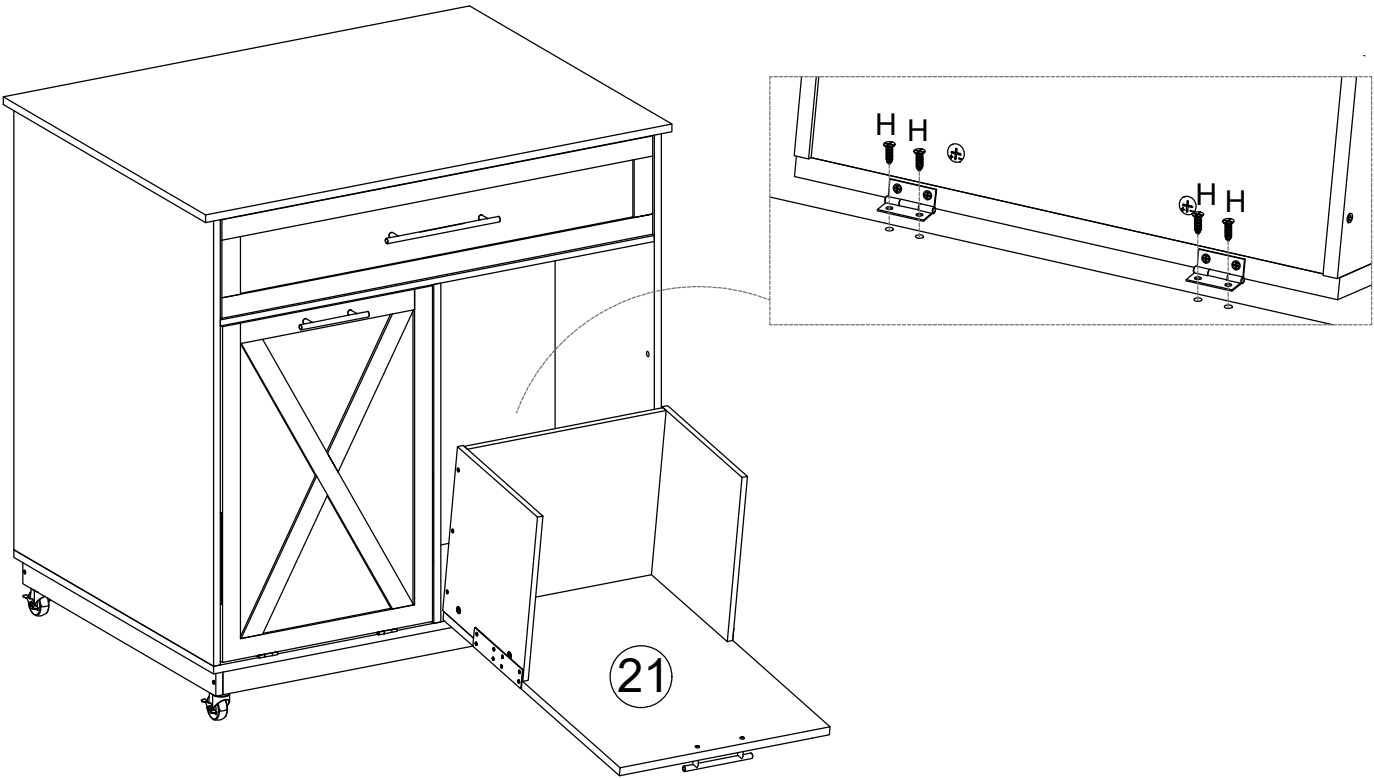

H		x4
		

STEP 30

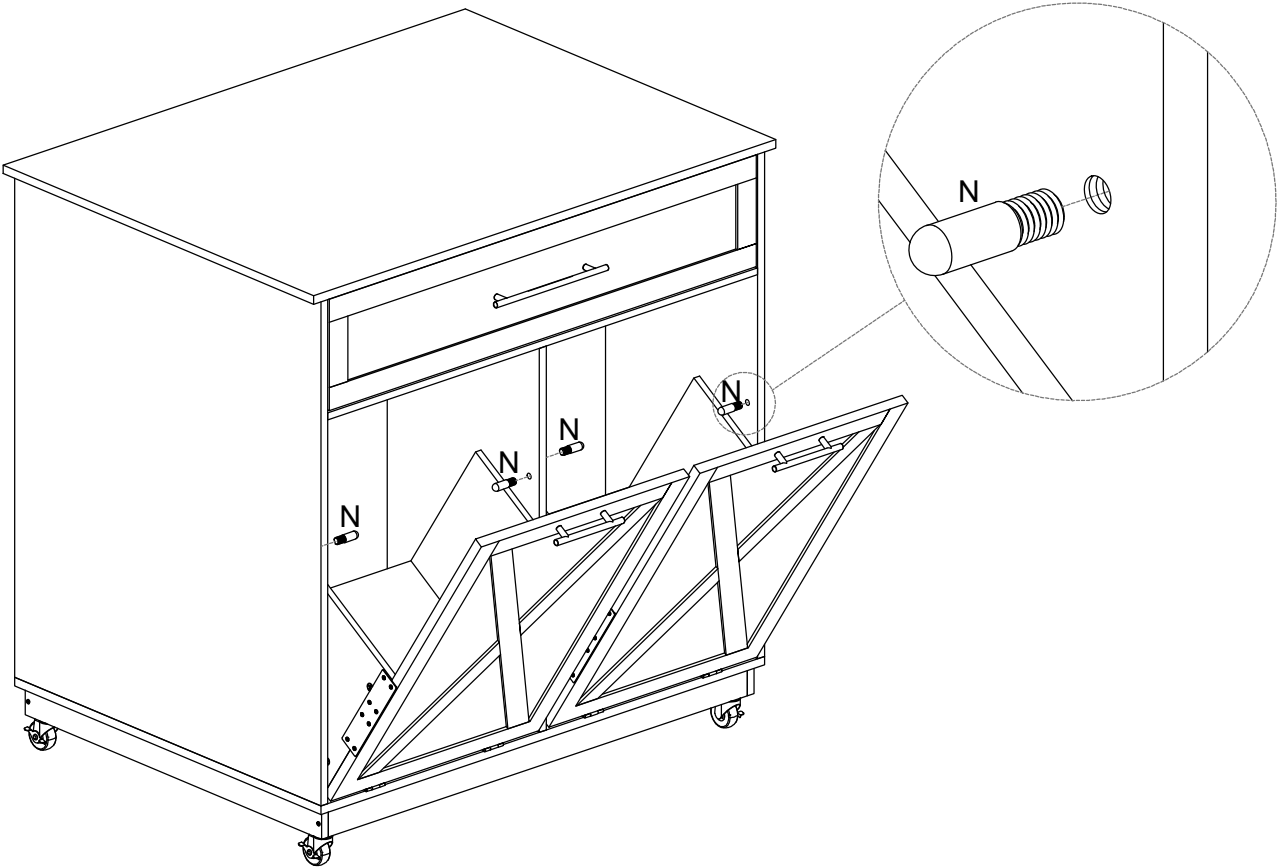

Installation Completed

N		x4
---	---	----