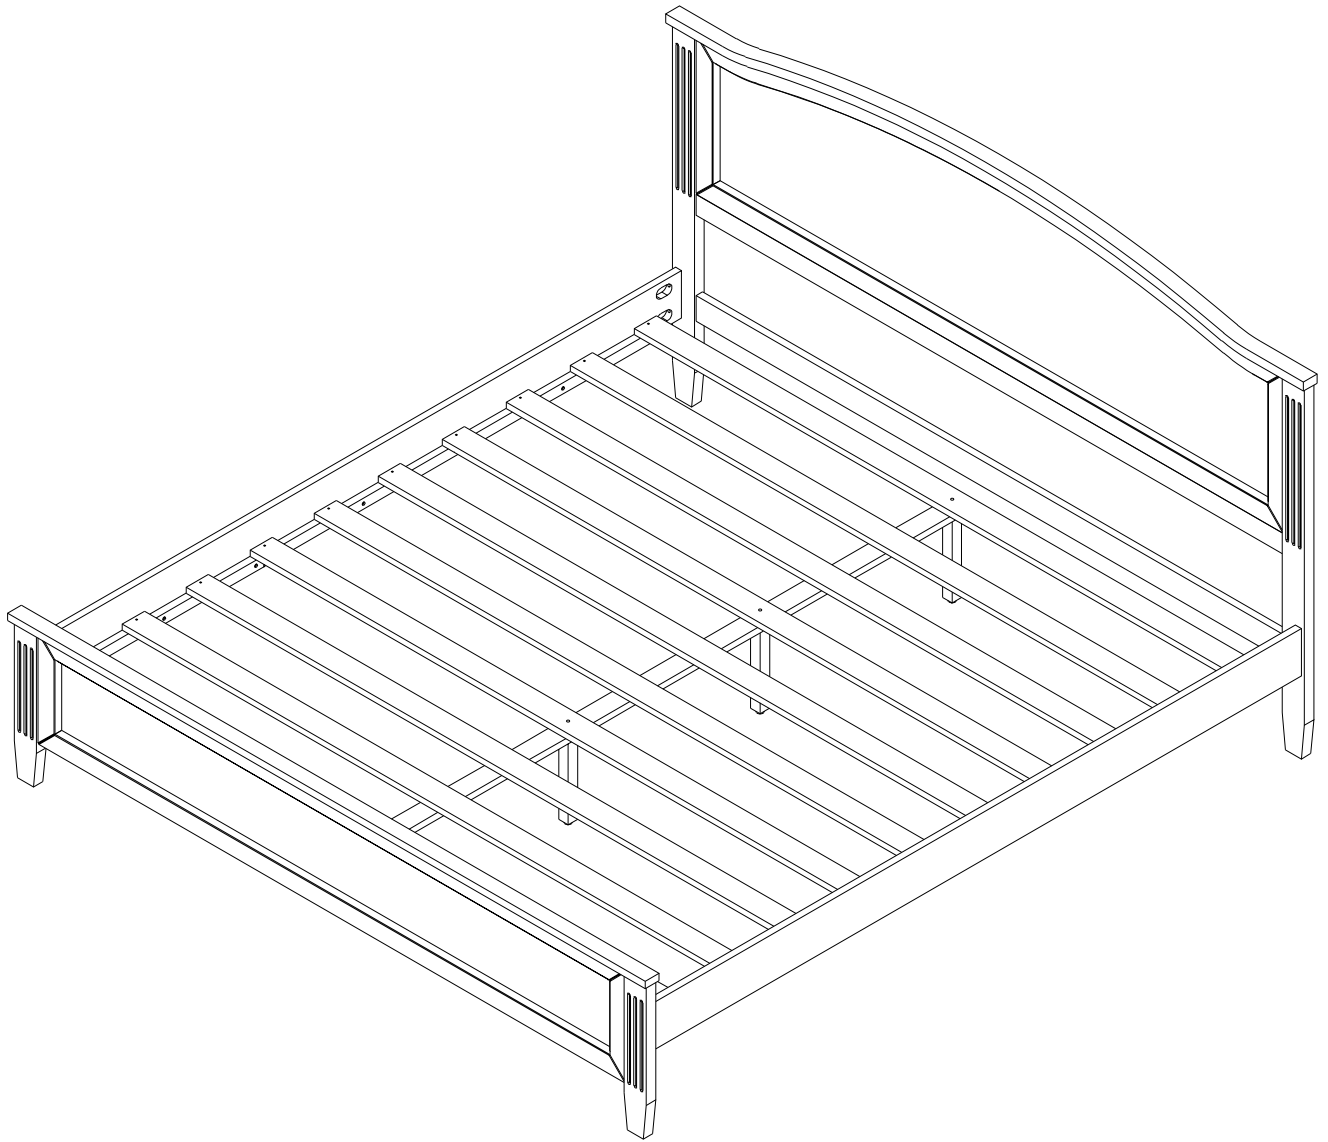
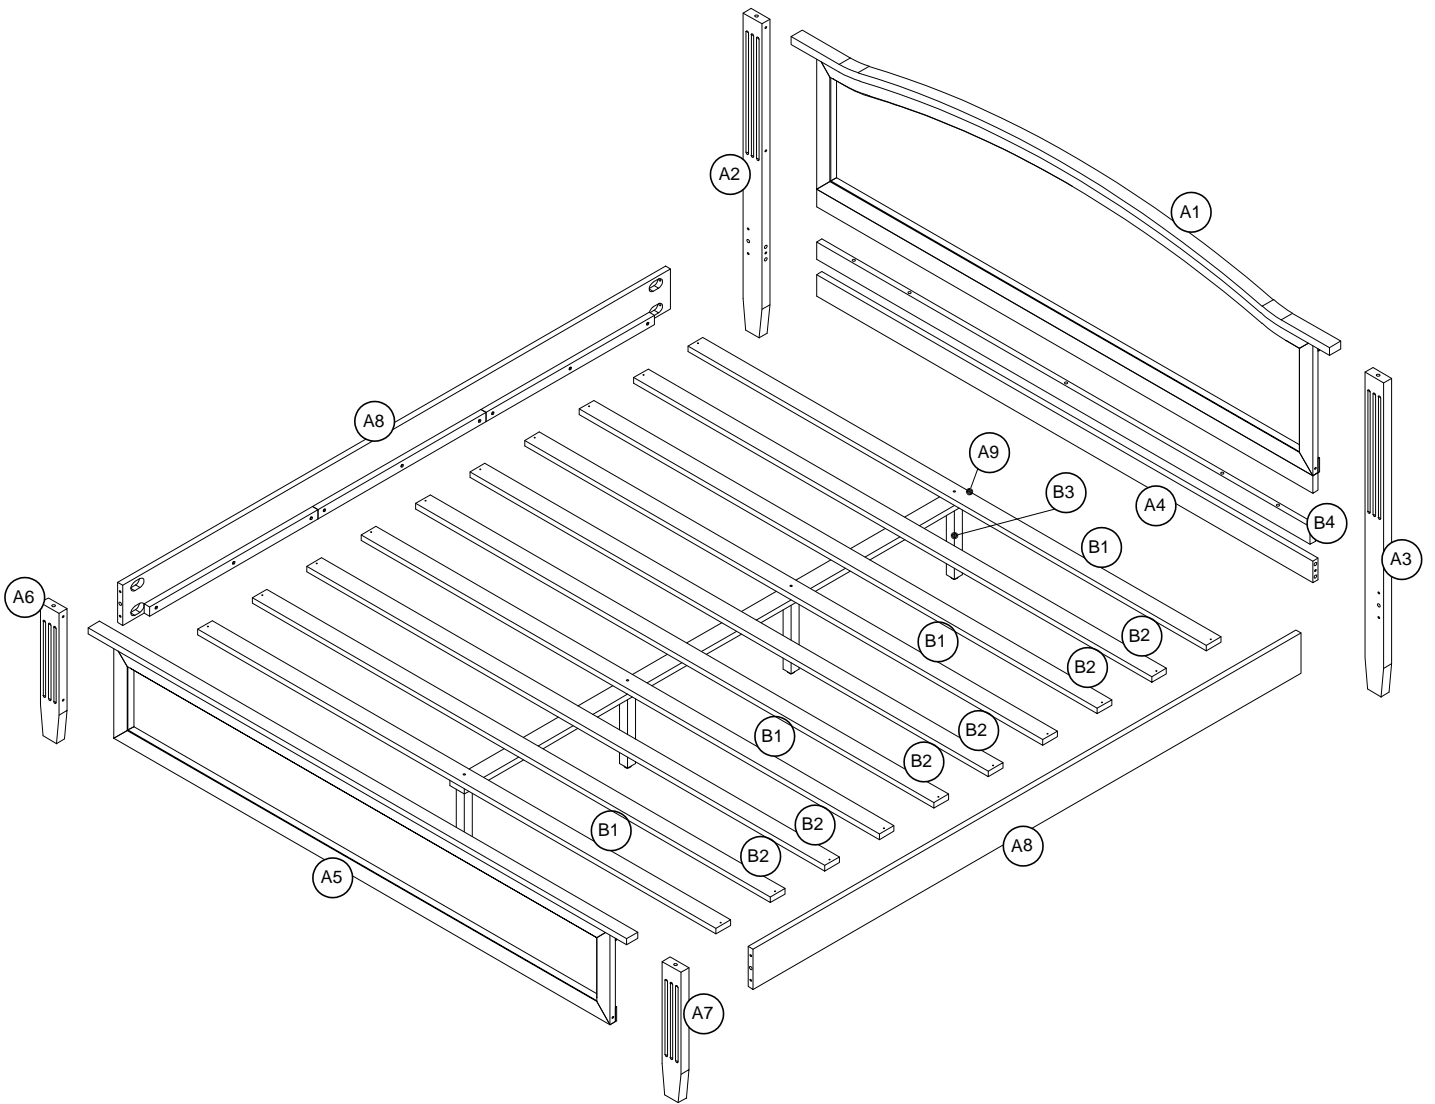


ASSEMBLY INSTRUCTIONS
SKU CODE: N709P425355
INSTRUCTIONS DE MONTAGE
SKU NUMBER: N709P425355



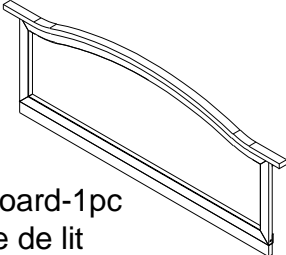


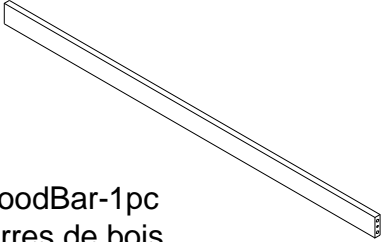
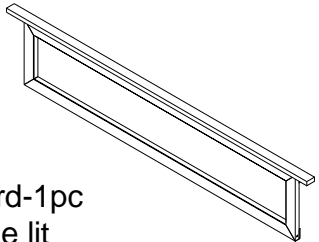


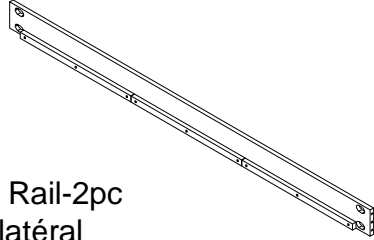
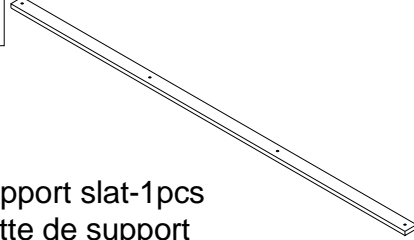
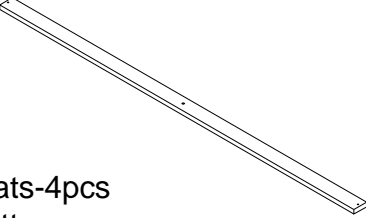
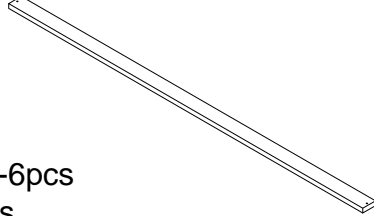

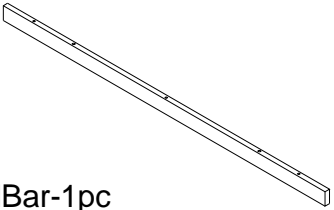
ASSEMBLY INSTRUCTION

INSTRUCTIONS DEMONTAGE



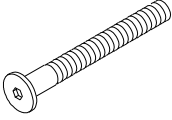






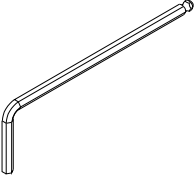
Part List & Hardware List (N709P425355)

Liste des pièces et liste du matériel

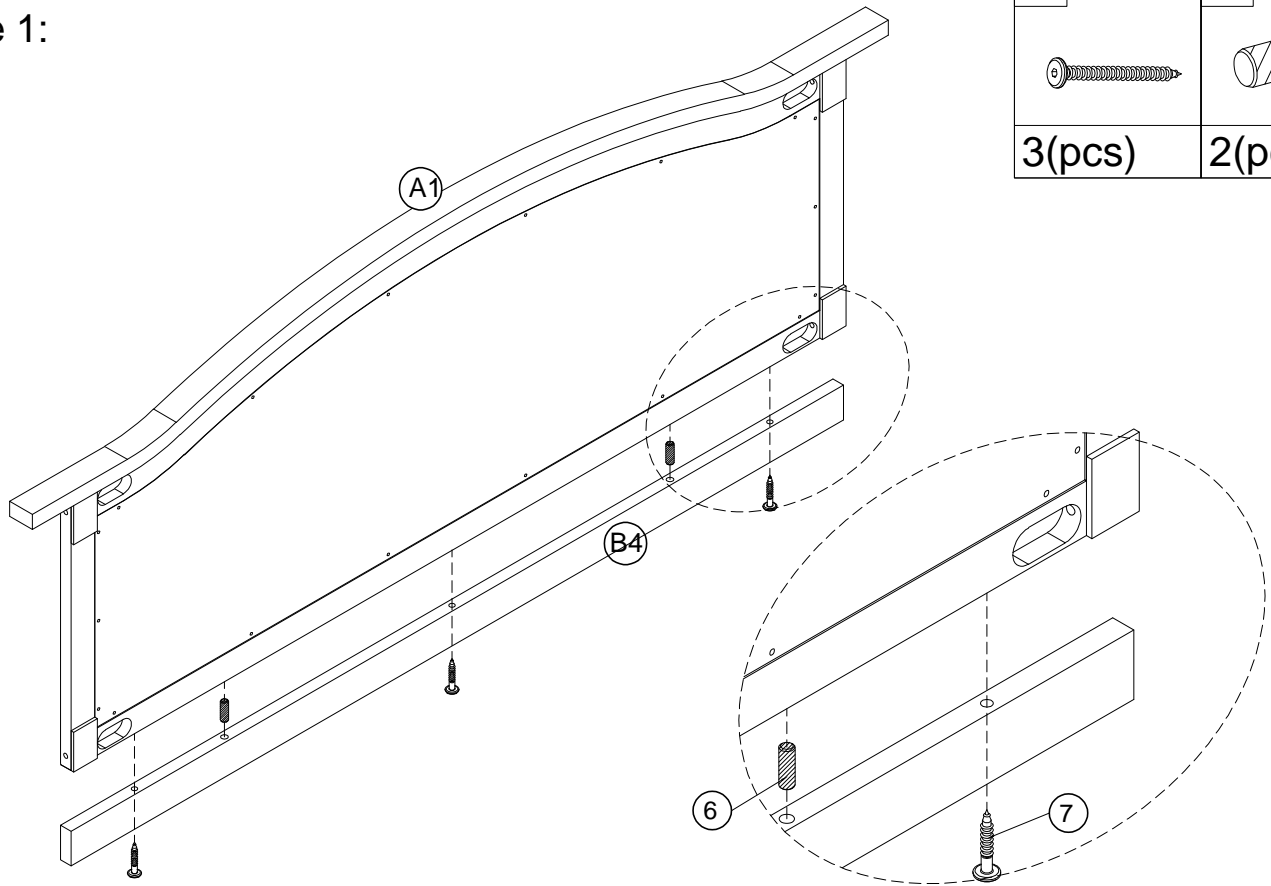
<p>A1</p>  <p>Headboard-1pc Tête de lit</p>	<p>A2</p>  <p>Leg-1pc Jambe</p>	<p>A3</p>  <p>Leg-1pc Jambe</p>
<p>A4</p>  <p>WoodBar-1pc Barres de bois</p>	<p>A5</p>  <p>Footboard-1pc Pied de lit</p>	<p>A6</p>  <p>Leg-1pc Jambe</p>
<p>A7</p>  <p>Leg-1pc Jambe</p>	<p>A8</p>  <p>Side Rail-2pc Rail latéral</p>	<p>A9</p>  <p>Support slat-1pcs latte de support</p>
<p>B1</p>  <p>Slats-4pcs Lattes</p>	<p>B2</p>  <p>Slats-6pcs Lattes</p>	<p>B3</p>  <p>Leg-4pcs Jambe</p>
<p>B4</p>  <p>WoodBar-1pc Barres de bois</p>		



Hardware List (N709P425355)

Liste du matériel

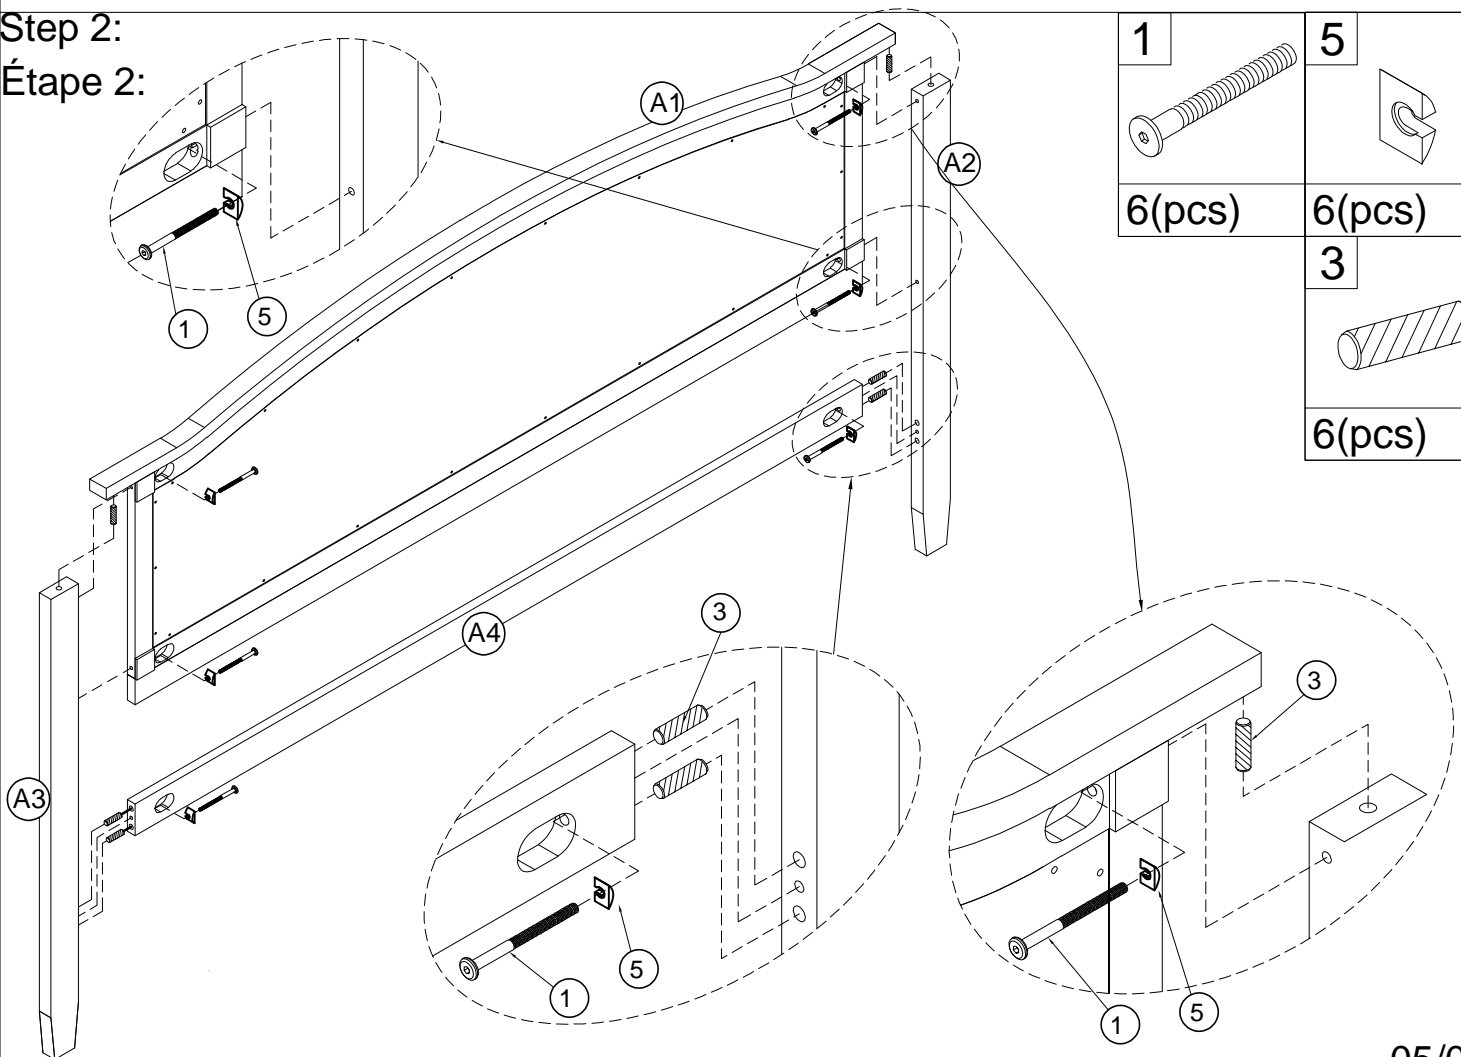
<p>1</p>  <p>Bolts Ø1/4" x70 mm - 10pcs Boulon</p>	<p>2</p>  <p>Bolts Ø1/4" x50 mm - 12pcs Boulon</p>	<p>3</p>  <p>Wood dowel Ø10 x 40 mm - 14pcs Cheville en bois</p>
<p>4</p>  <p>Wood Screws M4 x 30mm - 20pcs Les vis à bois</p>	<p>5</p>  <p>Washer - 18pcs rondelle frein</p>	<p>6</p>  <p>Screws 1/4" x 70mm -3pcs Vis</p>
<p>7</p>  <p>Wood dowel Ø8 x 30 mm - 2pcs Cheville en bois</p>	<p>8</p>  <p>Allen Key - 1pc</p>	

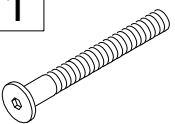


Step 1:
Étape 1:



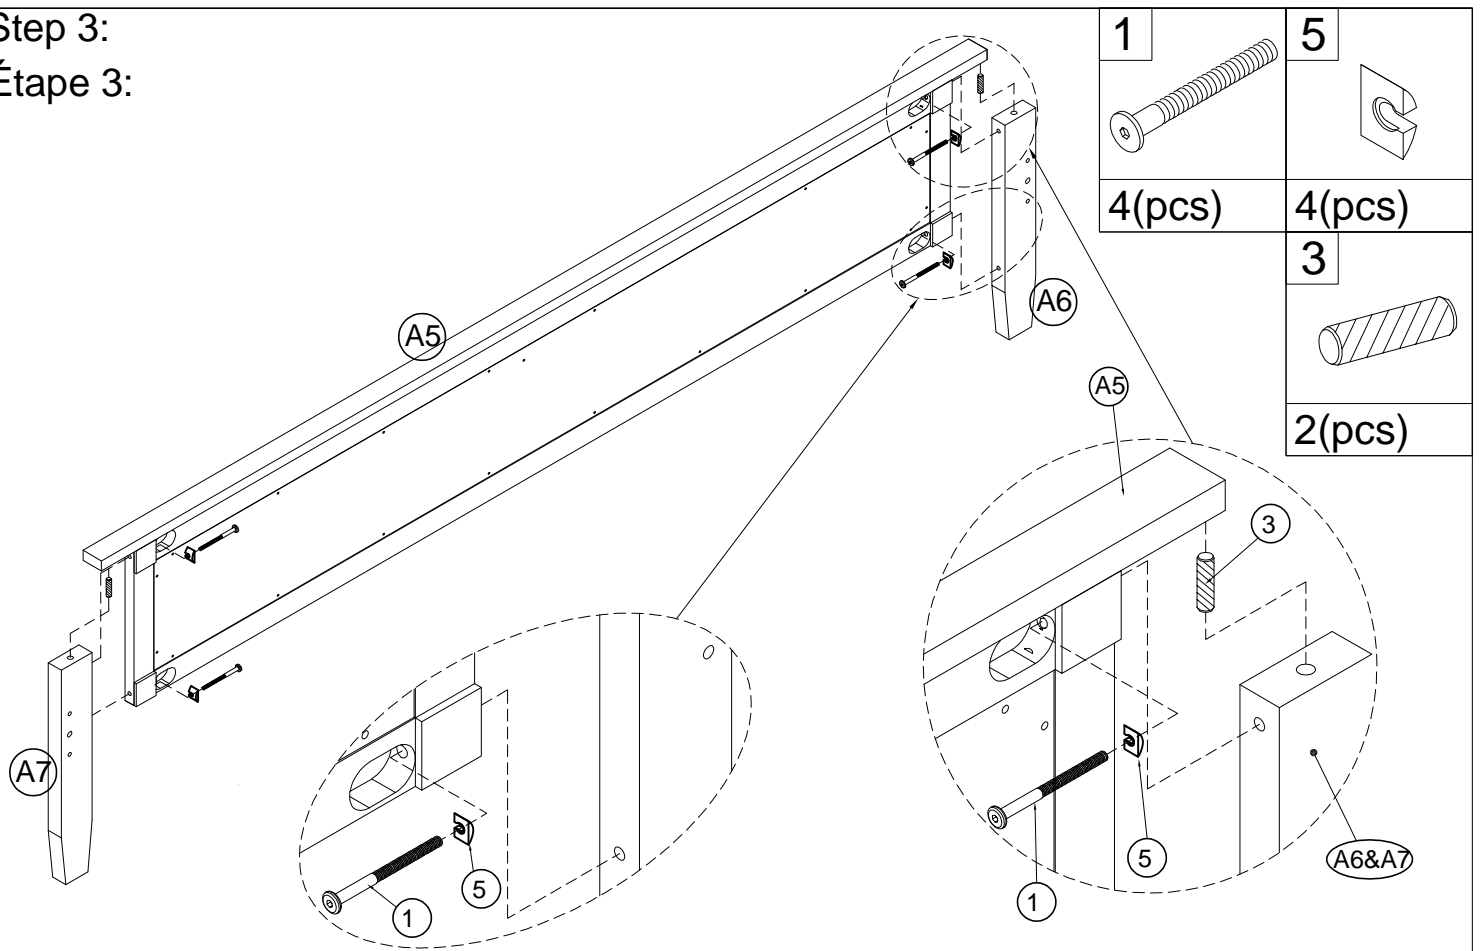
6	7
	
3(pcs)	2(pcs)

Step 2:
Étape 2:

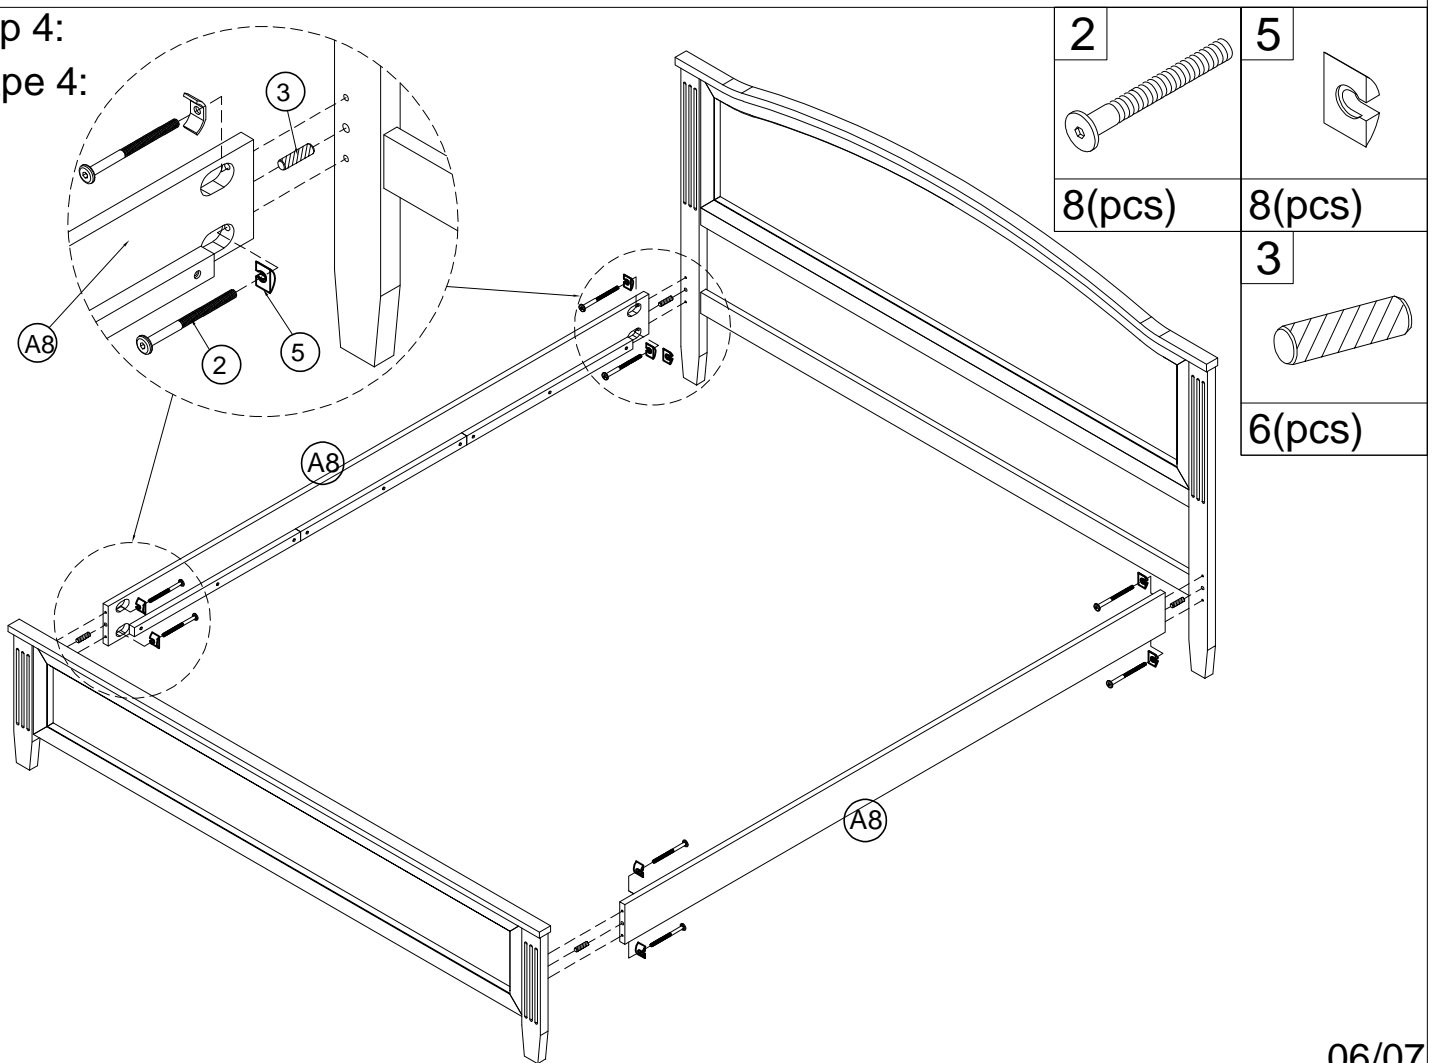


1	5
	
6(pcs)	6(pcs)
	3
	
	6(pcs)

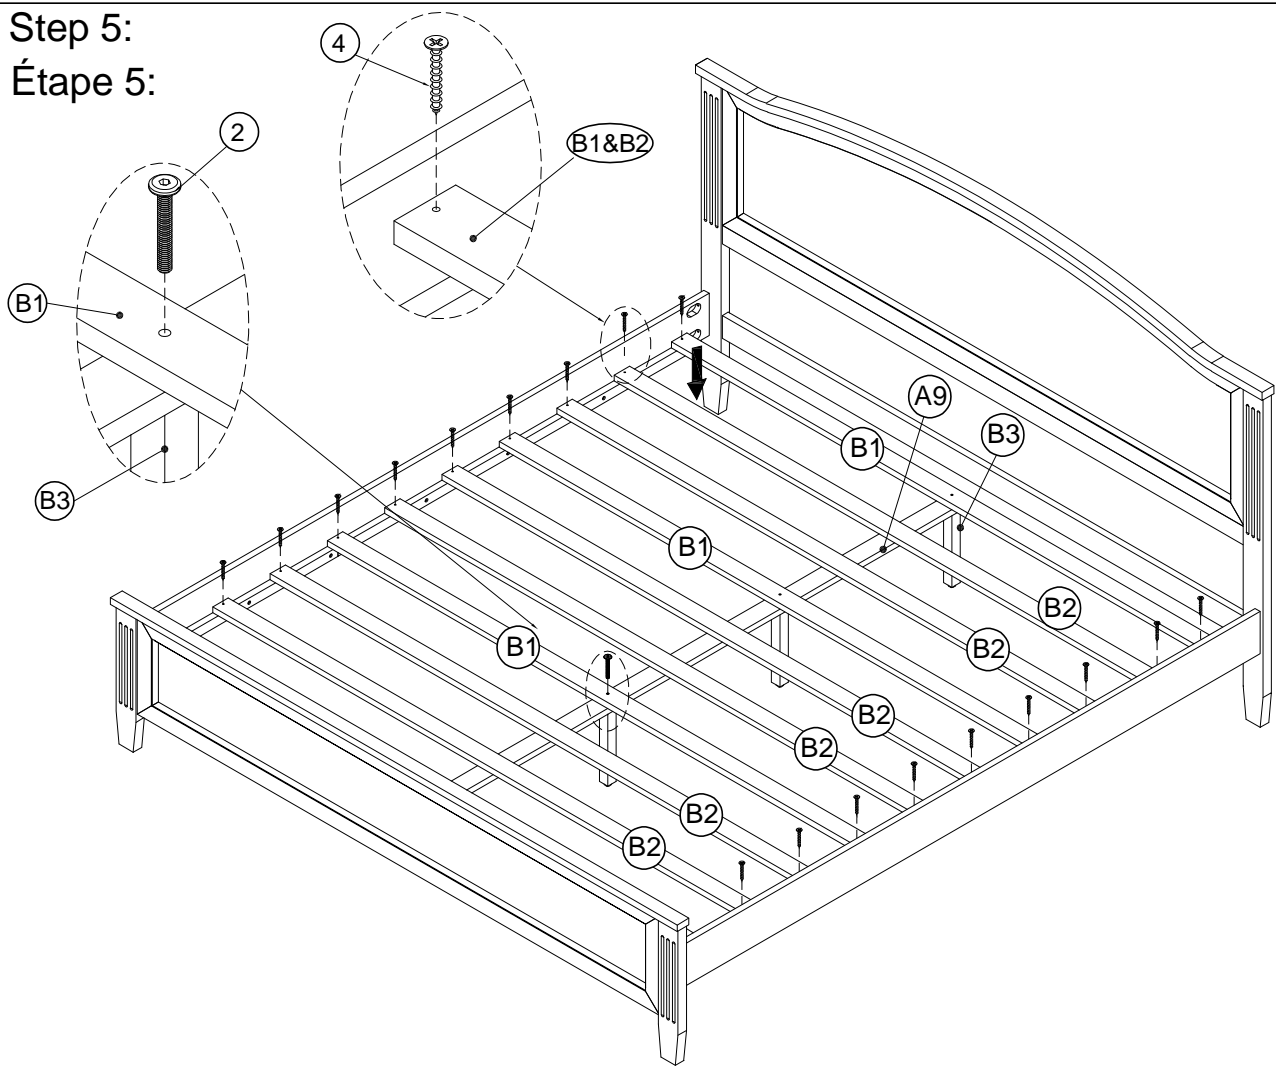
Step 3:
Étape 3:





Step 4:
Étape 4:



Step 5:
Étape 5:



4	
20(pcs)	
2	
4(pcs)	

Finish

