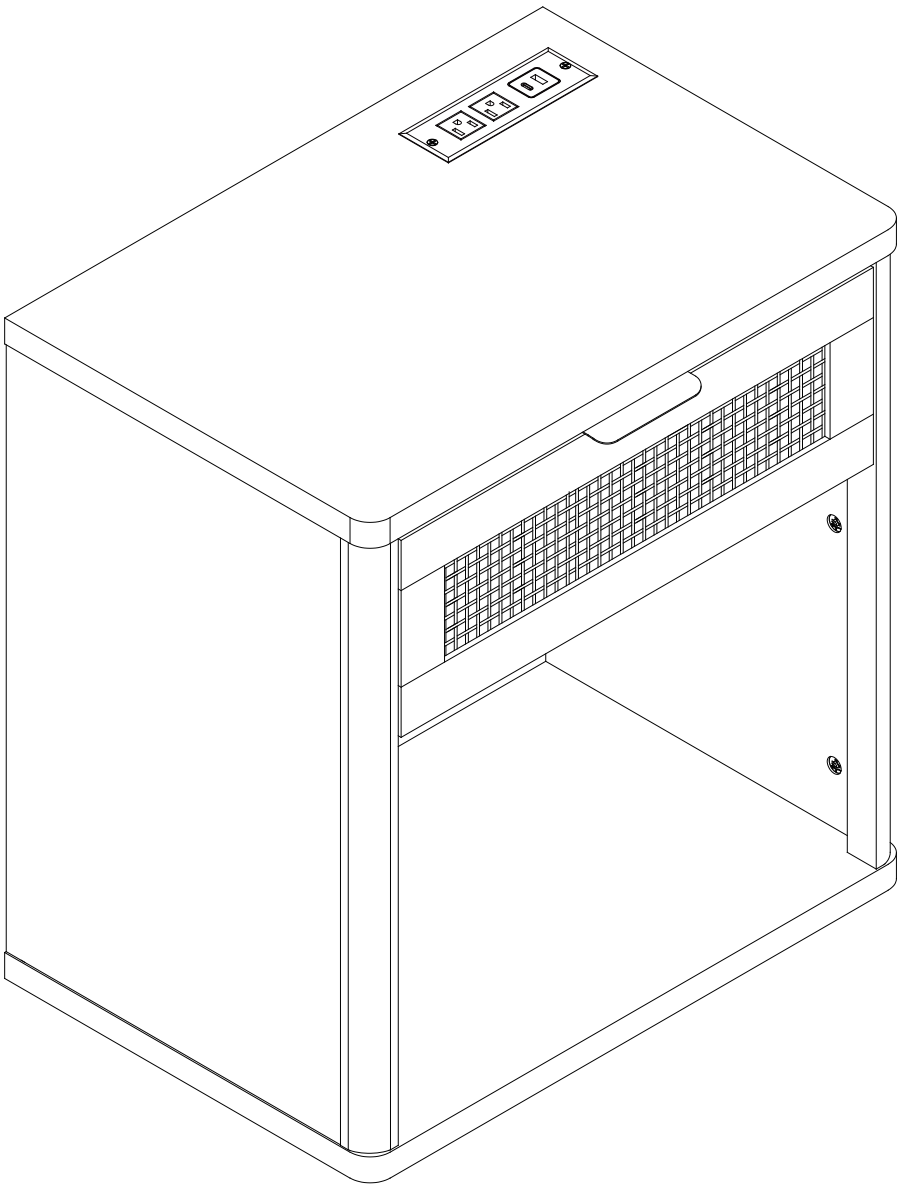


ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.

BEFORE STARTING


Before Using Product

- Read each step carefully before starting.It is very important thateach step is performed in the correct order.If these steps are not followed in sequence,assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used,preferably on a carpet,or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process,we suggest you keep a lite tightness for all the screws during assembly.After the whole product is assembled, firmly tighten all the screws.

⚠ WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly,keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted,not dragged or pushed.Failure to do so could cause instability,product collapse,and/or serious injury.
- Be careful when using power tools to assemble your furniture.Power tools may strip or damage the parts.

QUICKFIT

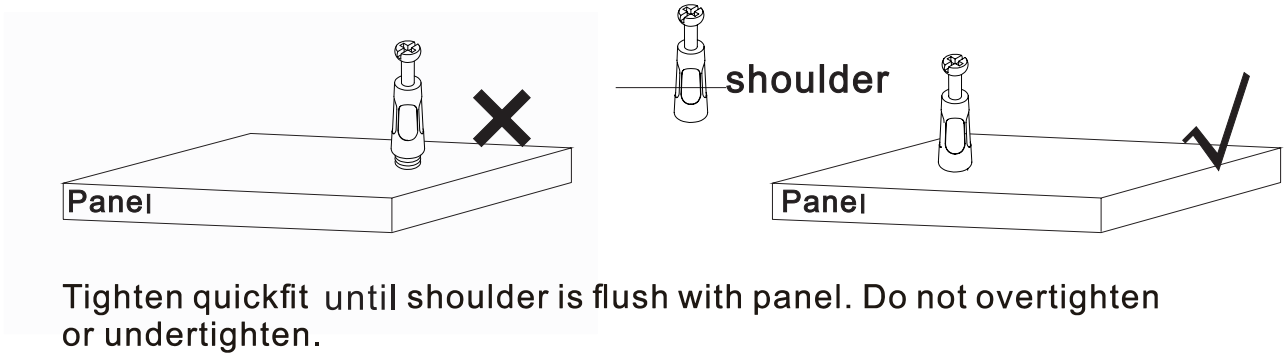

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

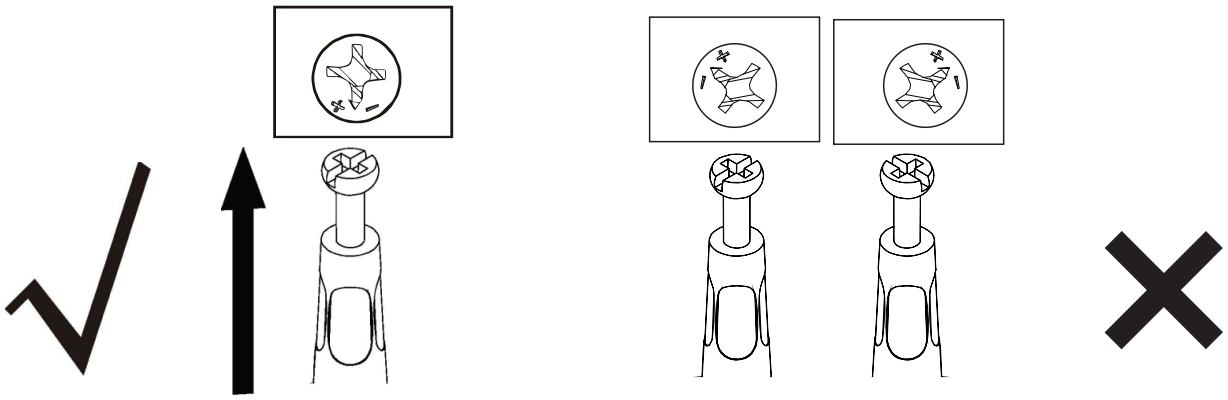


CORRECT

WRONG
















When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.

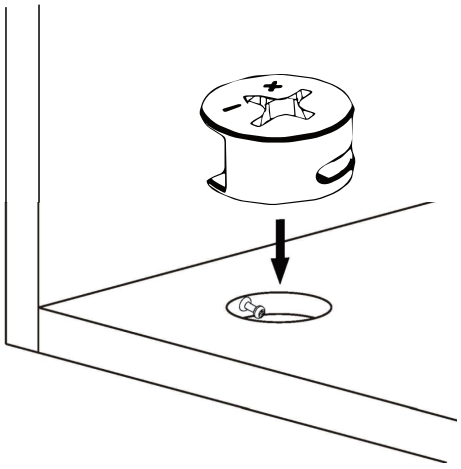


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

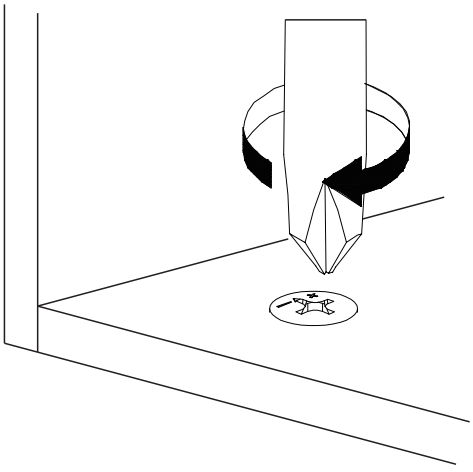

Turn cam lock clockwise to tighten.

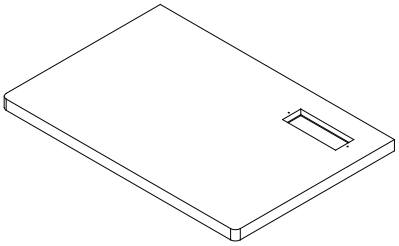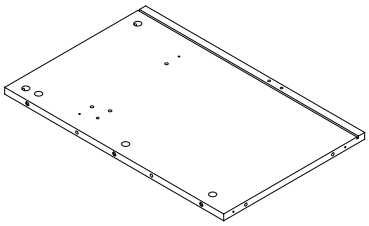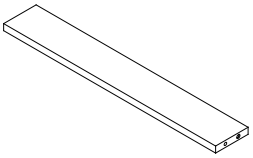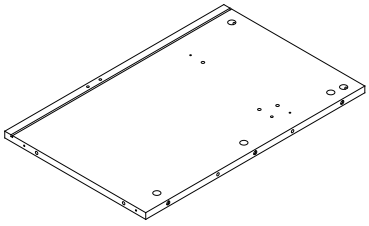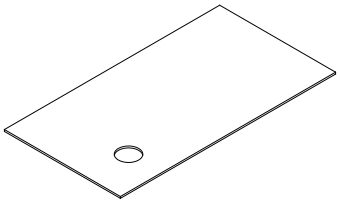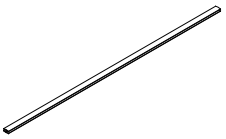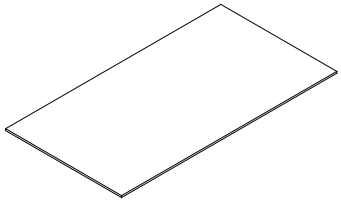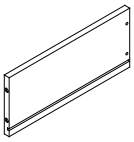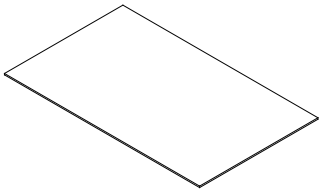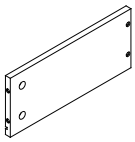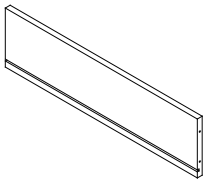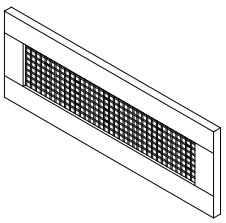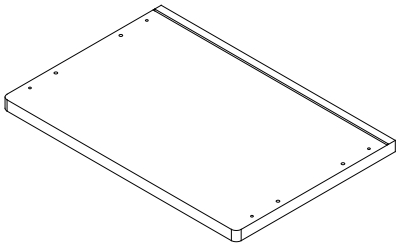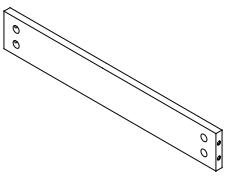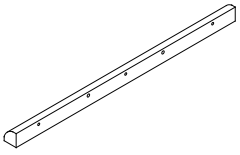
1 x1 	2 x1 	3 x1 
4 x1 	5 x1 	6 x1 
7 x1 	8 x1 	9 x1 
10 x1 	11 x1 	12 x1 
13 x1 	14 x1 	15 x2 

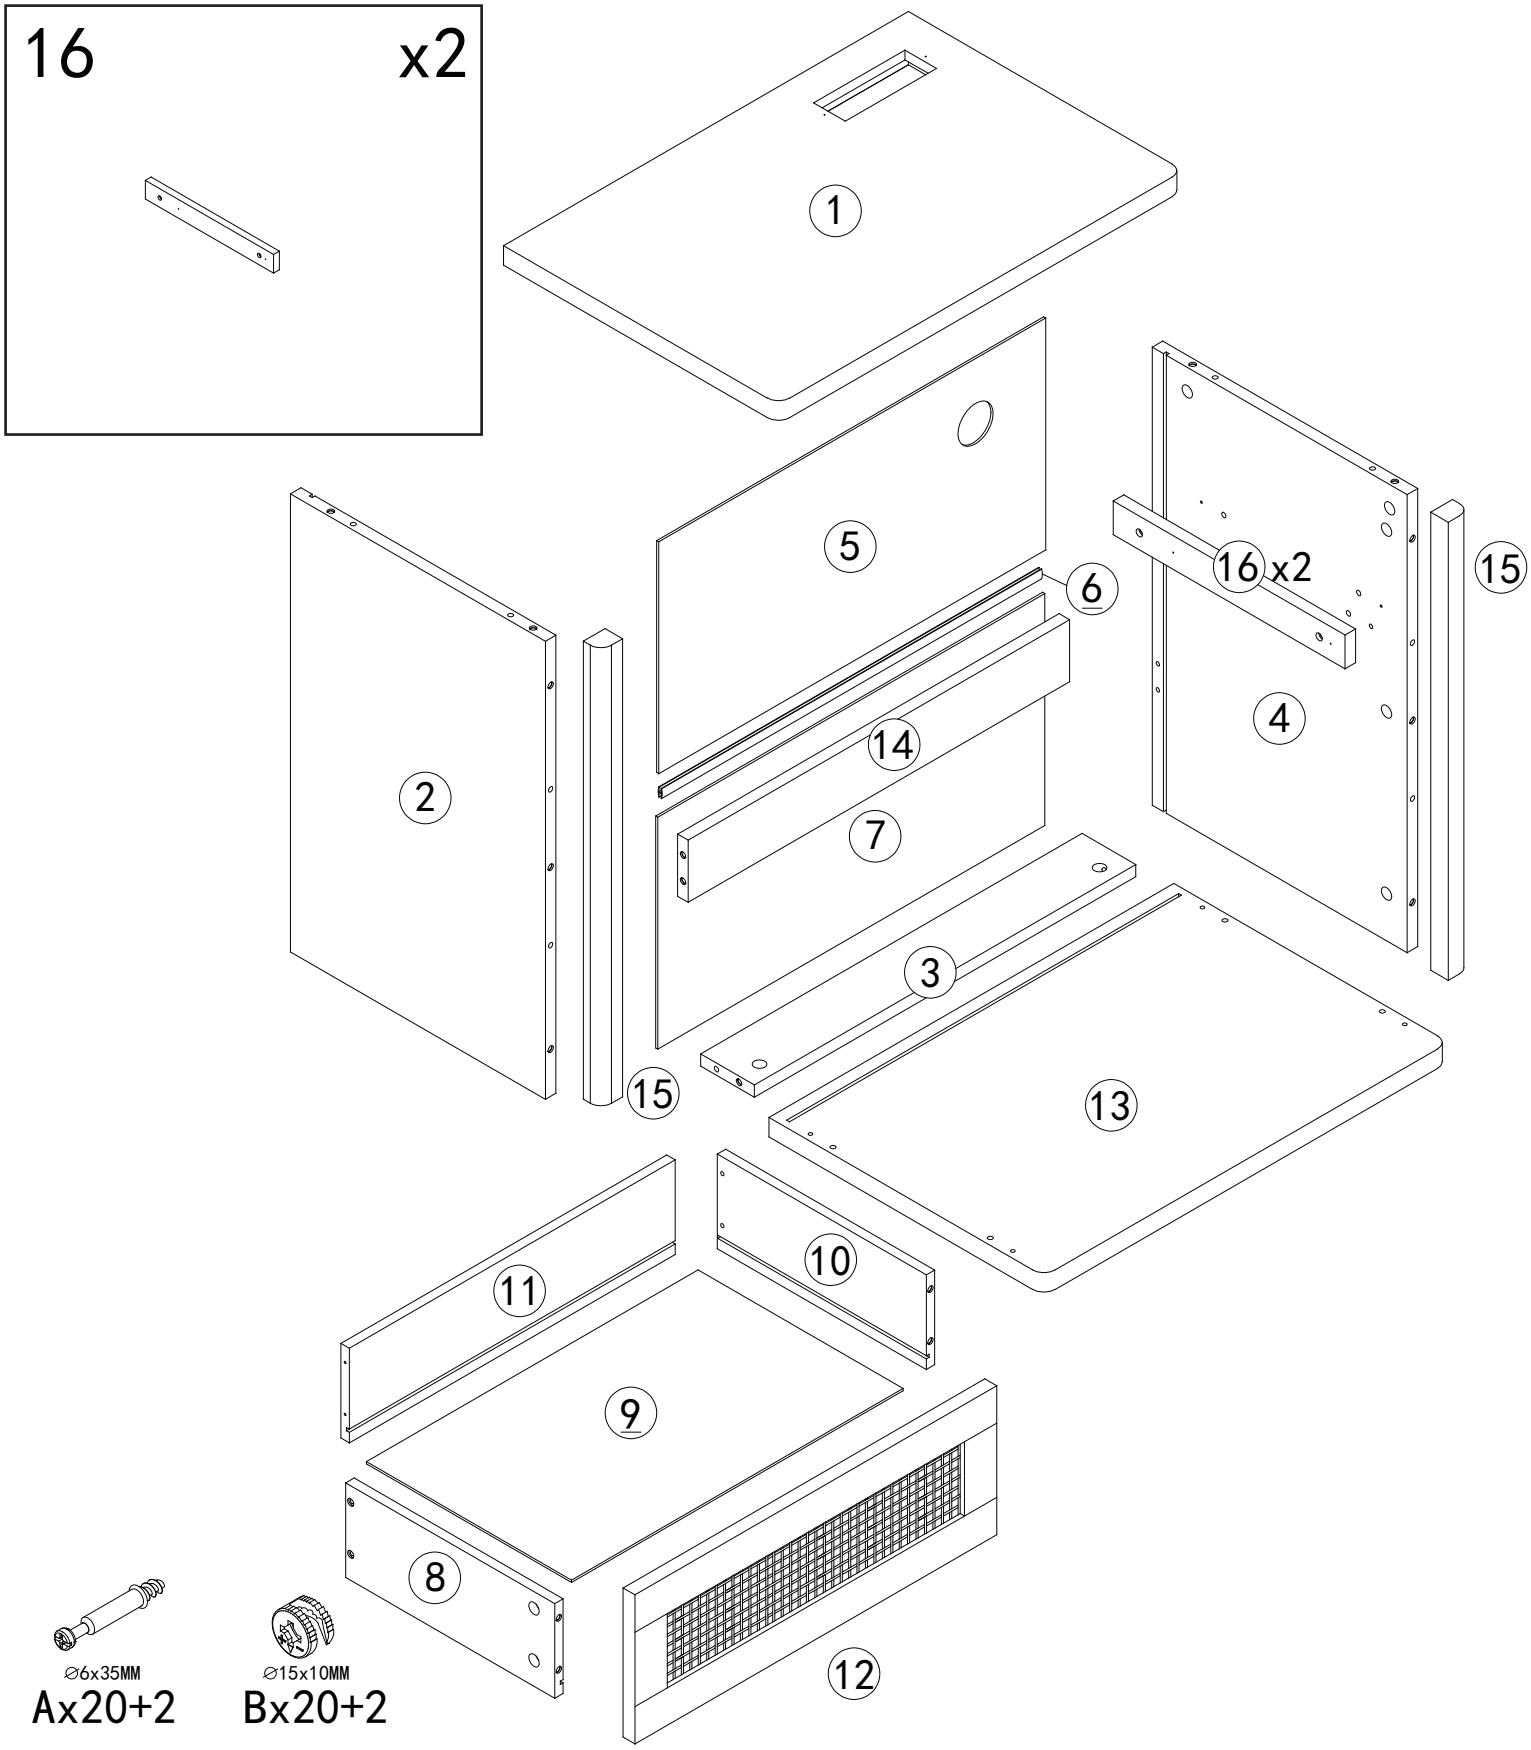


∅6x35MM
Ax20+2


∅15x10MM
Bx20+2



∅6x30MM
Cx14+1



M4x40mm M4x12mm
Dx2


M3x12mm
Ex10+1


M4x35mm
Fx4



M4x45mm
Gx4


96mm
Hx1


M3x16mm
Ix4



∅27x23MM
Jx4


3X12mm
Kx2

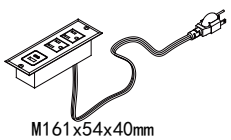

M161x54x40mm
Lx1


M4x22mm
Mx4



∅6x20MM
Nx4



300mm
x1



∅21x100MM
x1

1

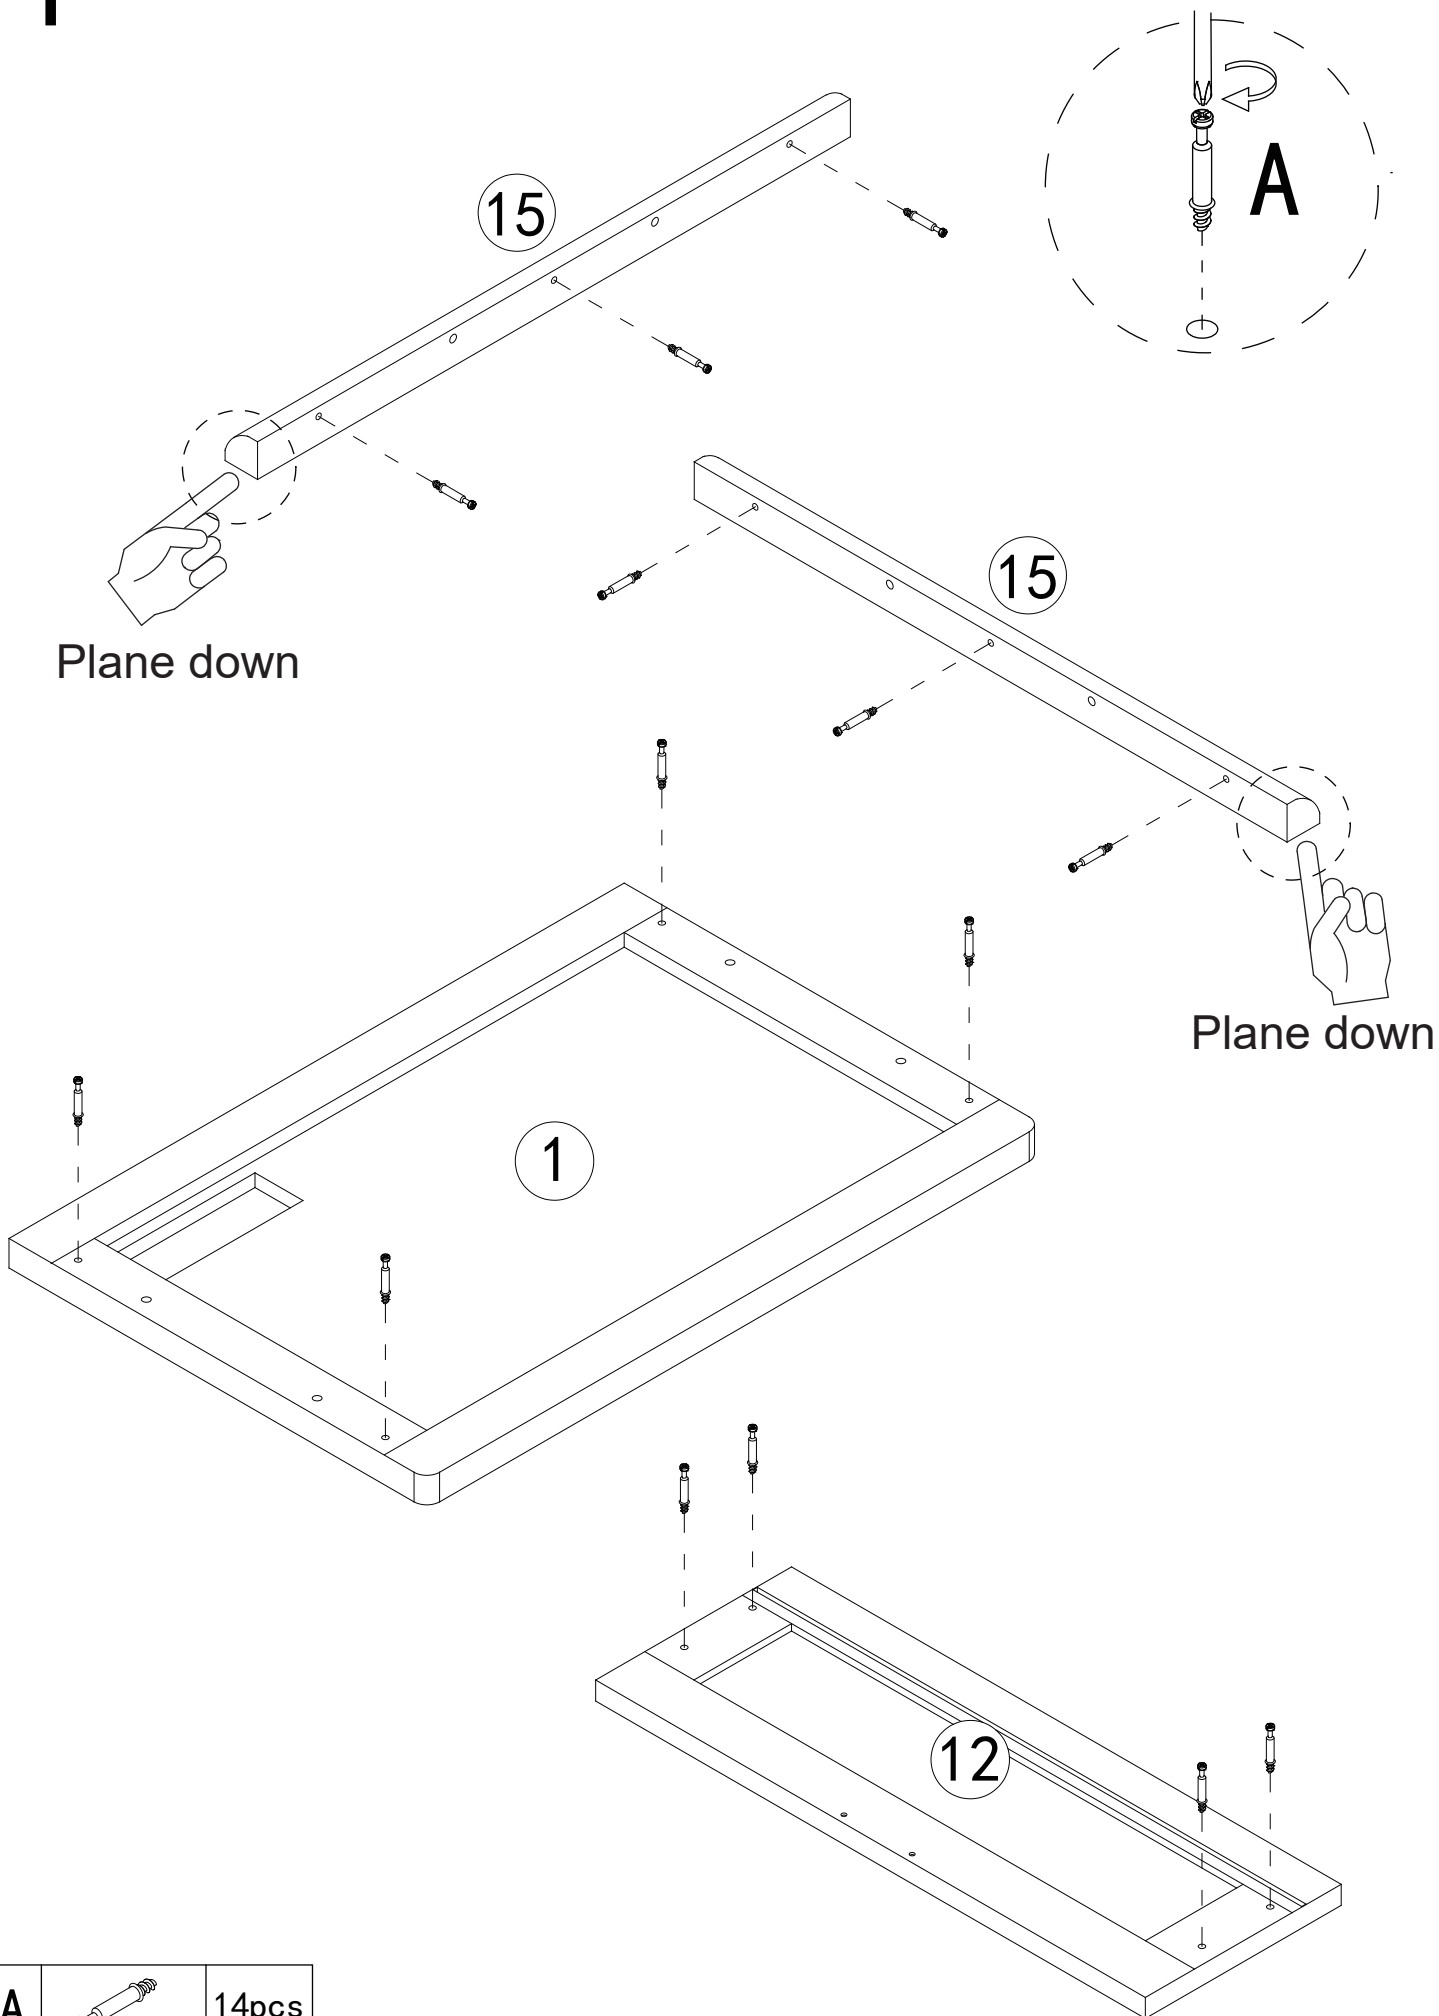



A		14pcs


2

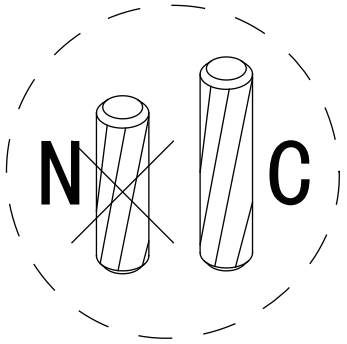



Take care to distinguish between C and N.

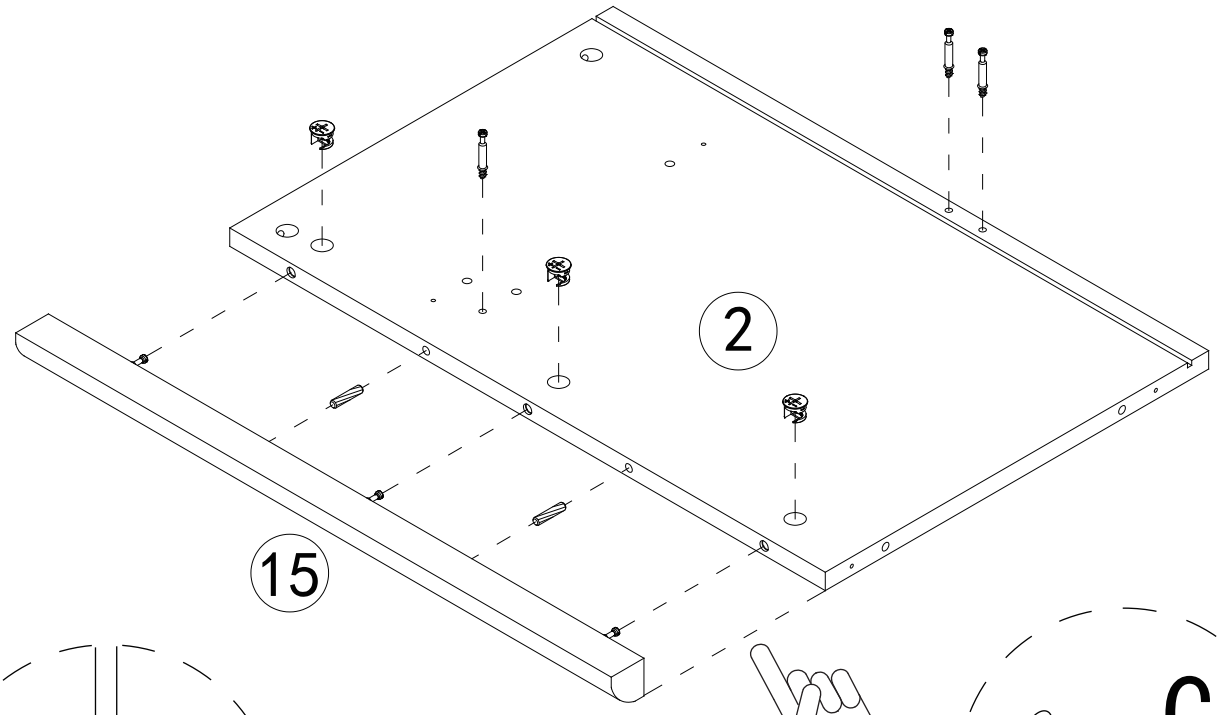

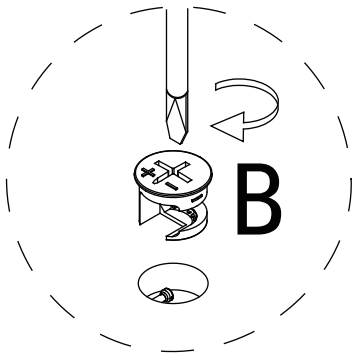

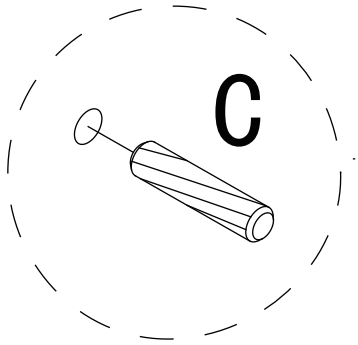


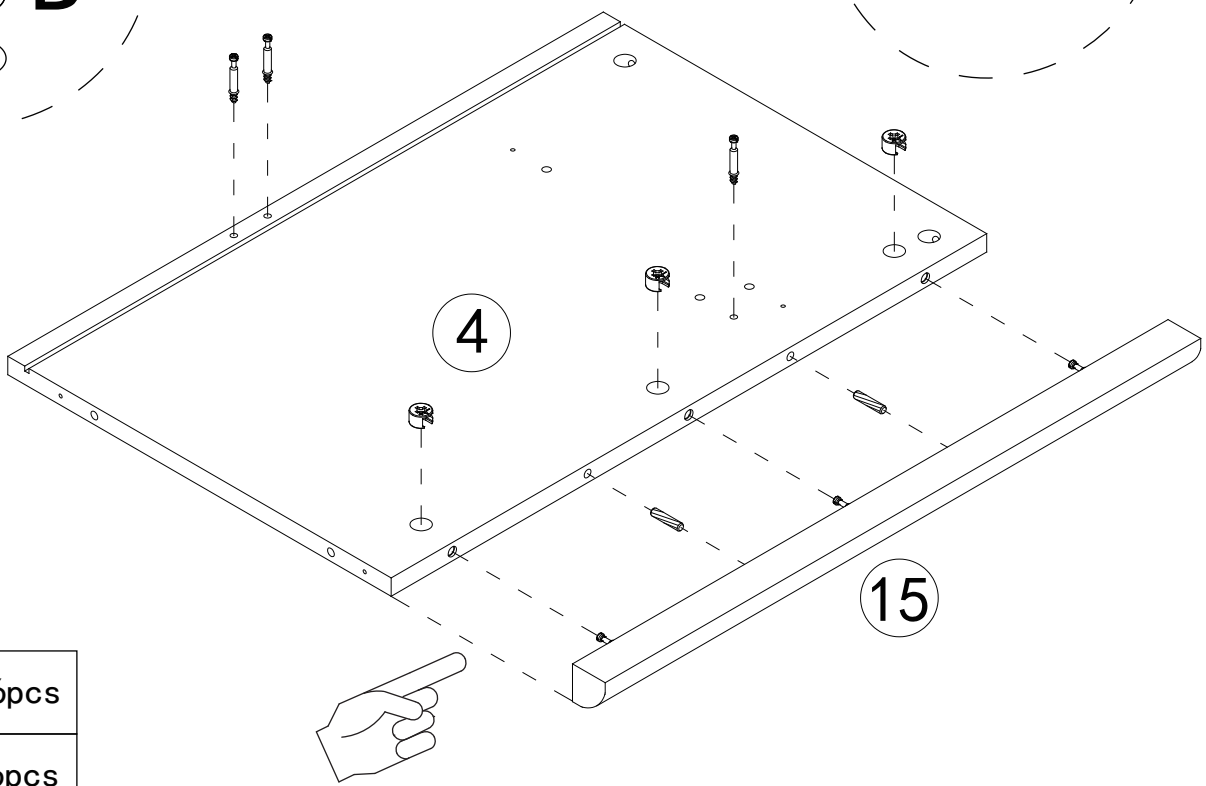



A		6pcs
B		6pcs
C		4pcs


3


Note that the foramen magnum is backward.
Take care to distinguish between C and N.

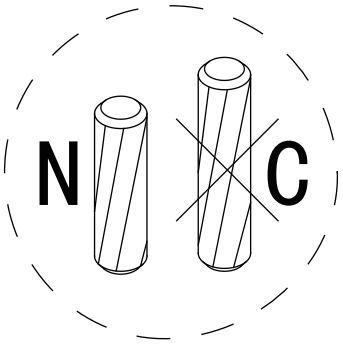


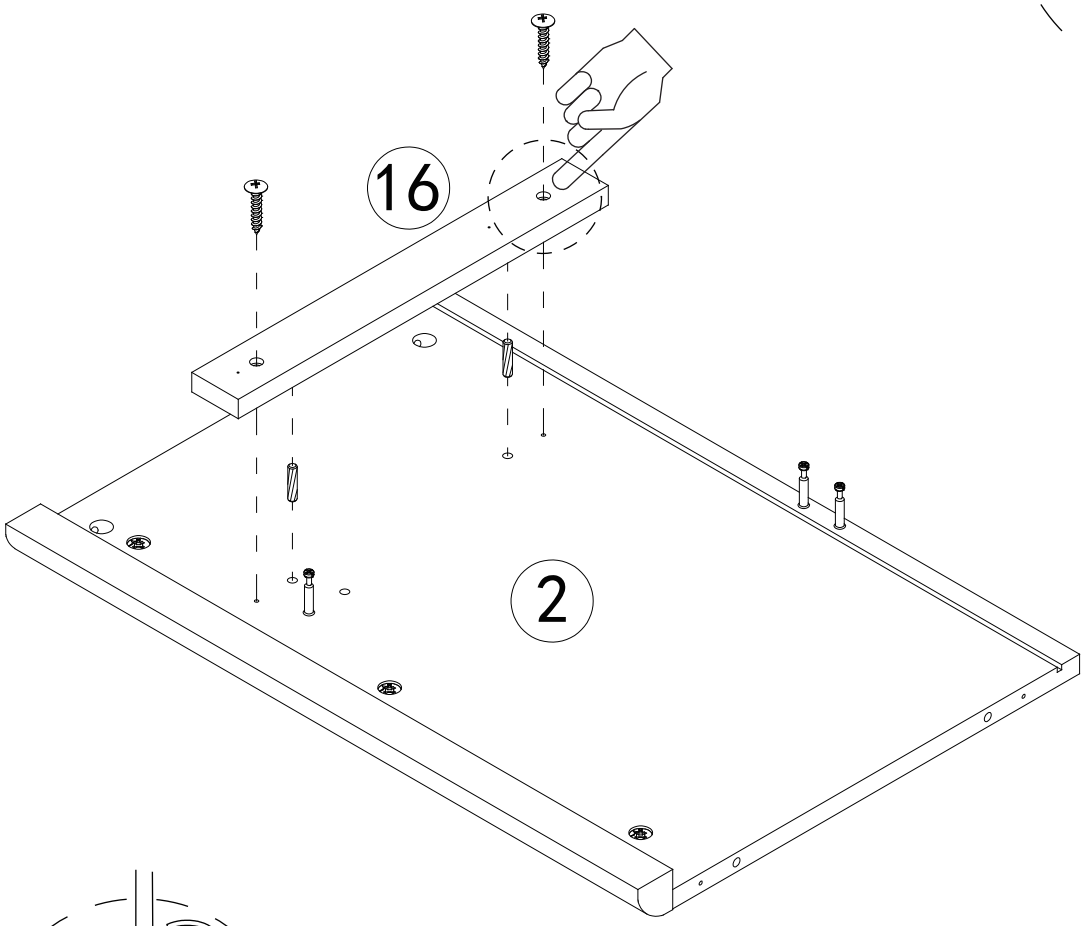

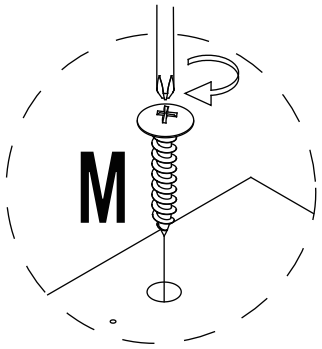

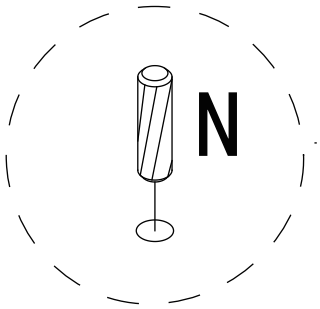


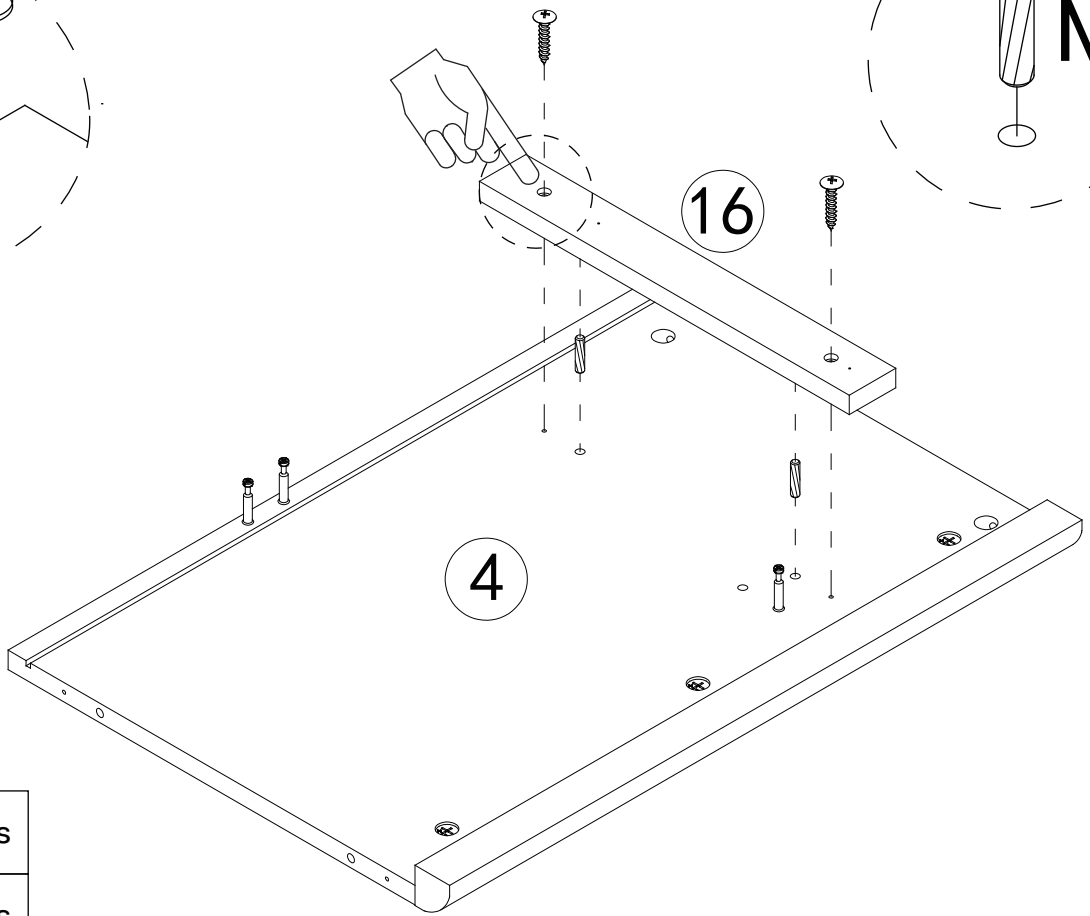

M		4pcs
N		4pcs


4

Pay attention to the hole position.

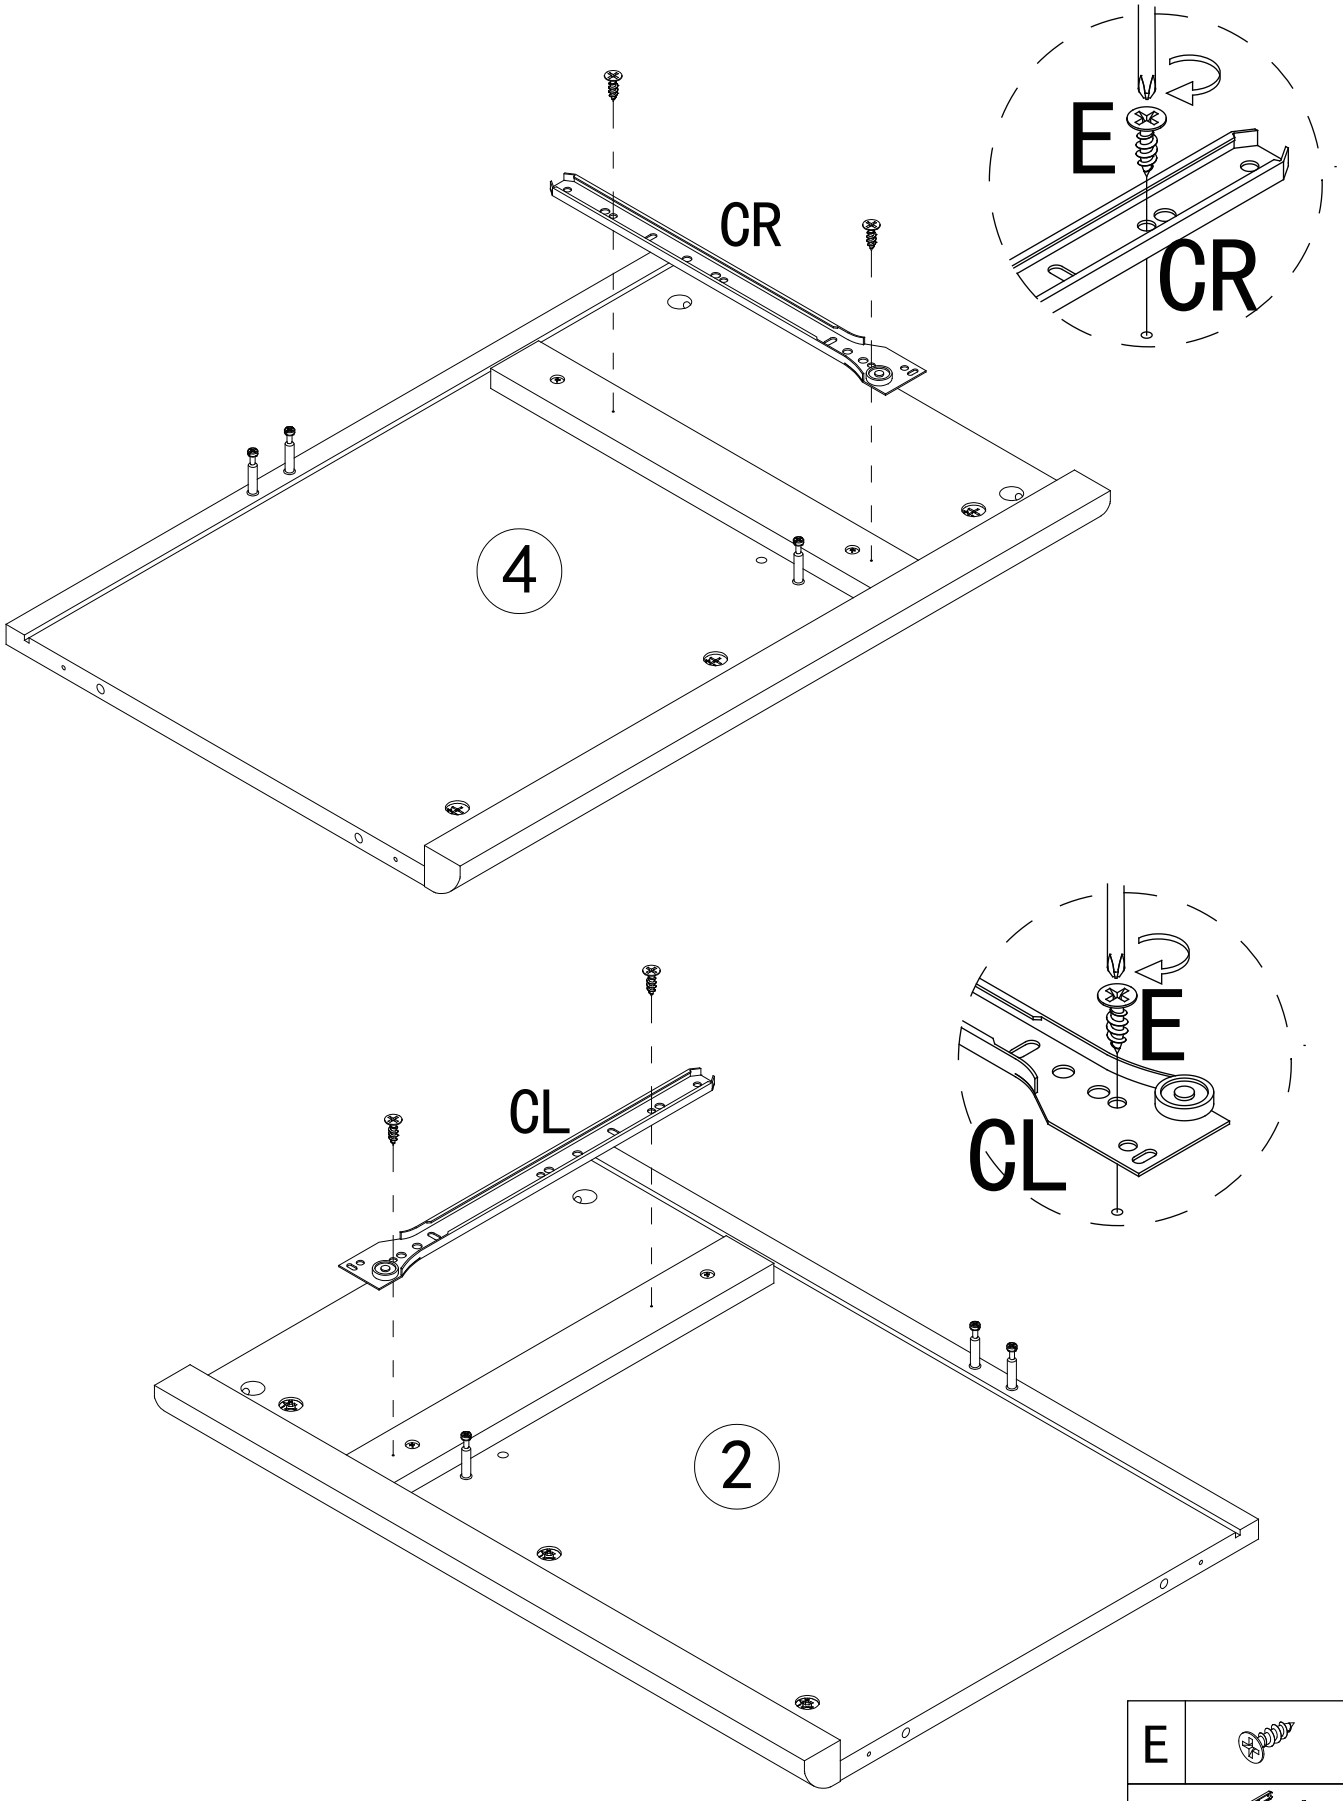


E		4pcs
CL CR		1pc

5

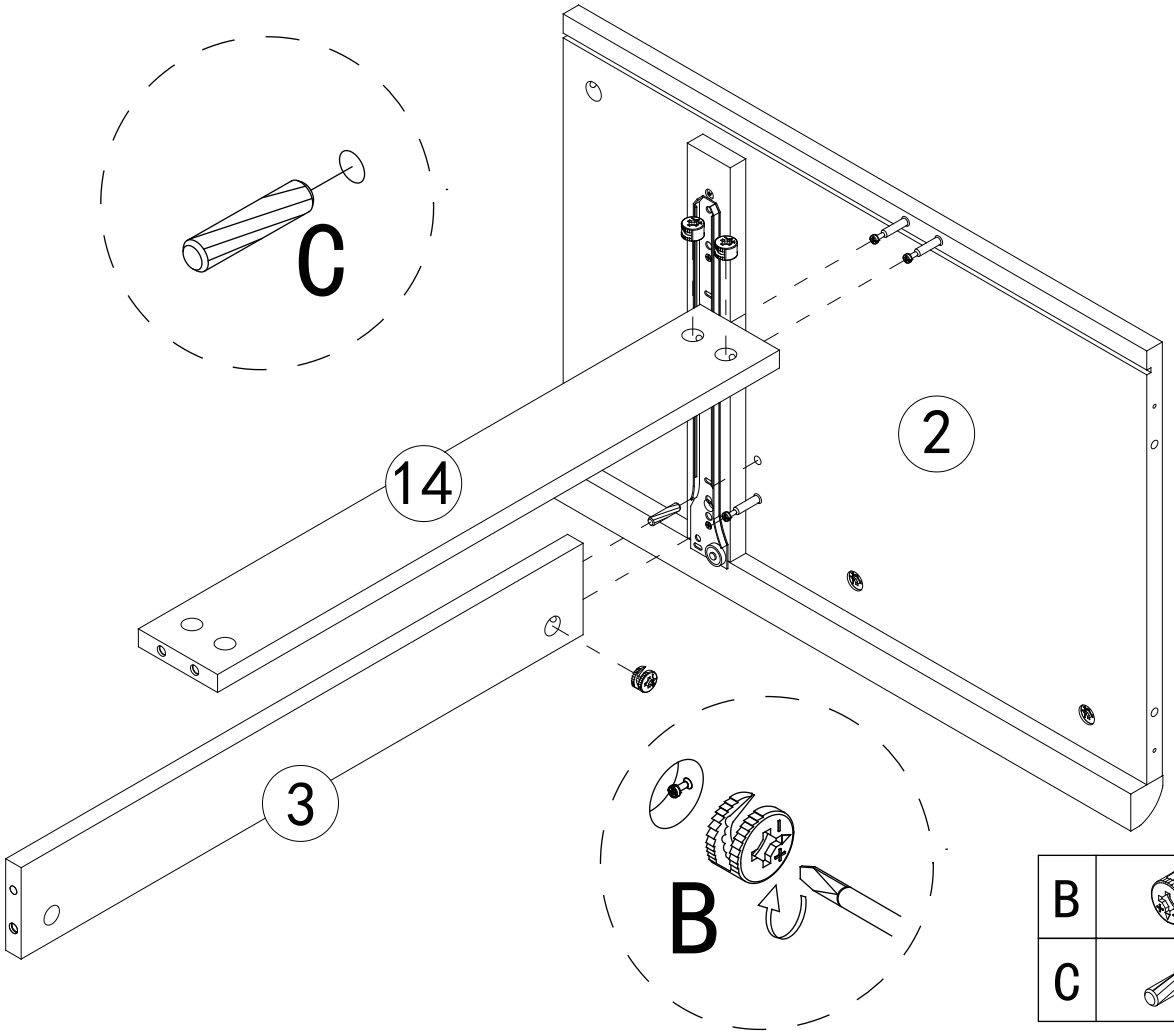

B		3pcs
C		1pc


6

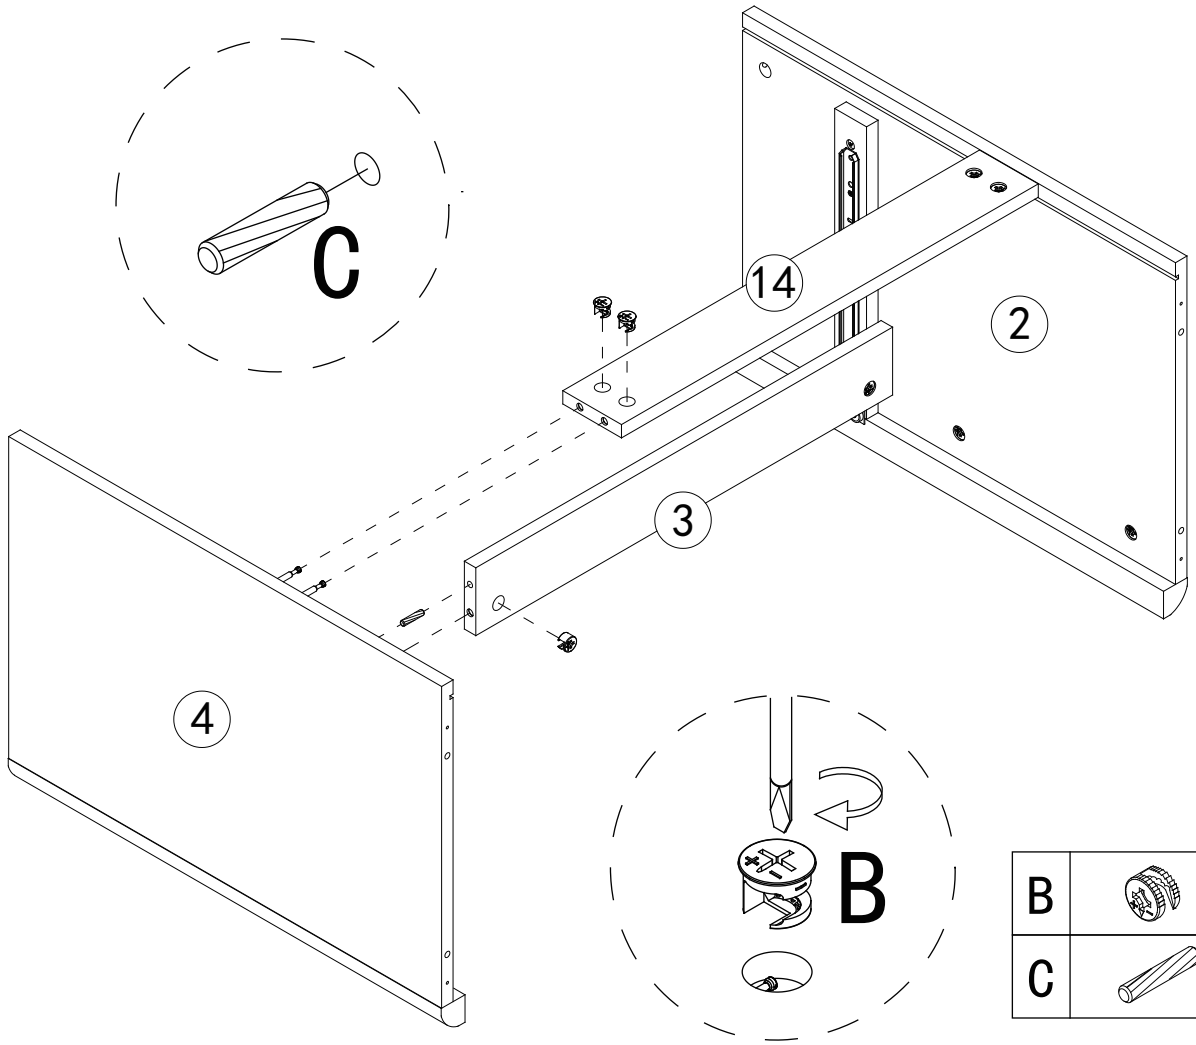


B		3pcs
C		1pc

7


Pay attention to the slot.

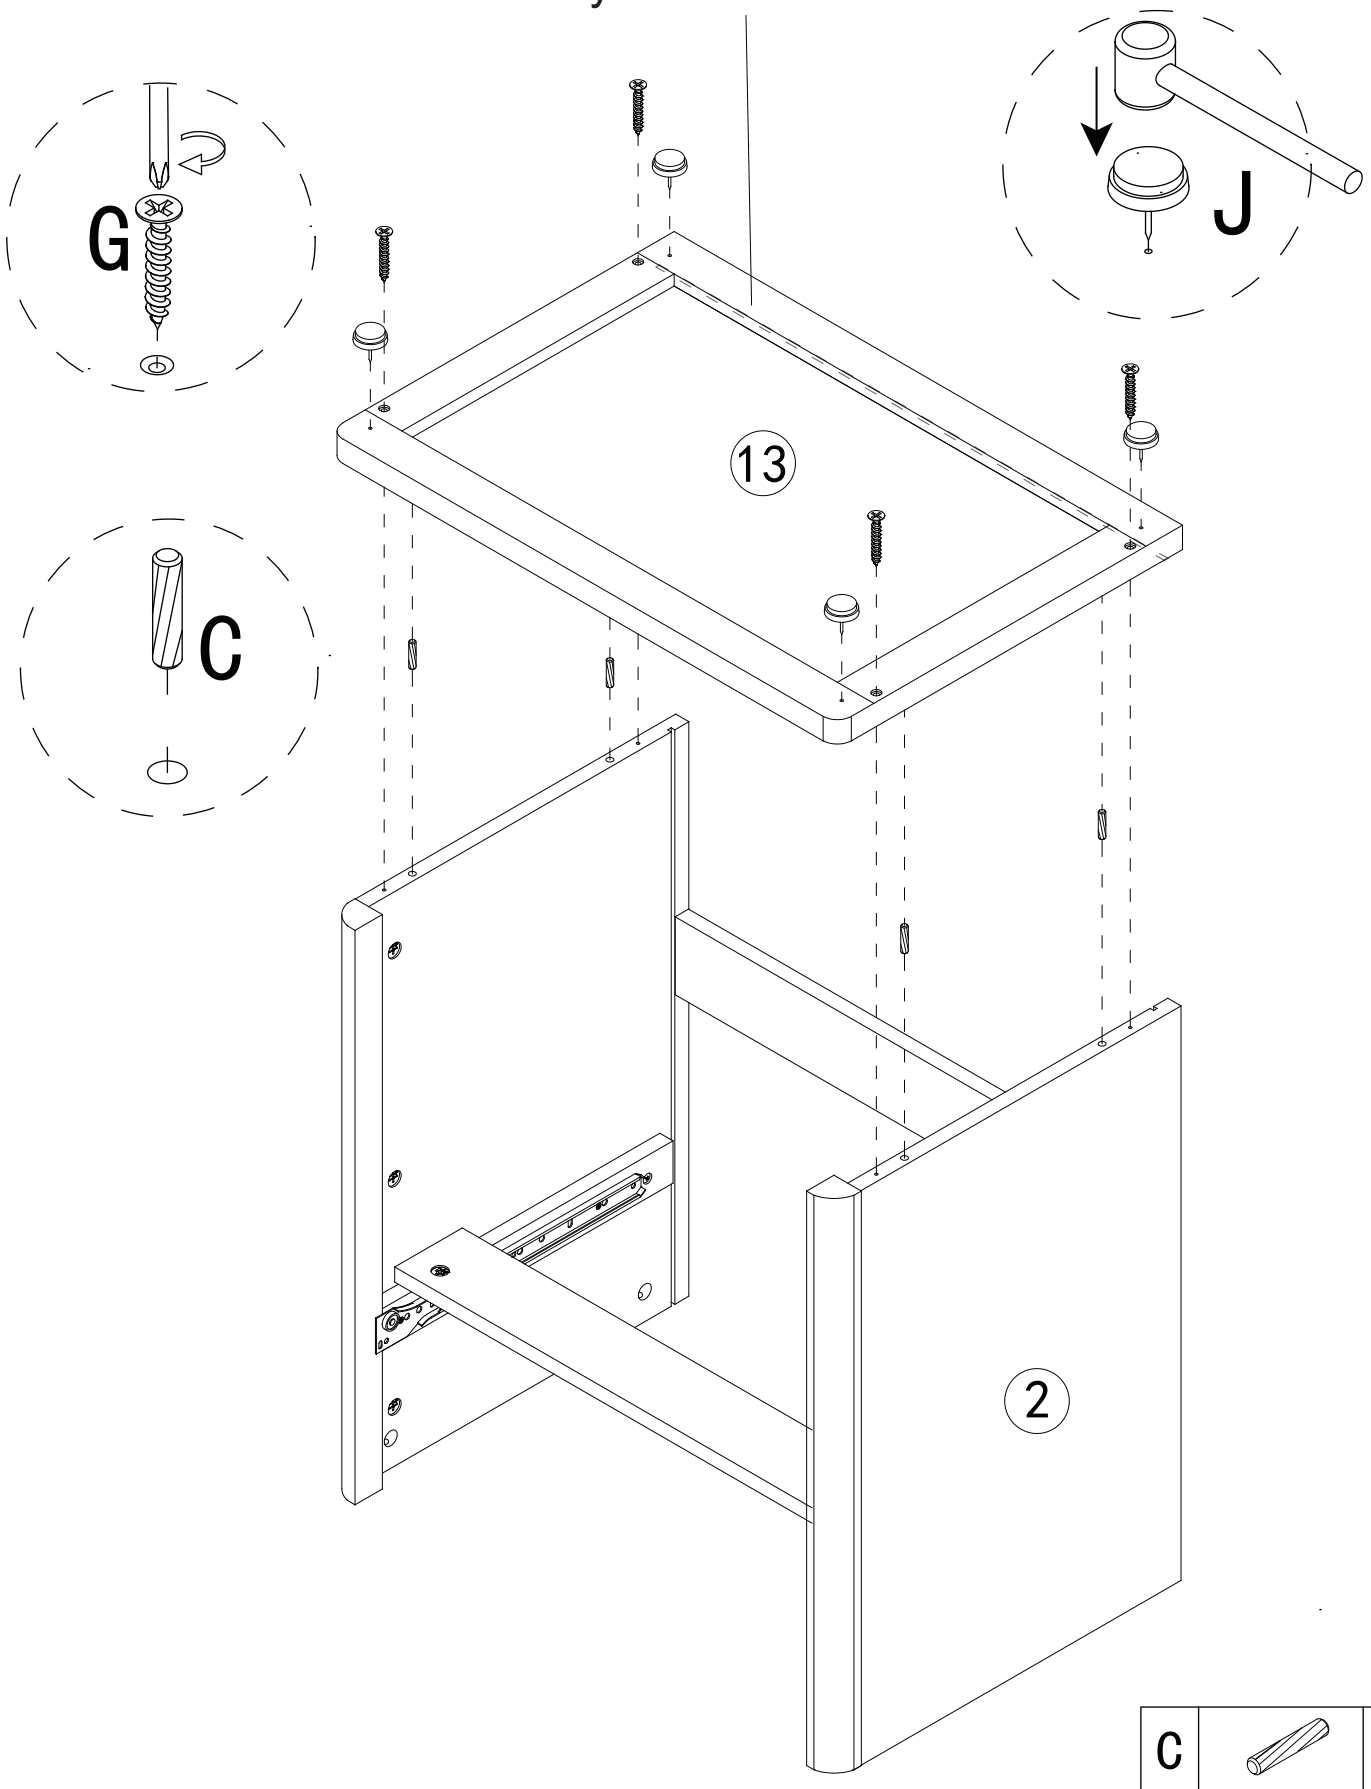


C		4pcs
G		4pcs
J		4pcs


8


The round hole in the back plate is on the right side.

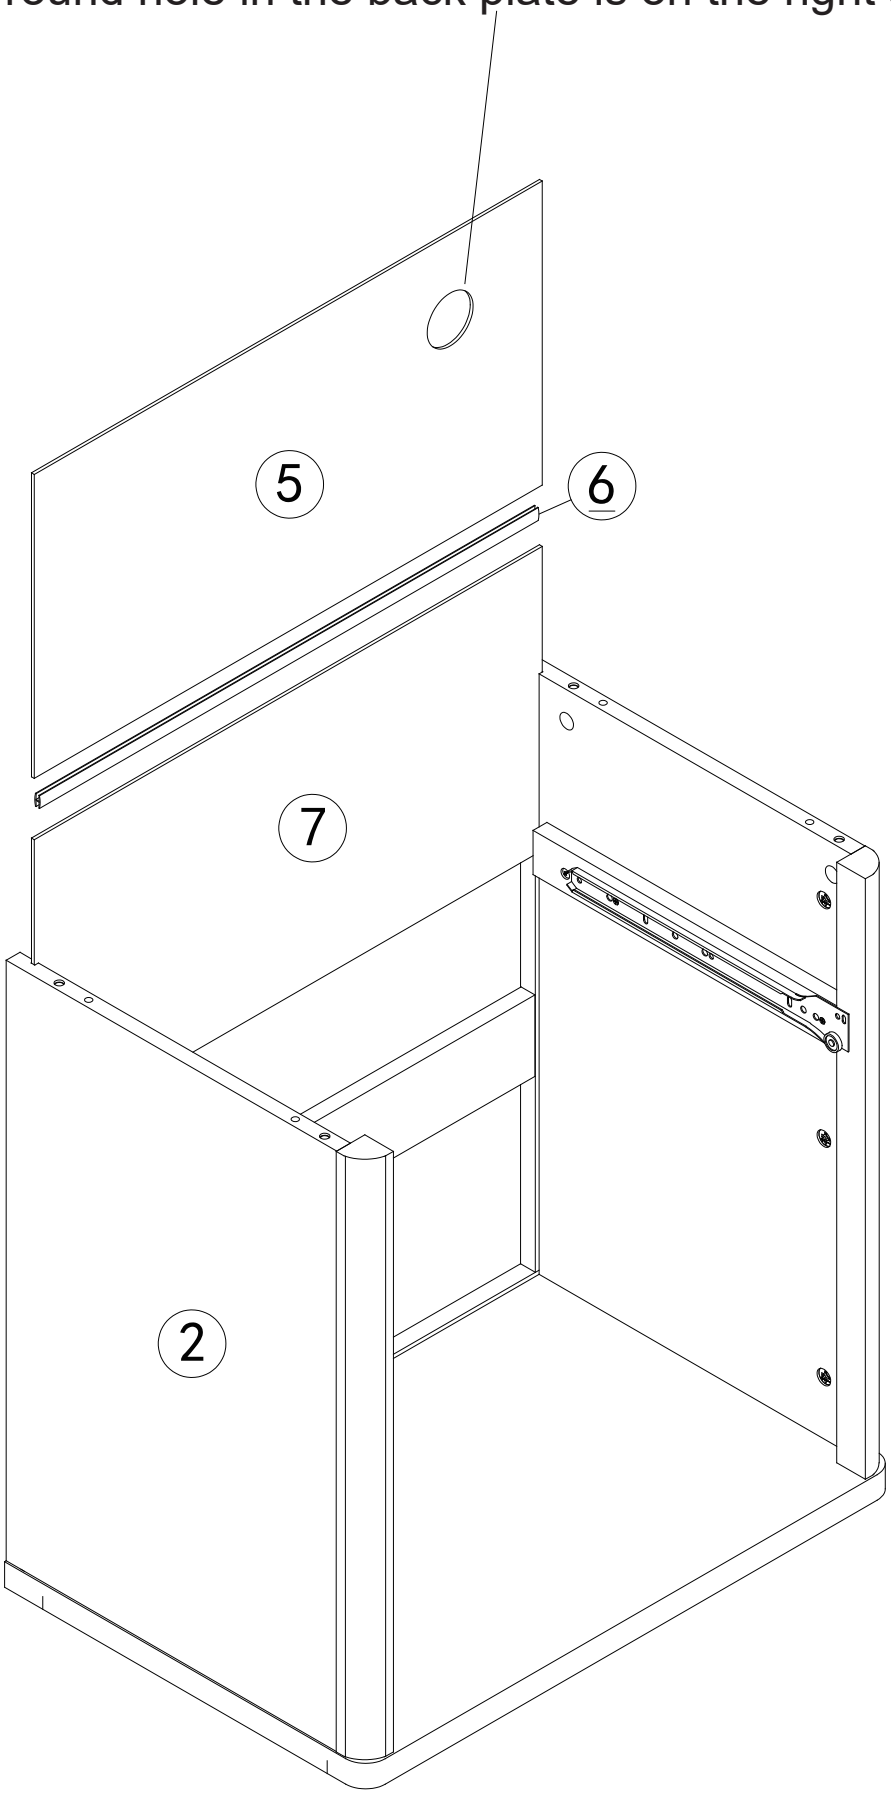

9

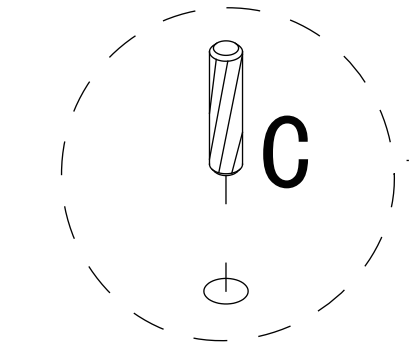

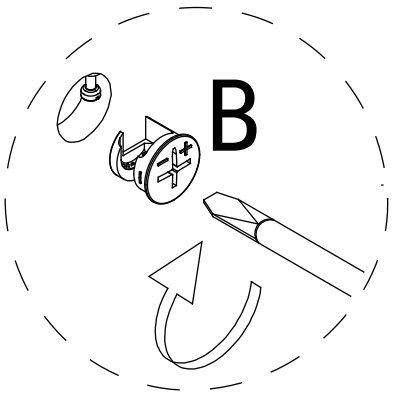


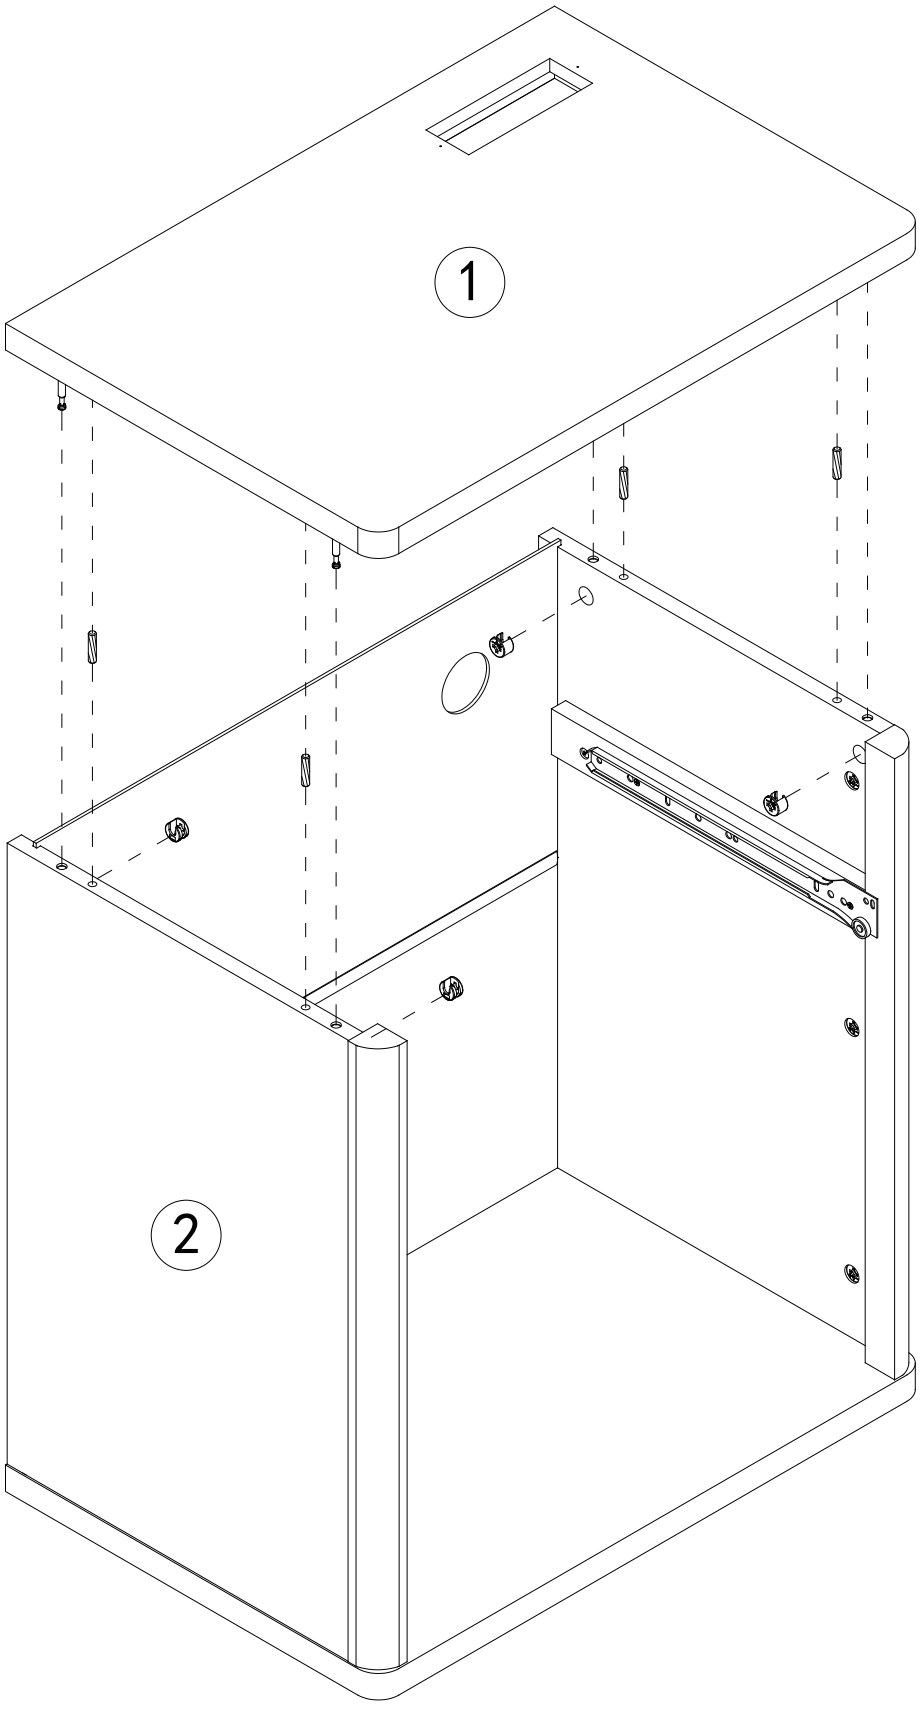


B		4pcs
C		4pcs

10


The side panels are flush with the bottom panel.

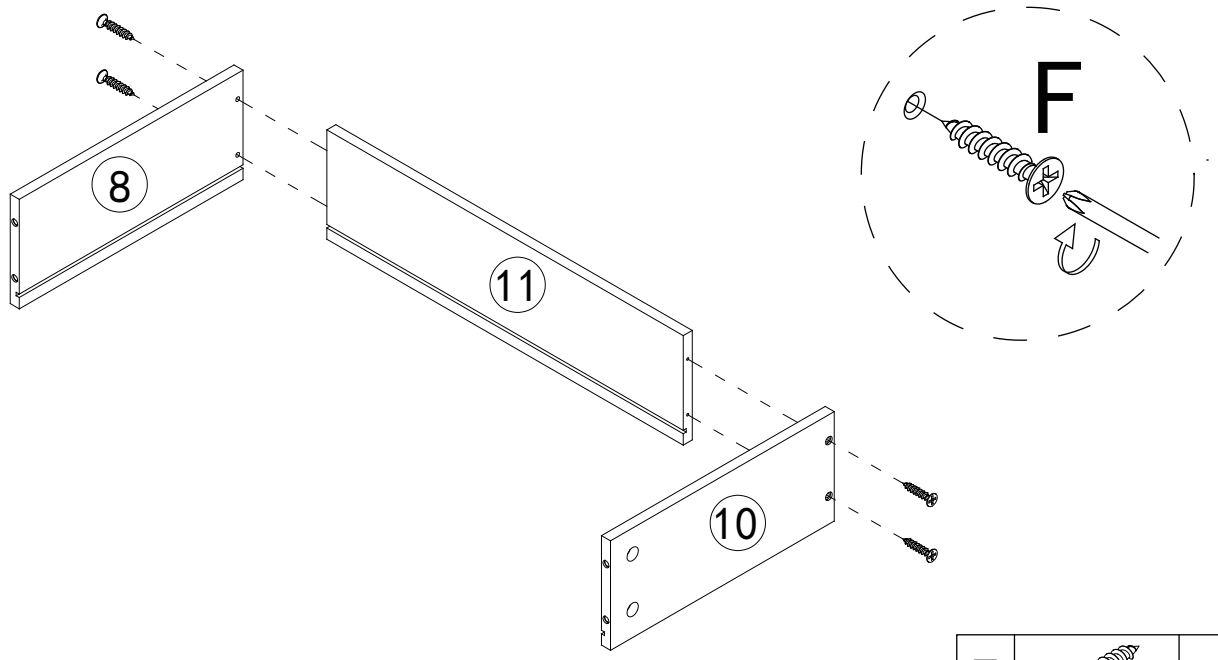


F		4pcs

---

11

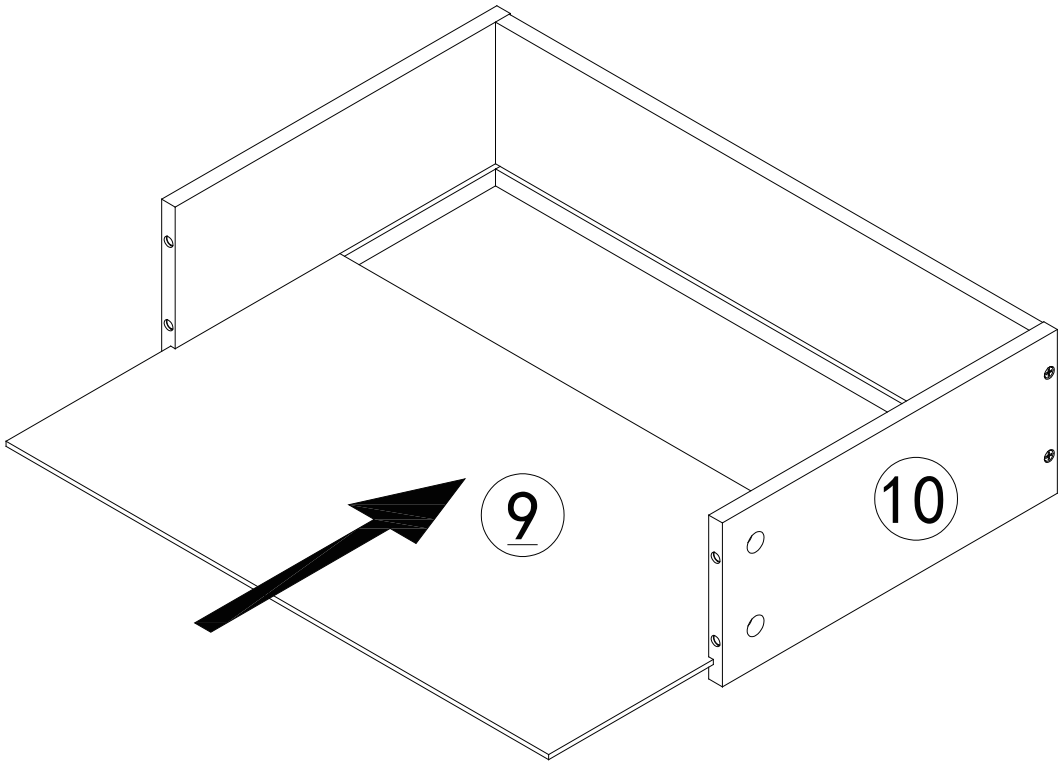


12

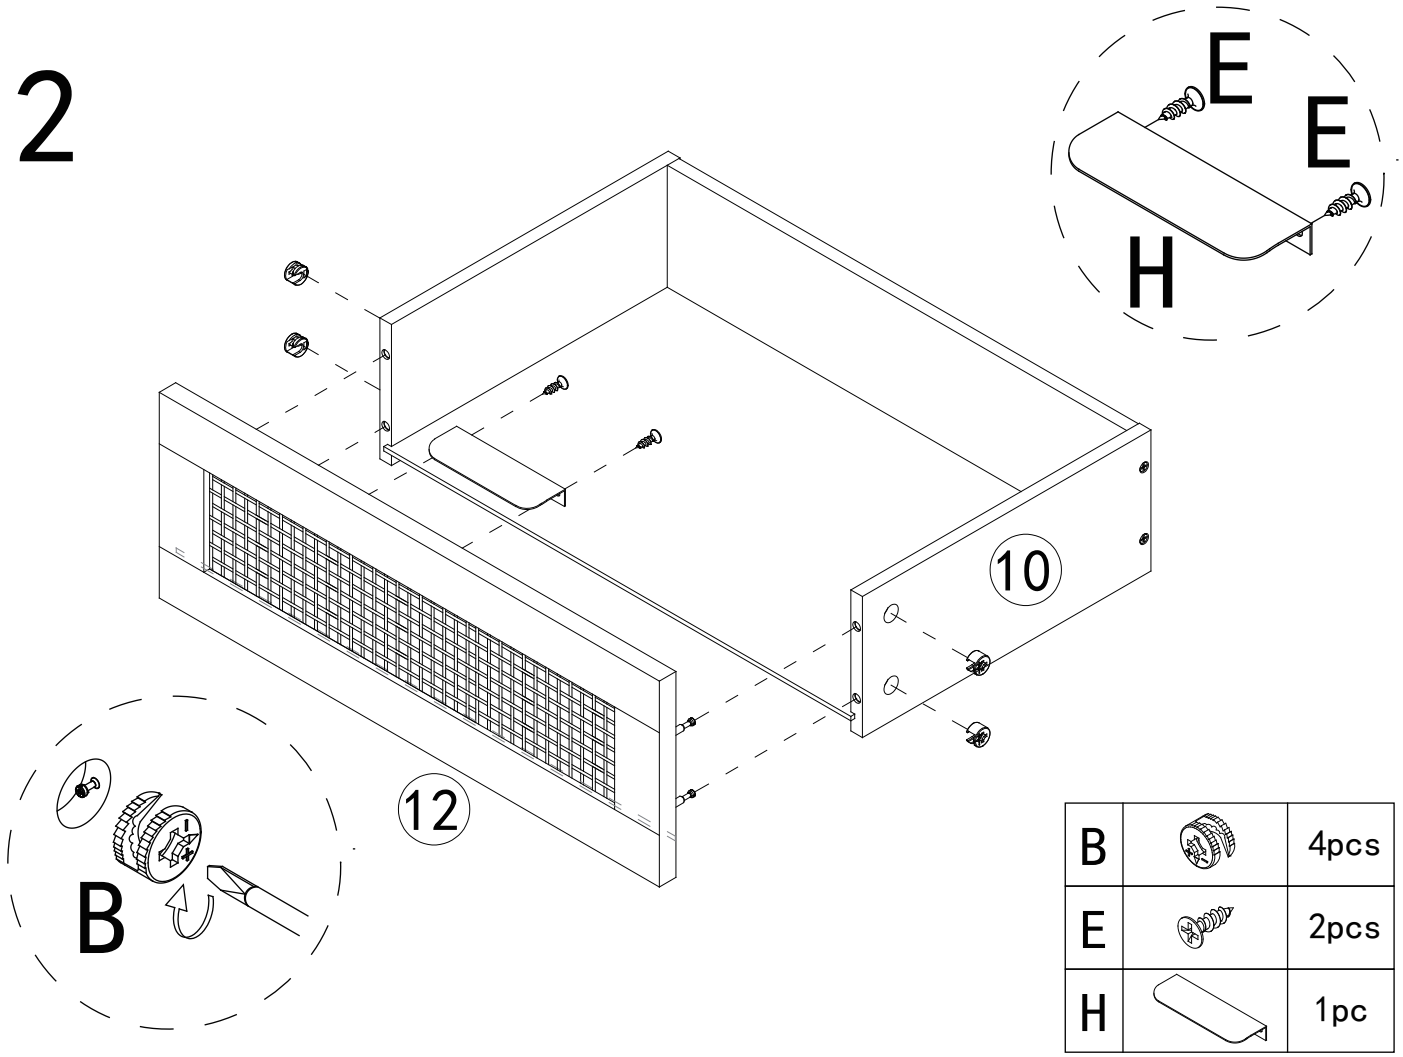


B		4pcs
E		2pcs
H		1pc

13

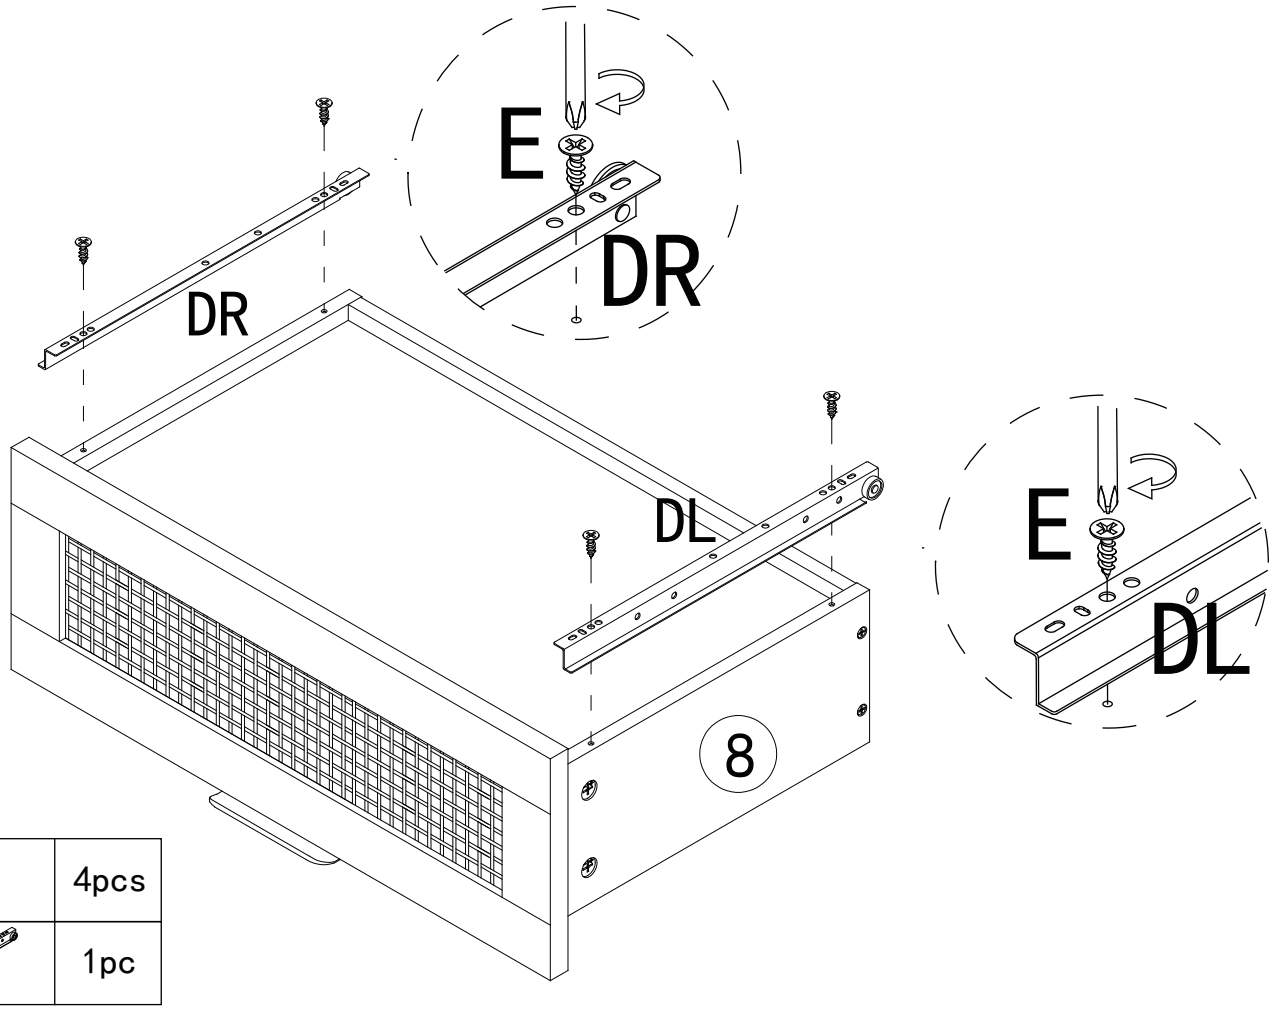

E		4pcs
DR DL		1pc


14

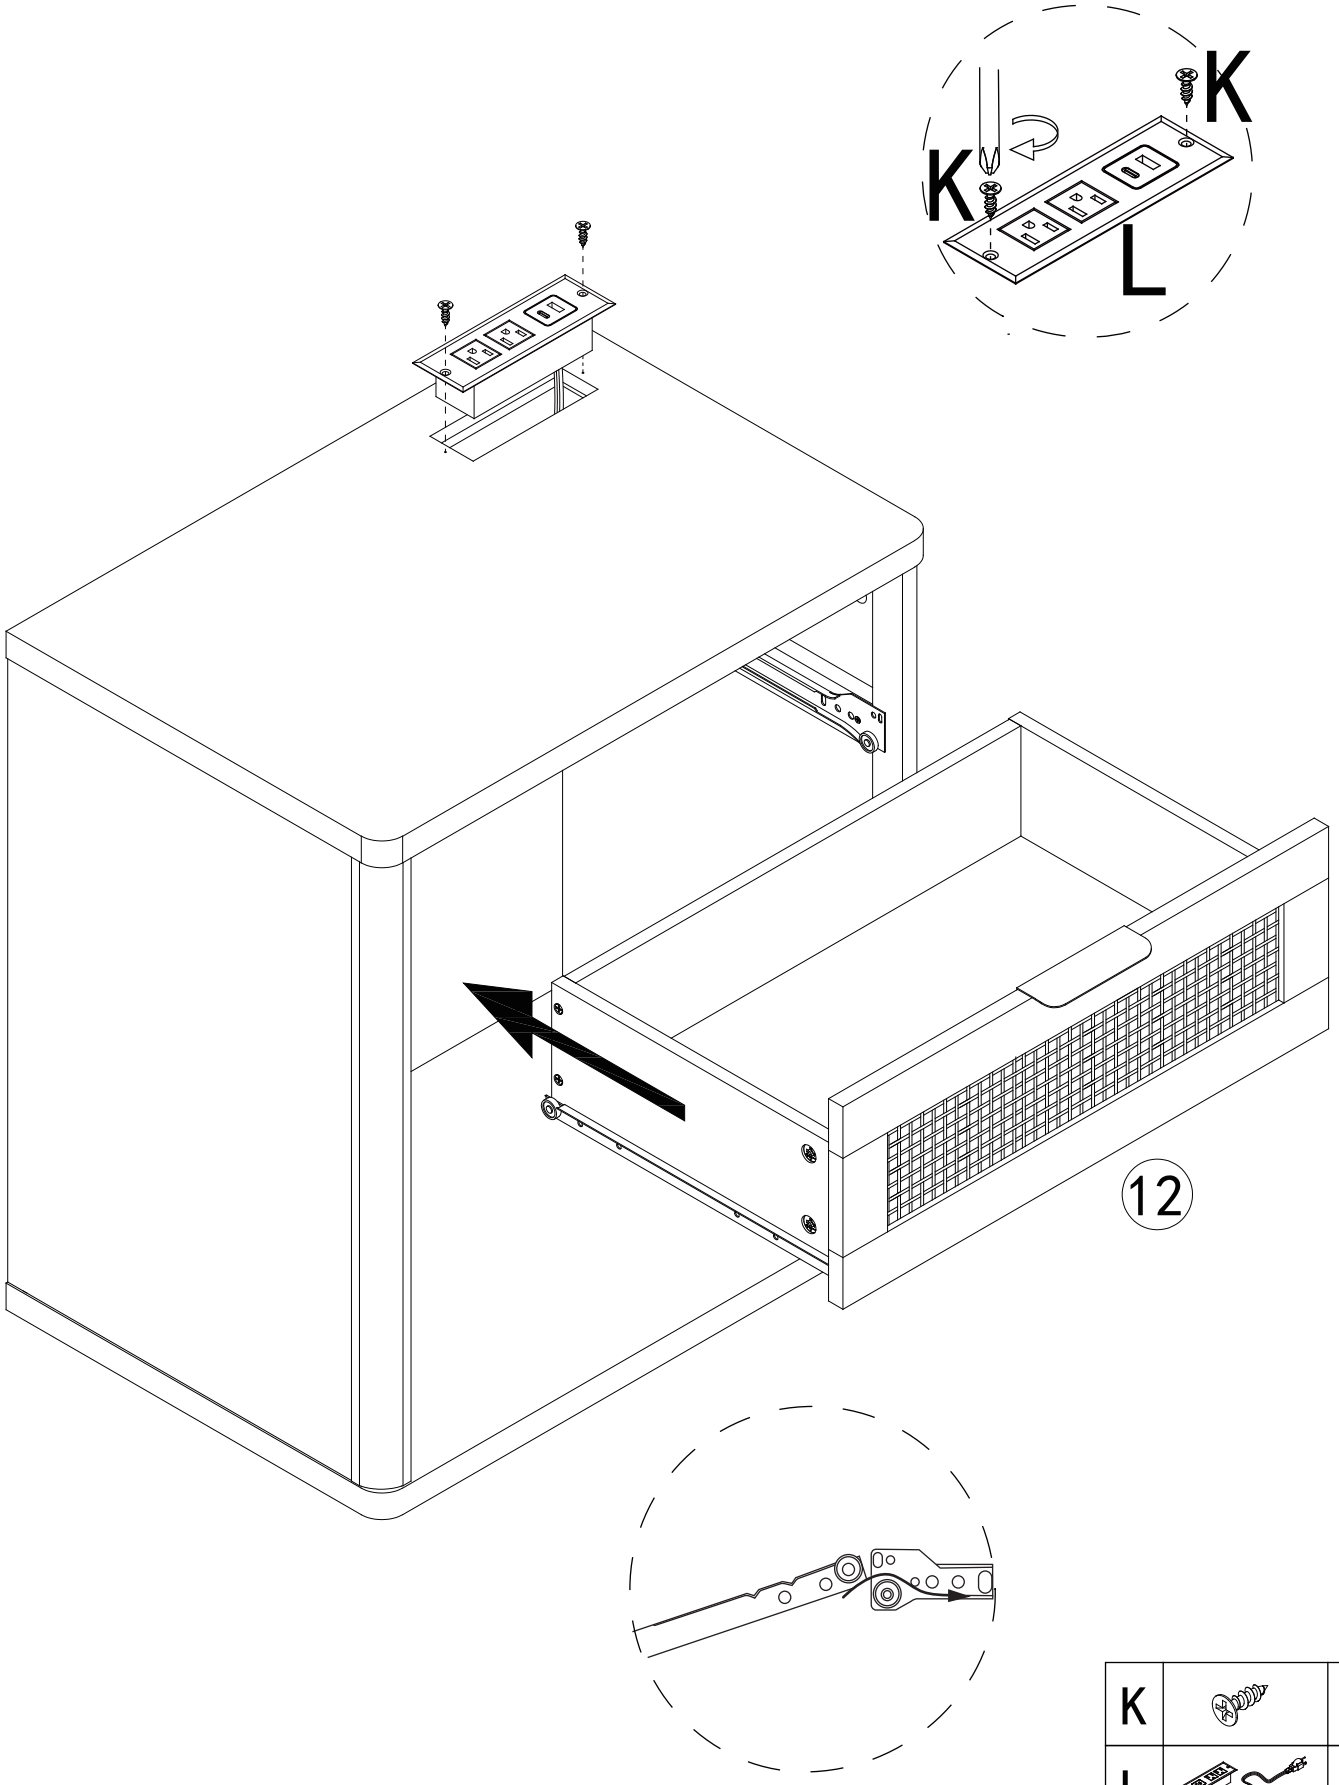

K		2pcs
L		1pc


15


Be sure to install back plate buckle to prevent the cabinet from shaking.

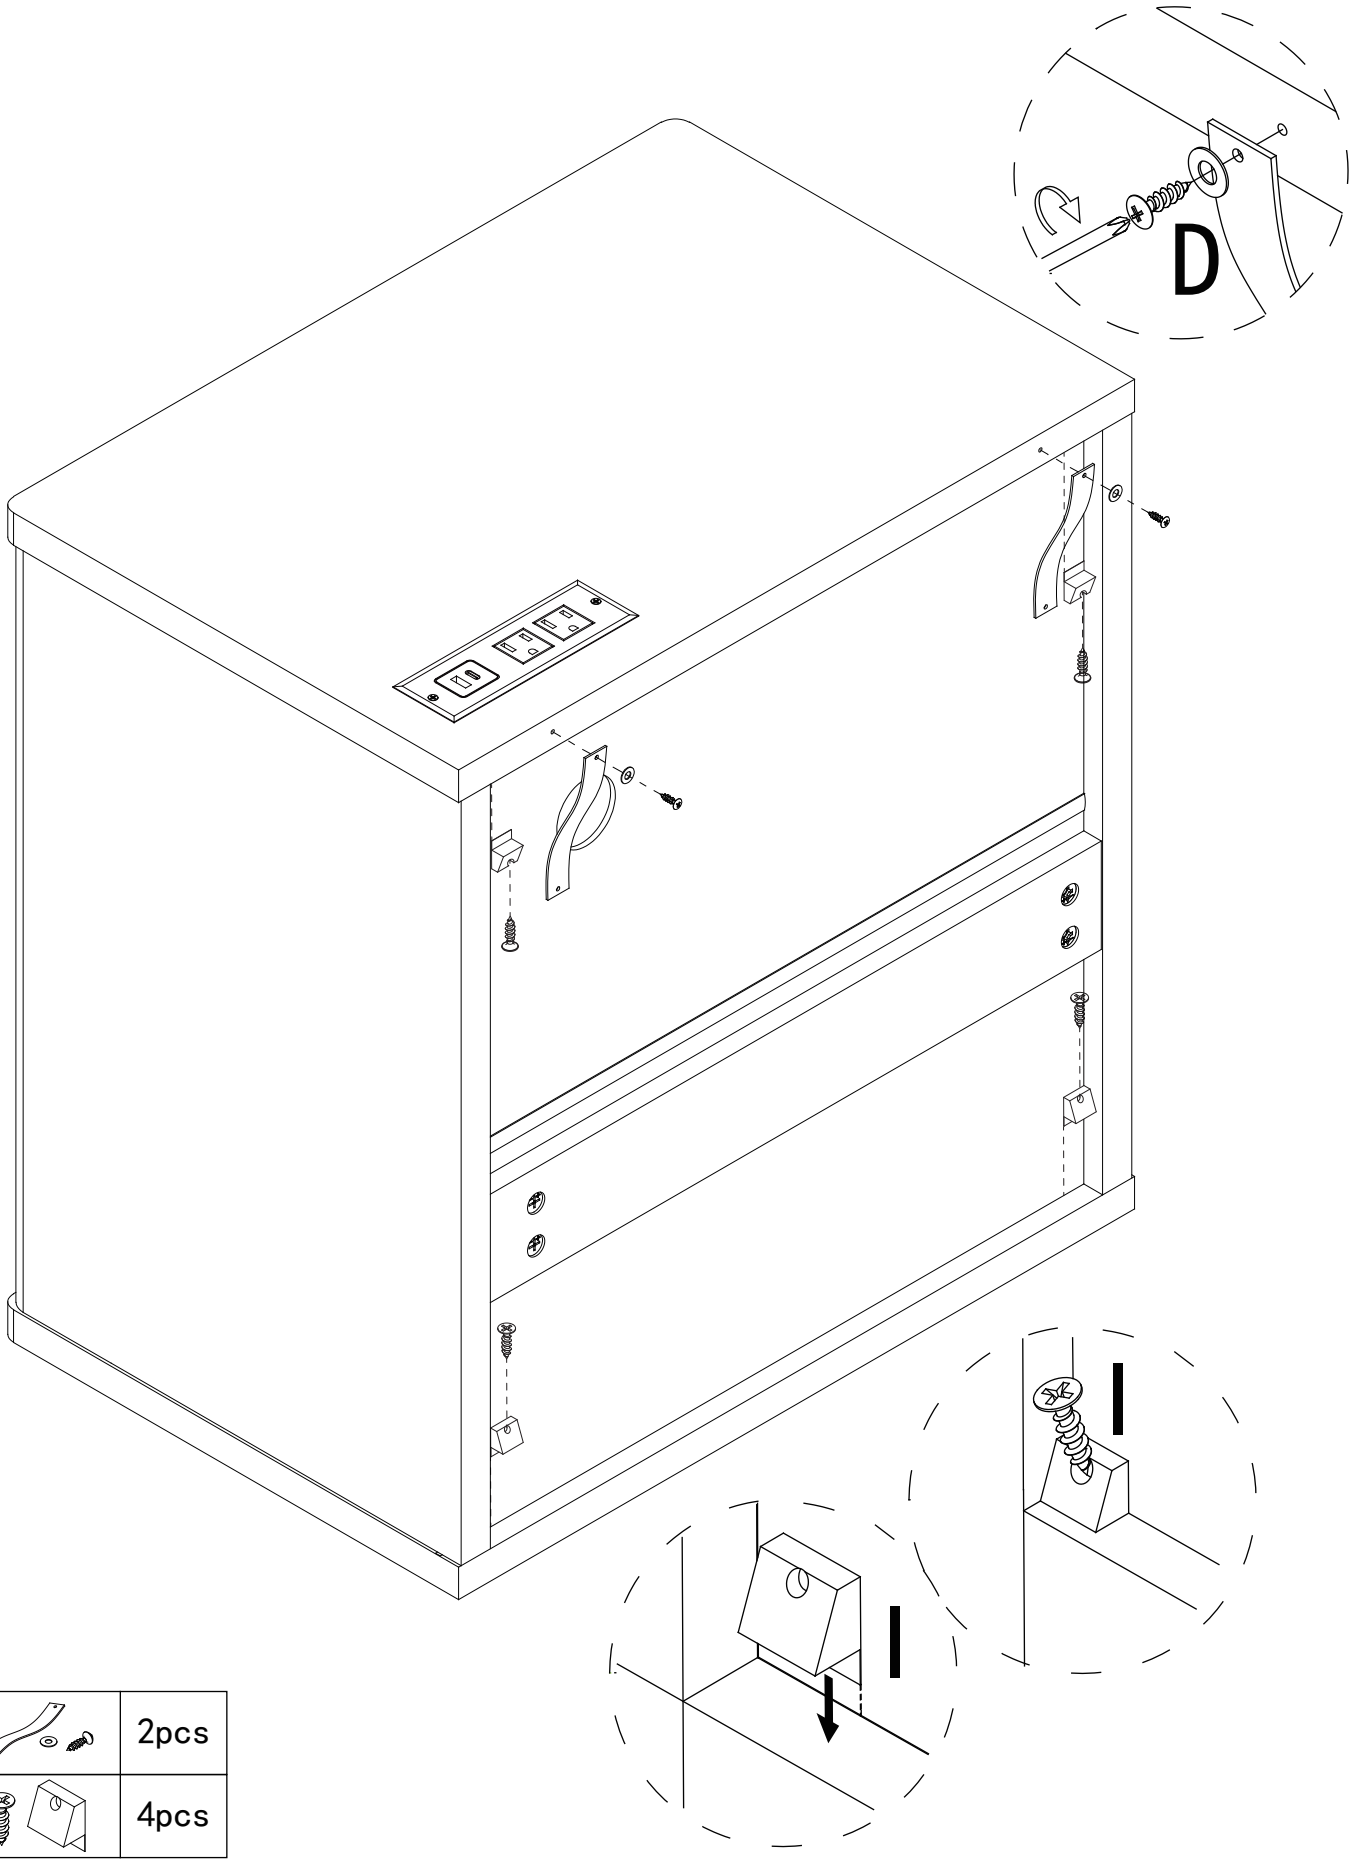



D		2pcs
I		4pcs

16

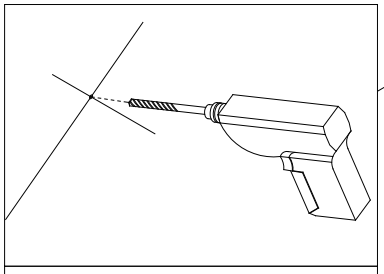

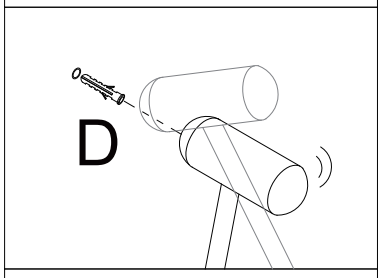

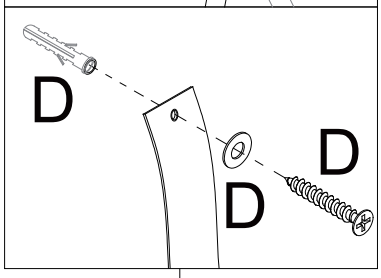

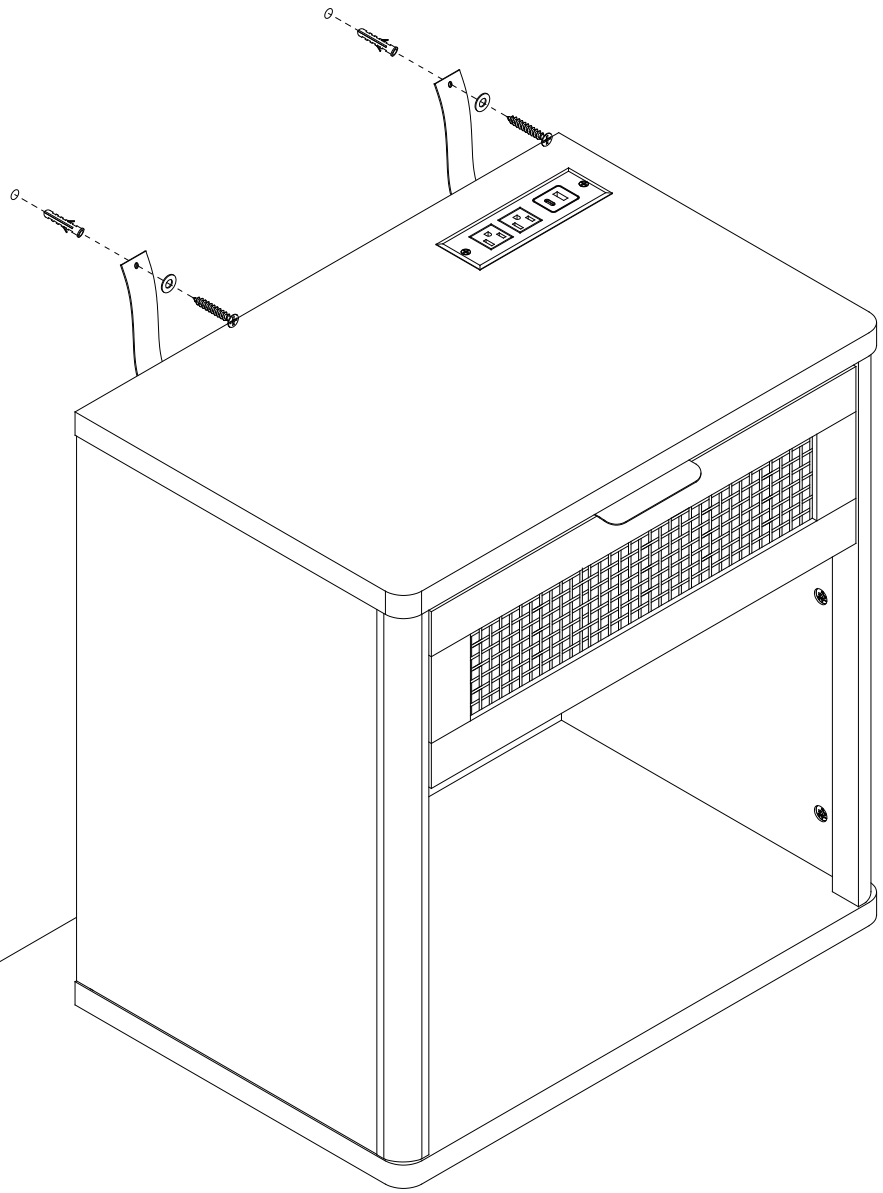

Note: When moving the cabinet, please lift it vertically off the ground. Dragging may cause loose connectors, affecting stability and service life.

D		2pcs