

EASY TO INSTALL



1. Take out the biggest part of the 3-pieces cover and cover it on the top of the recliner first.




2. Turn on the recliner and stretch the fabric to the footrest of recliner.




3. Tuck the excess fabric into the gap of the recliner chair.



4. Find the right arm cover with the 'RIGHT ARM' Label, put it to right armrest and fits snugly around the contours of it. Of course, there is a 'LEFT ARM' label on the left cover, same installation as right one.

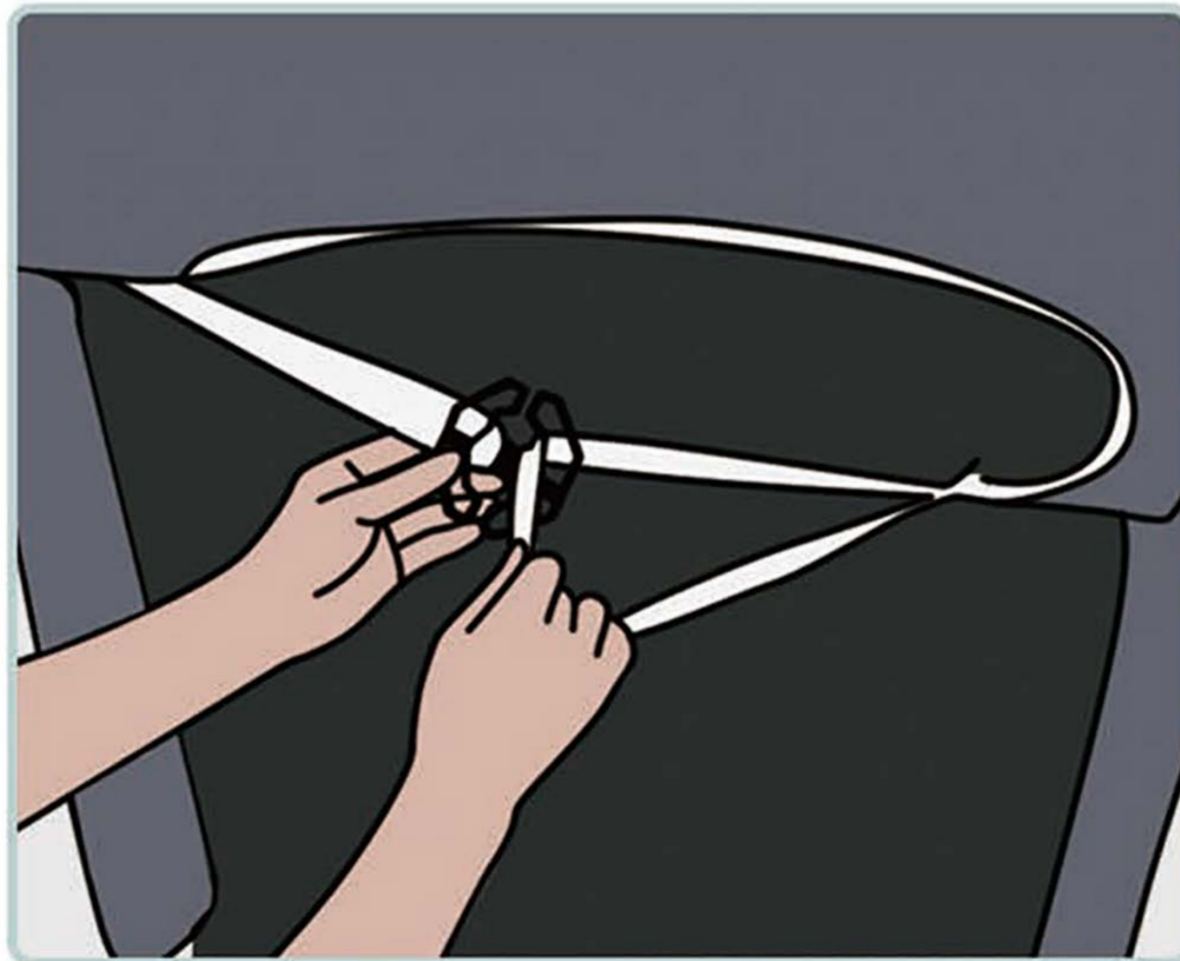

5. Find the elastic straps at the bottom of the recliner cover and connect the 2 straps with a black fixing buckle.

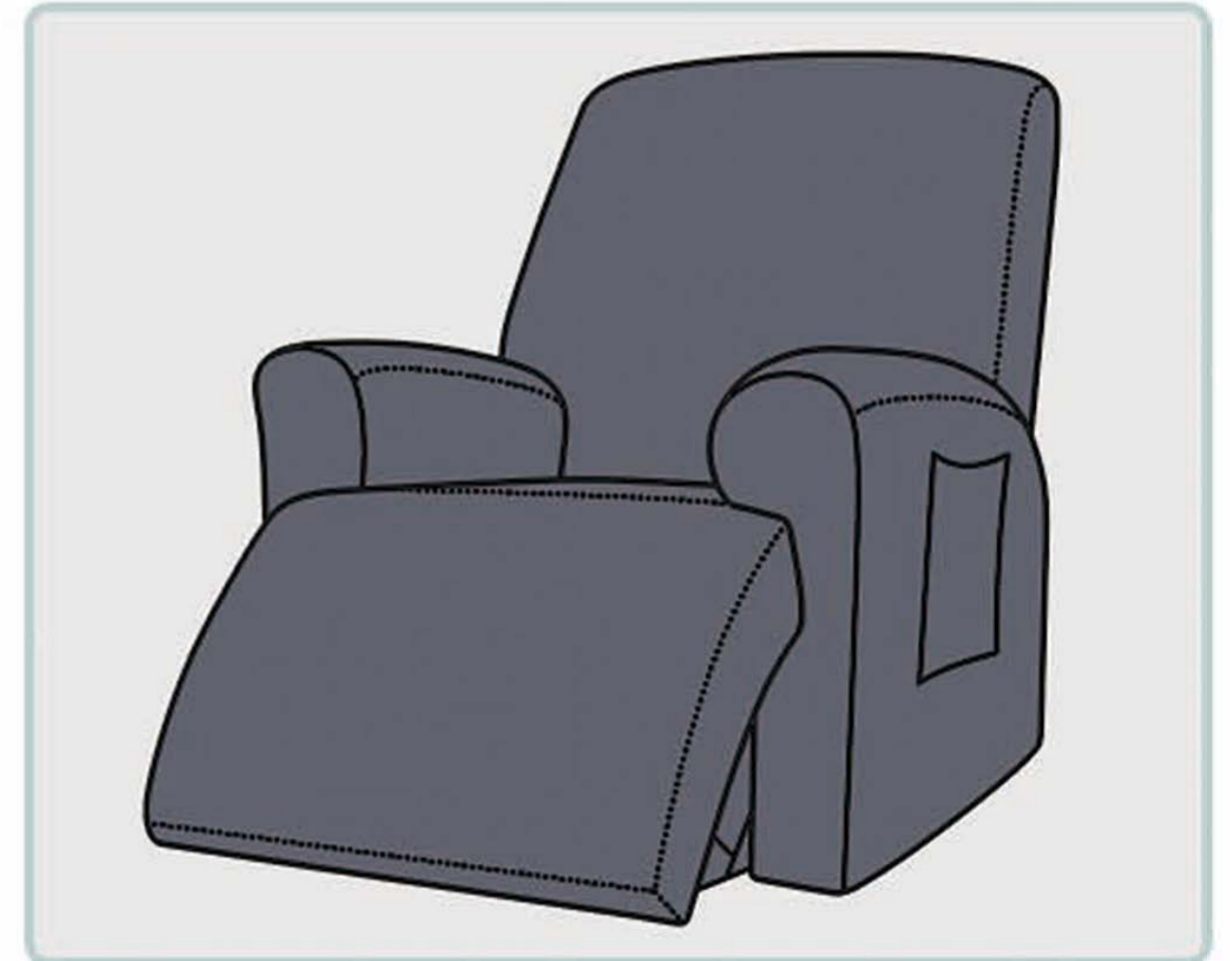

6. Consistently provide the best service, if you need the installation video, please feel free to contact with us at any time.

USPC