










ASSEMBLY INSTRUCTION


No	Hardware	Fig	Q.ty
①	Bolt M6x80 mm		4
②	Bolt M6 x 55 mm		8
③	Bolt M6 x 50mm		9
④	Screw M6 x 50mm		12
⑤	Nut M6 x 18mm		8
⑥	Horizontal nut		4
⑦	Allen Key		2




Ⓒx 2 Seat Base

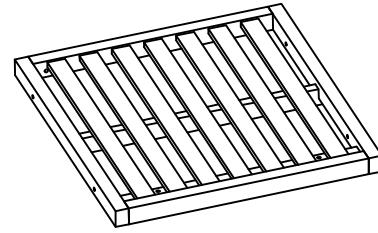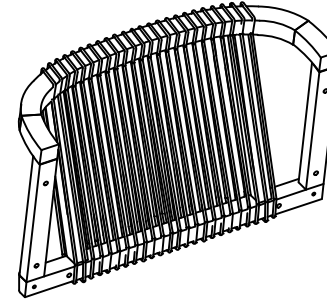


Ⓓx 2 Backrest

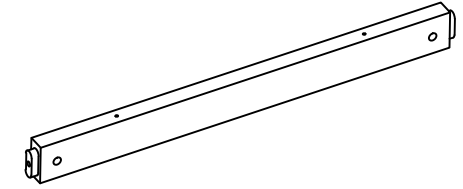


Ⓔx 2 Support Pole

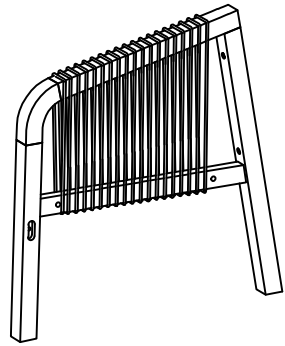


Ⓐx 2 Armrest

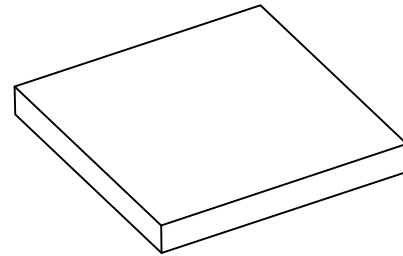


Ⓕx 2 Seat Cushion

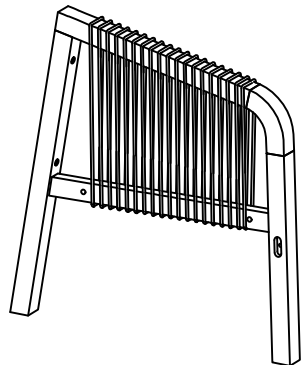

Ⓑx 2 Armrest


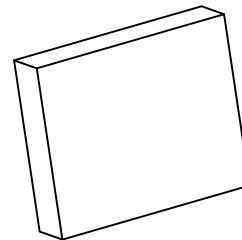


Ⓖx 2 Back Cushion

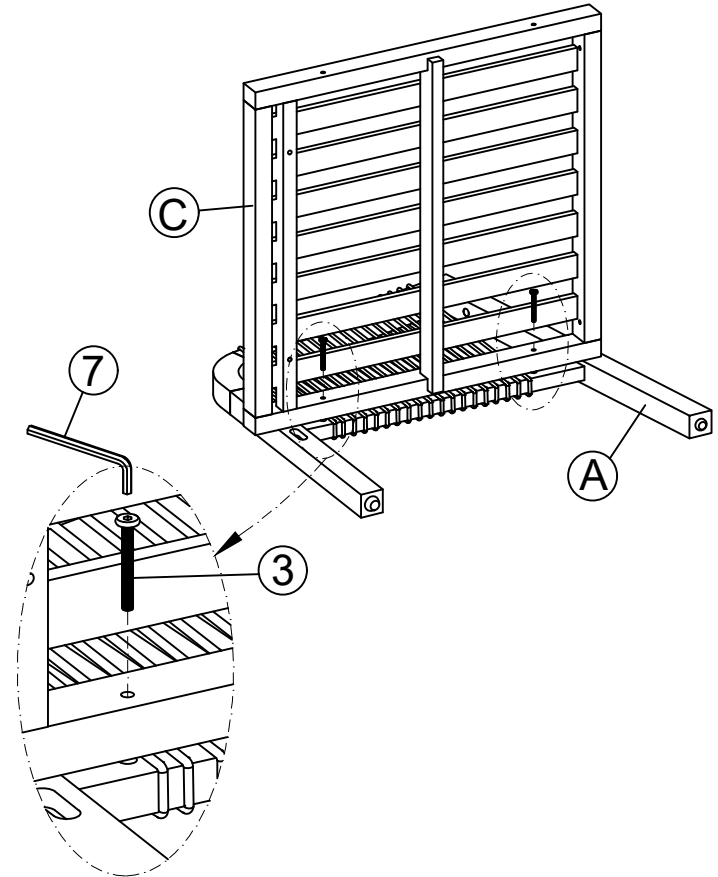


STEP 1

X2




ASSEMBLY INSTRUCTION

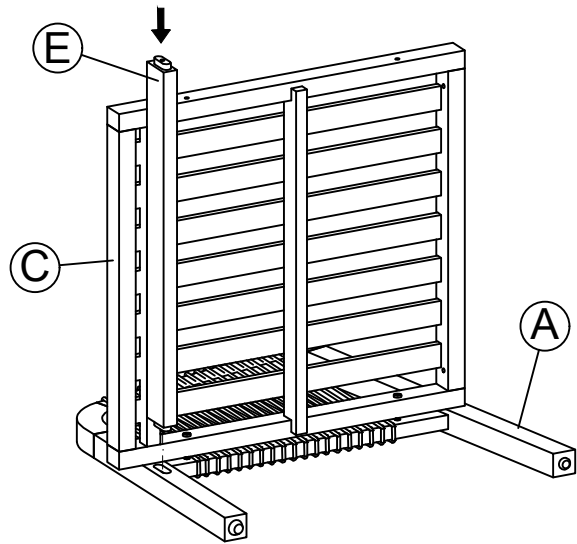


STEP 2

X2

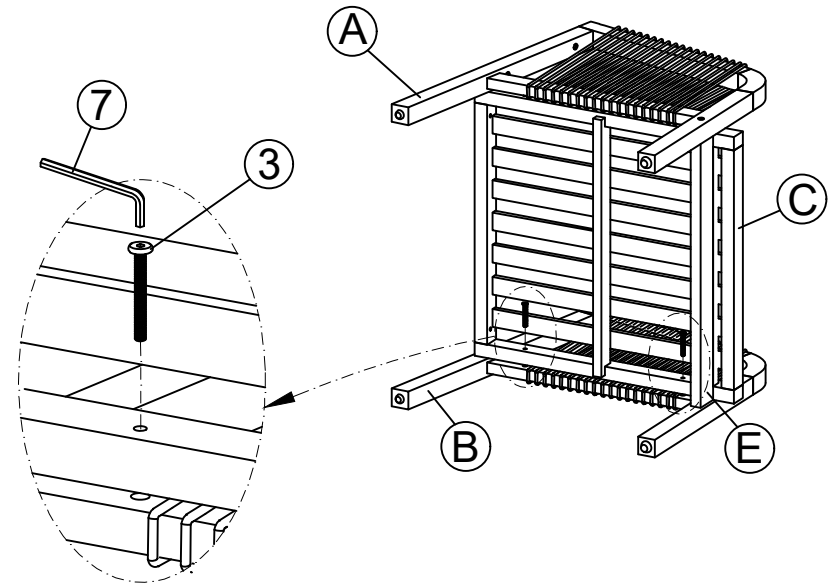


STEP 3

X2

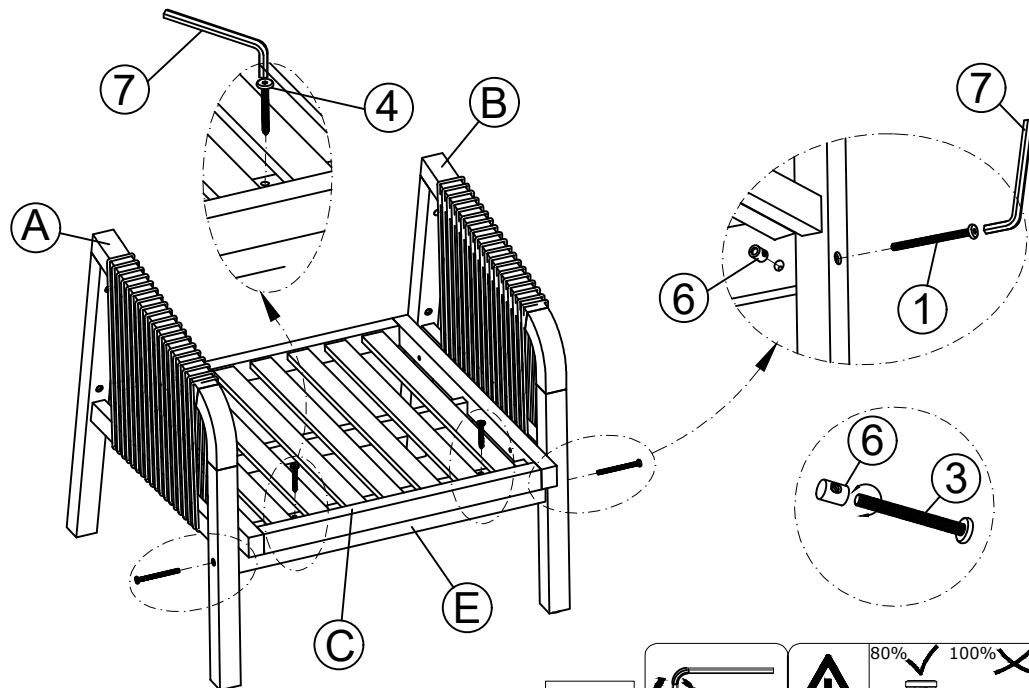

STEP 4

X2

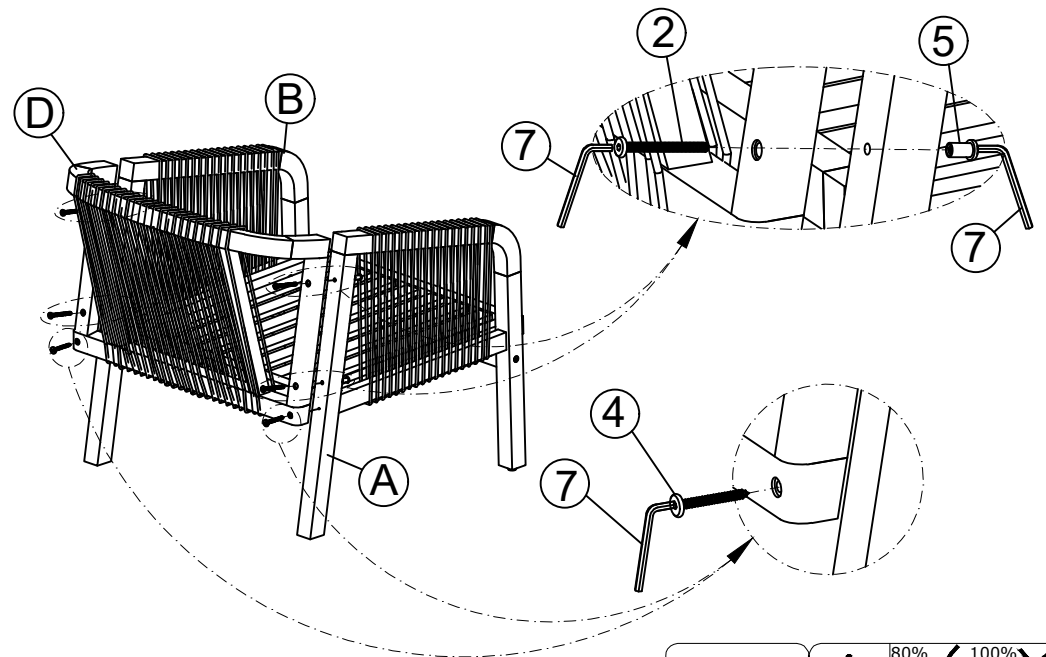


STEP 5

X2




ASSEMBLY INSTRUCTION

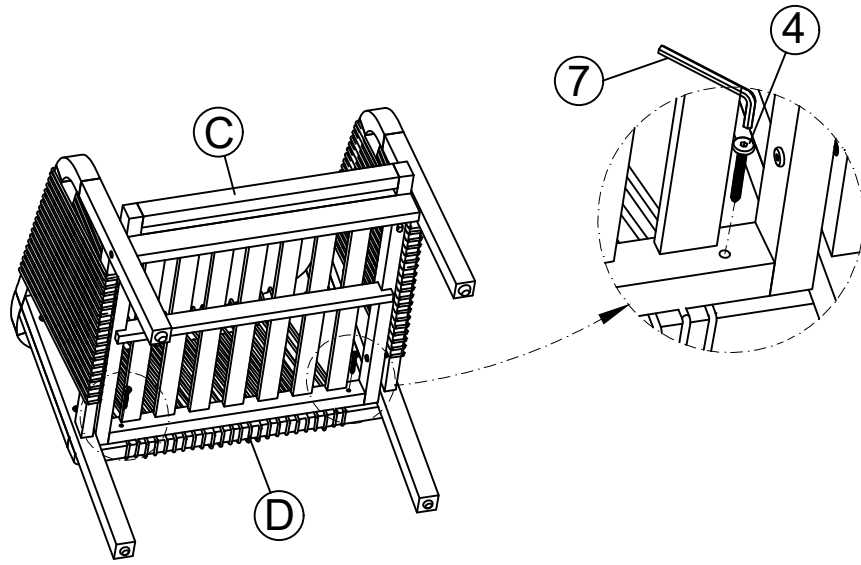


STEP 6

X2

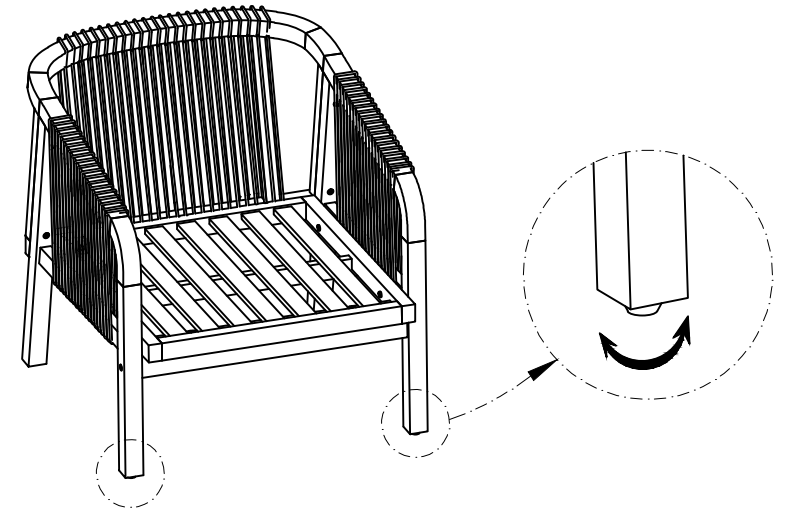


STEP 7

X2

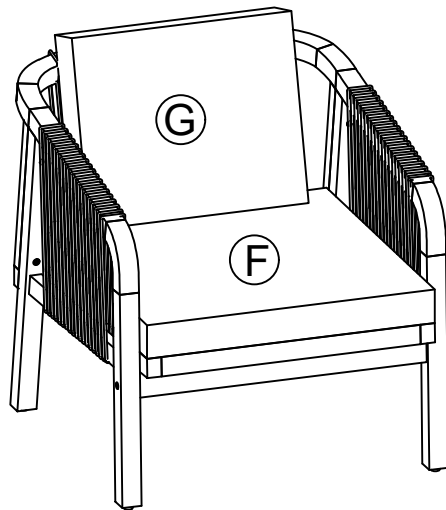

STEP 8

X2

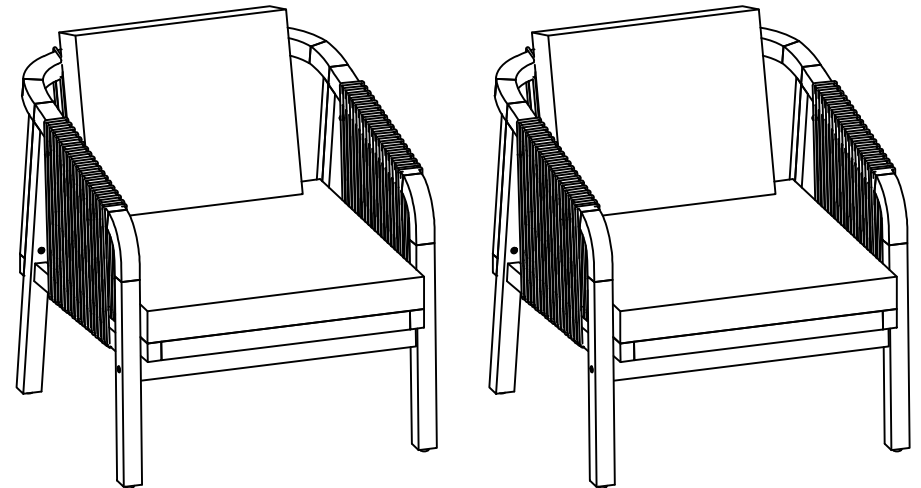

FINISH