


"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"

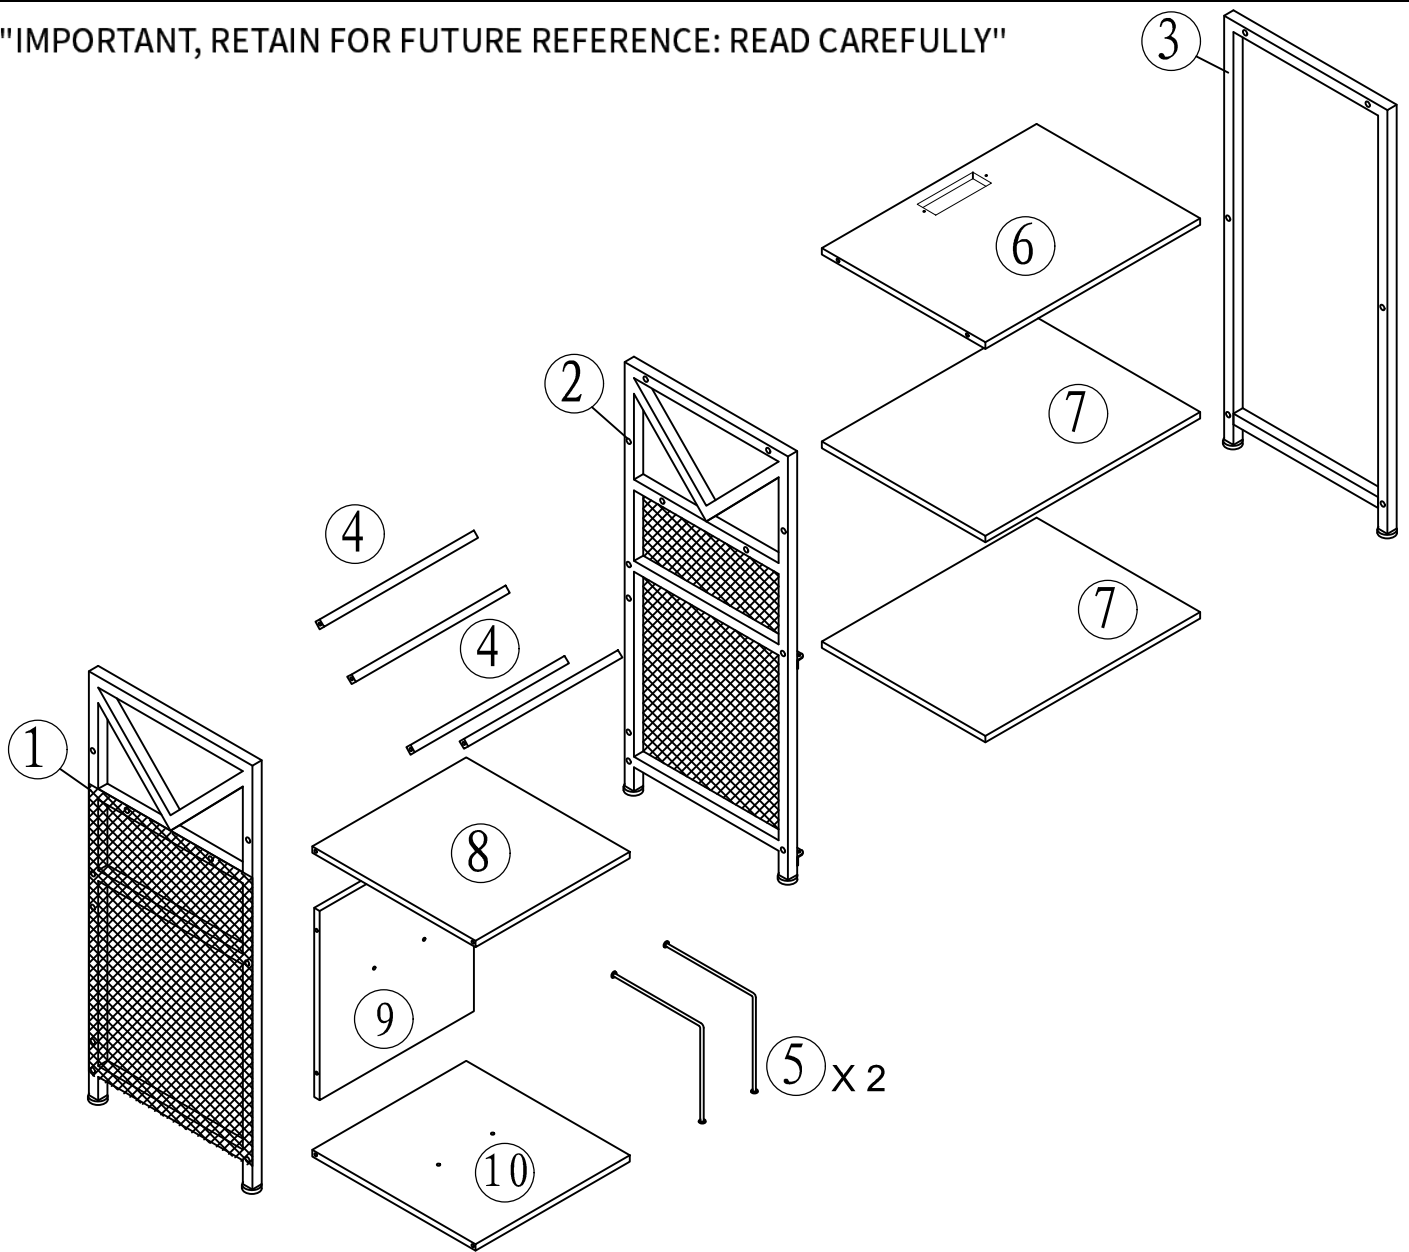


① X 1 	② X 1 	③ X 1 	④ X 4 	⑤ X 2 	⑥ X 1
-----------	-----------	-----------	-----------	-----------	-----------





⑦ X 2 	⑧ X 1 	⑨ X 1 	⑩ X 1 		
-----------	-----------	-----------	-----------	--	--

A X 4+1 	B X 8+1 	C X 20+1 	D X 1 	E X 1 	F X 2+1 	G X 1
-------------	-------------	--------------	-----------	-----------	-------------	-----------

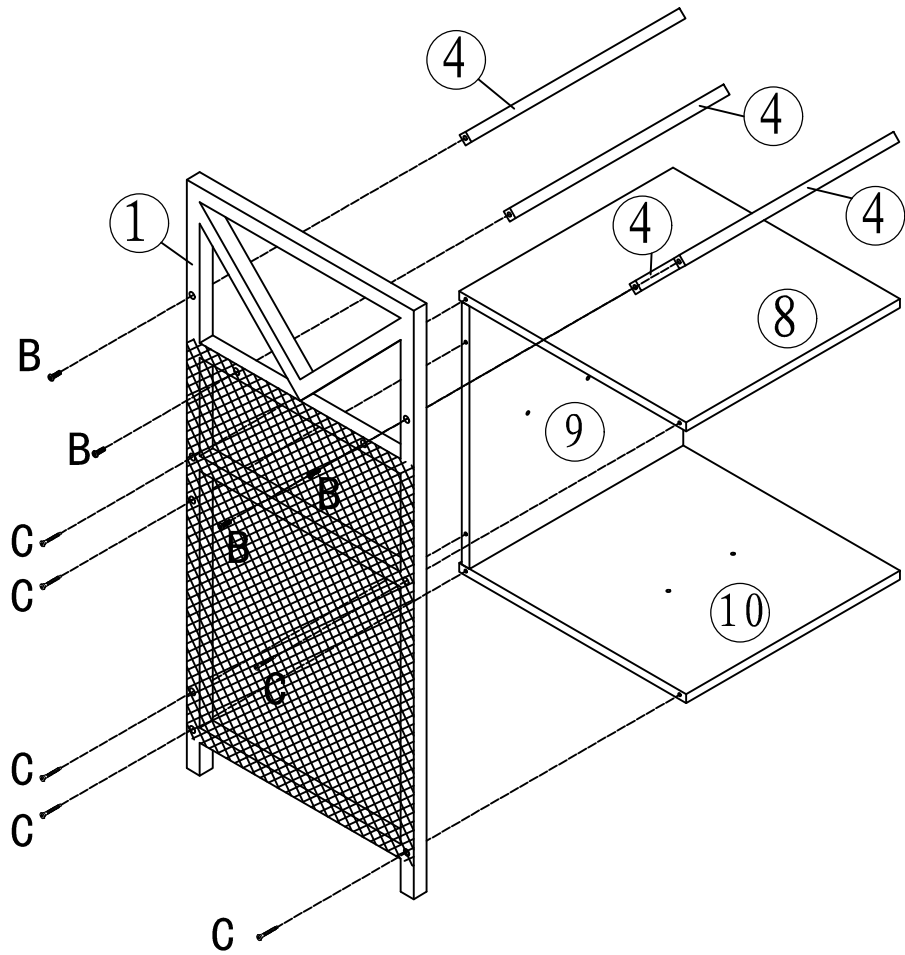
H X 6 	I X 2 	J X 1 	K X 1 			
-----------	-----------	-----------	-----------	--	--	--





STEP1

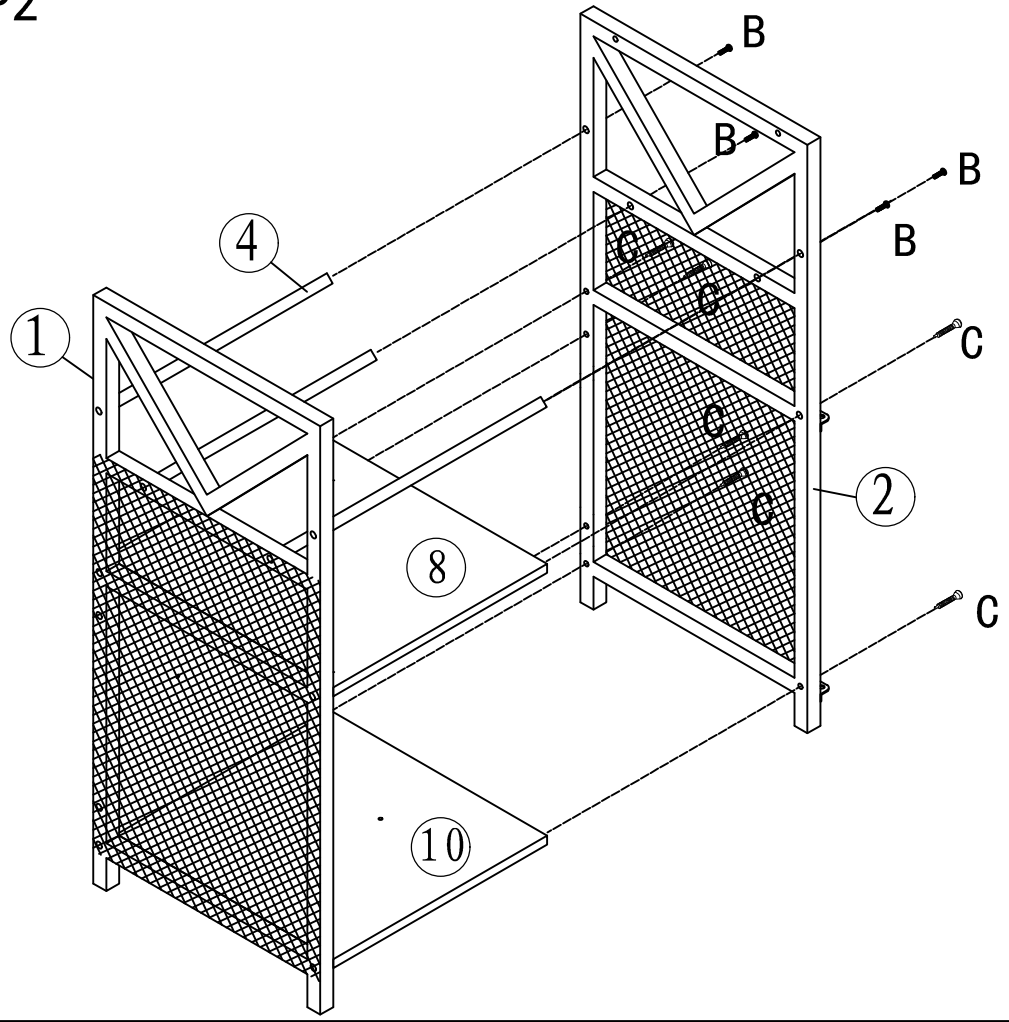


- (C)**  X 6
- (E)** 
- (D)** 
- (B)**  X 4





STEP2

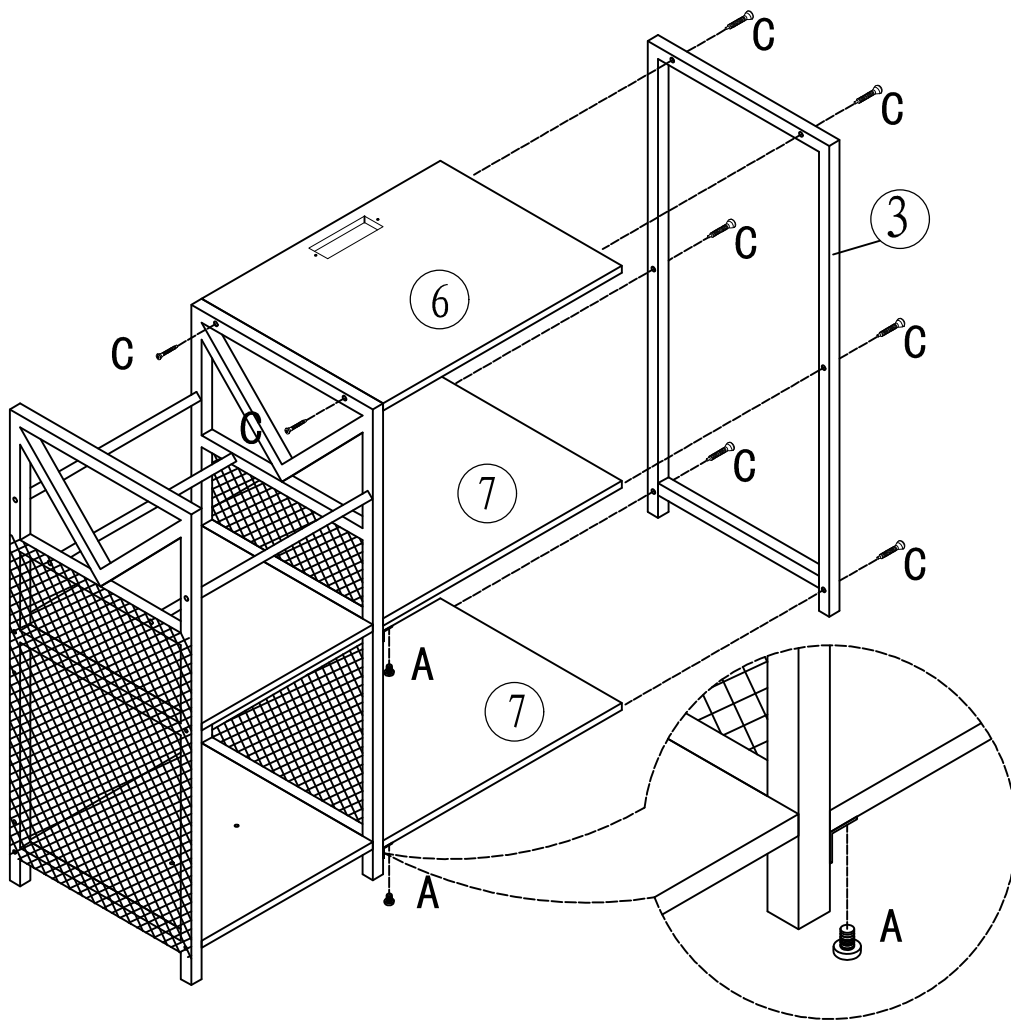


- (C)**  X 6
- (E)** 
- (D)** 
- (B)**  X 4

STEP3







- (C)  X 8
- (E) 
- (D) 
- (A)  X 4

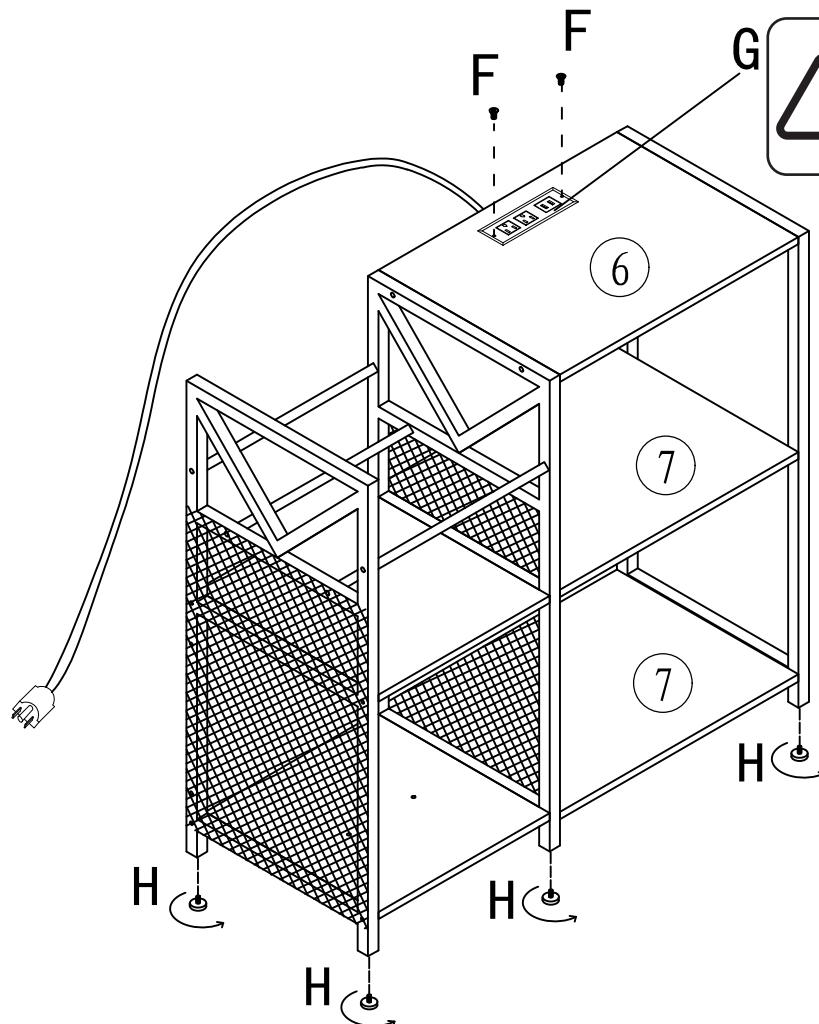
STEP4




According to the power outlet specification, please do not overload

- (H)  X 6
- (F)  X 2
- (G) 
- (D) 


STEP5

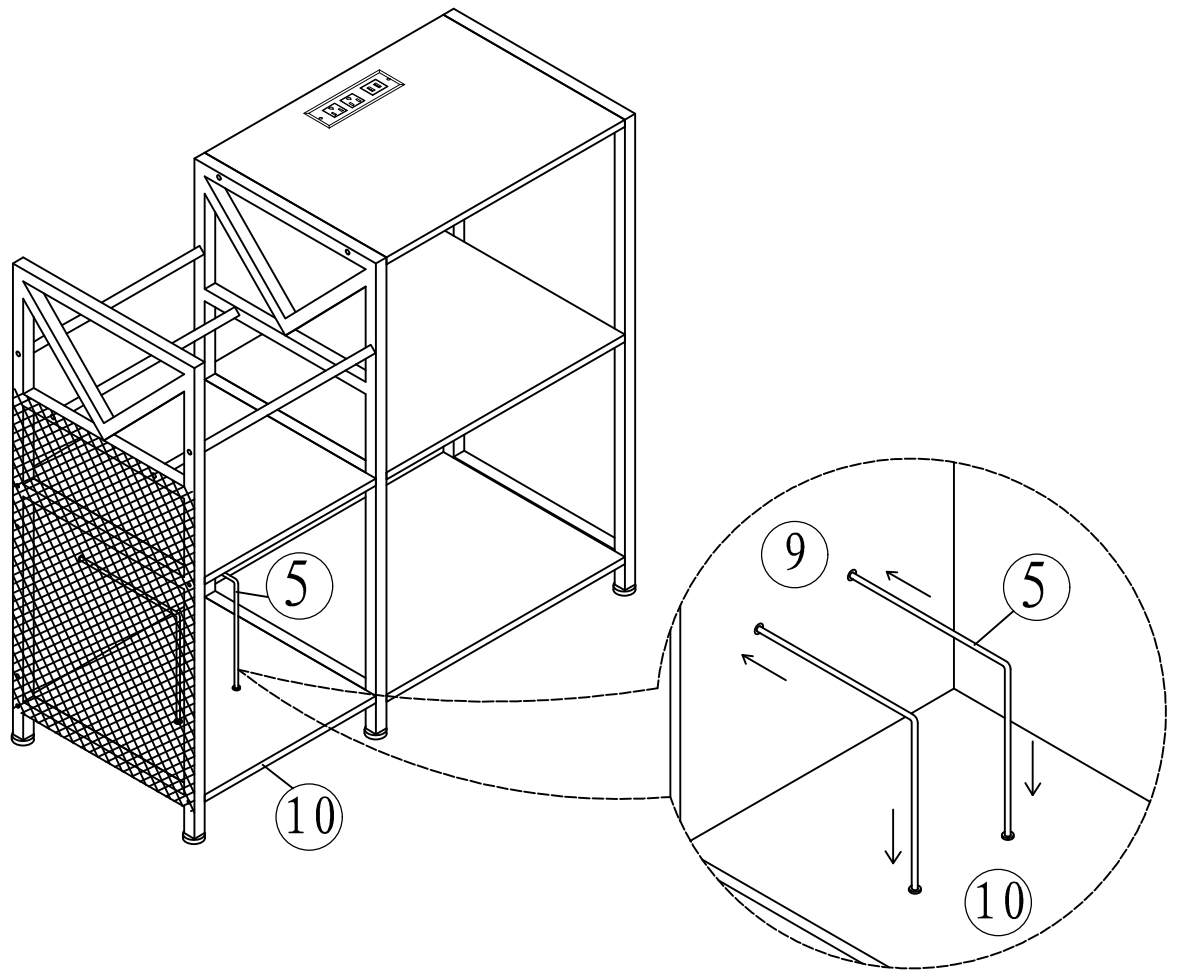

STEP6

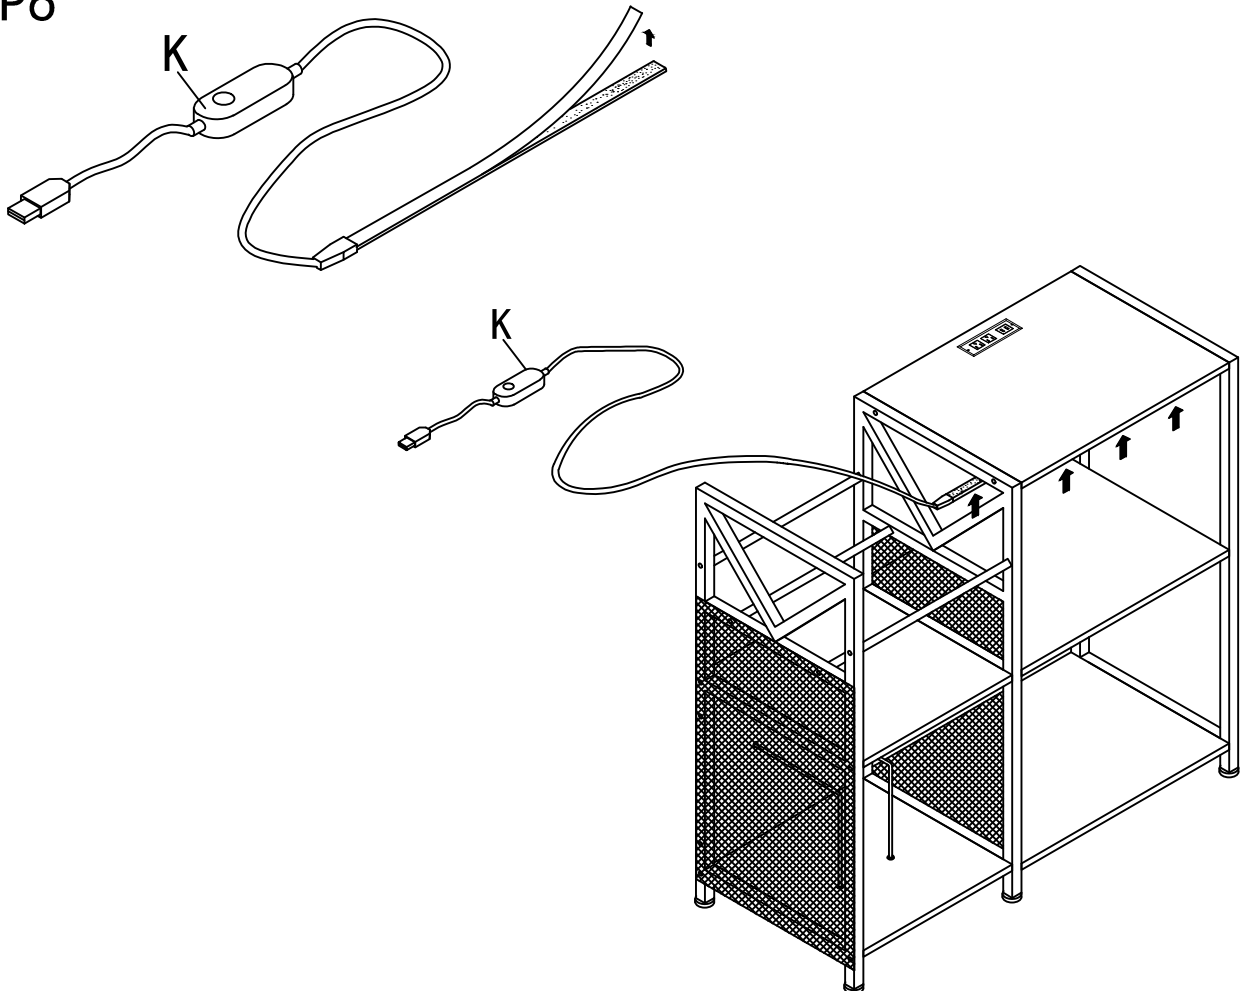

STEP 7

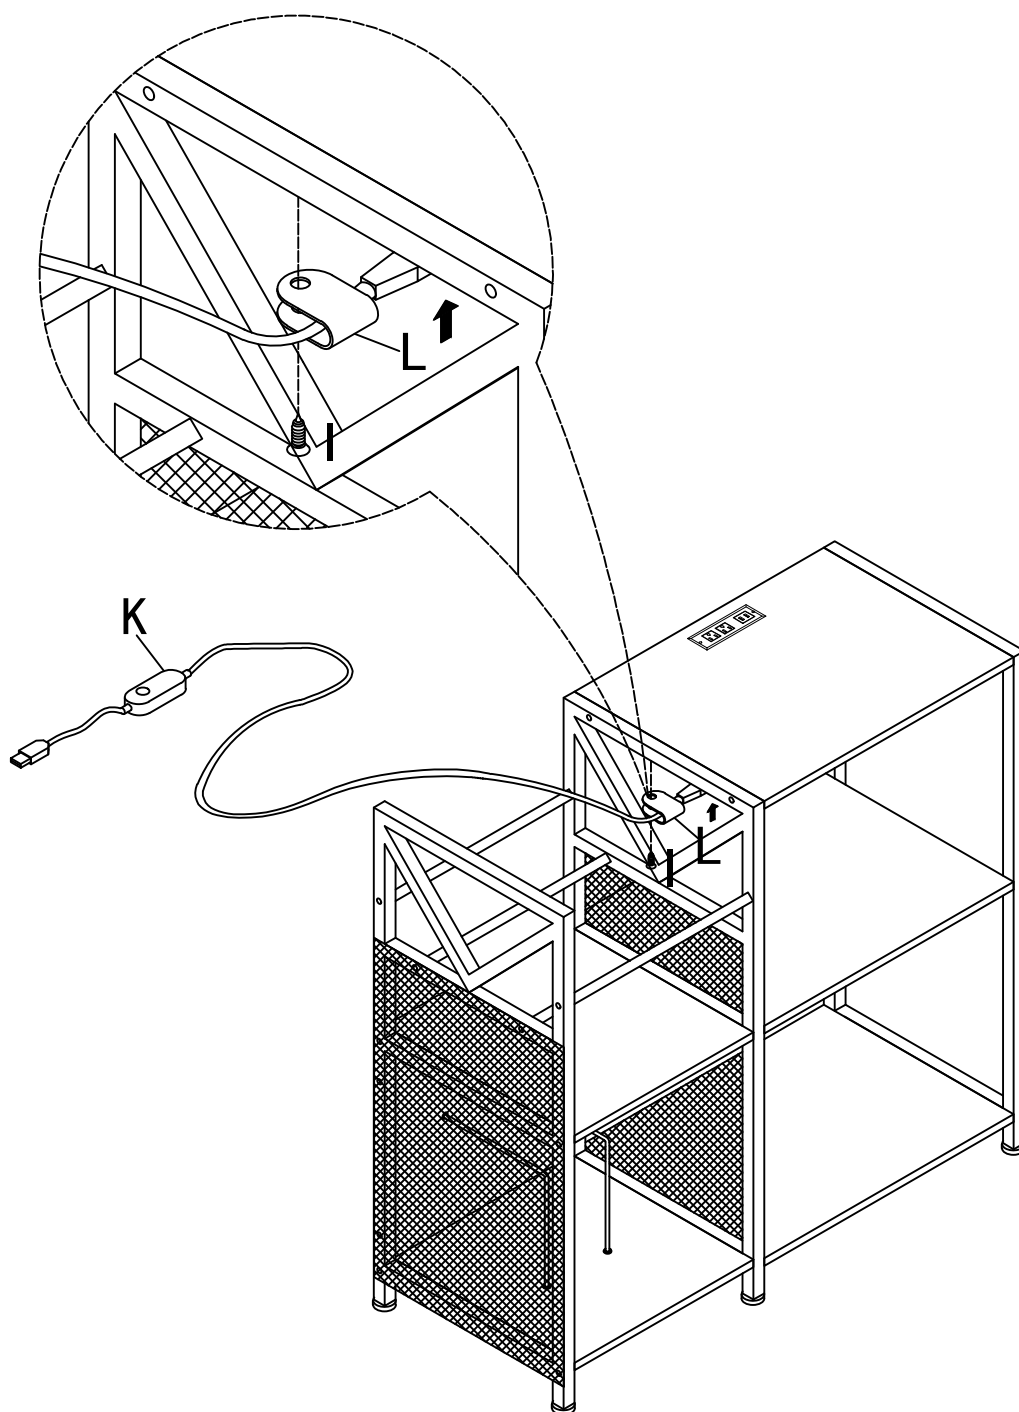

Installation Completed