


Item # : LCNOBAWHF26 / LCNOBADRSG26 Nolan Counter Height Non Swivel Stool LCNOBAWHF30 / LCNOBADRSG30 Nolan Bar Height Non Swivel Stool









Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment . Please identify and count all parts and compare with the HARDWARE LIST below.



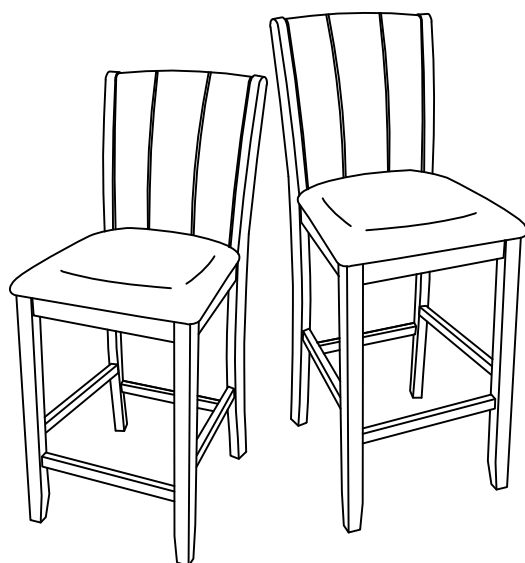





Caution : Please read instructions carefully before unpacking assembly parts. Sharp , exposed staples can cause injury , therefore , for your protection , please remove any exposed staples used in packing.

*** Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. ***

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process , and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolt until the assembly is completed.
3. Please put all parts on a smooth , flat surface before assembly , and carefully follow the assembly steps to assemble your newly purchased correctly and efficiently.




PARTS LIST		
NO.	COMPONENT	QTY.
A	Back Panel 	1 pc
B	Box Seat 	1 pc
C	Front Leg - Left (CL) 	1 pc
D	Front Leg - Right (CR) 	1 pc
E	Side Stretcher - Left (CL) 	1 pc
F	Side Stretcher - Right (CR) 	1 pc
G	Front Stretcher 	1 pc
H	Cushion Seat 	1 pc

HARDWARE LIST		
NO.	COMPONENT	QTY.
1	JCBC Bolt M6 x 35mm 	2 pcs
2	JCBC Bolt M6 x 60mm 	4 pcs
3	JCBC Bolt M6 x 80mm 	4 pcs
4	1/4" Spring Washer 	10 pcs
5	1/4" x 19mm Flat Washer 	10 pcs
6	CB Screw M4 x 32mm 	5 pcs
7	CB Screw M4 x 38mm 	6 pcs
8	Allen Key M4 x 65mm 	1 pc


* Phillips screwdriver not included *

Step 1

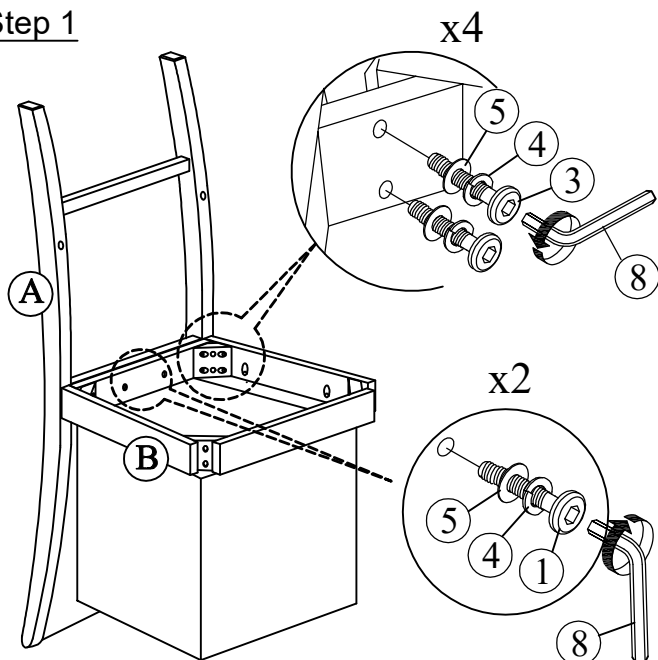


- 1) Attach Box Seat (B) to the Back Panel (A) by using 2pcs JCBC bolts (1) , 2pcs spring washers (4) and 2pcs flat washers (5). Use Allen Key (8) to secure .
- 2) Insert 4pcs JCBC bolts (3) , 4pcs Spring Washers (4) and 4pcs Flat Washers (5) . Use Allen Key (8) to tighten all the bolts securely.


Step 3

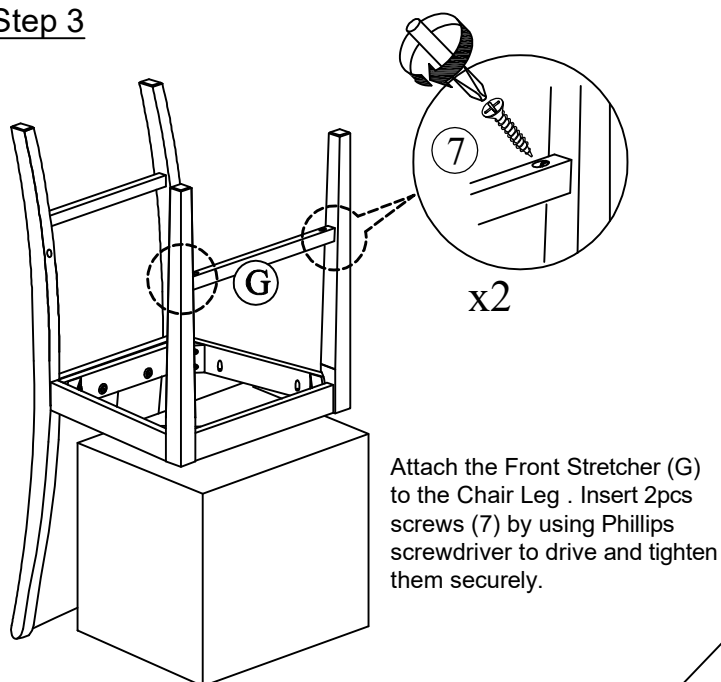

Attach the Front Stretcher (G) to the Chair Leg . Insert 2pcs screws (7) by using Phillips screwdriver to drive and tighten them securely.

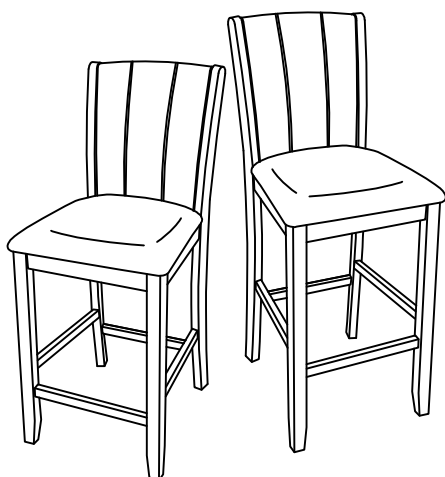


Step 2

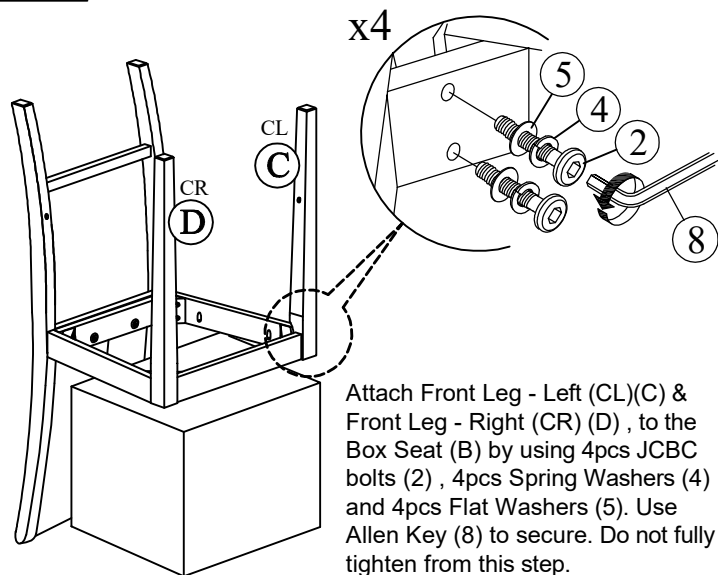


Attach Front Leg - Left (CL)(C) & Front Leg - Right (CR) (D) , to the Box Seat (B) by using 4pcs JCBC bolts (2) , 4pcs Spring Washers (4) and 4pcs Flat Washers (5). Use Allen Key (8) to secure. Do not fully tighten from this step.

Step 4

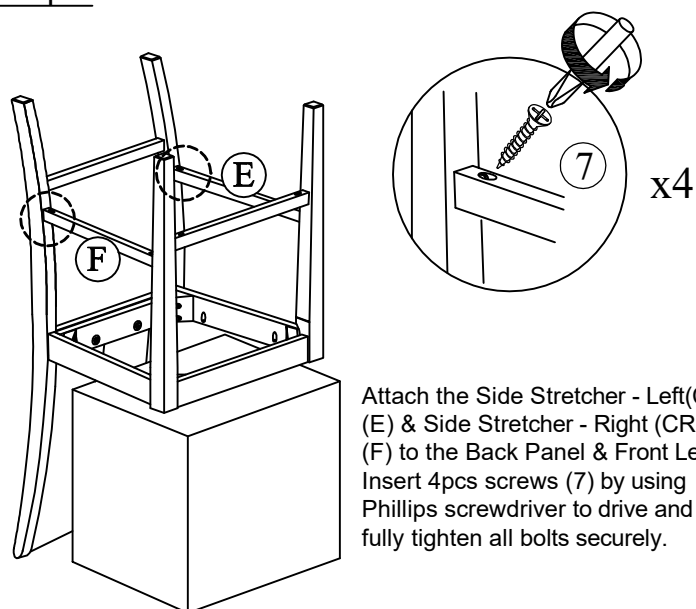

Attach the Side Stretcher - Left(CL) (E) & Side Stretcher - Right (CR) (F) to the Back Panel & Front Legs Insert 4pcs screws (7) by using Phillips screwdriver to drive and fully tighten all bolts securely.

Step 5

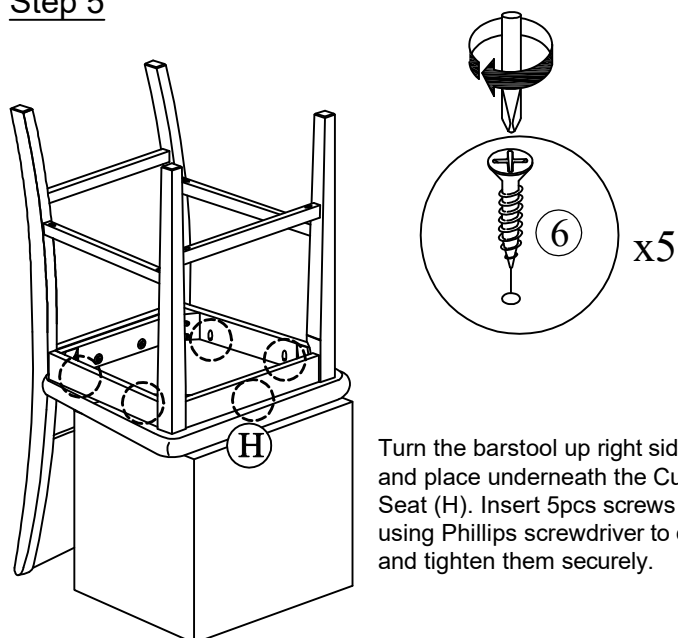

Turn the barstool up right side and place underneath the Cushion Seat (H). Insert 5pcs screws (6) by using Phillips screwdriver to drive and tighten them securely.