



Installation Instruction

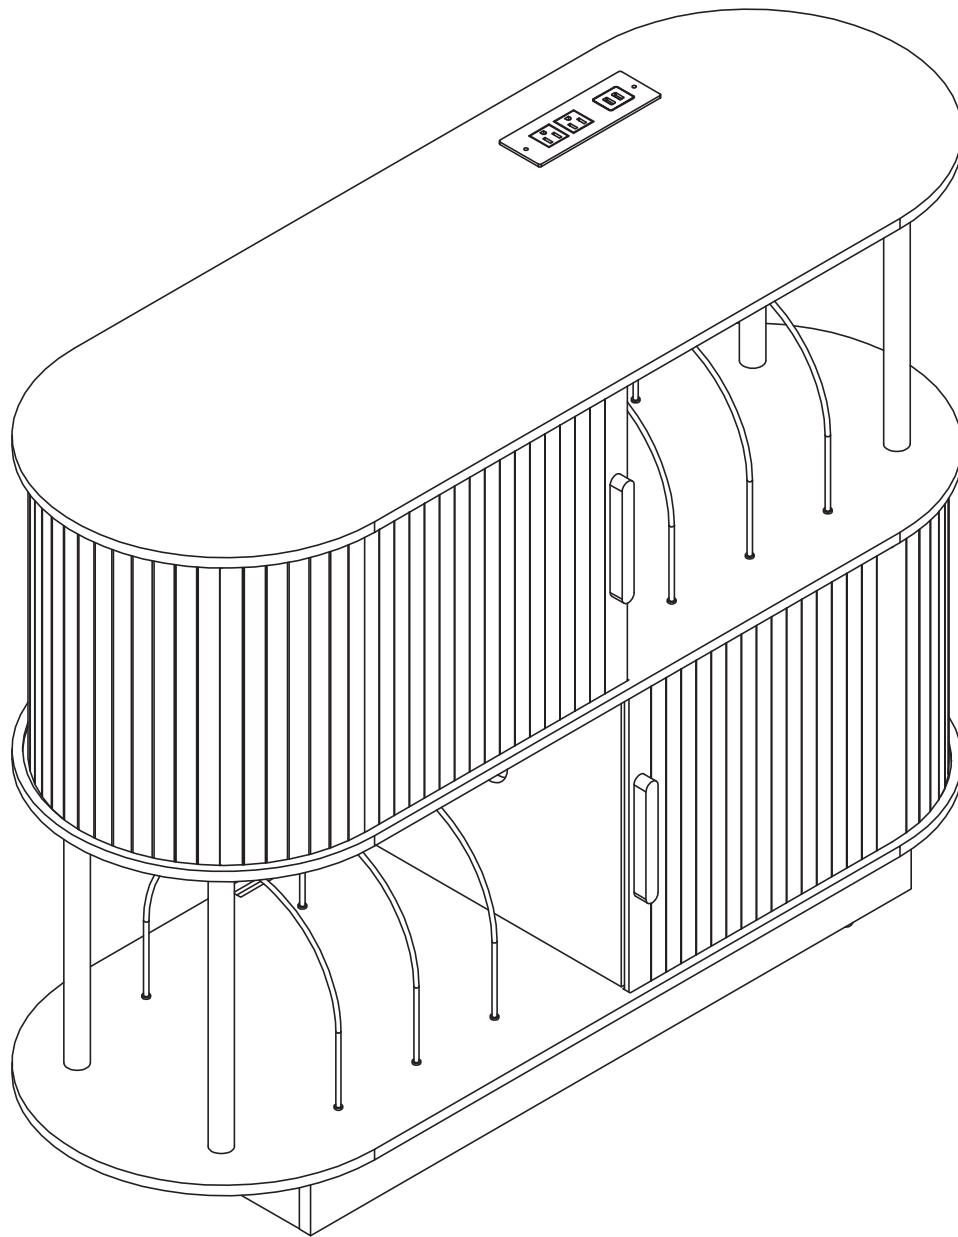

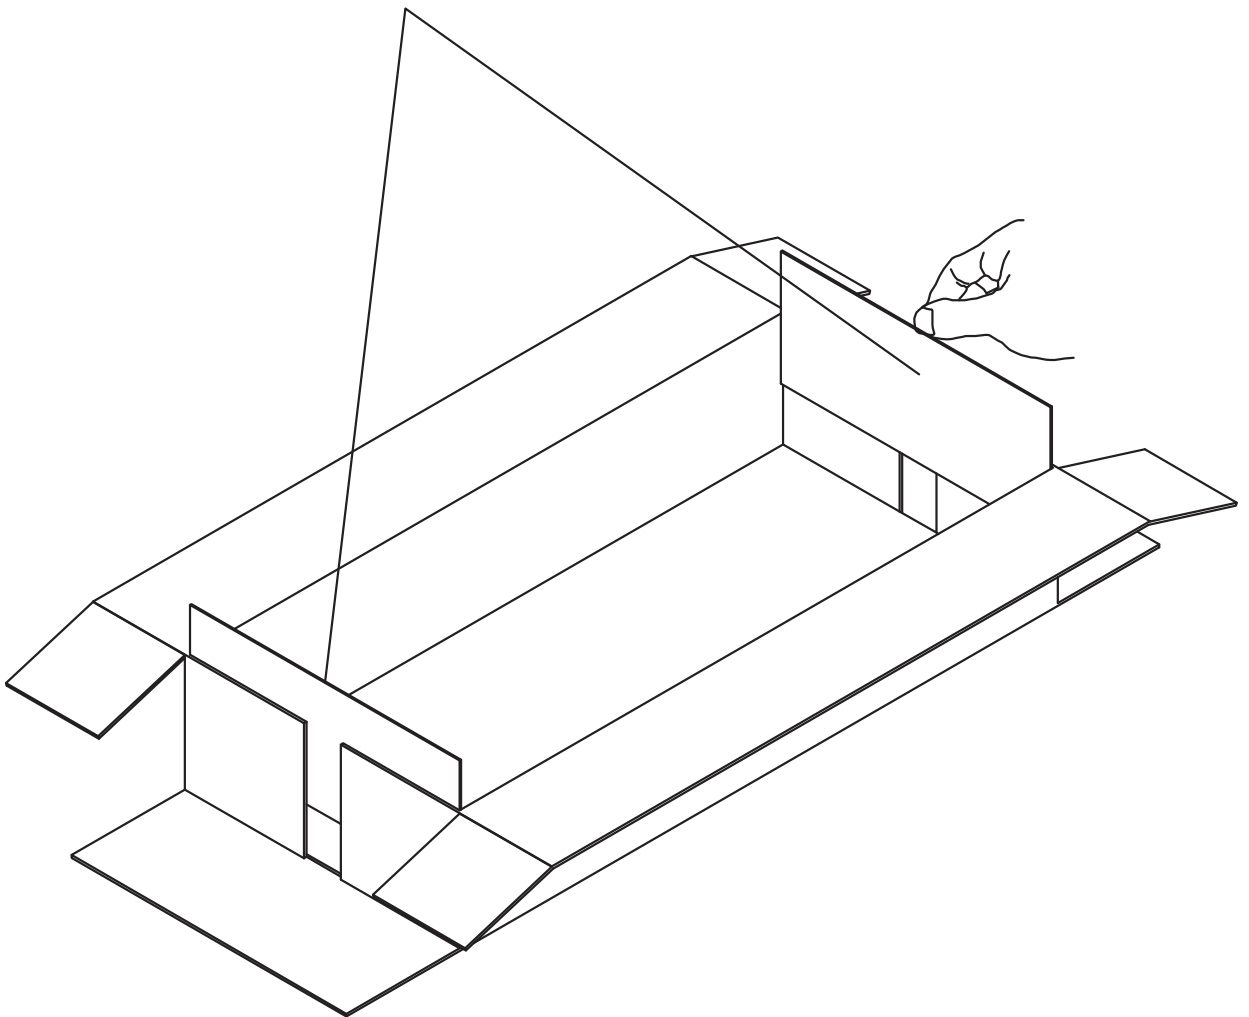


The two panels on the left and right of the package are used
Protect the product, you can just
throw it away.



Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver

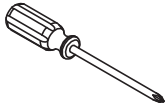

Weight Limitation




100

lbs table top

| 35


lbs per

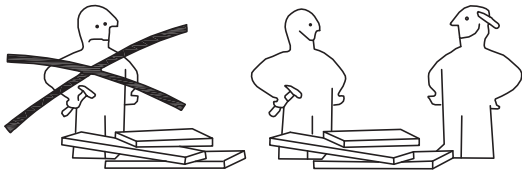

What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	42
B	Cam Lock 15X10MM	42
C	Wooden Dowel M8X30MM	14
D	Screw M4X40MM	6
E	Screw M3.5X14MM	2
F	Slub screw	4
G	L-shaped metal sheet	2
H	Screw M3.5X14MM	2
I	Screw M6X25MM	4
J	Solid wood handle	2
K	Anchor	2
L	Foot nail	6
M	Circular hole Decals	42
N	electric wire hole	2
O	Cam Bolt M4X8MM	4
P	Extension cord	1
Q	Wrench M4X55MM	1

The Hardwares

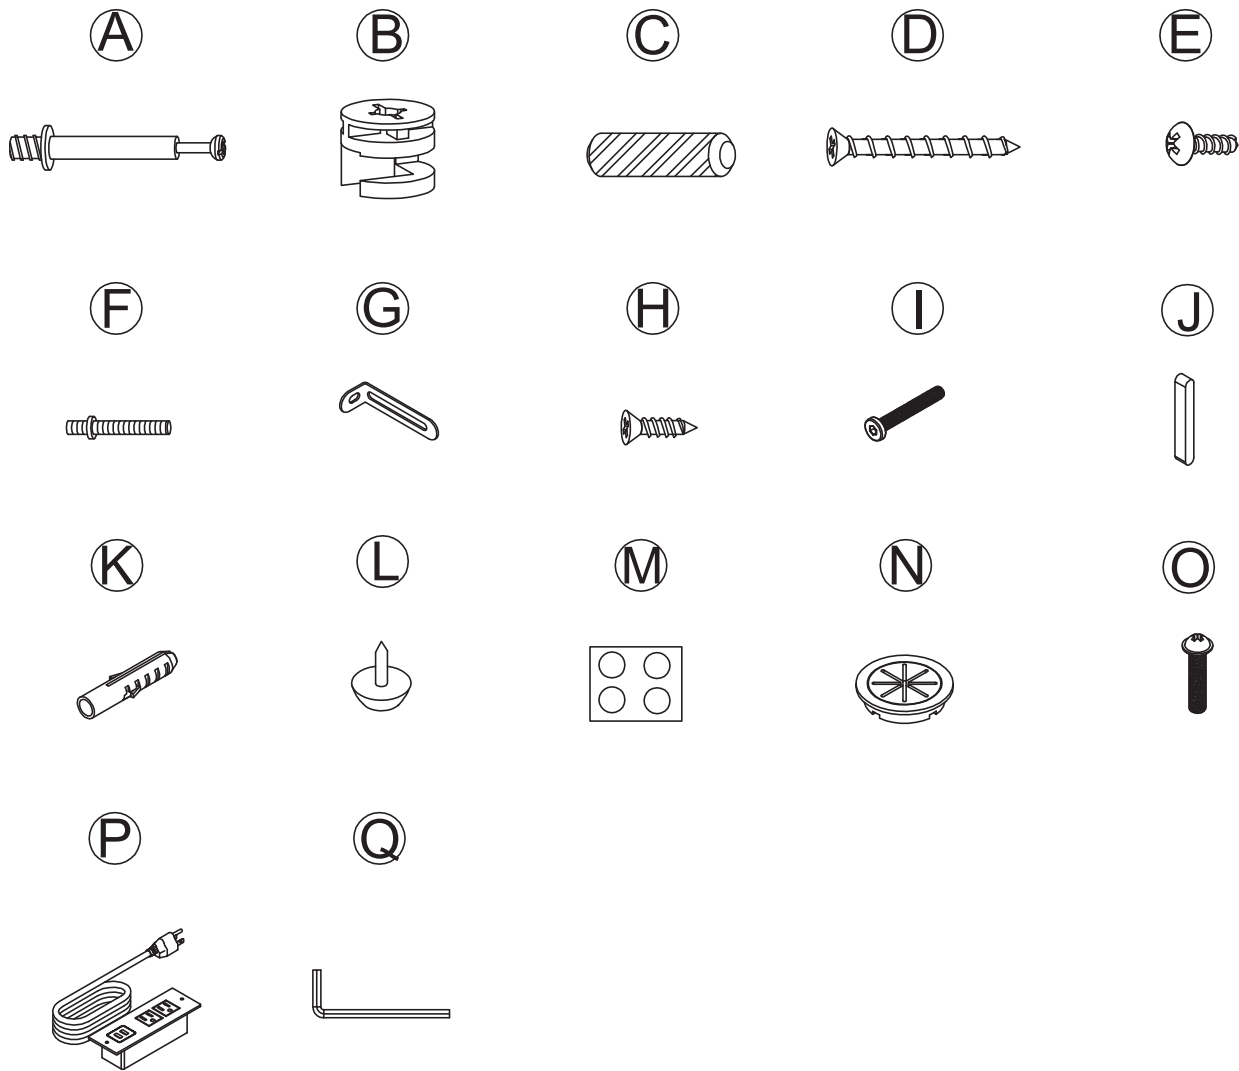


IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully).






Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Layer plate	1
4	Partition board	2
5	Back panel	2
6	Coaming panel	2
7	Support plate	2
8	Reinforcing bar	6
9	Long strip board	2
10	short strip board	2
11	Solid wood	4





The Accessoriess

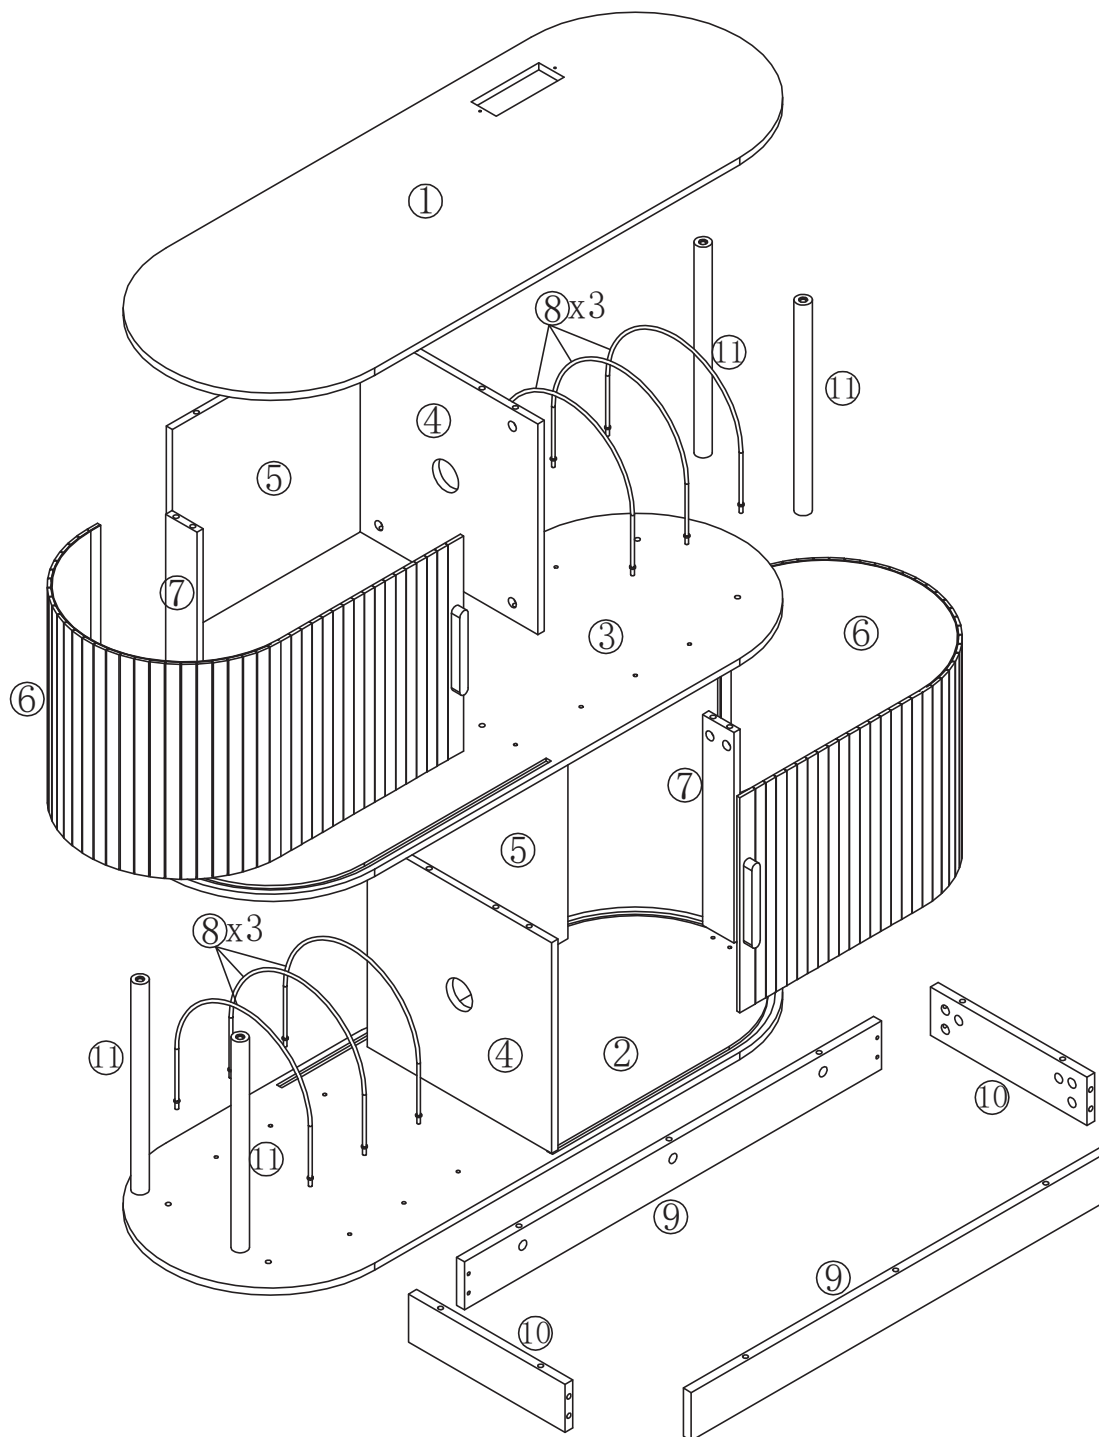






Step 1

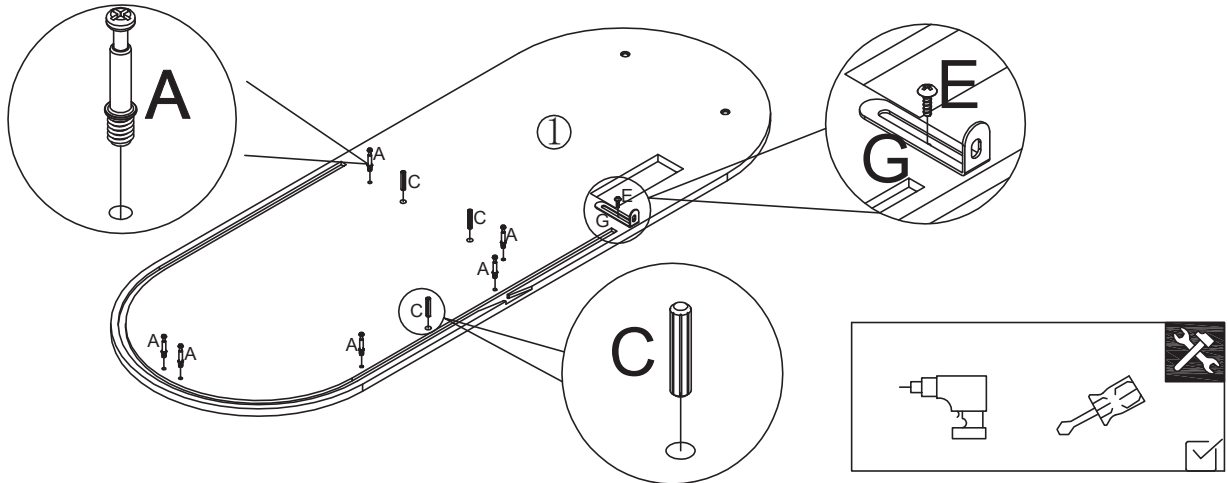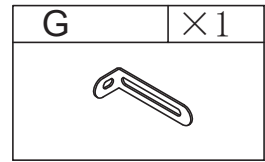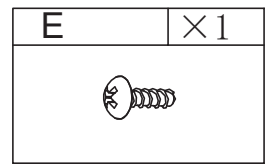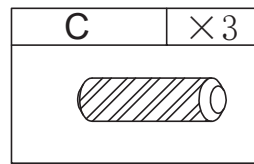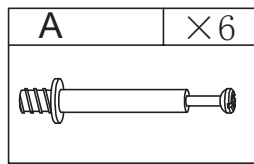






Step 2

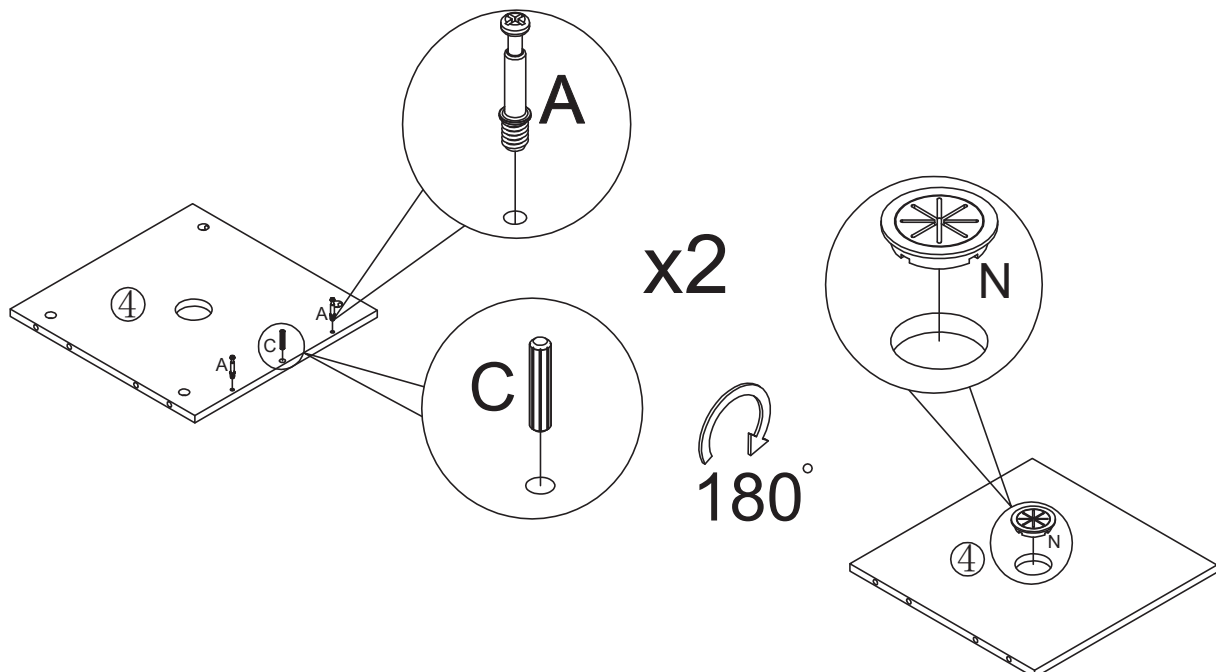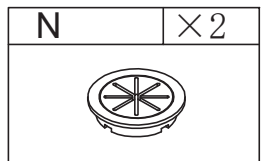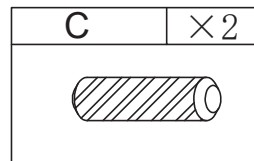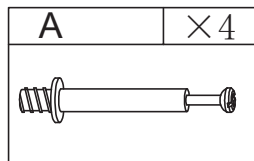










Step 3

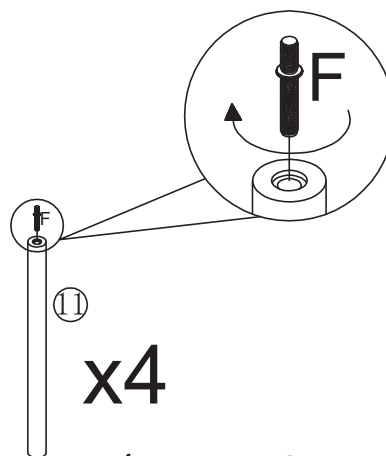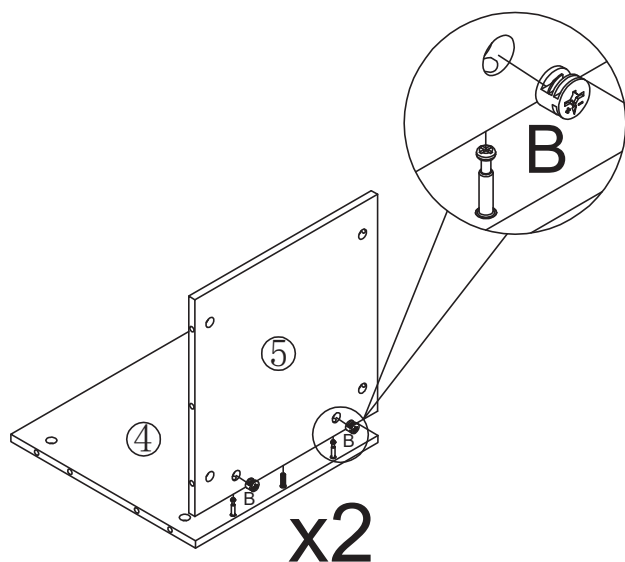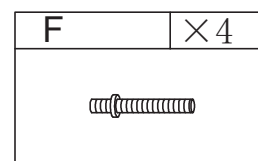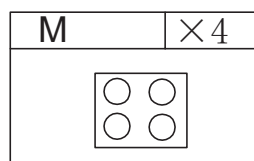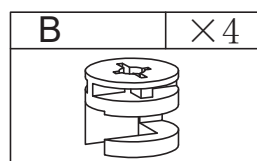




x4

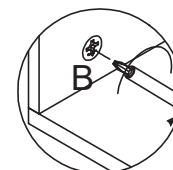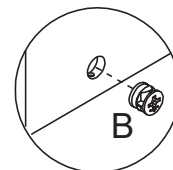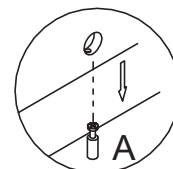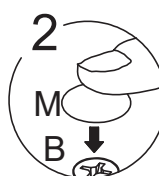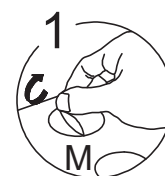



Step 4

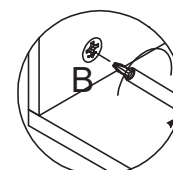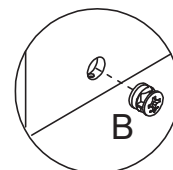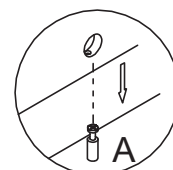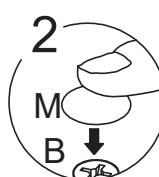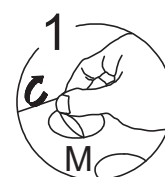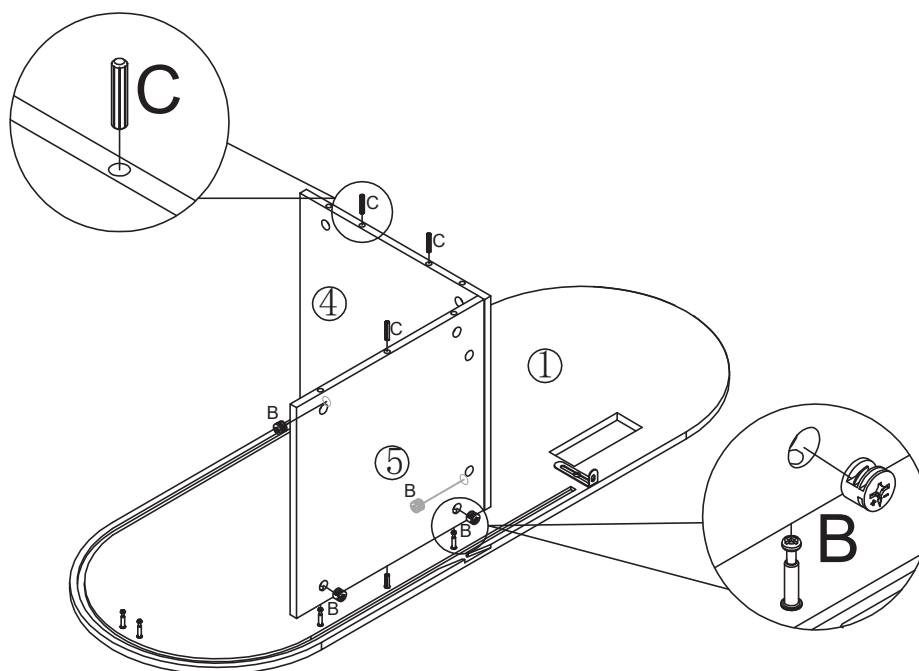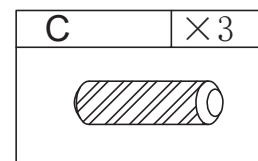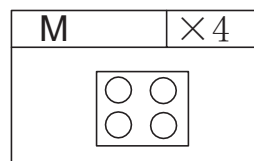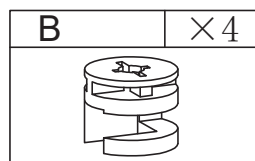

Step 5



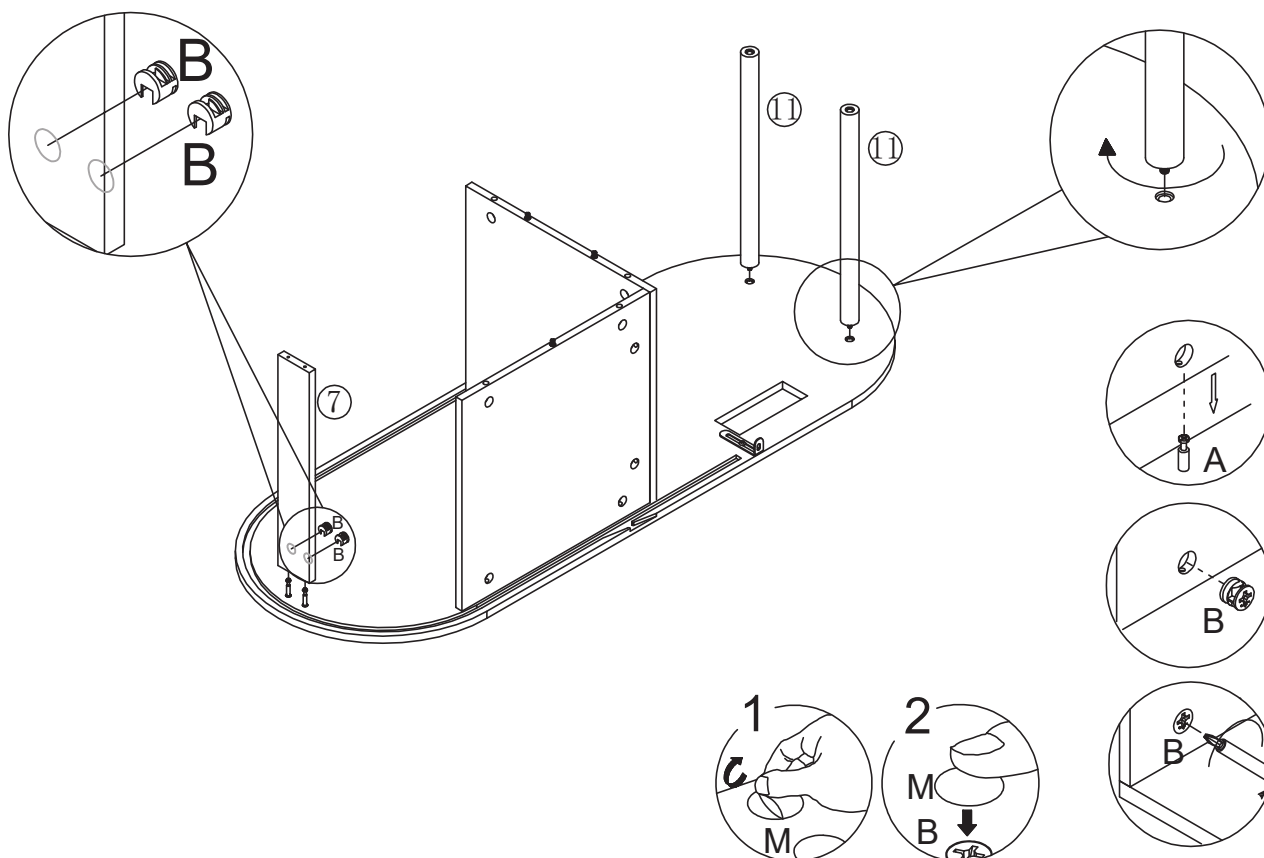
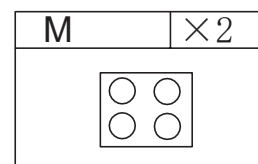
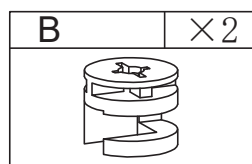


Step 6

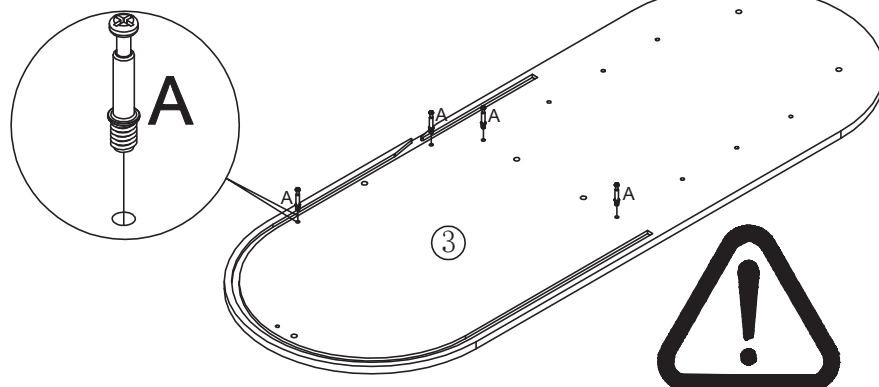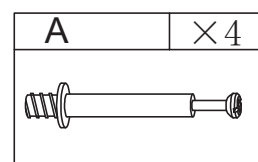

Please pay attention to the orientation of Board 3





Step 7

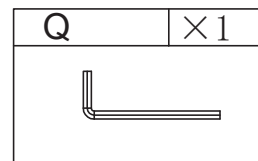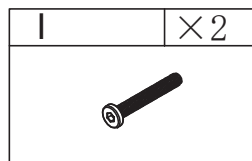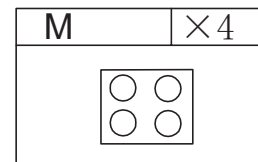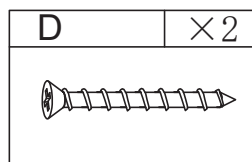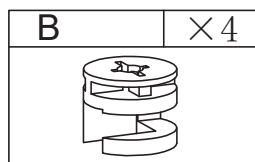


Note that the side marked with the arrow should face up









When tightening the D screw, please ensure it aligns with the hole position and lock it in carefully

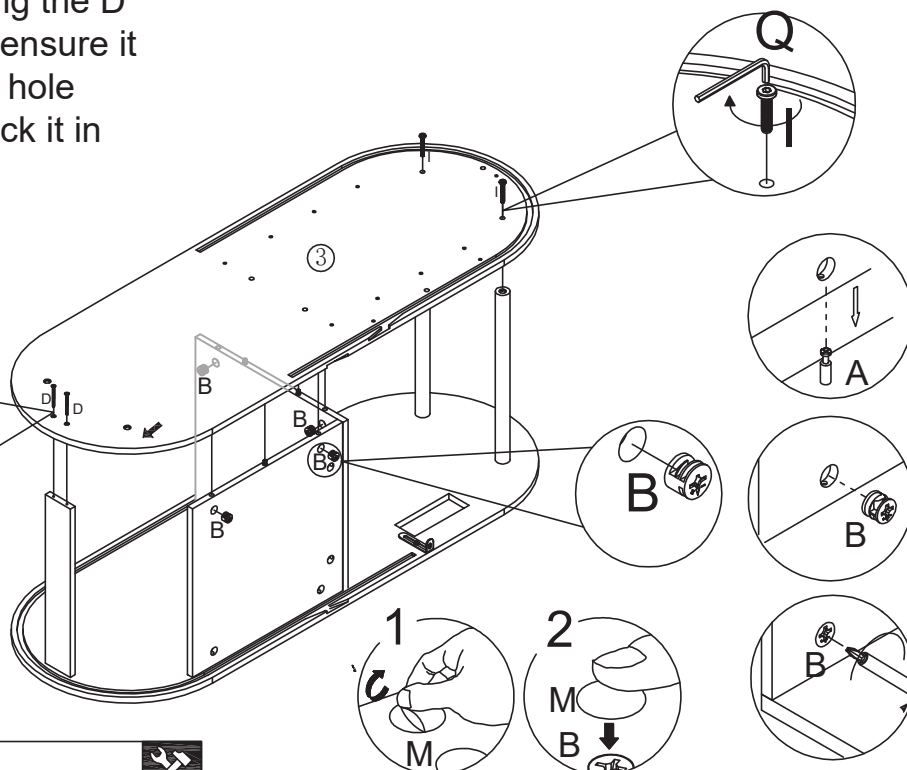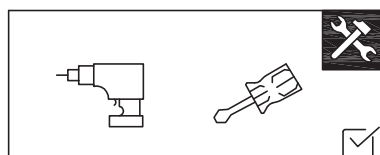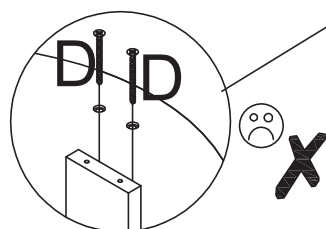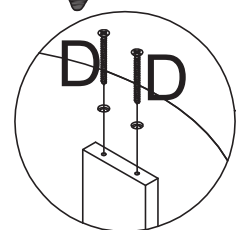



Step 8

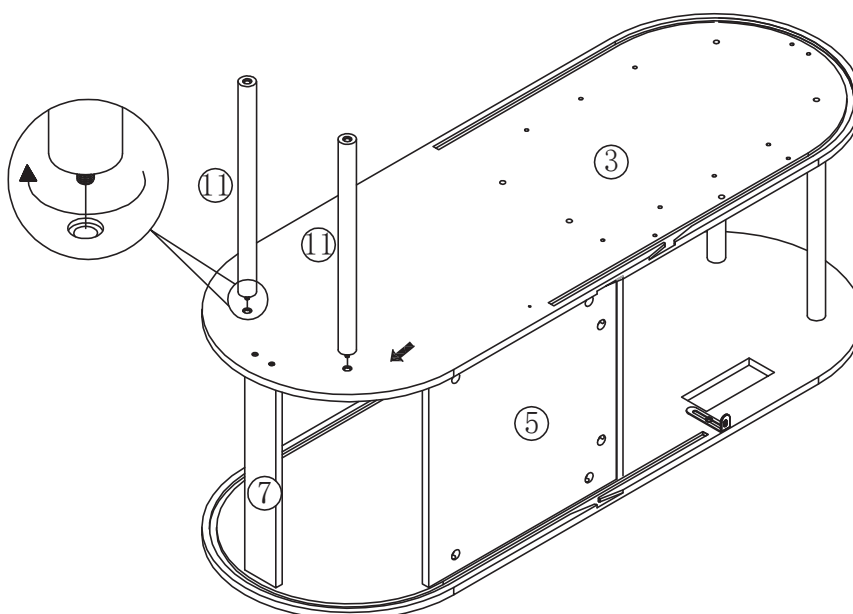


Step 9

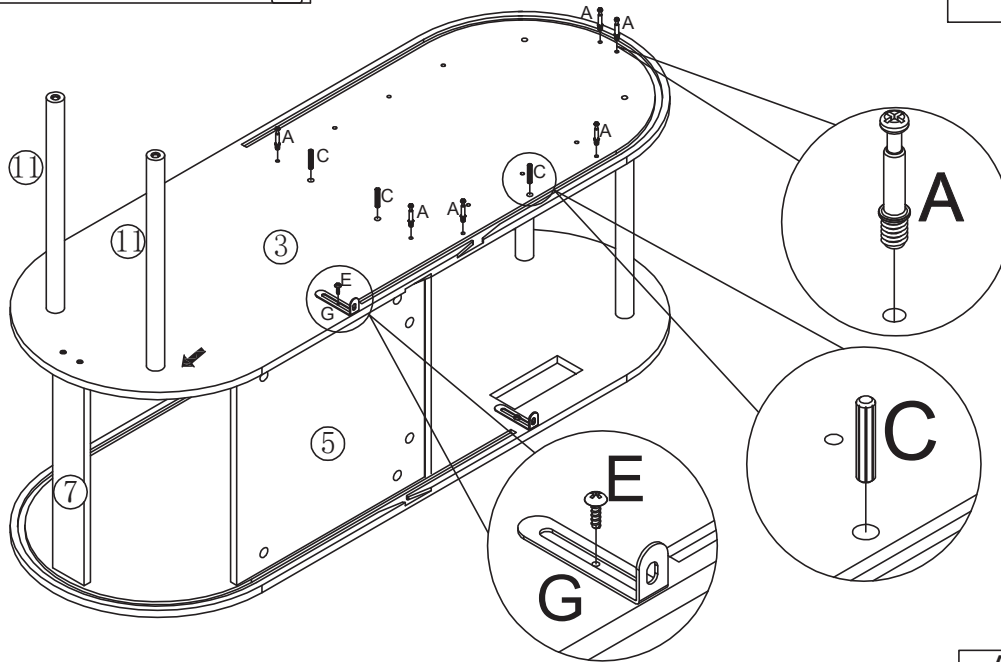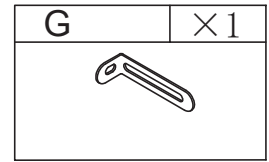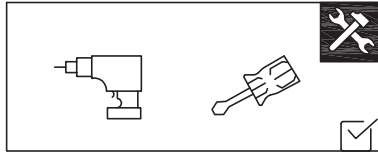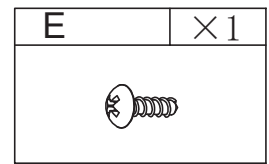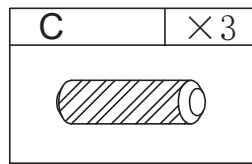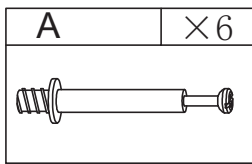


Step 10

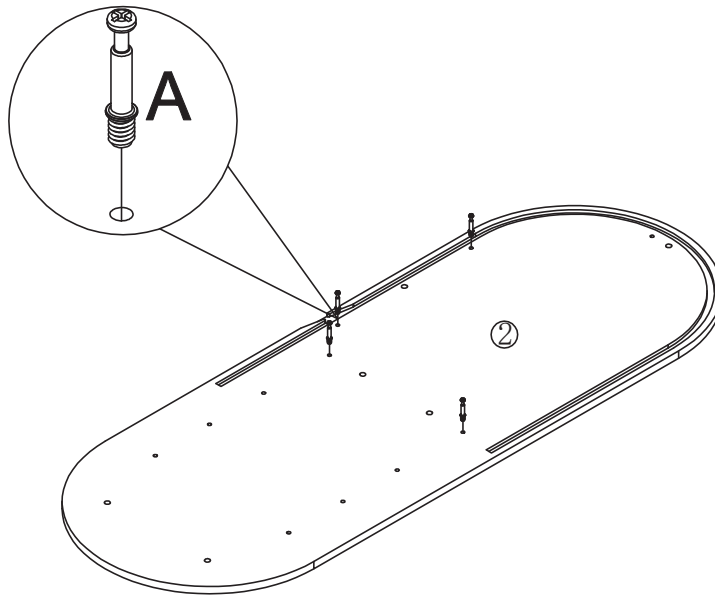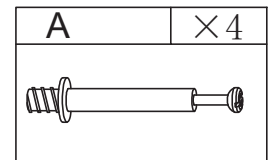



Step 11

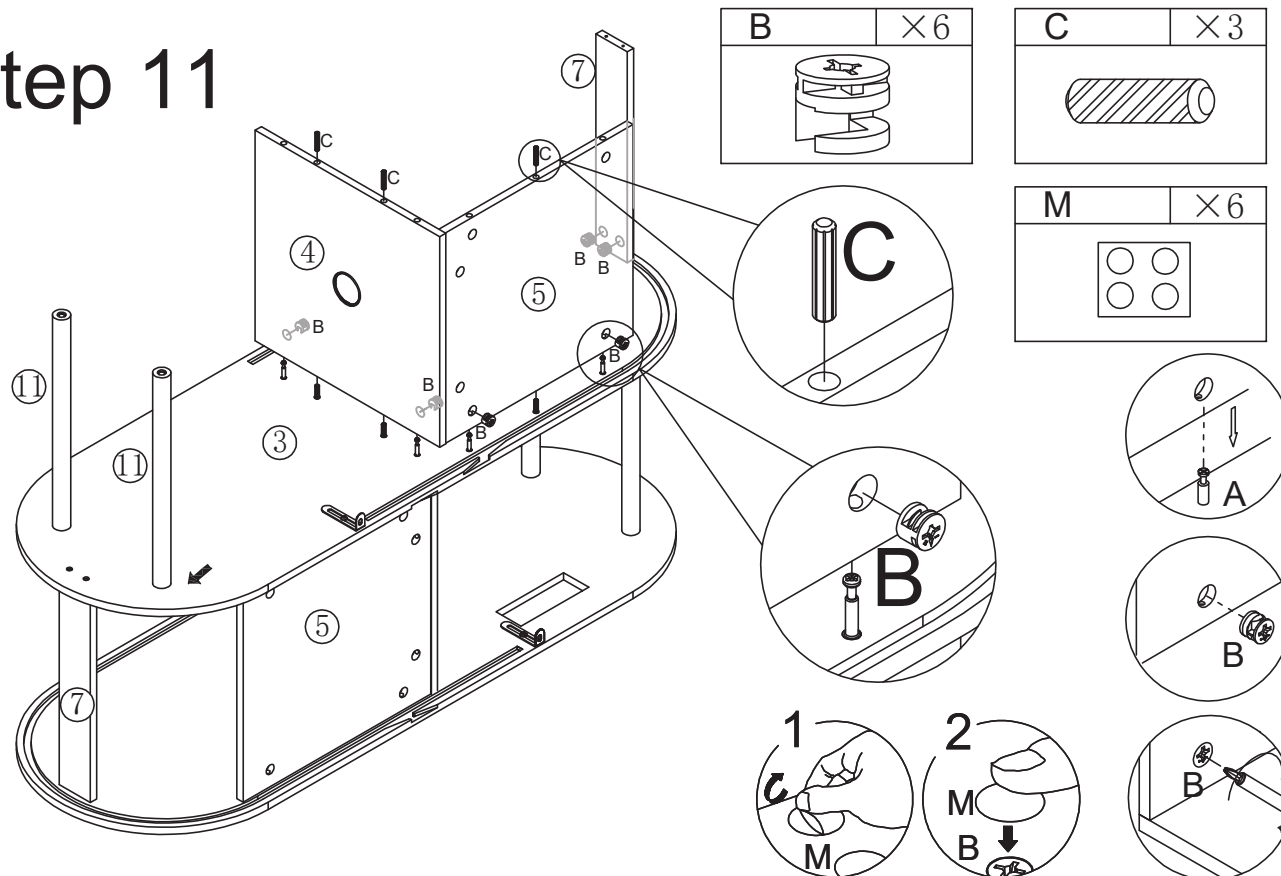









Step 12

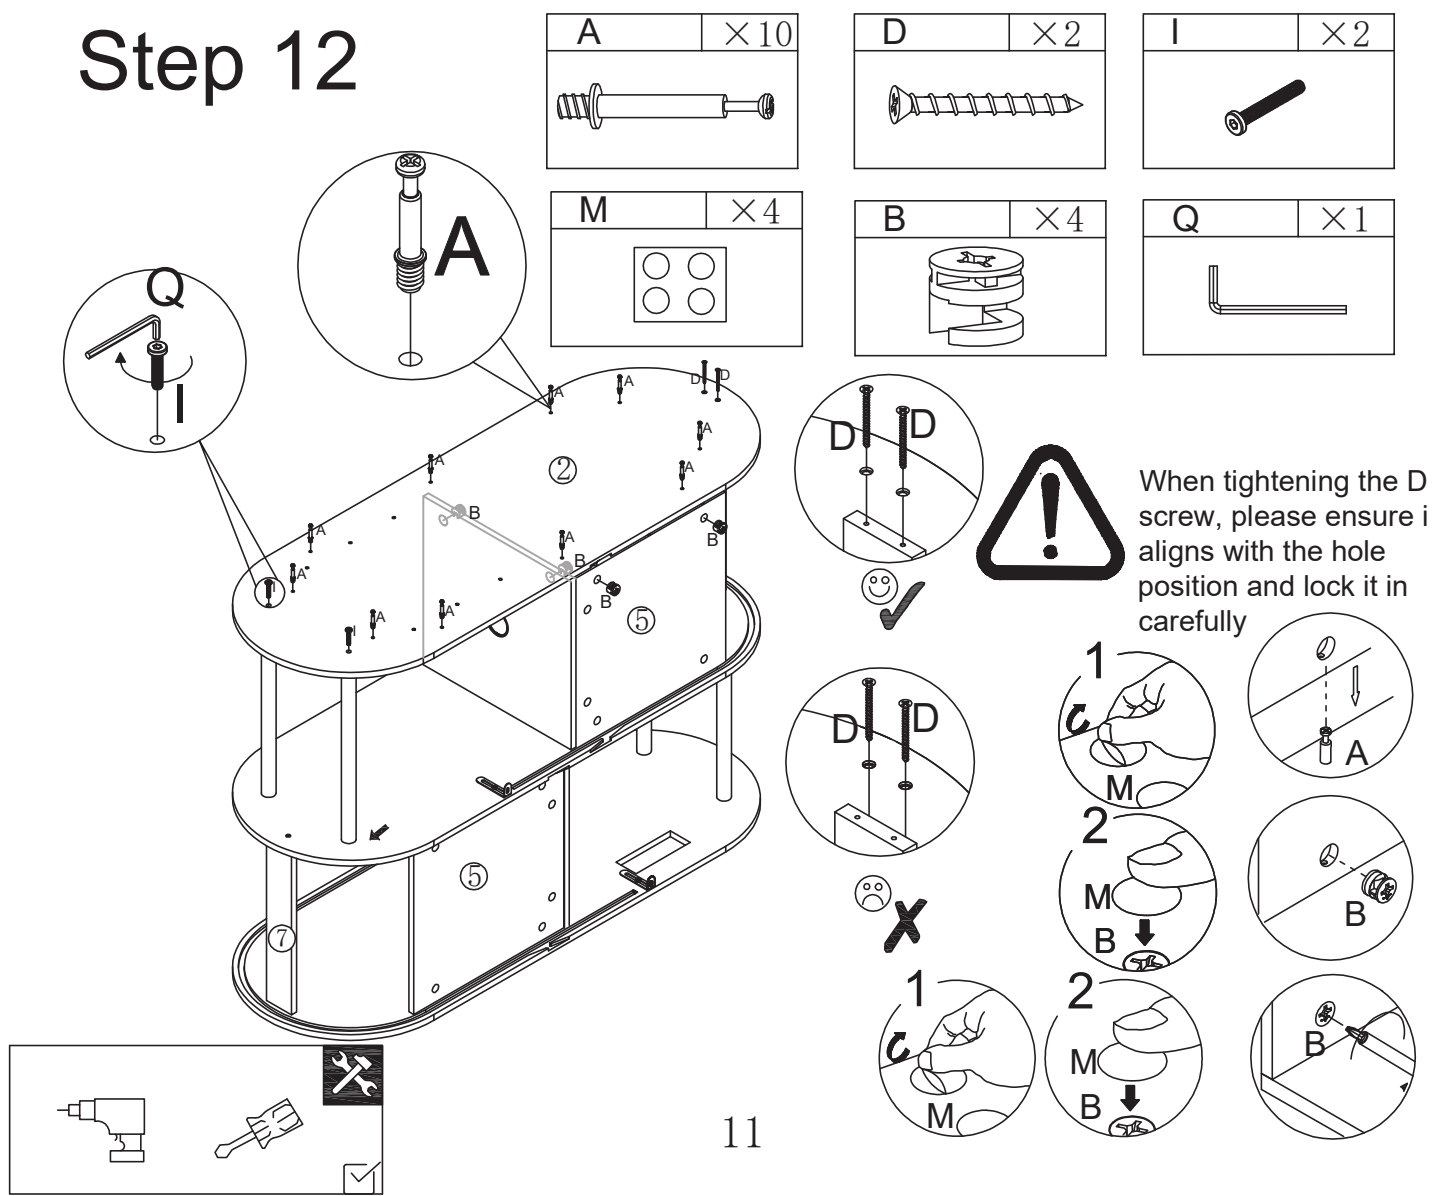









Step 13

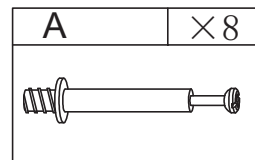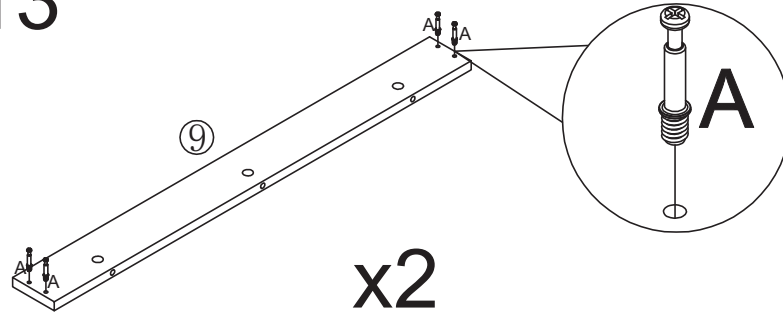


Step 14

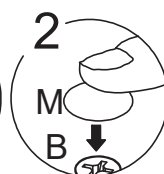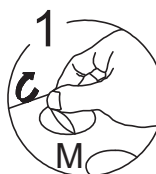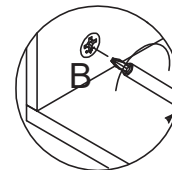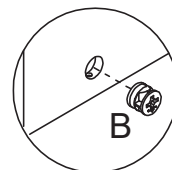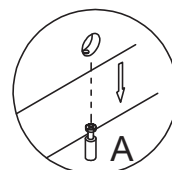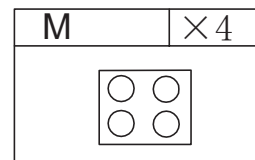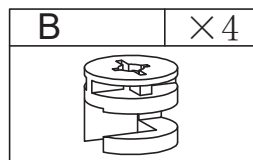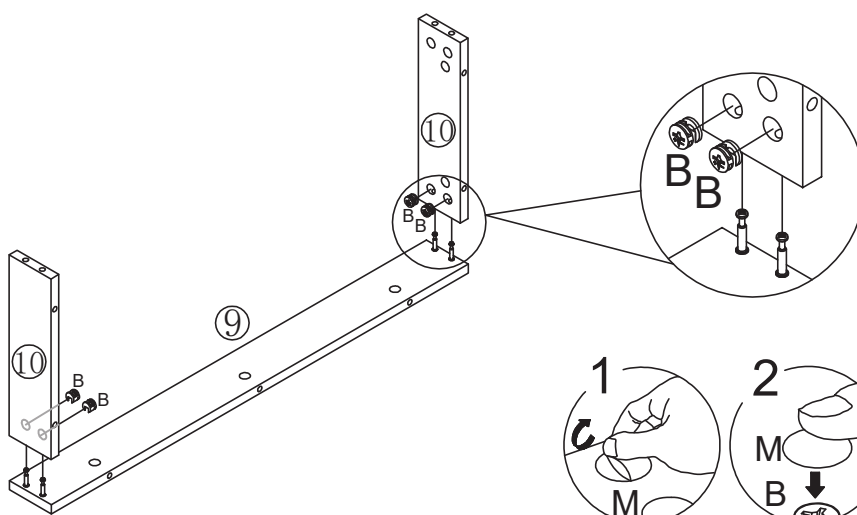


Step 15

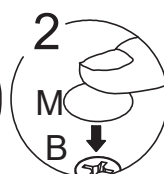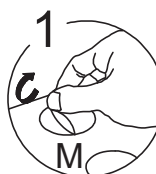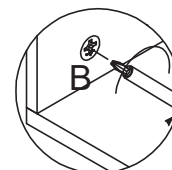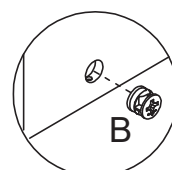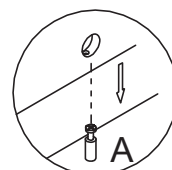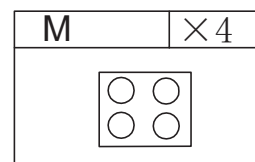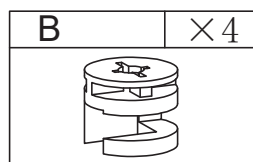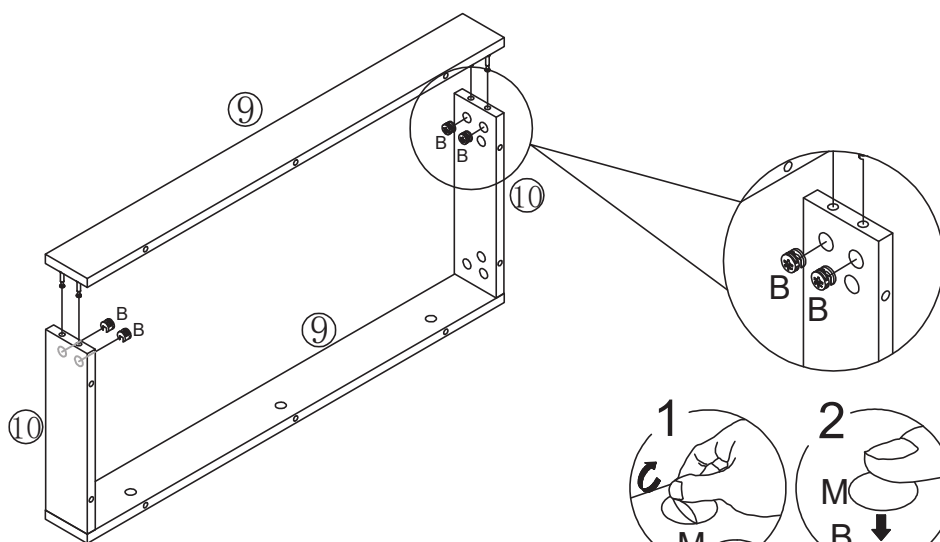


Step 16

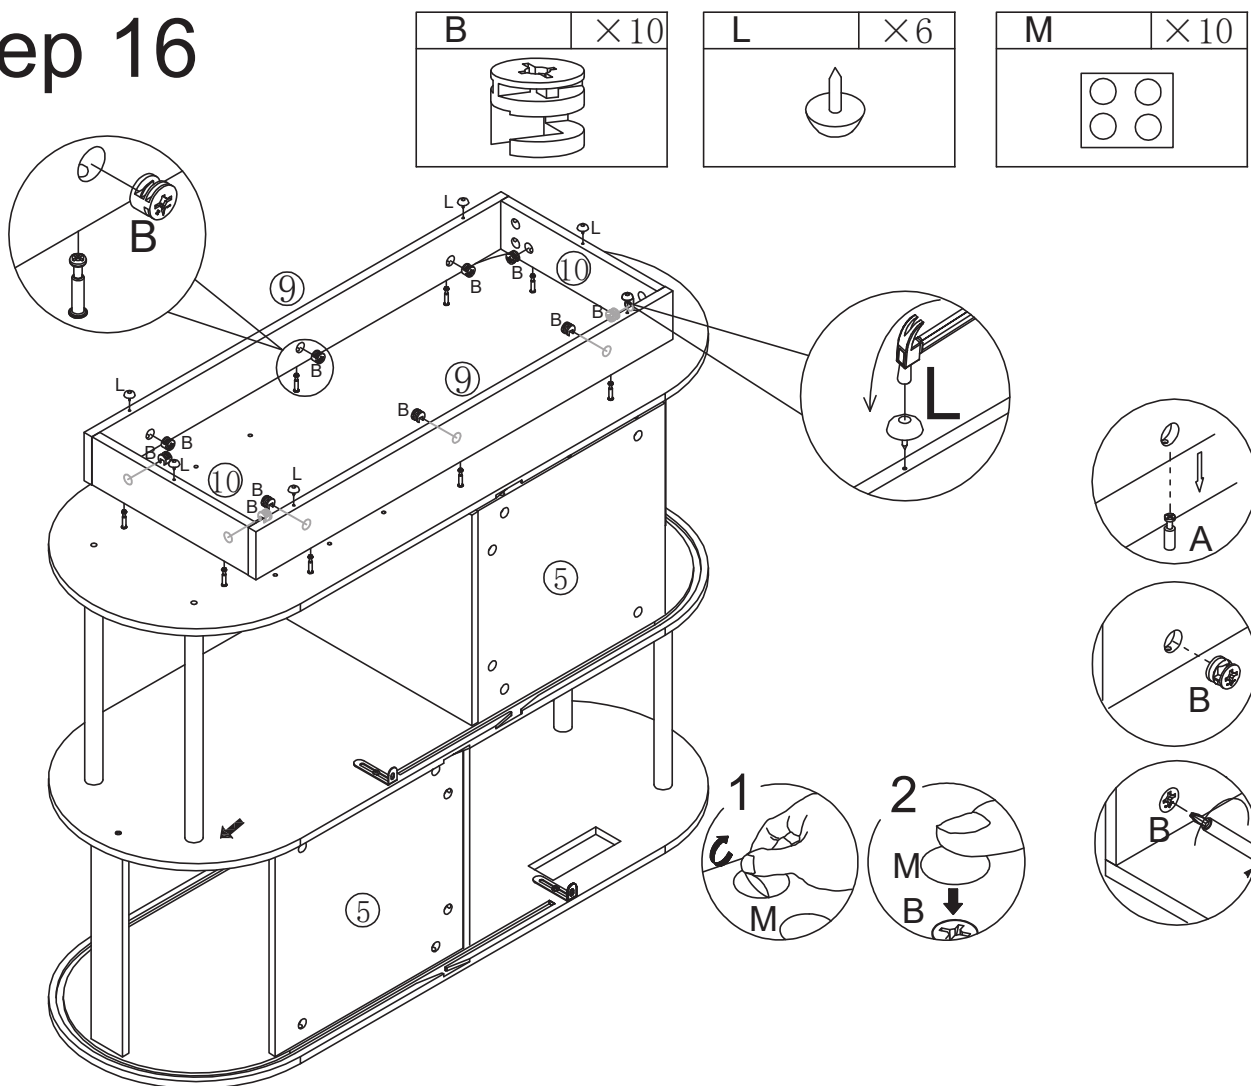


Step 17

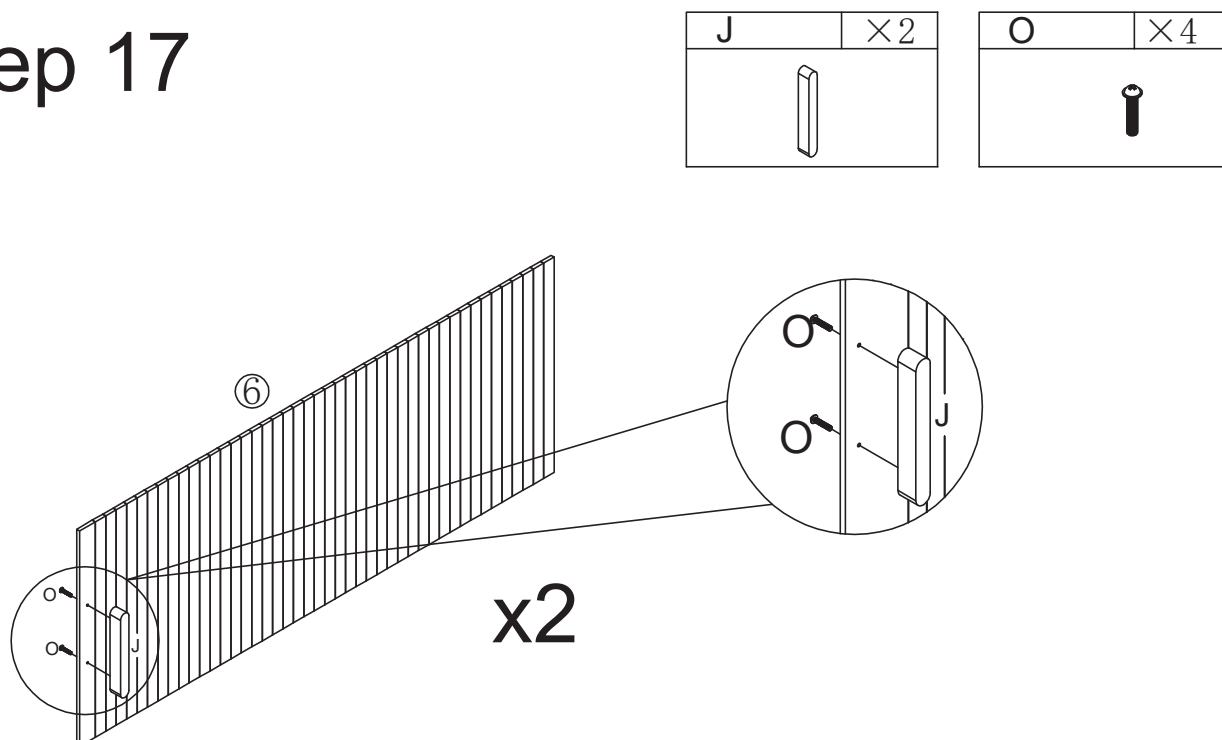





Step 18

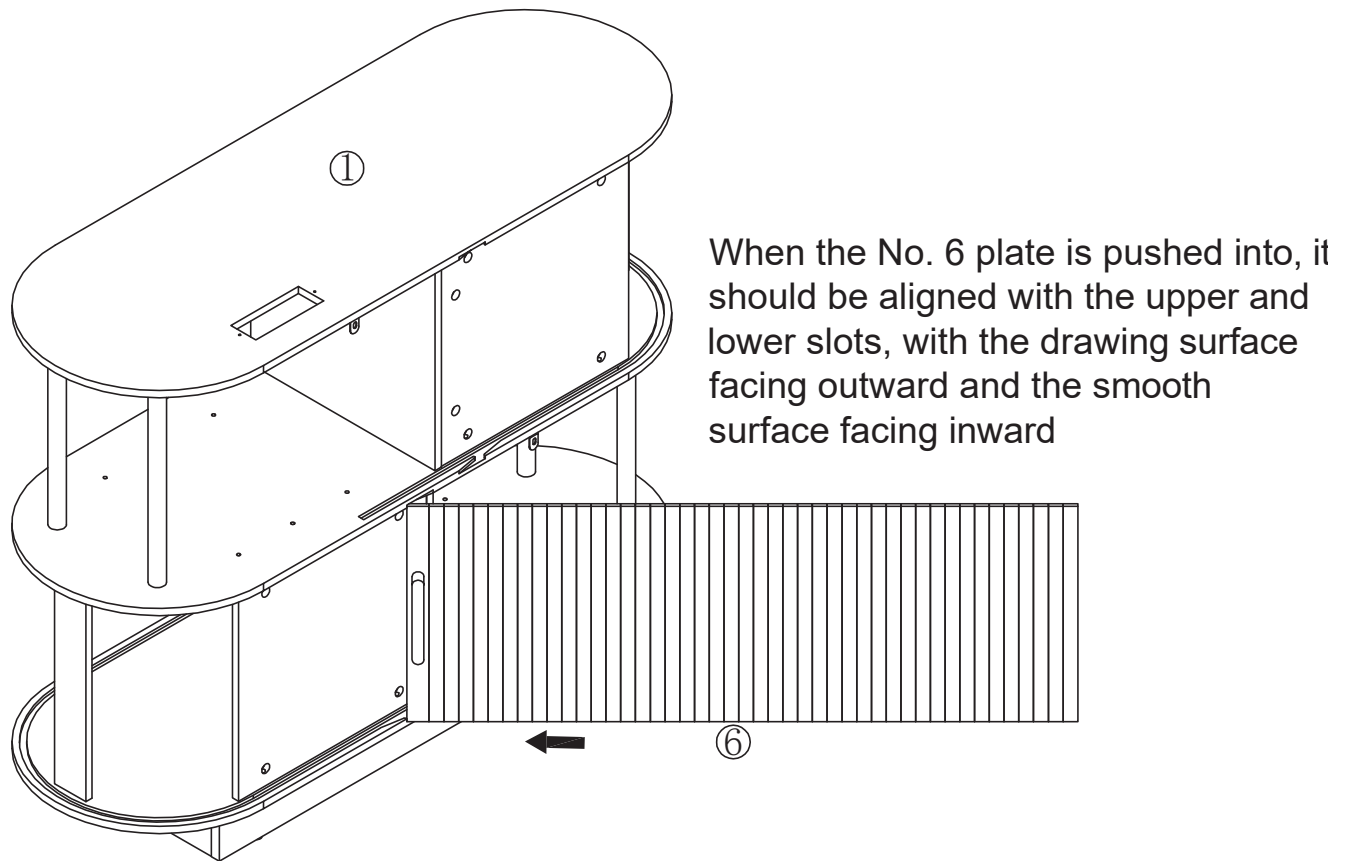



Step 19

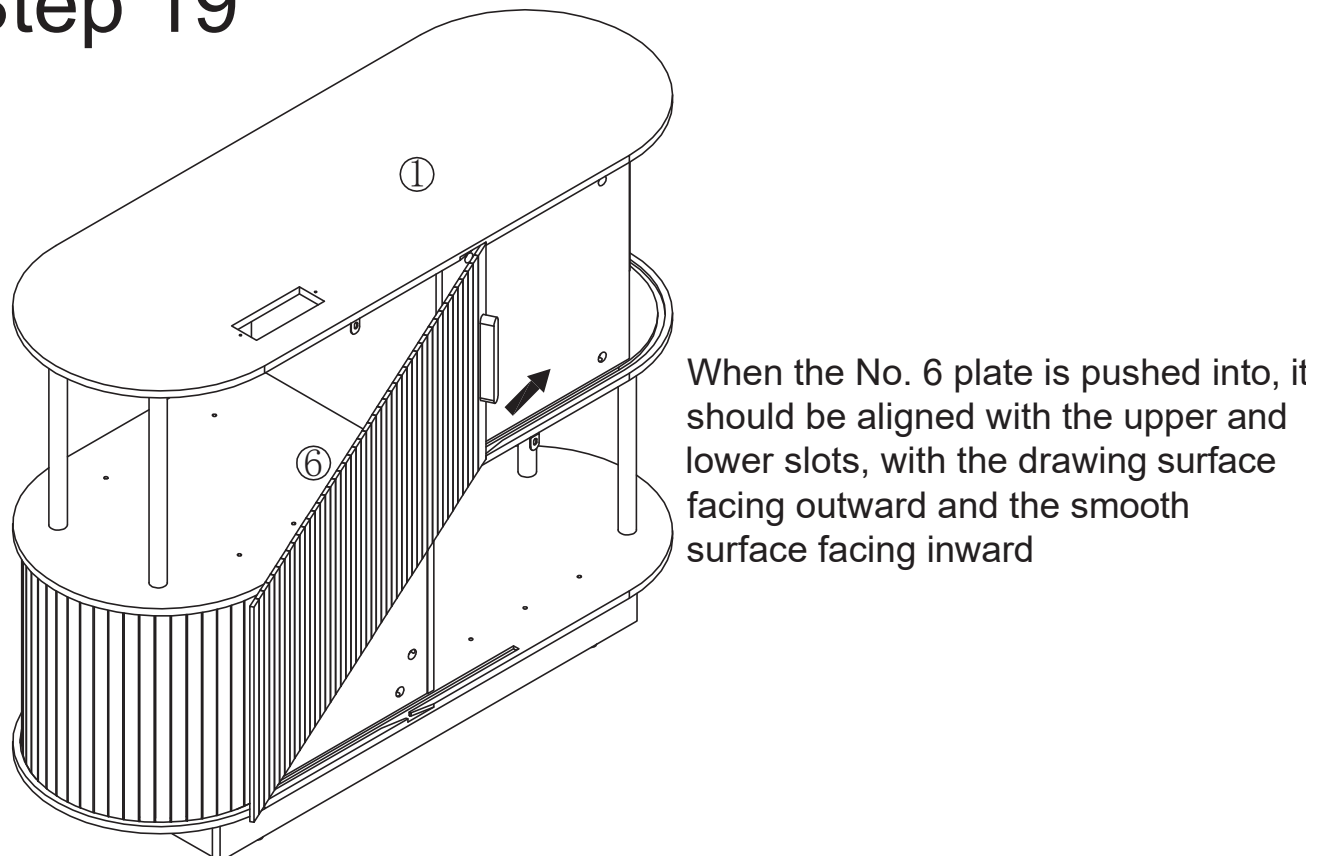


Step 20

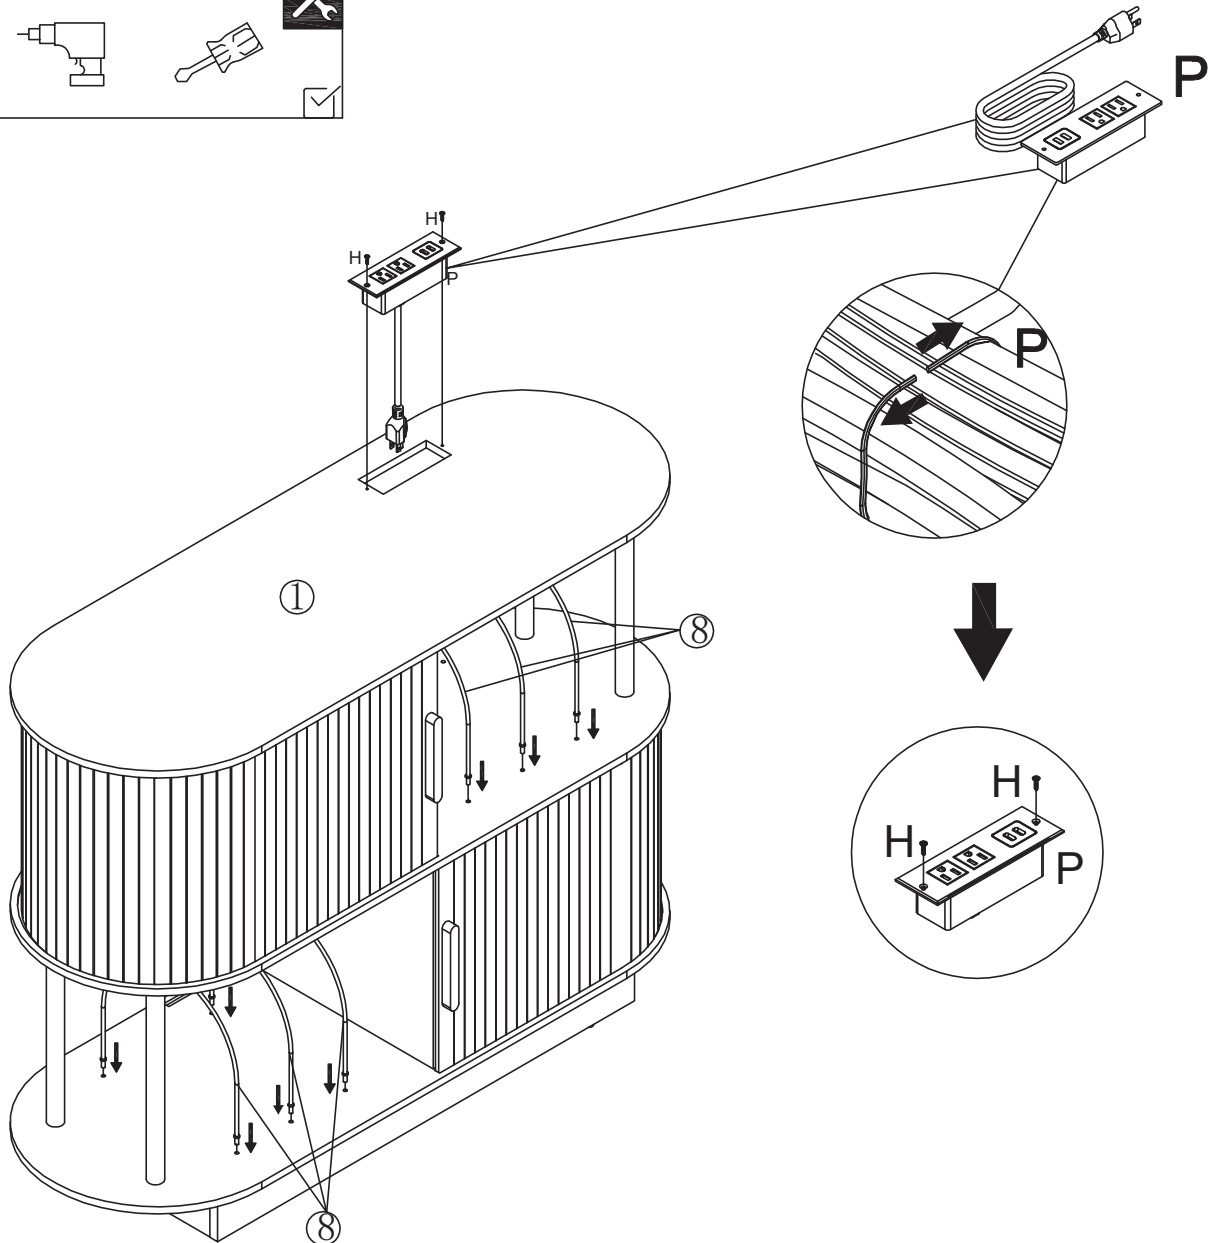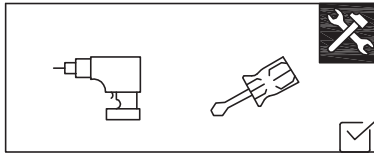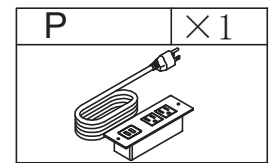
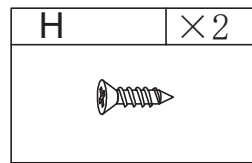


Step 21

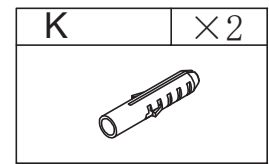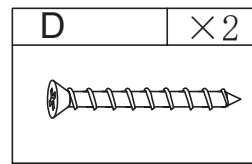

Please install the anti-tipping device correctly according to the dimensions shown in the diagram

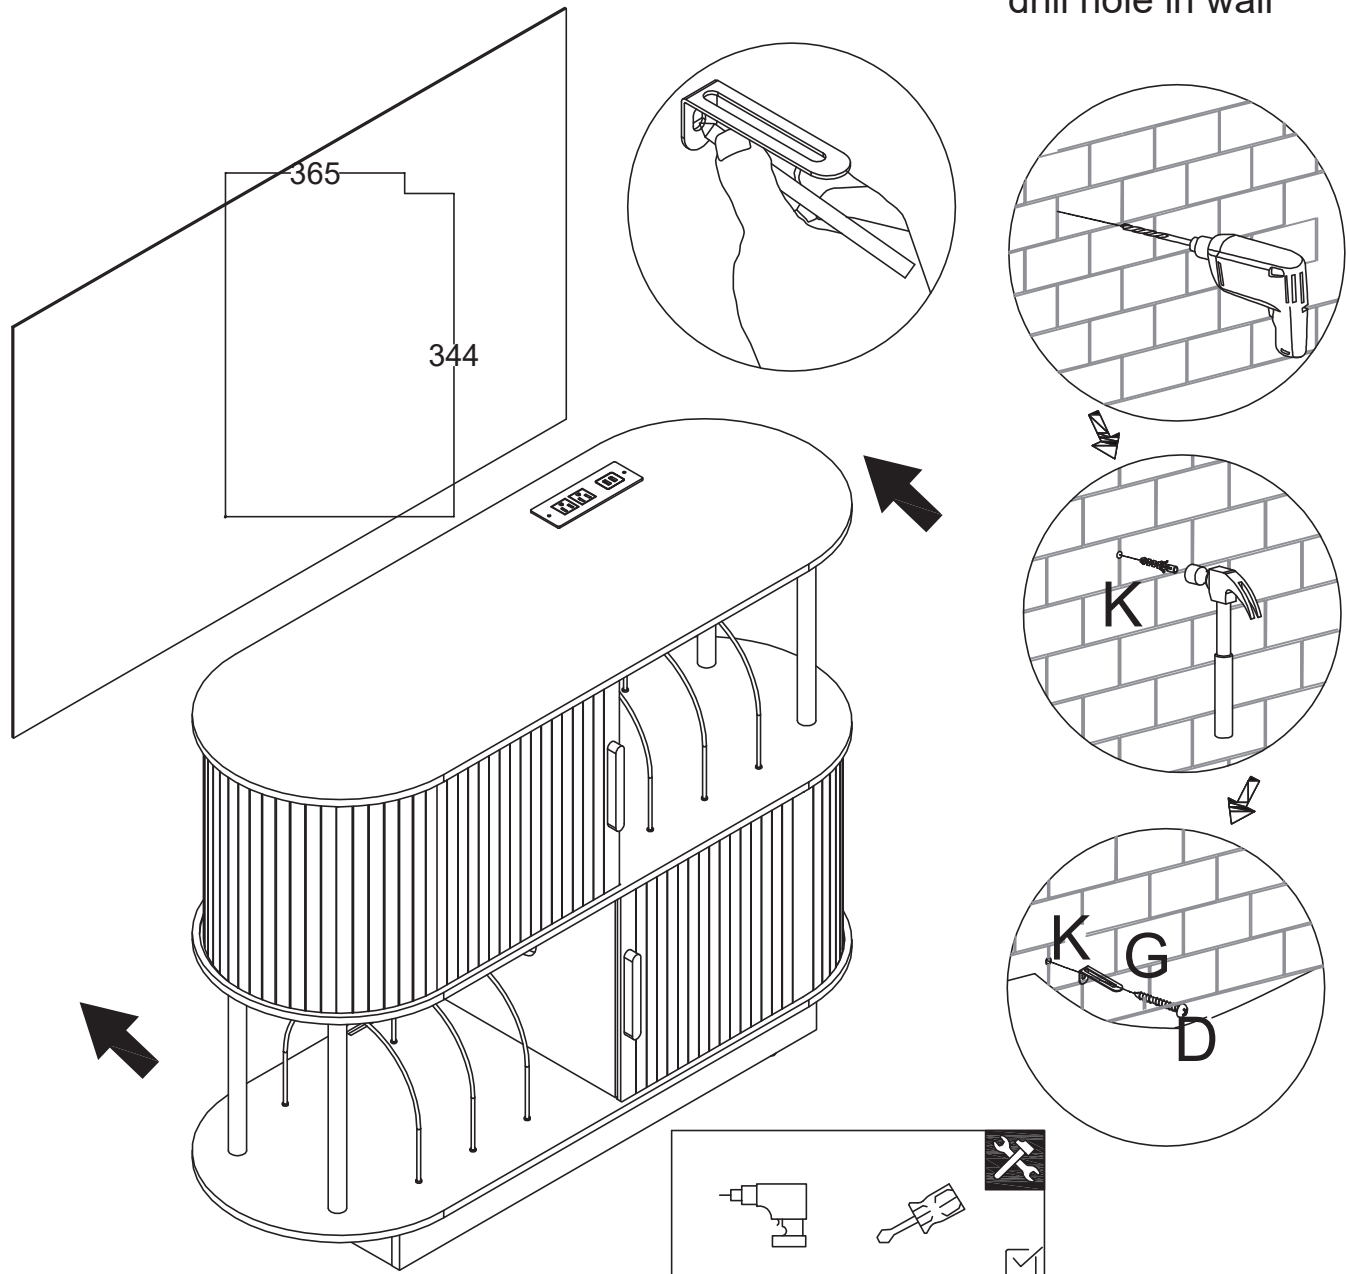

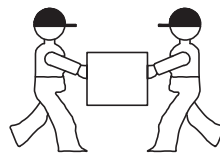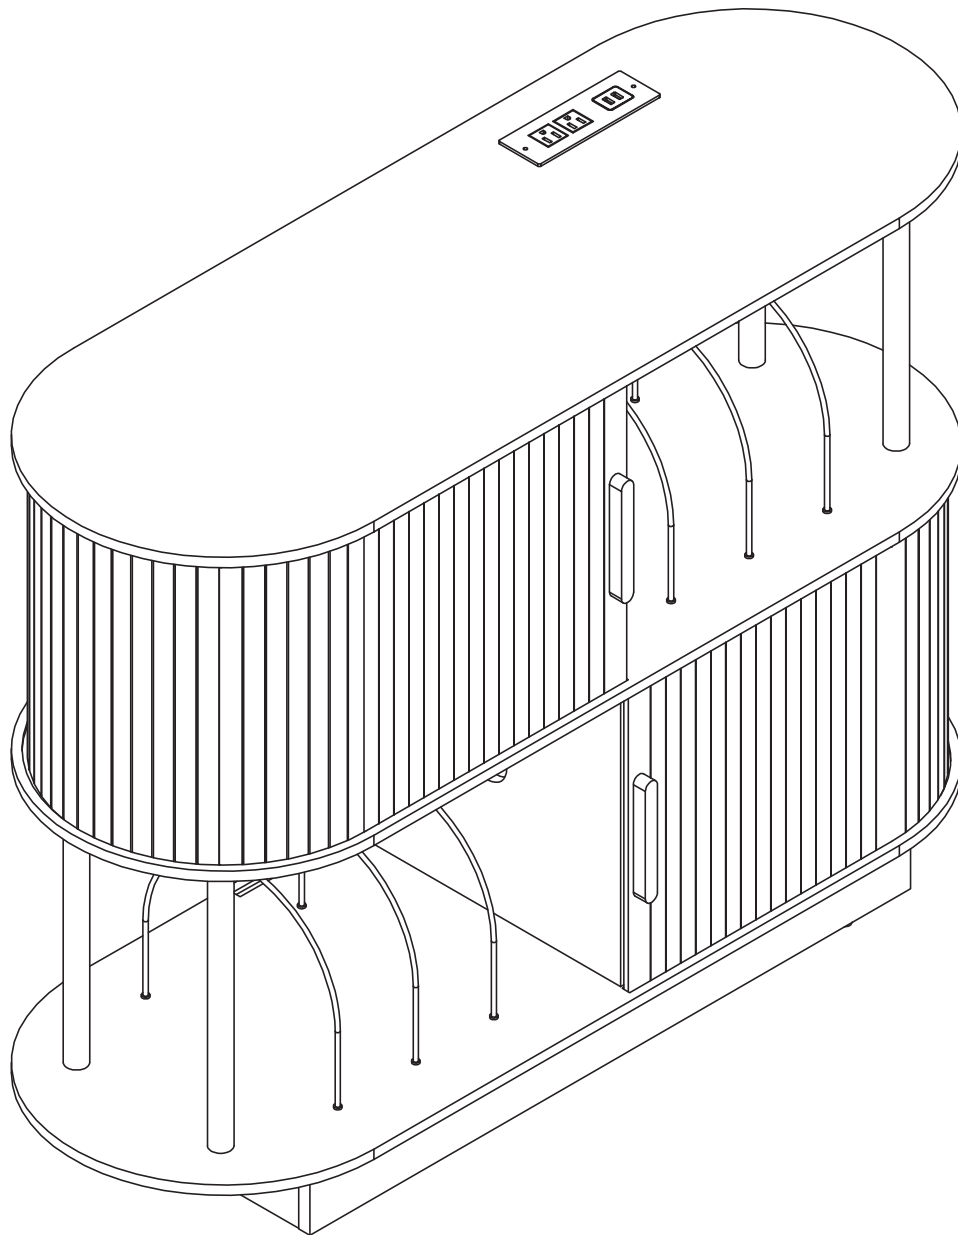

Two people work together to move the table.
Make sure you lift it off the ground.
Don't push and pull.