
6'×4' Tool Storage Shed ASSEMBLY MANUAL

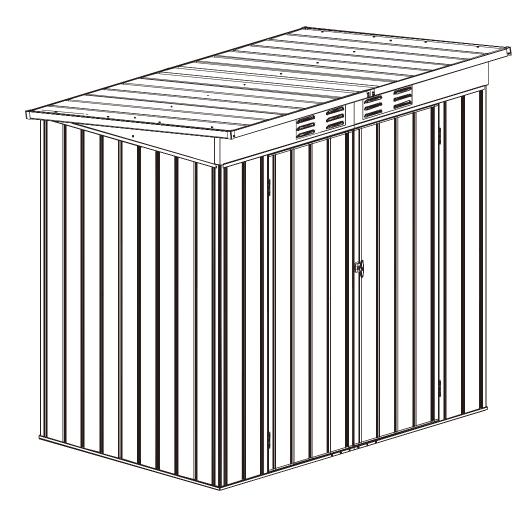


MODEL#: LGCF1601A

Missing part? Damaged? Contact us via email at service@domioutdoorliving.com

www.domioutdoorliving.com

Copyright 2022-2024 domi LLC. I All Rights Reserved.

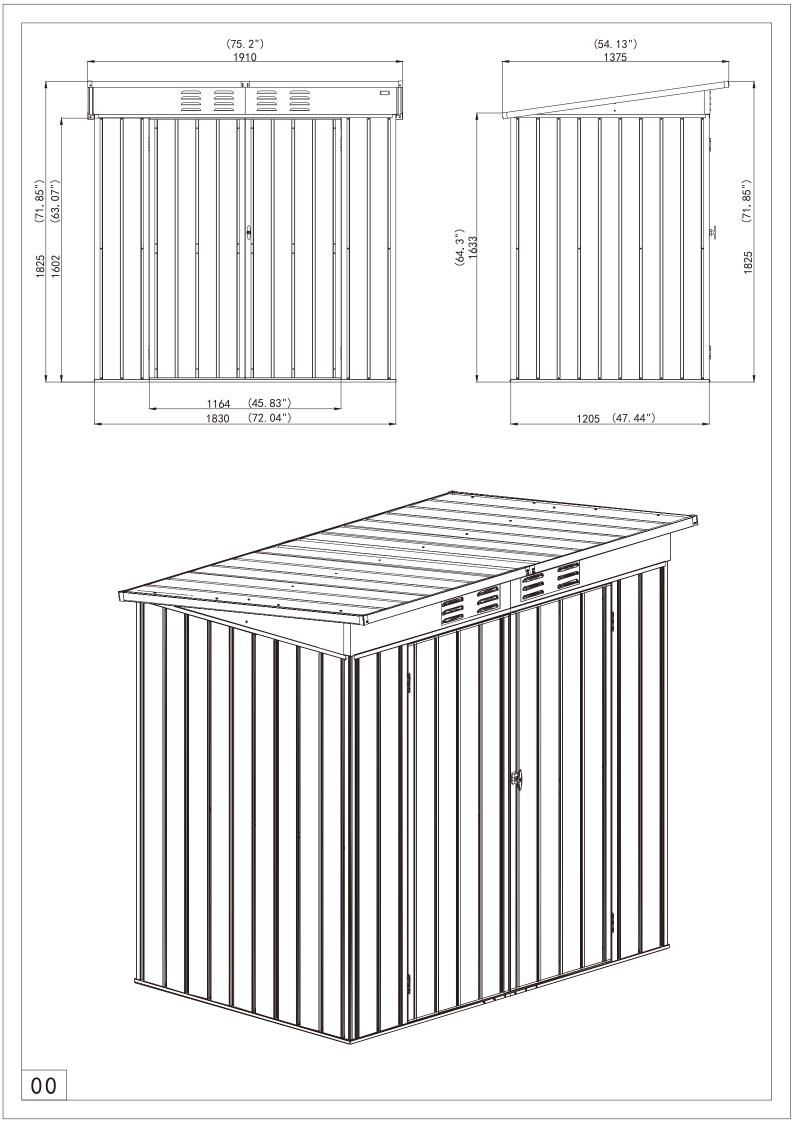

Pre-assembly



1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.


Warning & Attention


-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;


-It would be much easier to assemble the product with three or more people;


-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.


 \blacktriangle Use bolts to secure the frame to the ground to against the strong wind.

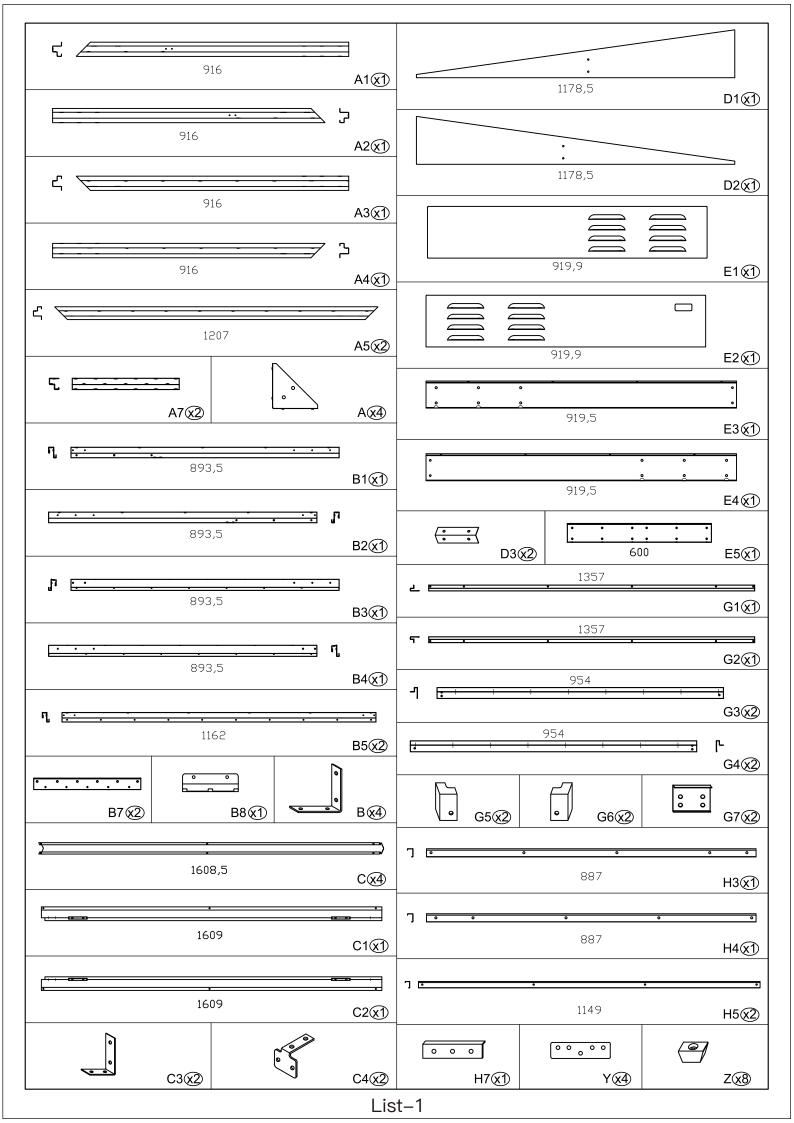

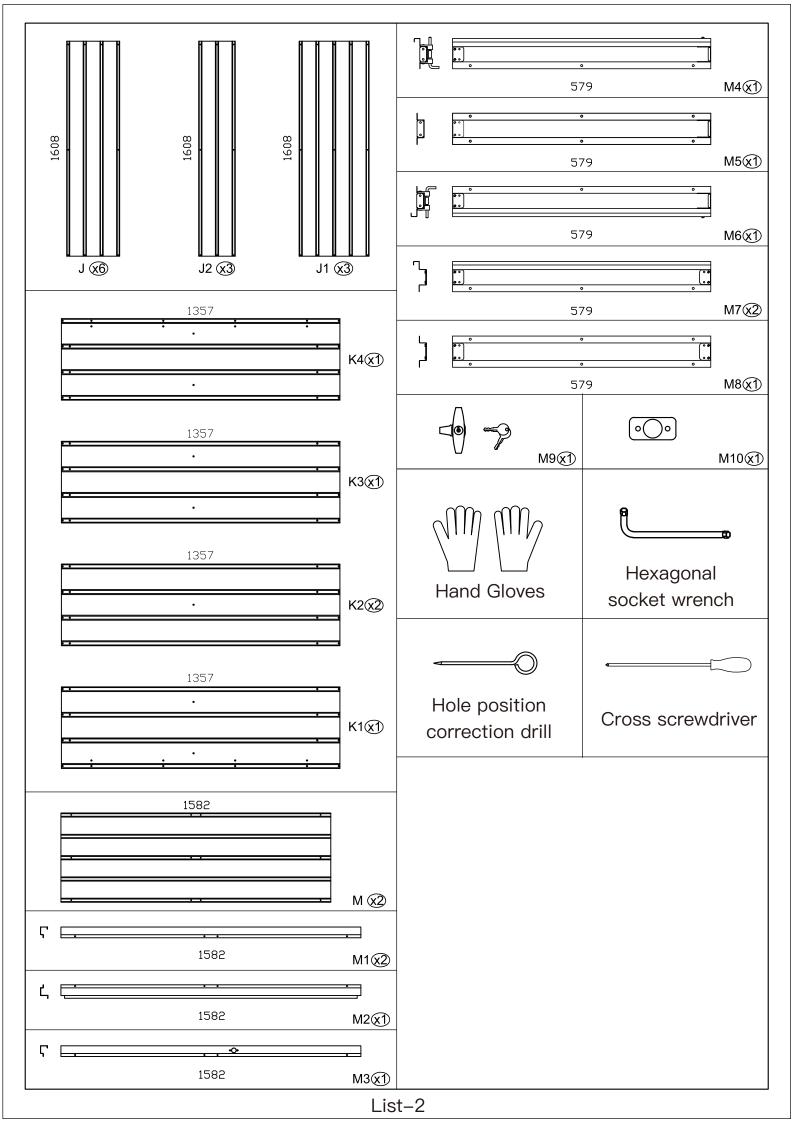


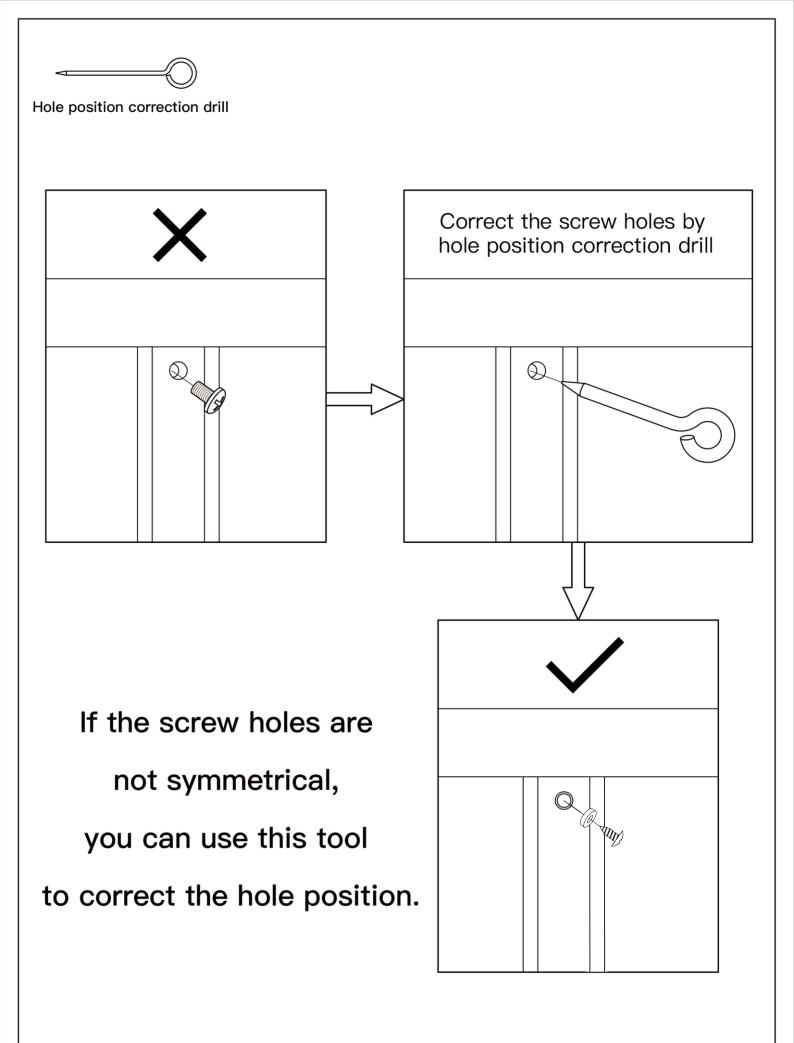


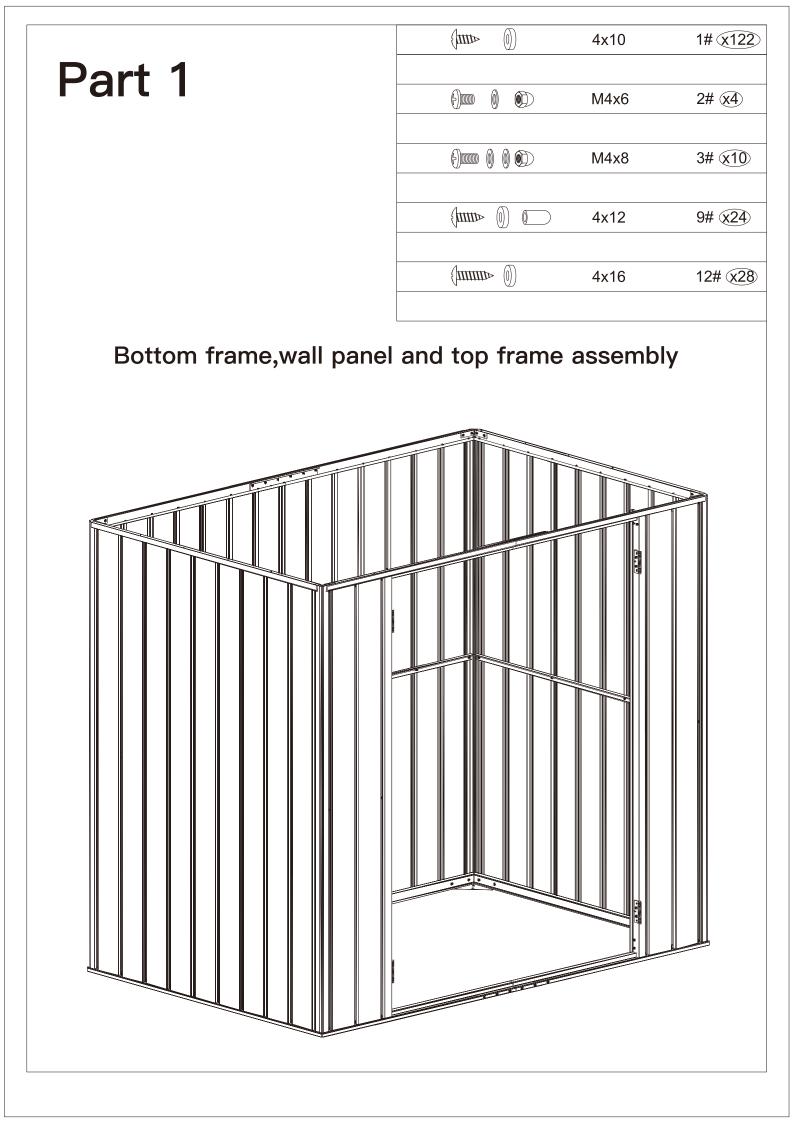


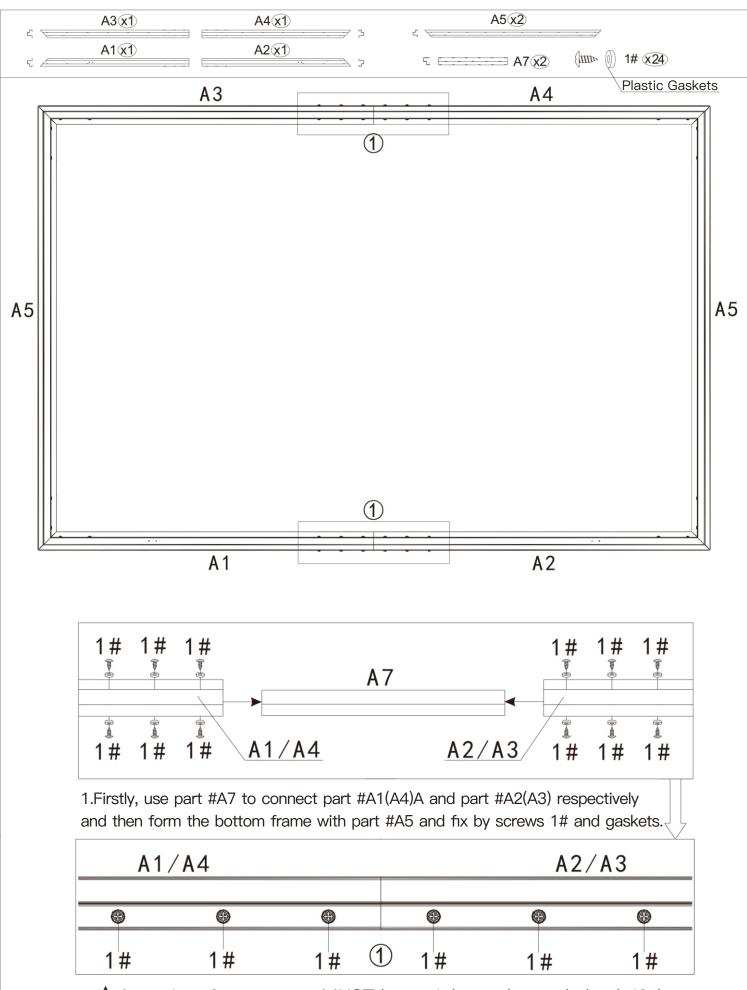


Attention: four corners MUST been right angles and check if the two diagonal distance of square is equal by tape measure.

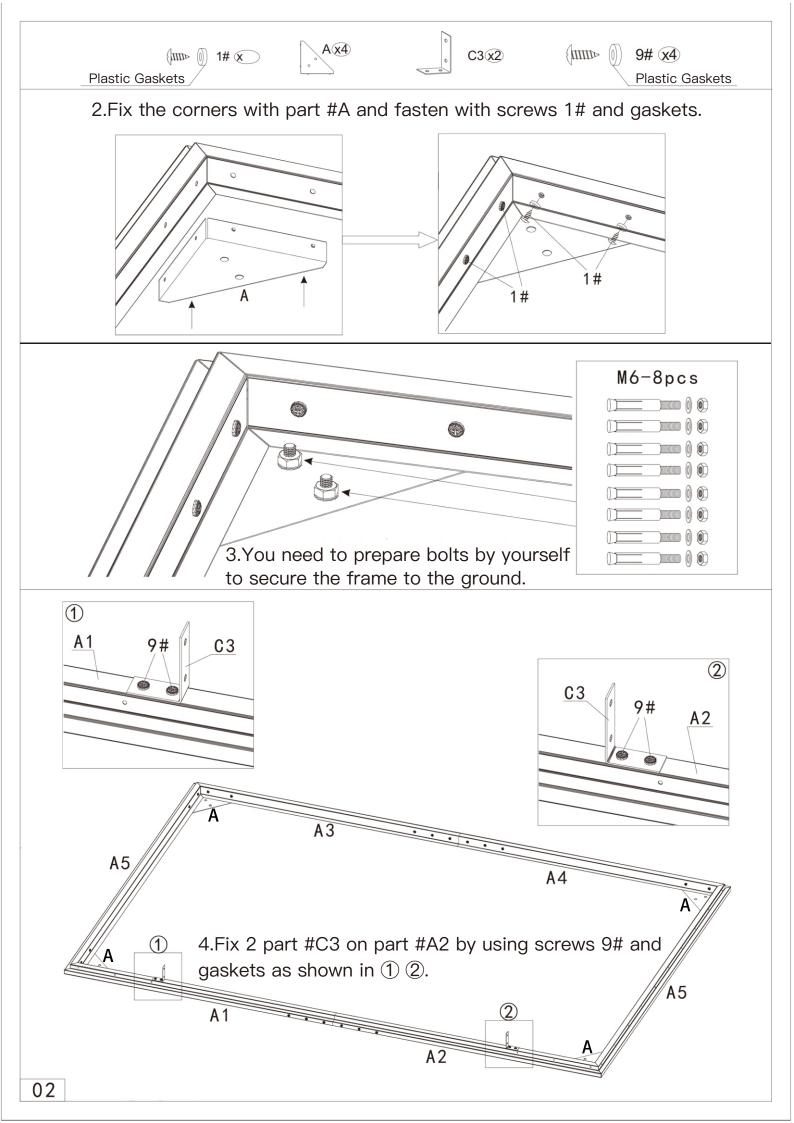

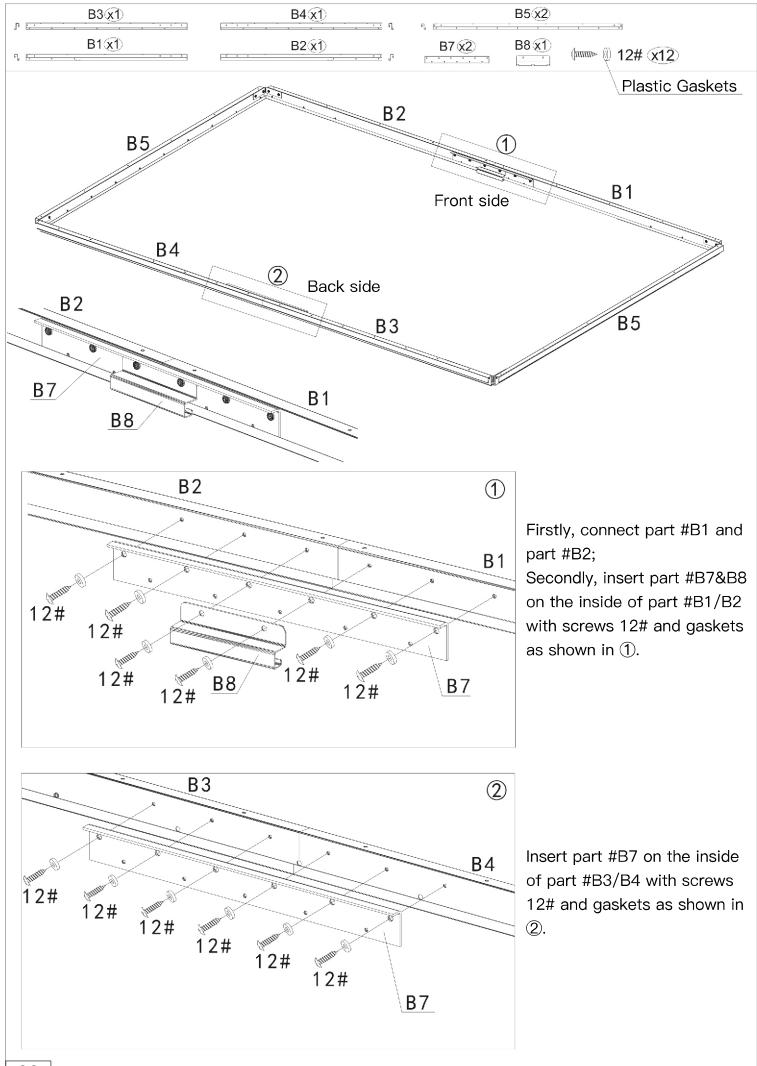

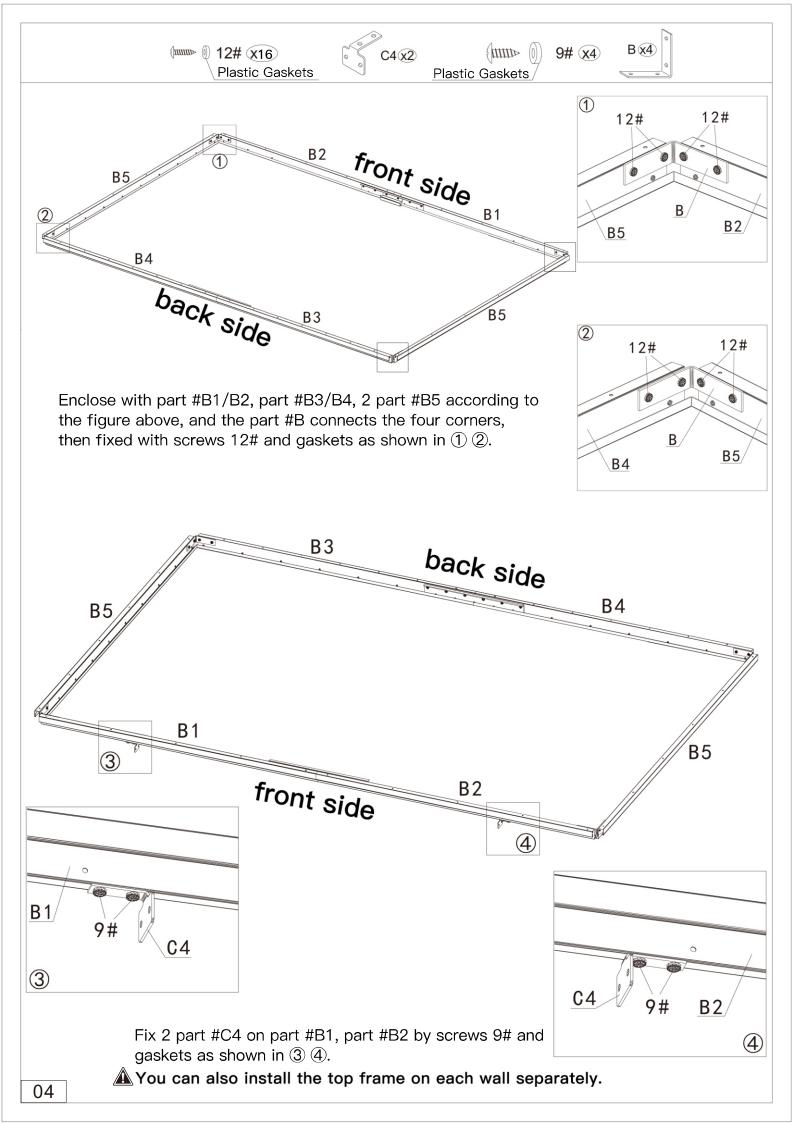


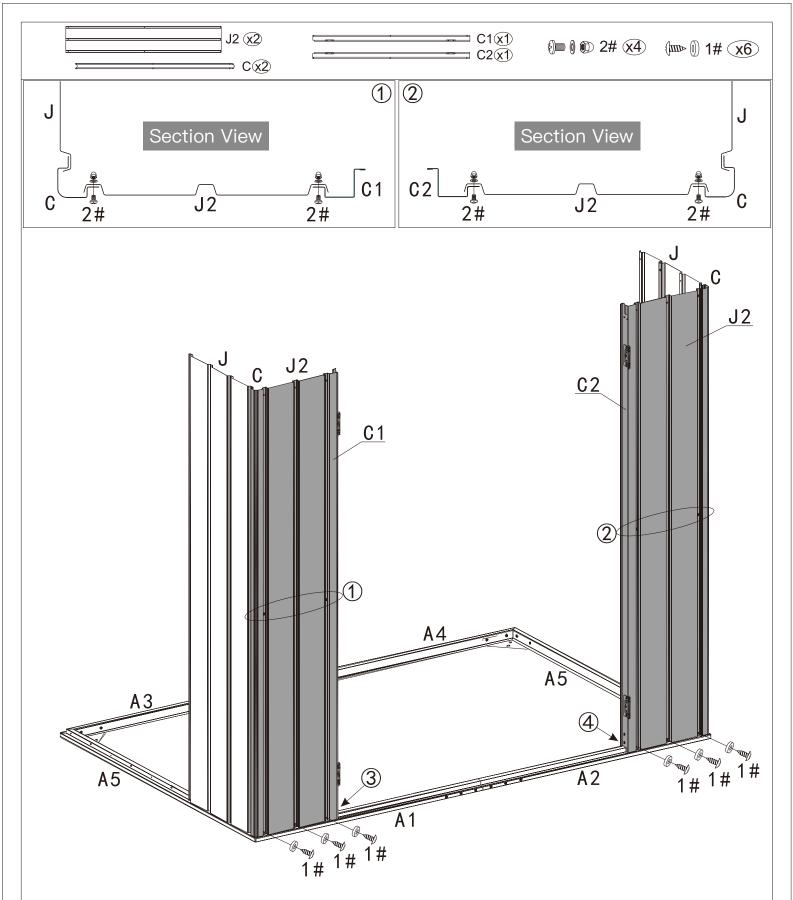


①:Use 2 screws 2#, gaskets and caps to connect part #C/J2/C1 to form a front side wall panel.


Place the assembled front side wall panel (#C/J2/C1) on the bottom frame(A1), using 3 screws 1# and gaskets to fix.


(2) Repeat the above procedures to assemble another front side wall(part #C2/J2/C) to the bottom frame A2.

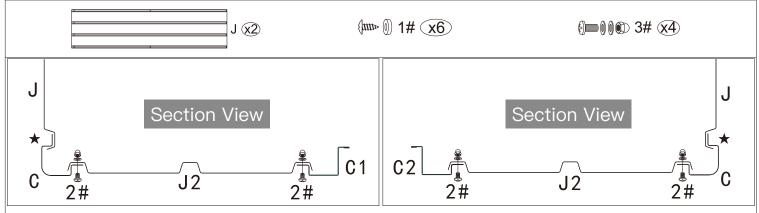

Place part#J on the bottom frame(A5), using 3 screws 1# and gaskets to fix. Attention: To ensure the stability of the wall panel(J) during assembly, you can temporarily reinforce this position(\Rightarrow) with screws 3#, and replace it with other correct screws when the next installation is made. **Repeat the above procedures to assemble the other side.**

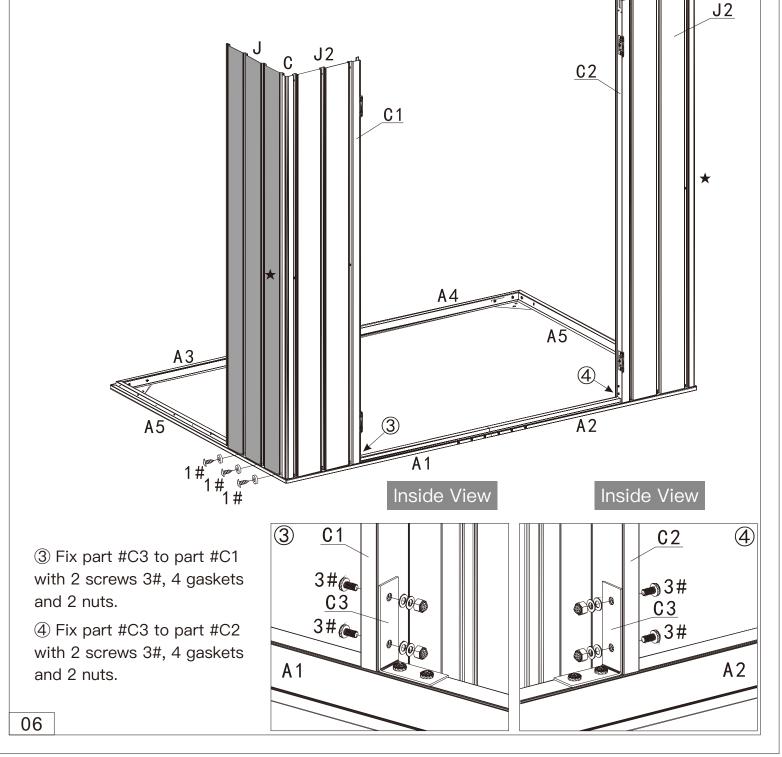

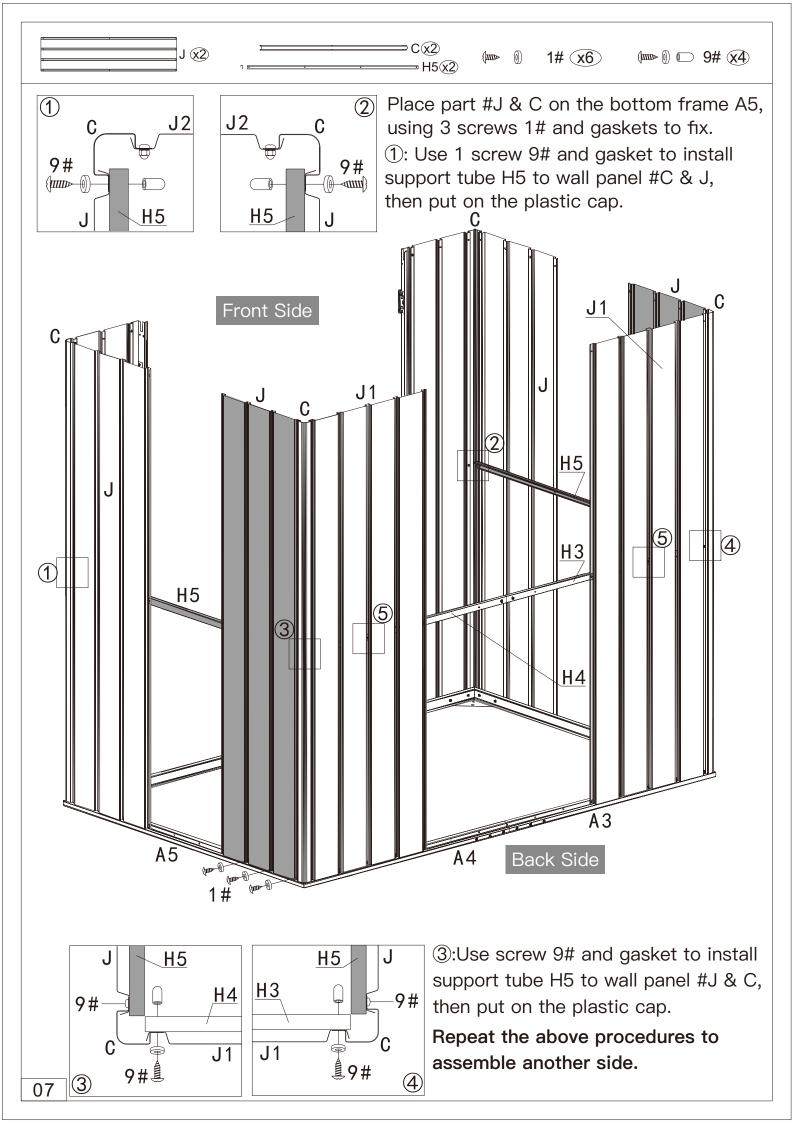

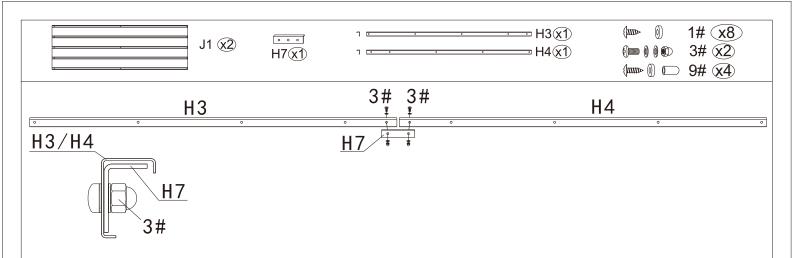

Use part#H7 to connect part#H3 and part#H4, and fix by screws 3#, 2 gaskets and nuts to form a back wall support tube.


Place part #J1 on the bottom frame #A4, using 4 screws 1# and gaskets to fix.


(3): Use screw 9# and gasket to install support tube(H4+H3) to wall panel #J1 & C, then put on the plastic cap.

Place part #J1 on the bottom frame #A3, using 4 screws 1# and gaskets to fix.

(4): Use screw 9# and gasket to install support tube(H4+H3) to wall panel #J1 & C, then put on the plastic cap.

(5): Use 2 screws 9# and gaskets to install part# (H4+H3) with 2 part#J1, then put on the plastic caps.

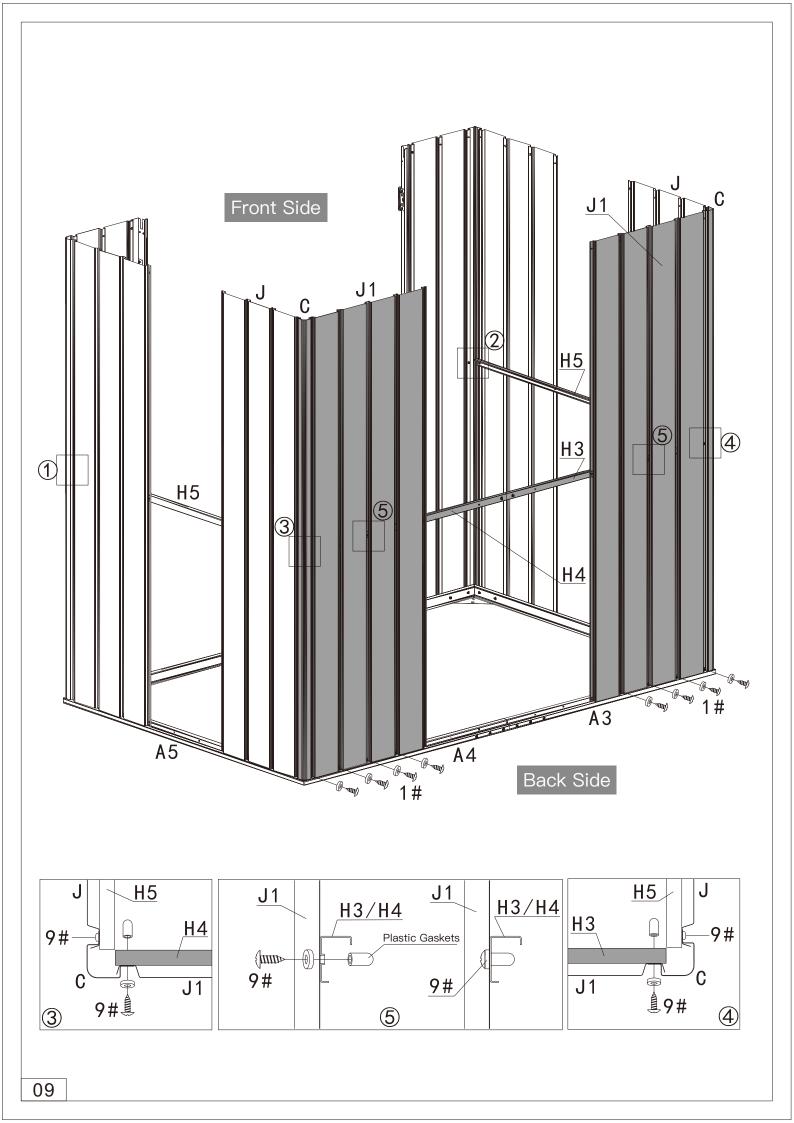



Step 1: Use 4 screws 1# and gaskets to fix part#J on the bottom frame A5.


Step 2: Use 2 screws 9# and gaskets to fix part#J with support tube# H5, then put on the plastic caps to form a whole side wall.


Repeat the above procedures to assemble another side wall.

10

Step 3: Use 7 screws 1# and gaskets to fix part#J2&J1 on the bottom frame (A4 & A3) .

Step 4: Use 4 screws 9# and gaskets to fix part#J2&J1 with support tub (H3+H4), then put on the plastic caps to form a whole back wall.

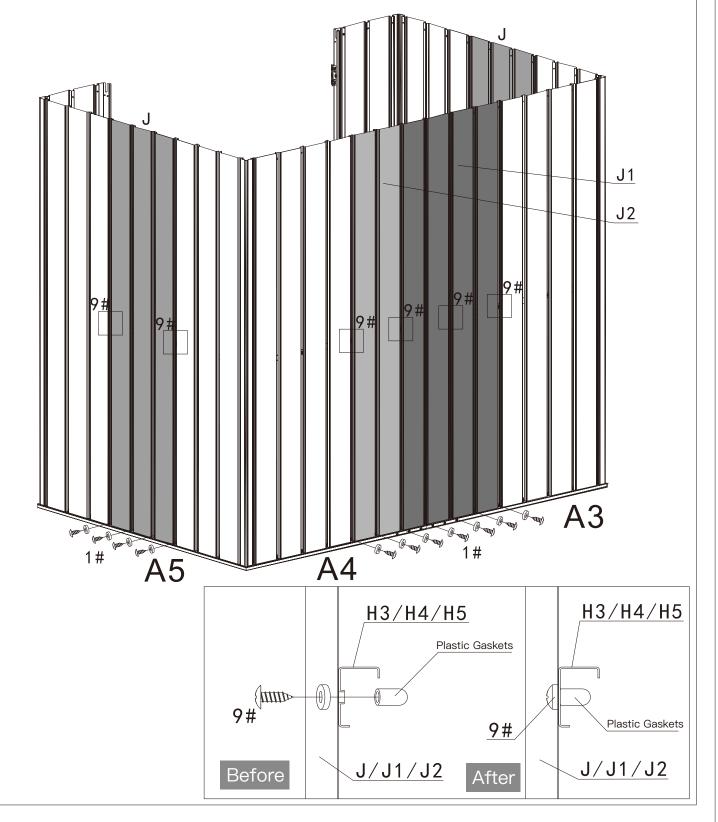


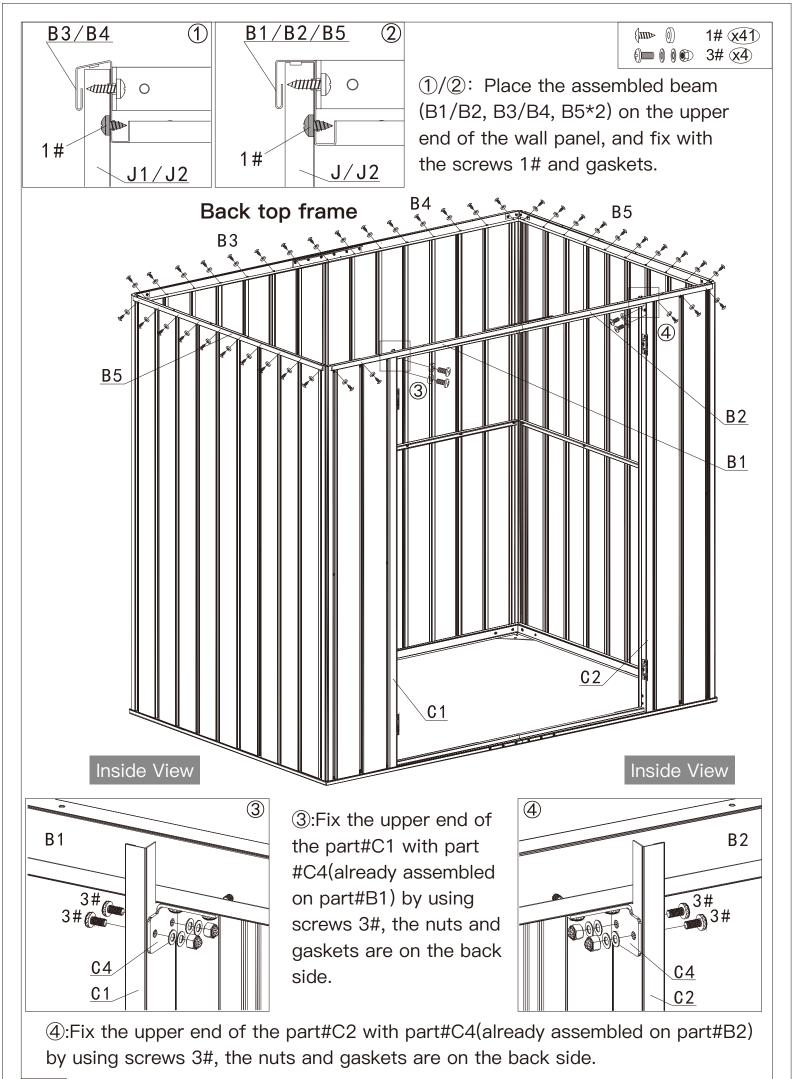


Part 2

()	4x10	1# <u>x</u> 36
	M4x6	2# (x74)
	M4x8	3# 20
	4x22	5# 🛞
(juure (j) (j)	4x12	9# 👀
	M4x8	15# 😒

Top beam and roof assembly

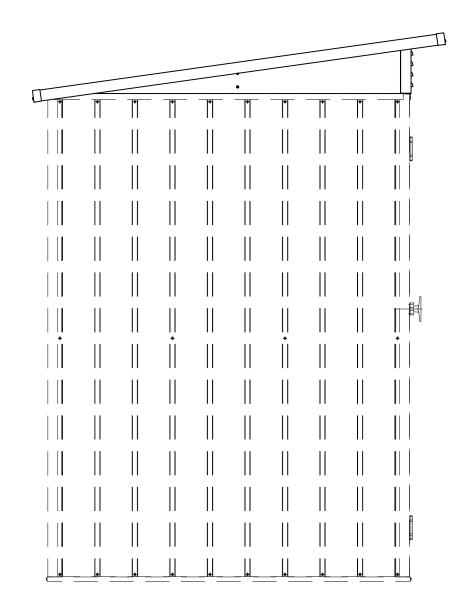


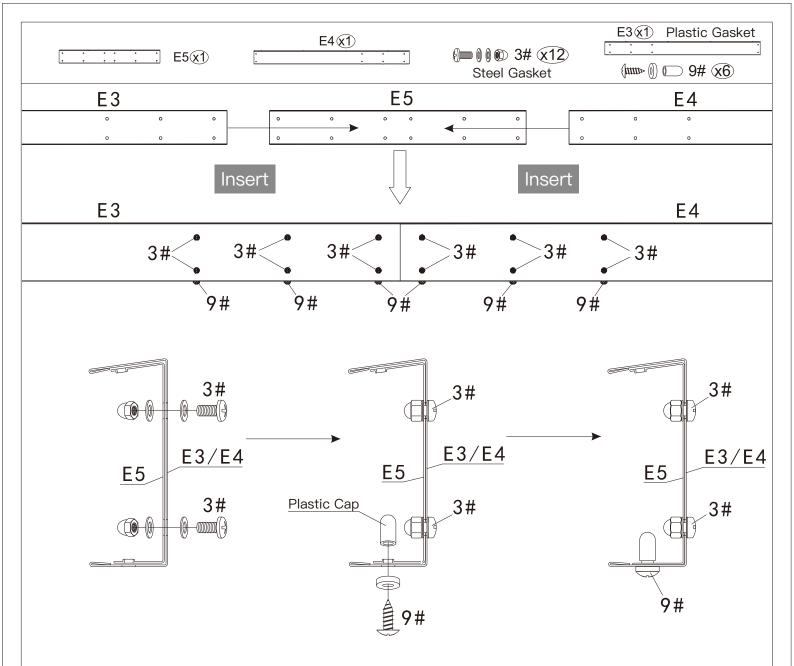

Step 1: Insert part #E5 to connect part #E3 & E4.


Step 2: Align the holes and fix them with 12 screws 3#, 24 gaskets and 12 nuts.


Step 3: Fix with 6 screws 9#, gaskets and plastic caps.

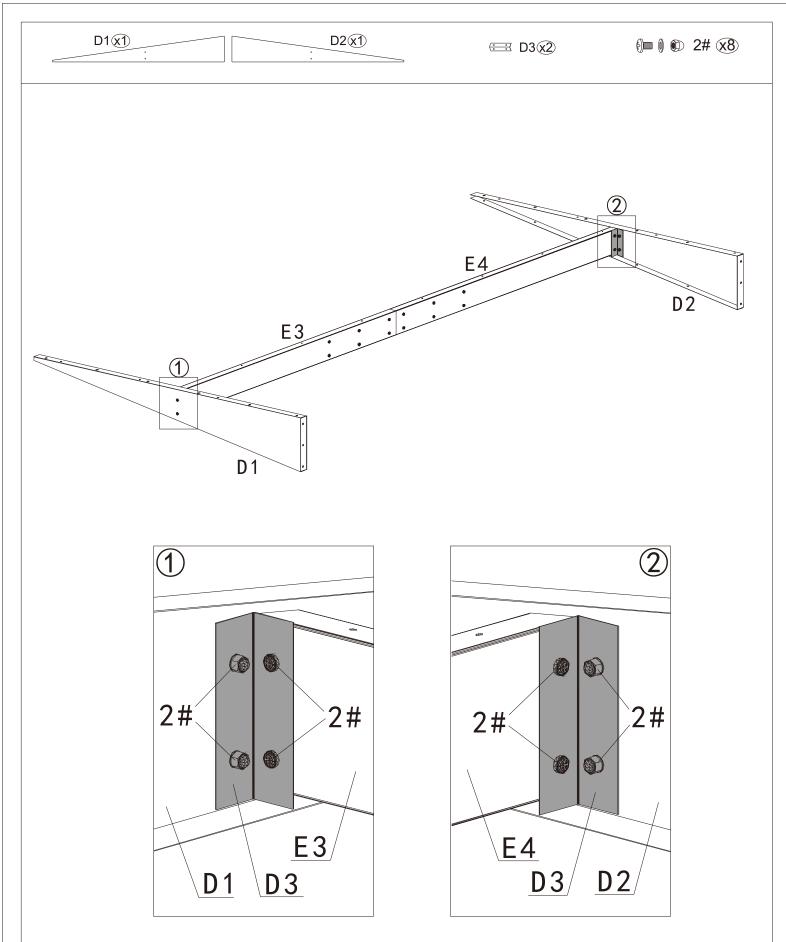



①: Use part #D3 to connect part #E3 with D1, and fix with 4 screw 2#, gaskets and nuts.

(2): Use part #D3 to connect part #E4 with D2, and fix with 4 screw 2#, gaskets and nuts.

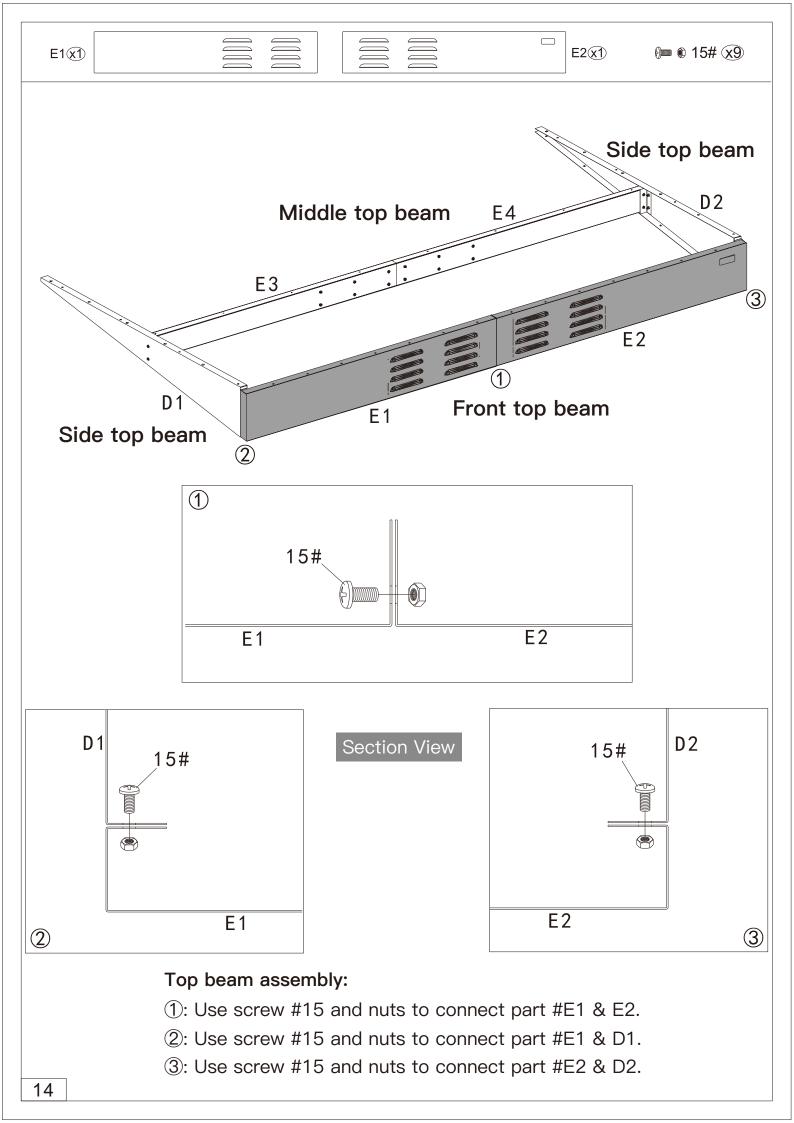


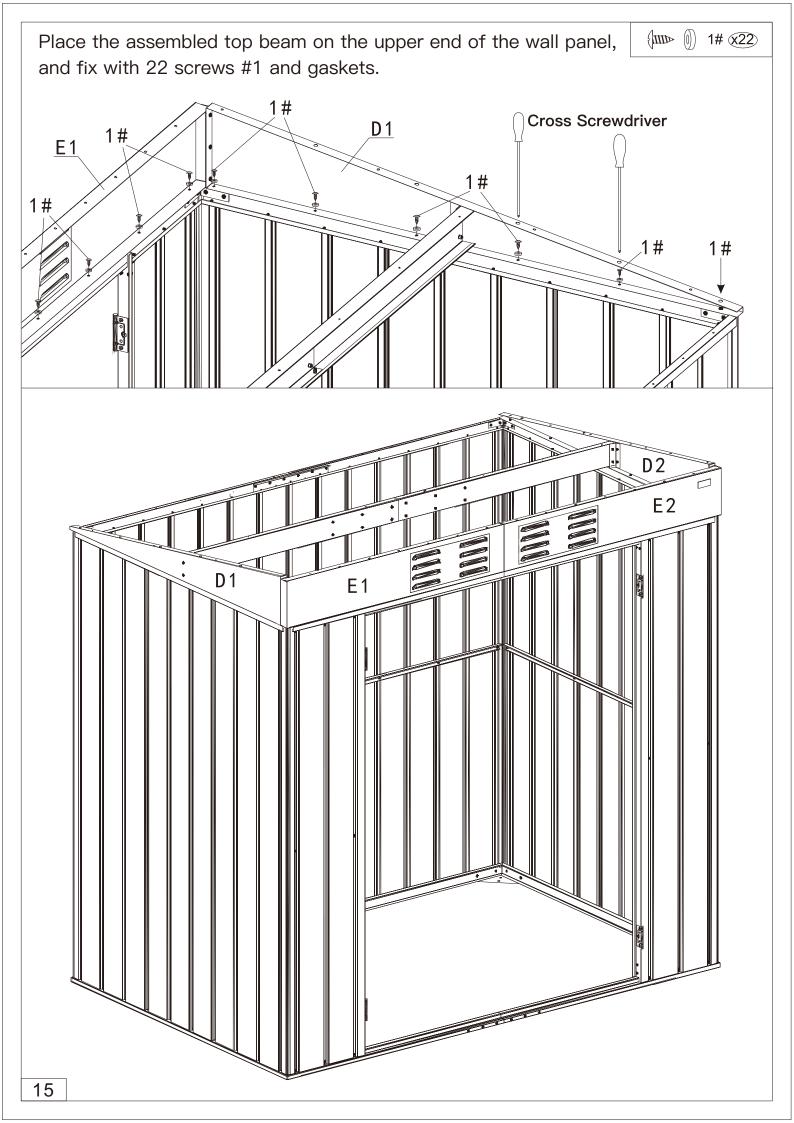


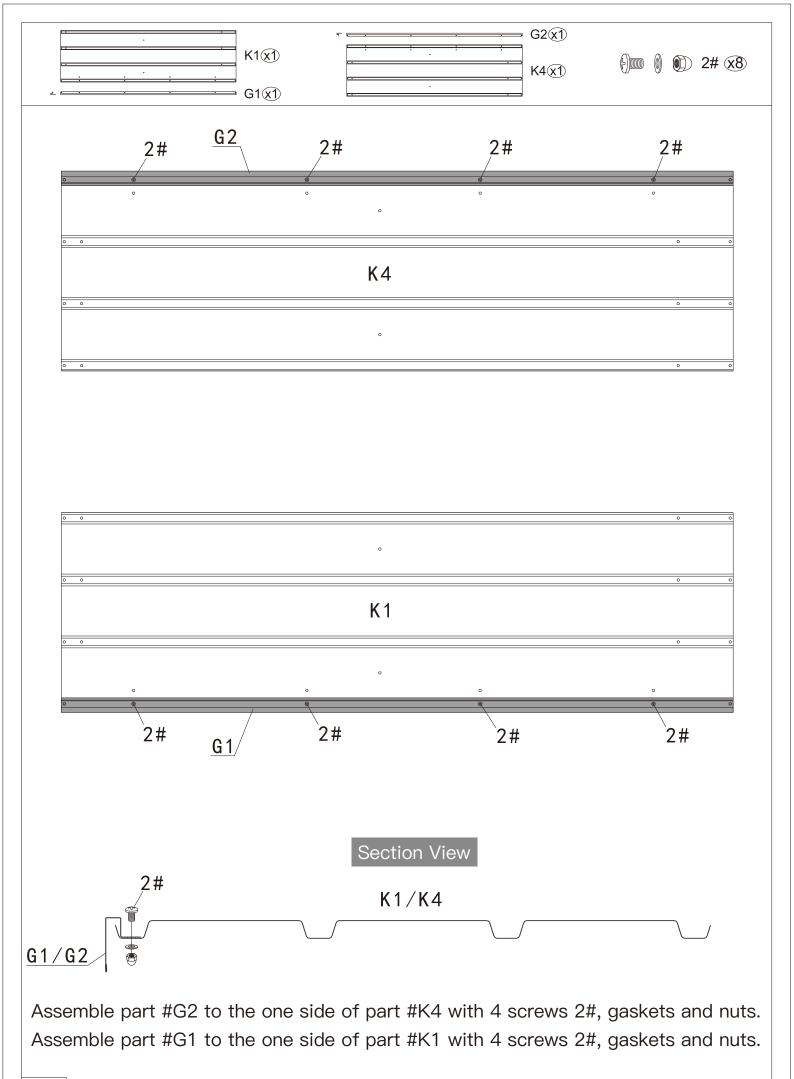

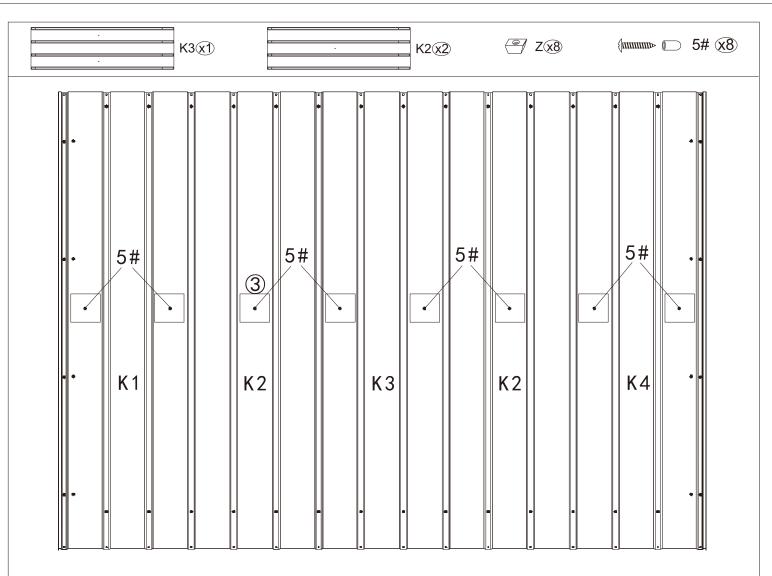

③: Part #Z shall be inserted at the gap between roof panels and middle top beam(E3+E4),then fix with 8 self-tapping screws #5 and caps to prevent rainwater intrusion.

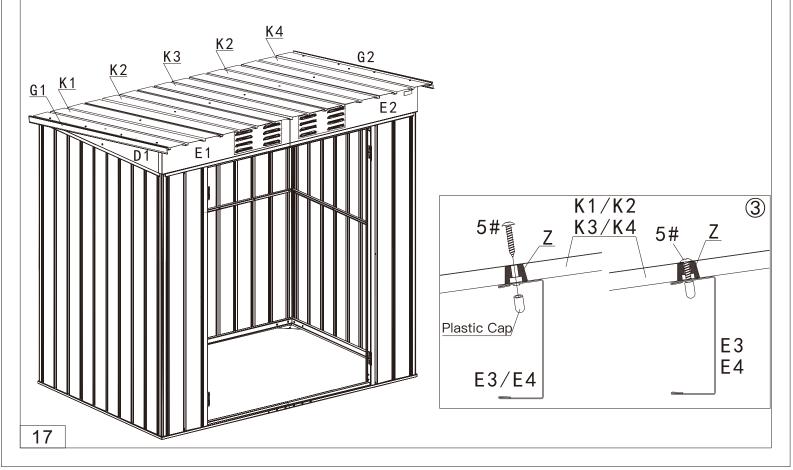


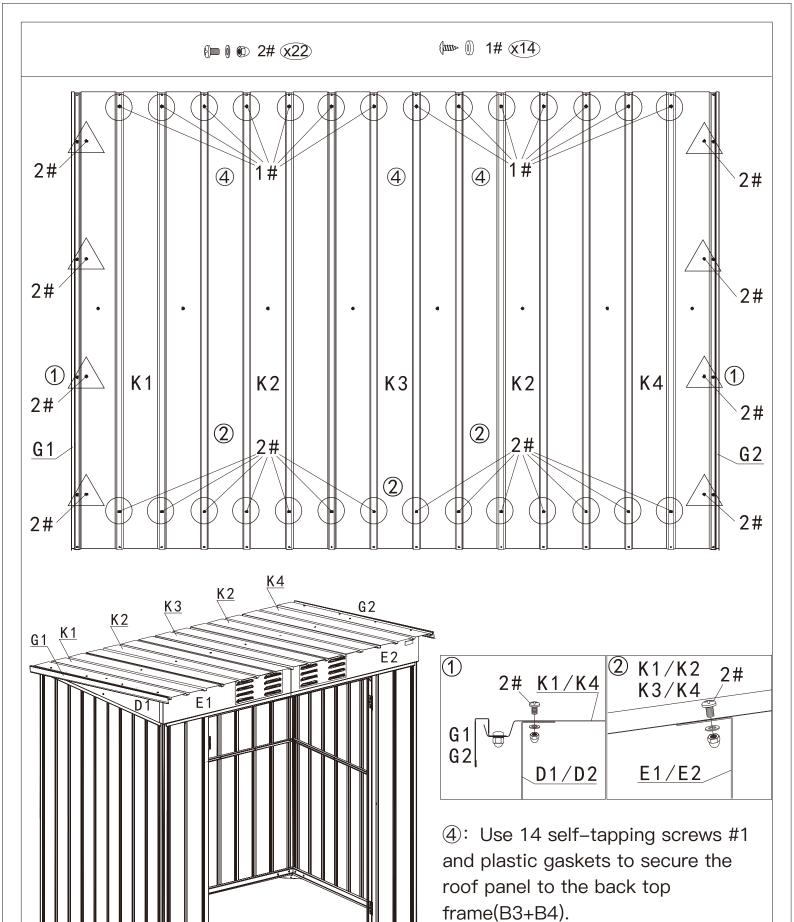



②:Use 14 screws #2, steel gaskets and nuts to secure the roof panel


to the front top beam(E1+E2).


(1):Use 8 screws #2, steel gaskets and nuts to secure the side of roof panel(K1/K4) to the side top beam(D1/D2).

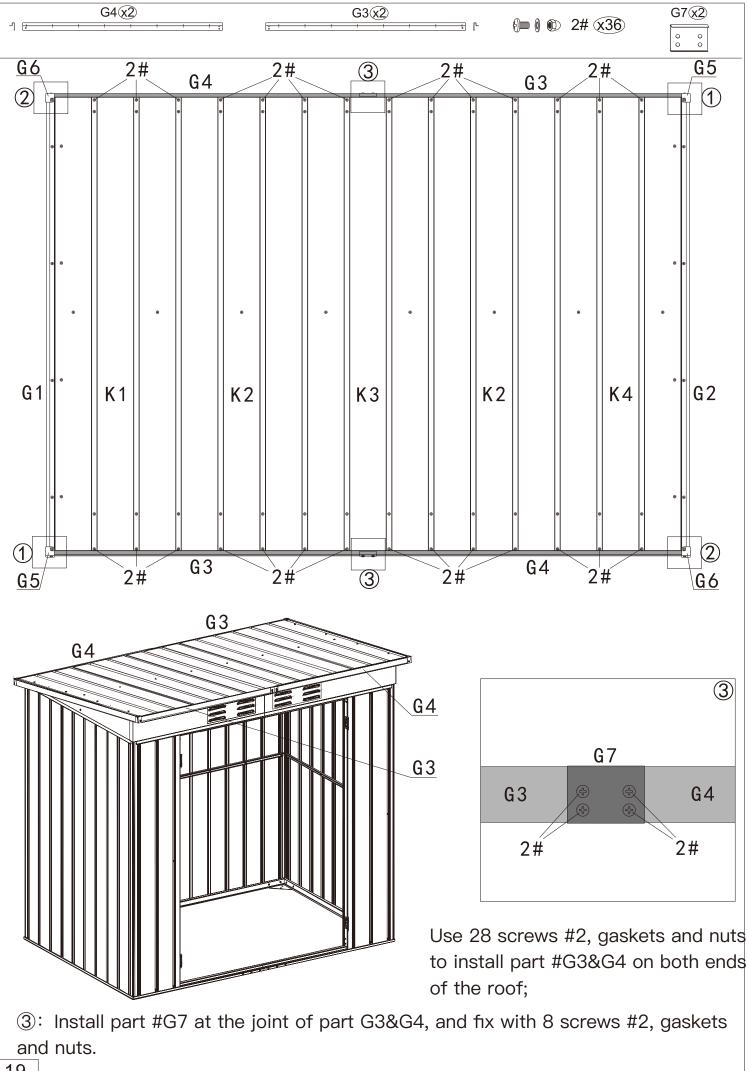


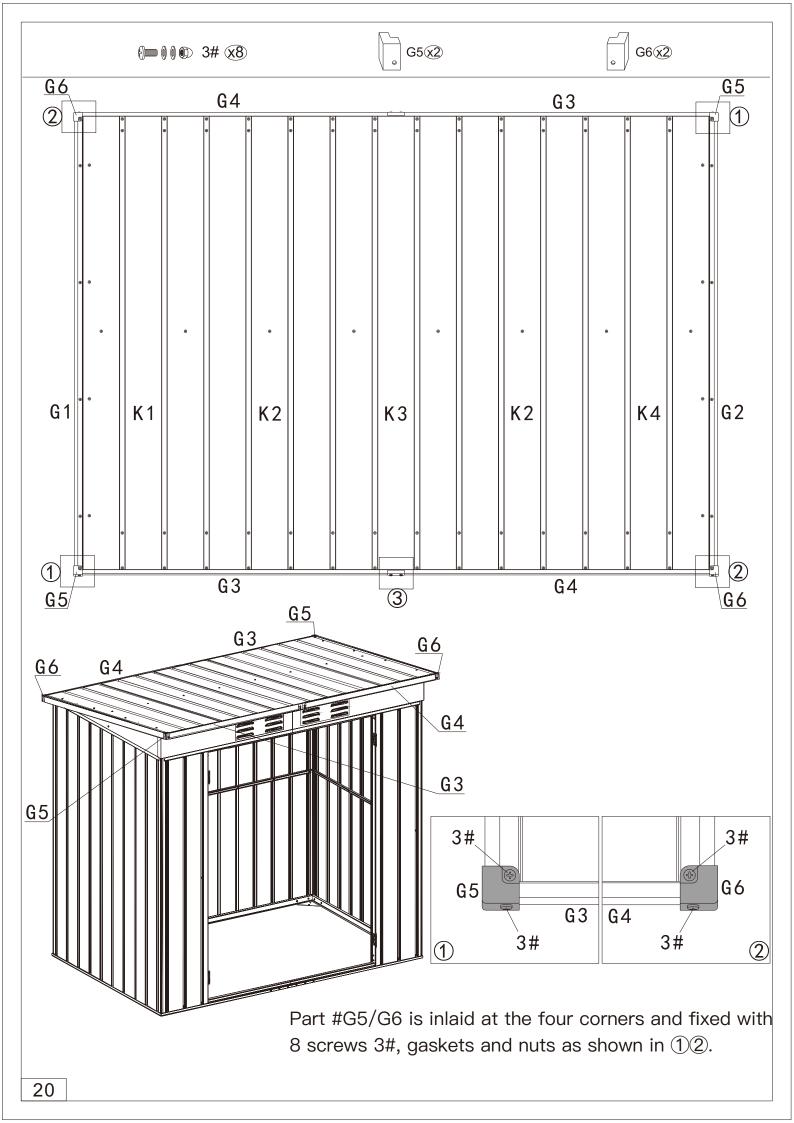


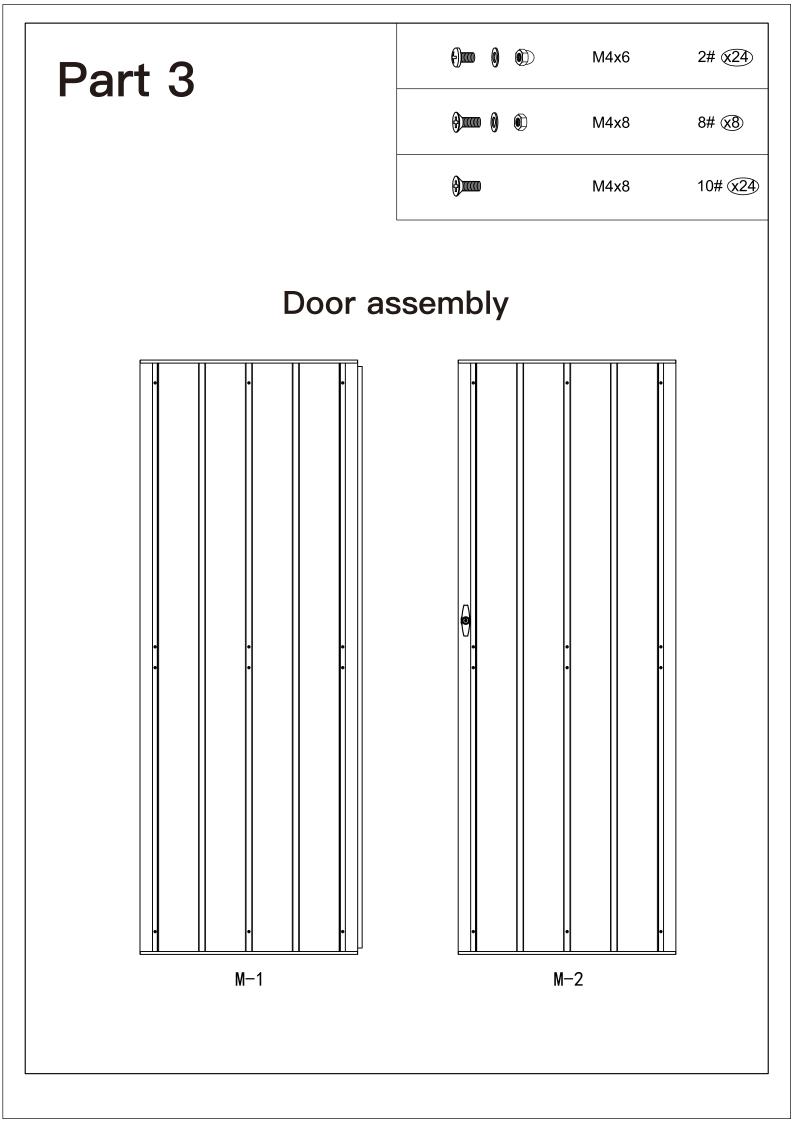

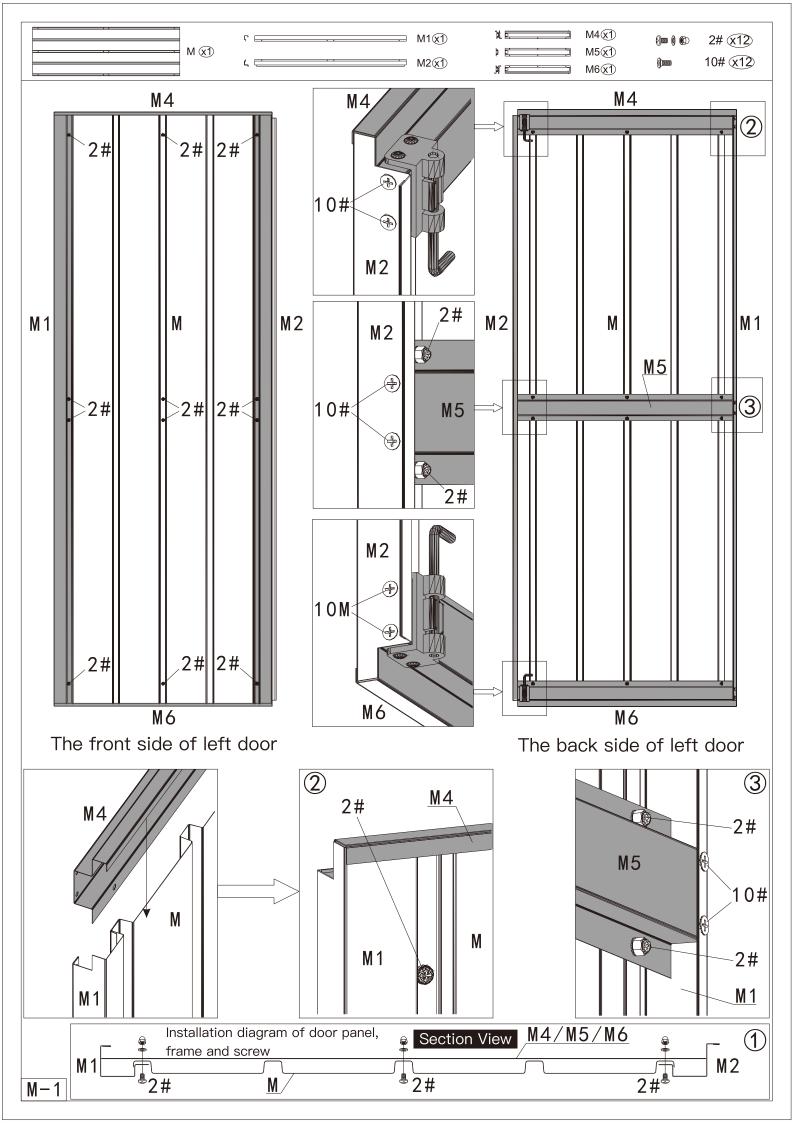


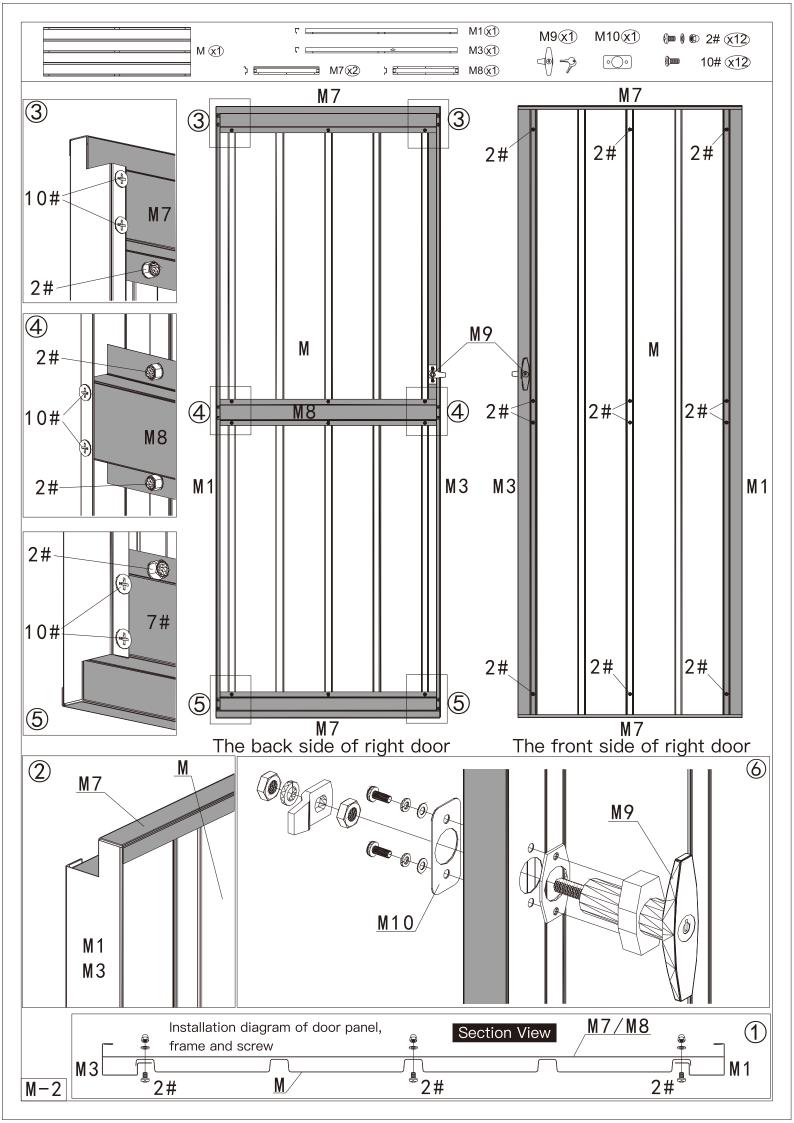

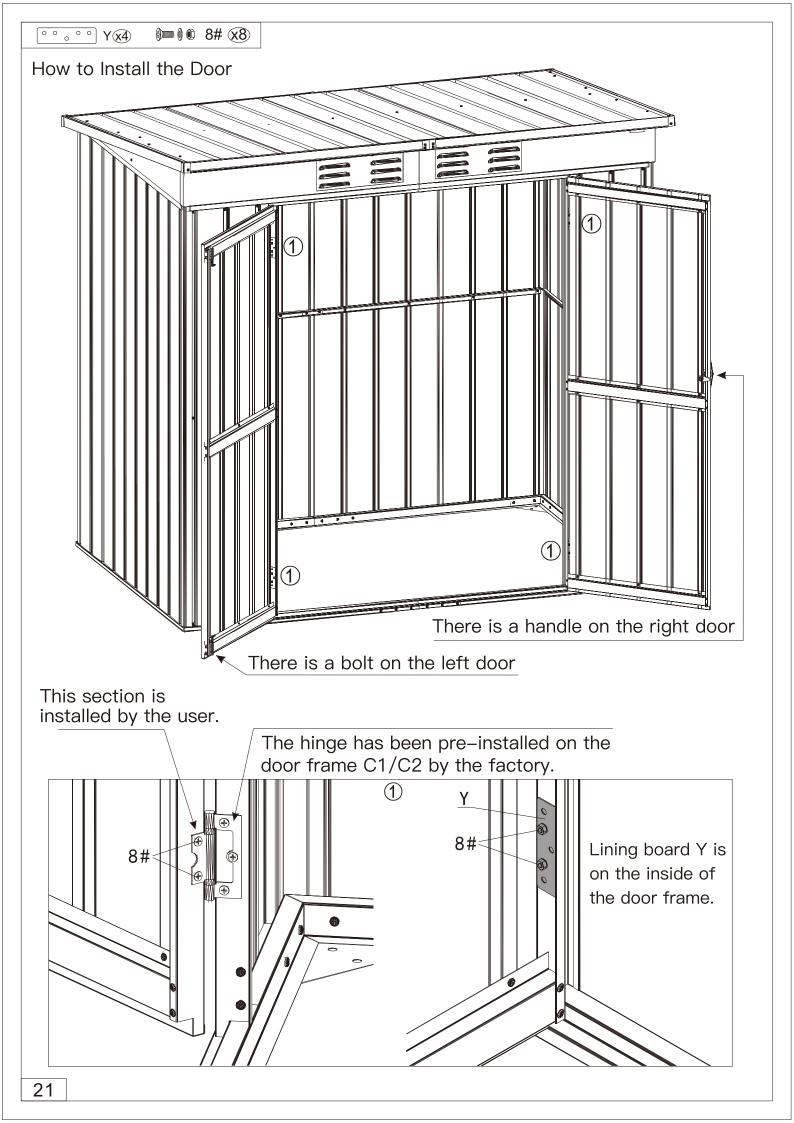


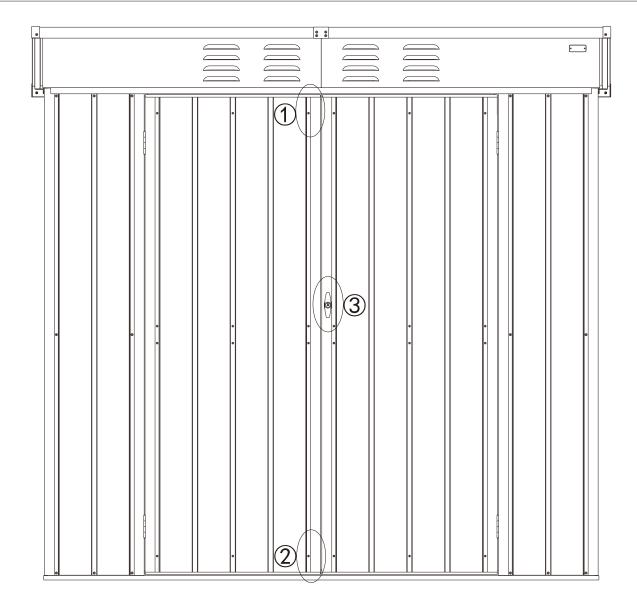



Insert the bolt and lock the left door.

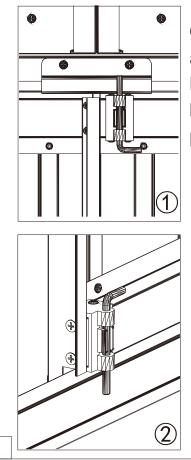

Open the door: insert the key, rotate 180 counterclockwise, and rotate the handle counterclockwise to open the door. **Lock the door:** close the door, insert the key, rotate the handle clockwise, then rotate the key 180 clockwise and pull the key out.

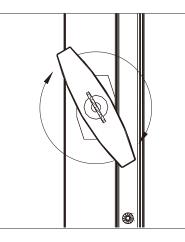



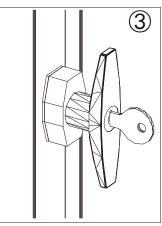

Insert the bolt and lock the left door.

Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and

friendly, casy-to-reach after-sales service. So if you

have any questions about our product and assembly-

,please feel free to contact us. We will be here for you.



After-sales contact email: service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.

© Copyright 2022–2024 domi LLC. I All Rights Reserved.