
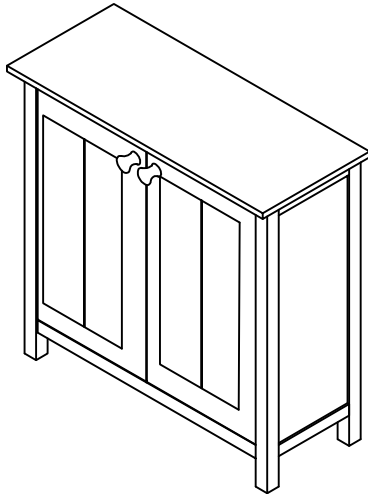


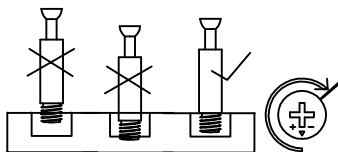

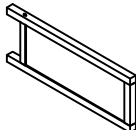
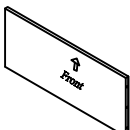
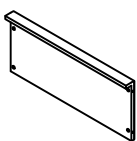






Assembly Instructions	Tools Required	Hardware Provided				
kitchen Cabinet  Please read carefully the instructions sheet before assembling this item. It is recommended that this item should be assembled by two adults.	 ALLEN WRENCH INCLUDED  Phillips screwdriver	B1			cam lock bolts with nut	4SETS
	B2			wood dowel	8PCS	
		B3			Small wood dowel	4PCS
		B4			Shelf Peg	4PCS
		B5			Wood screw	2PCS
		B6			small wood screw	16PCS
	 Note: Please don't over tighten the cam screws. Assure the cam screws properly fits into the plastic threaded insert. Otherwise the cam nut might not be able to catch the cam screws.	B7			Knob with machine screw	2SETS
		B8			Machine bolt with nut	4SETS
		B9			Wood Button	4PCS
		B10			Magent hardware	1SET
		B11			Small wood screw	8PCS
Furniture Parts						
 A1 L&R 2PCS Side Panel  A2 1PCS Middle Shelf  A3 1PCS Bottom Panel  A4 1PCS Front Bar  A5 1PCS Top Panel  A6 1PCS Back Panel  A7 L&R 2PCS Door						

Step : 1

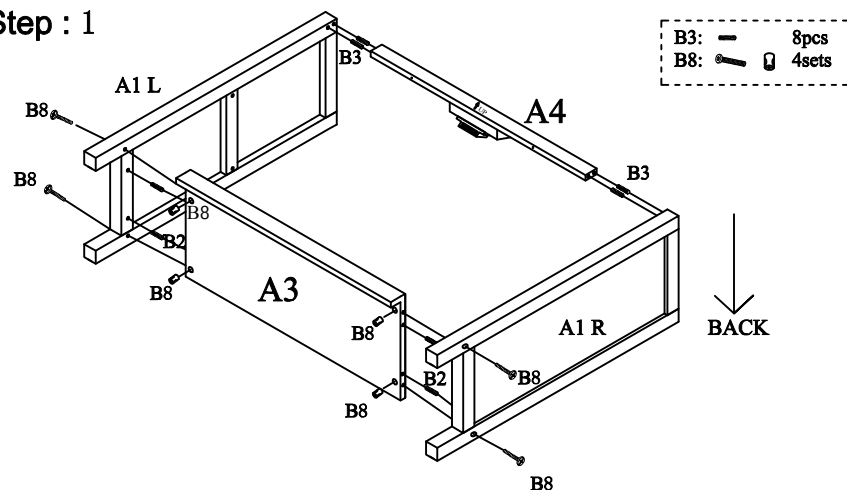


- 1). Attach A3 bottom panel to A1 left side panel using B8 machine screws and nuts & B2 wood dowels as shown.
- 2). Attach A4 front bar to A1 left side panel using B3 small wood dowels.
- 3). Repeat above (1) & (2) with A1 right side panel.

Step : 2

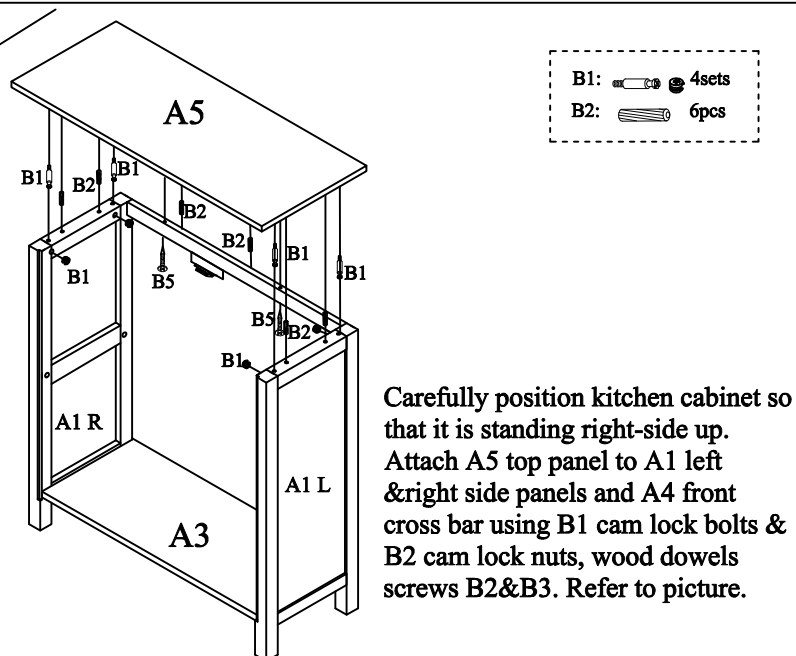


Carefully position kitchen cabinet so that it is standing right-side up. Attach A5 top panel to A1 left & right side panels and A4 front cross bar using B1 cam lock bolts & B2 cam lock nuts, wood dowels screws B2&B3. Refer to picture.

Step : 3

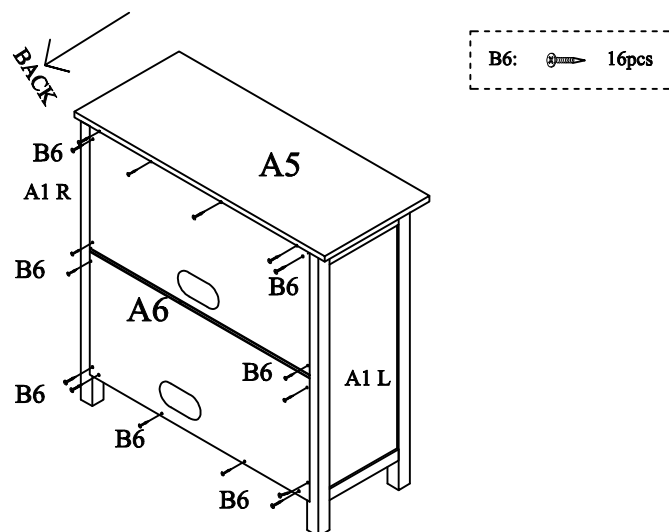

Attach A6 back panel to A1 left & right side panels using B6 small wood screw.


Step : 4

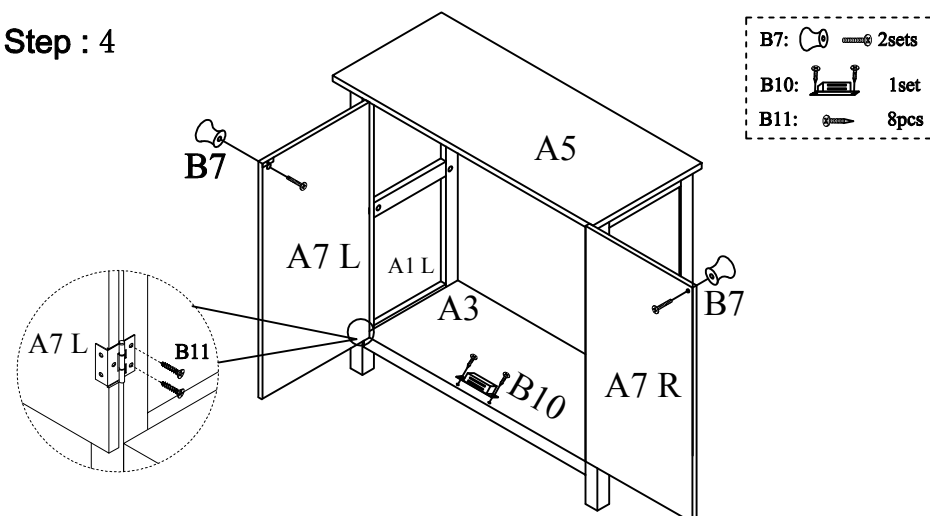

- 1). Attach A7 left & right doors to A1 left & right side panels using B11 small wood screws.
- 2). Attach B7 knobs to A7 doors using the machine screw included in the set.
- 3). Attach B10 magnet hardware to A3 bottom panel using the screws included in the set. For placement, refer to picture.

Step : 5


B4:  4pcs

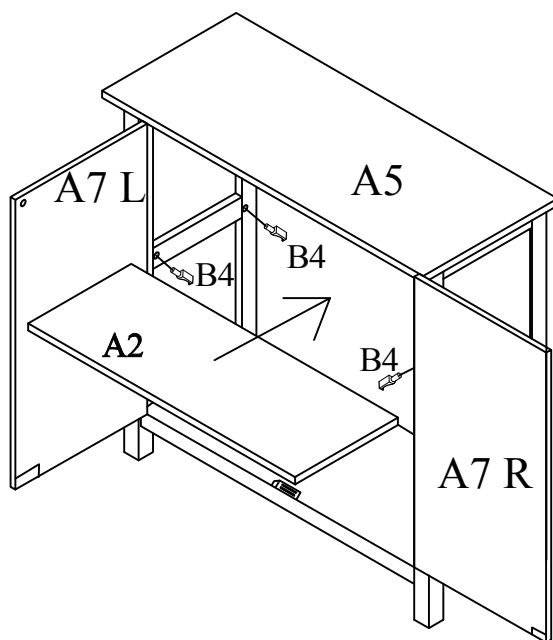

Insert B4 shelf pegs in pre-drilled holes on the inside of A1 left & right side panels. Carefully slide A2 middle shelf into the stand so that it rests level on B4 shelf pegs.

Step : 6

B9:  4pcs

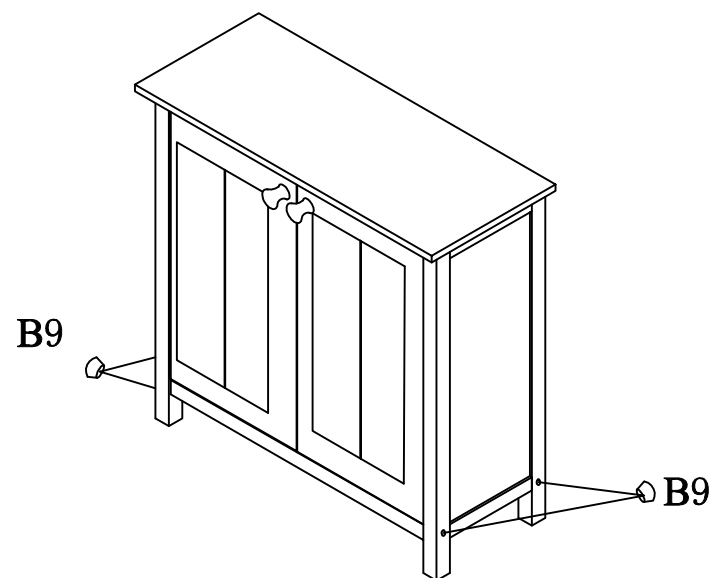

Carefully hammer B9 wood buttons on to A1 left & right side panels to cover up hardware.

Note : Too much force can cause damage to the wood button or kitchen cabinet.