








Attach the headboard post (P1) to the headboard (P2).
You will need to use hardware :


A = 4pcs
C = 4pcs
D = 8pcs
E = 4pcs

WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST



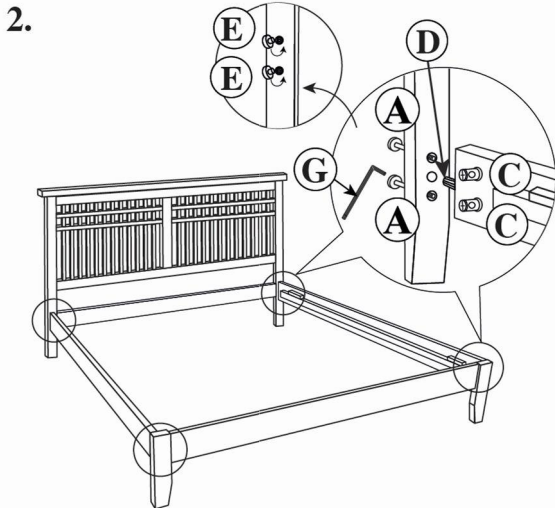





P1		Headboard Post = 2pcs
P2		Headboard = 1pcs
P3		Side Rail = 2pcs
P4		Footboard = 1pcs
P5		Centre Rail = 1pcs
P6		Support leg = 2pcs
P7		Bed Slats (F) = 14pcs Bed Slats (Q/K) = 15pcs




Attach the side rail (P3) to the headboard (P2) and footboard (P4) using hardware :

A = 8pcs
C = 8pcs
D = 4pcs
E = 8pcs
G = 1pcs

HARDWARE LIST

A		M6 x 90mm JCBC	12pcs
B		M6 x 50mm JCBC	2pcs
C		BARREL NUT	12pcs
D		Ø8 x 35mm WOOD DOWEL	12pcs
E		WOODEN PLUG	12pcs
F		M4 X 25mm SCREW (F)	33pcs
		M4 X 25mm SCREW (Q/K)	35pcs
G		ALLEN KEY M4	1pcs
H		ADJUSTER	2pcs

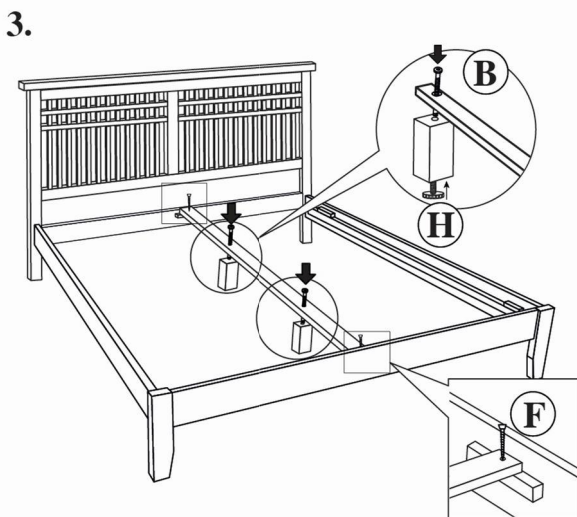

Fix the adjuster (H) to the support leg (P6) using hardware :


H = 2pcs

Attach the support legs (P6) to the centre rail (P5) using hardware :

B = 2pcs

Attach the centre rail (P5) to the headboard (P2) and footboard (P4) using hardware :

F = 2pcs

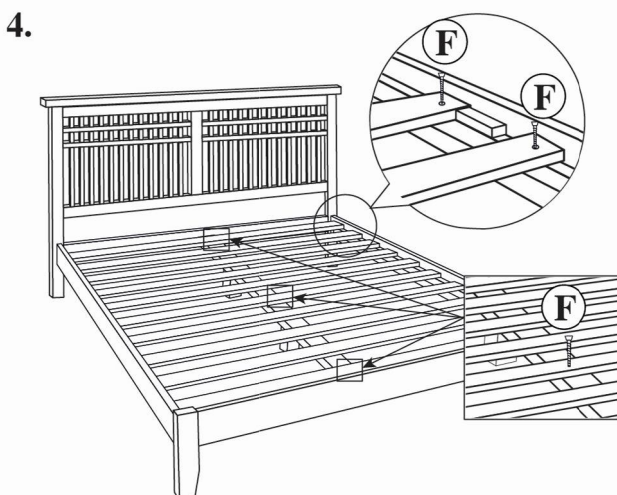

Lay the slats (P7) between the side rail (P3) using hardware :

F = 28pcs (F)

or

F = 30pcs (Q/K)

Attach the slats (P7) to the centre rail (P5) using hardware :

F = 3pcs

