



ASSEMBLY INSTRUCTIONS

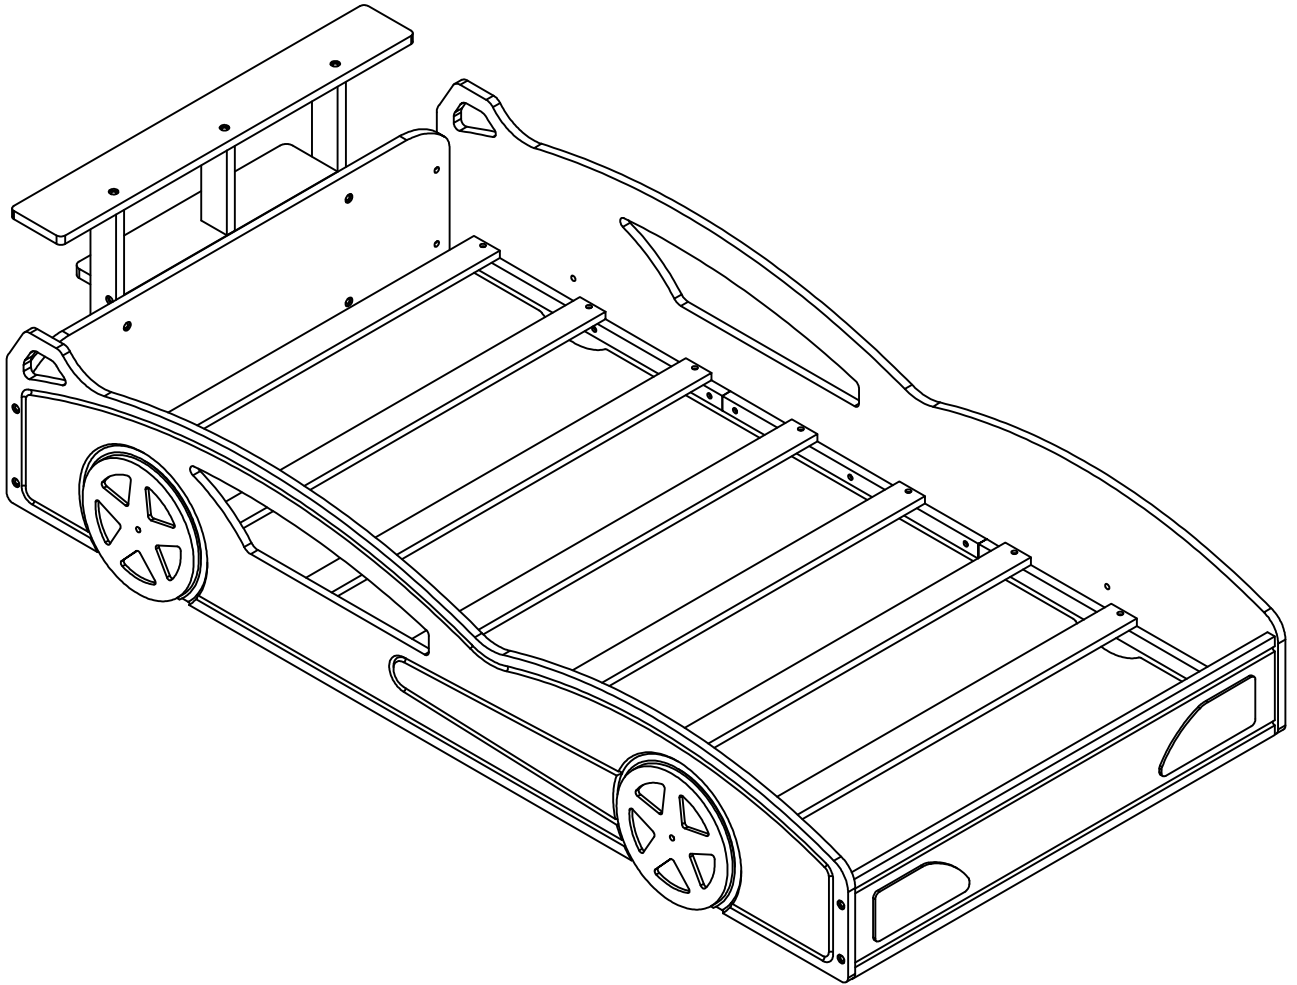


DETAIL VIEW

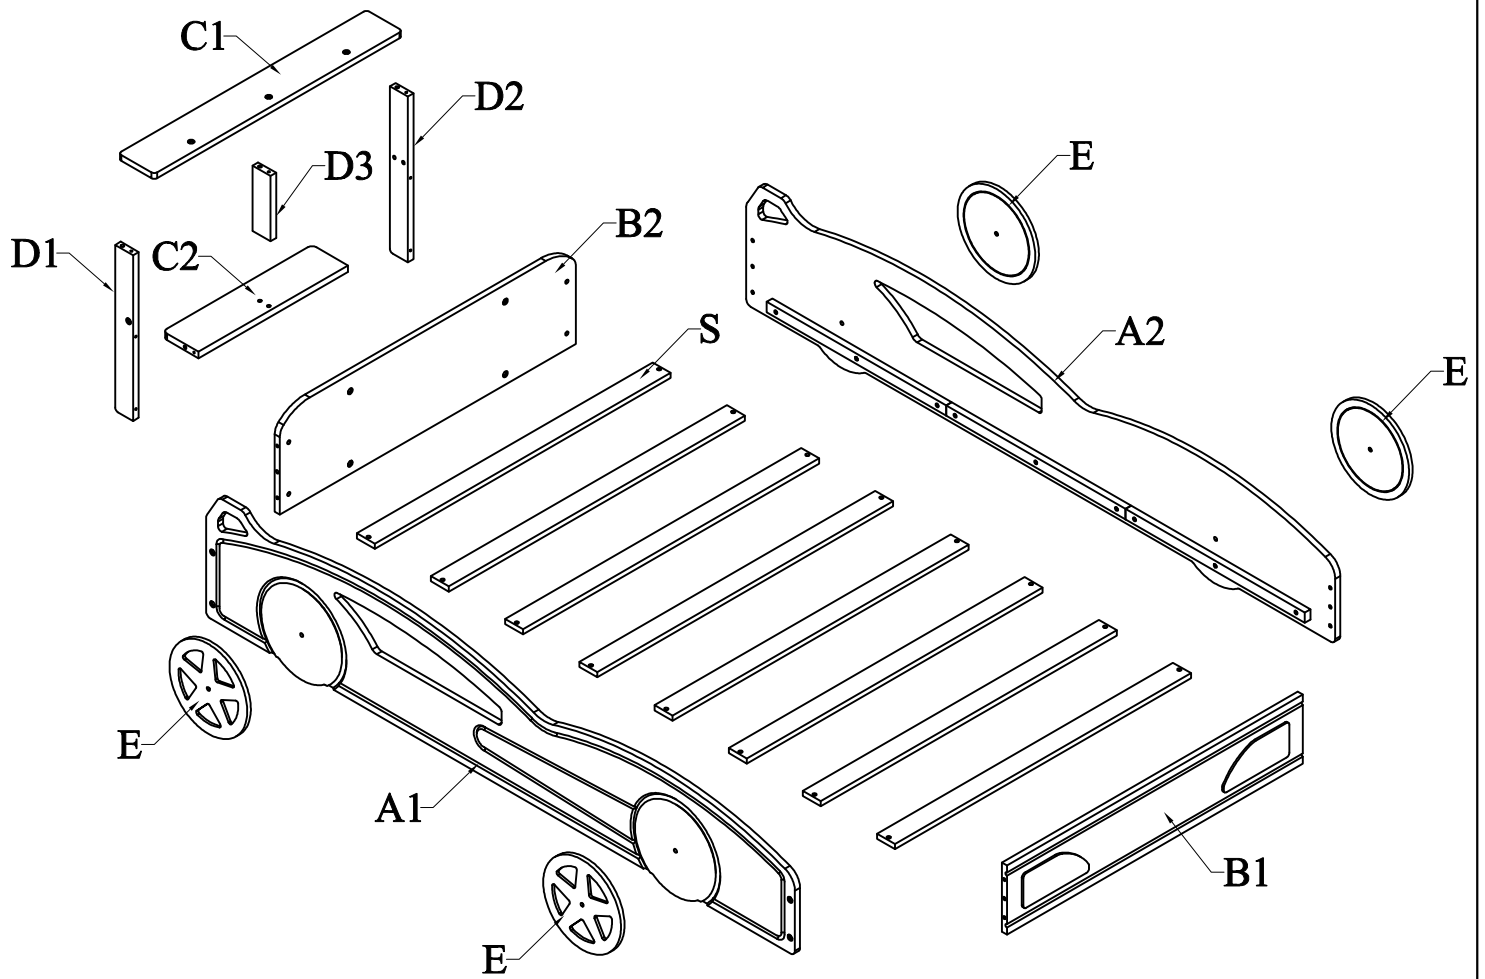


BOX 1

A1

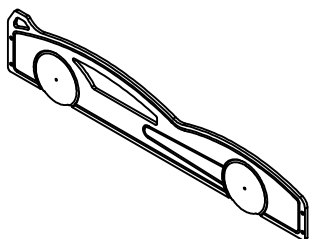


Side rail - left (1pc)

A2

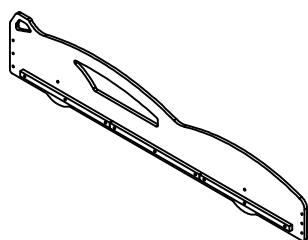


Side rail - right (1pc)

B1

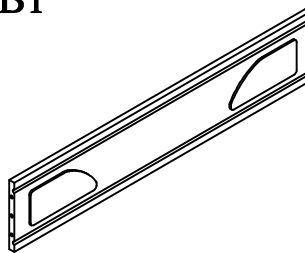


Footboard panel (1pc)

B2

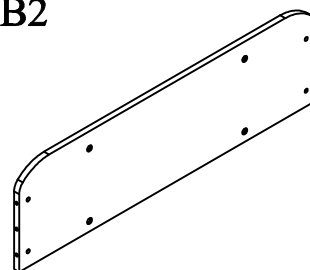


Headboard panel (1pc)

C1

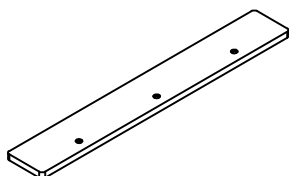

Top back rail (1pc)

C2

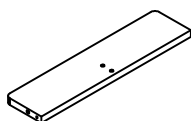

Bottom back rail (1pc)

D1



Vertical rail - left (1pc)

D2



Vertical rail - right (1pc)

D3




Vertical rail - middle(1pc)

E








Wheel car (4pcs)

S

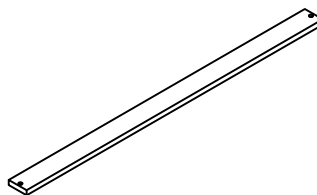


Slats (08pcs)

HARDWARE LIST

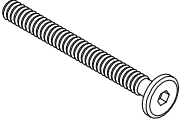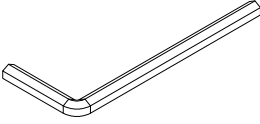1  Hex - Head bolts Ø1/4" * 60- 8pcs	2  Hex - Head bolts Ø1/4" * 25- 4pcs	3  Hexagonal bolts catch wood Ø1/4" * 50 - 10pcs	4  Horizontal - Hold bolts Ø1/4" - 8pcs
5  Canopy head though Ø1/4" - 4pcs	6  Wood dowel Ø8 * 30 - 10pcs	7  Allen key K4 - 2pcs	8  Wood crews M4 * 30 - 16pcs

STEP 1

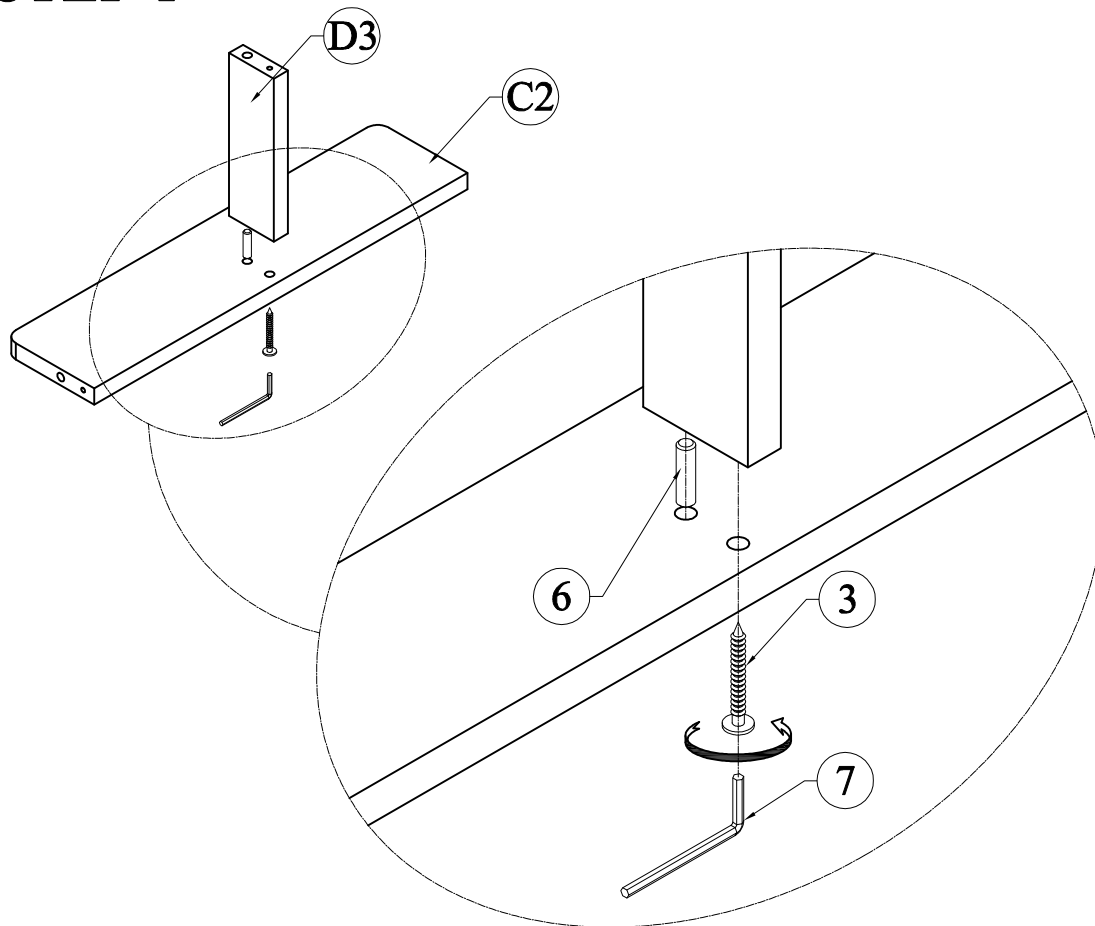

3




Hexagonal bolts catch wood
Ø1/4" * 50 - 1pc

6



Wood dowel
Ø8 * 30 - 1pc

STEP 2

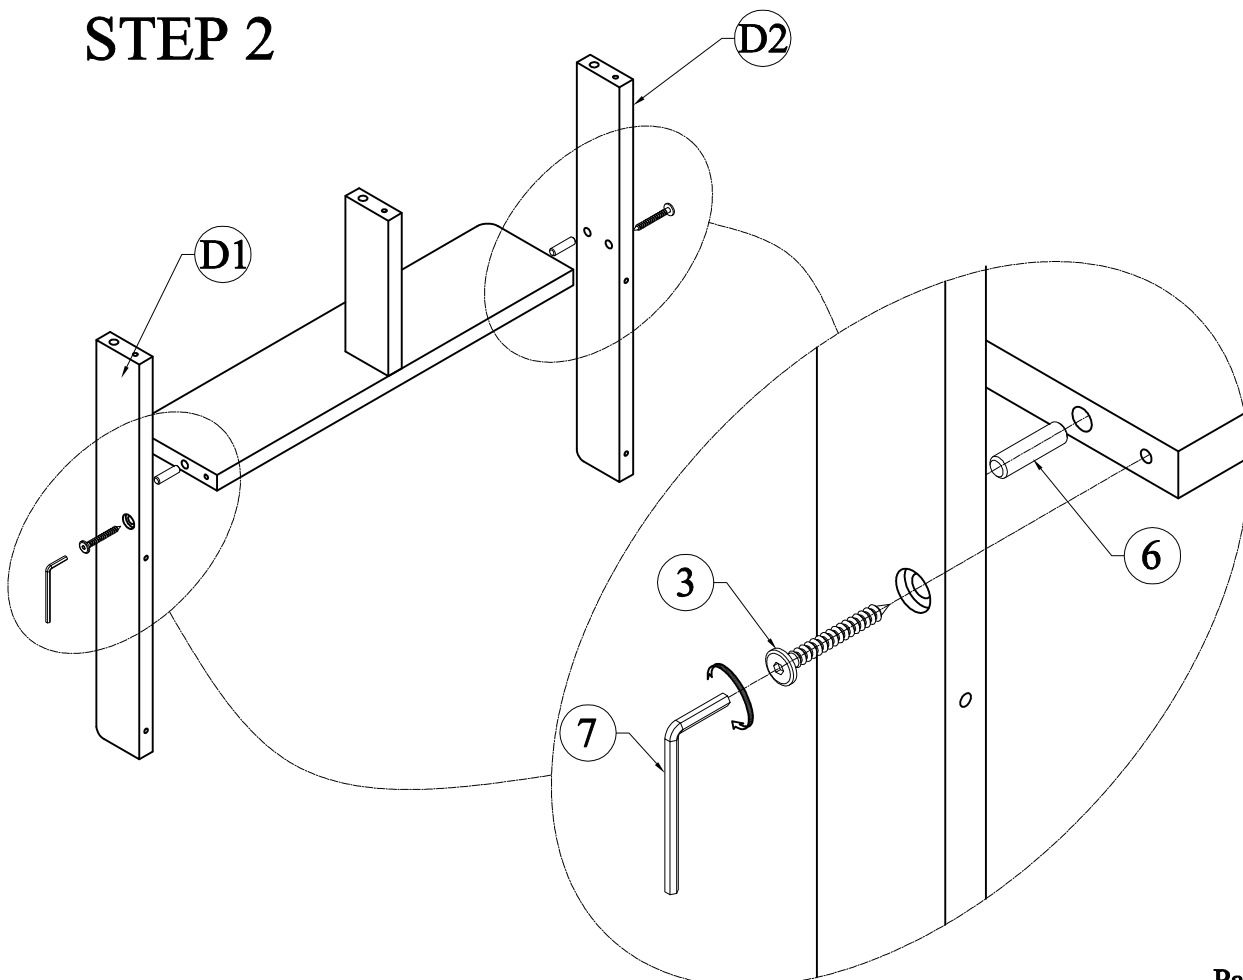

3




Hexagonal bolts catch wood
Ø1/4" * 50 - 2pcs

6



Wood dowel
Ø8 * 30 - 2pcs

STEP 3

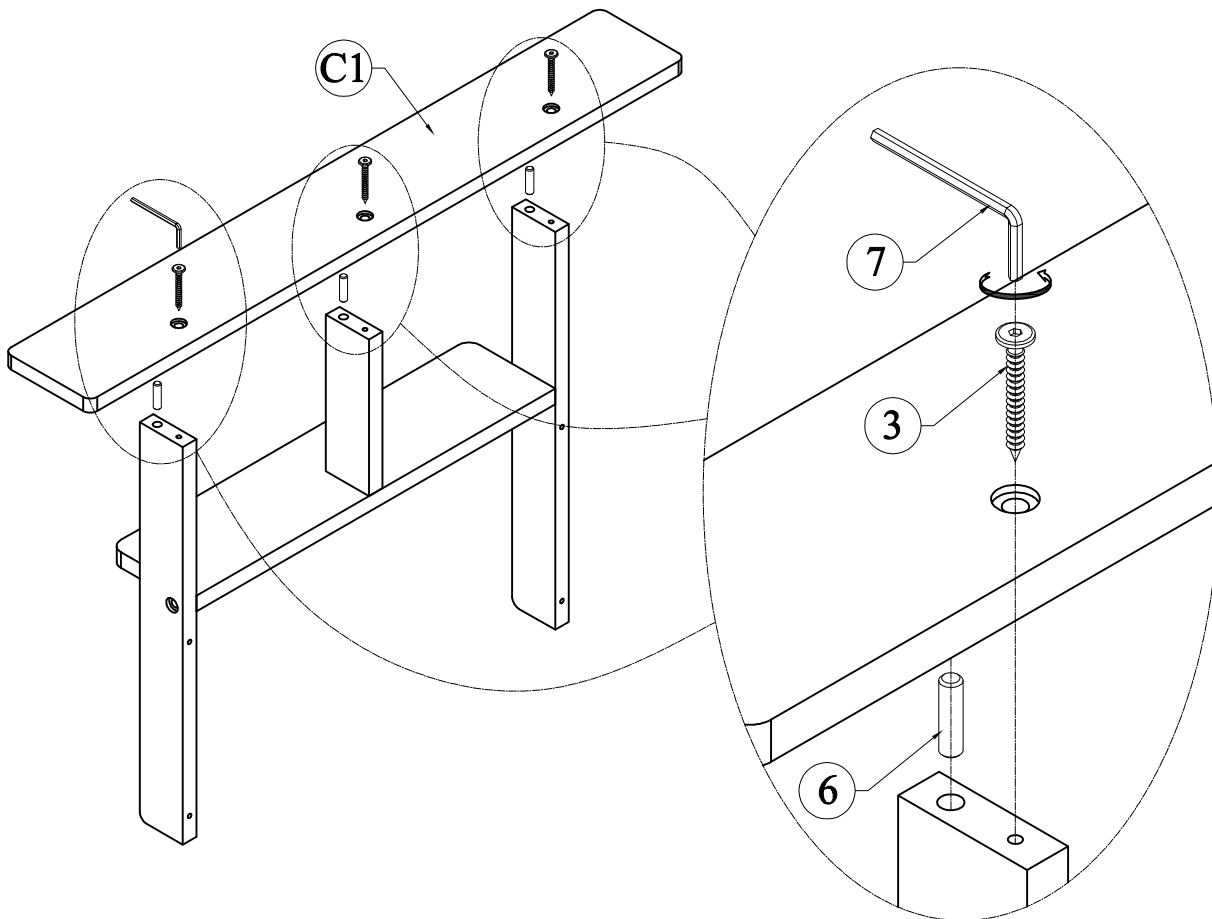

3




Hexagonal bolts catch wood
Ø1/4" * 50 - 3pcs

6



Wood dowel
Ø8 * 30 - 3pcs

STEP 4

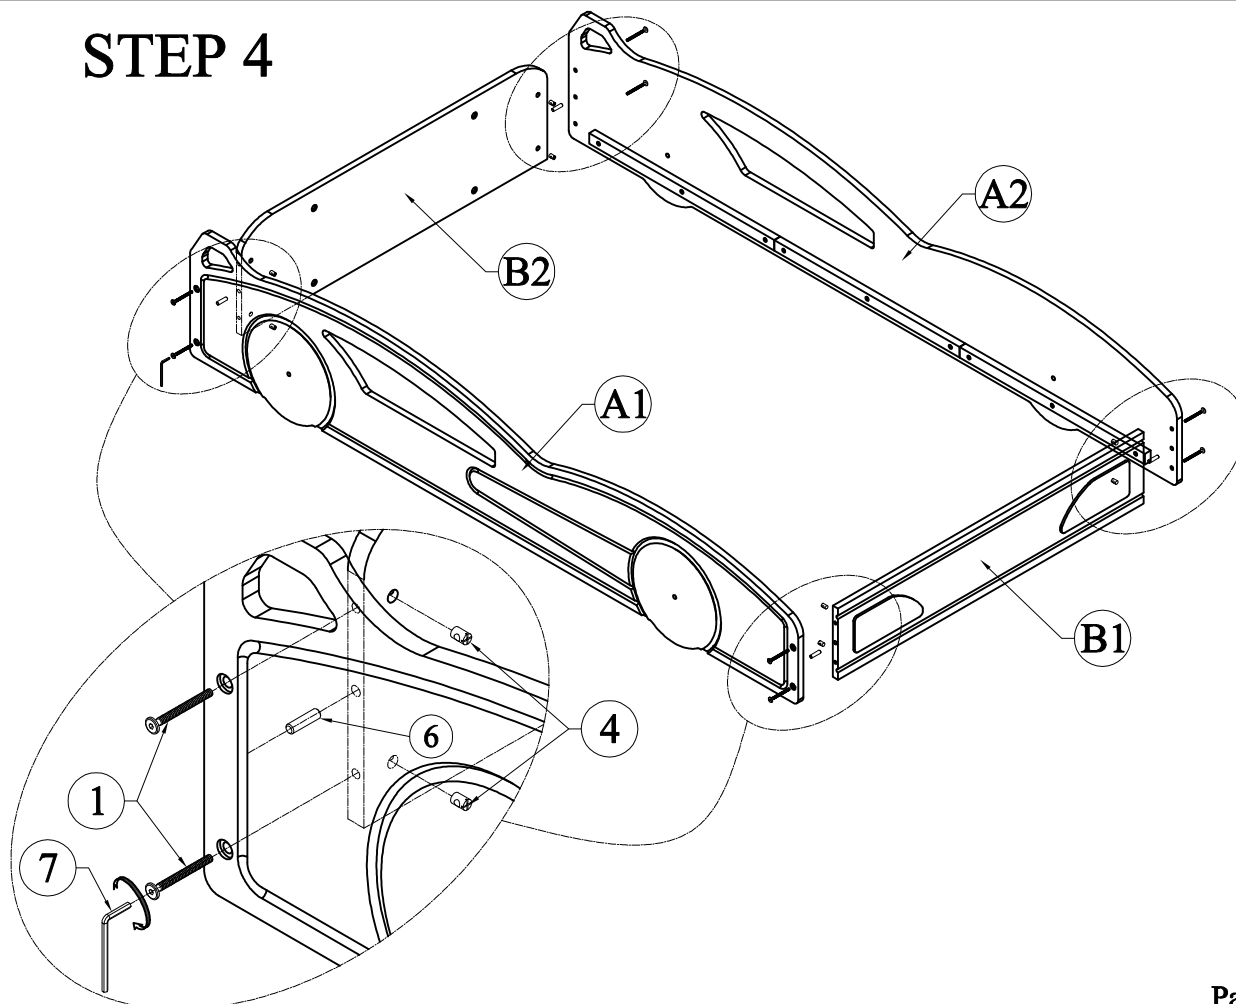

1



Hex - Head bolts
Ø1/4" * 60- 8pcs

4




Horizontal - Hold bolts
Ø1/4" - 8pcs

6



Wood dowel
Ø8 * 30 - 4pcs

STEP 5

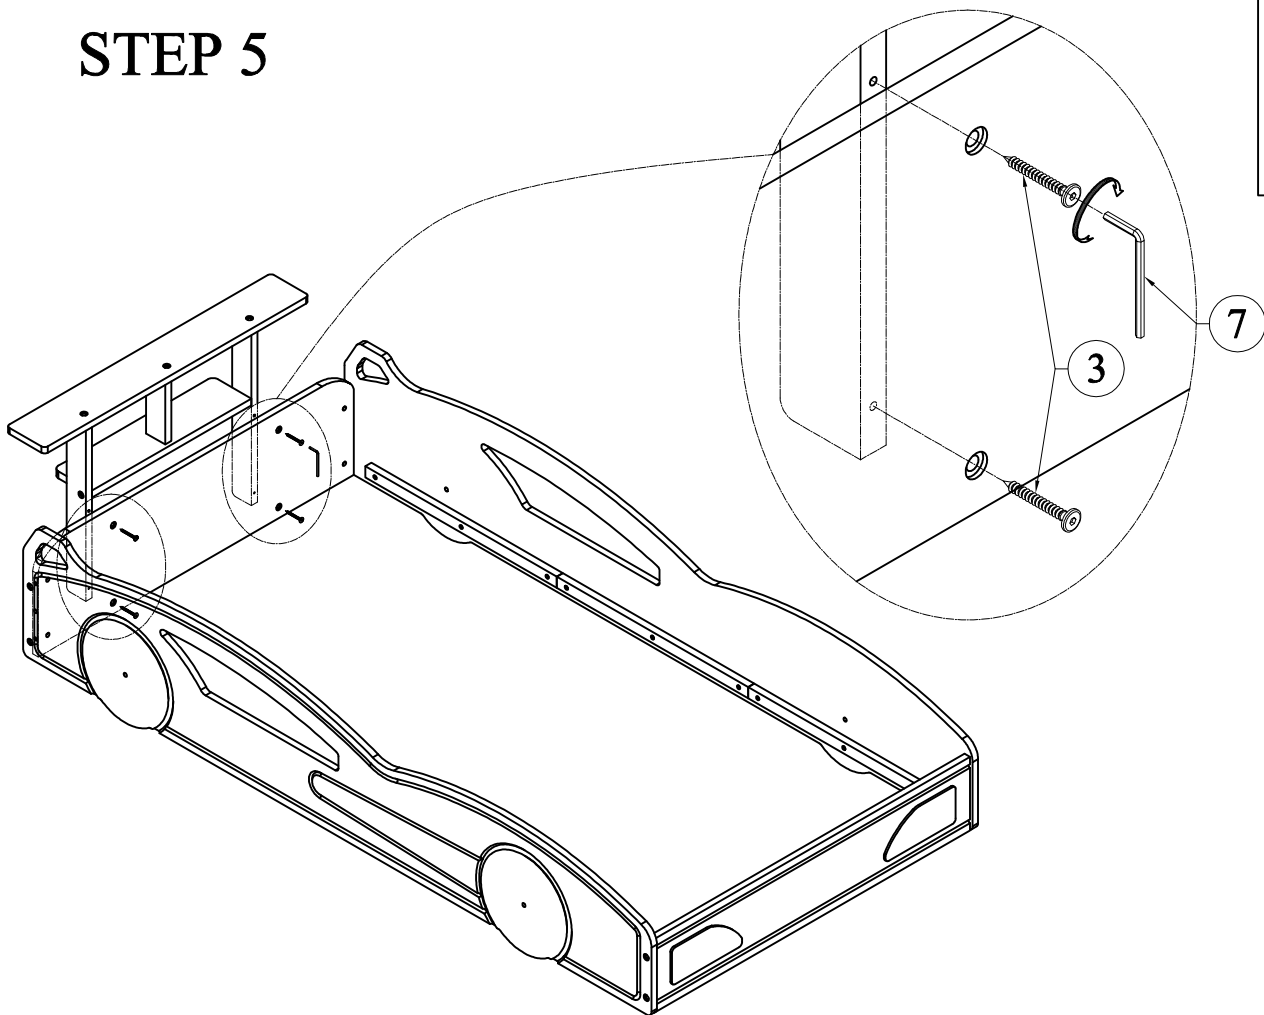


3

Hexagonal bolts catch wood
Ø1/4" * 50 - 4pcs

7

3

STEP 6

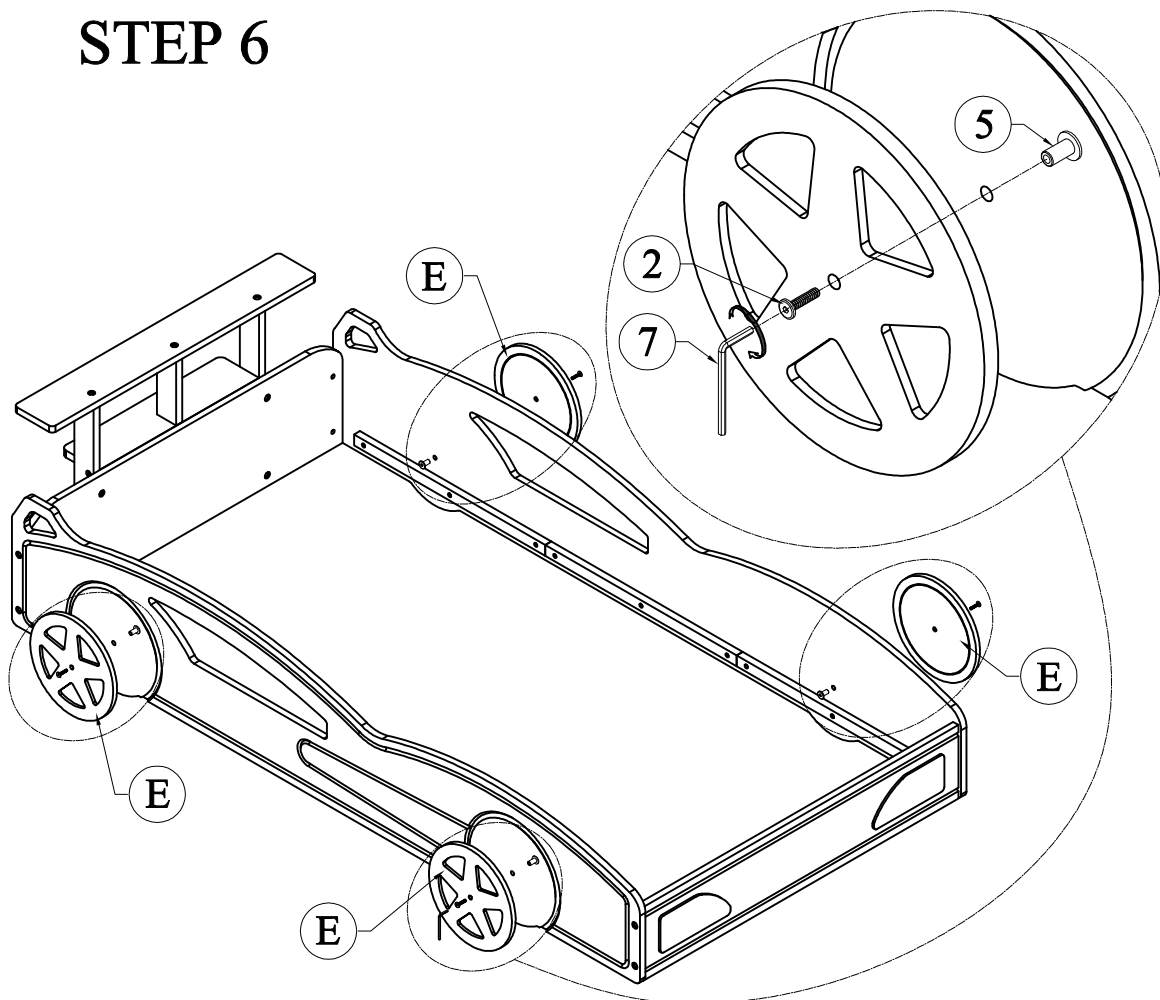

2



Hex - Head bolts
Ø1/4" * 25- 4pcs

5



Canopy head through
Ø1/4" - 4pcs

5

5

2

7


E

E

E

E

STEP 7

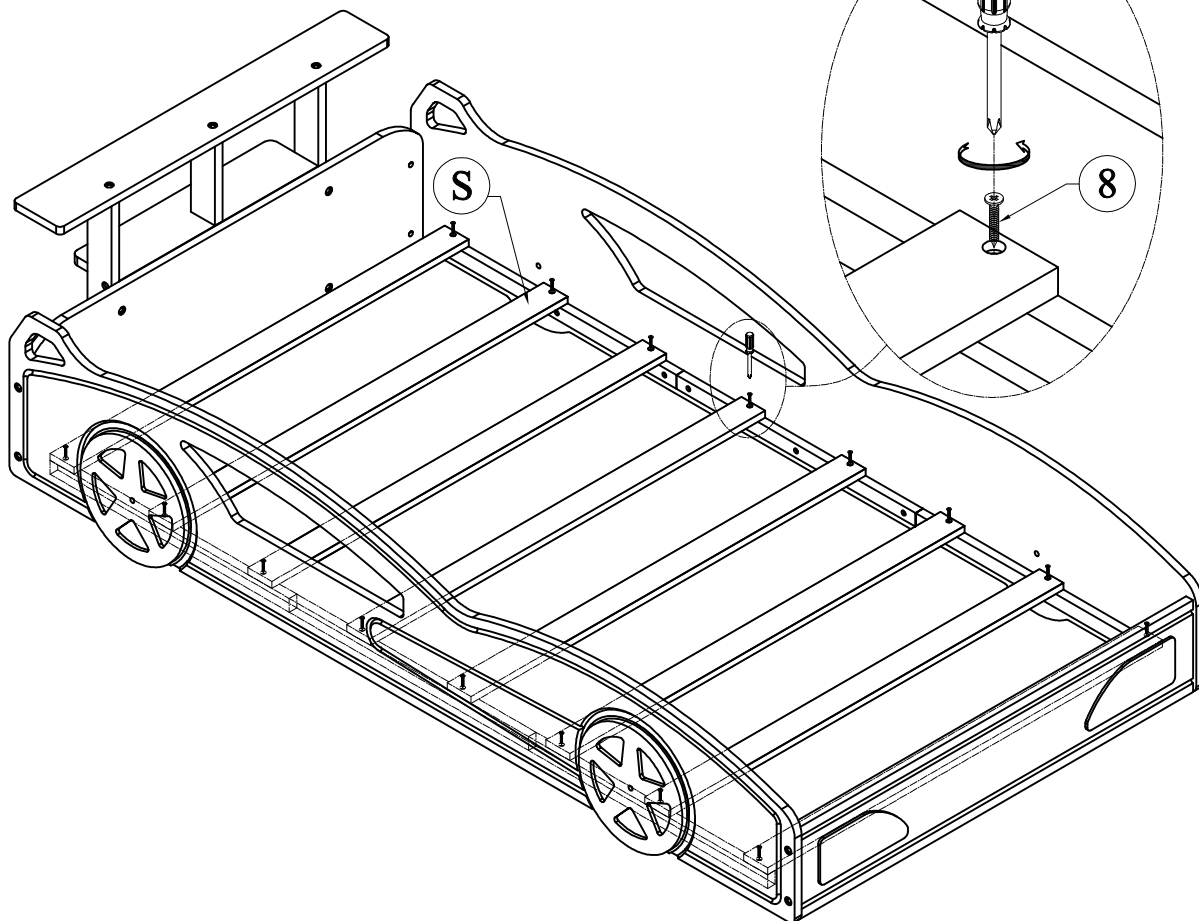

8



Wood screws
M4 * 30 - 16pcs

COMPLETED

