






# INSTALLATION GUIDE


**STOP**, please make sure the cabinet is level before installing the countertop

INCLUDED	NEEDED	HARDWARE	
<ul style="list-style-type: none"><li>• Base cabinet</li><li>• Countertop</li><li>• Sink basin</li><li>• Backsplash</li><li>• Hardware</li></ul>	<ul style="list-style-type: none"><li>• Permanent marker</li><li>• Caulking gun</li><li>• Power Drill</li><li>• Drywall Screws</li></ul>	<p data-bbox="684 277 703 293">A</p>  <p data-bbox="703 331 779 347">Bolts (4)</p> <p data-bbox="684 389 703 405">C</p>  <p data-bbox="703 427 804 443">Washers (4)</p>	<p data-bbox="878 277 893 293">B</p>  <p data-bbox="897 304 1016 320">Wing nuts (4)</p> <p data-bbox="878 389 893 405">D</p>  <p data-bbox="871 427 1050 443">Undermount clips (4)</p>

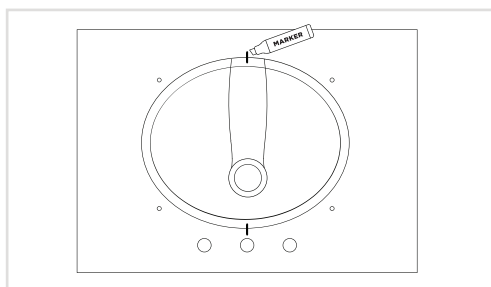


## STEP 1 - PLACE & TRACE

Place the sink basin on the bottom of the countertop, making sure to center over the opening. Draw guide lines on the countertop and the basin in two locations.

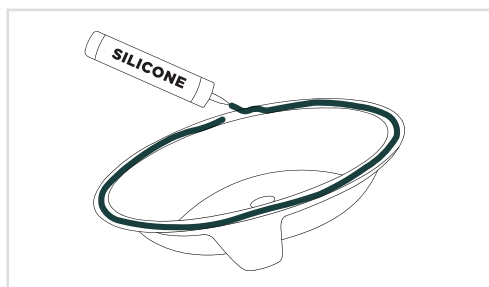


## STEP 2 - PREPARE SINK BASIN

Using a caulking gun, apply a heavy amount of silicone of your choice on the top side of the sink basin edge.

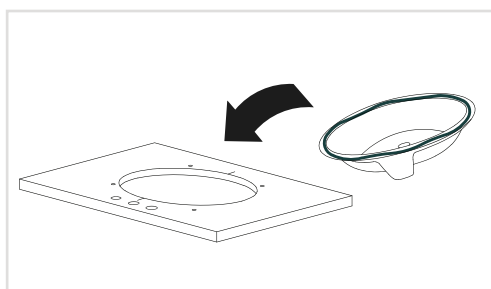

## STEP 3 - FLIP & SET IN PLACE


Carefully flip the sink basin over and place it so the guide lines match up in both locations.

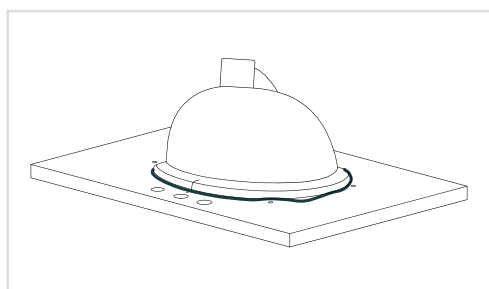

## STEP 4 - DRY & SET

Press down on the sink basin to seal the silicone. Remove any excess. Follow dry time recommendation found on your product, typically 12 to 24 hours.

# INSTALLATION GUIDE

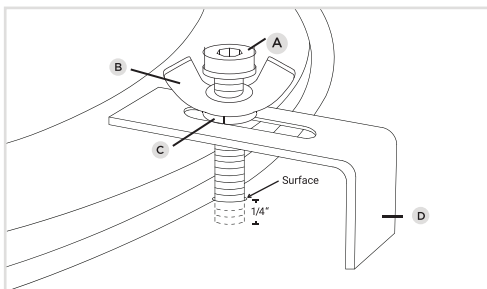


## STEP 5 - ATTACH UNDERMOUNT CLIPS

Please tighten Bolt (A) into wing nut (B) slide on washer (C) and guide through Under-mount clip (D) opening into threaded bolt hole in the countertop. ONLY-Hand Tighten Bolt (A) to a depth of about 1/4" below countertop surface. Then secure the Sink with the under-mount clip (D) by Tightening wing nut (B) only




## STEP 6 - ATTACH BASE CABINET TO WALL

Place cabinet in desired location and determine where the wall studs are.

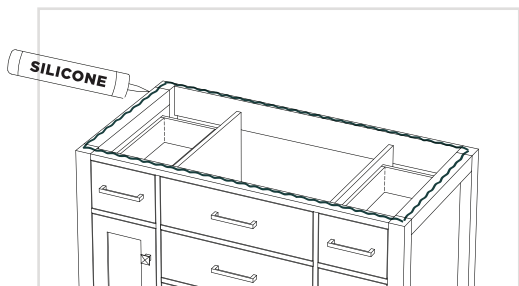


## STEP 7 - PREPARE BASE CABINET

Using a caulking gun, apply silicone around the top of the base cabinet.

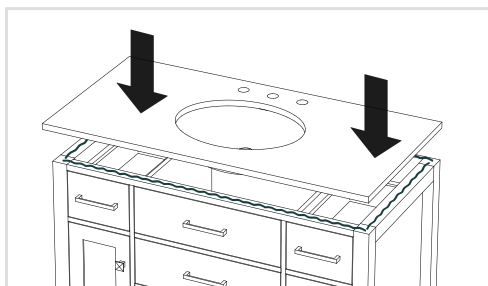

## STEP 8 - SET COUNTERTOP IN PLACE

Carefully place the countertop, with the sink attached, onto the cabinet and press down firmly. Wipe away any excess silicone immediately.

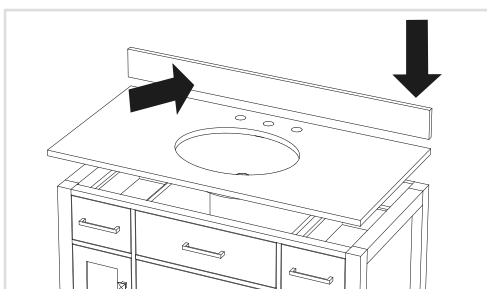

## STEP 9 - SET BACKSPLASH

After the vanity is in place, use a caulking gun to apply silicone to the back and bottom unfinished sides of the backsplash. Press firmly down and back to set in place. Remove any excess silicone.