

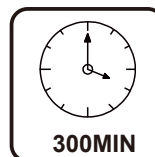
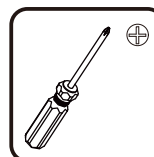
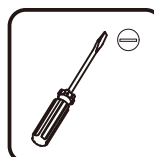



Installation & Assembly

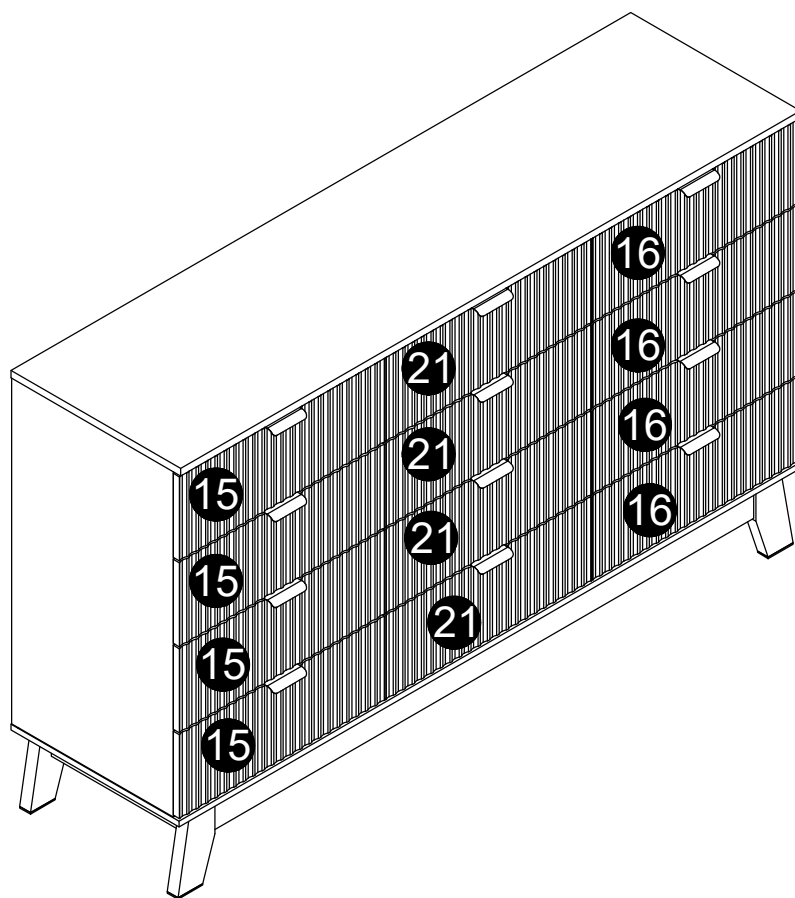


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

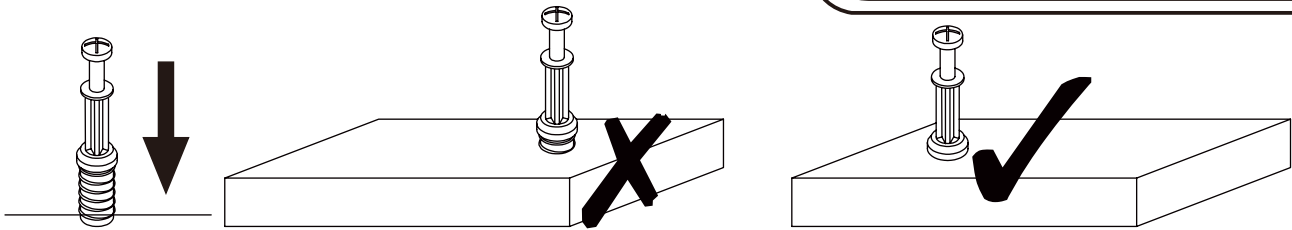


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

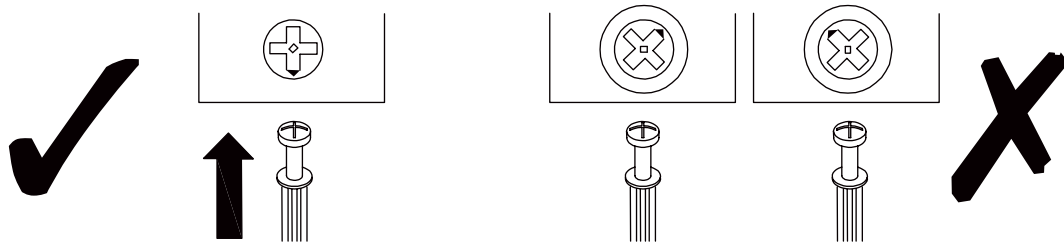









EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.









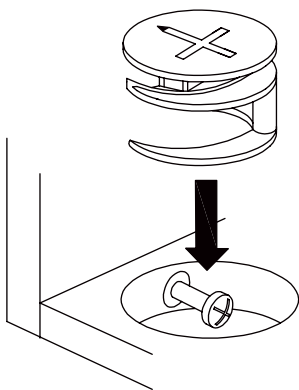



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

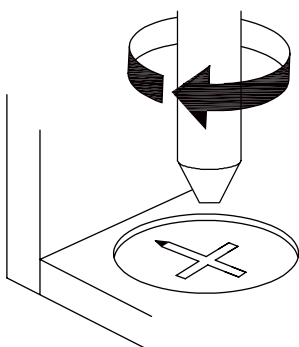


EN_Turn cam lock clockwise to tighten.

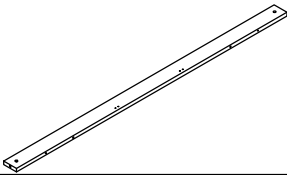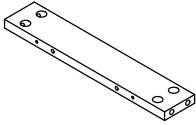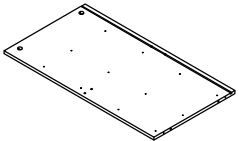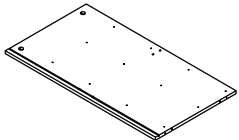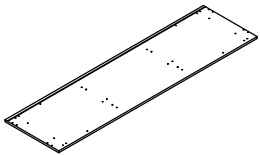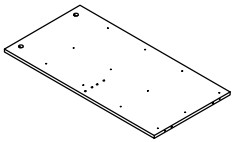NO.	PARTS	QTY	SPARE
1		x2	
2		x2	
3		x2	
4		x2	
5		x2	
6		x1	
7		x1	
8		x1	
9		x1	
10		x2	

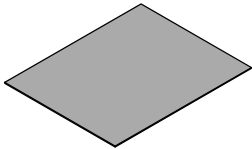NO.	PARTS	QTY	SPARE
11		x1	
12		x3	
13		x12	
14		x2	
15		x4	
16		x4	
17		x12	
18		x12	
19		x12	
20		x12	

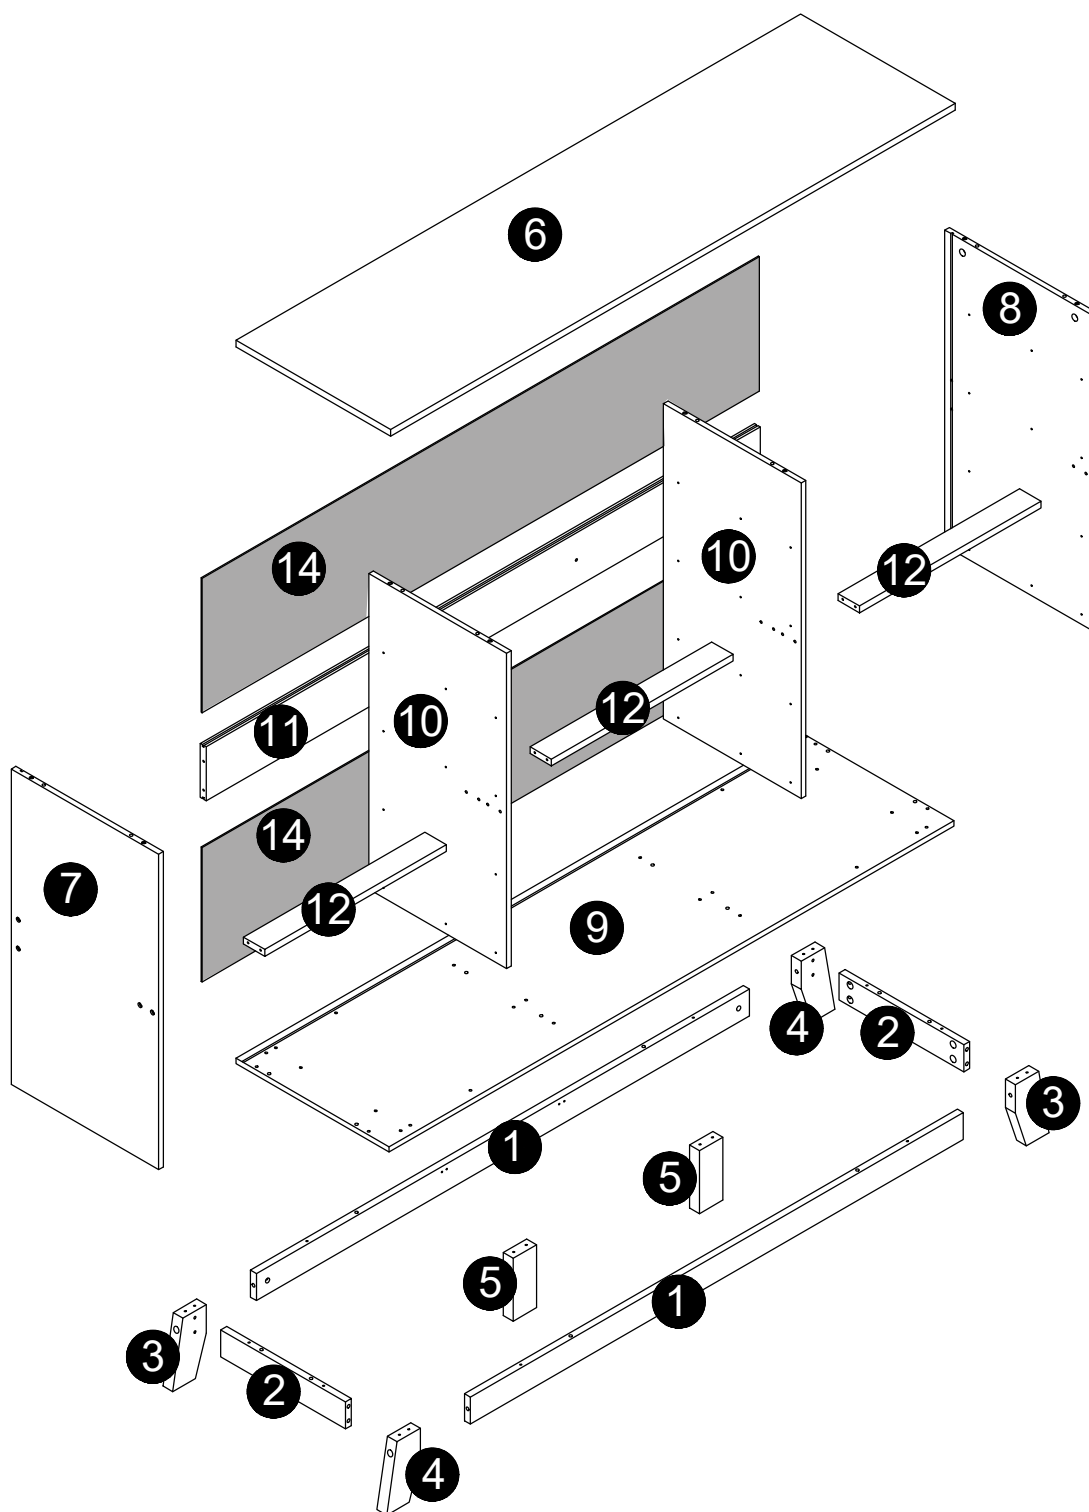


Left Drawer

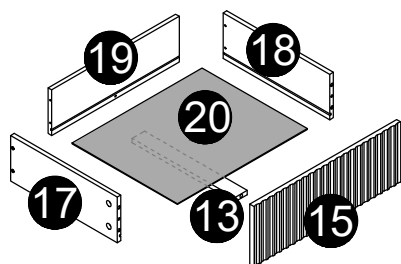


x4

Middle Drawer


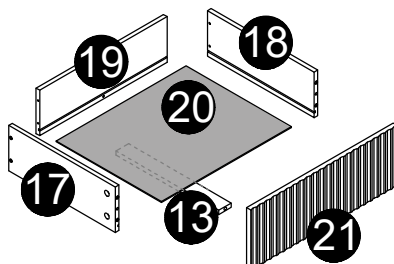



x4



Right Drawer

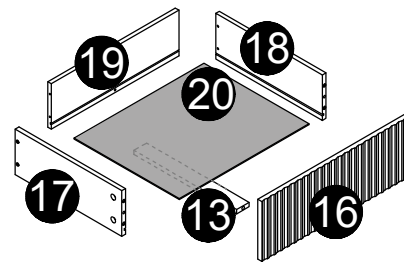


x4

 A x76 Ø6x35mm +3(spare)	 B x76 Ø15x10mm +3(spare)	 C x48 Ø6x30mm +3(spare)	 D x70 Ø4x35mm +3(spare)	 E x144 Ø3.5x12mm +6(spare)	 F x12
 G x24 Ø3.5x10mm +2(spare)	 H1  H2 H x14 Ø3x16mm +1(spare)	 I x2 Ø6x30mm	 J x2 Ø4x14mm	 K x38 Ø5x35mm +3(spare)	 L x2
 M x4 Ø6x80mm	 N x4 Ø10x10mm	 O x4	 P x16 Ø4x12mm +2(spare)	 Q x4	 R x12 +2(spare)
 S x2	 CL x12 350mm	 CR x12 350mm	 DL x12 350mm	 DR x12 350mm	

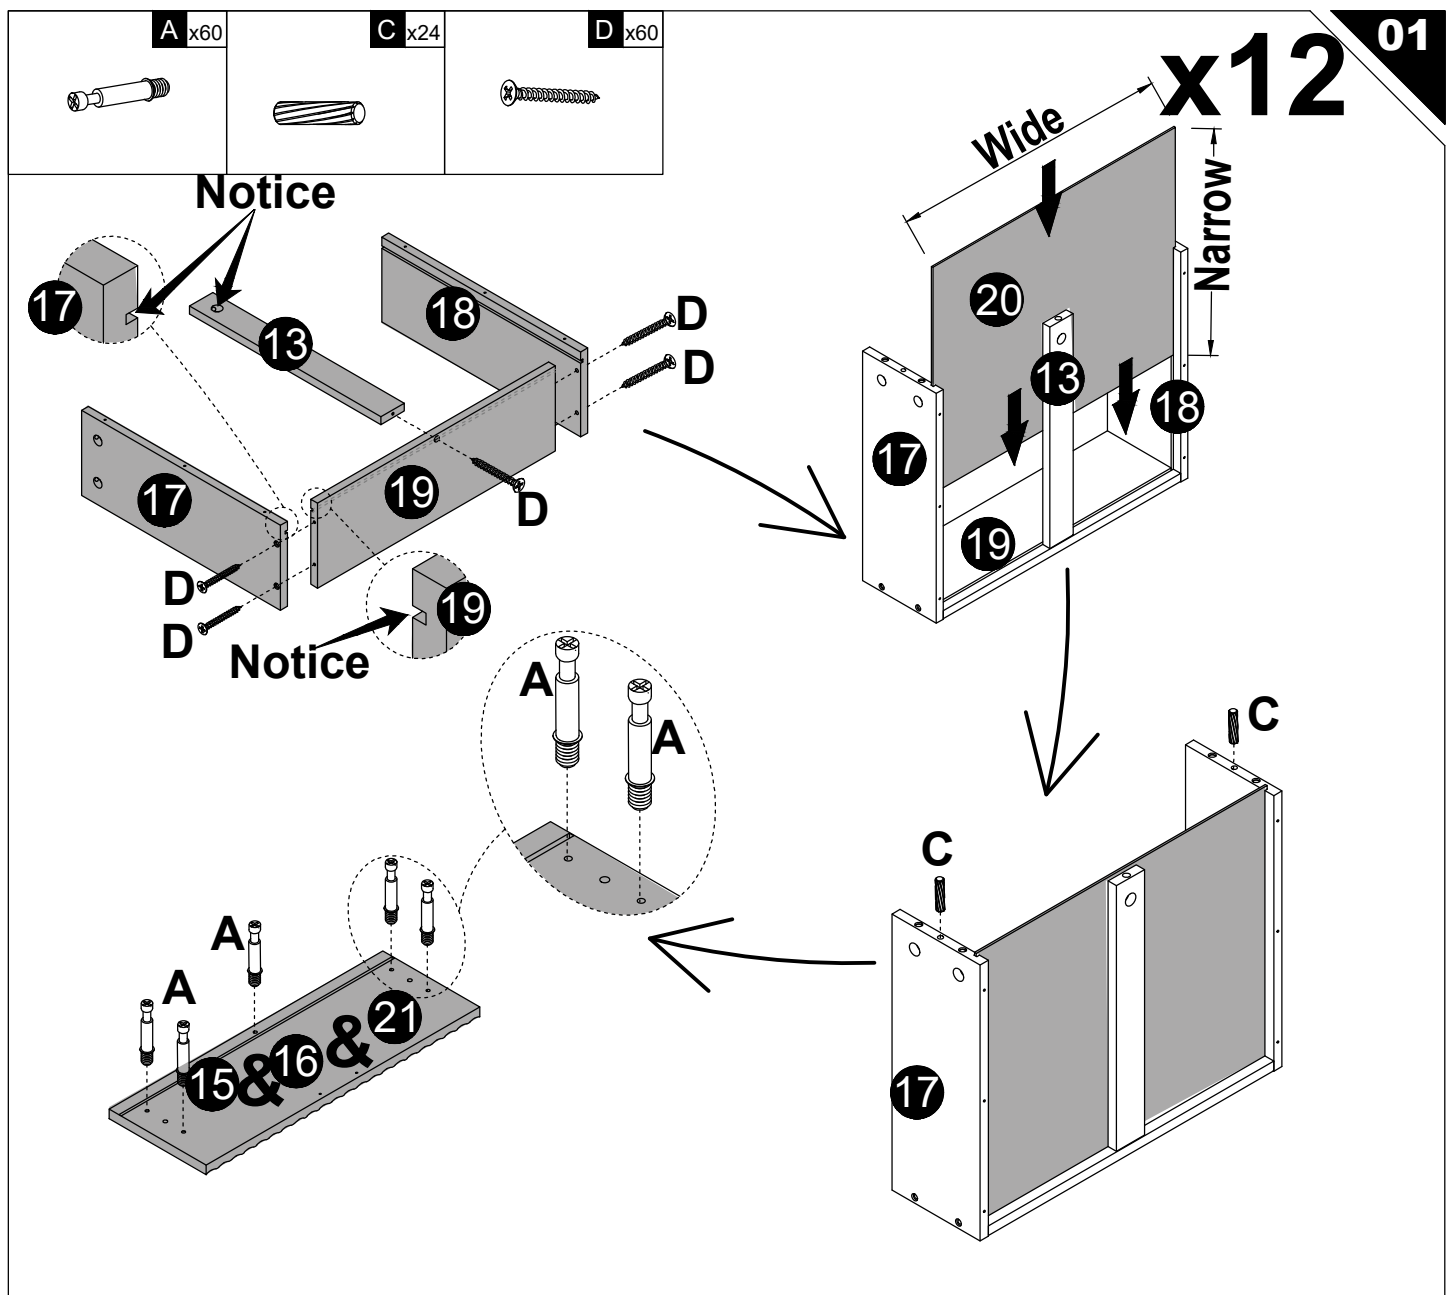

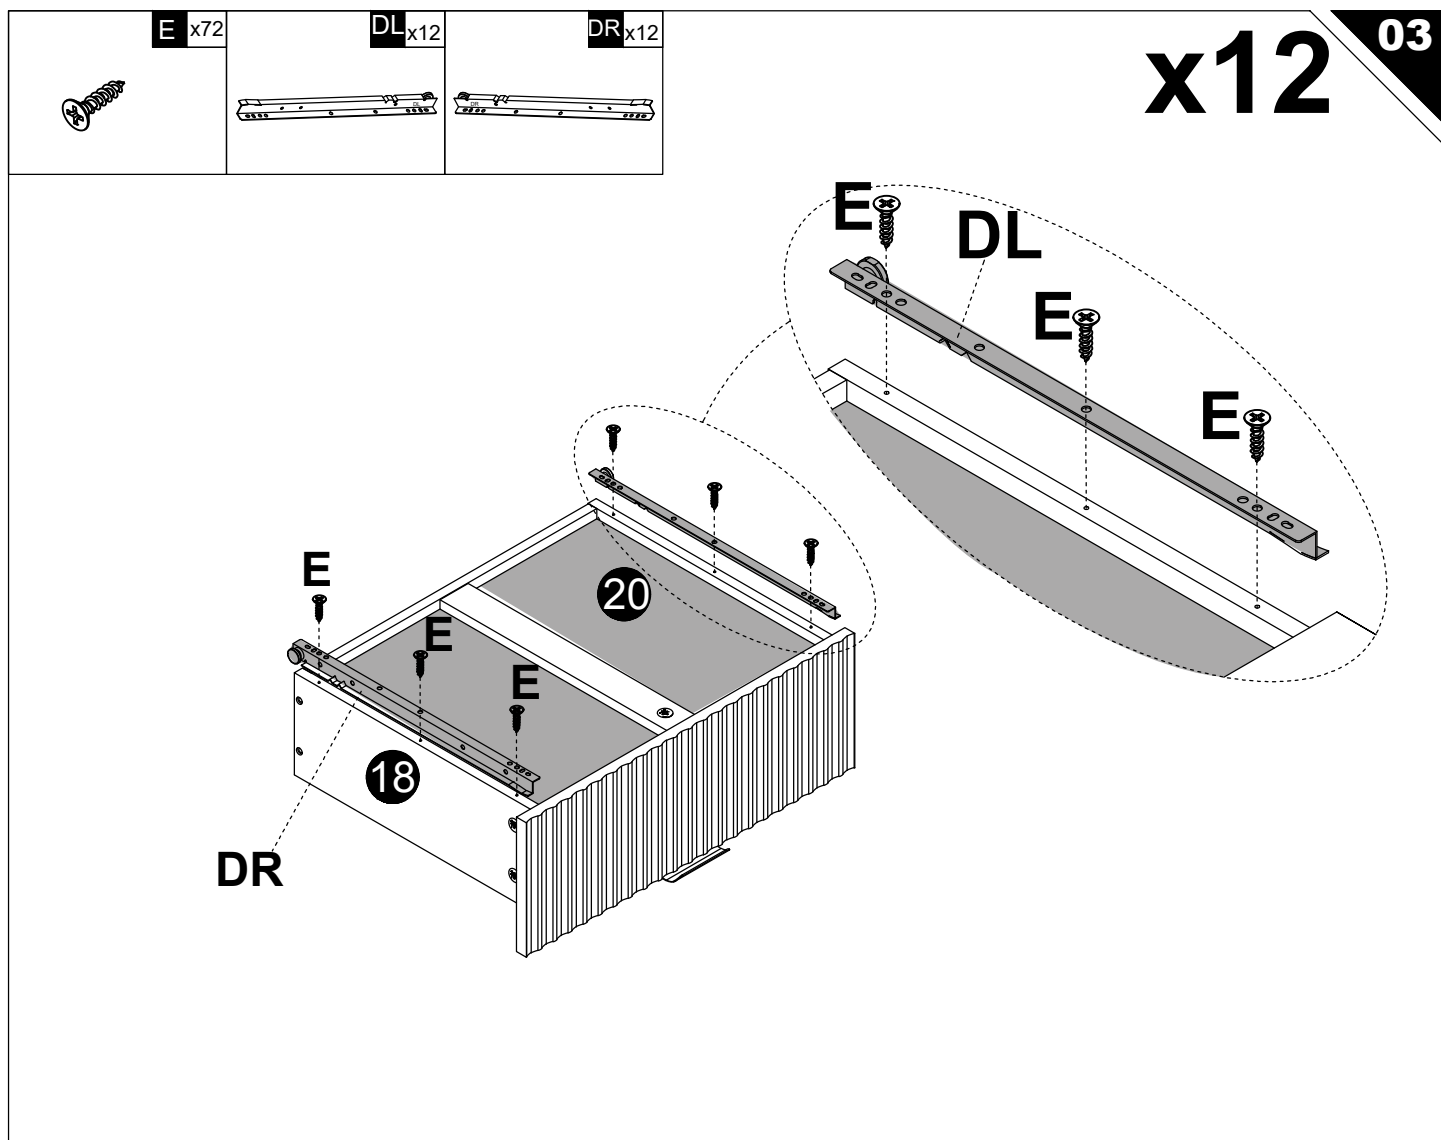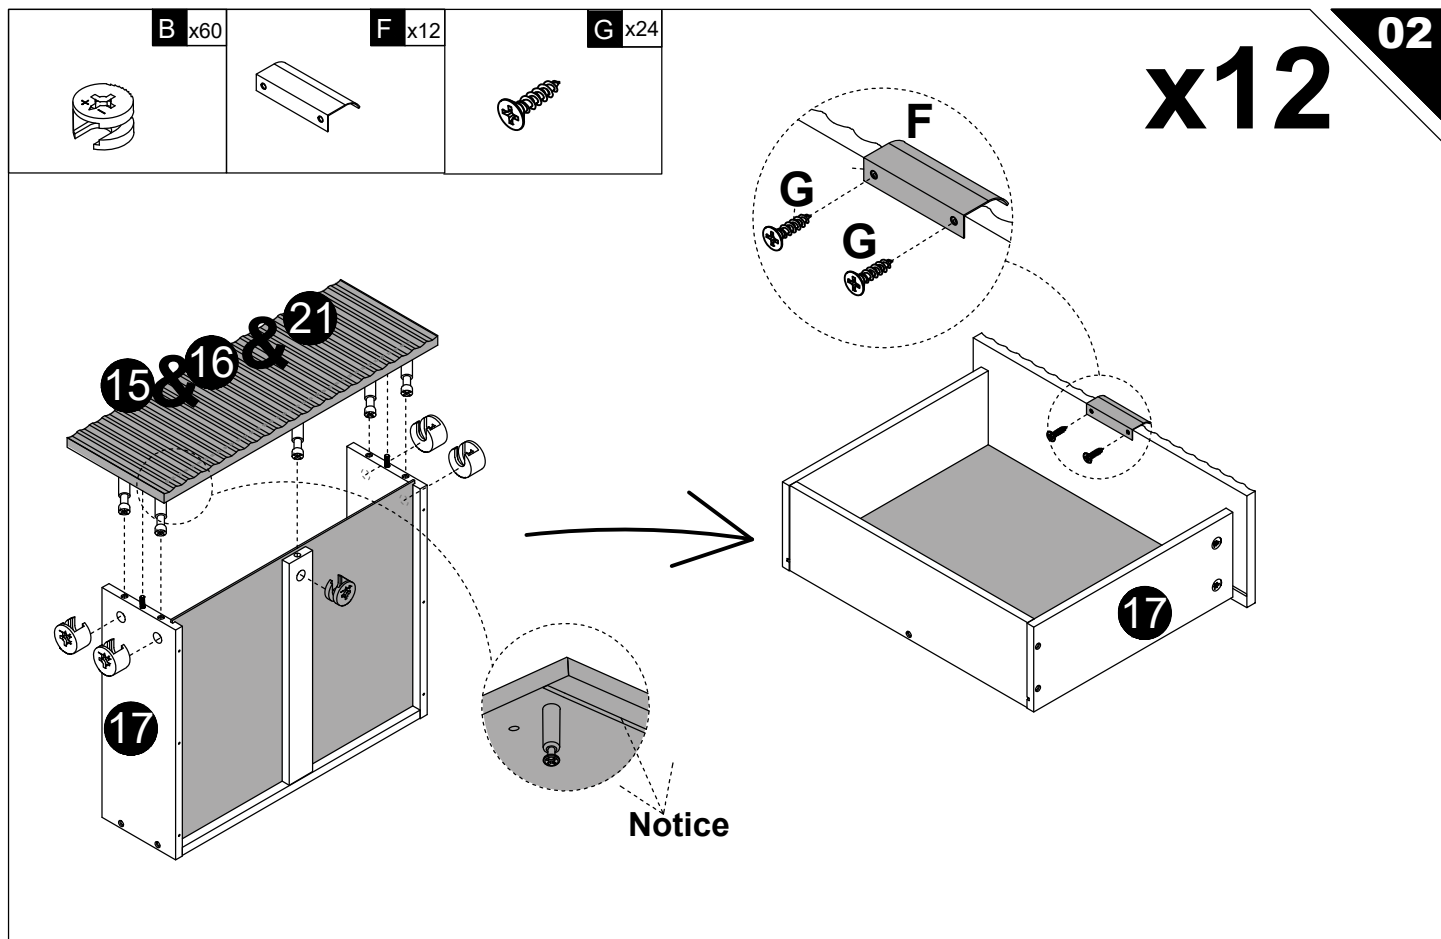

04

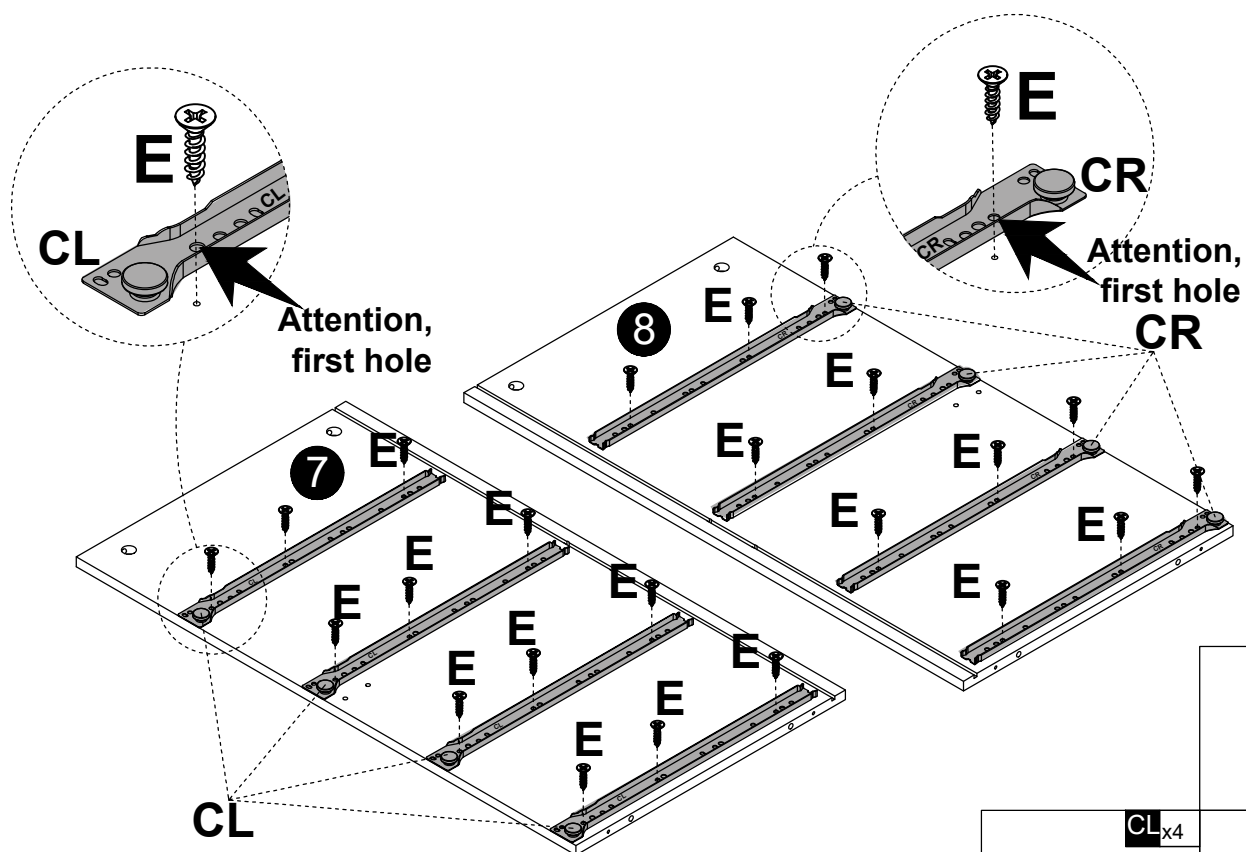


E x24




CL x4

CR x4



05

x2

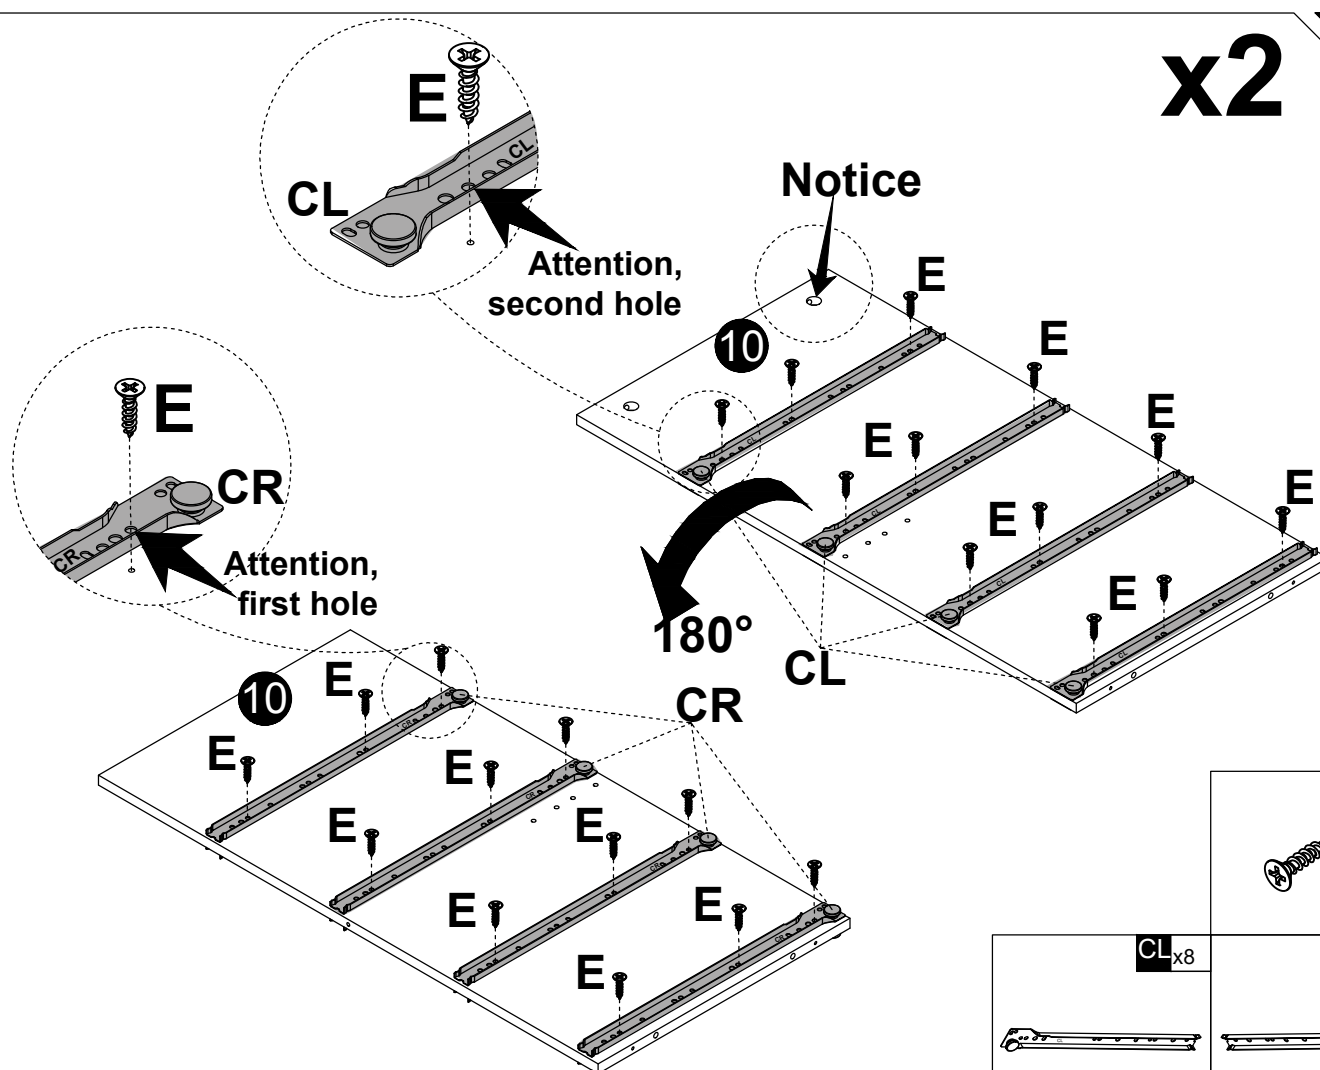



E x48




CL x8

CR x8



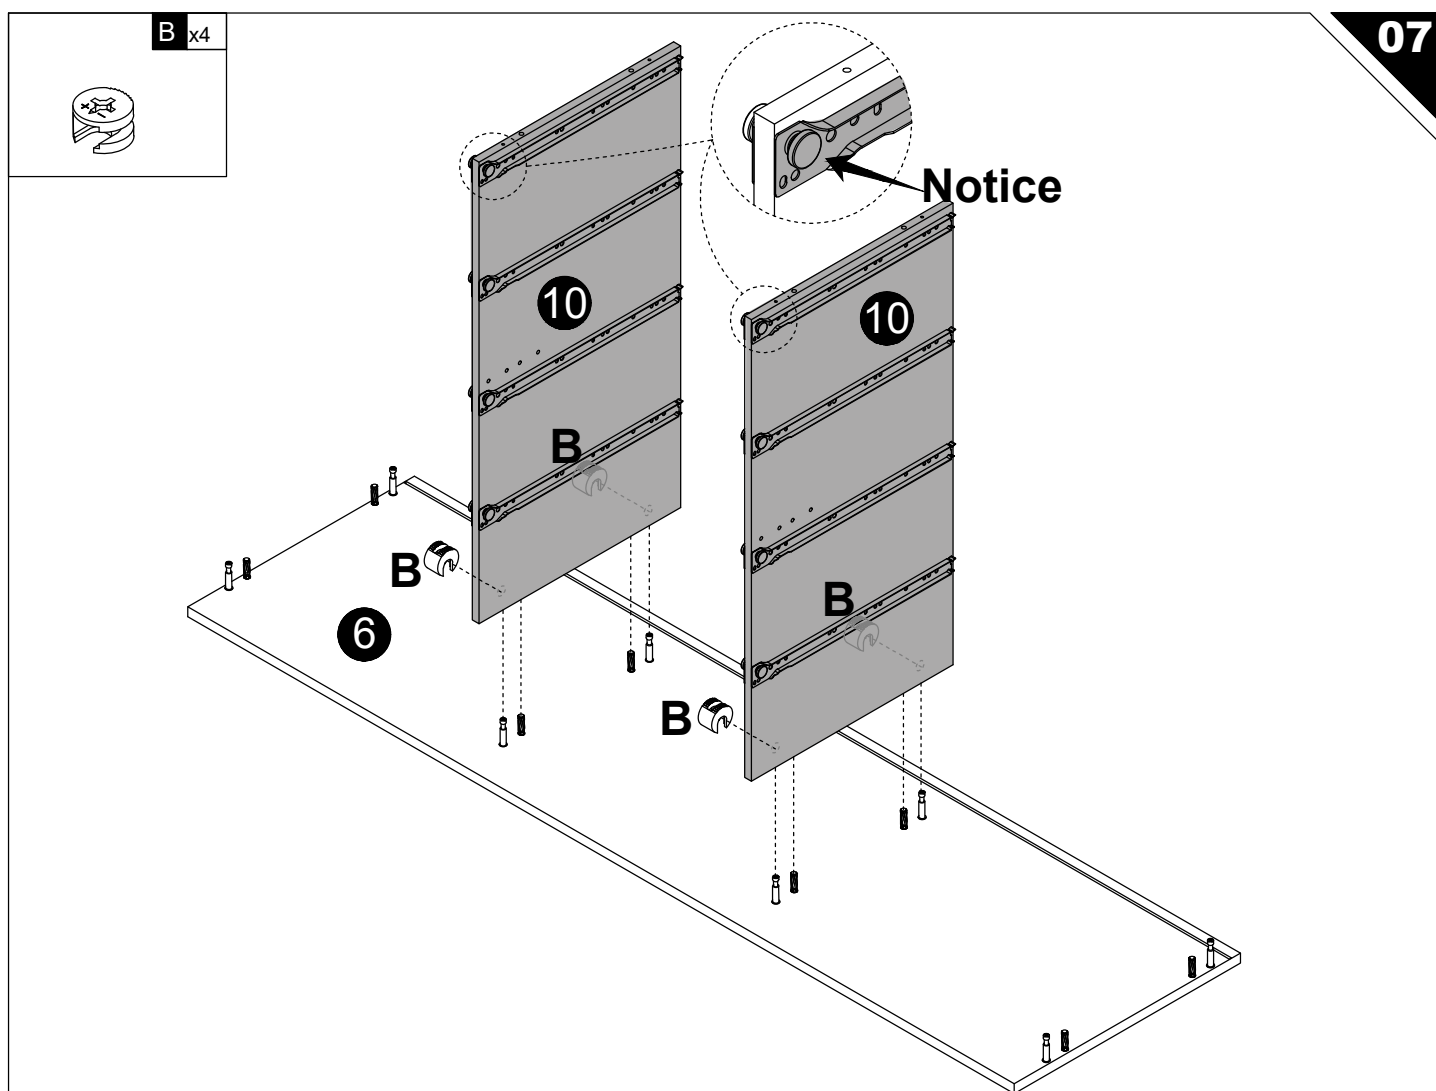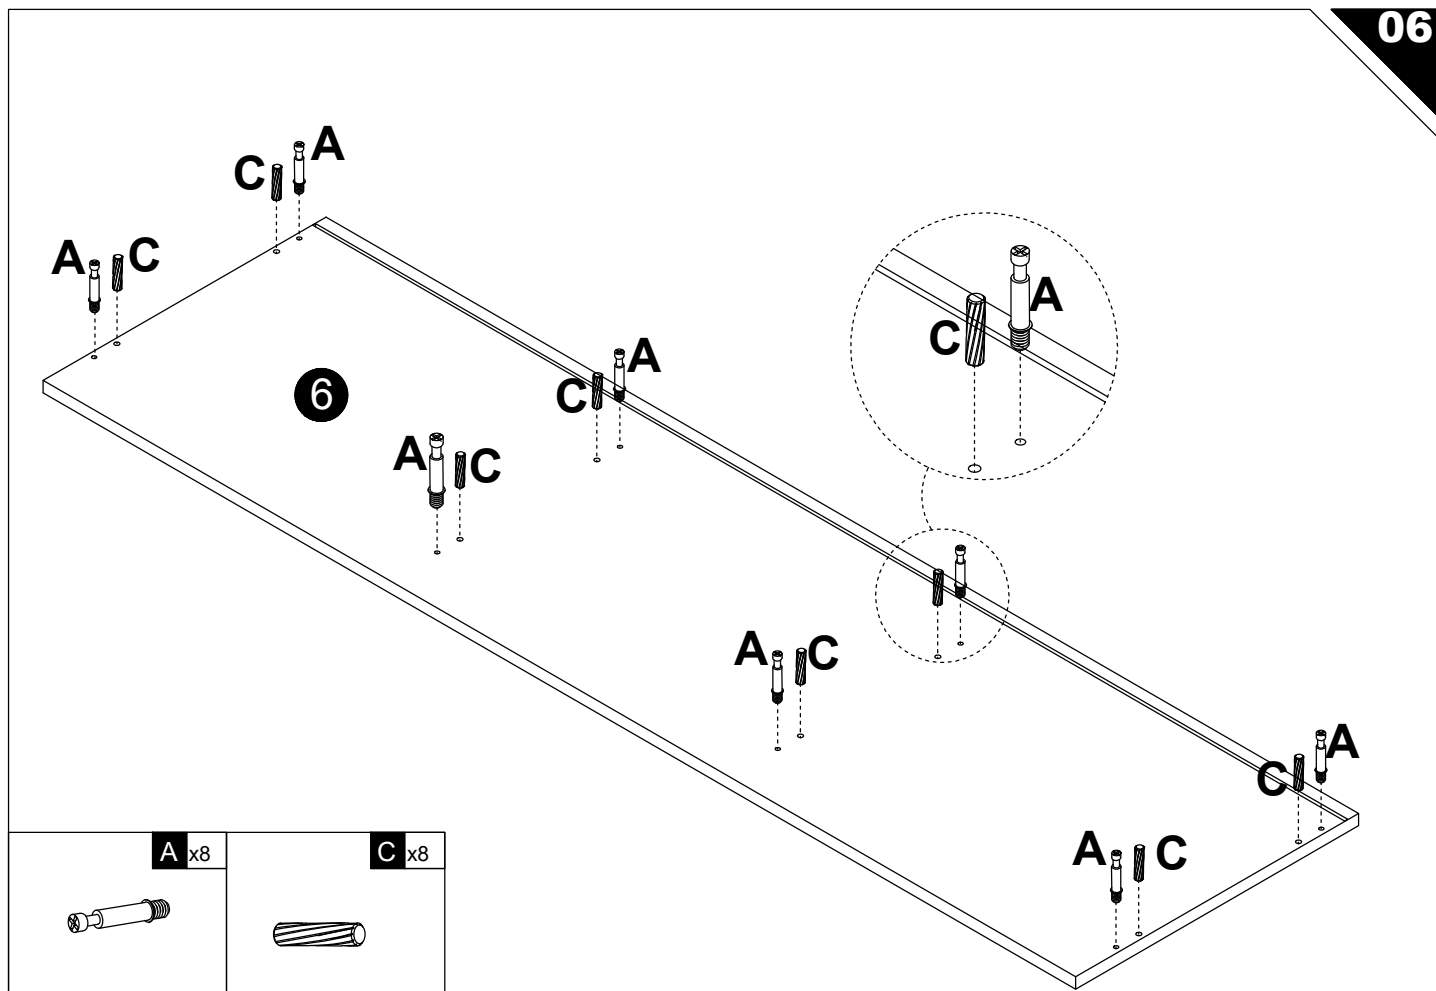


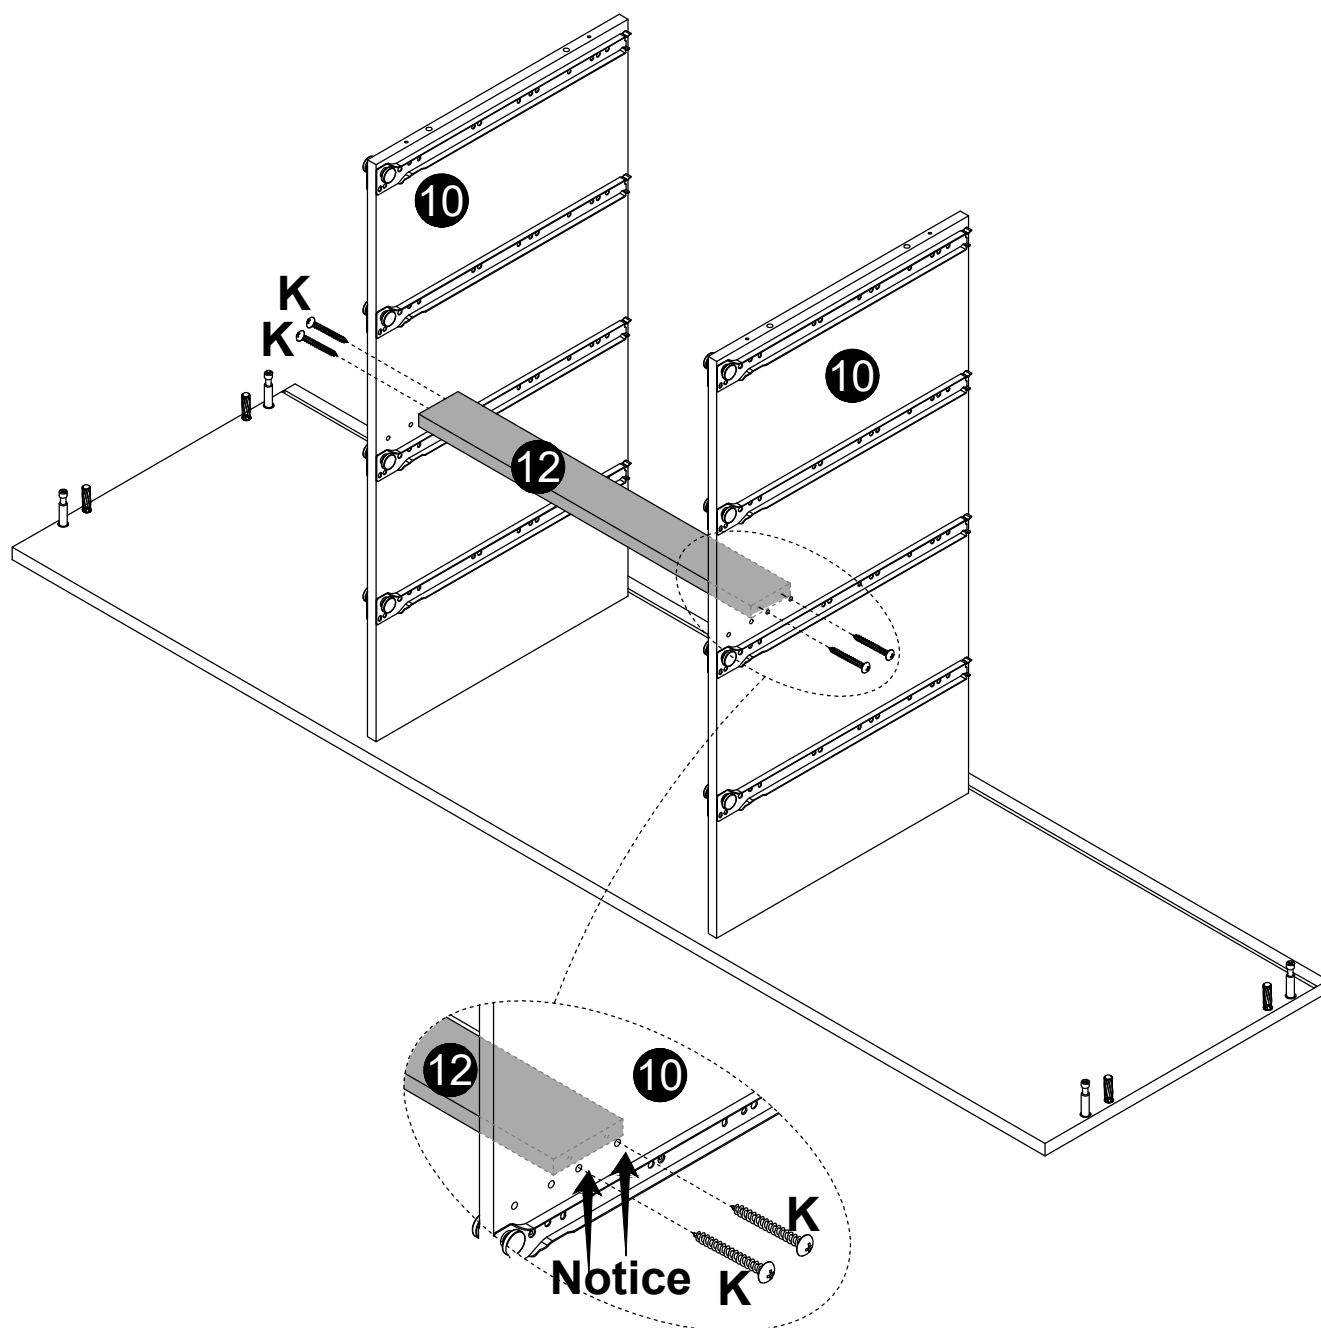

Attention: Use screw "K" to pass through the third and fourth holes of plates 10 and 10 and connect to plate 12.




B x2



K x4

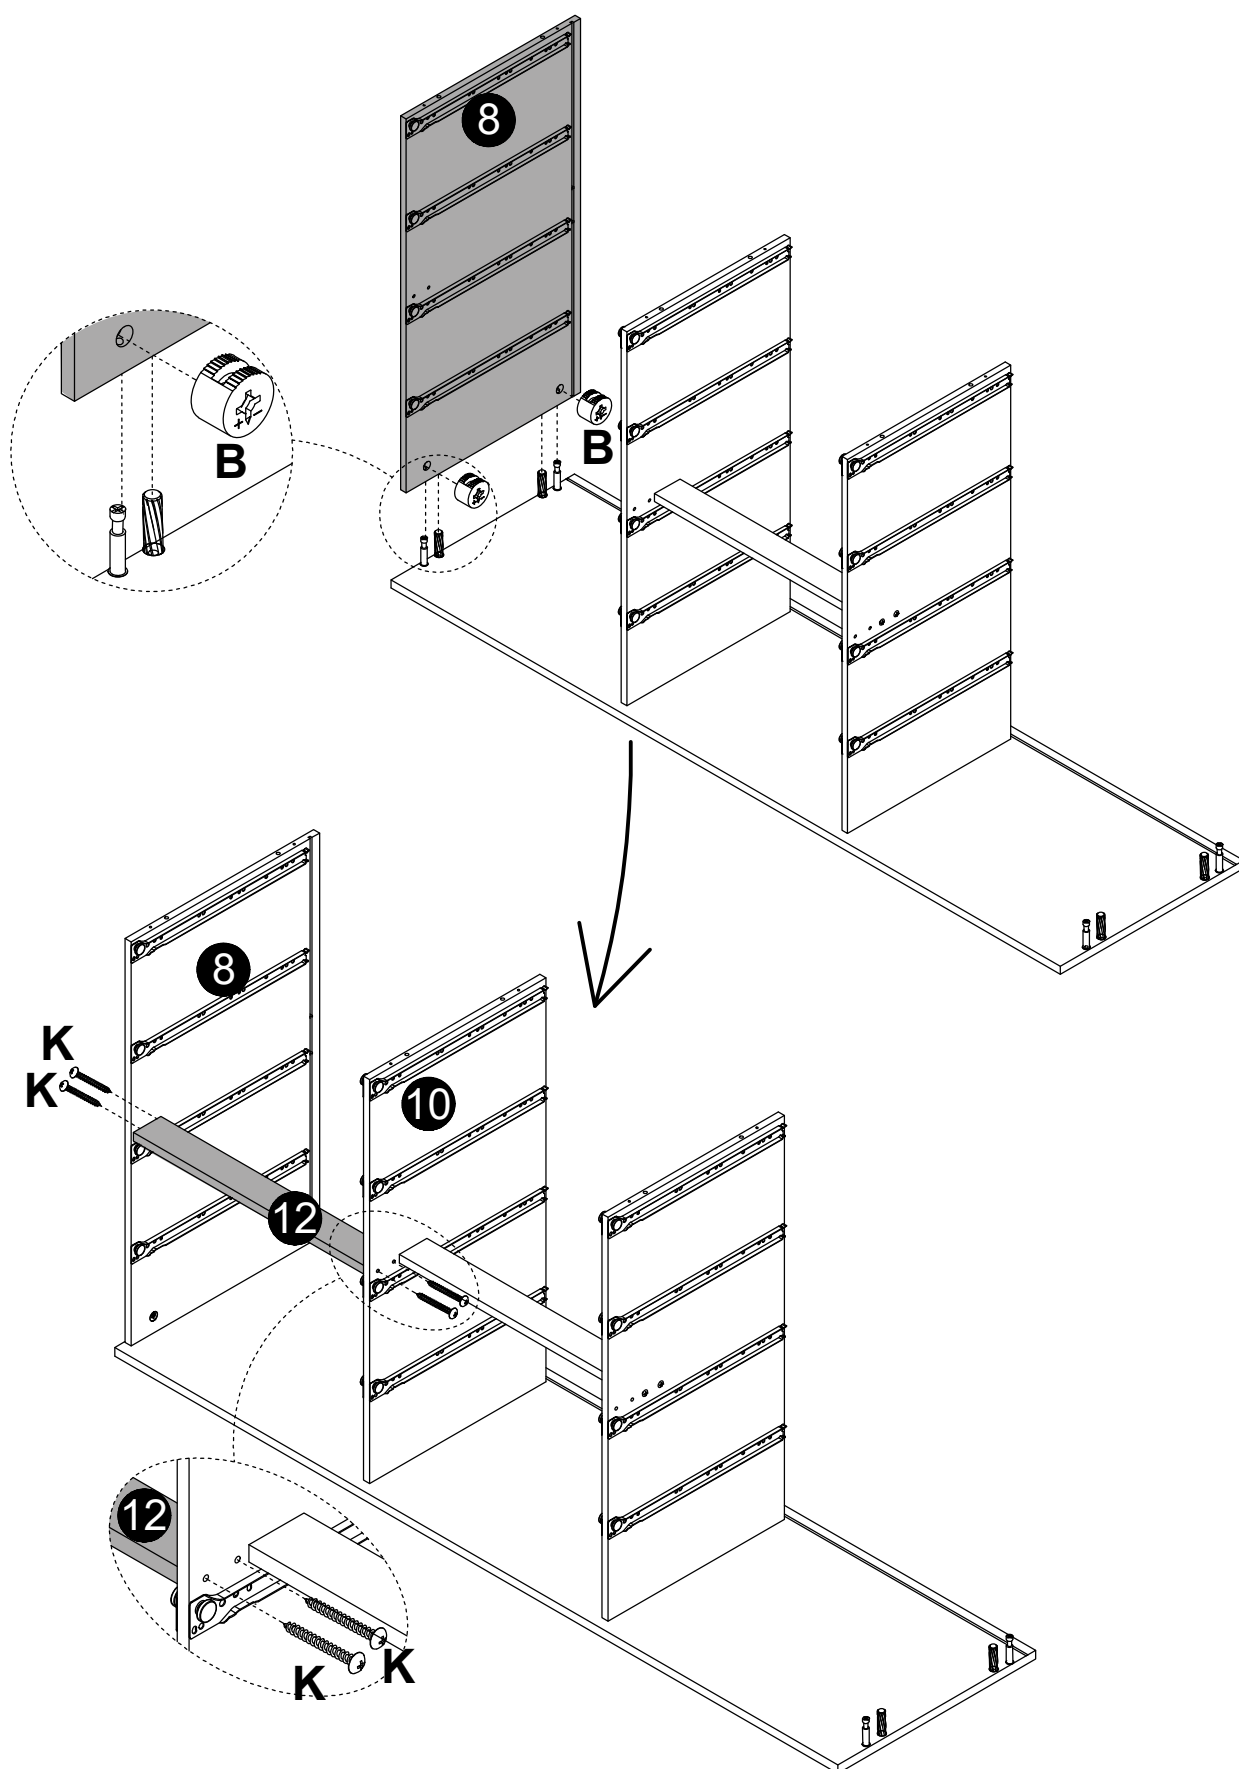



Note: At least two people are required for this step.

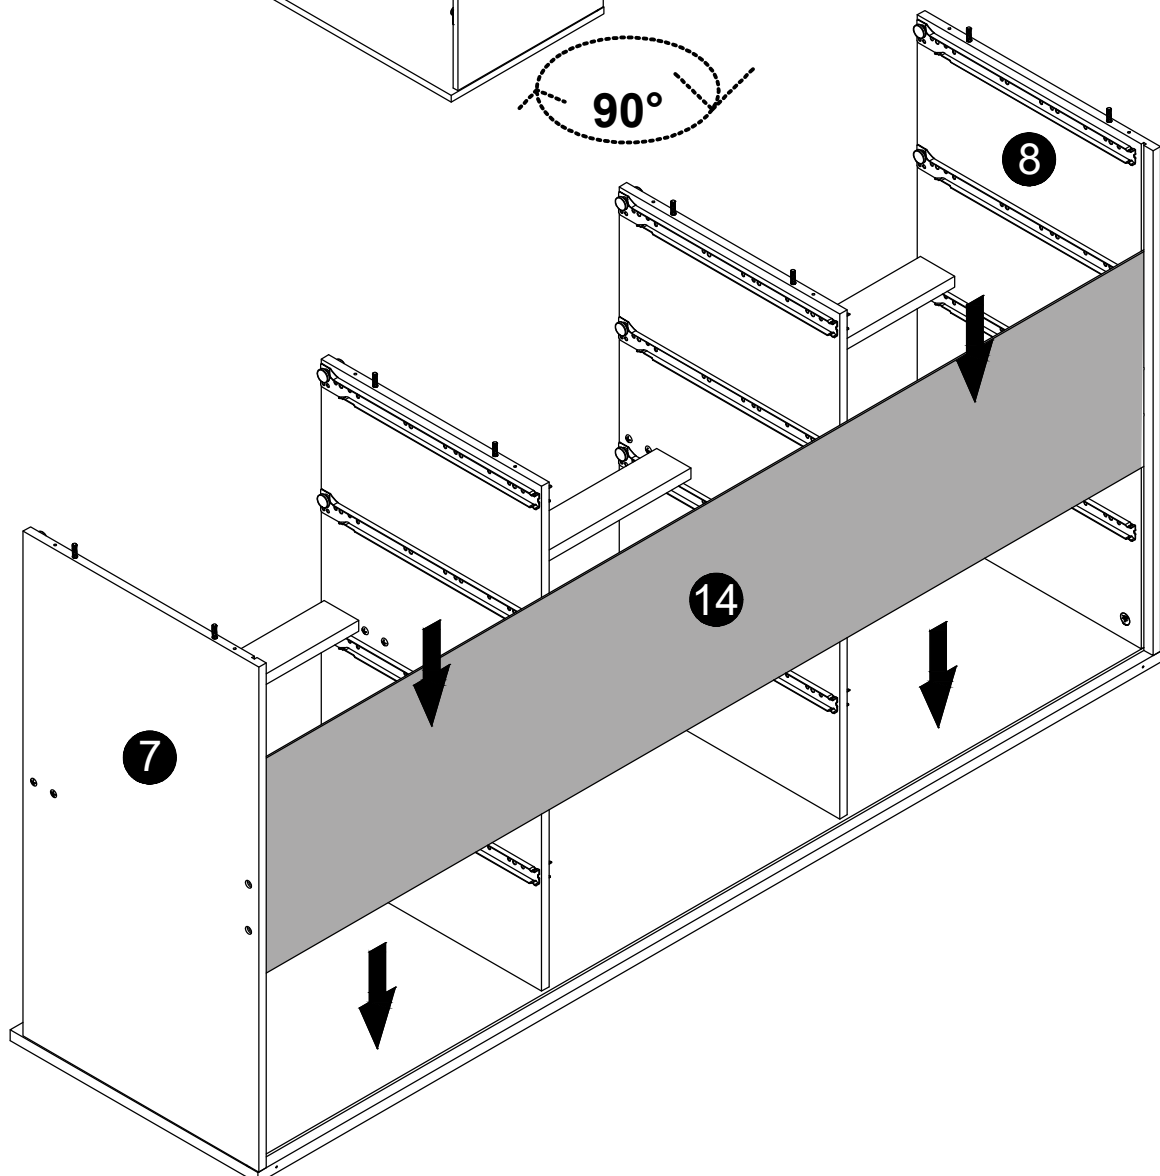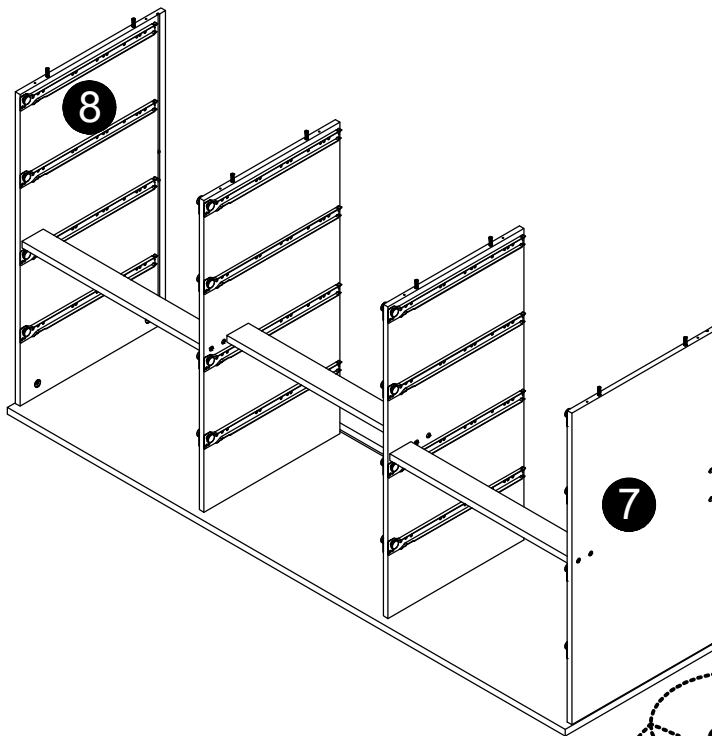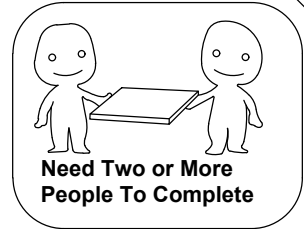

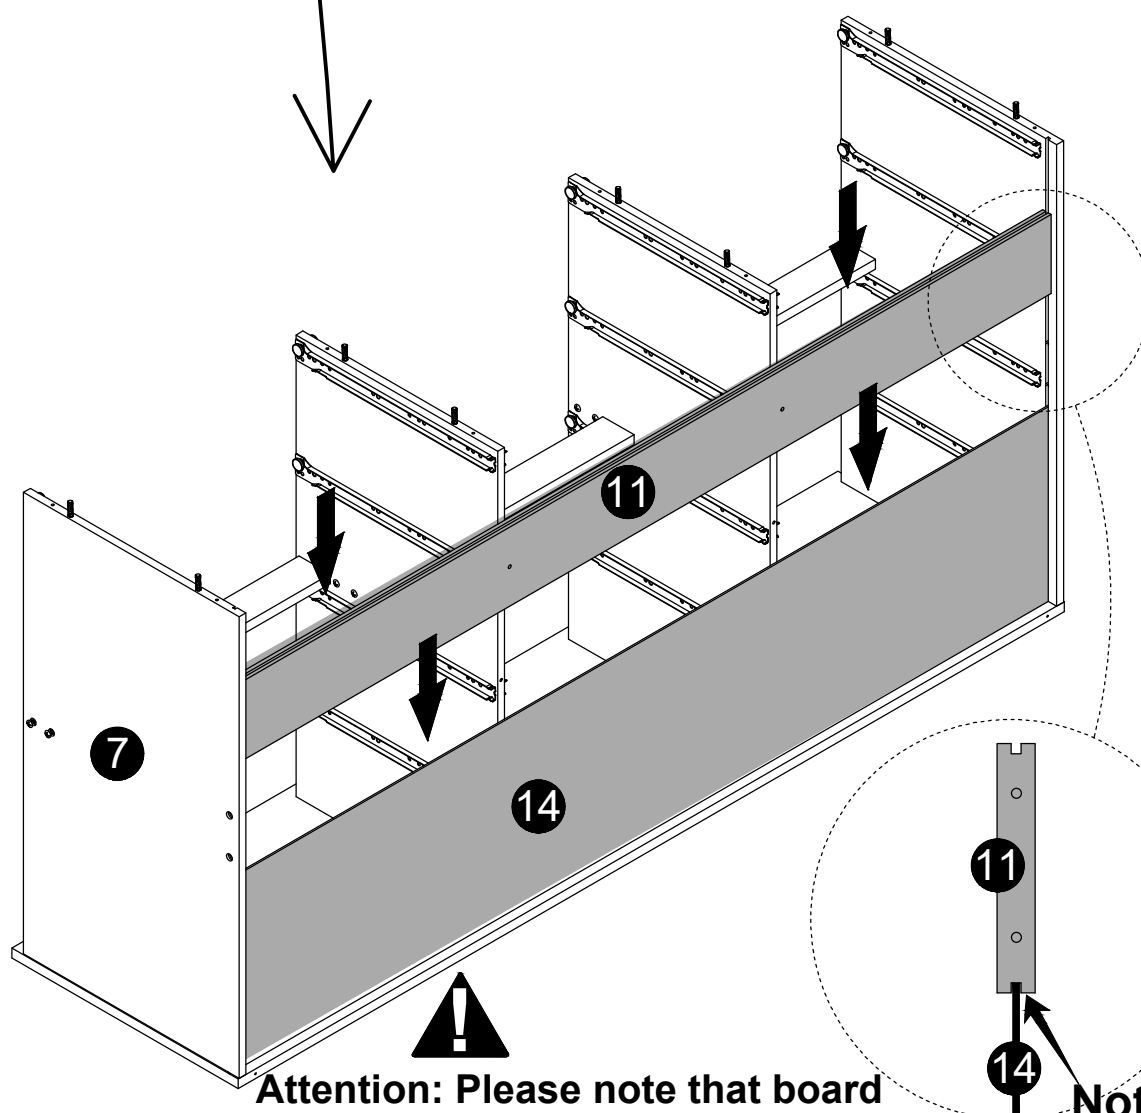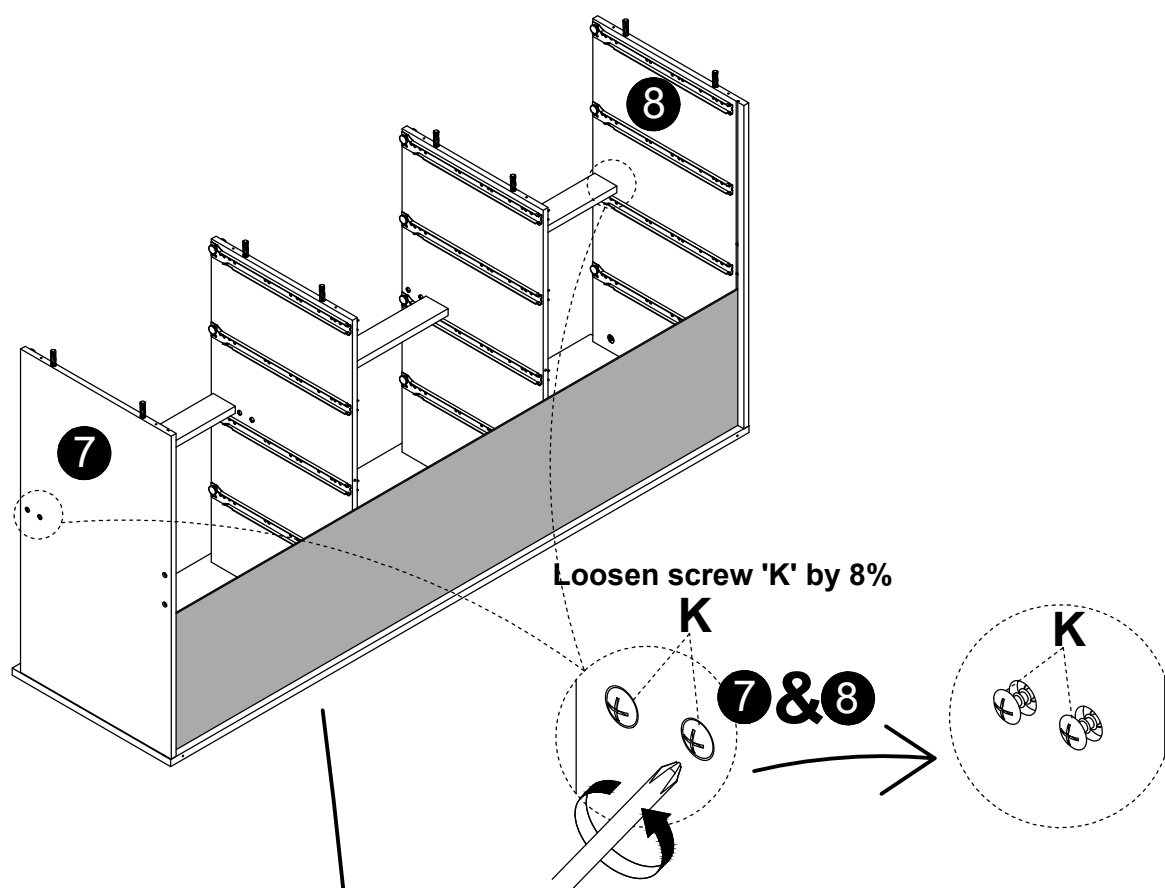

Attention: Please note that board 14 needs to be inserted into slot 11.

K x6



Tighten screw 'K' to 100%

K

7 & 8

8

K
K



11

K


7

K
K

Attention: Please note that board 14 needs to be inserted into slot 11.

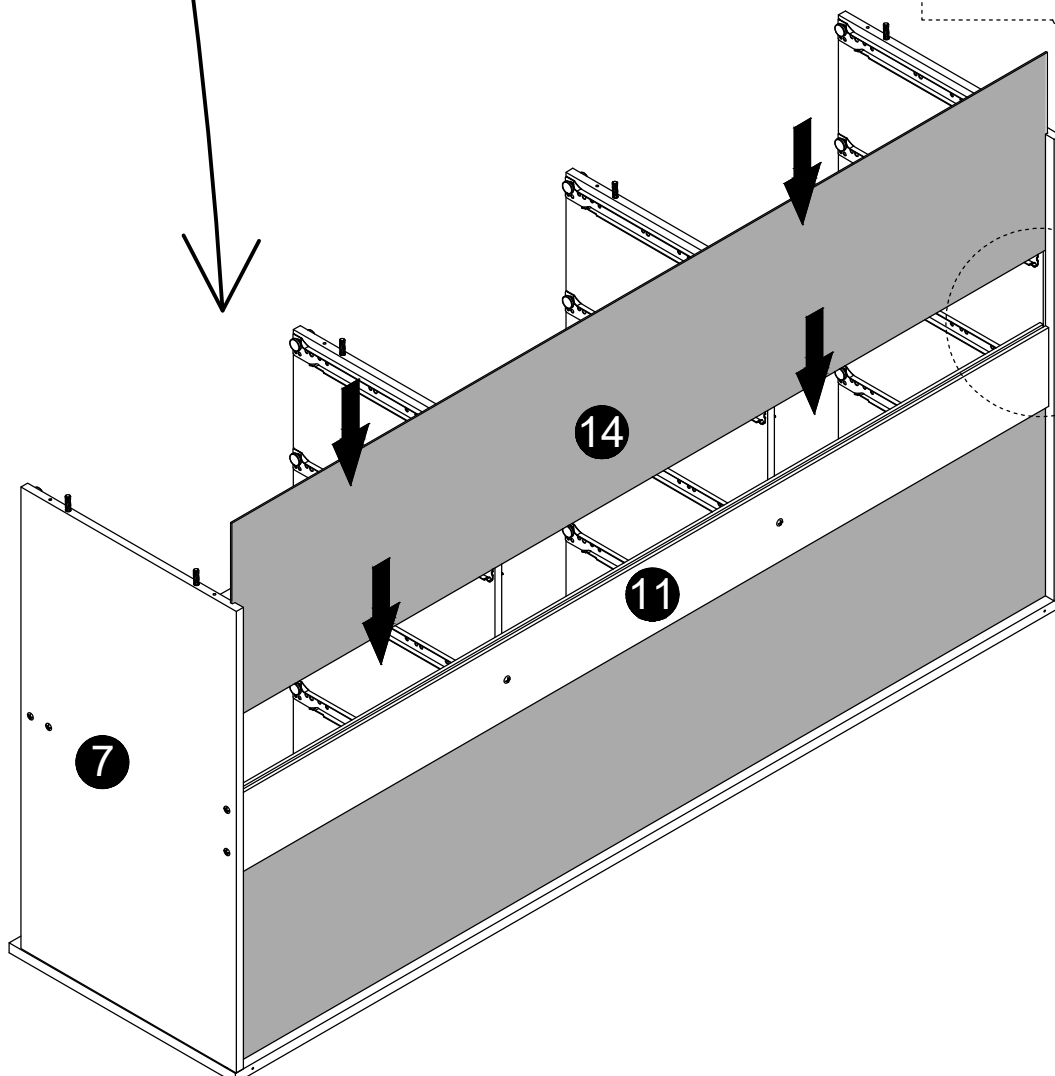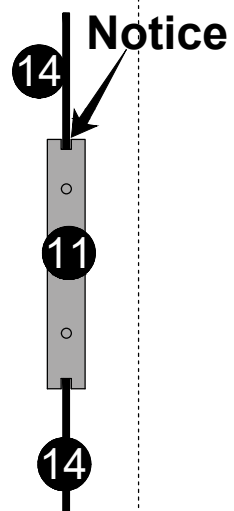


A x8

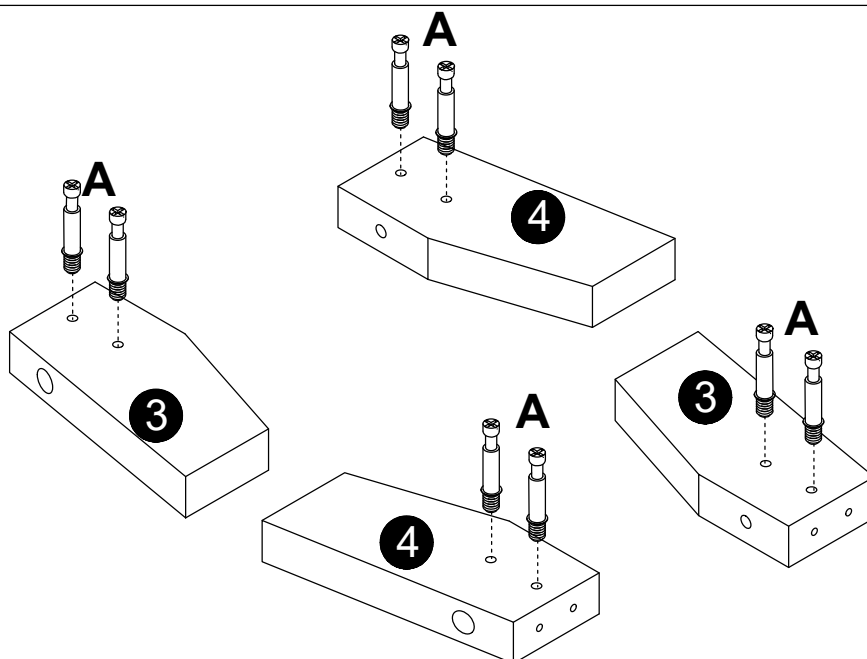

B x8

O x4

P x8

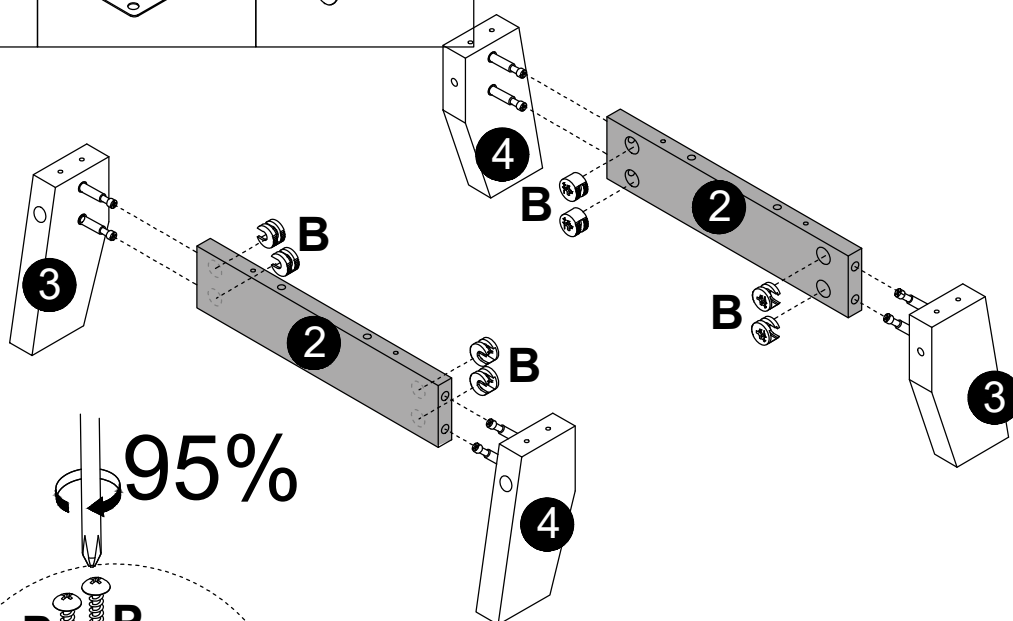


95%

P P

O

Lock the screw "P" to 95%,
do not fully tighten it.

Notice

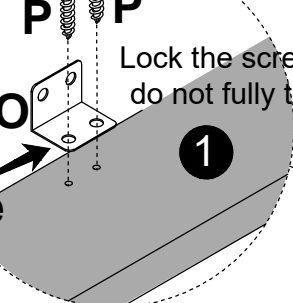

P O

P O

95%


P P

O

Lock the screw "P" to
95%,do not fully
tighten it.

Notice





Notice

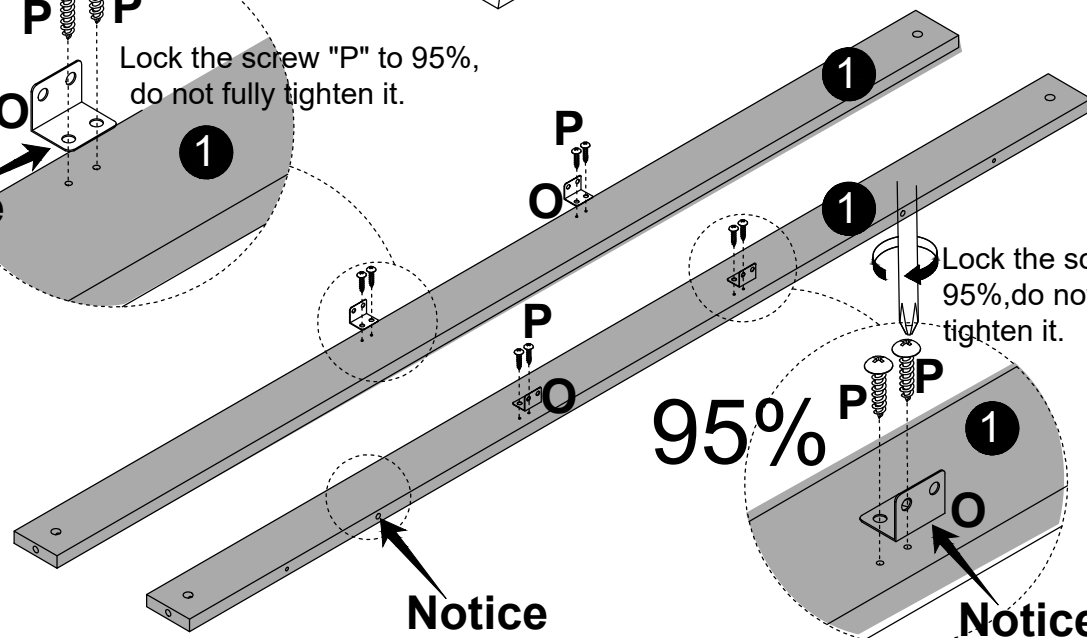

C x8


M x4

N x4

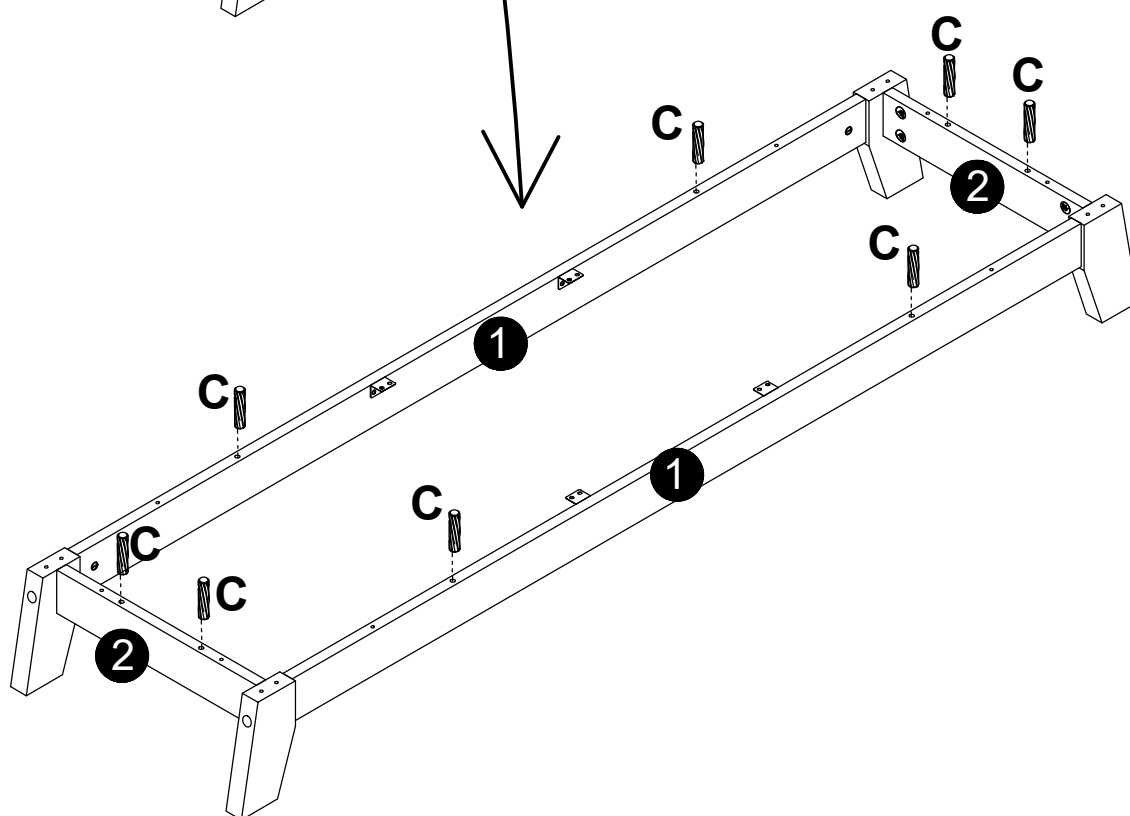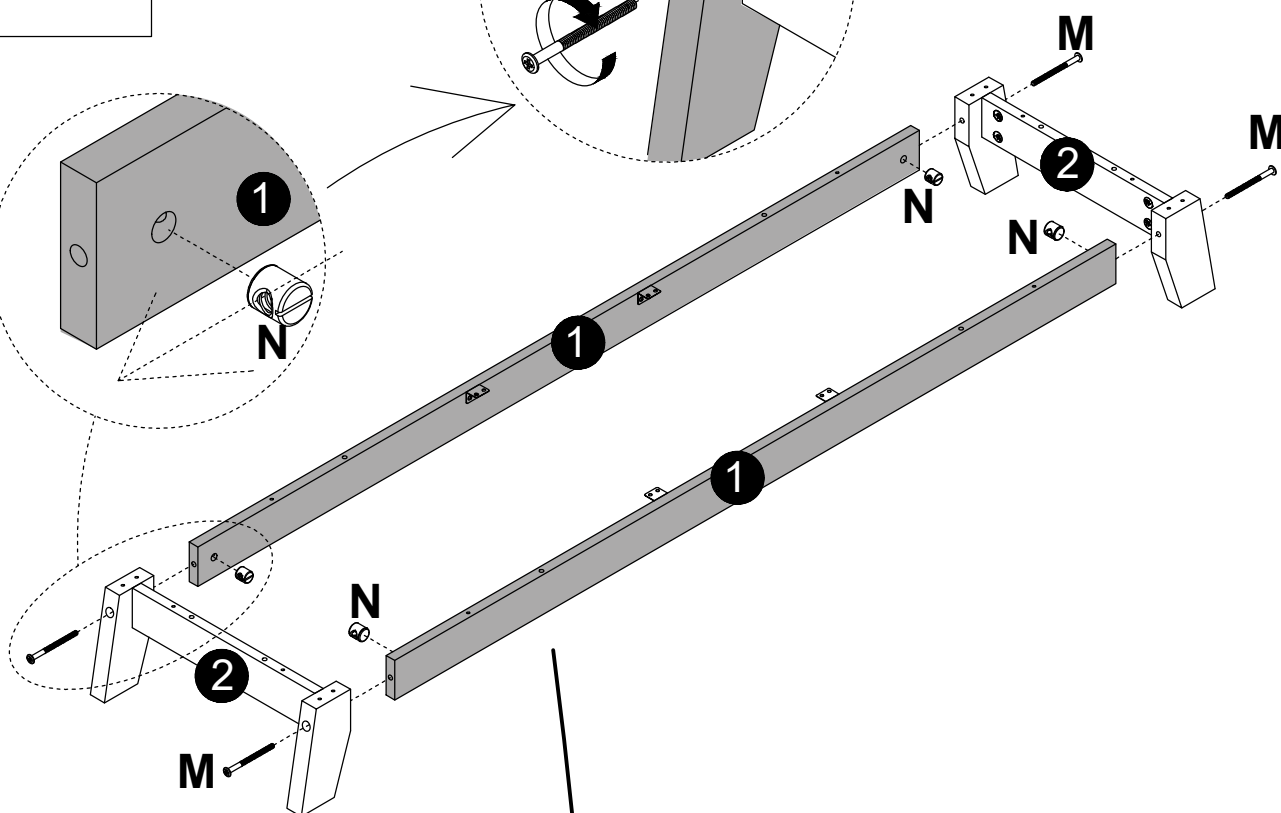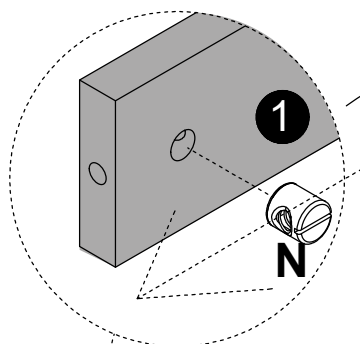
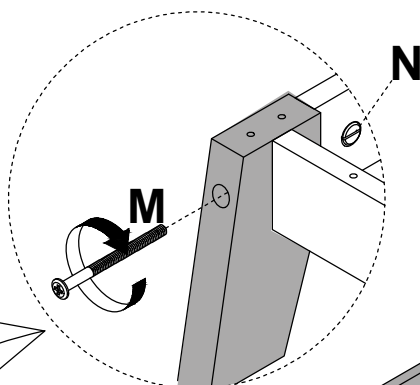


K x16

L x2

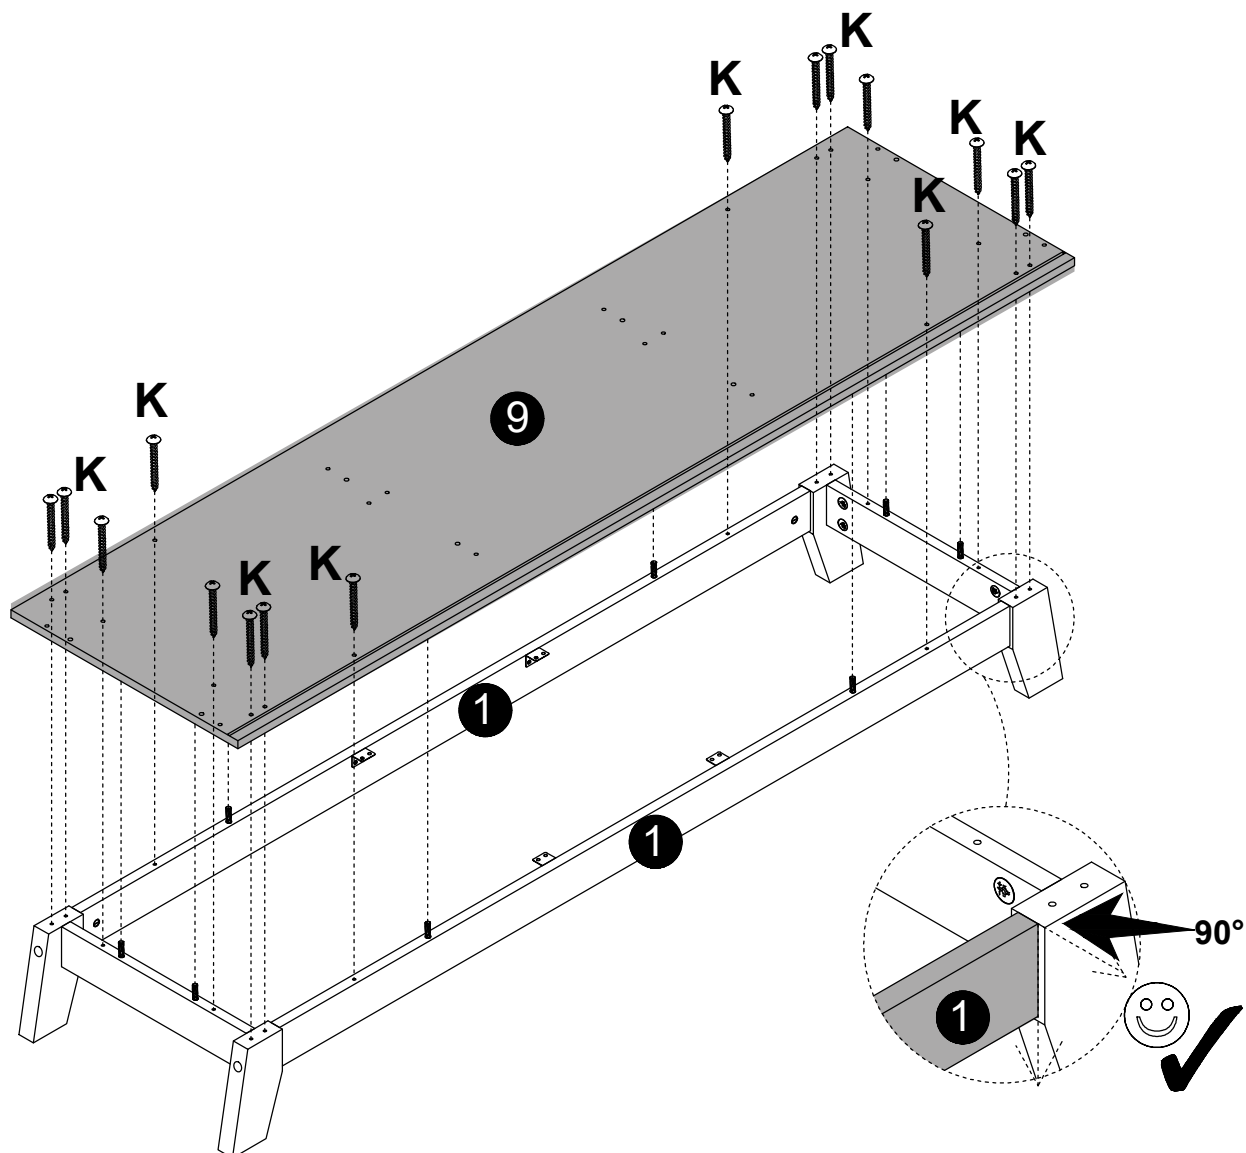


If board 1 does not have a 90 degree angle, please rotate board 1 90 degrees by hand.

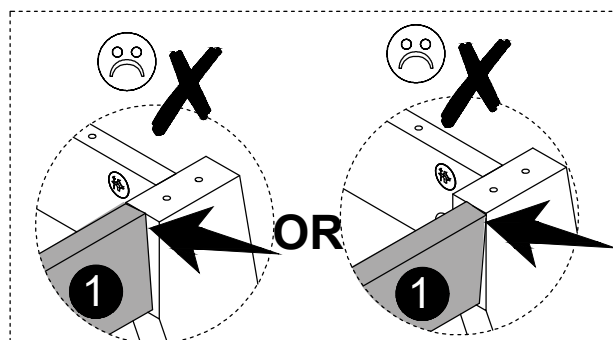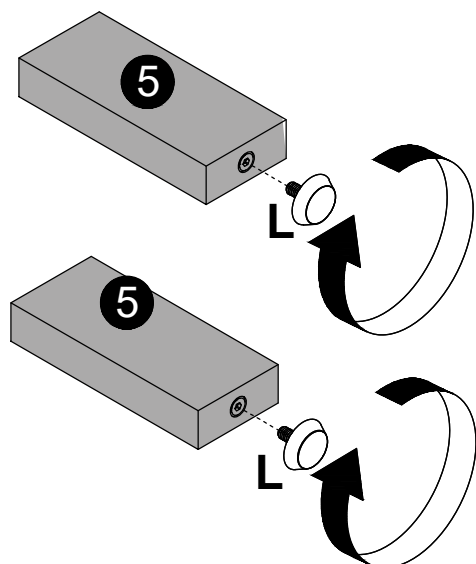

P x8


Q x4

K x4

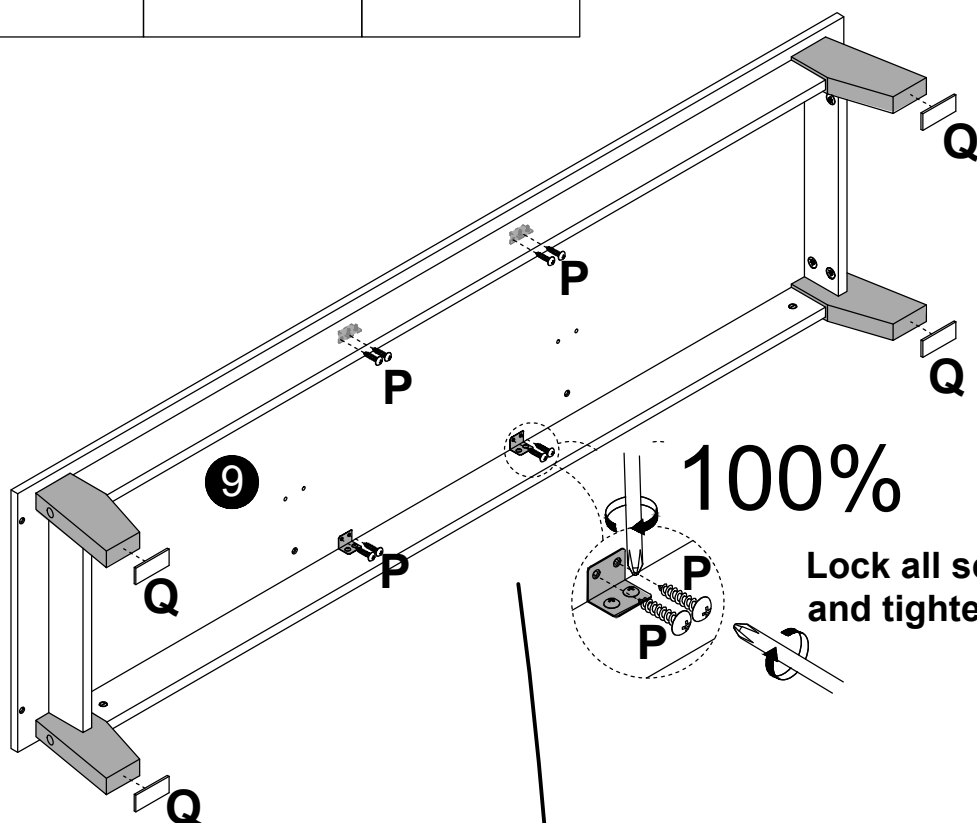


100%


Lock all screws "P" to 100%
and tighten them completely.

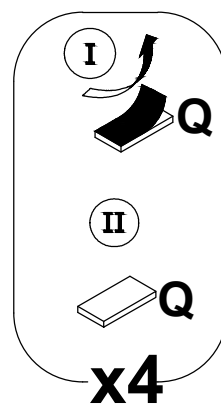

x4


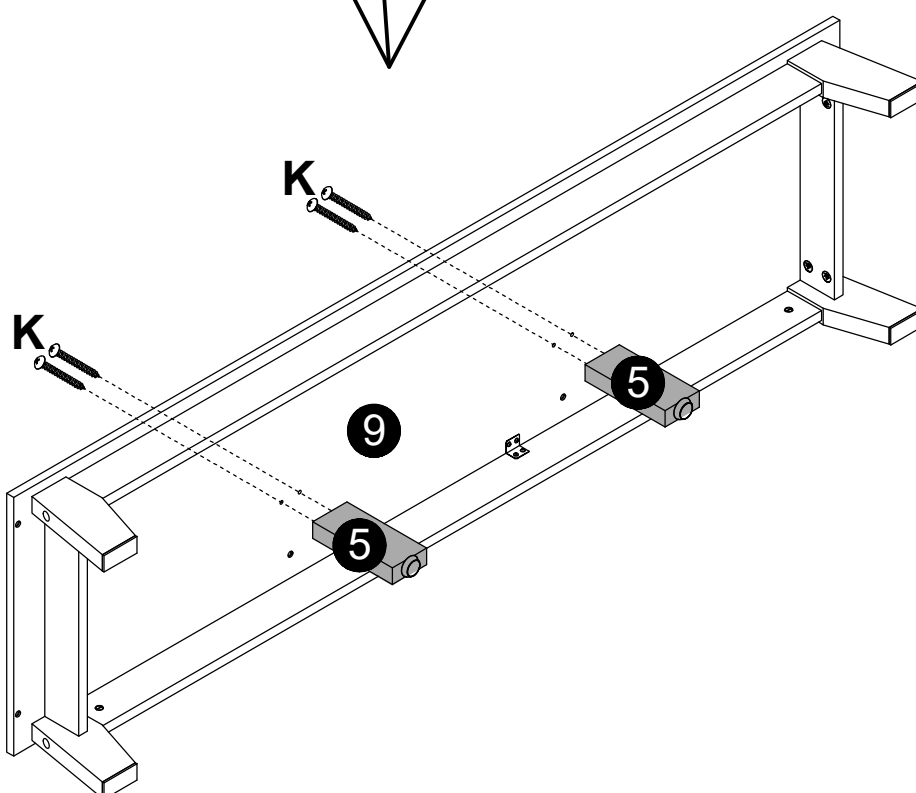


D x8








Note: At least two people are required for this step.

19

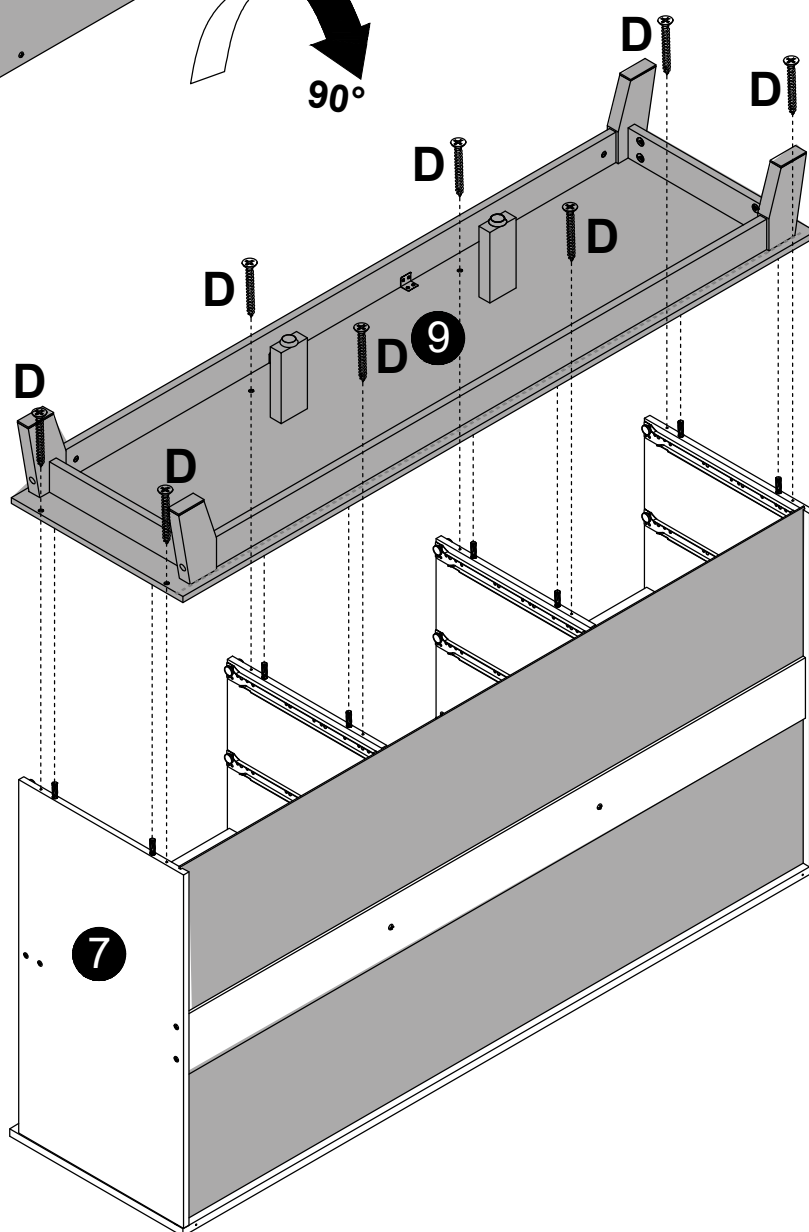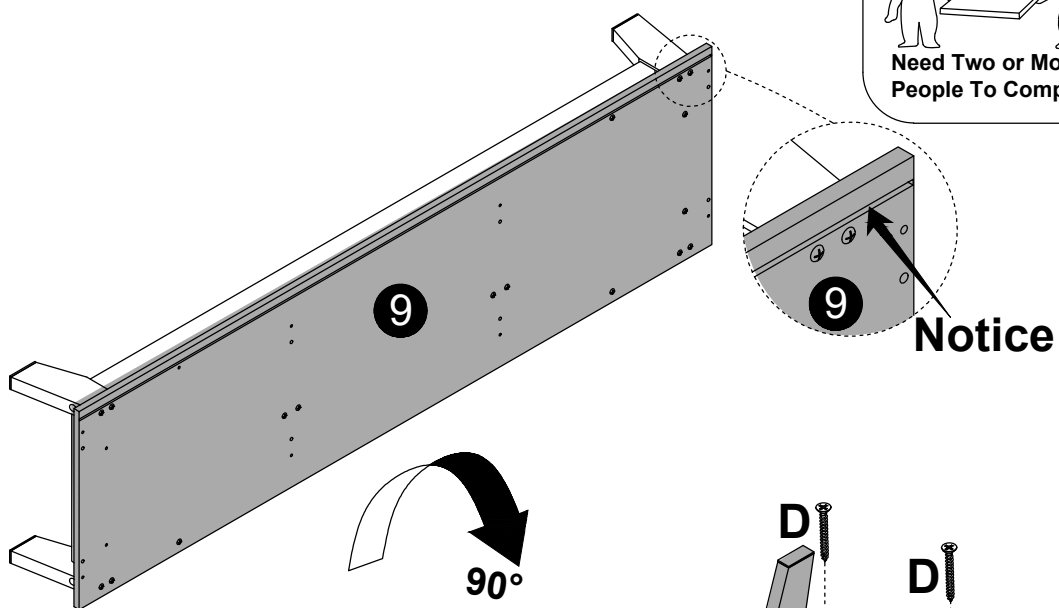

20

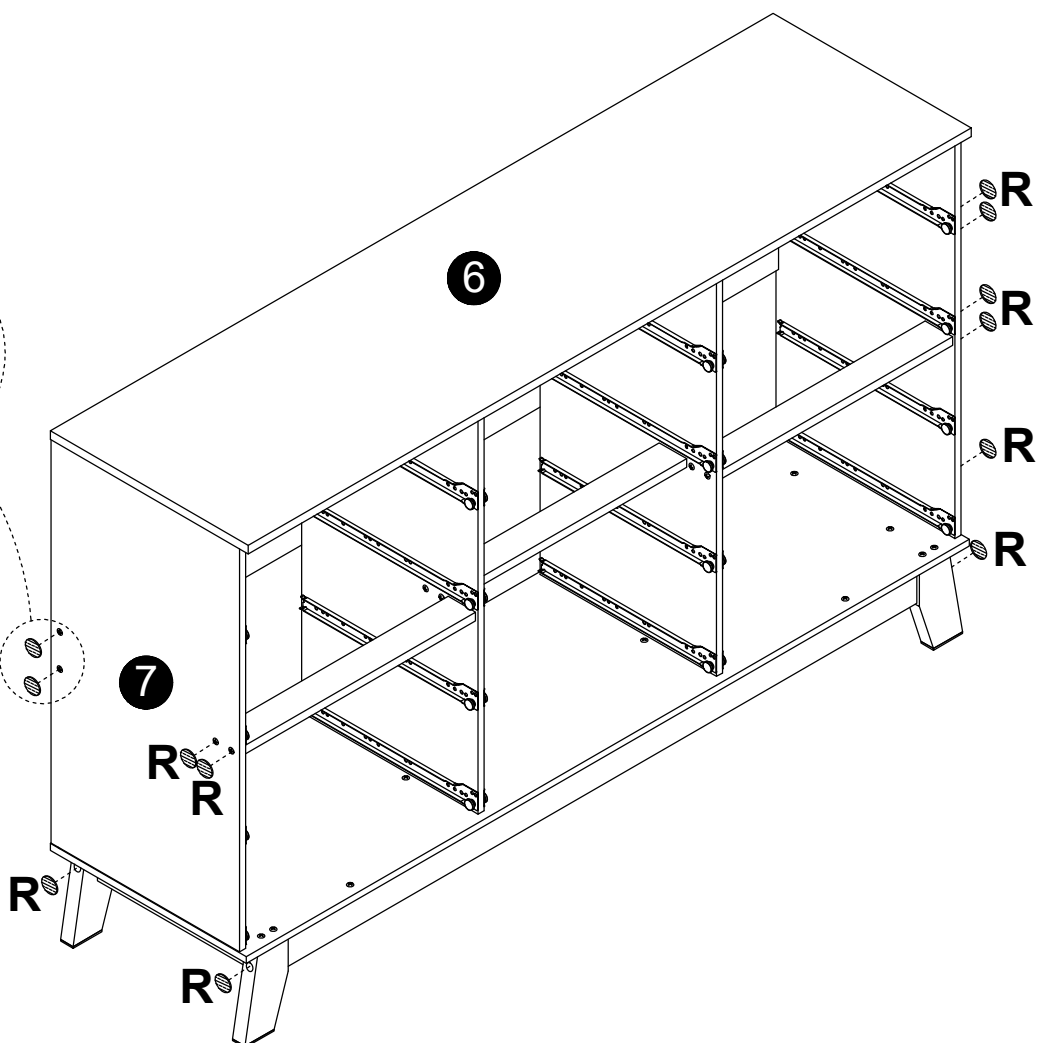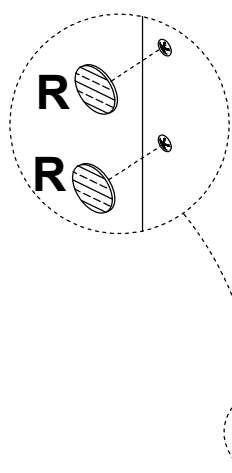
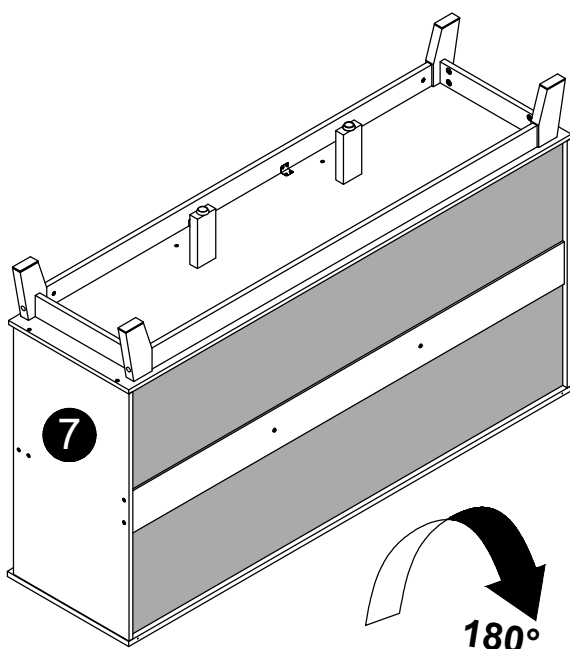


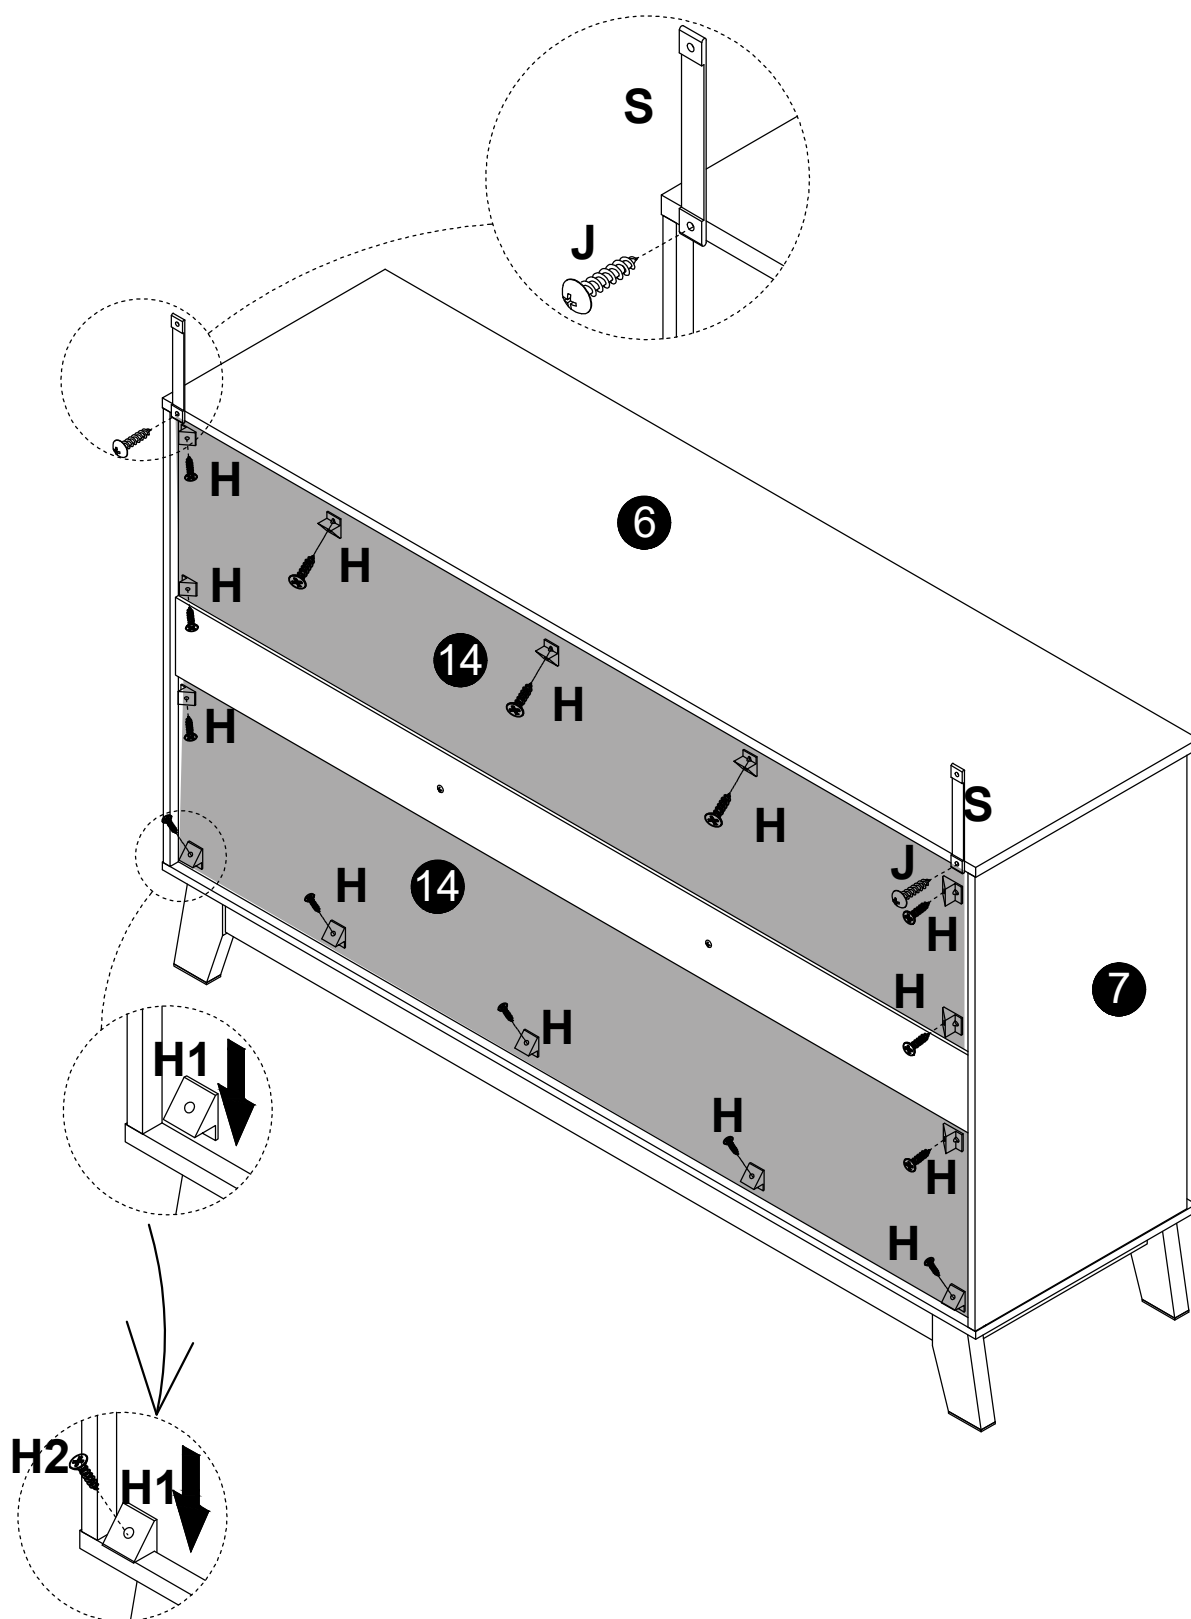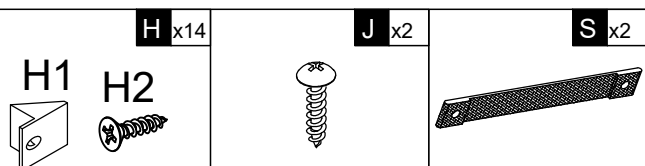


Attention: The drawers are divided into left drawer, middle drawer, and right drawer.





As shown, the left drawer is installed on the cabinet.

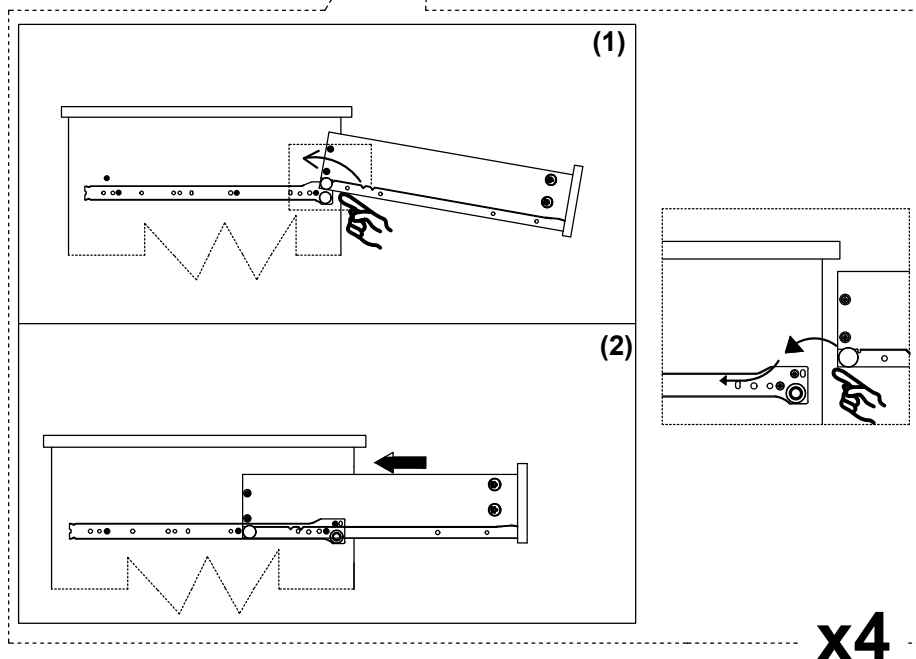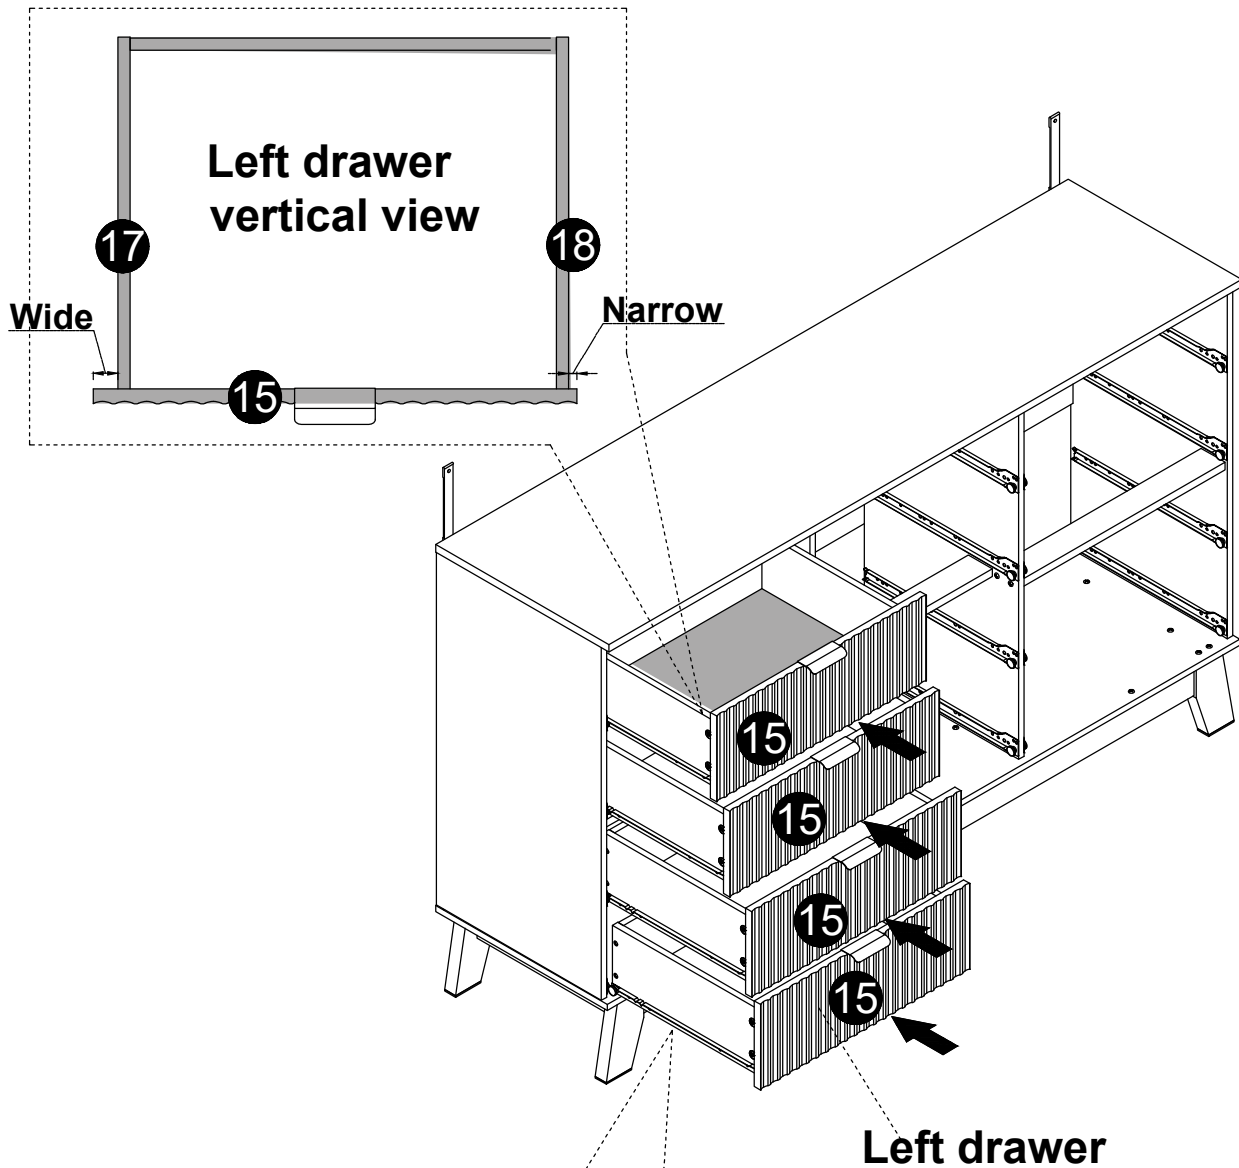

Attention: The drawers are divided into left drawer, middle drawer, and right drawer.
 shown, the middle drawer is installed on the cabinet.

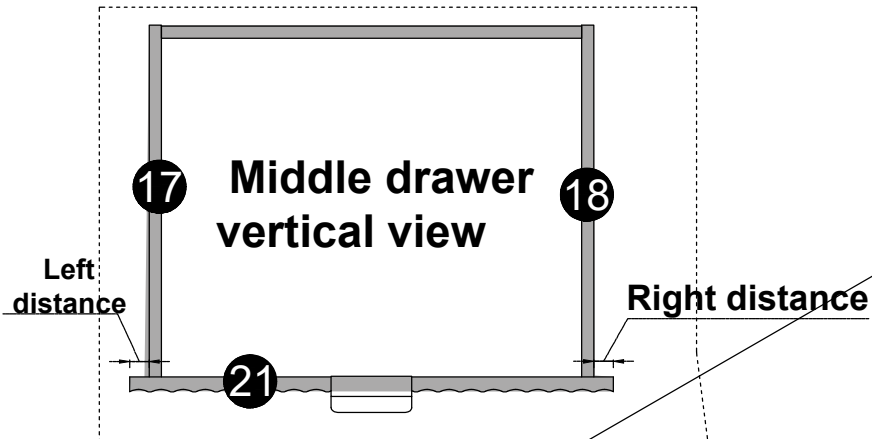



The distance between the left and right is the same.

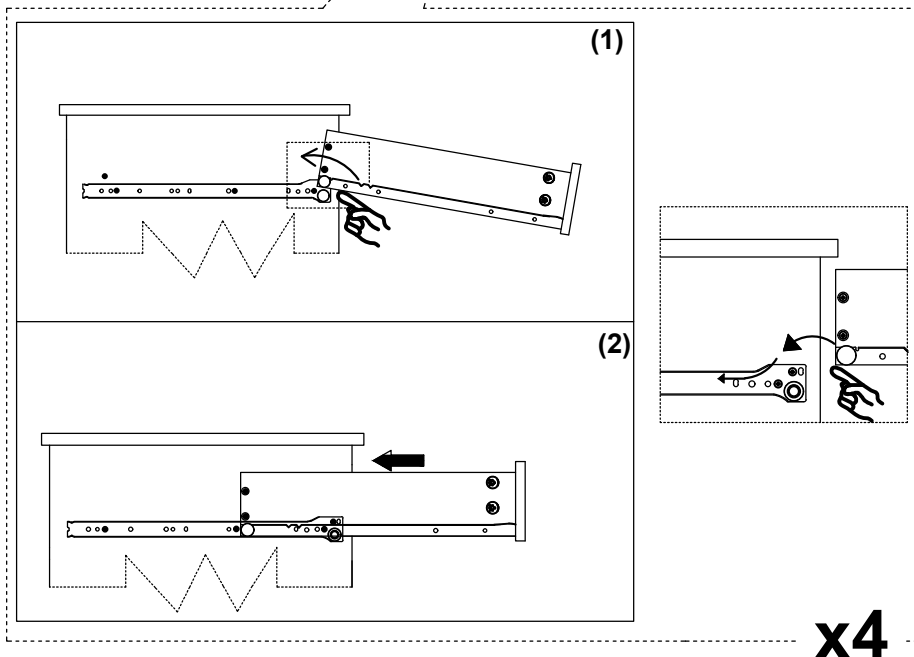
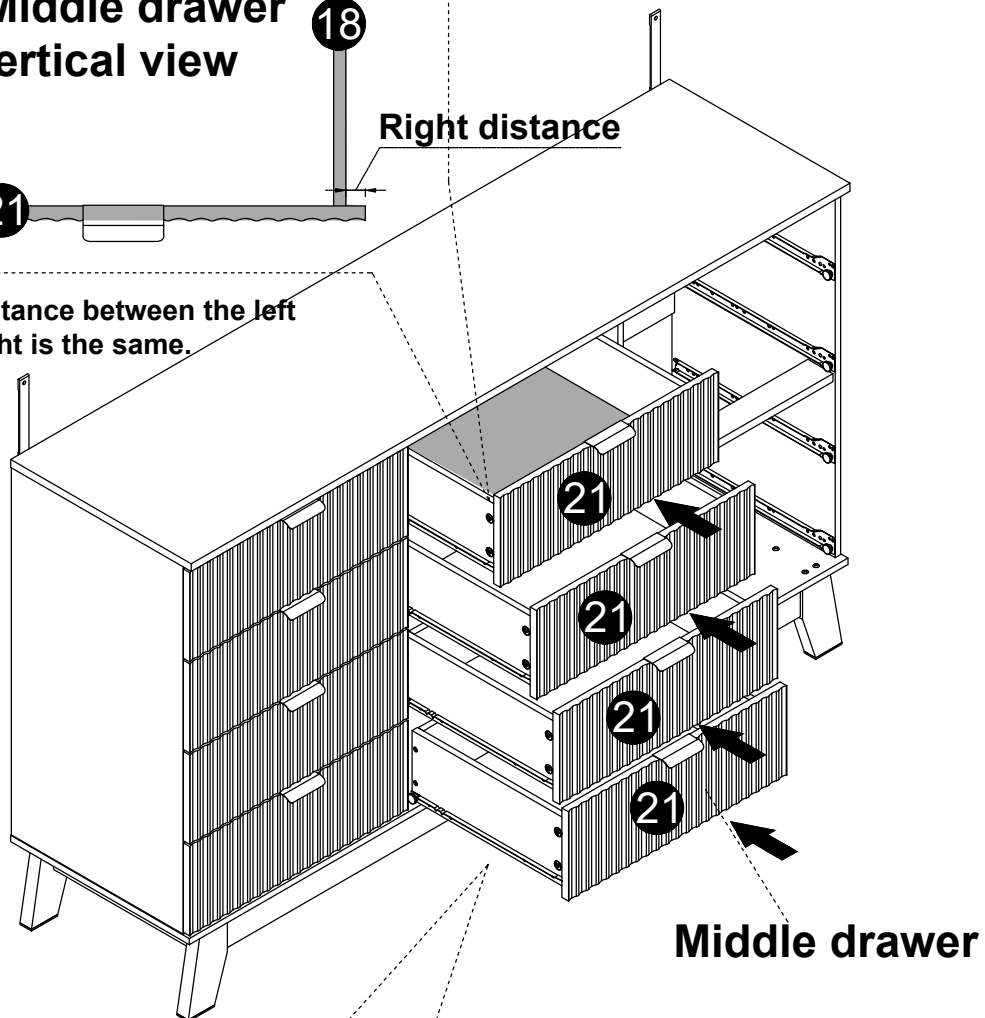


Attention: The drawers are divided into left drawer, middle drawer, and right drawer.




As shown, the right drawer is installed on the cabinet.

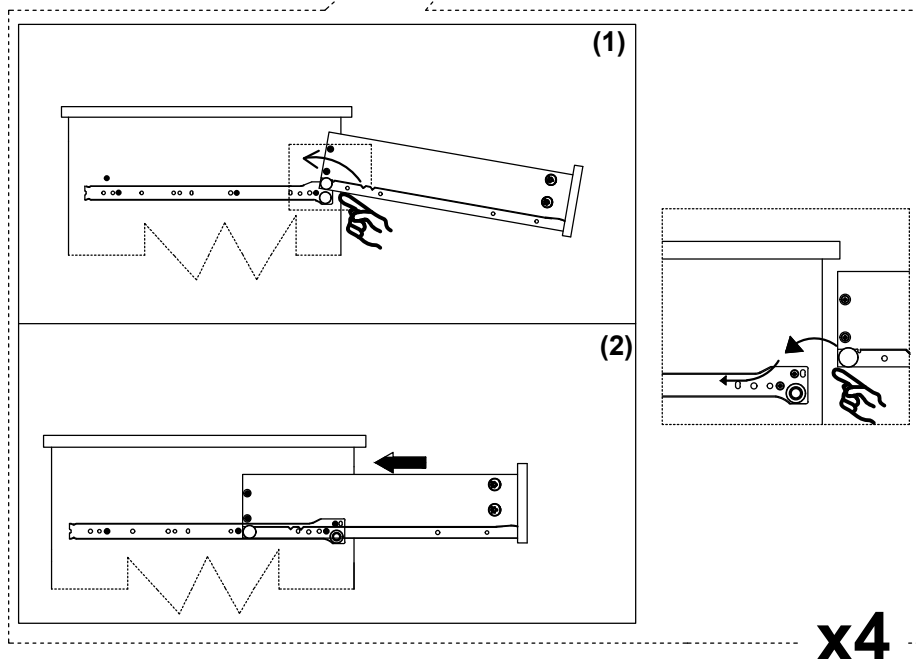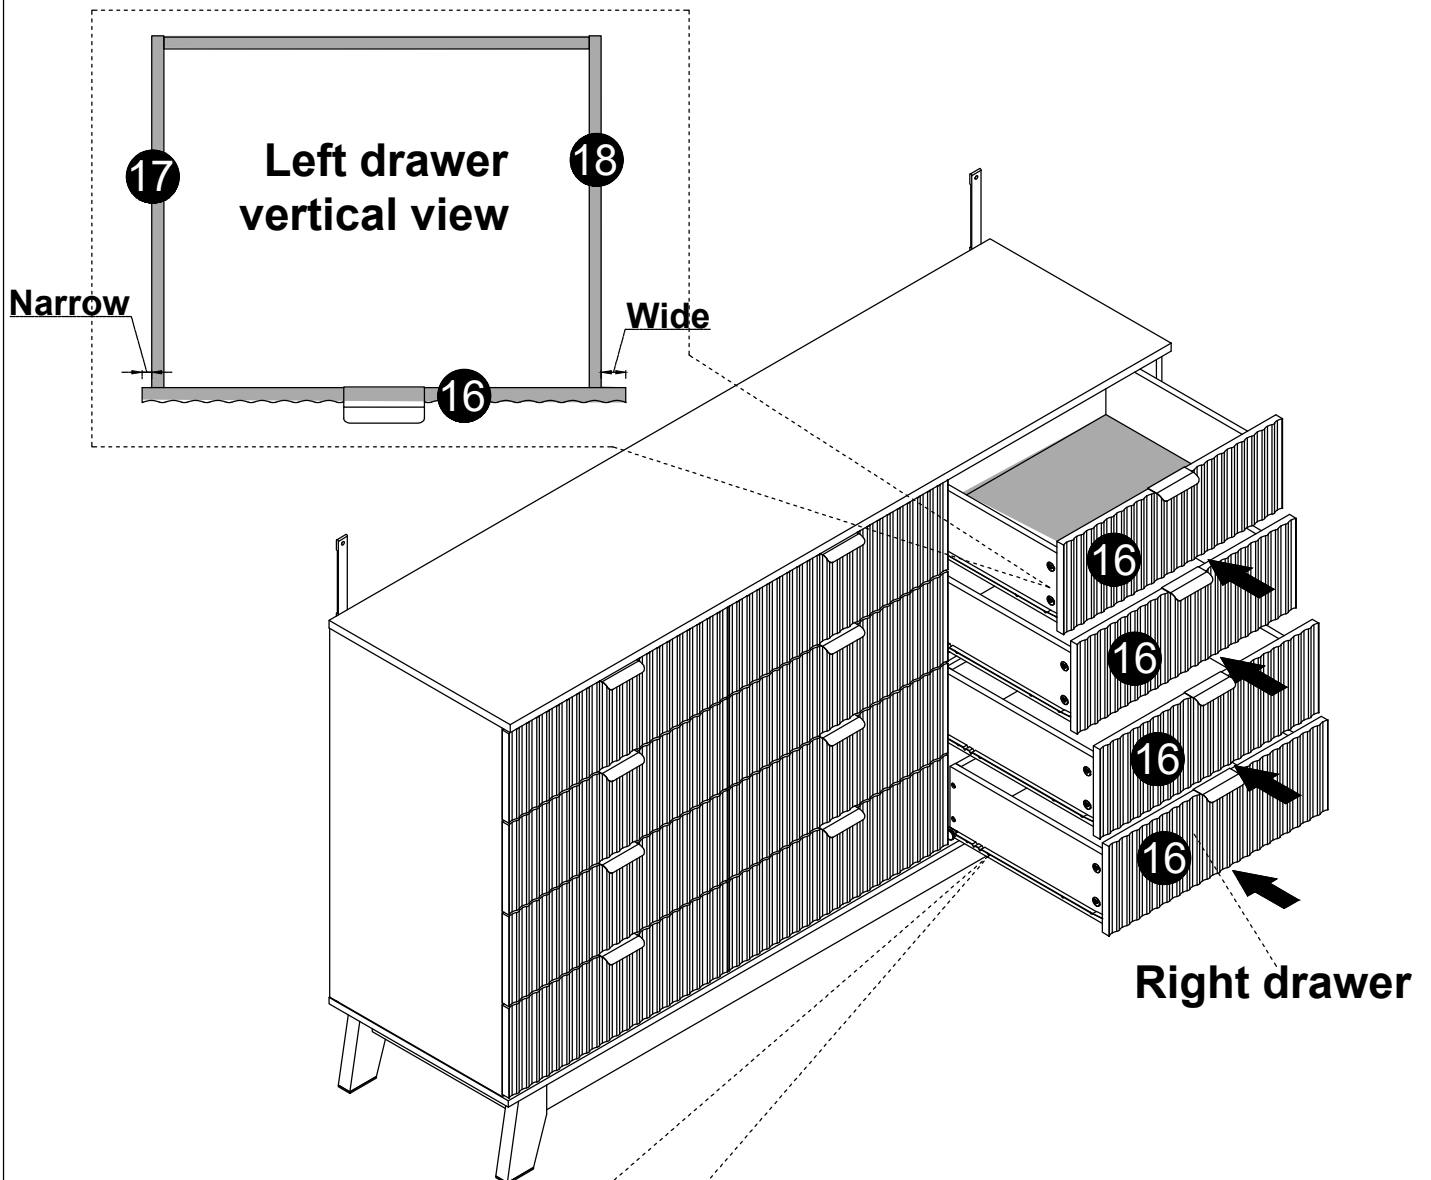


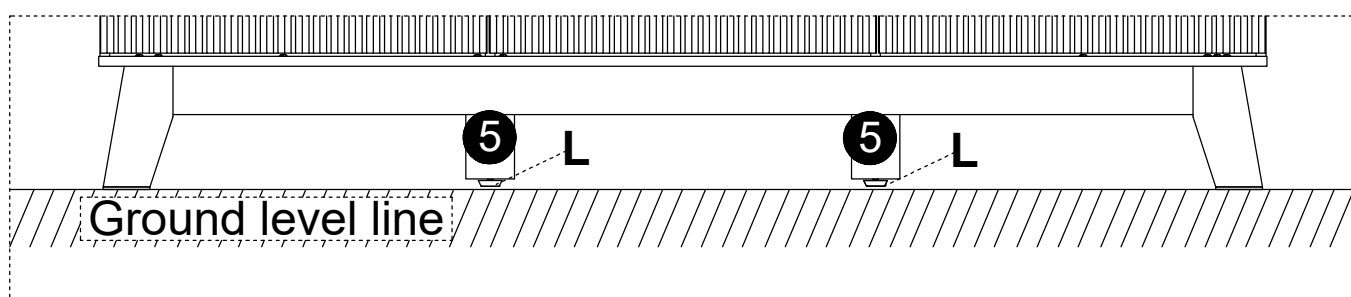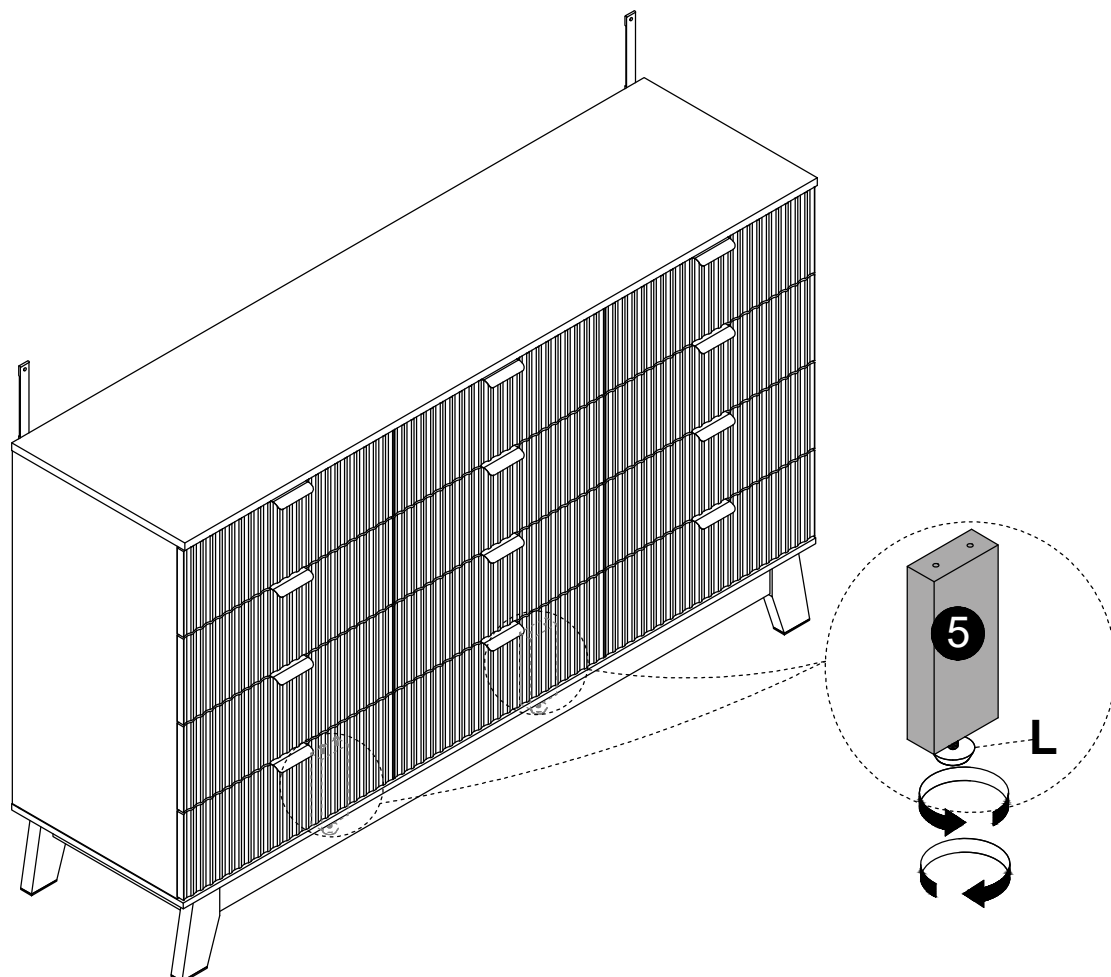


If the drawers are not aligned or if there is a sinking in the middle of the cabinet, you can rotate the accessory "L" under board 5.

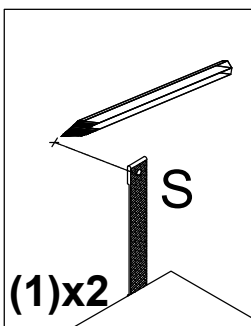D x2**I** x2**Done**


First, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

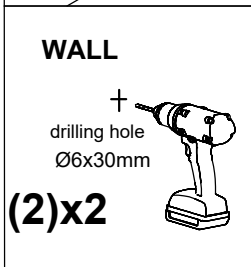

Then use a tape drill to make holes in the wall that are suitable for the product screws.

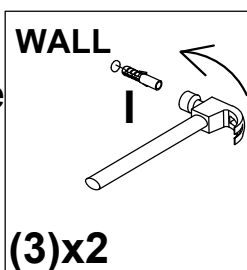

Then, put the expansion bolt into the hole

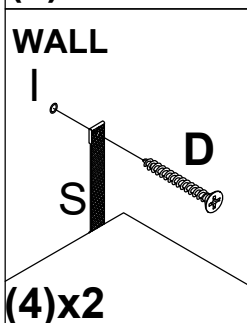

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

WALL