
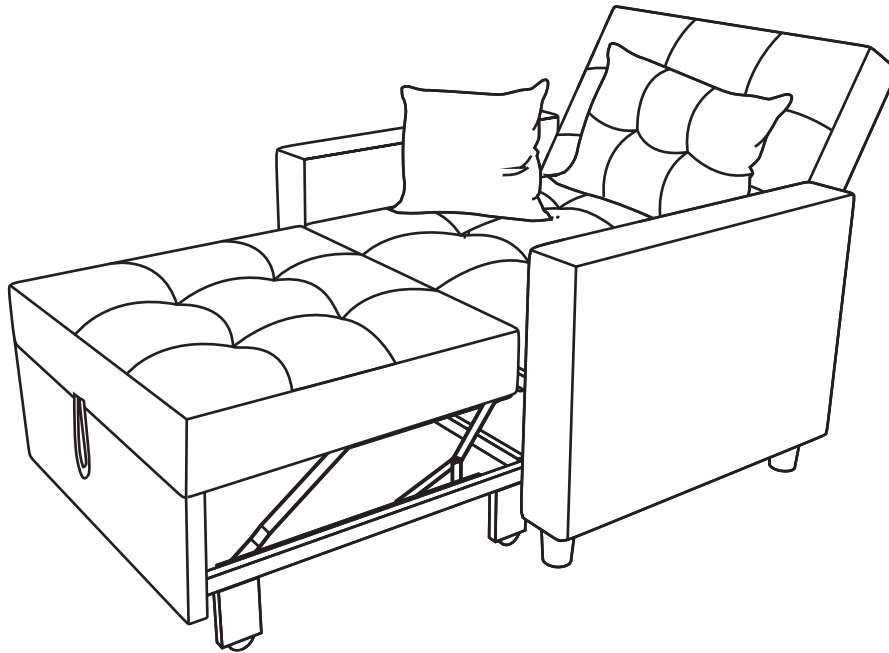

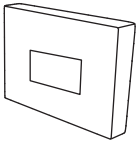
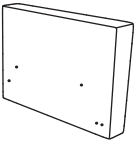
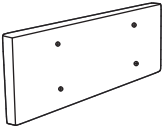







3-in-1 Convertible Chair Bed


1. Please check the manual carefully and make sure you have received all the parts.
2. If there is any missing, please let us know the letter of the parts you need.
3. If there is any damage, please send clear photos to us, we will check and offer you best solution soon.
4. Please align the bolts with all the holes first, and then tighten all the bolts.

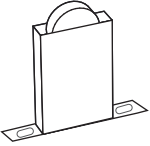

Parts & Hardware List


 A x1pc	 B x1pc	 C x1pc	 D x1pc	 E x1pc	
 F x1pc	 G x1pc	 H-R x1pc	 H-L x1pc	 M x1pc	 N x1pc
 J x4pcs	 K x4pcs	 L x4pcs	 T1 x2pcs	 T2 x2pcs	
 S x28pcs	 S1 x4pcs	 S2 x8pcs	 Q x32pcs	 Y1 x1pc	 Y2 x1pc

step 1




Install the pulleys T1&T2 to the B&C part respectively, connect them by using S bolt with Y1 tool,

PS: B part has a pocket on outer surface

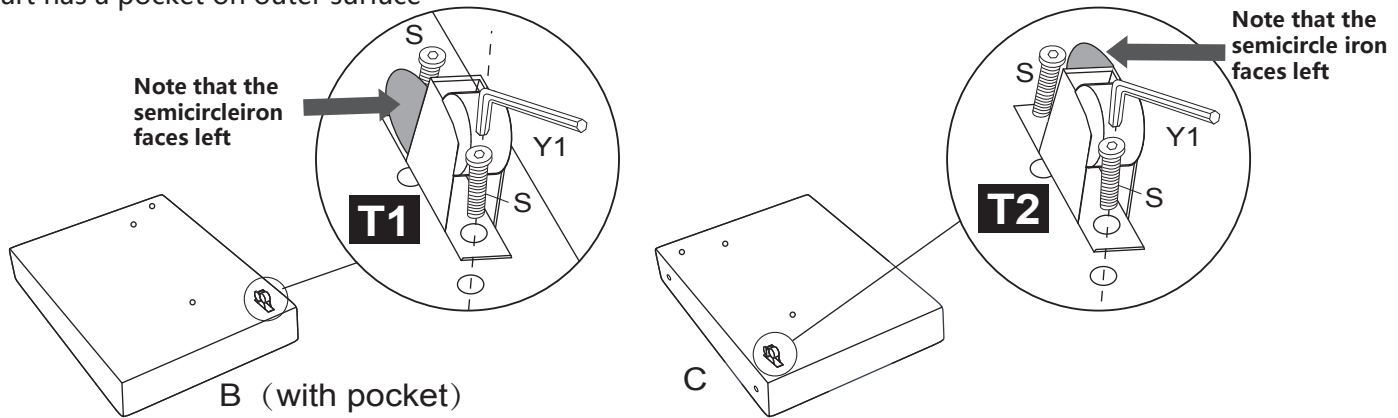


step 2





Place K spacer on L part (leg part), find the 4 holes on B&C sides(as shown in figure), then install 4 L parts on B &C respectively

PS: B part 2 holes, C part 2 holes

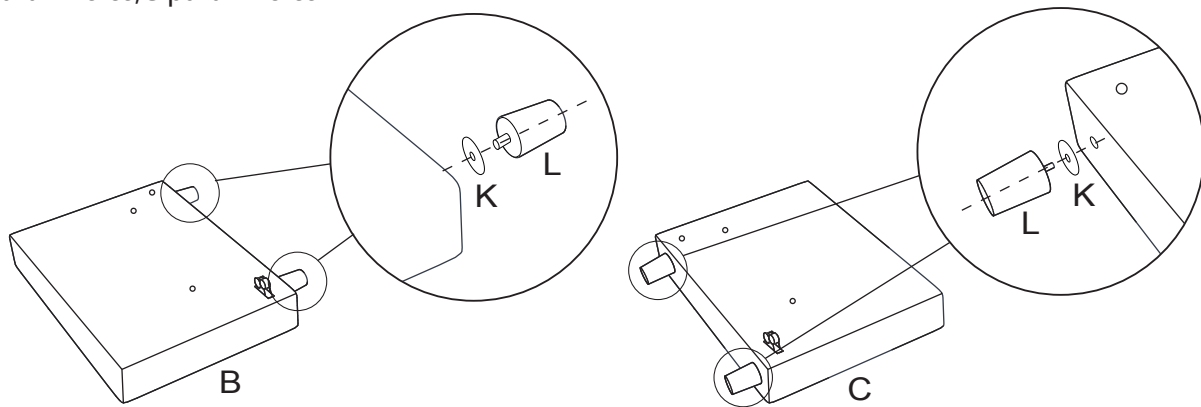


step 3 For all steps, align the holes first, then tighten the bolts.

Align B with F parts by the holes, connect them by using S2 bolt and Q spacers with Y2 tool.

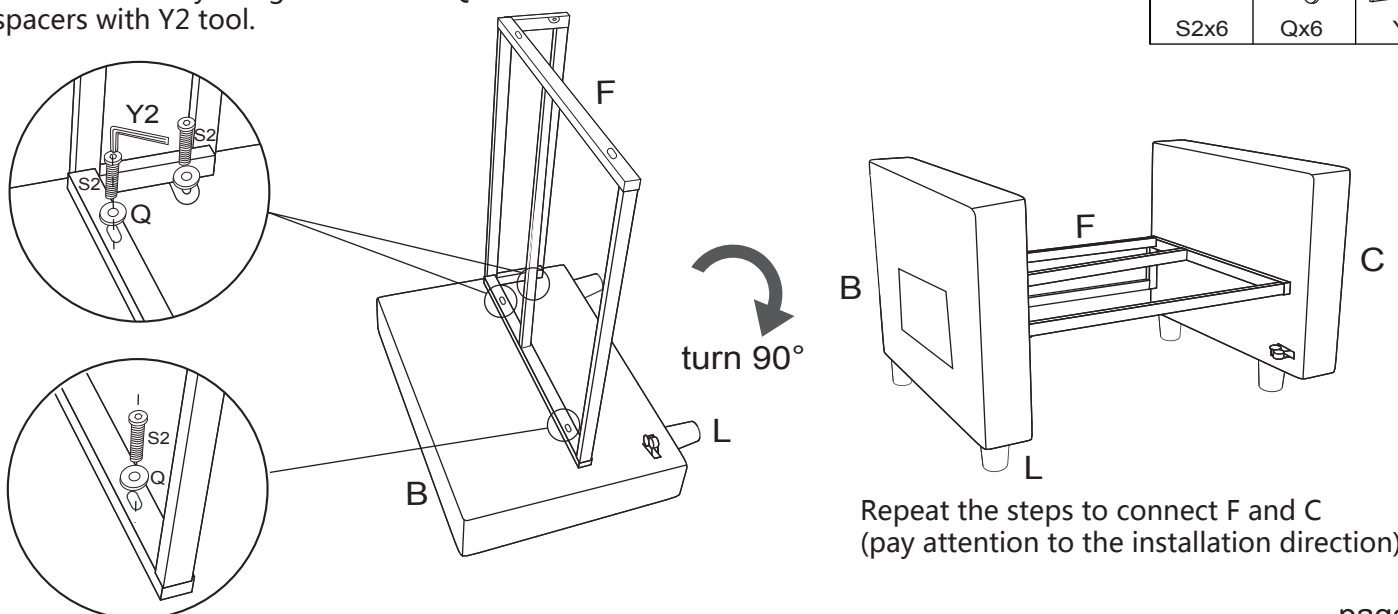


step 4 For all steps, align the holes first, then tighten the bolts.




Place A pad on the upper side of F (the PAD surface outward, the direction as shown in figure 1)

After installing as shown in figure 2, then turn the whole part, the effect position is shown in figure 3

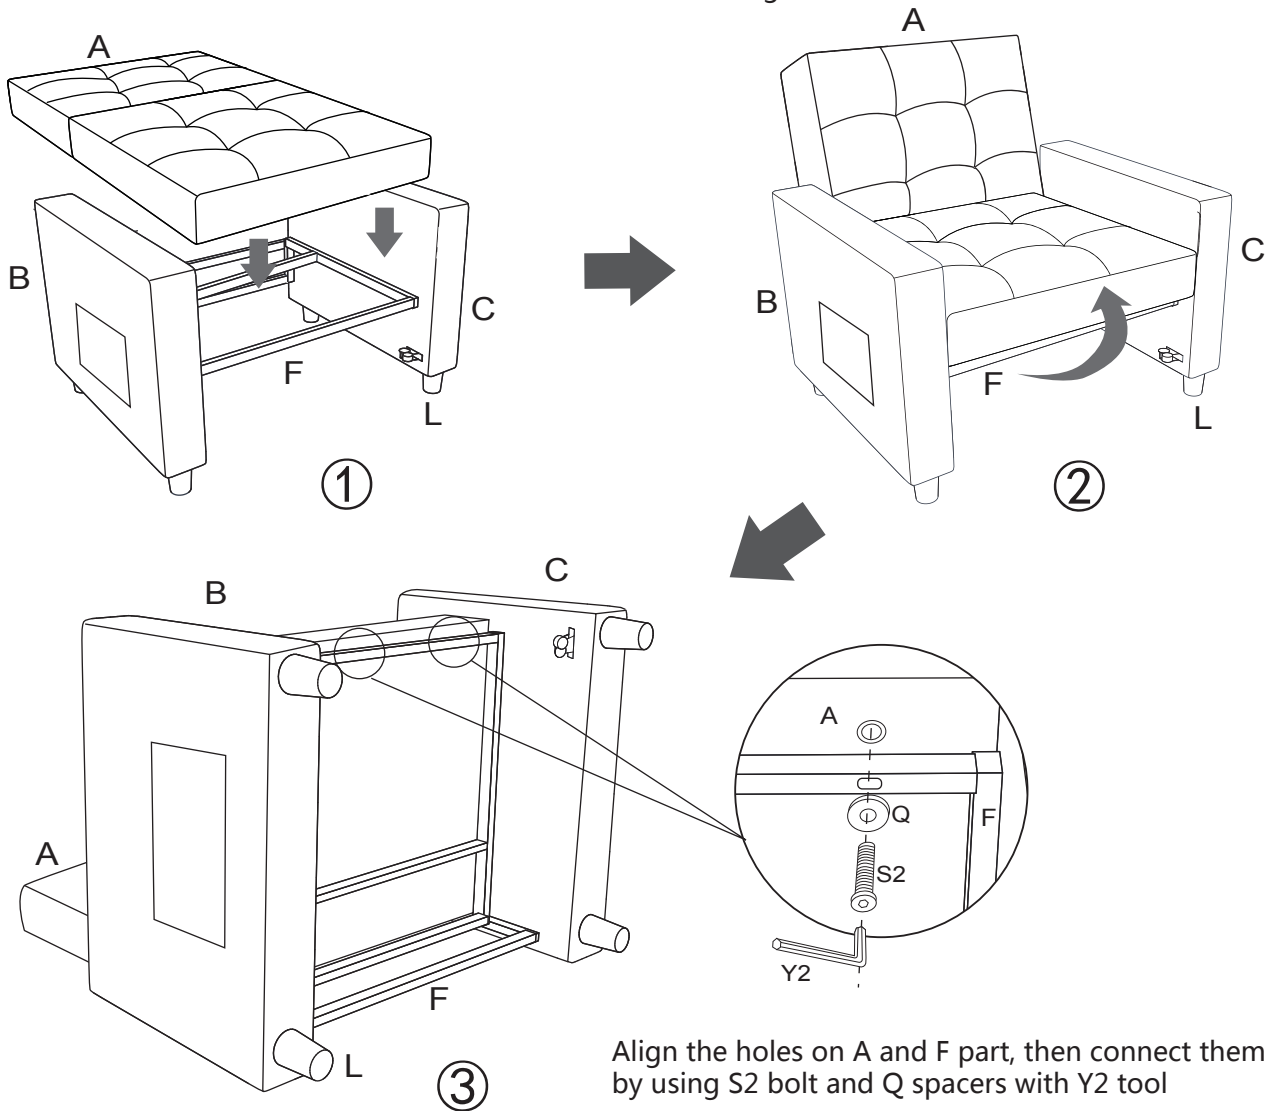


Align the holes on A and F part, then connect them by using S2 bolt and Q spacers with Y2 tool

step 5 For all steps, align the holes first, then tighten the bolts.




Align E with G part by 4 holes, connect them by using S1 bolt and Q spacers with Y2 tool. (pay attention to the direction as show in figure)

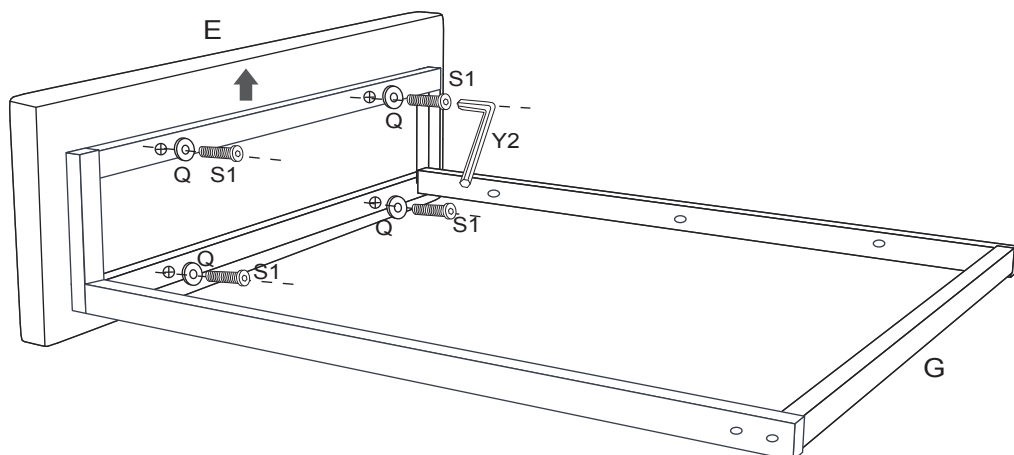

step 6-①


Find HL and HR part, follow 3 step as shown in figures 1-3, then form the shape like figure 4.

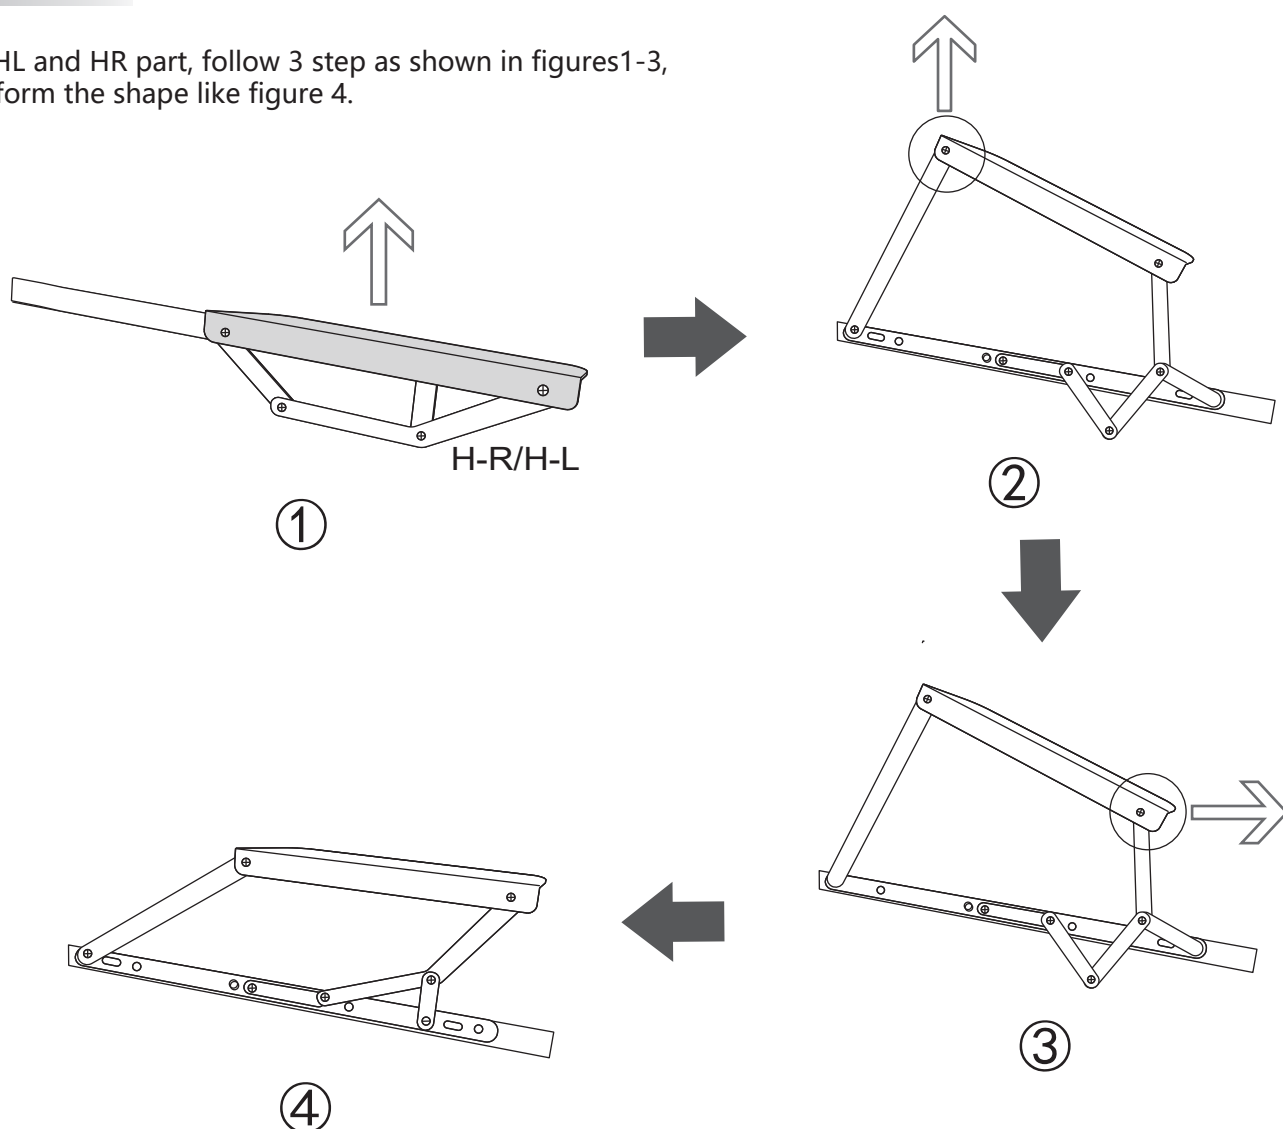


step 6-② For all steps, align the holes first, then tighten the bolts.

Assembling the 3 holes of HR and HL part with the G part, then connect them by using S bolt and Q spacers with Y1 tool. (note the left and right directions)


		
Sx6	Qx6	Y1

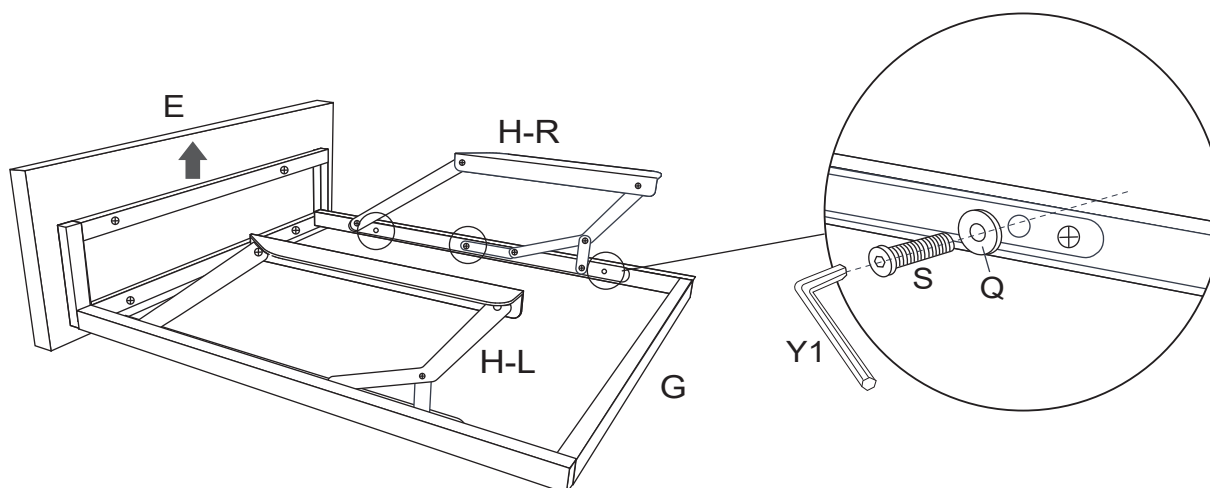


step 7




Install the two pulleys T1&T2 to two sides of G, align the holes, use S bolt and Y1 tool to combine them.

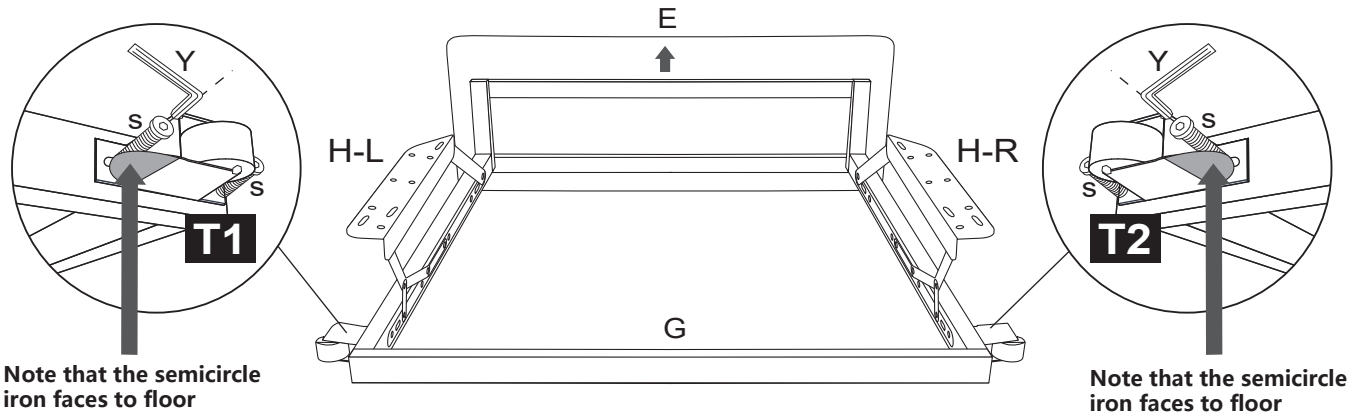


step 8 For all steps, align the holes first, then tighten the bolts.




Turn the entire pedal part over(as shown in figure), Install HR, HL on D cushion, connect them by using S bolt and Q spacers with Y1 tool.

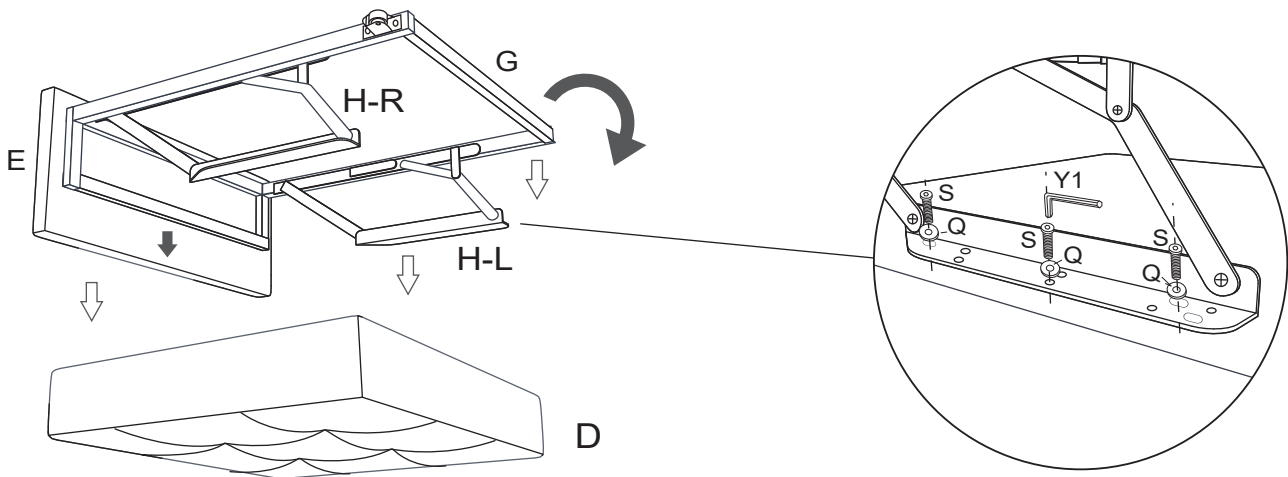

step 9




Find the corresponding hole in part G, install 4 J parts (Screws facing inward), use S bolts and Q spacers with Y1 tool

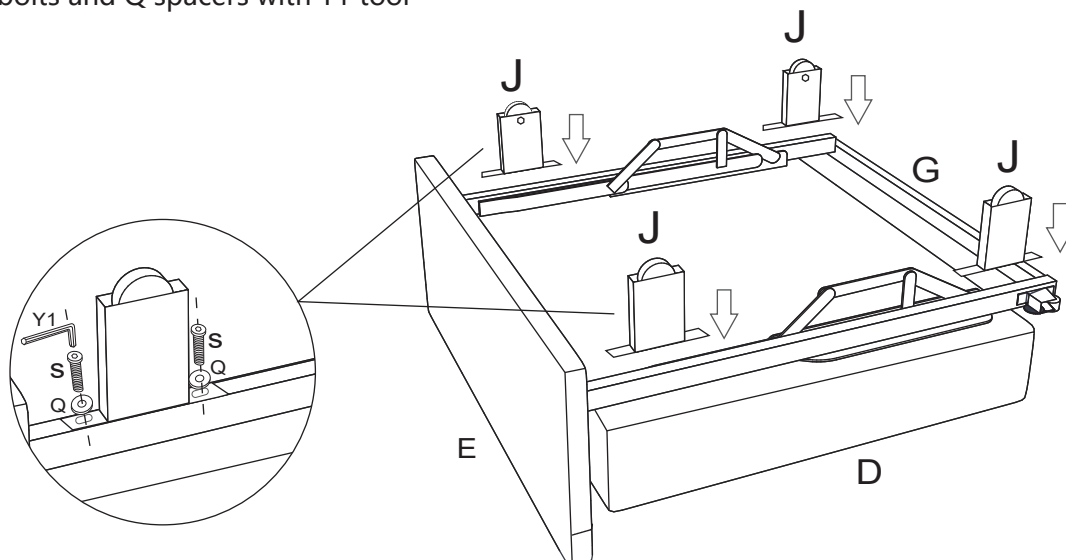


step 10

After installing the bottom pulleys, buckle the bottom pad, and pull the rope to make two pads together (as shown in figure). If need to retract the bottom PAD, pull up the rope and then slide it down to retract.

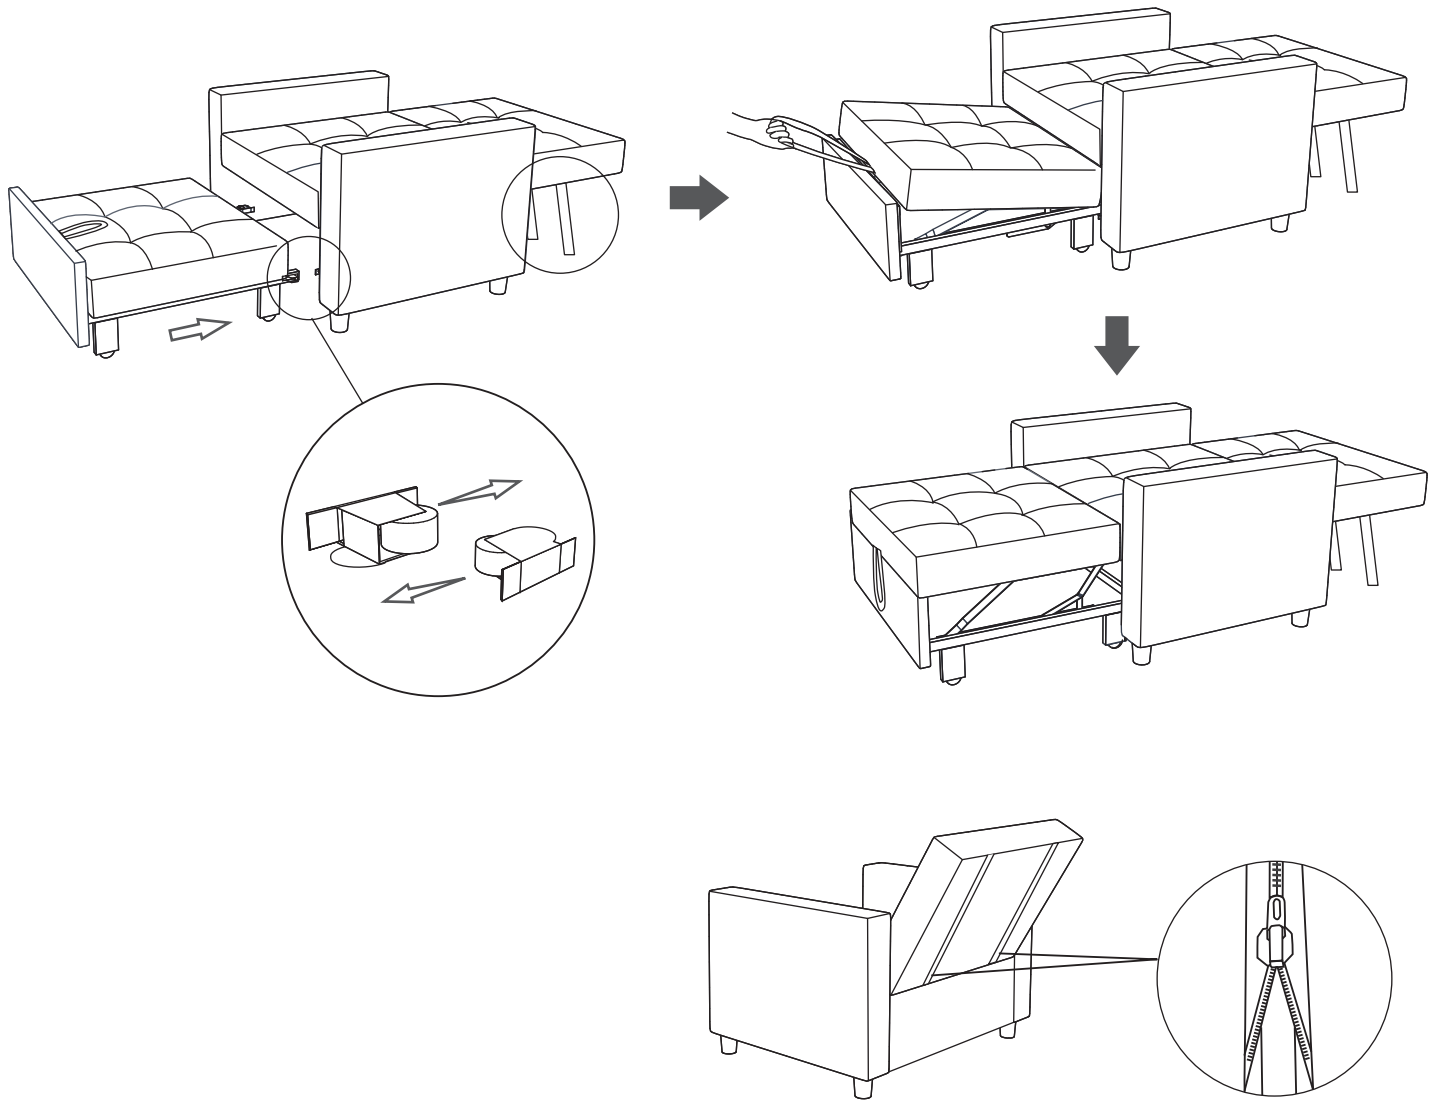

Functions & Modes demonstration

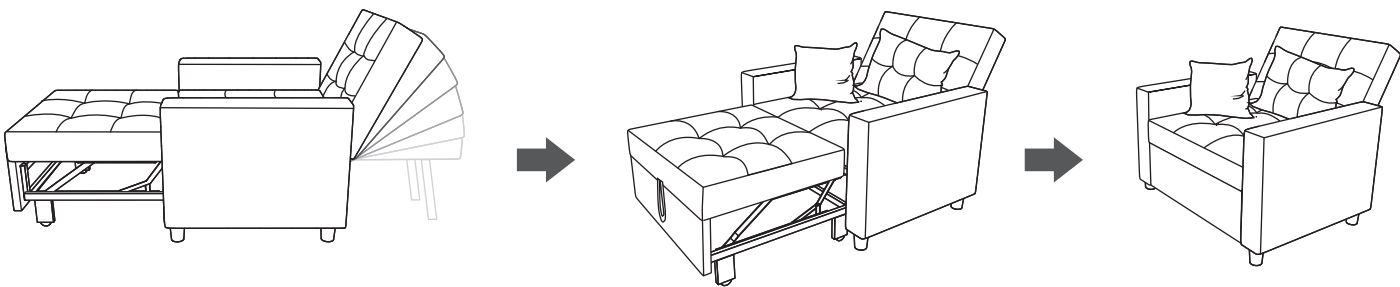

5-level adjustable backrest

Recliner Mode

Sofa Mode