

INSTALLATION INSTRUCTIONS




step1

First, the side cabinet is already assembled. Then, find the wooden gaskets.



step2

Align the wooden gasket with the hole position on the top of the cabinet, and then use the corner pieces provided in the packaging to fix it.

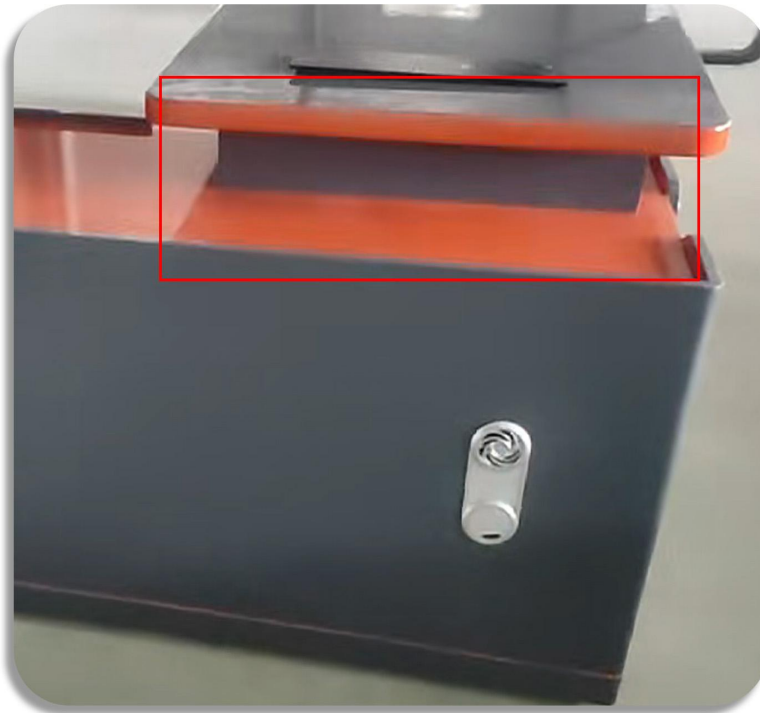

step3

Then place the desktop on top of the wooden spacer, make it flat and align it properly, and then fix it using angle iron.



step4

Next, install the baffle. As before, place the baffle in position and then simply fix it with angle iron. Installation is complete.

