


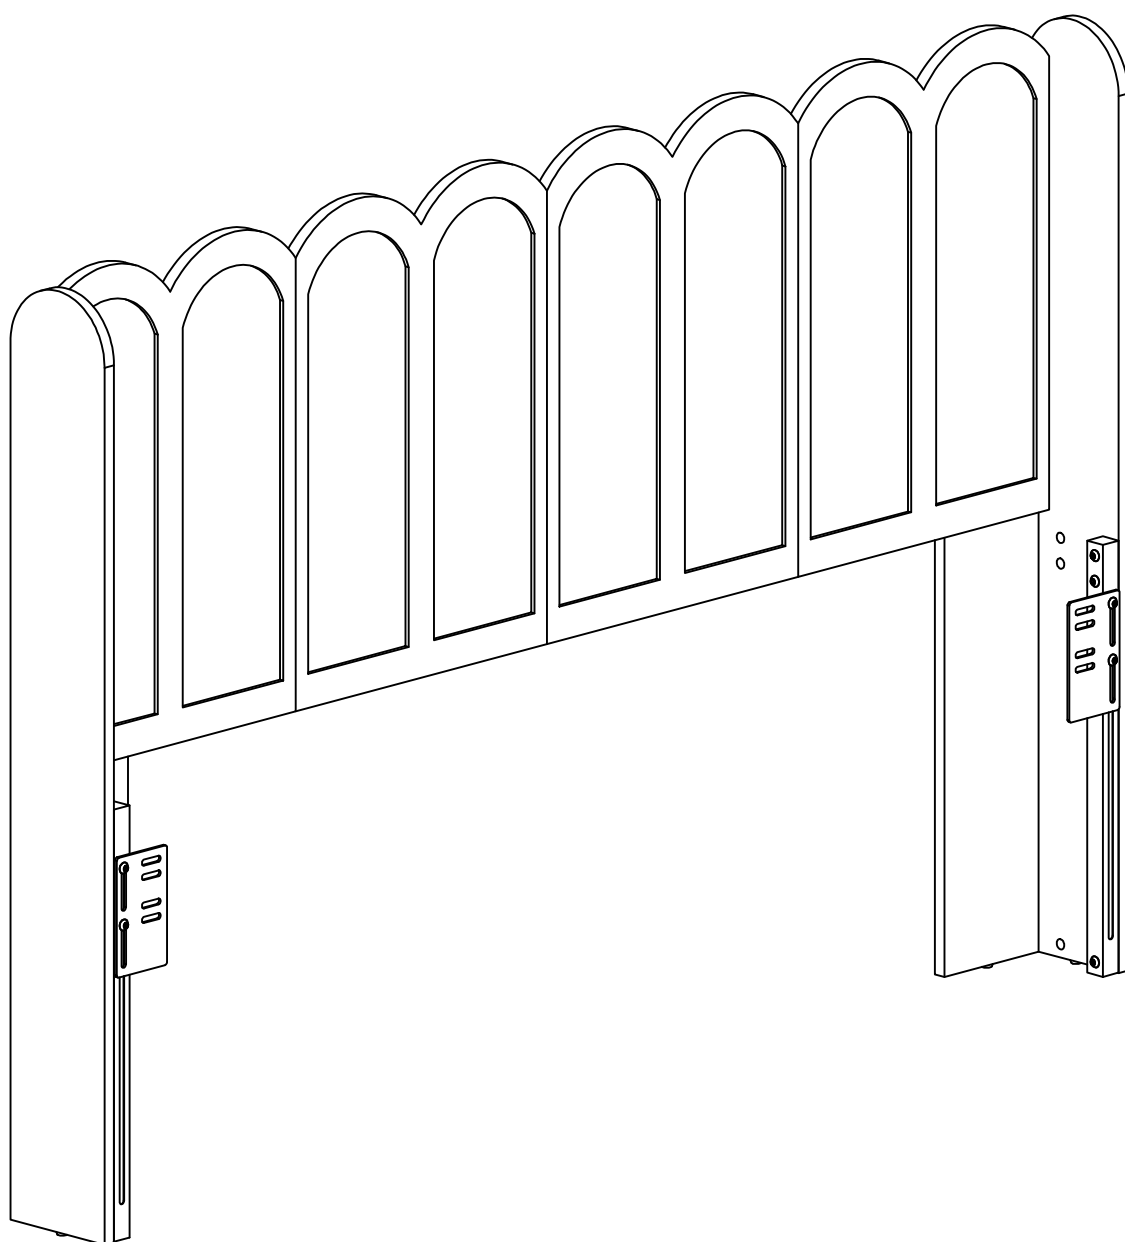
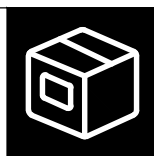
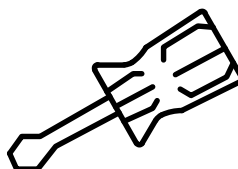
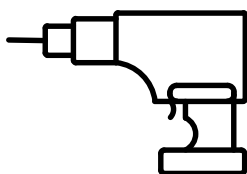



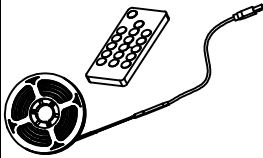





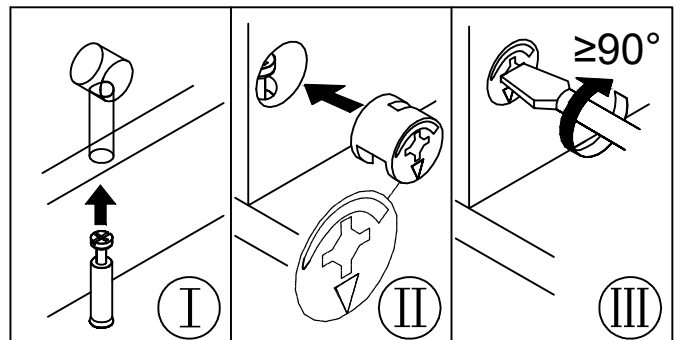

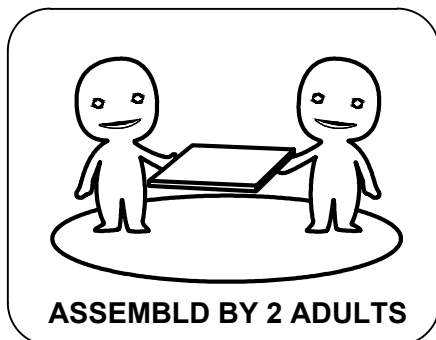


A×8PCS	B×8PCS	C×18PCS	D×24PCS	E×10PCS
 M6×35mm	 Ø15×12mm	 Ø6×30mm	 M6×23mm	 M6×35mm
F×4PCS	G×4PCS	H×1PC	I×1PC	J×1PC
 6mm	 M6mm		 M4mm	
K×8PCS	L×13PCS	M×4PCS		
 Ø3×12mm				

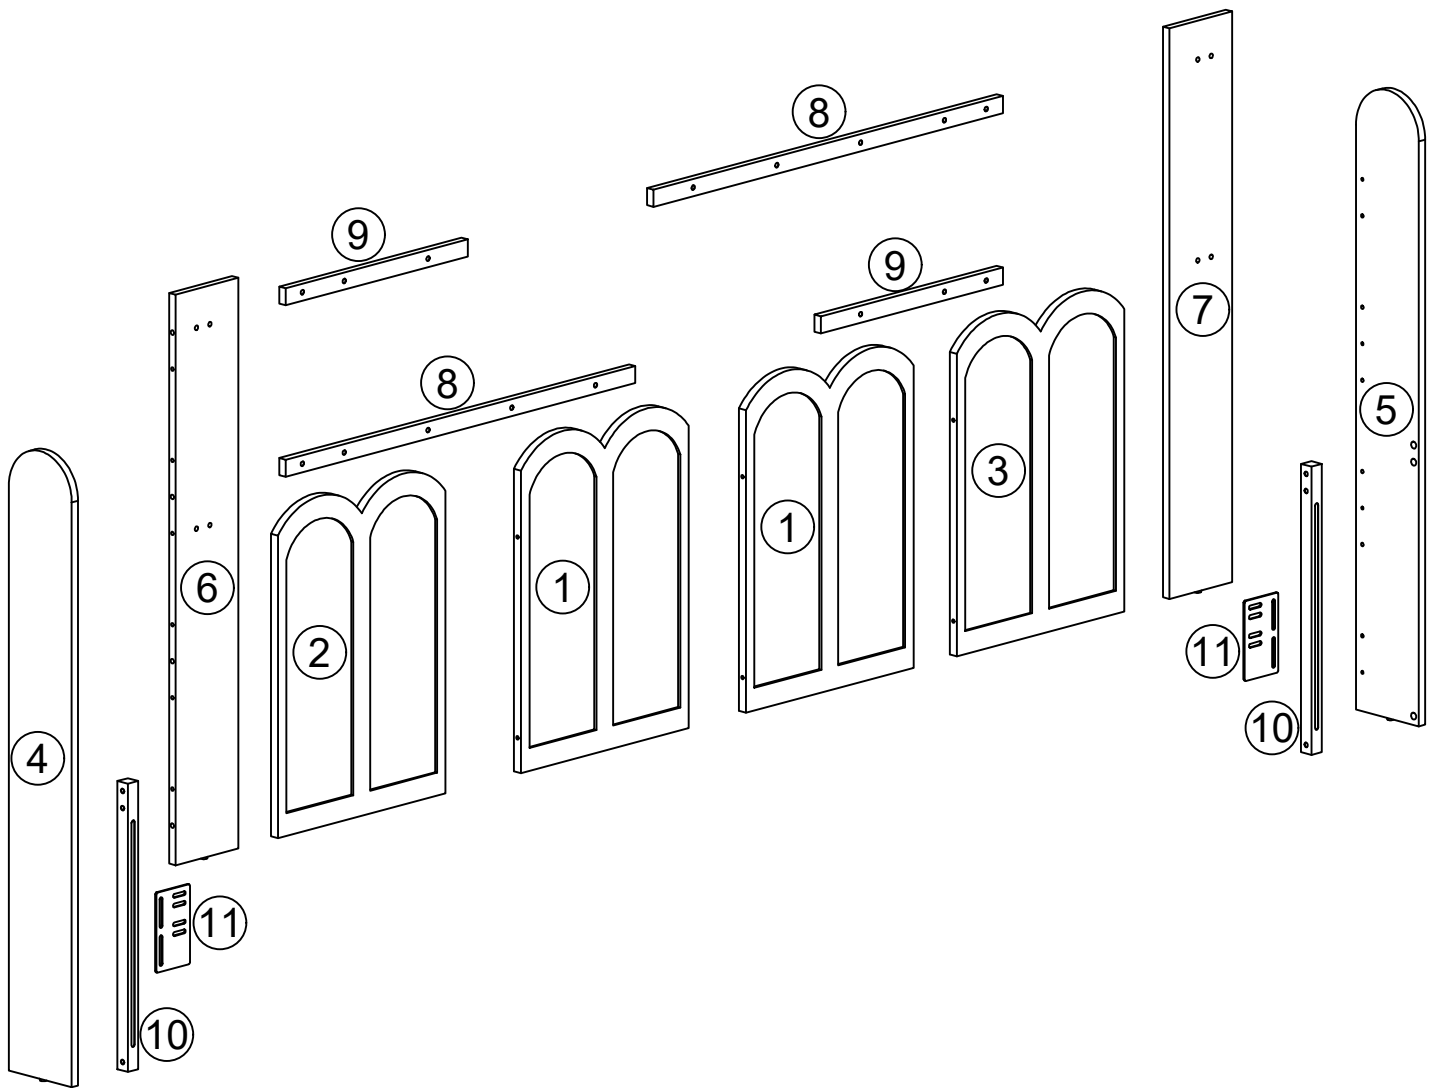

C×6PCS

Ø6×30mm


1.

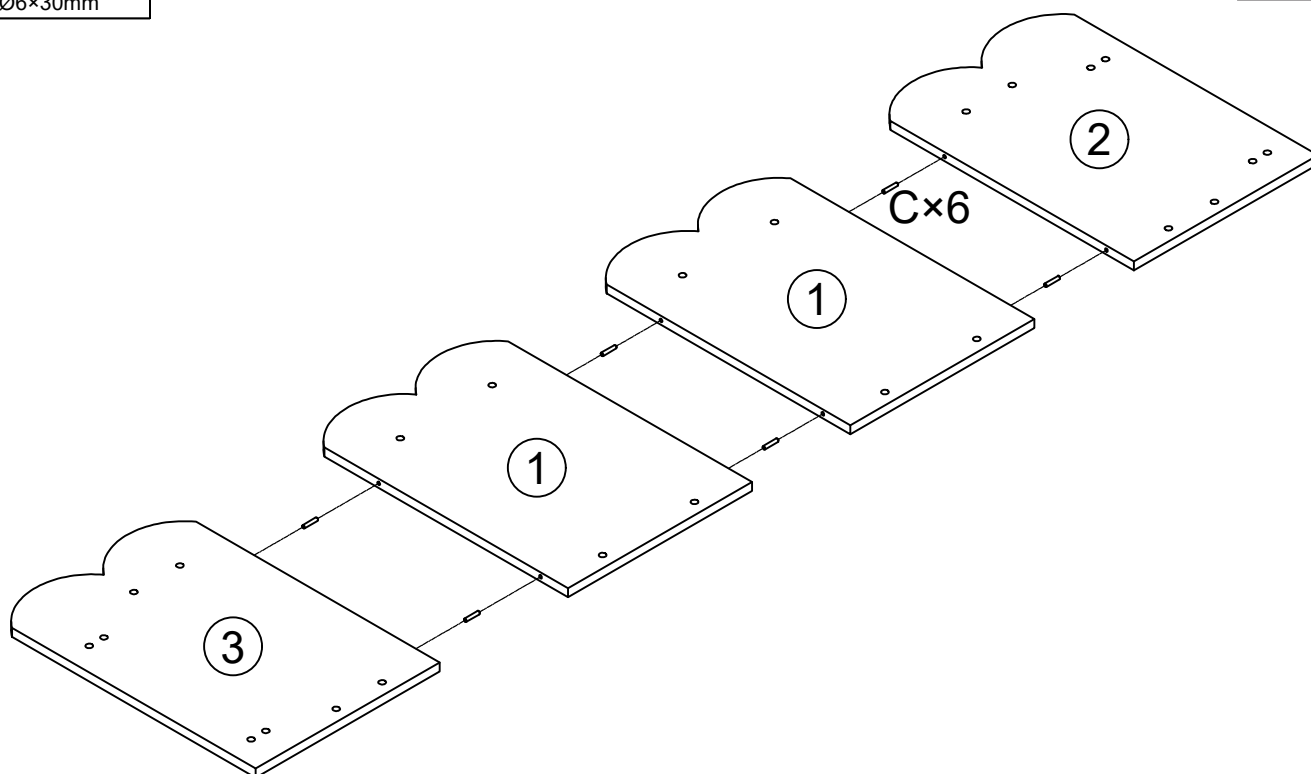


D×16PCS	I×1PC
	
M6×23mm	M4mm





2.

Tips:All D screws are used here. The length of the D screws is 23mm. If E screws are used, it will cause damage to the wooden board.

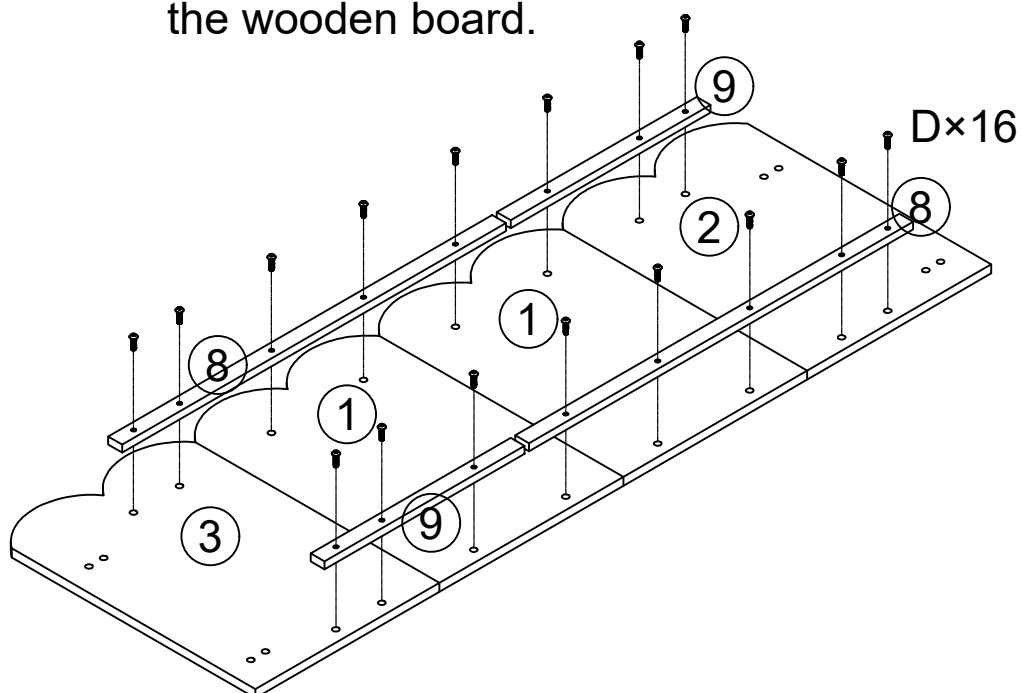


3.

A×8PCS	B×8PCS	C×12PCS	L×8PCS
			
M6×35mm	Ø15×12mm	Ø6×30mm	

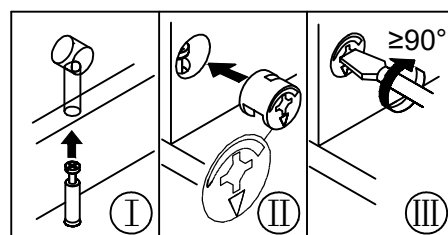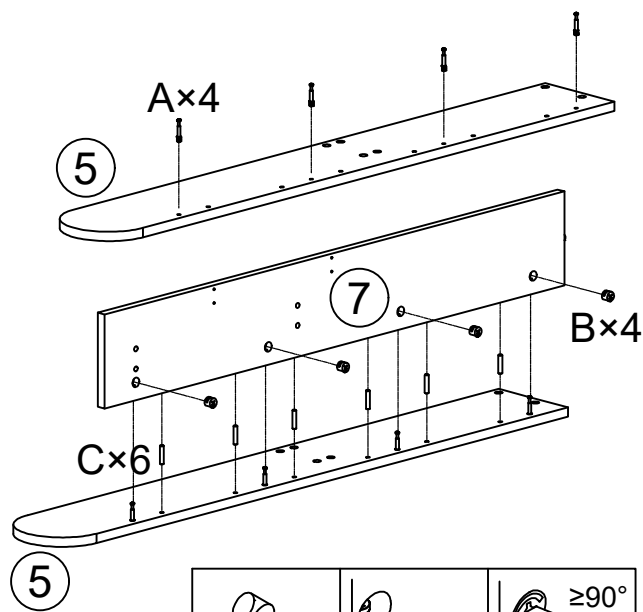
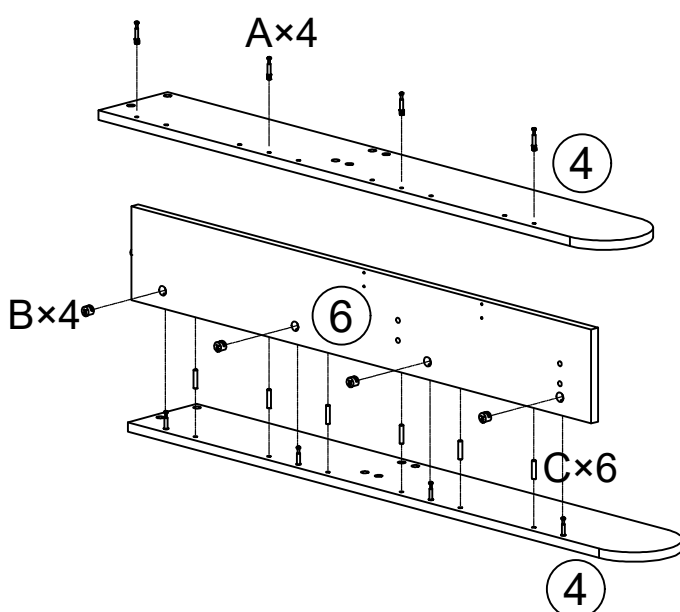


4.



D×8PCS	I×1PC
	
M6×23mm	M4mm

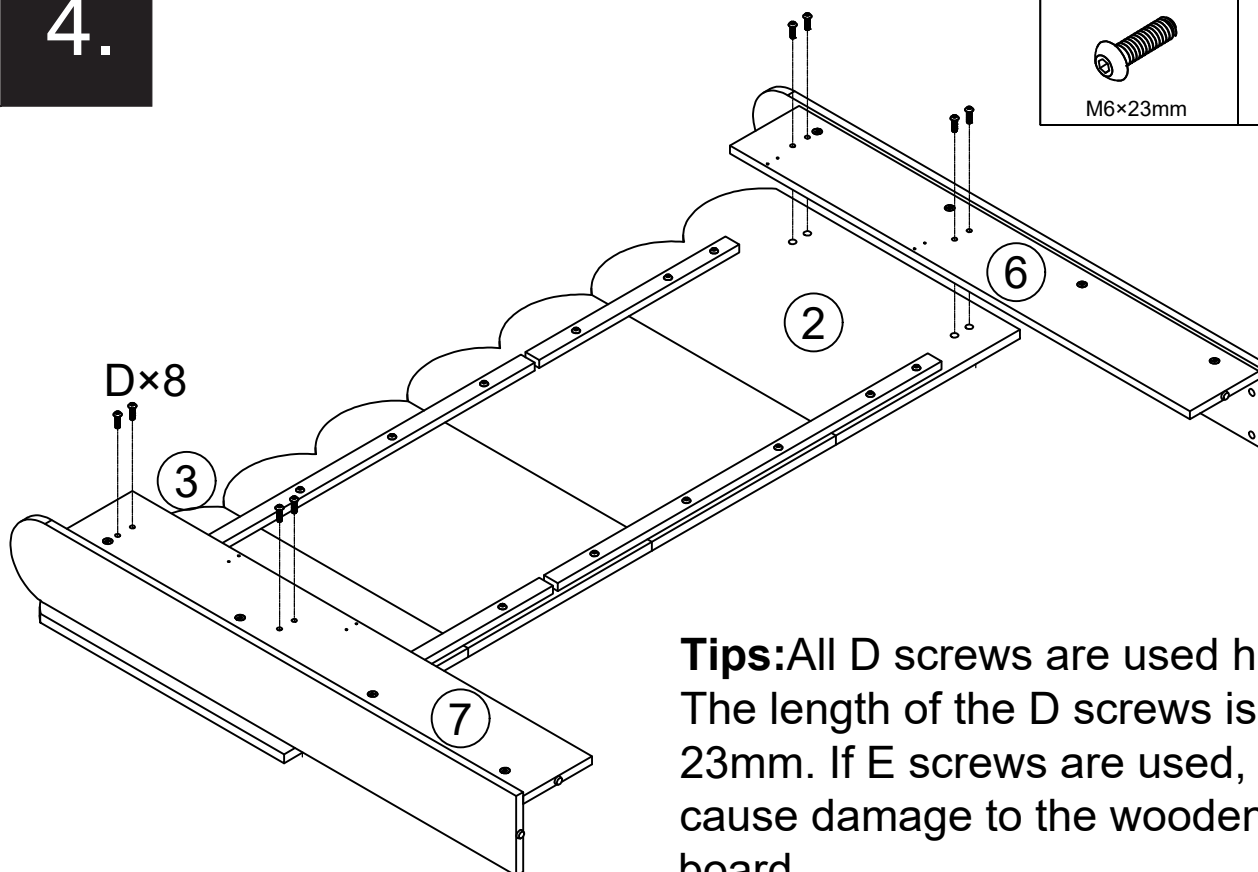


Tips:All D screws are used here. The length of the D screws is 23mm. If E screws are used, it will cause damage to the wooden board.

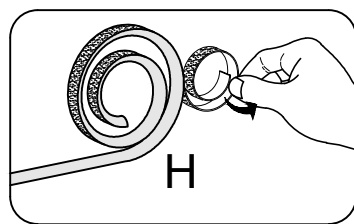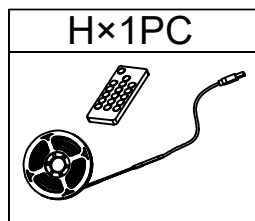



5.

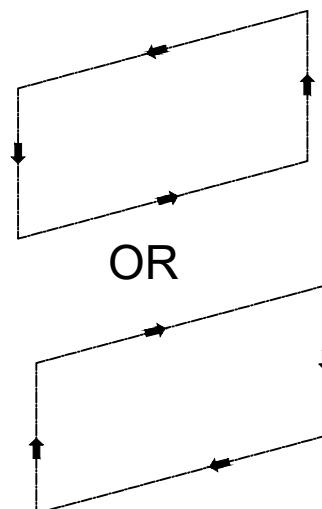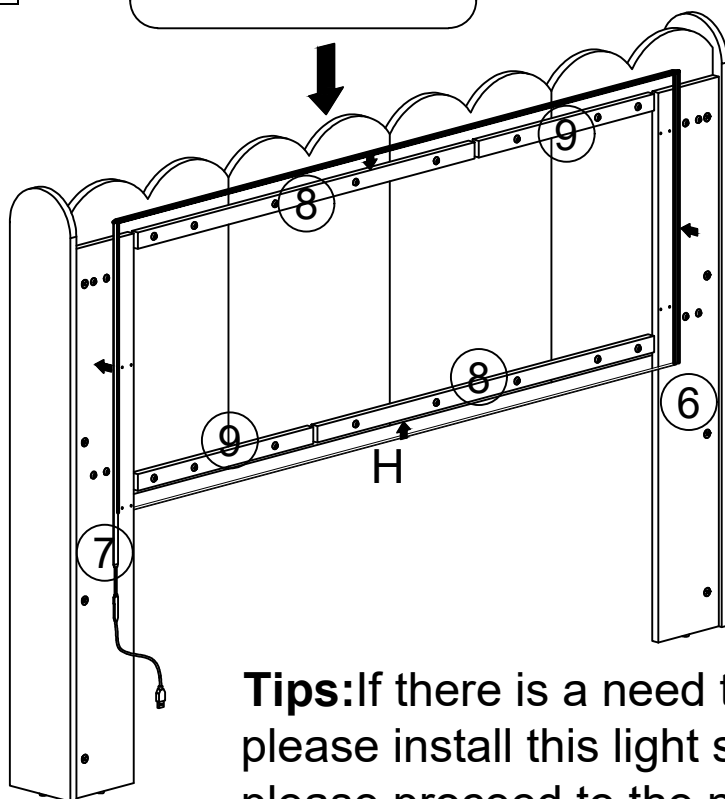


Tips: If there is a need to use a light strip, please install this light strip, otherwise please proceed to the next step.



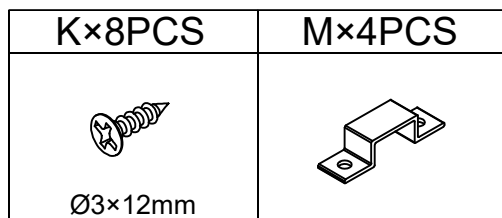



6.

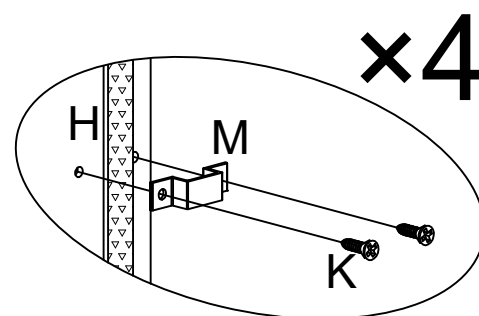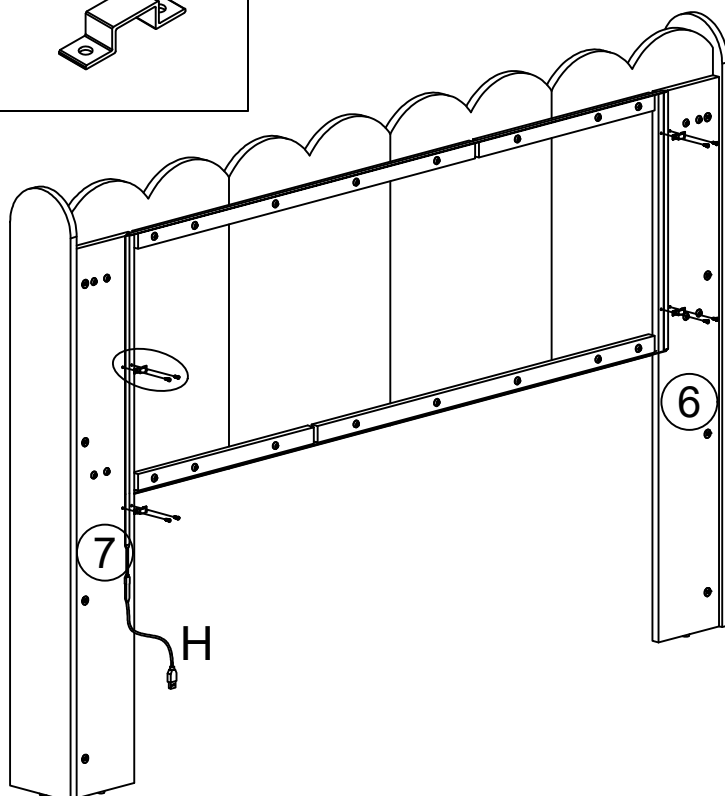

E×4PCS	F×4PCS	G×4PCS	I×1PC	J×1PC
				
M6×35mm	6mm	M6mm	M4mm	

7.

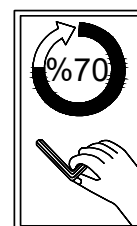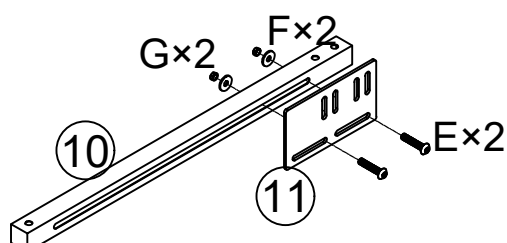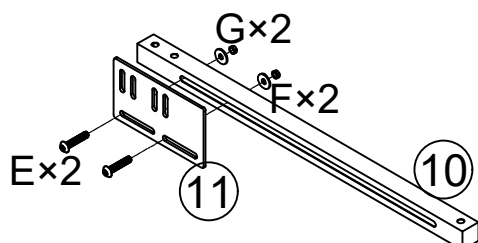

E×6PCS	I×1PC
	
M6×35mm	M4mm
L×3PCS	
	

Tips: This step requires you to determine the installation position of the 10th iron plate based on the bed frame. To ensure the aesthetic appearance of the product, you can use L-shaped accessory stickers to cover the excess holes.

8.

