


BWC-001-140

Bar Cabinets

Assembly Instruction




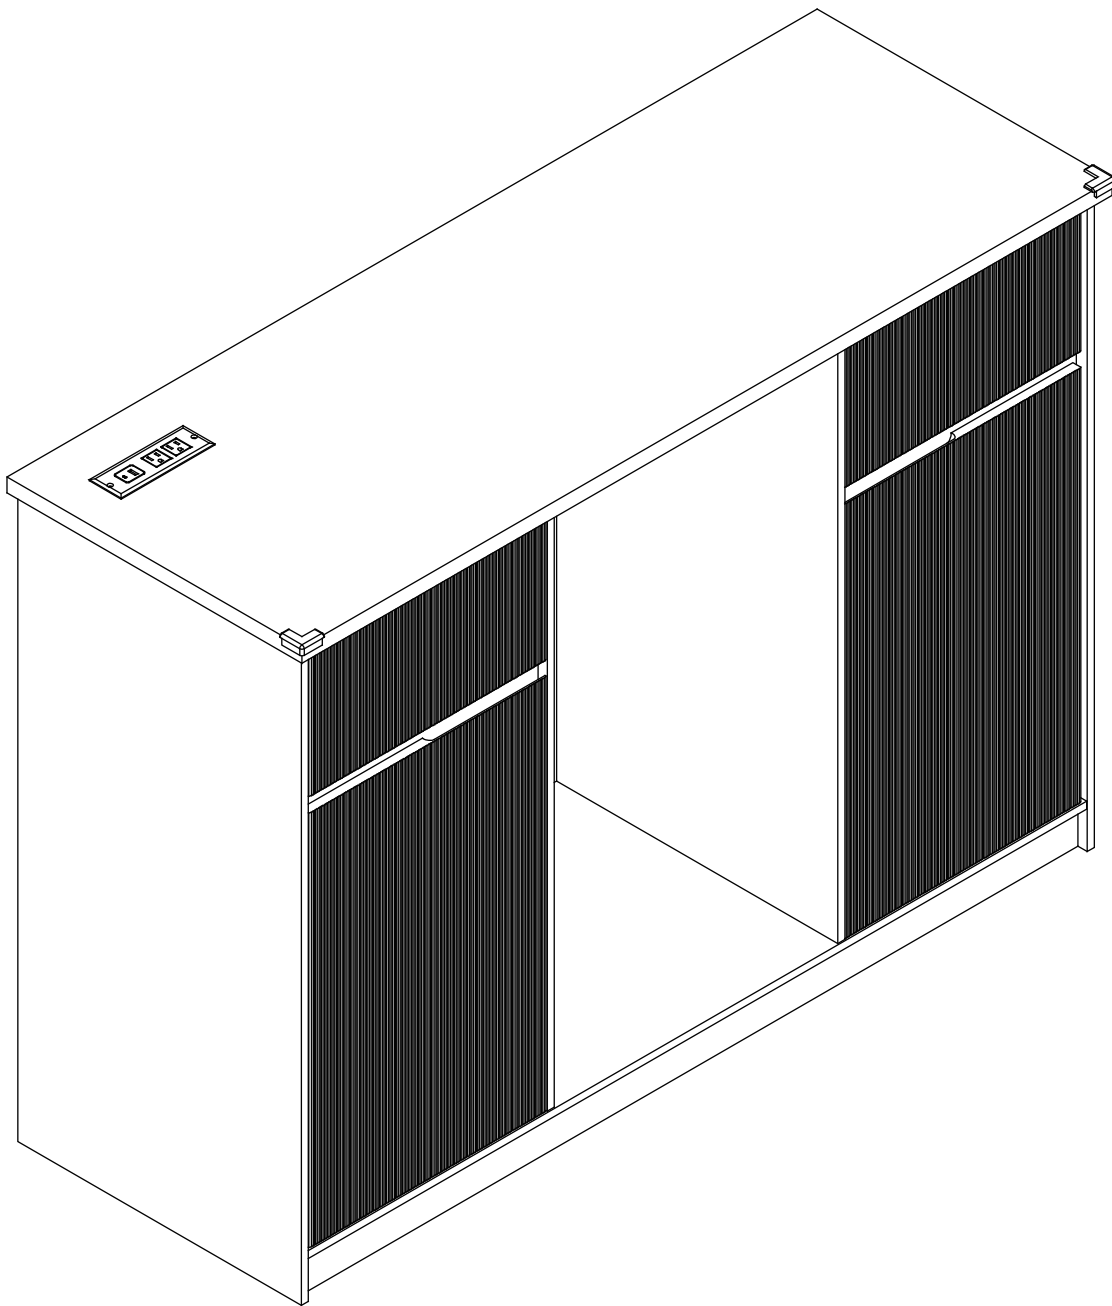





INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.


1. Serious or fatal crushing injuries can occur as a result of furniture tip-over.
2. The installation process must strictly adhere to these instructions, as incorrect installation may create safety hazards.
3. To prevent tip-over incidents, it is essential to use the provided wall attachment device(s).
4. While the use of the wall attachment can reduce the risk of tip-over, it cannot completely eliminate it.
5. Regularly inspect and ensure that the anchor is securely maintained.
6. It is crucial not to allow children to climb or hang on drawers.
7. Although your product includes a wall attachment, please note that screws and plugs for securing it to the wall need to be purchased separately according to your specific wall type.
8. Your local hardware store will have suitable drill bits and fixings available and can provide guidance if needed.
9. Before drilling holes, always check for any wires or pipes inside the wall (if uncertain, consult a qualified technician).
10. If you are unsure about any aspect, consider hiring a qualified technician for proper installation and securement of the product.

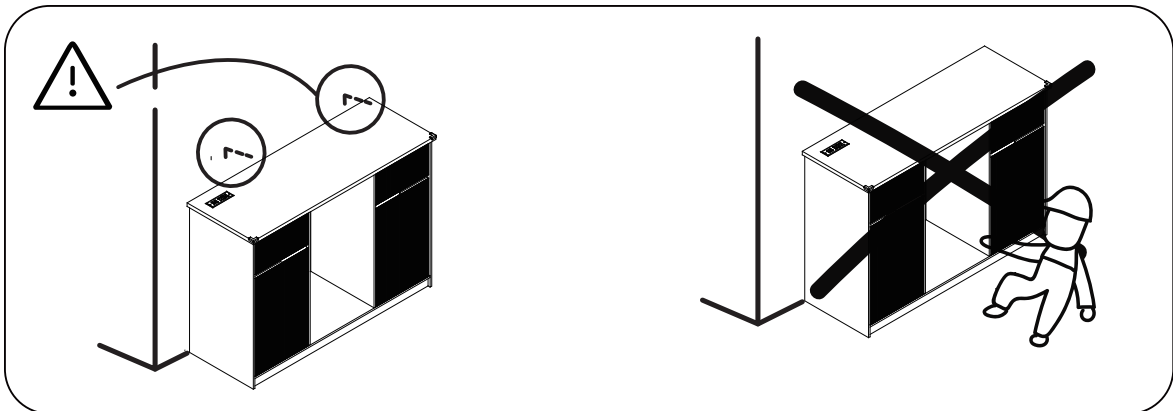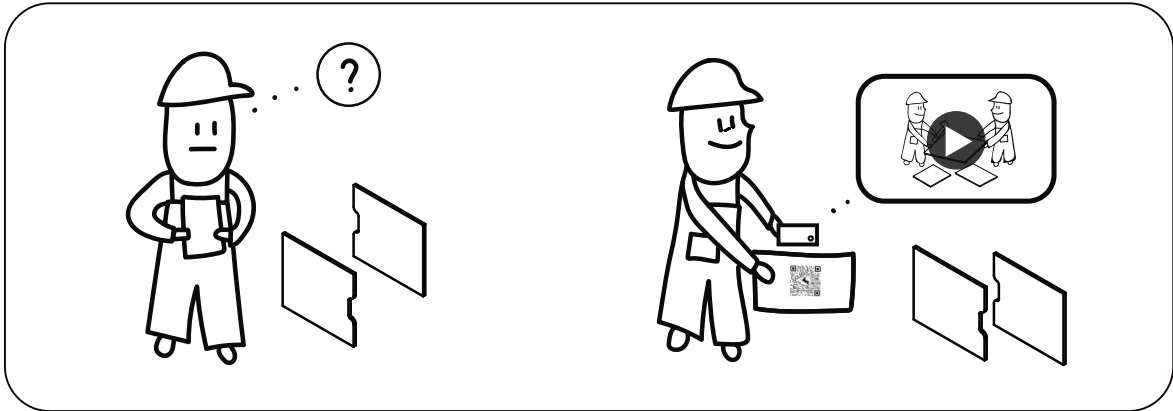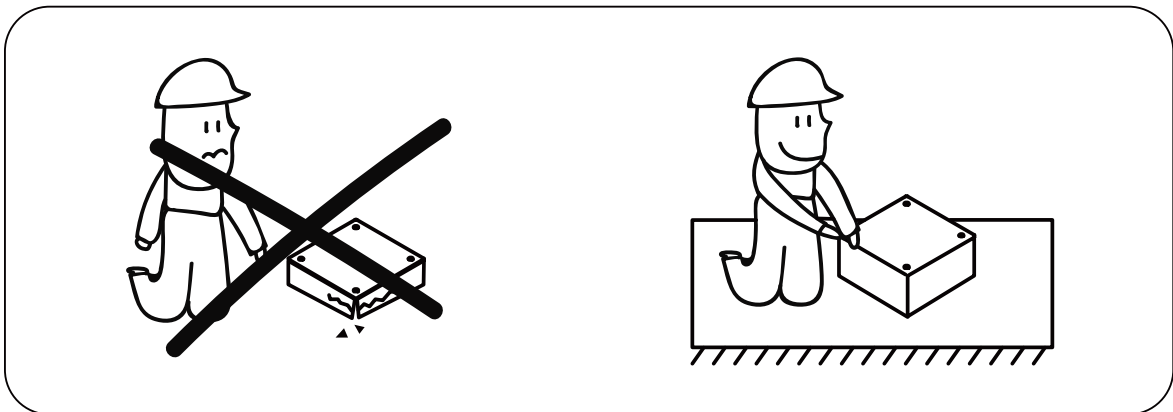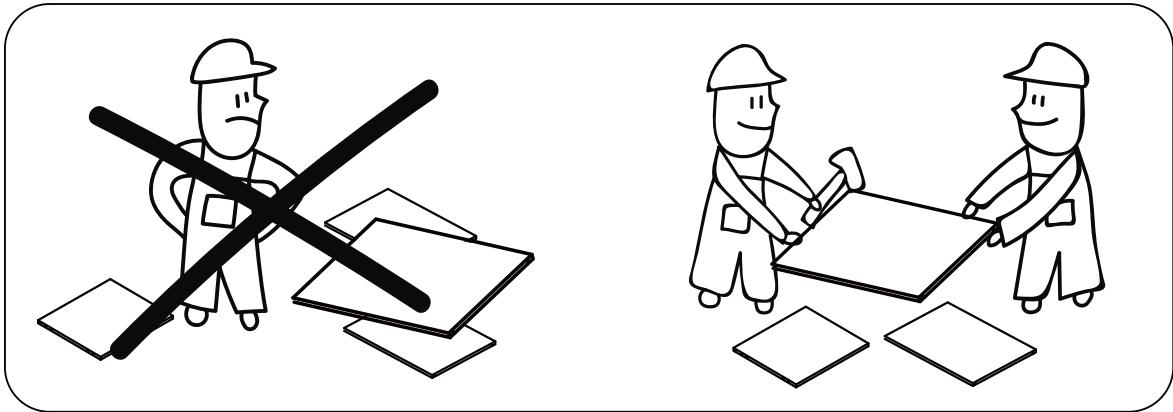


Board Identification

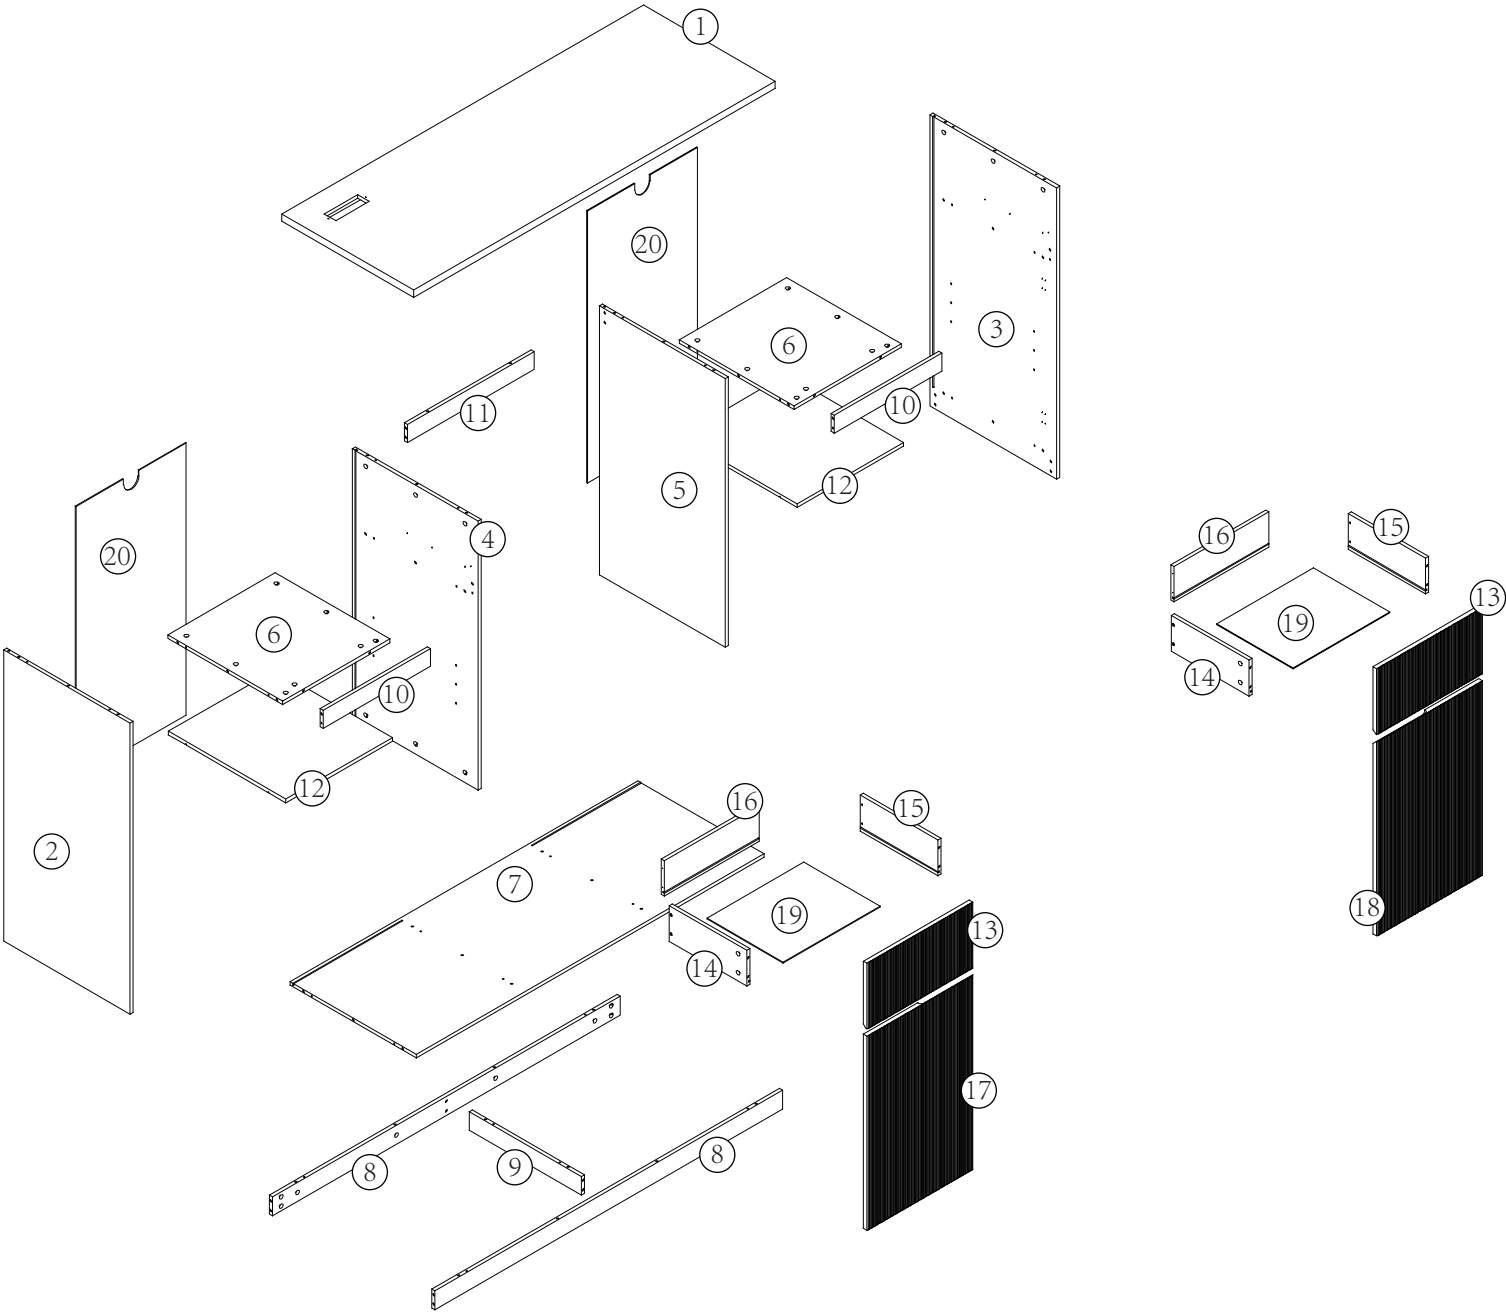


PARTS LIST

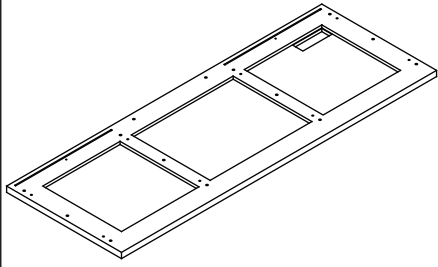


①

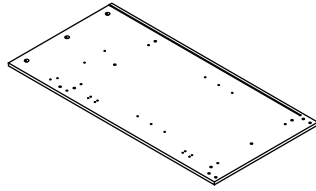


②

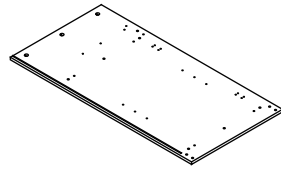


③

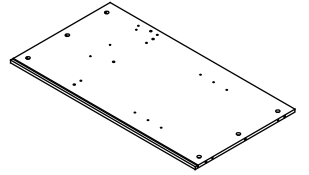


④

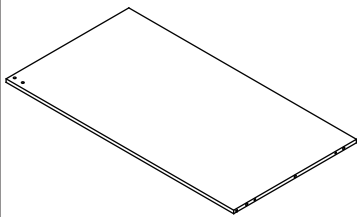


⑤

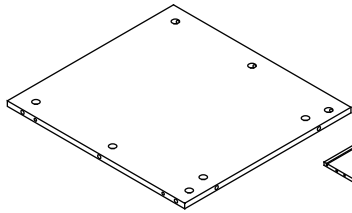


⑥ X2

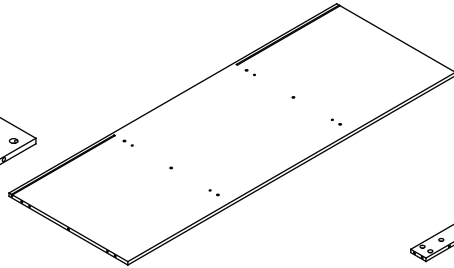


⑦

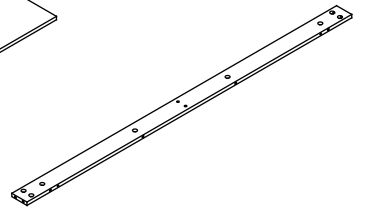


⑧ X2

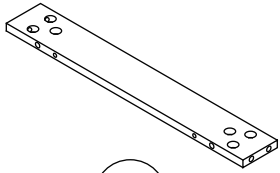


⑨

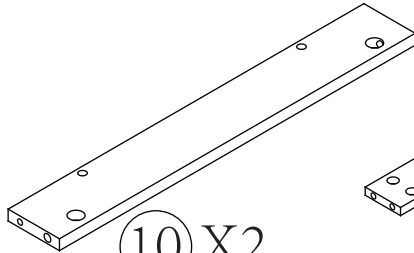


⑩ X2

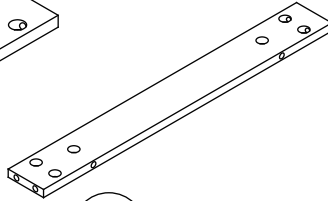


⑪

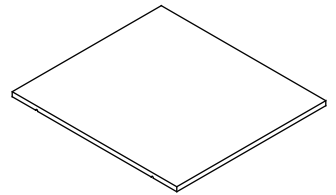


⑫ X2

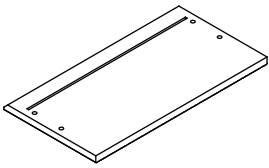


⑬ X2

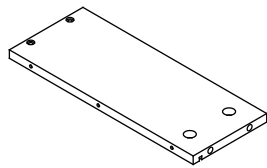


⑭ X2

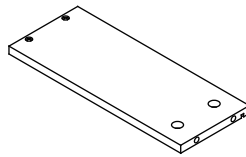


⑮ X2

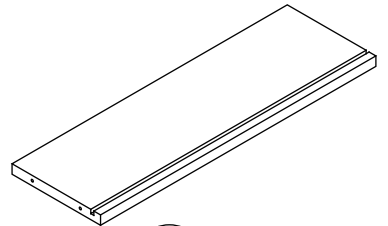


⑯ X2

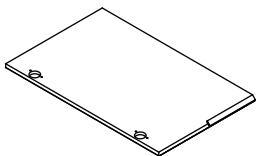


⑰

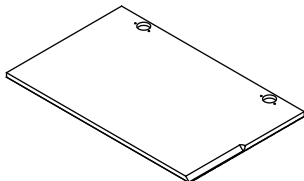


⑱

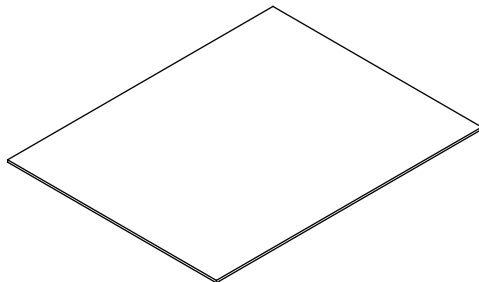



⑲ X2

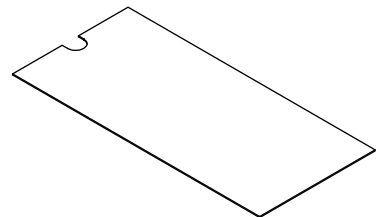

⑳ X2

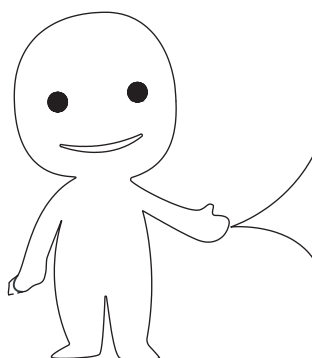


Please prepare the following tools

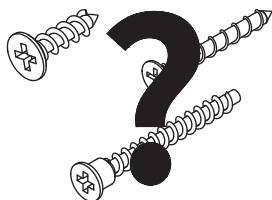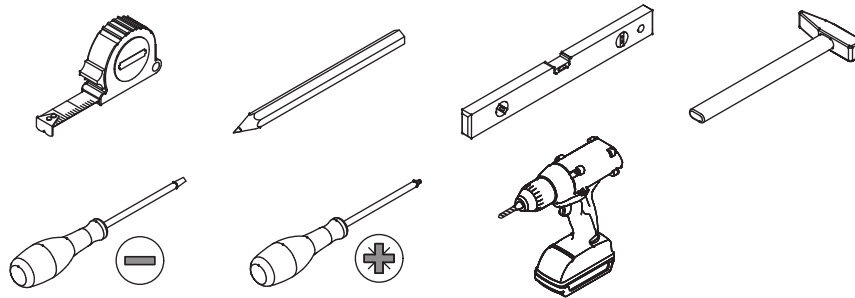


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Tips: The number after "+" represents the spare hardware

A x 30+3

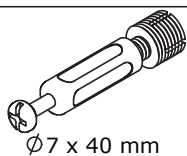


B x 80+8

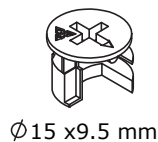

C x 34+3




D x 8

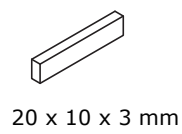


E x 52+5



F x 2

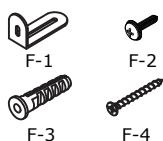

G x 24+2

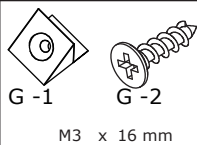


CL(300) x 2




CR(300) x2




DL(300)*2

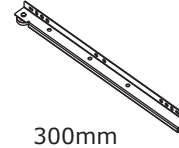

DR(300) x 2

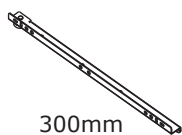


H x 4



J x 8+1



K x 3

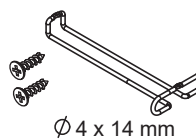


L x 30+3




M x 8+1




N x 1

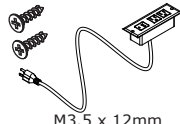




P x 50+5

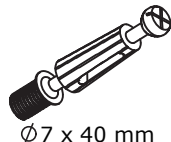


Q x 2







1

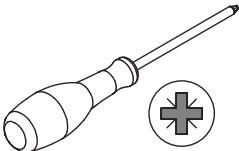P x 22  Ø 7 x 40 mm	C x 4  Ø 6 x 30 mm	
--	---	--

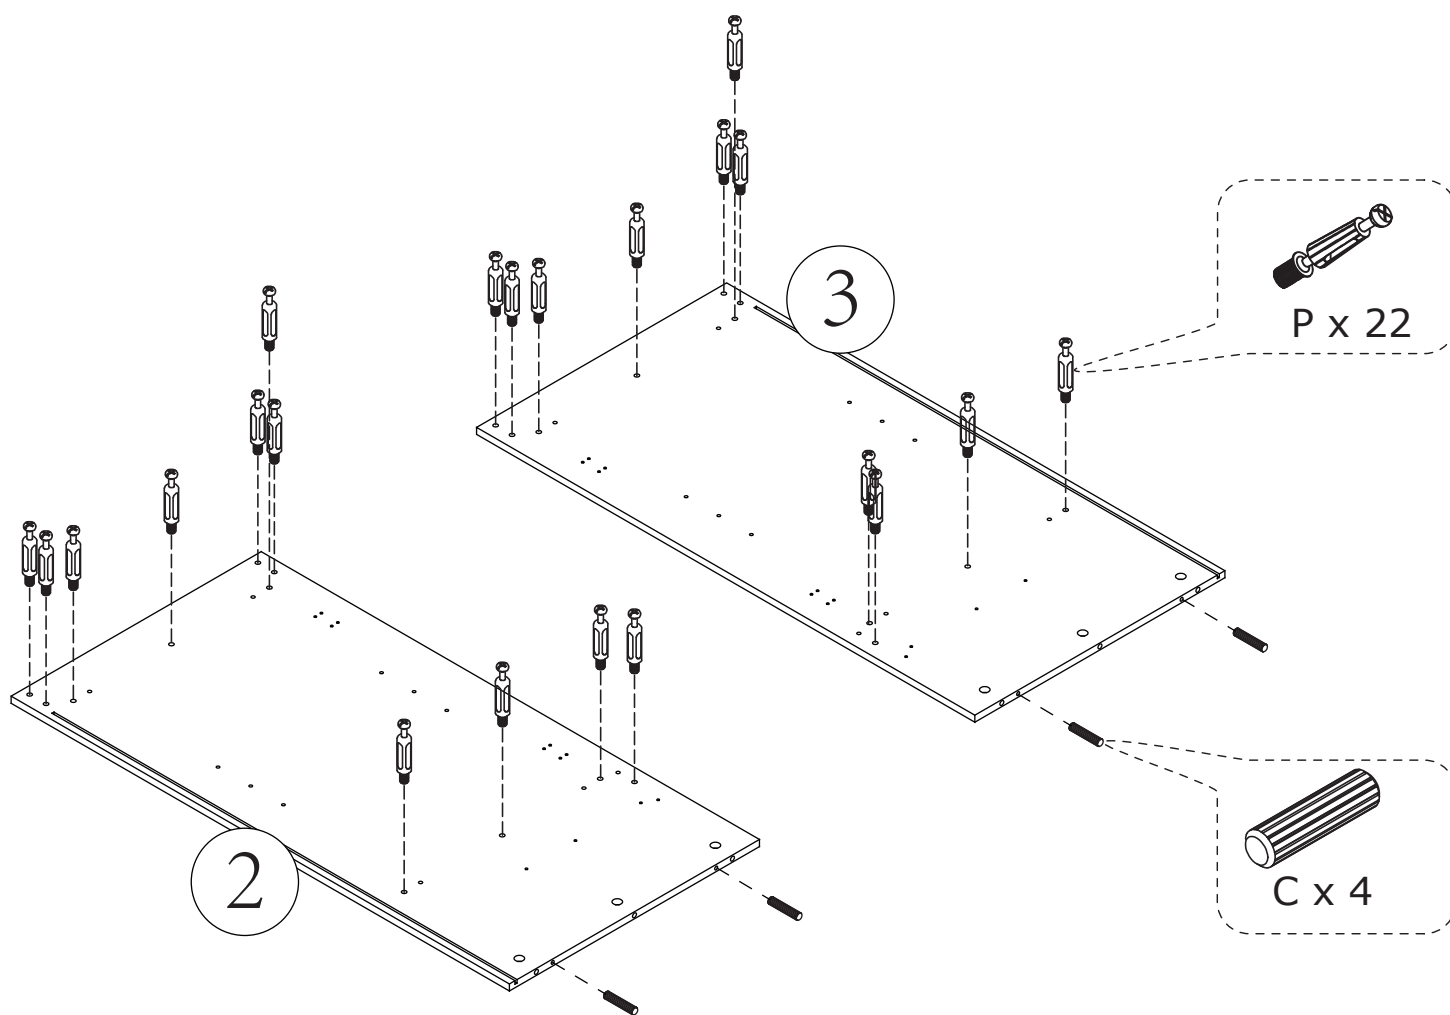


2

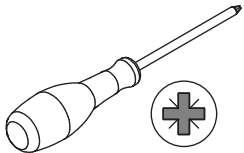
CL(300) x 1  300mm	E x 8  M3.5 x 12mm	CR(300) x 1  300mm	
---	---	---	--

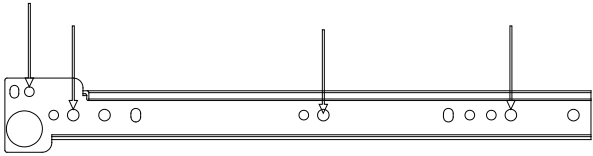




CL (300) x 1


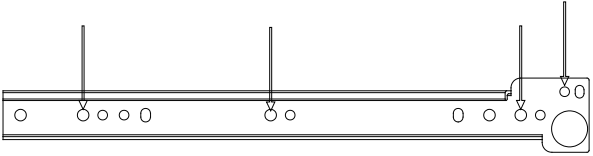


CR (300) x 1



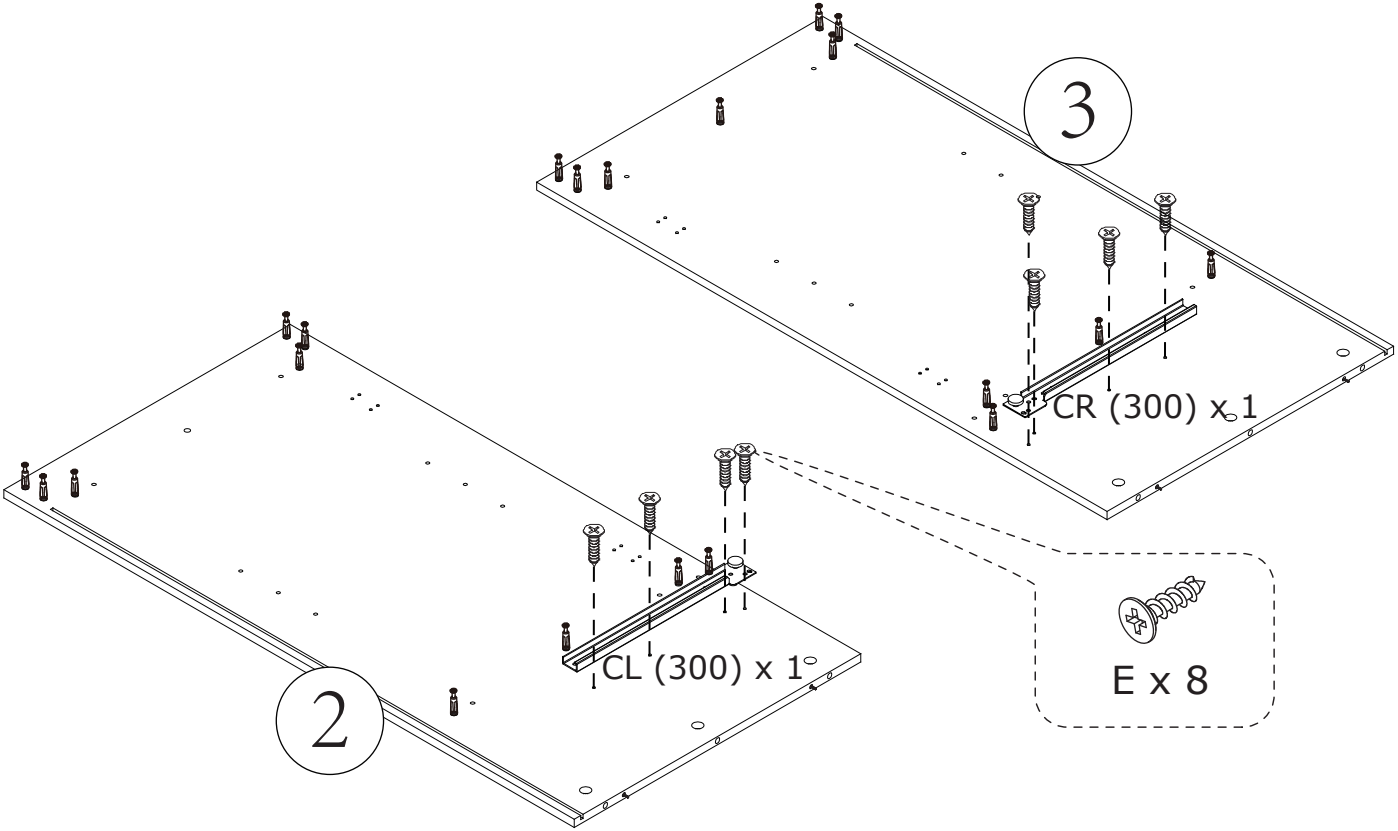



3

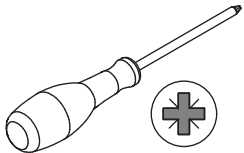P x 8  Ø 7 x 40 mm	C x 2  Ø 6 x 30 mm	
---	---	--

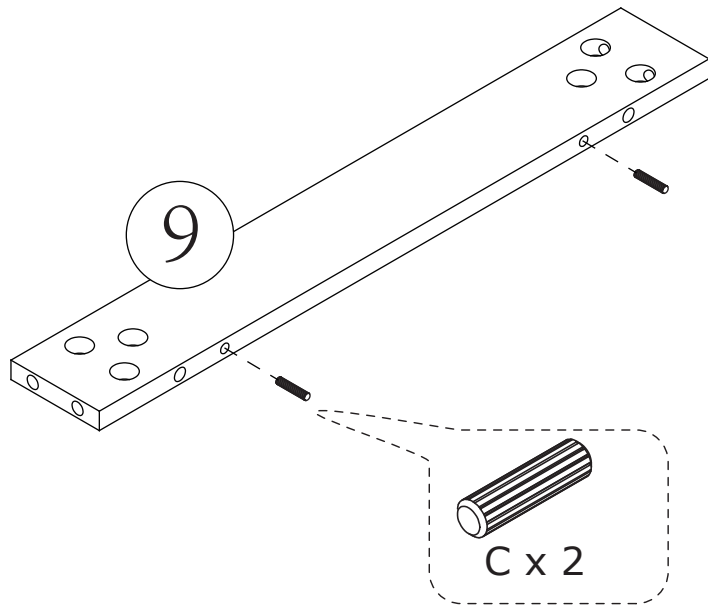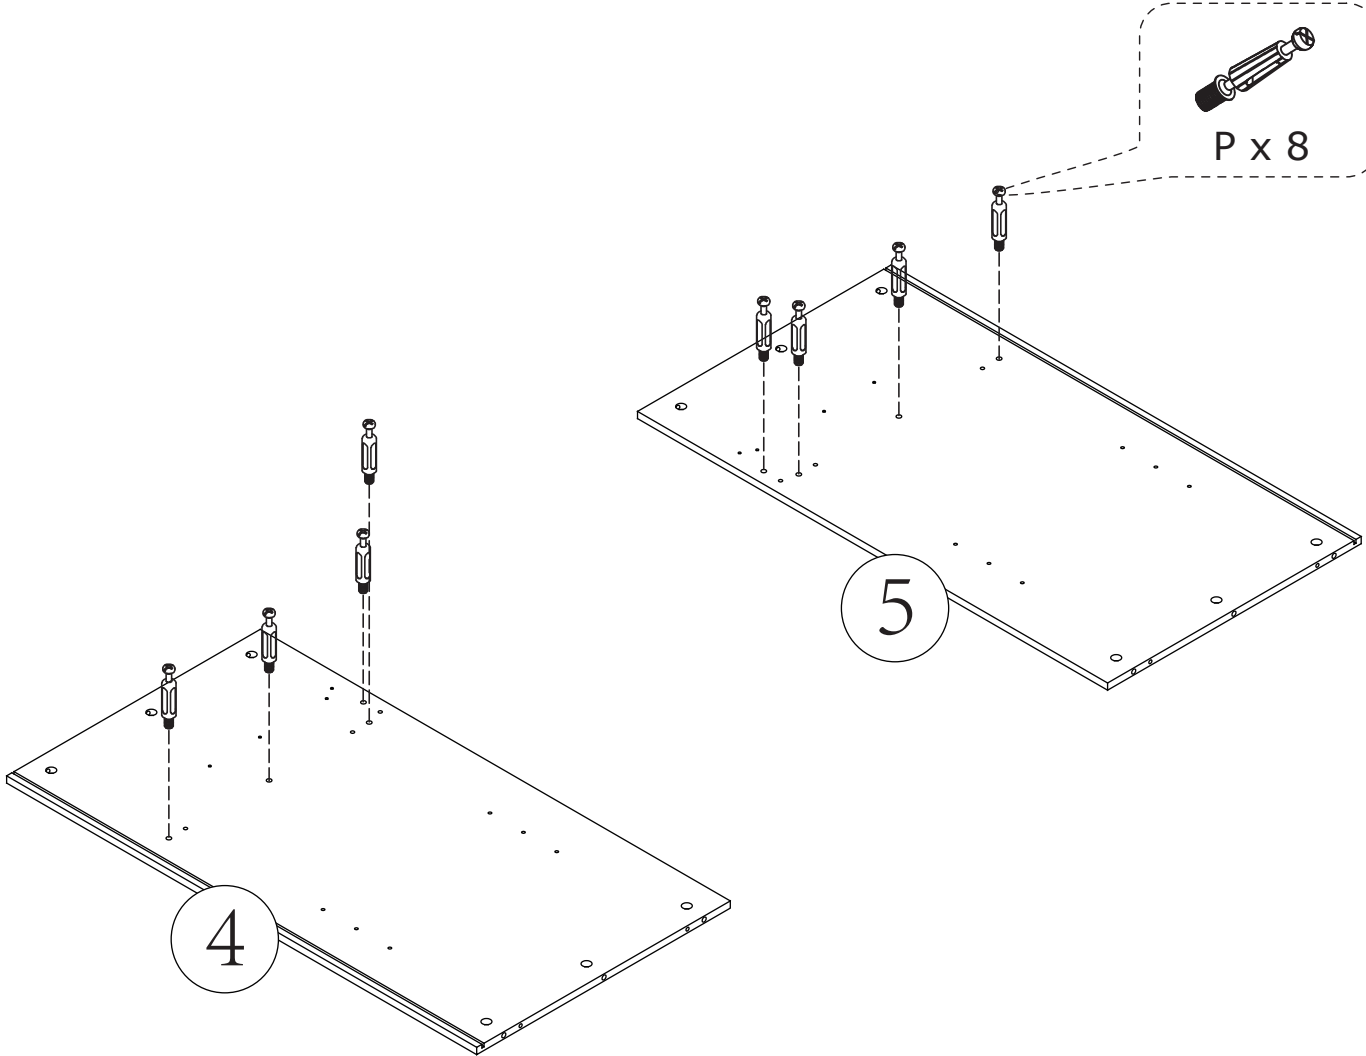


4

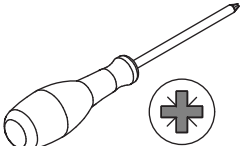
CL(300) x 1  300mm	CR(300) x 1  300mm	E x 8  M3.5 x 12mm	
---	---	---	--

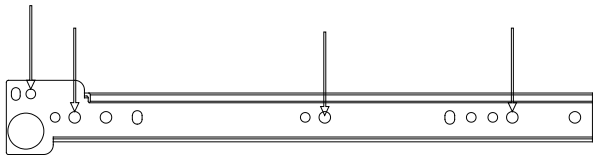




CL (300) x 1

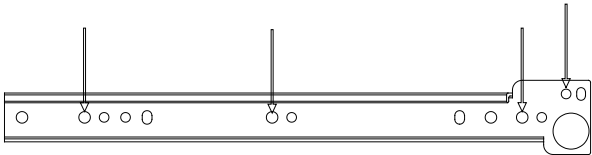


CR (300) x 1

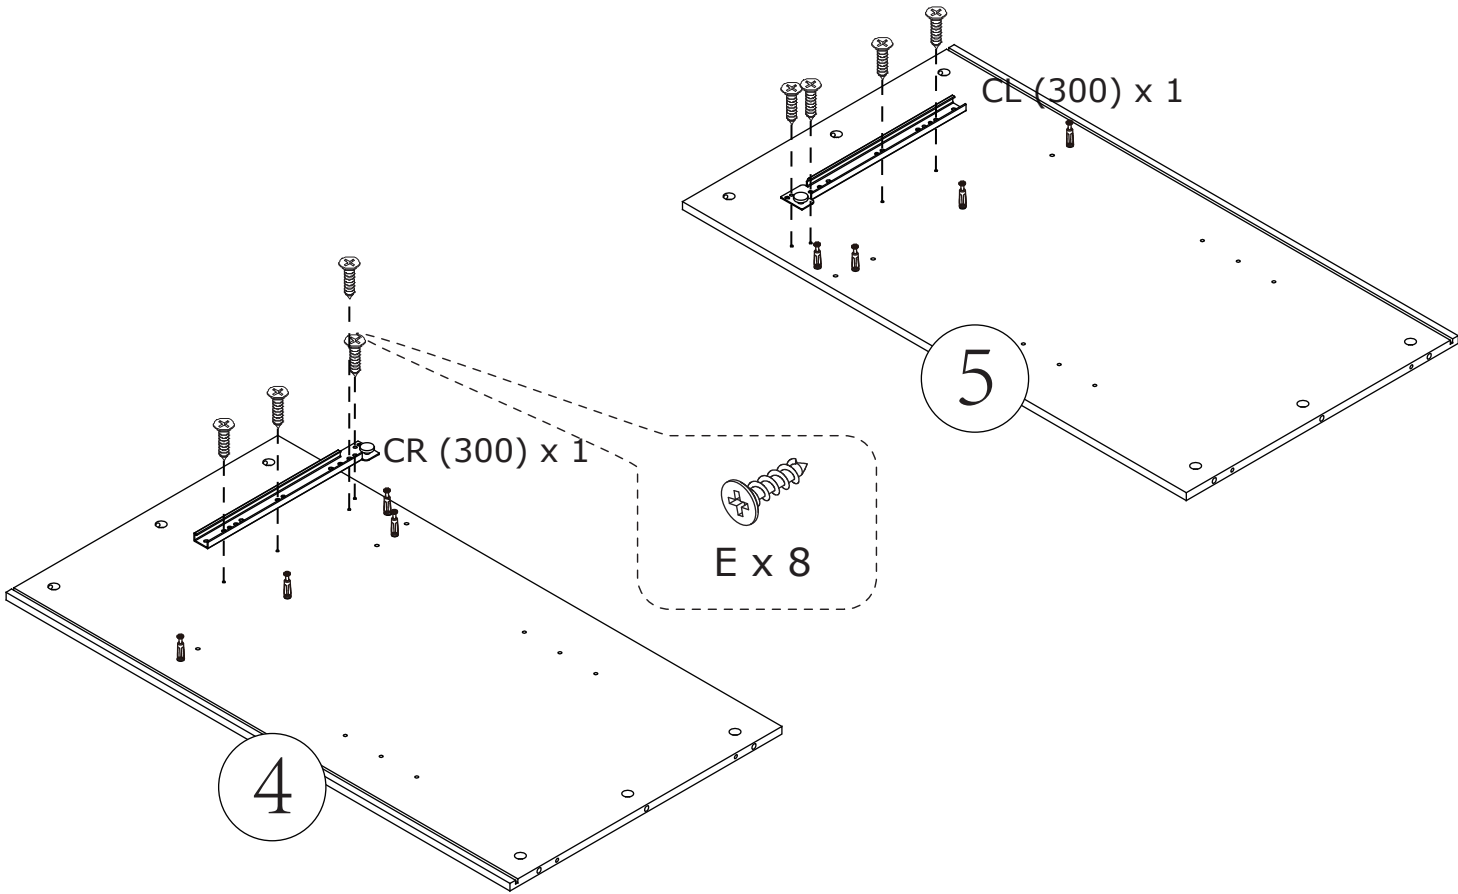

5

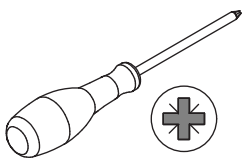P x 4  Ø 7 x 40 mm	C x 8  Ø 6 x 30 mm	 
---	---	--


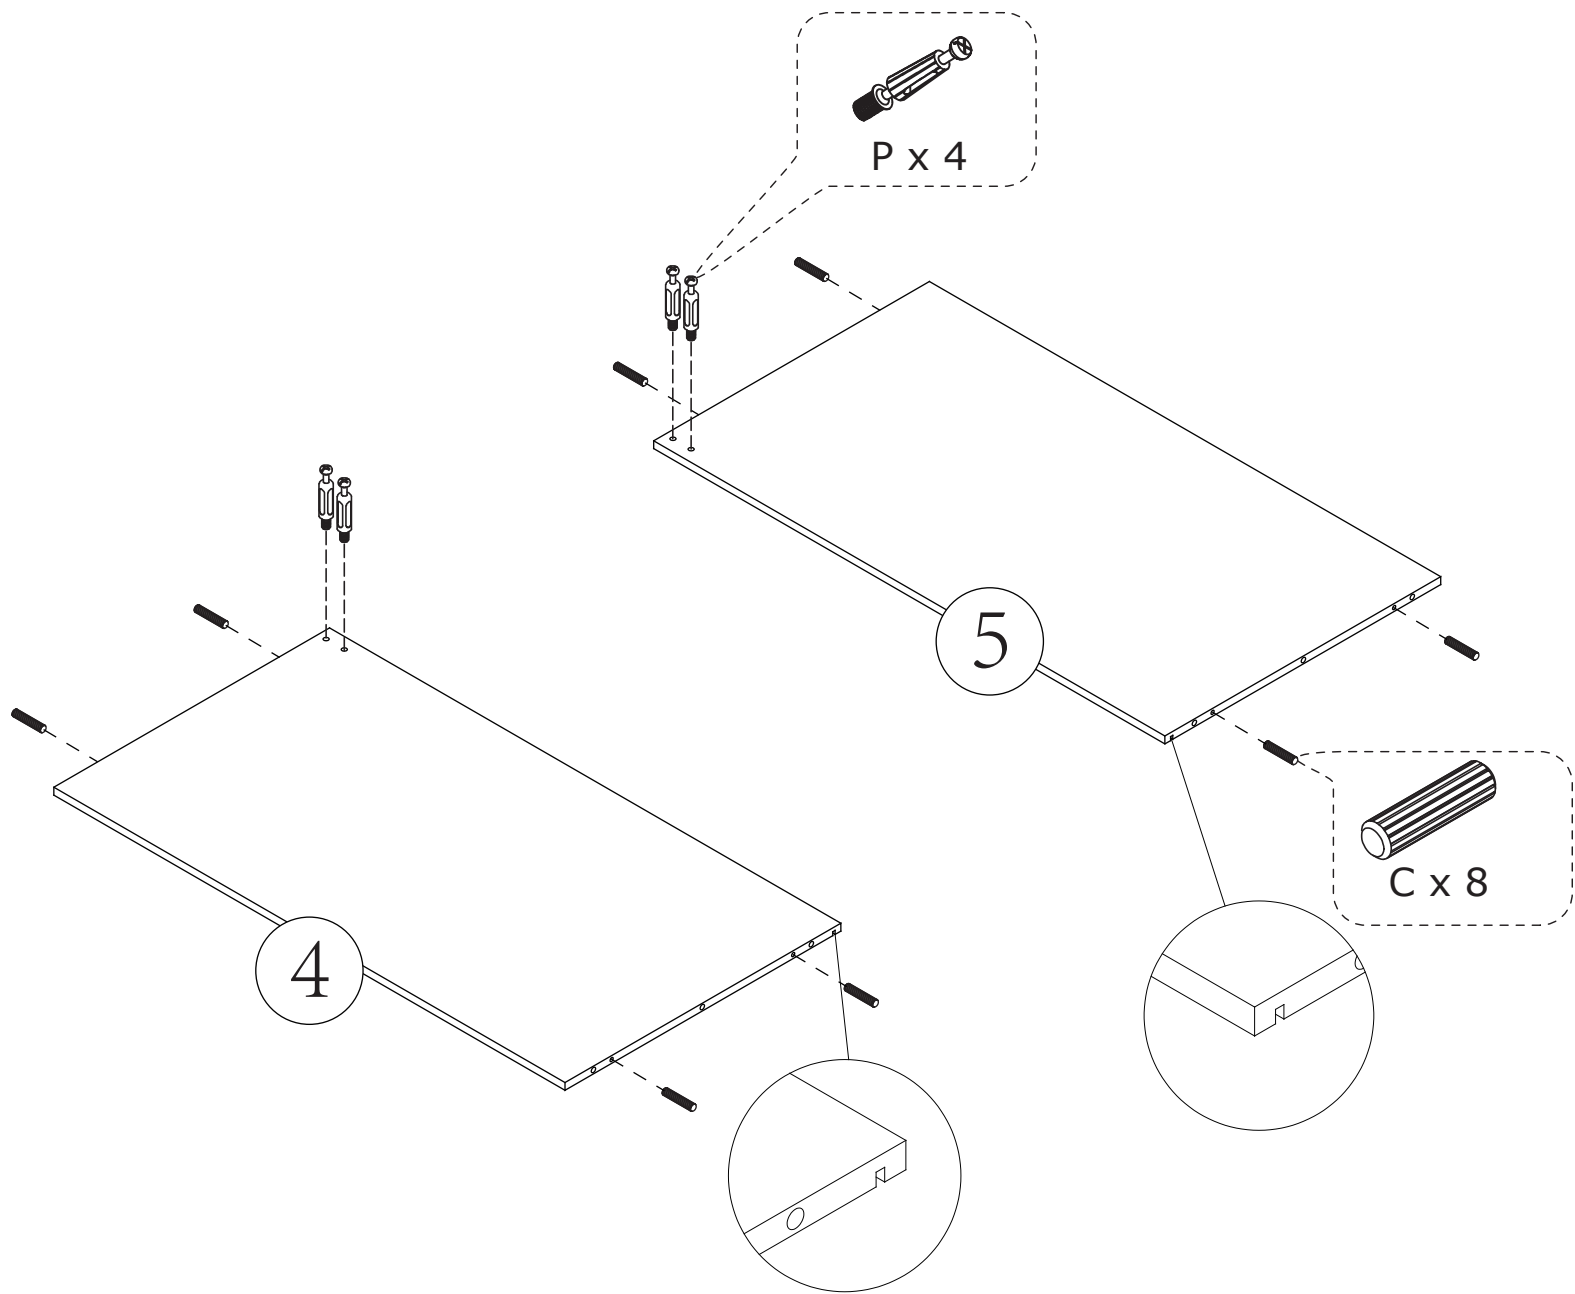


6



P x 10











Ø 7 x 40 mm

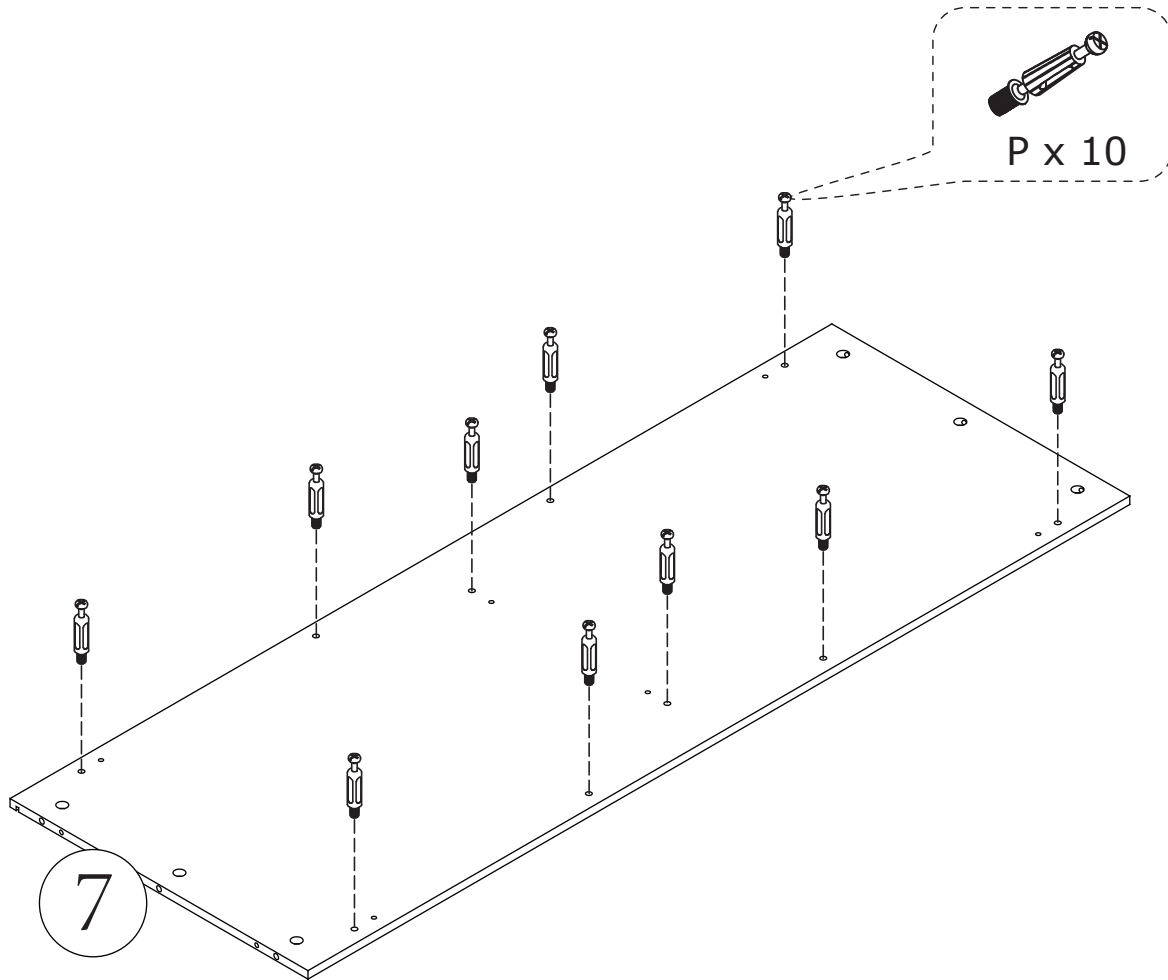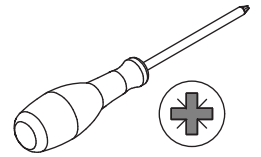






7

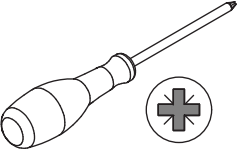A x 8  Ø 7 x 40 mm	C x 16  Ø 6 x 30 mm	
---	--	--

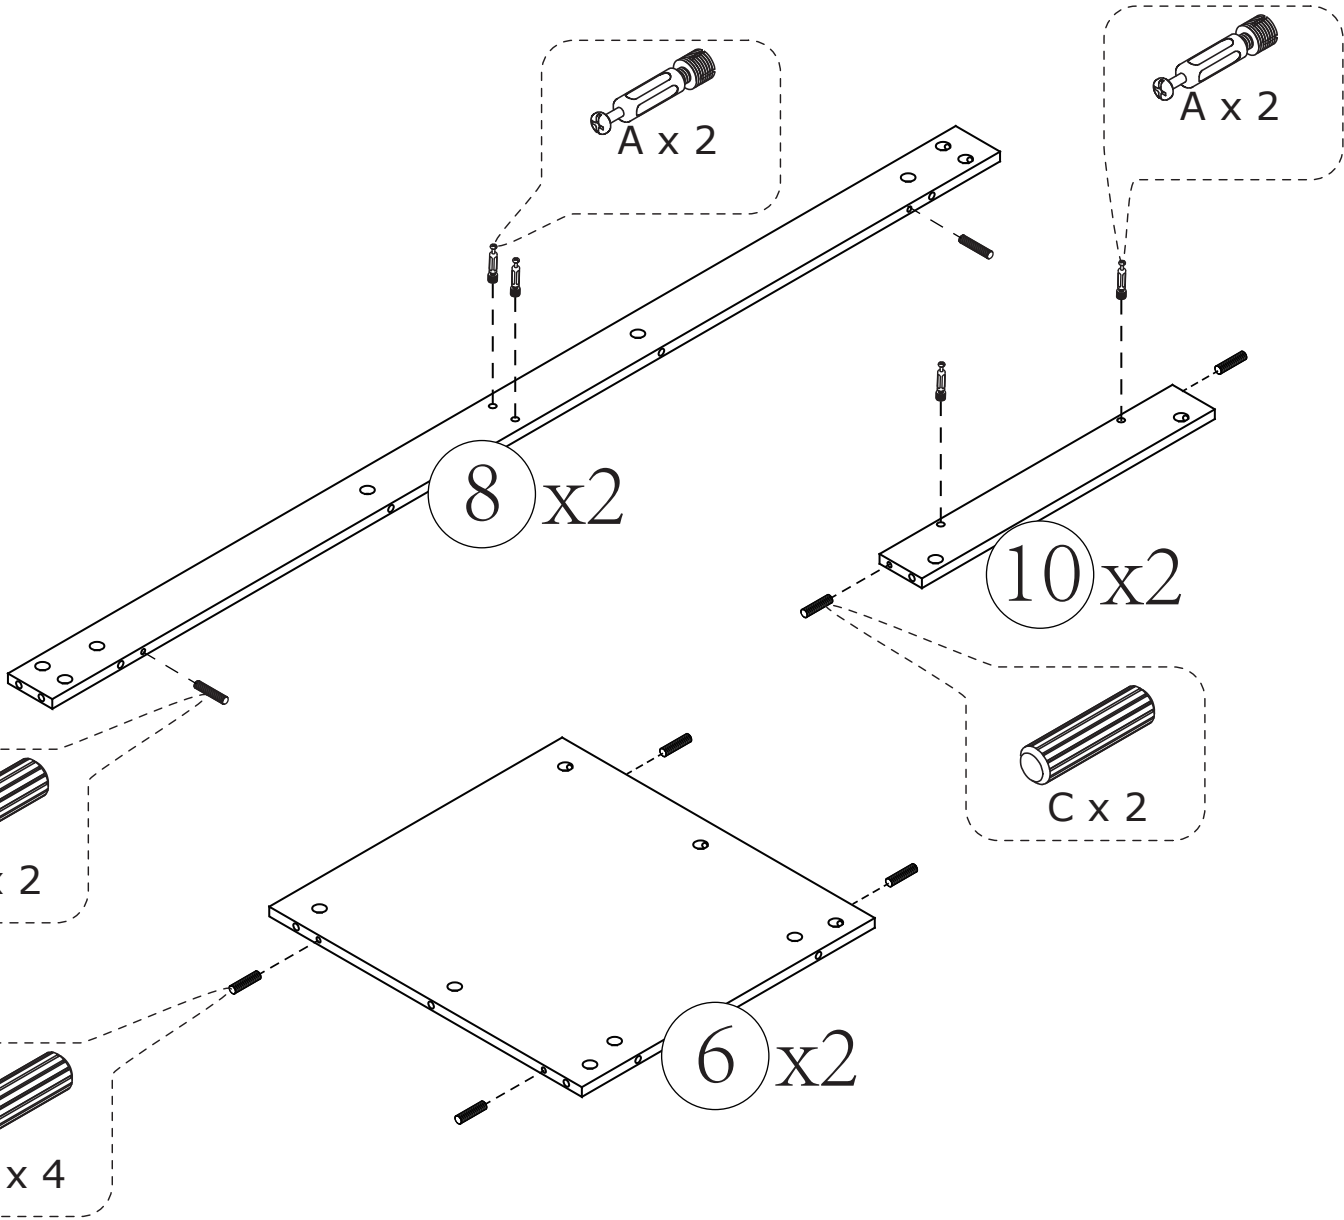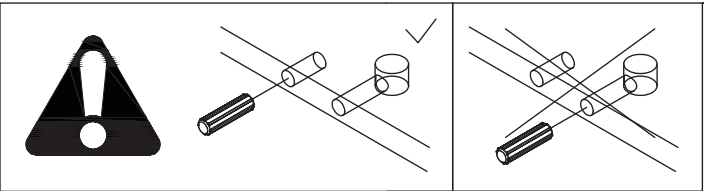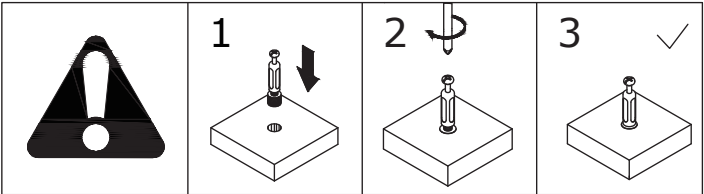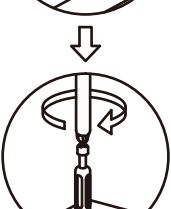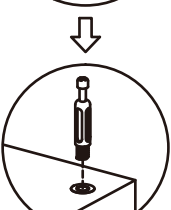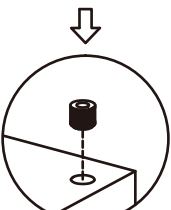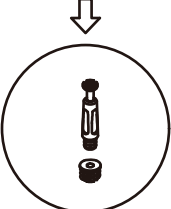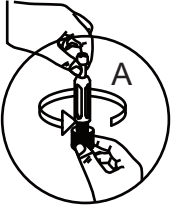





8

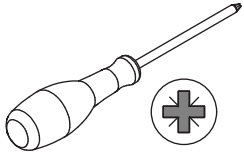A x 14  Ø 7 x 40 mm	F x 2  F-1  F-2	
--	---	--

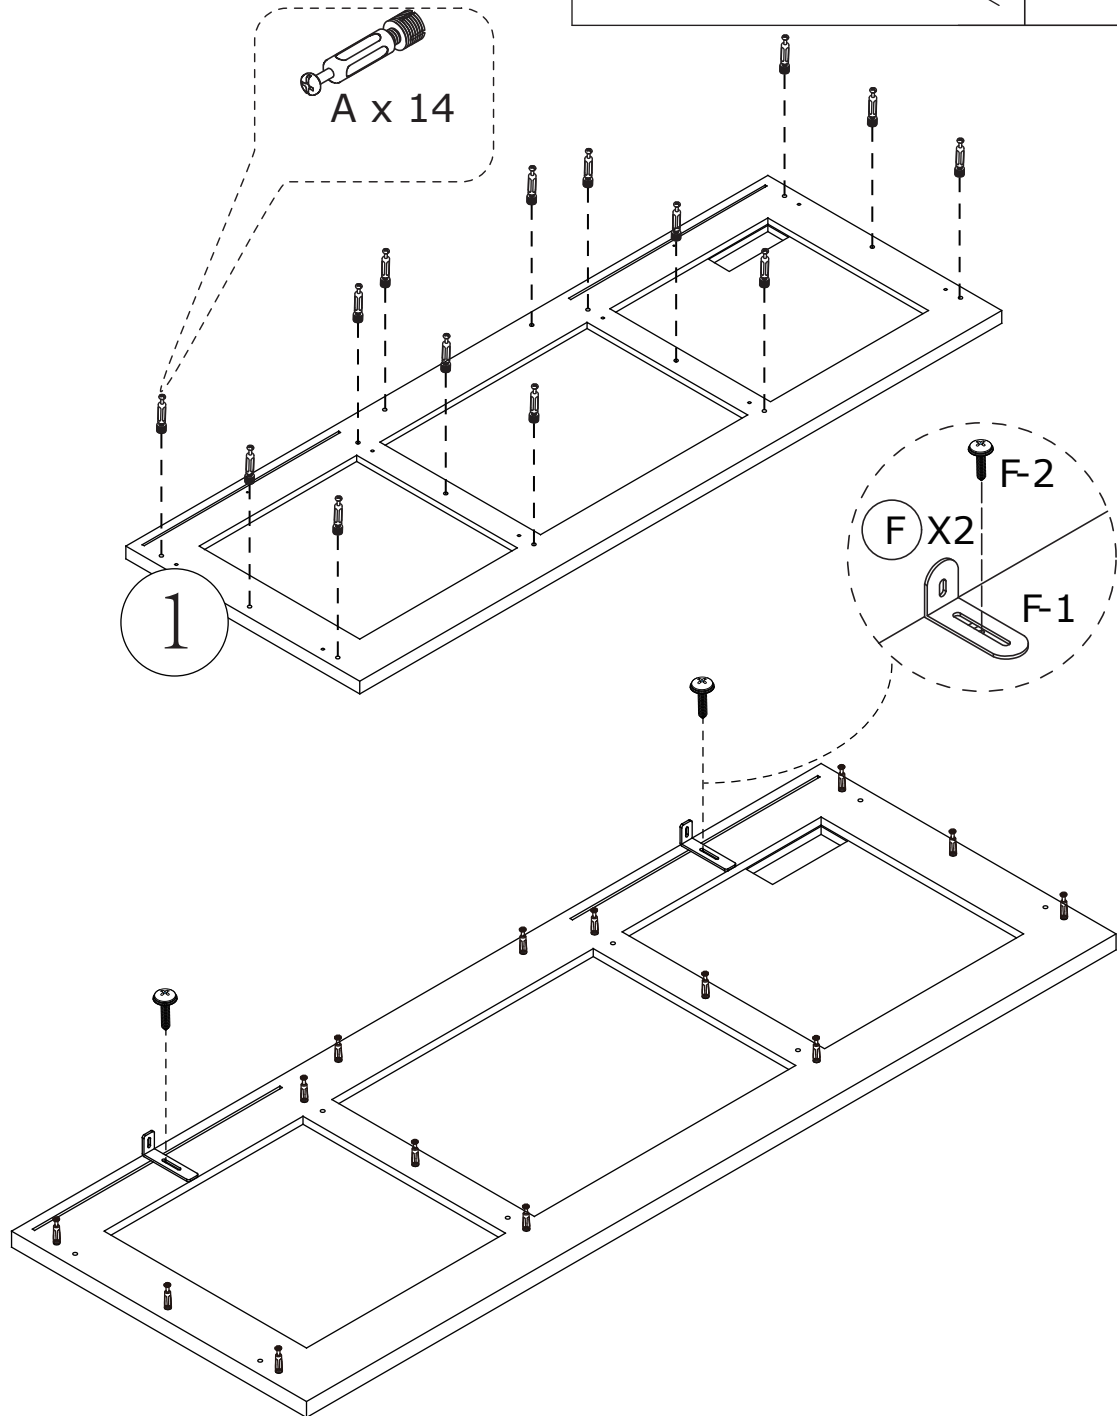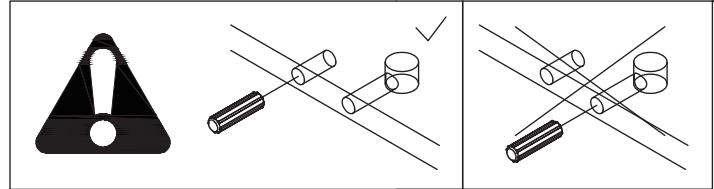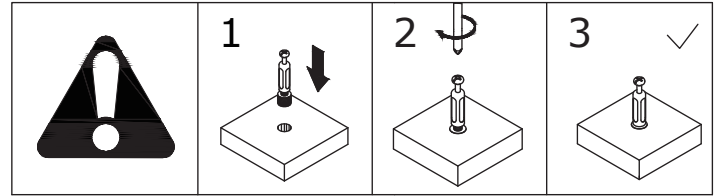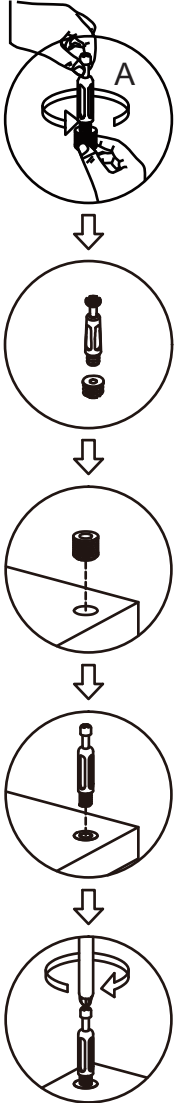


9


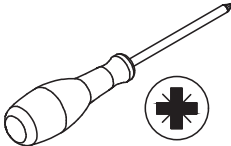
B x 14  Ø 15 x 9.5 mm	
--	---

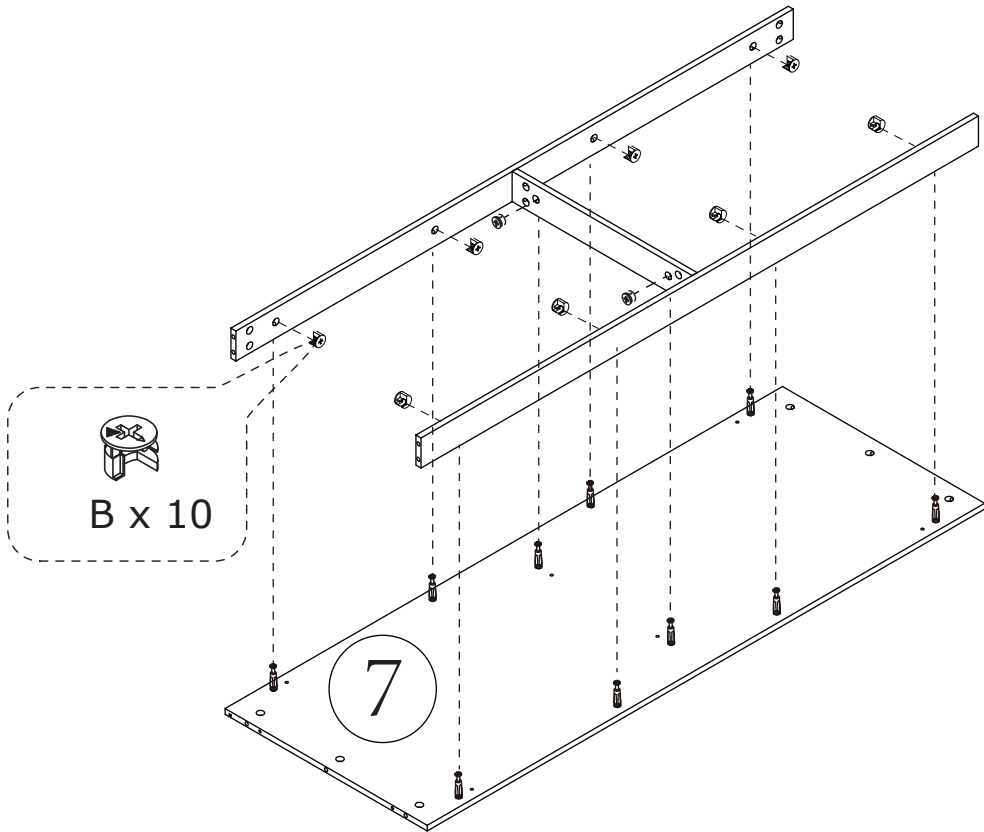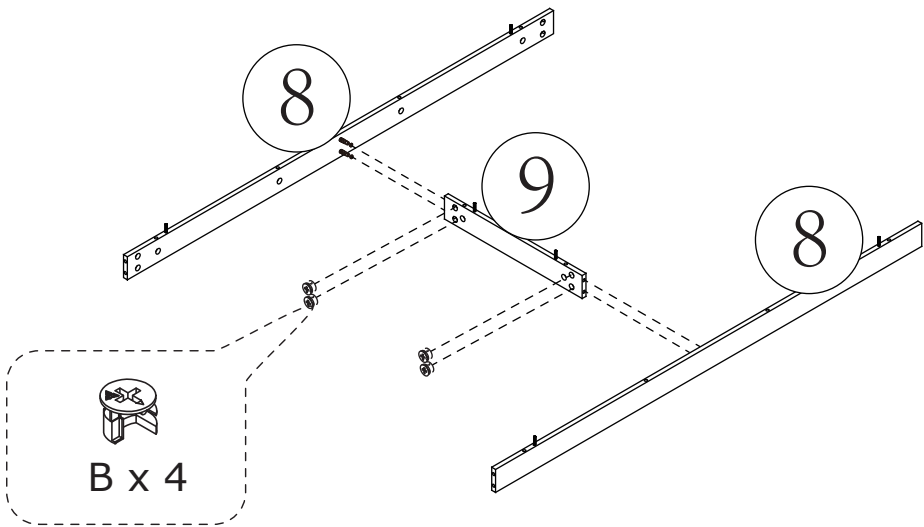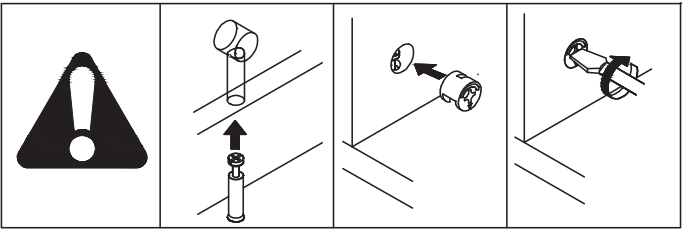



10

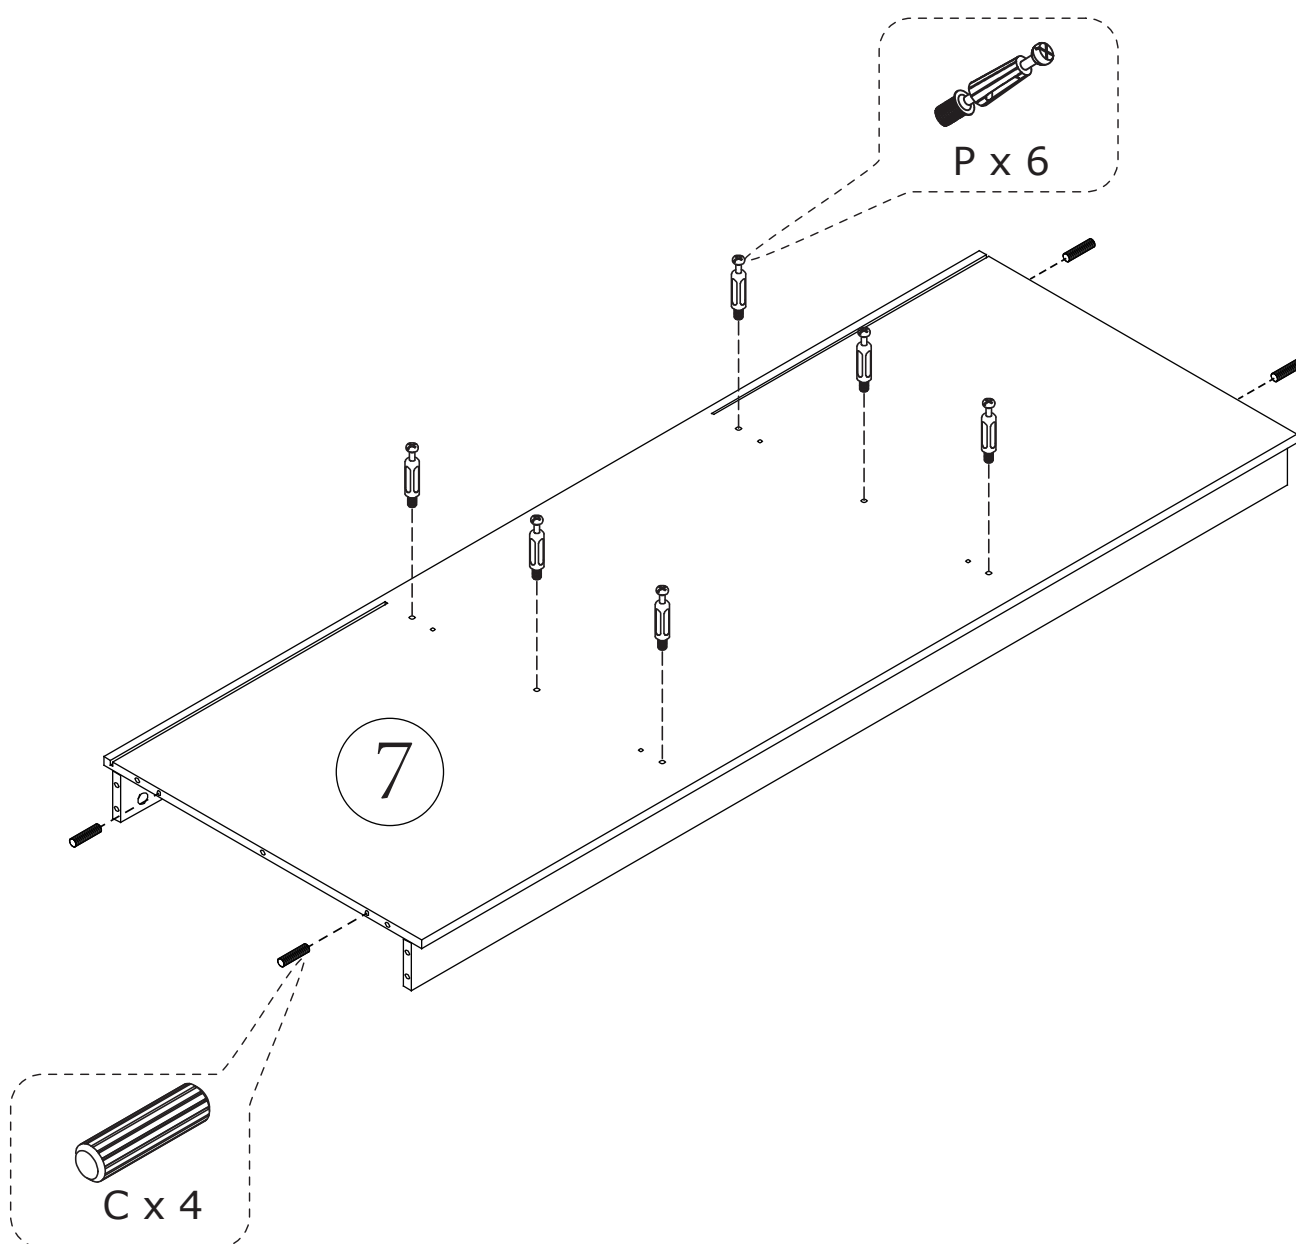


11

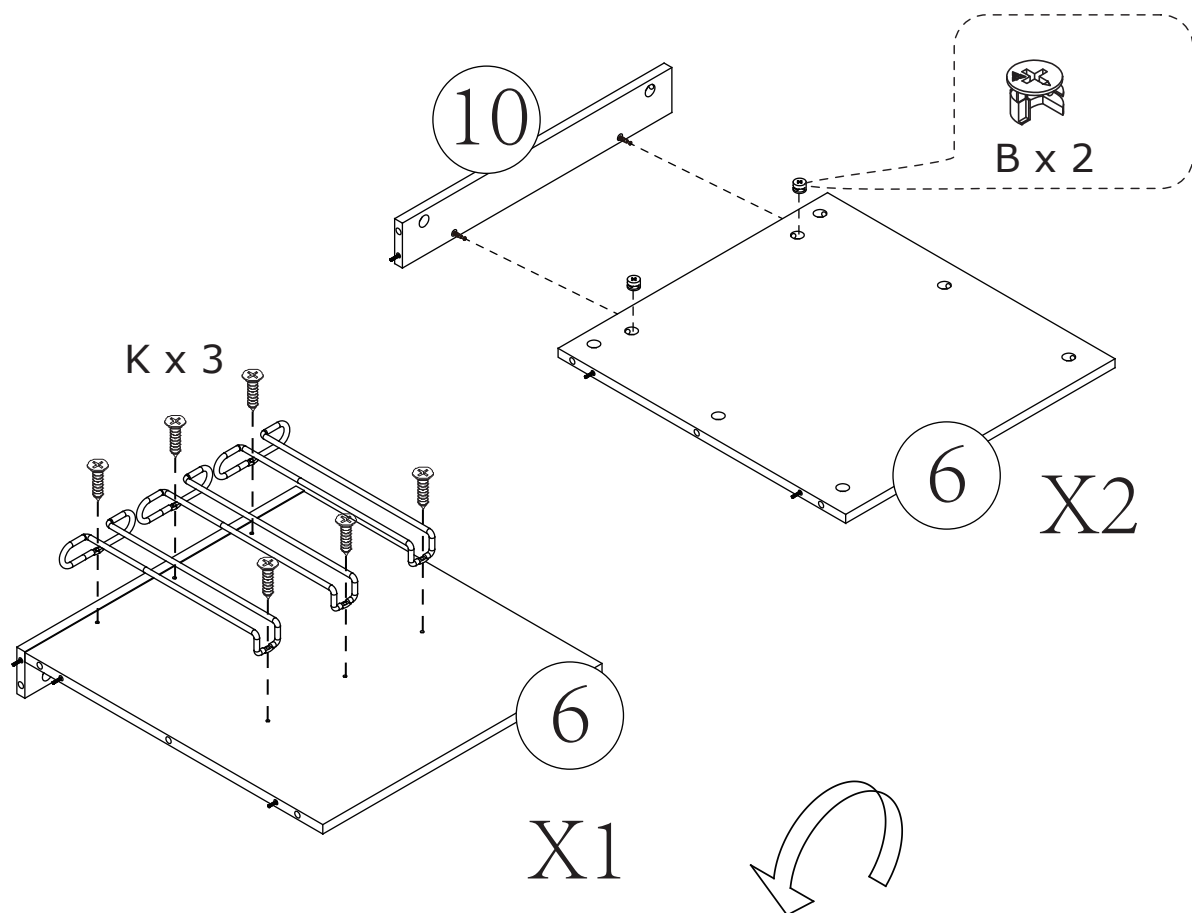
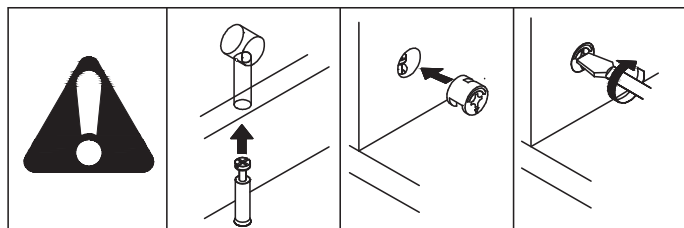


12

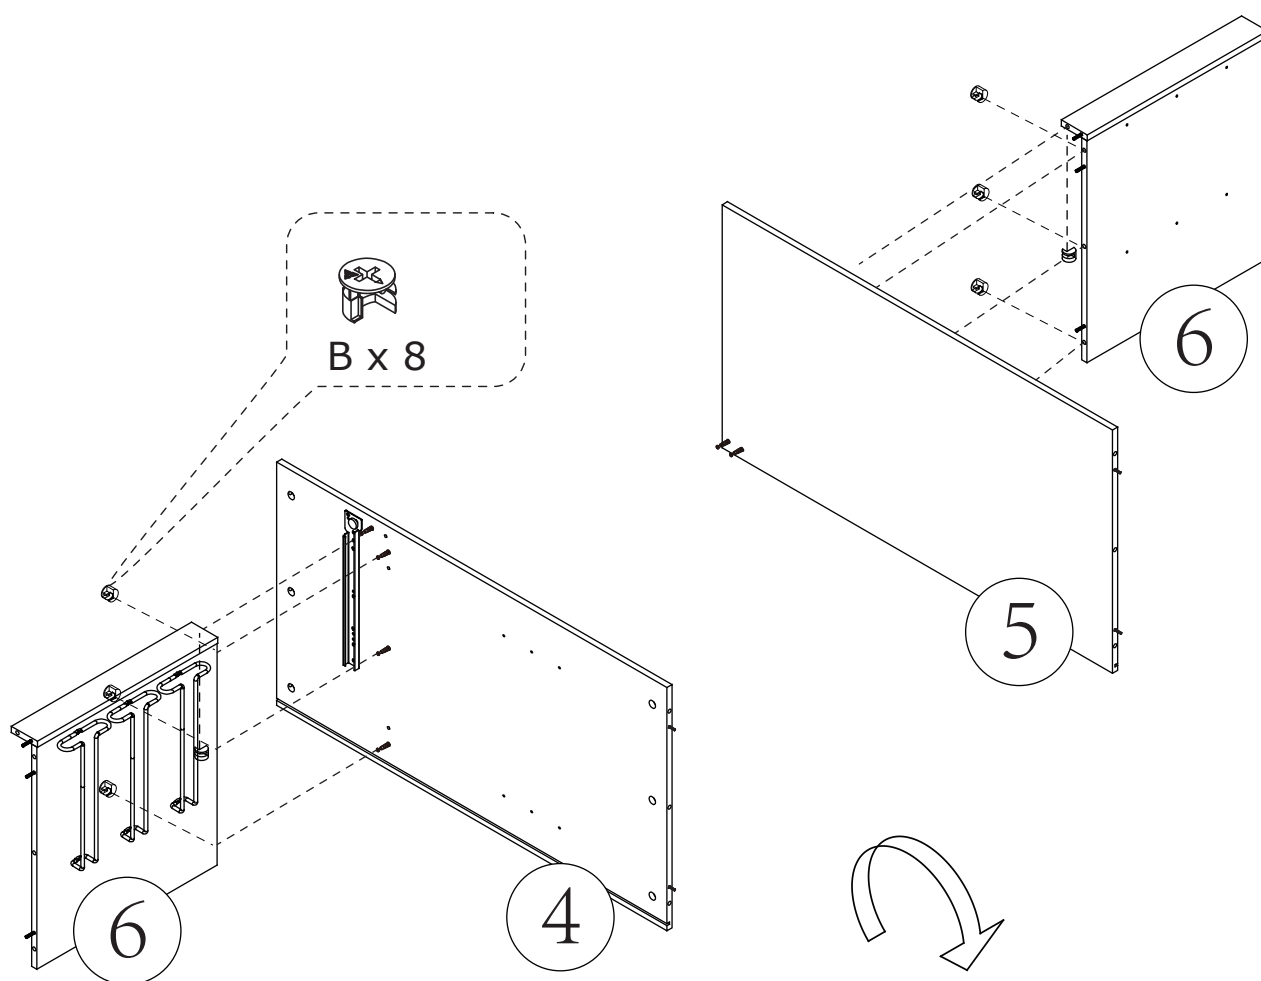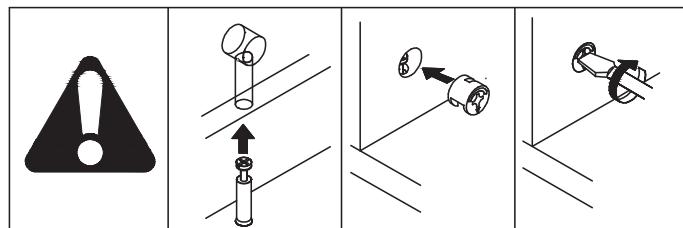




13

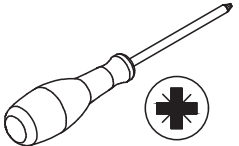B x 4  Ø 15 x 9.5 mm	
---	---

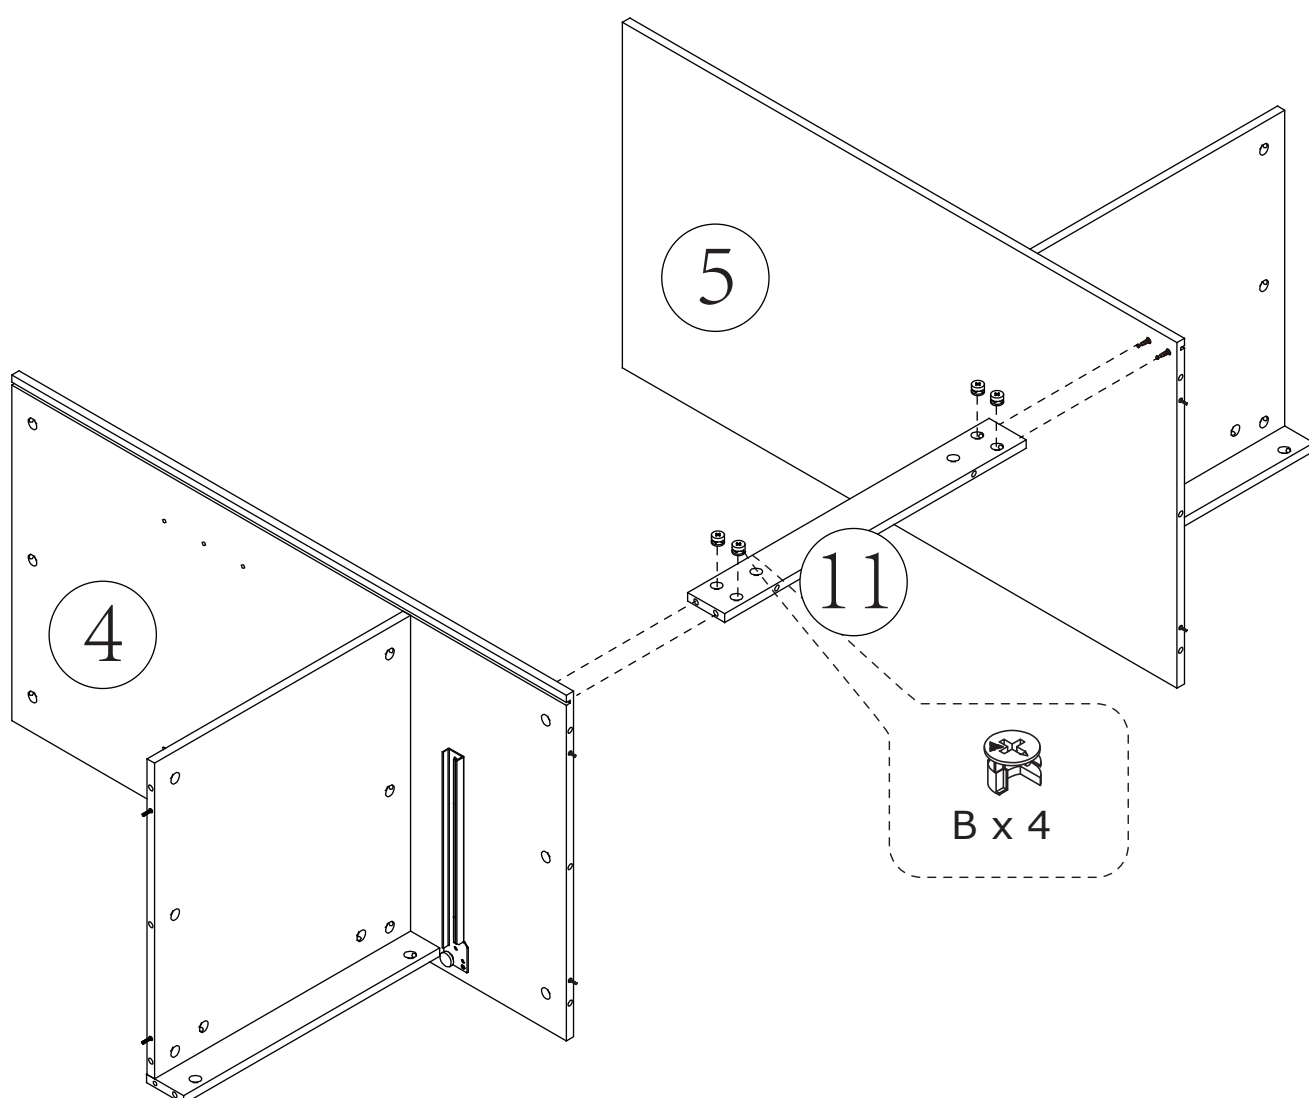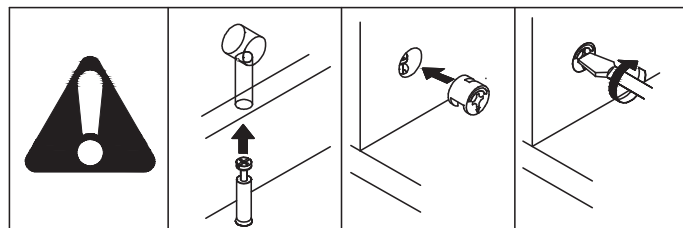




14

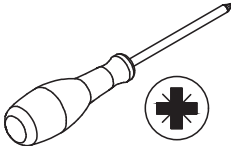B x 6  Ø 15 x 9.5 mm	 
---	---

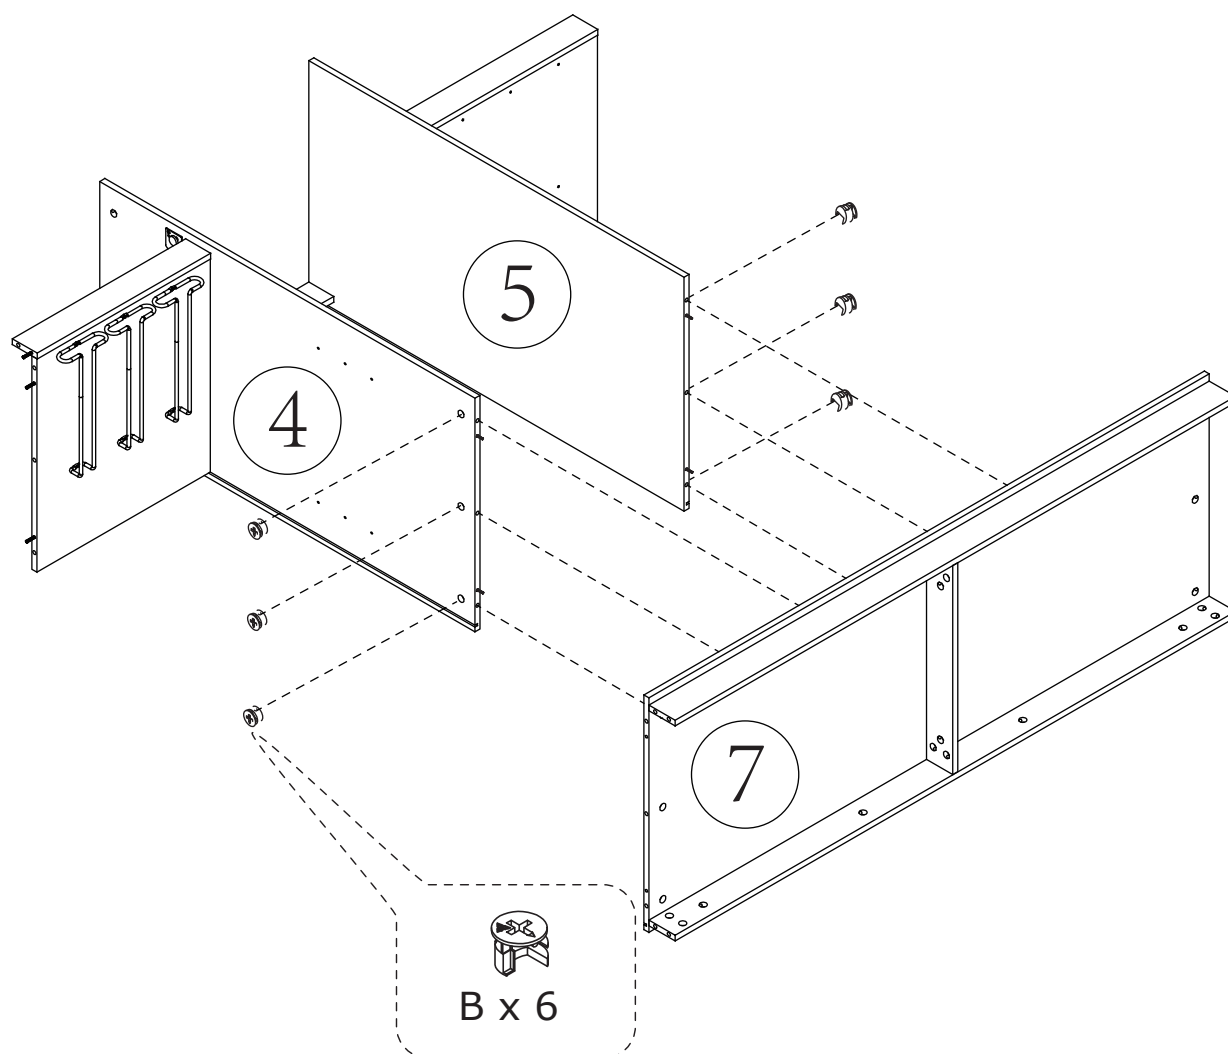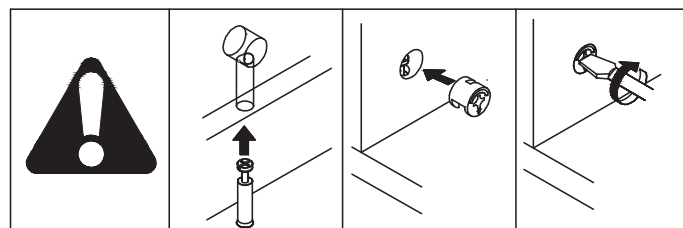

15

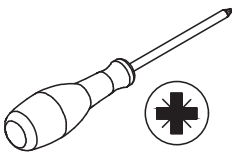B x 22  Ø 15 x 9.5 mm	D x 8  20 x 10 x 3 mm	
--	--	---


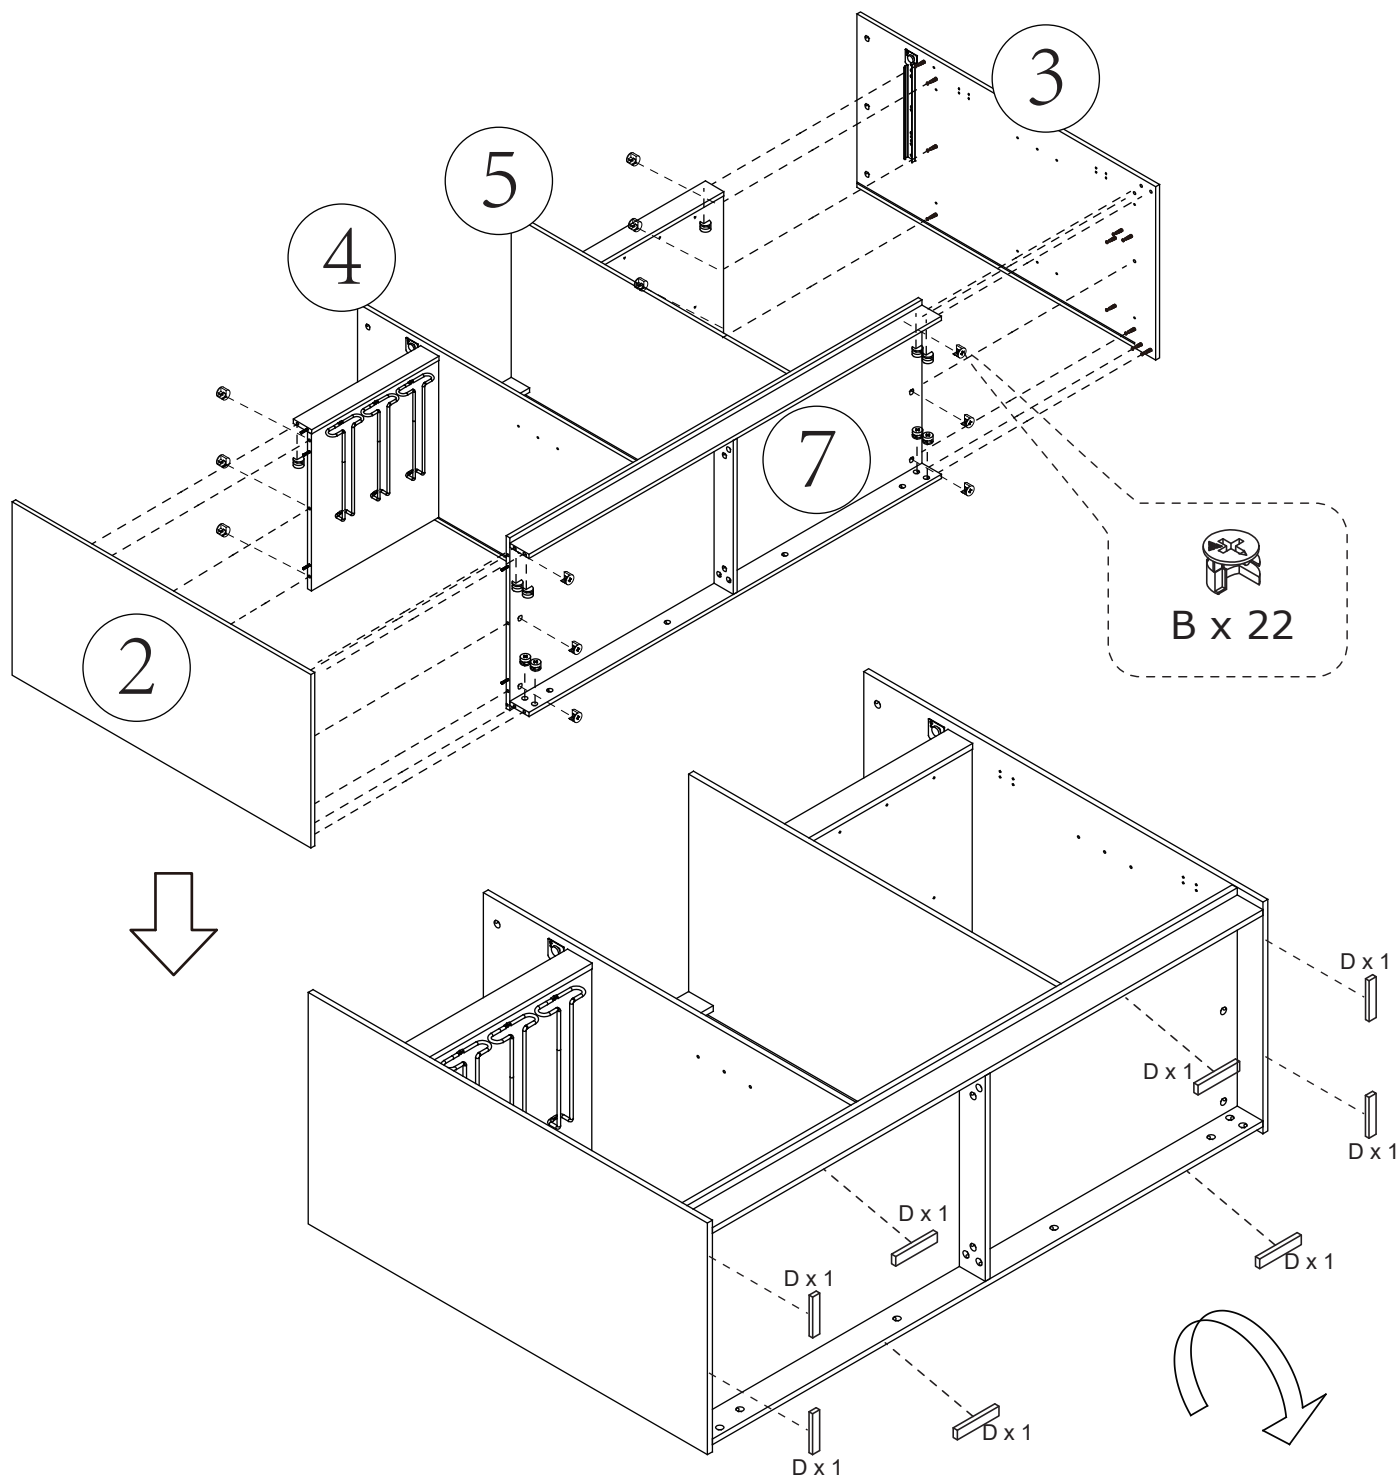
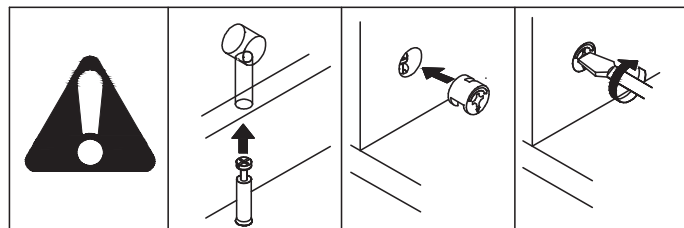


16

B x 14




Ø 15 x 9.5 mm

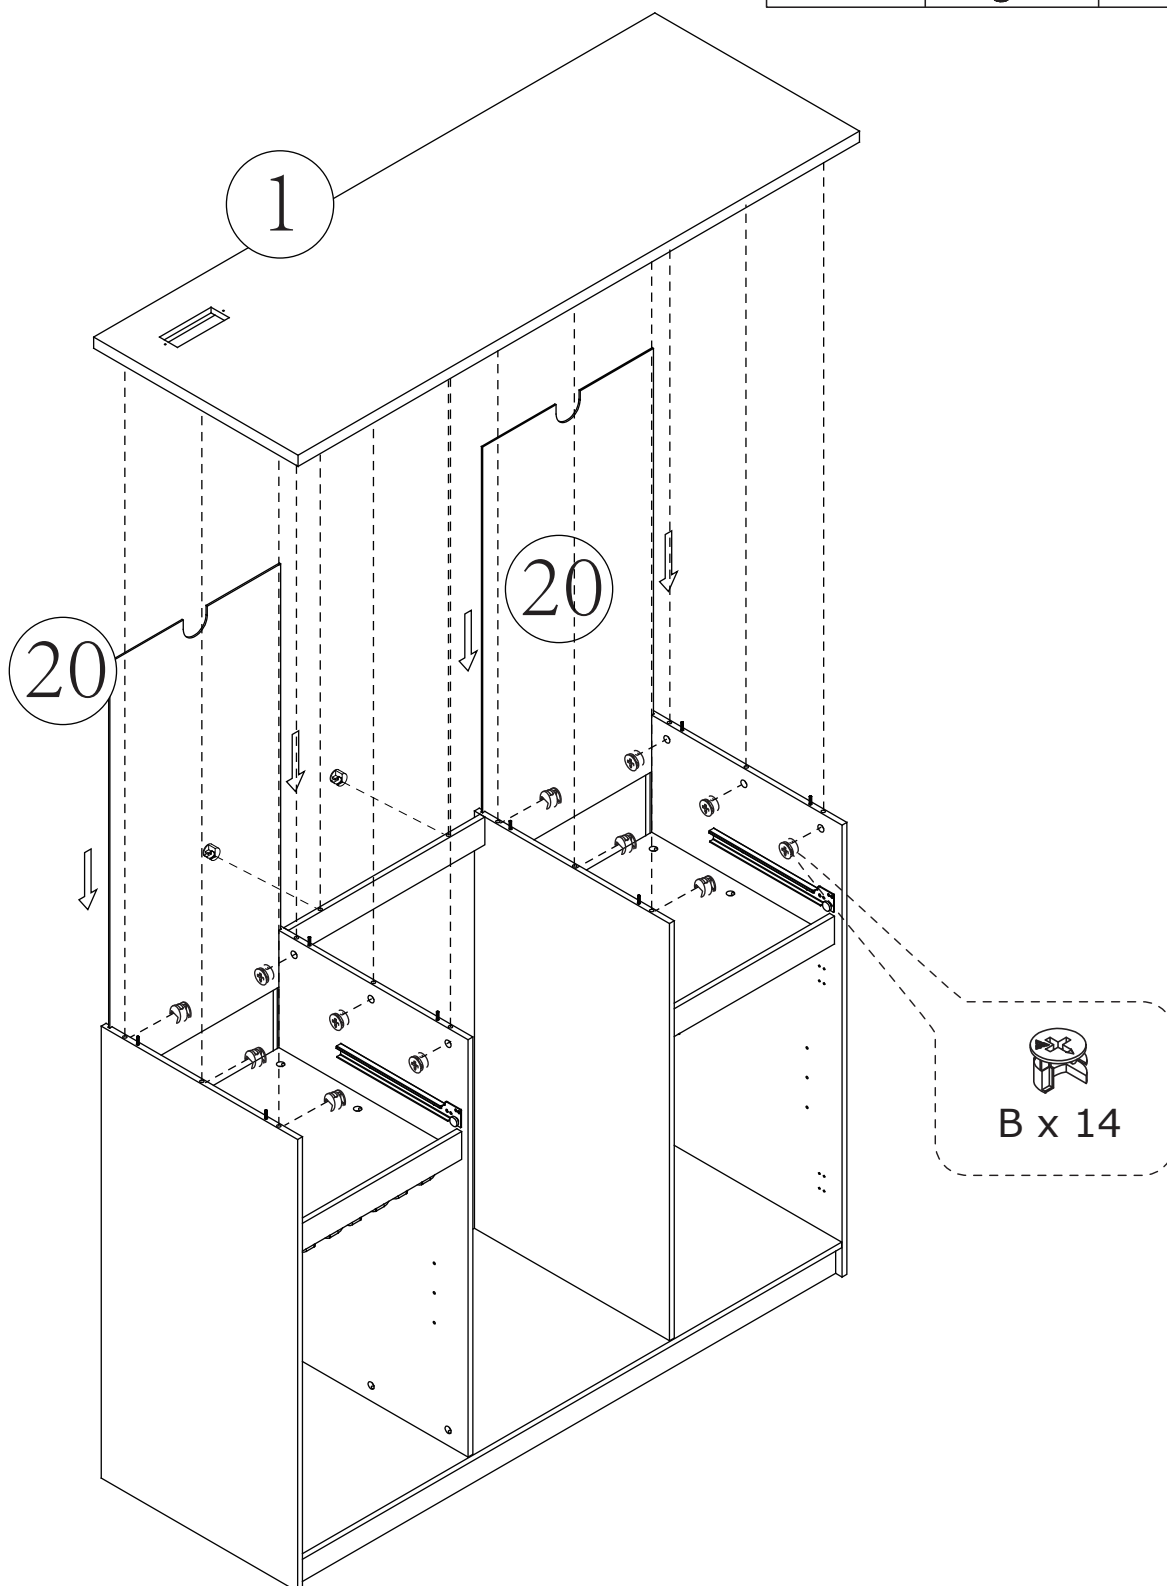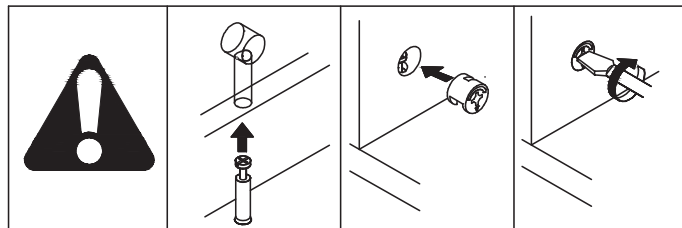
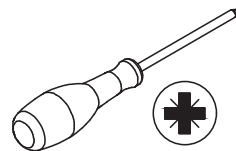


17


J x 8








Ø 5 x 16 mm

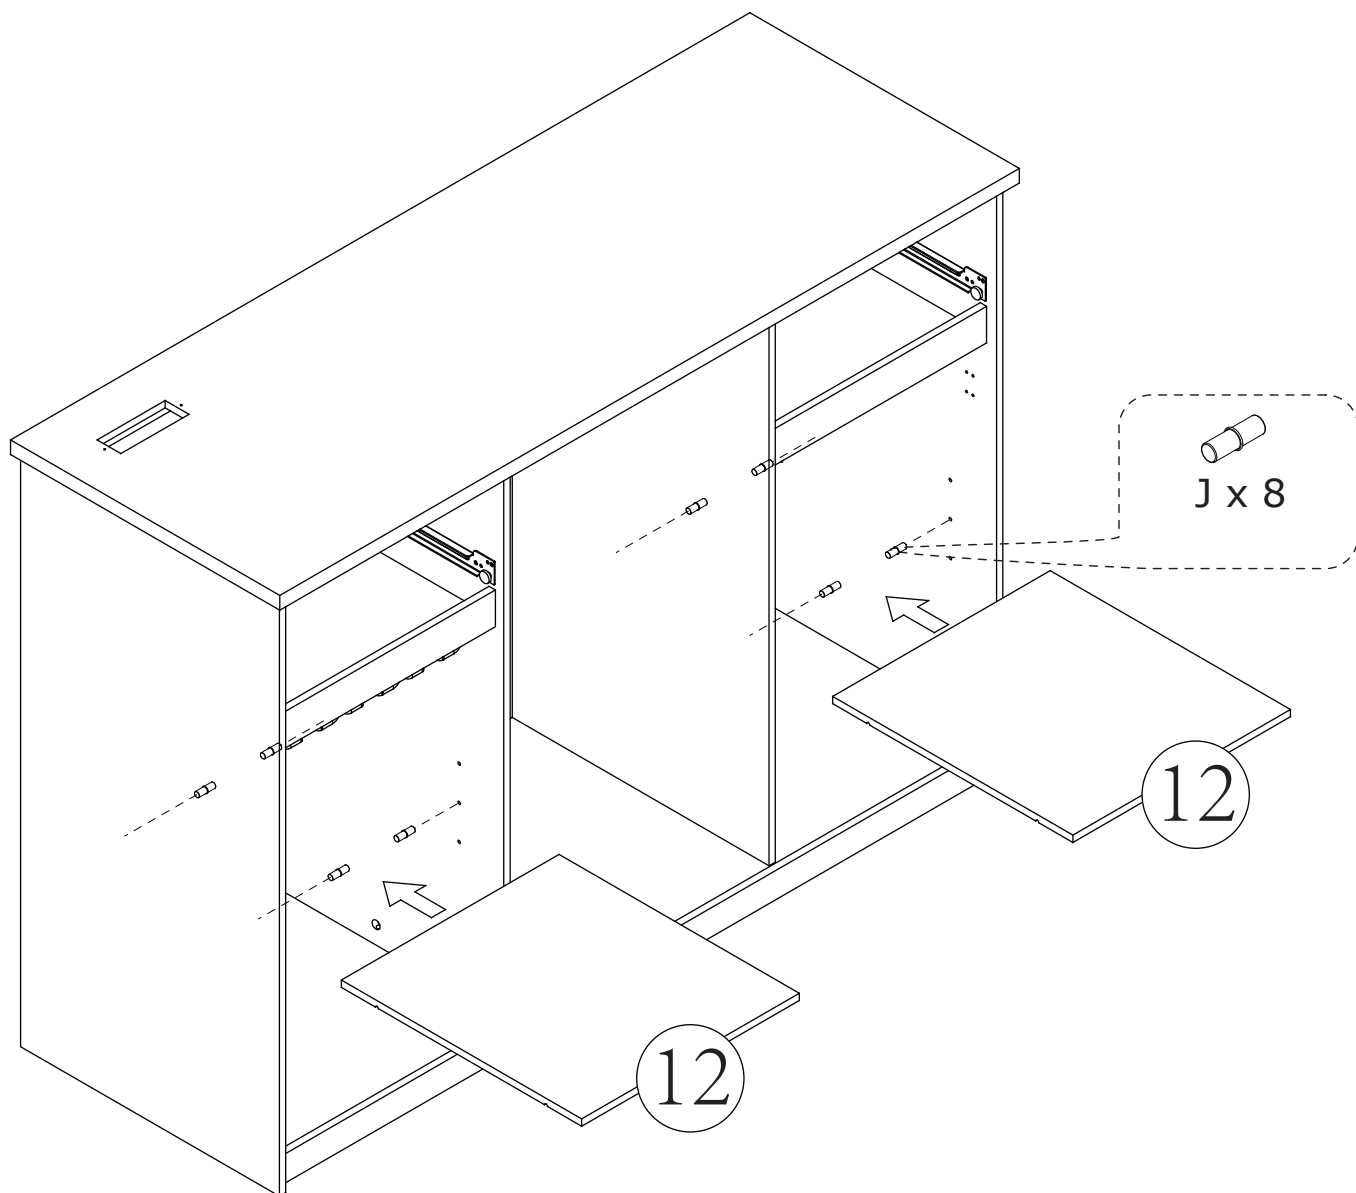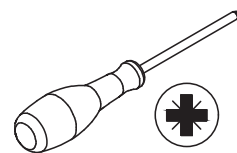



18

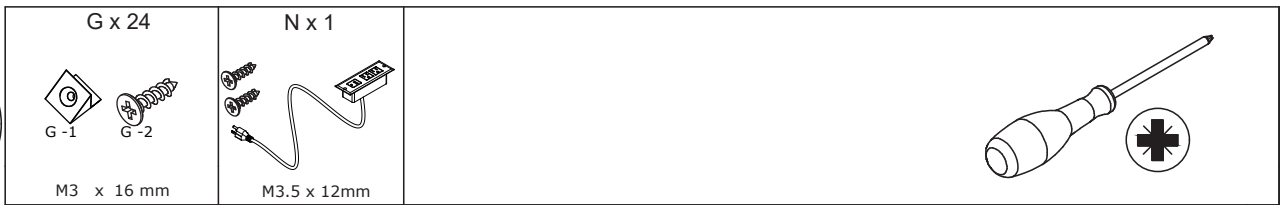

N x 1

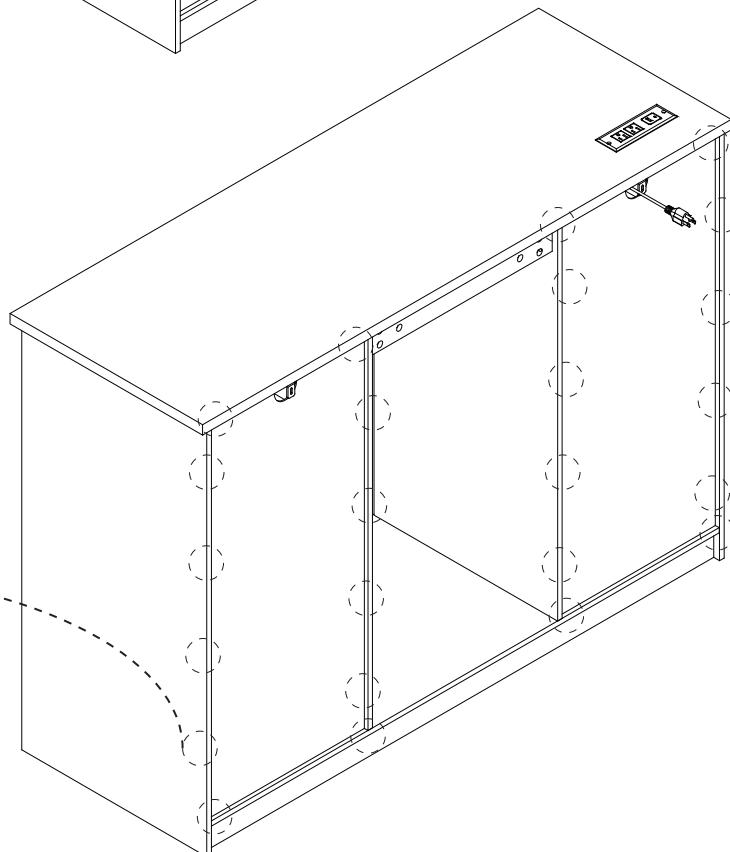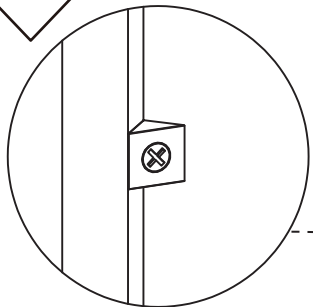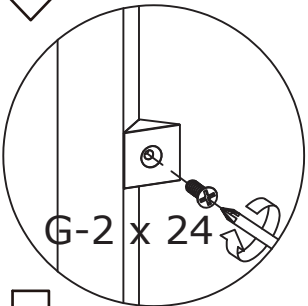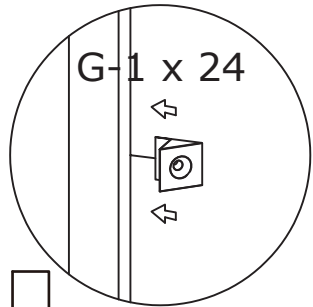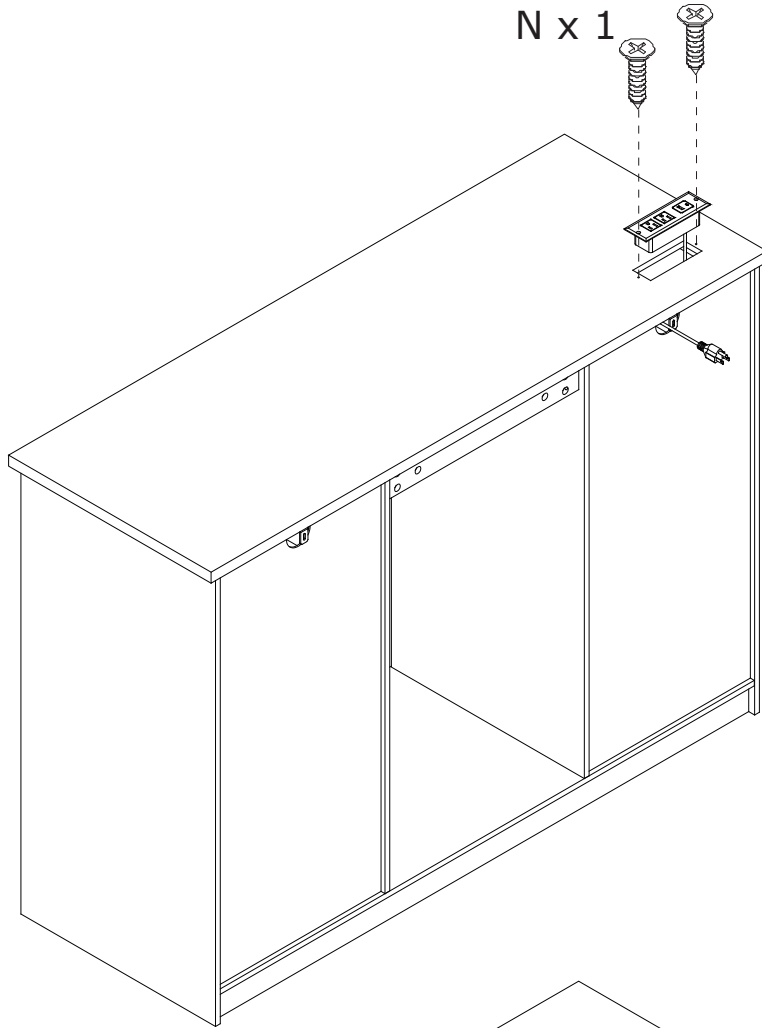


19

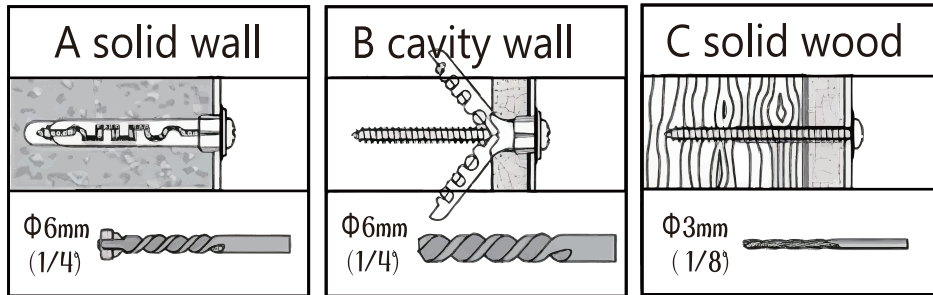
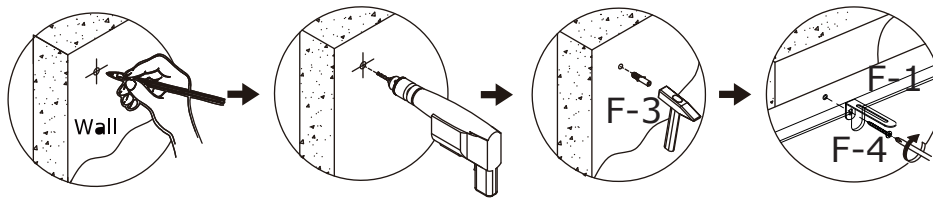


! Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws, and Lock the F - 4 screw tightly.

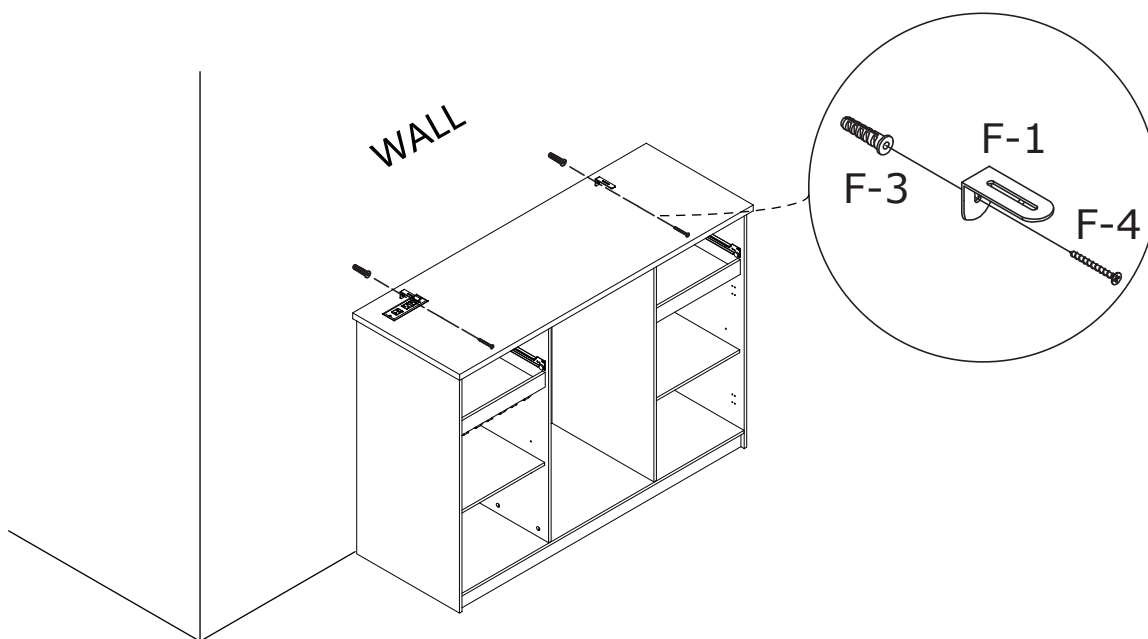


20

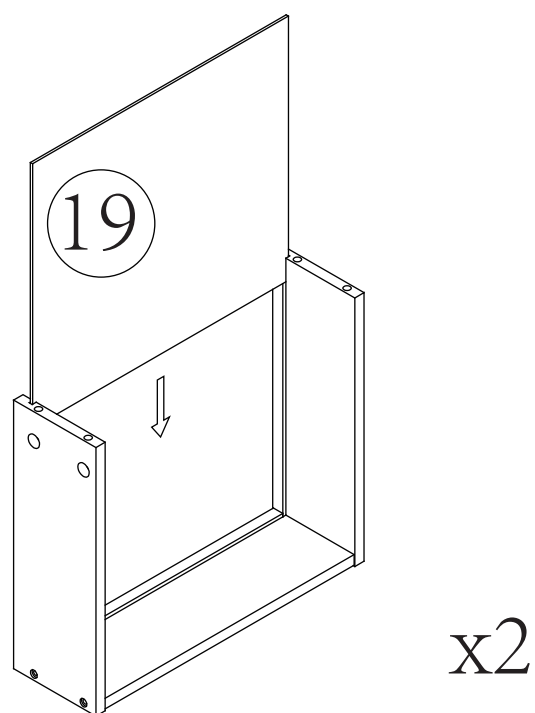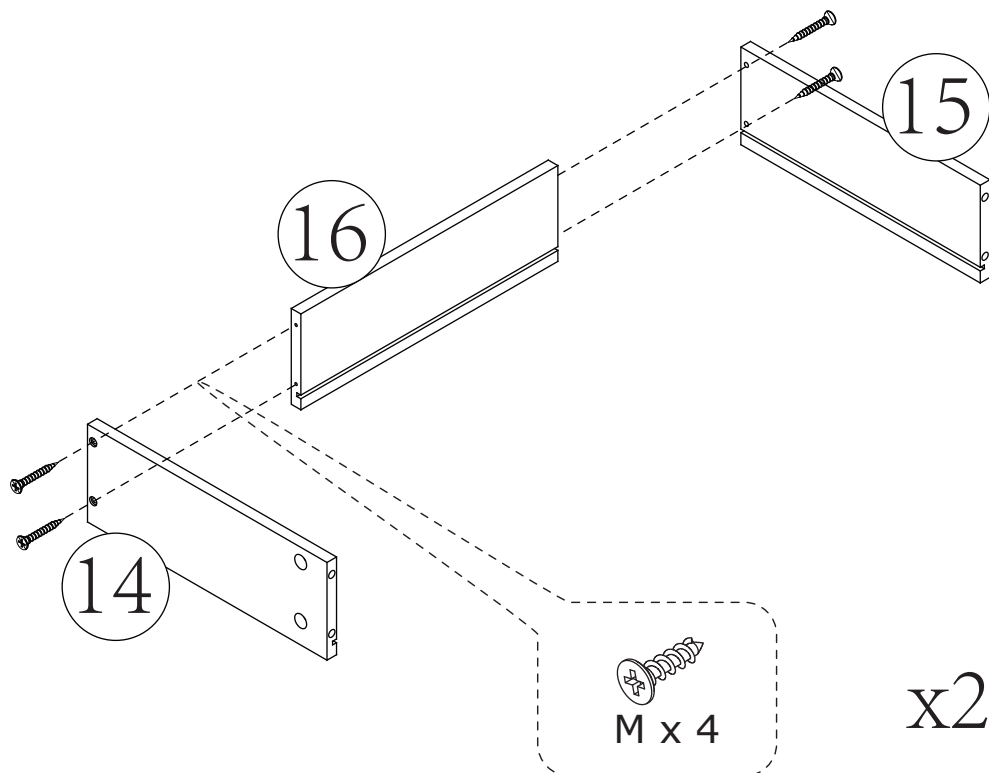

21

A x 8






Ø 7 x 40 mm

B x 8




Ø 15 x 40 mm

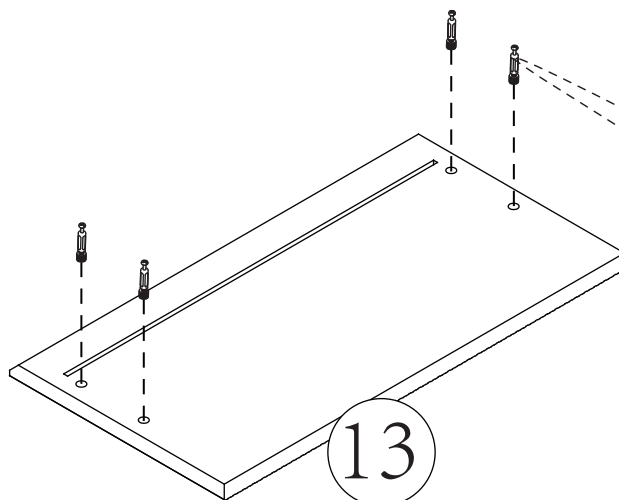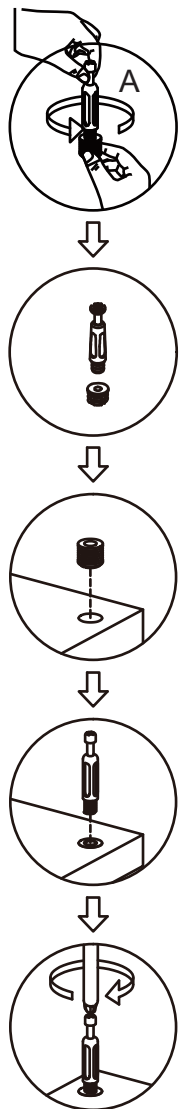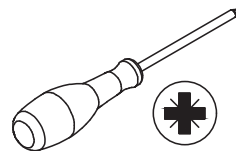

x2



A x 4




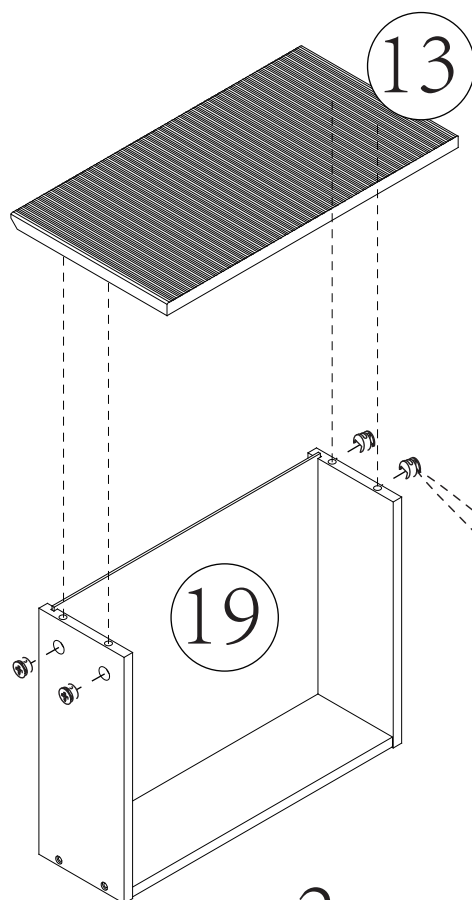



x2




B x 4






22

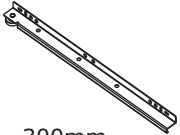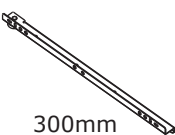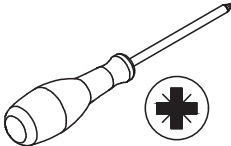E x 20  Ø 3.5 x 12 mm	DL(300) x 2  300mm	DR(300) x 2  300mm	H x 4 	 
--	---	---	---	---

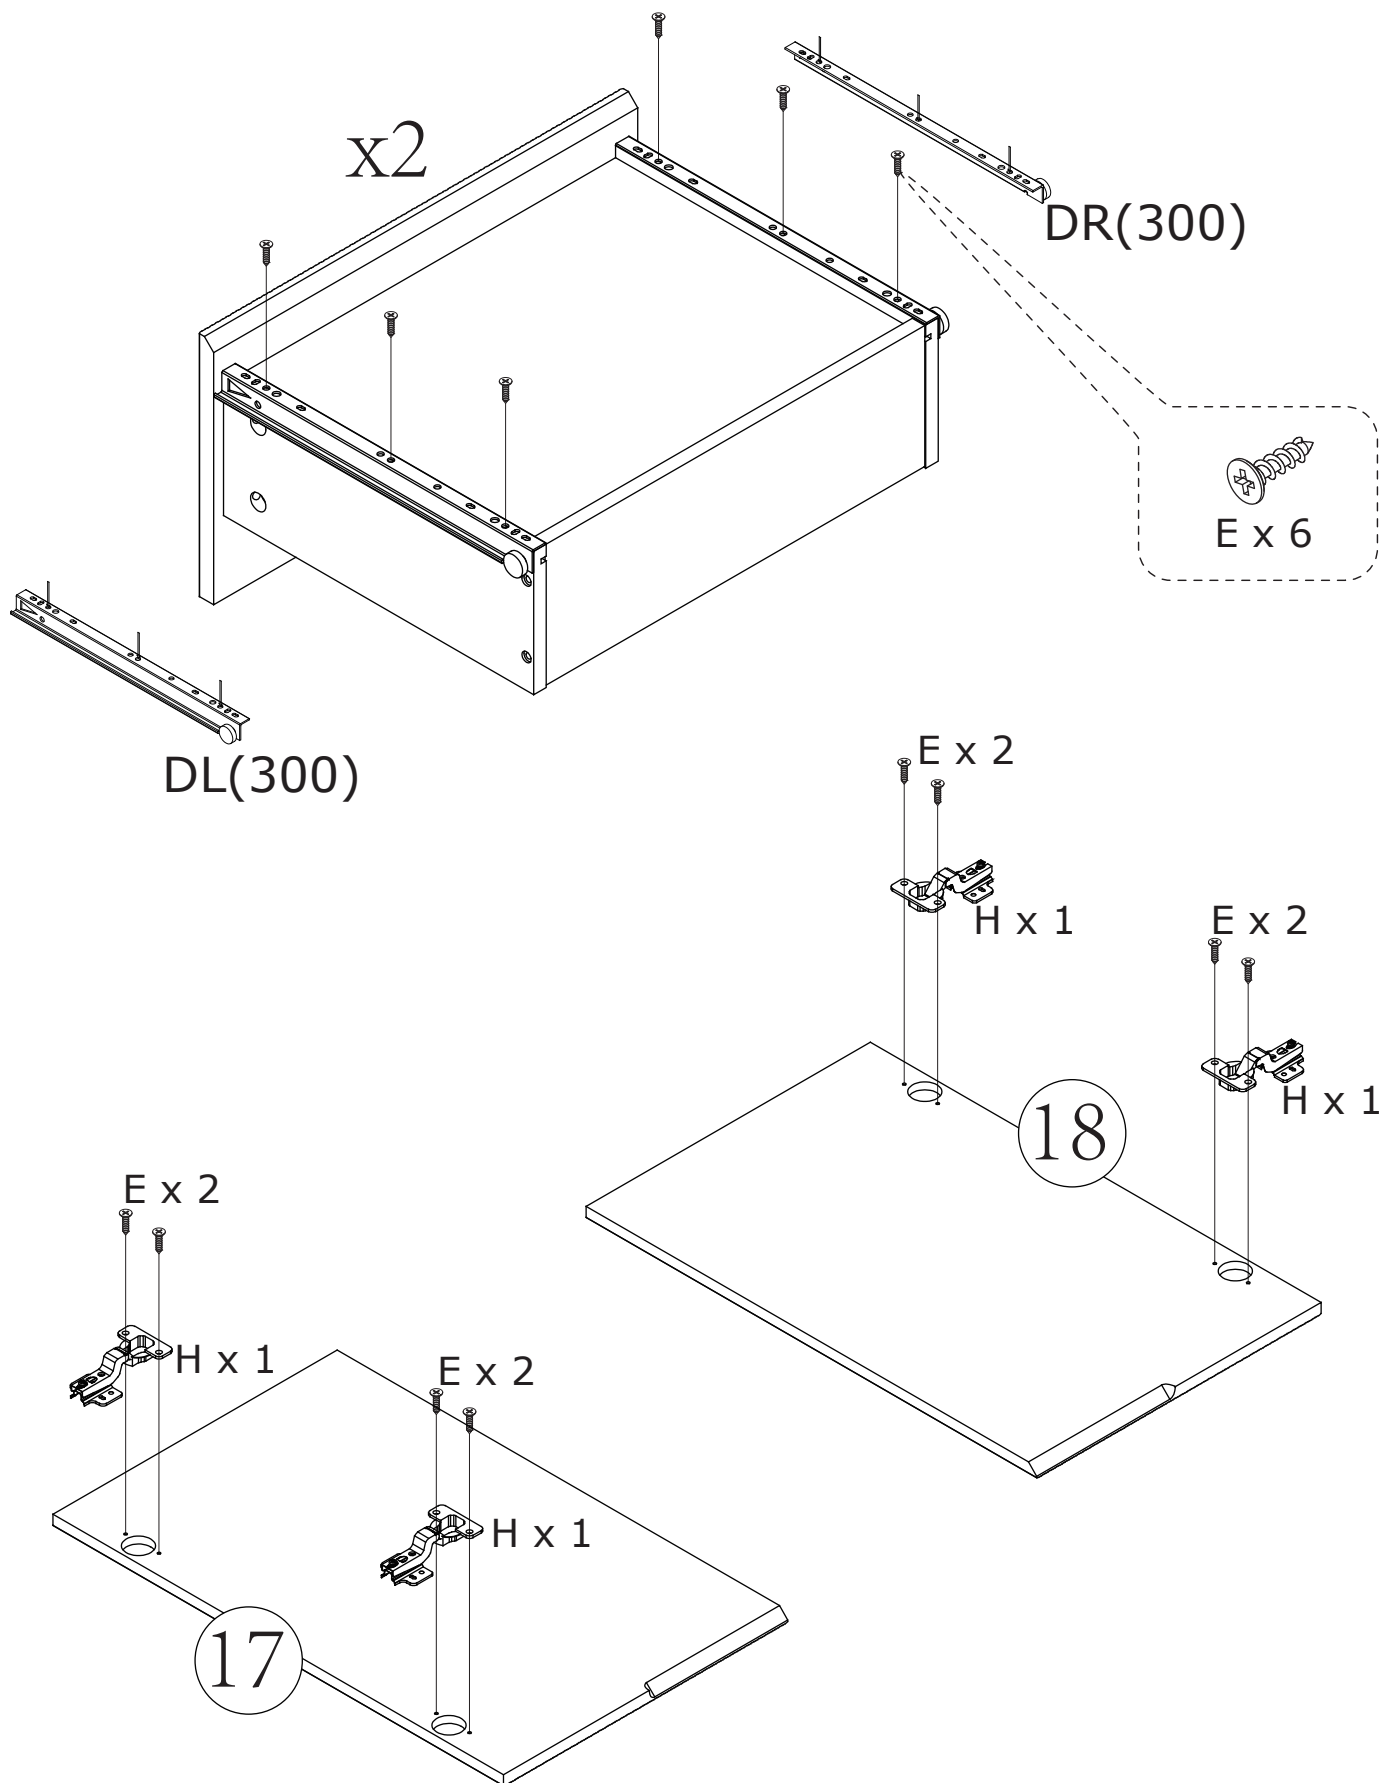

23

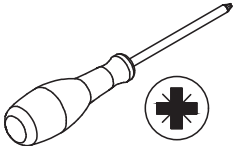
E x 8  M3.5 x 12mm	L x 30 	 
---	---	---

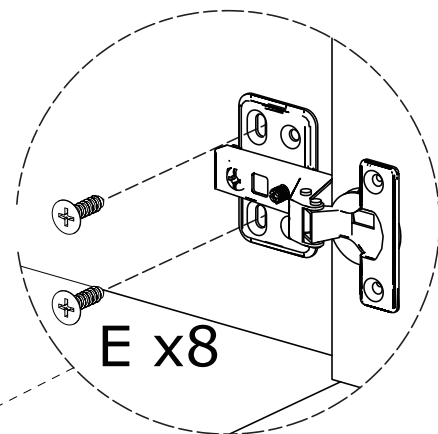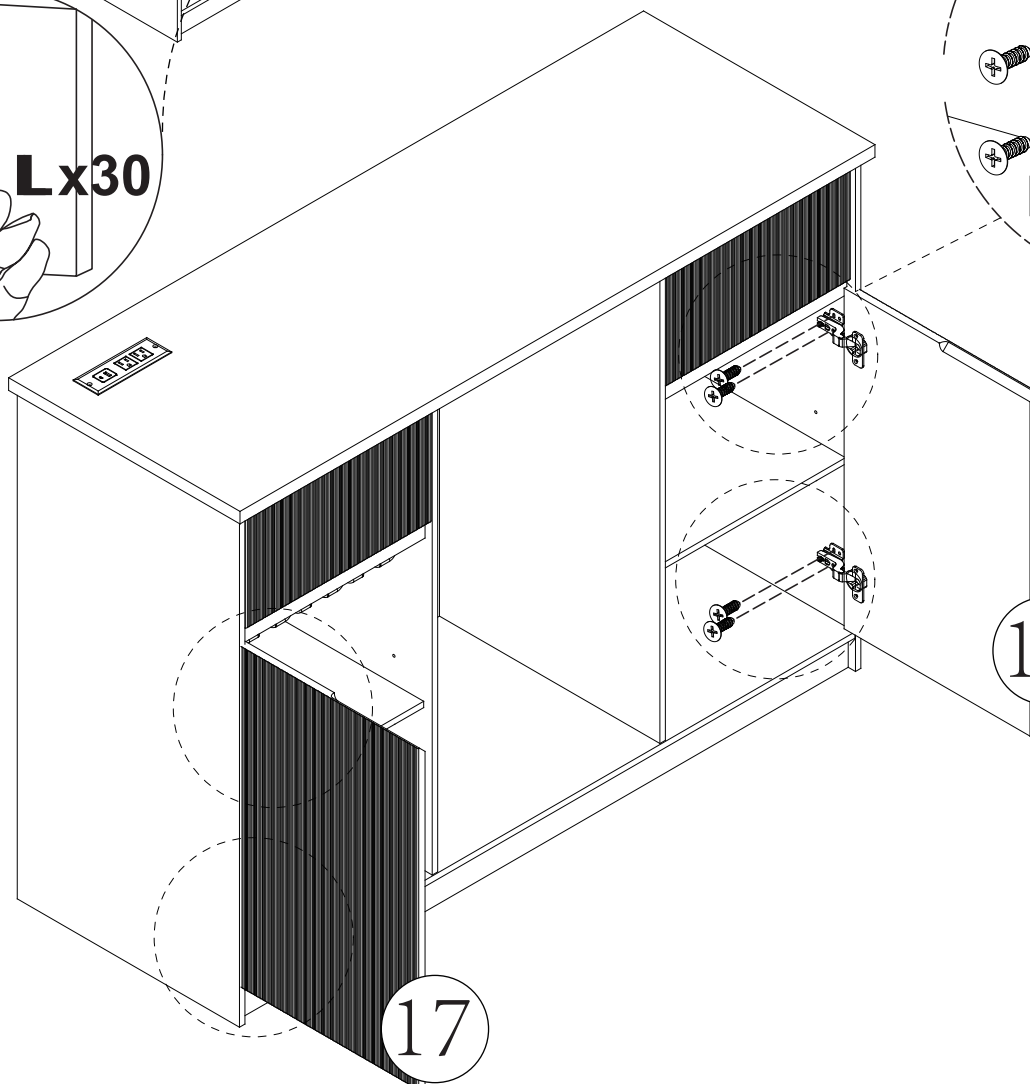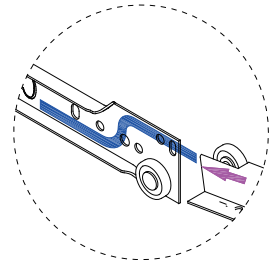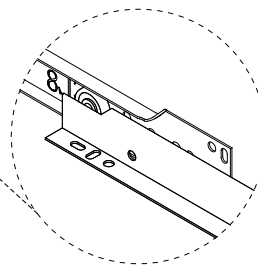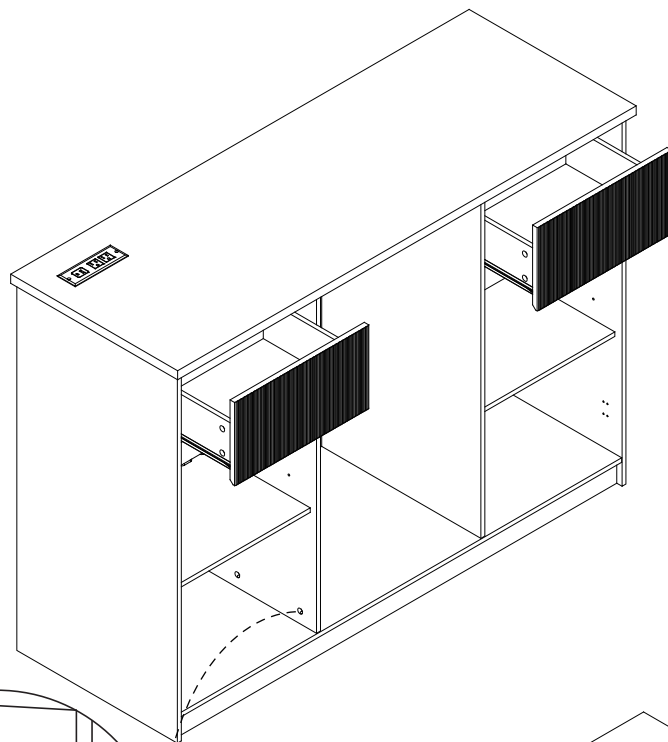

18







17

24

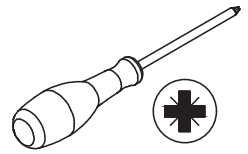


By adjusting the screws

you can manually adjust the door (forward/backward, up/down or left/right) to align the cabinet.

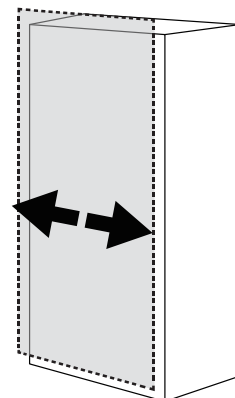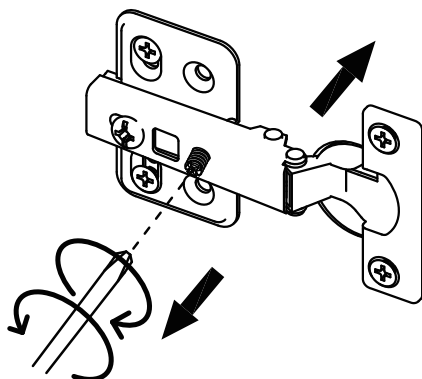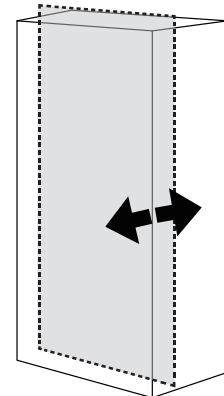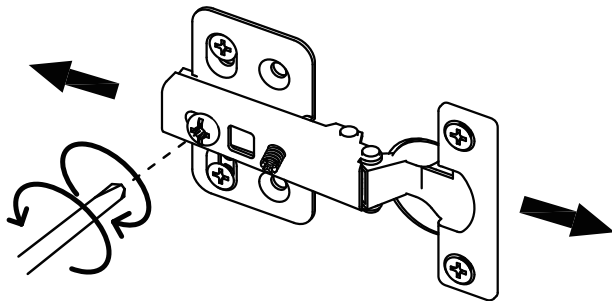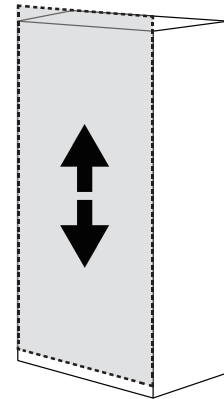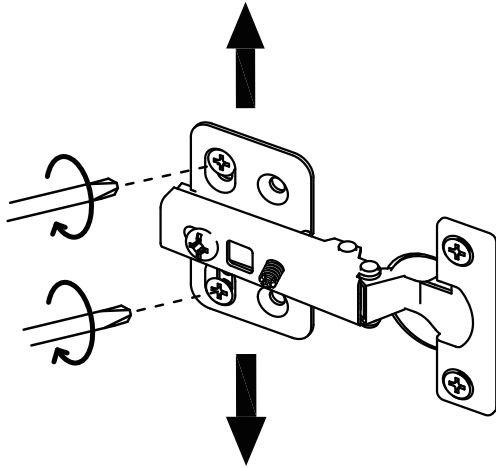

25


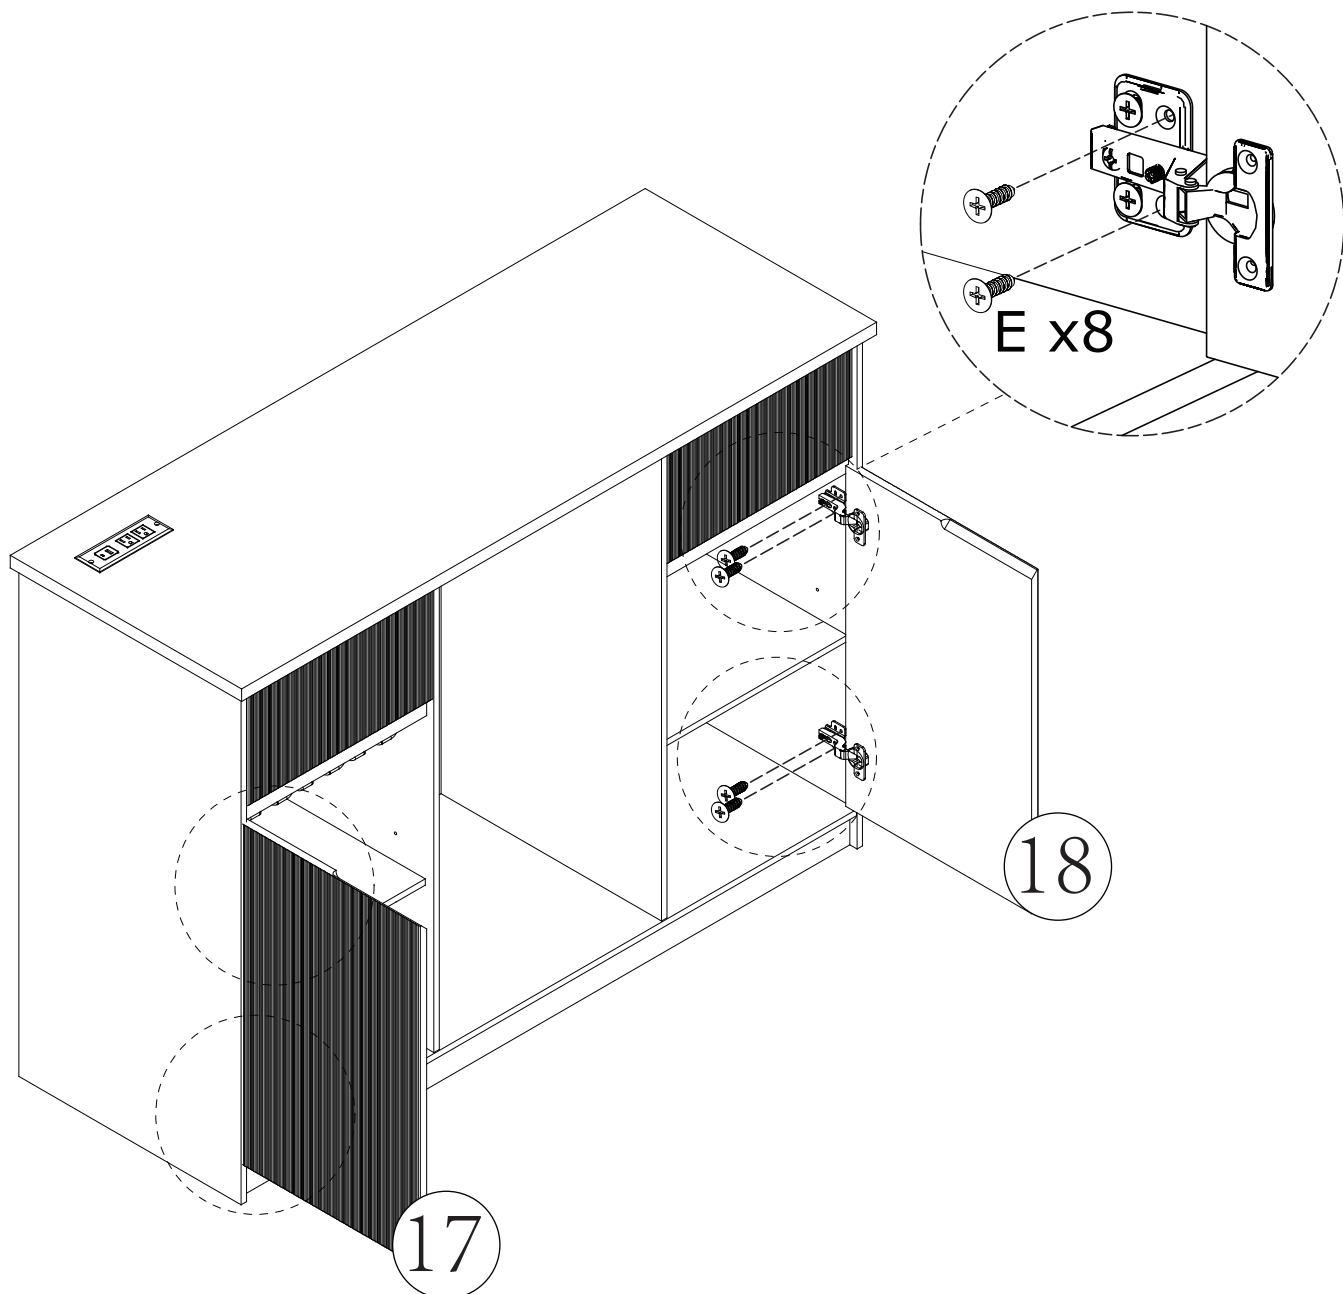


26

Q x 2



40 x 40*14 mm

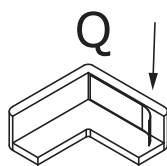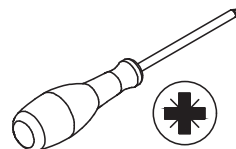

Peel off the protective film first and stick it well.

