


ORIGINAL INSTRUCTION MANUAL

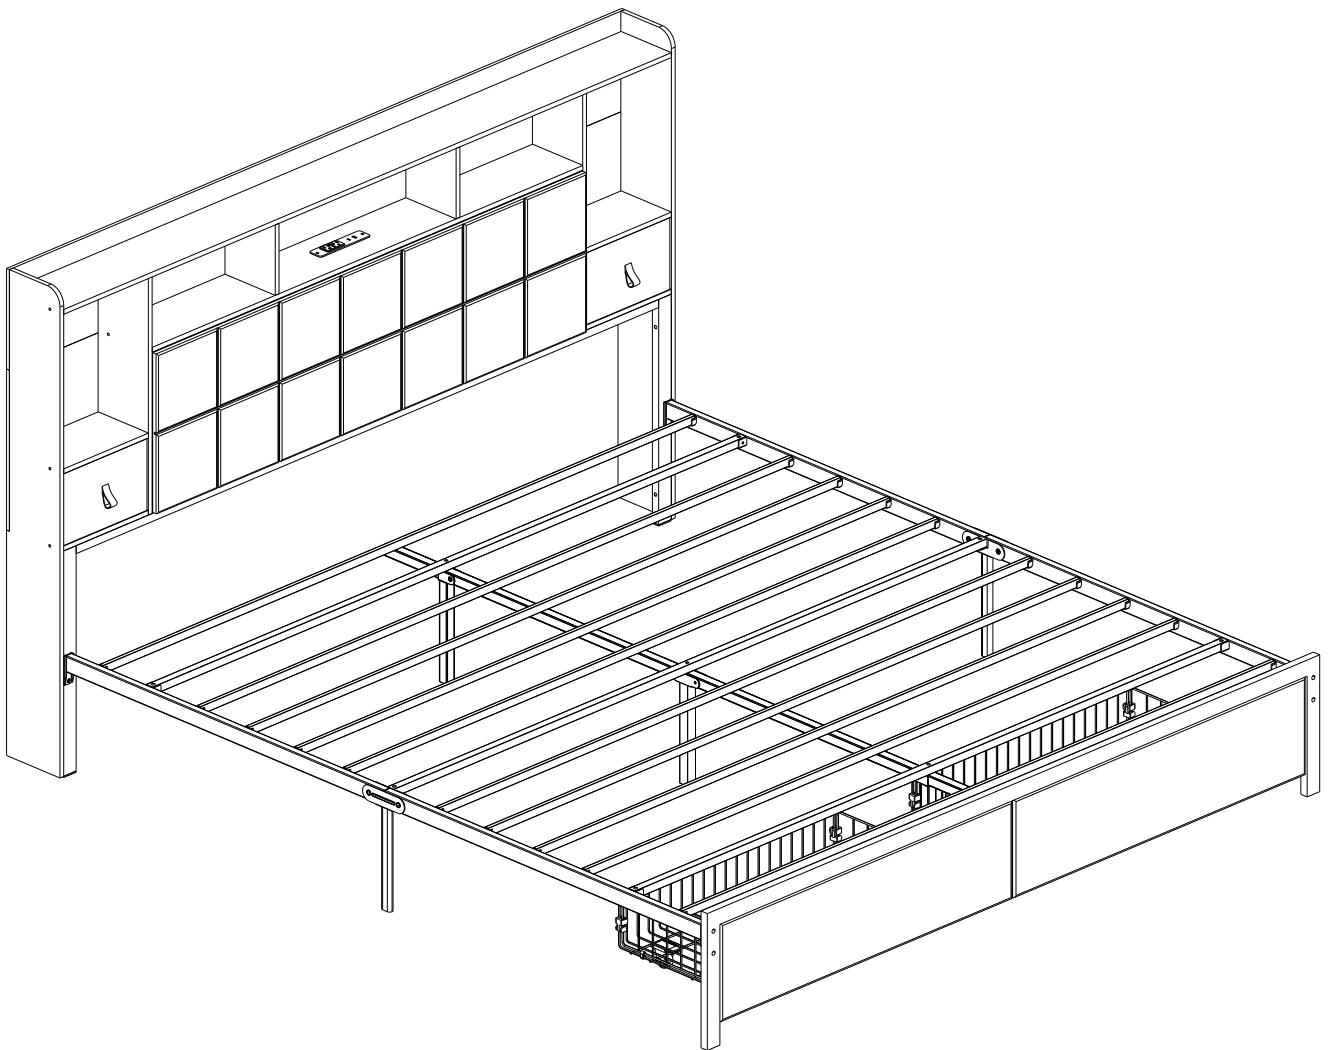


Important Note

HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.


Assembly Instruction

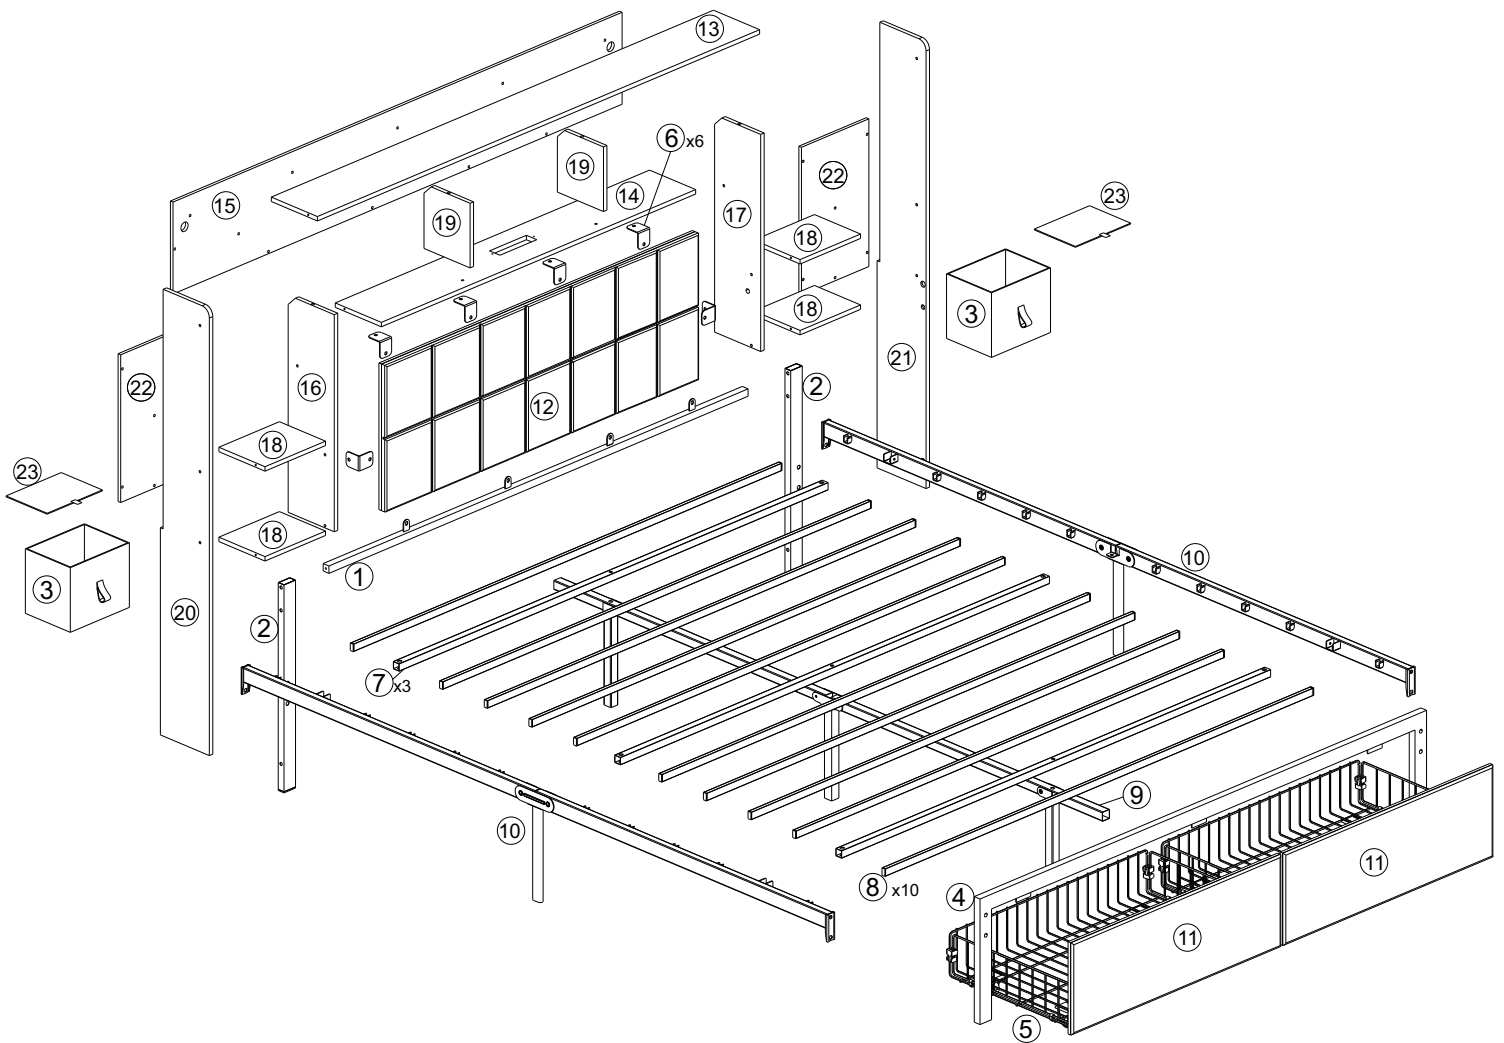


Important Note

HARDWARE NOTE :


1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

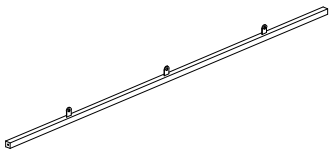


① × 1pc

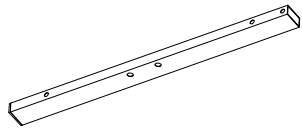


② × 2pcs

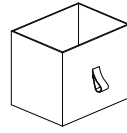


③ × 2pcs

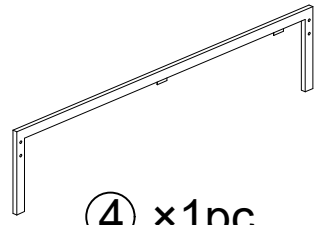


④ × 1pc

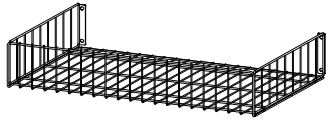


⑤ × 2pcs




⑥ × 6pcs

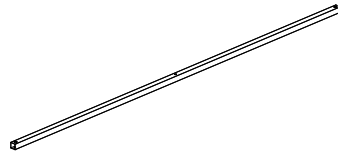


⑦ × 3pcs

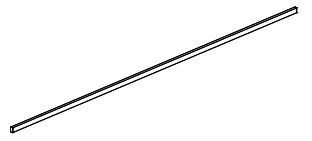


⑧ × 10pcs

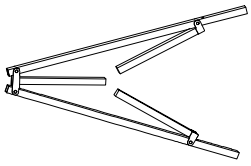


⑨ × 1pc

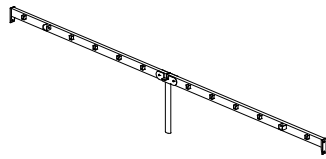


⑩ × 2pcs

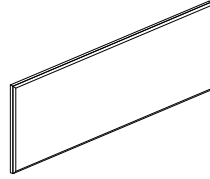


⑪ × 2pcs

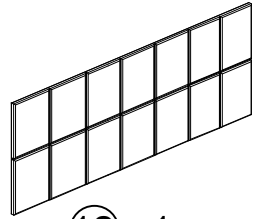


⑫ × 1pc

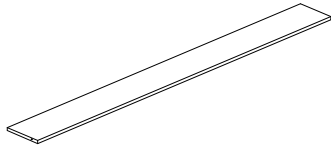


⑬ × 1pc

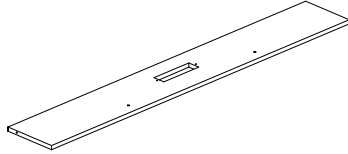


⑭ × 1pc

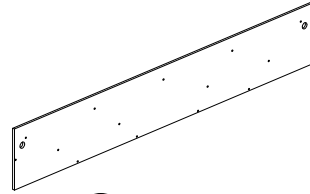


⑮ × 1pc

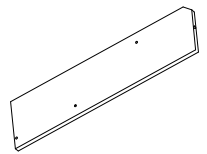


⑯ × 1pc

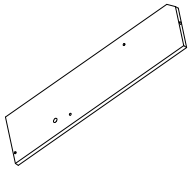


⑰ × 1pc




⑱ × 4pcs




⑲ × 2pcs

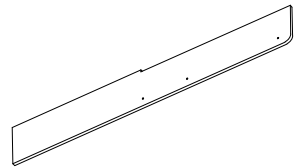


⑳ × 1pc

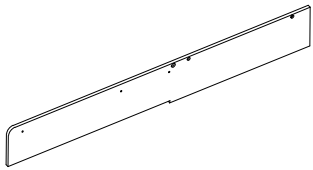

㉑ × 1pc












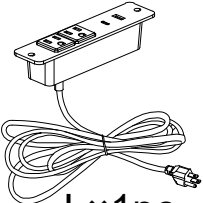
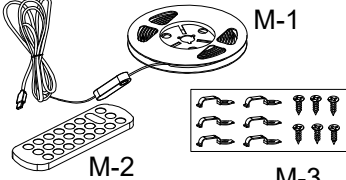






㉒ × 2pcs



㉓ × 2pcs

Hardware


 <p>M8×40mm A×8pcs+1pc</p>	 <p>M6×60mm B×5pcs+1pc</p>	 <p>M6×48mm C×4pcs+1pc</p>	 <p>M6×32mm D×6pcs+1pc</p>
 <p>M6×15mm E×20pcs+1pc</p>	 <p>M6×10mm F×6pcs+1pc</p>	 <p>M5×40mm G×41pcs+2pcs</p>	 <p>M6×35mm H×4pcs+1pc</p>
 <p>Ø15×10mm I×4pcs+1pc</p>	 <p>J-1 3MM 4MM J x 1pc</p>	 <p>M3.5×12mm K×2pcs+1pc</p>	 <p>L×1pc</p>
 <p>M-1 M-2 M-3 M×1pc</p>	 <p>N×1pc</p>	 <p>O×2pcs</p>	 <p>R×4pcs+1pc</p>
 <p>S×8pcs</p>			

1



M5x40mm

Gx2pcs

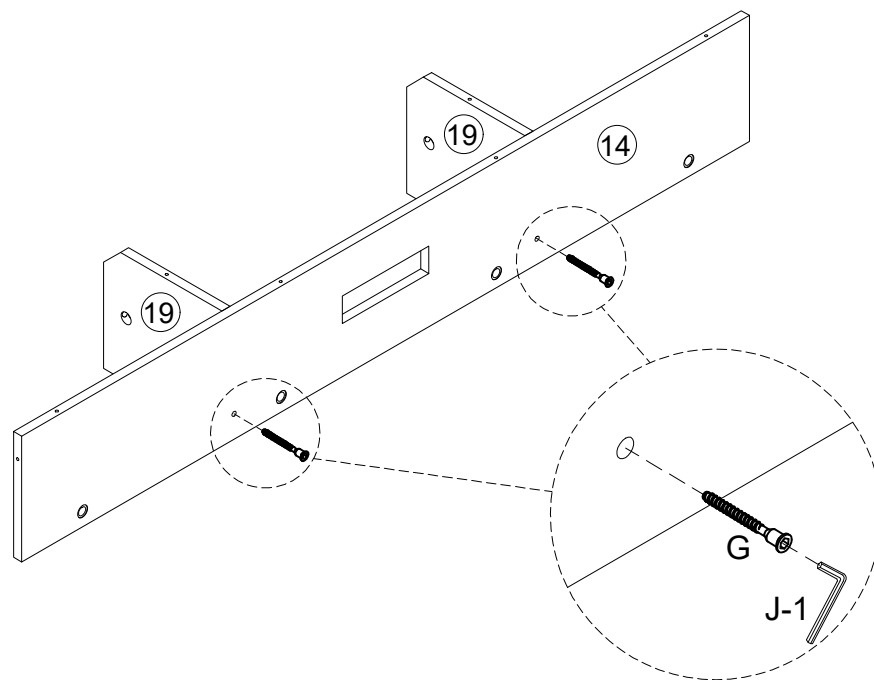


2



M5x40mm

Gx2pcs

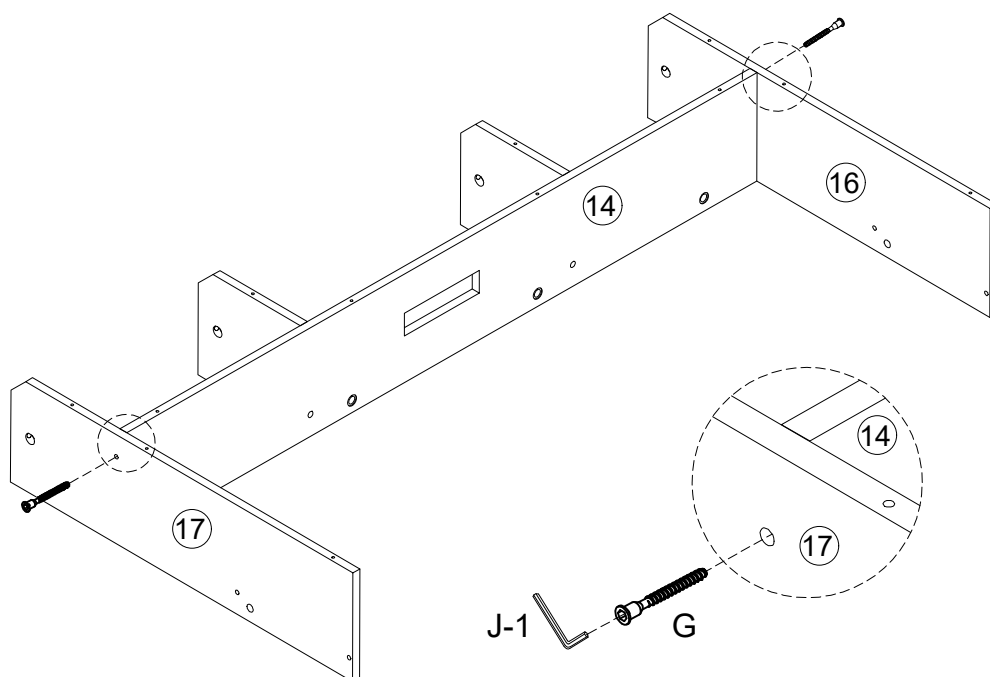


3



M5×40mm


G×4pcs

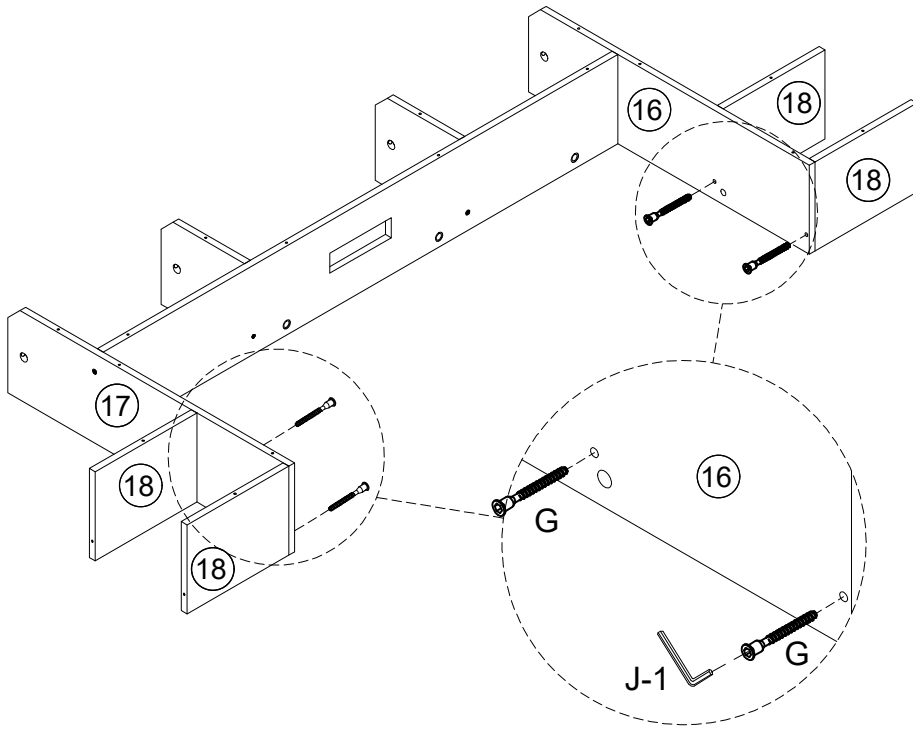

4


Step 1

Tear double-sided adhesive tape apar

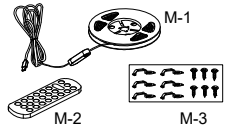


M×1pc

Step 2

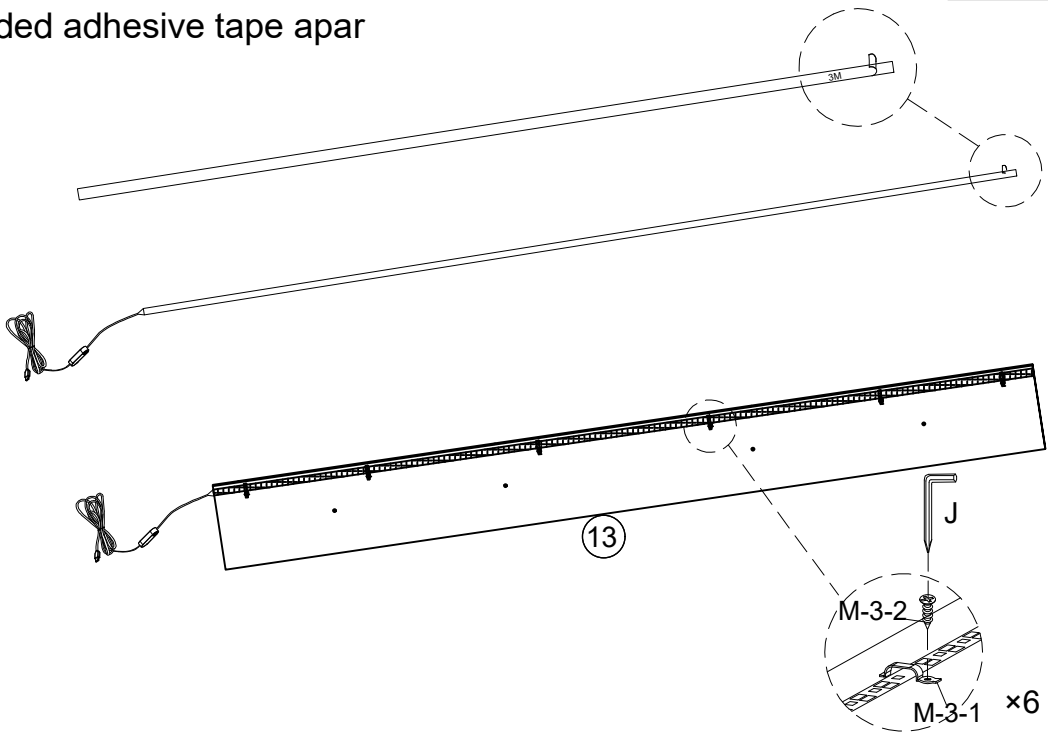


5



M6×35mm

H×4pcs

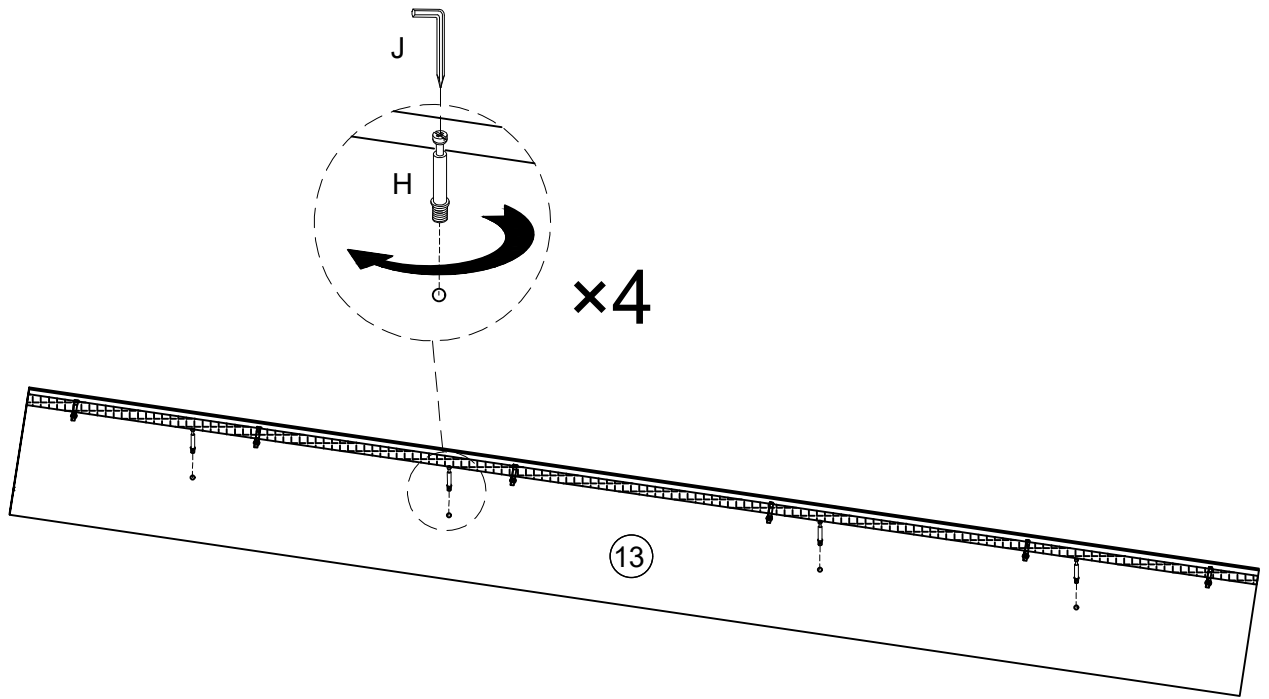


6




Ø15×10mm


I×4pcs

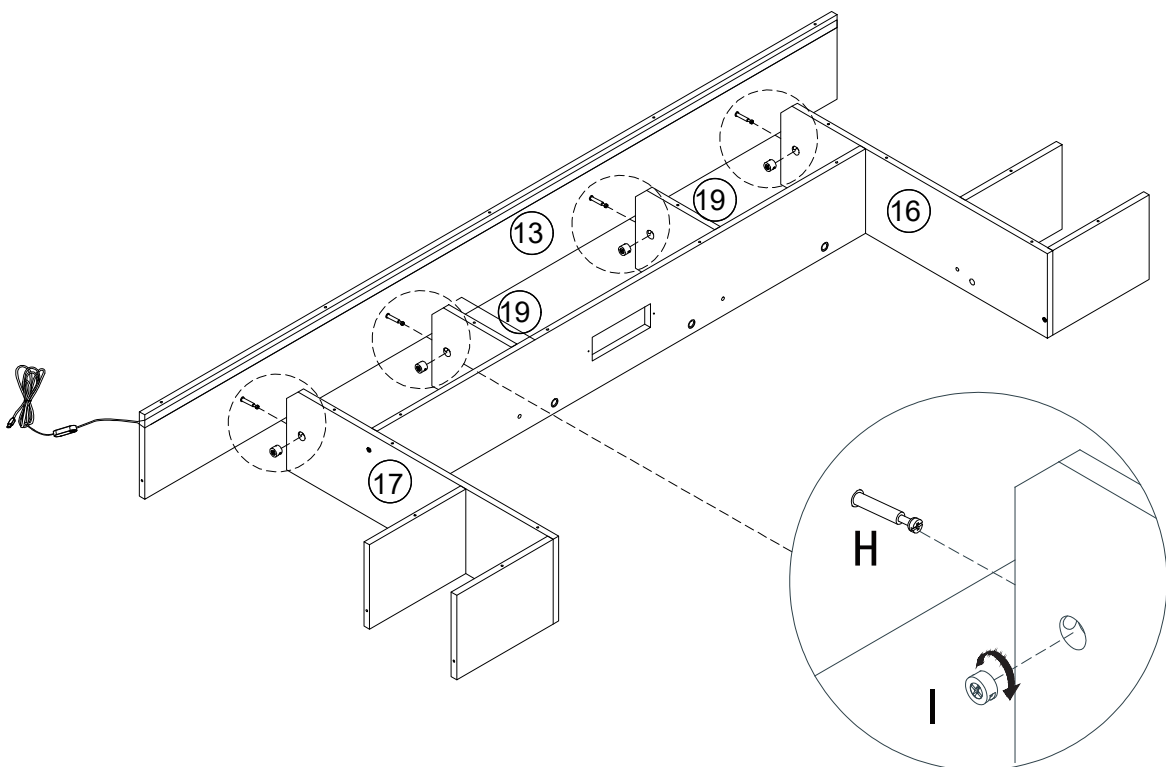


7




M6×10mm
F×6pcs

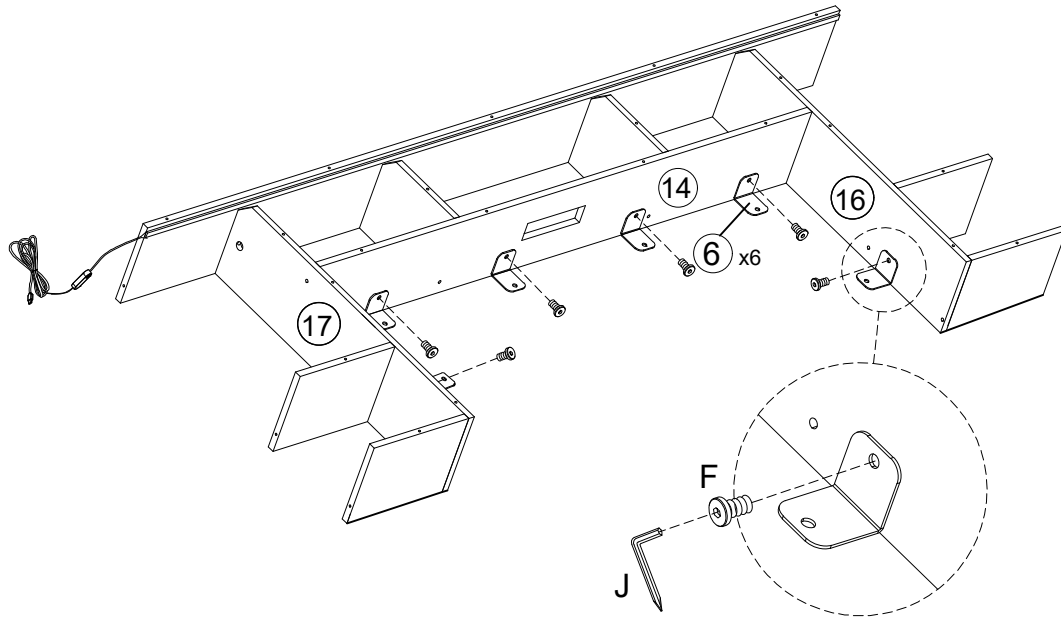


8




M6×60mm
B×2pcs

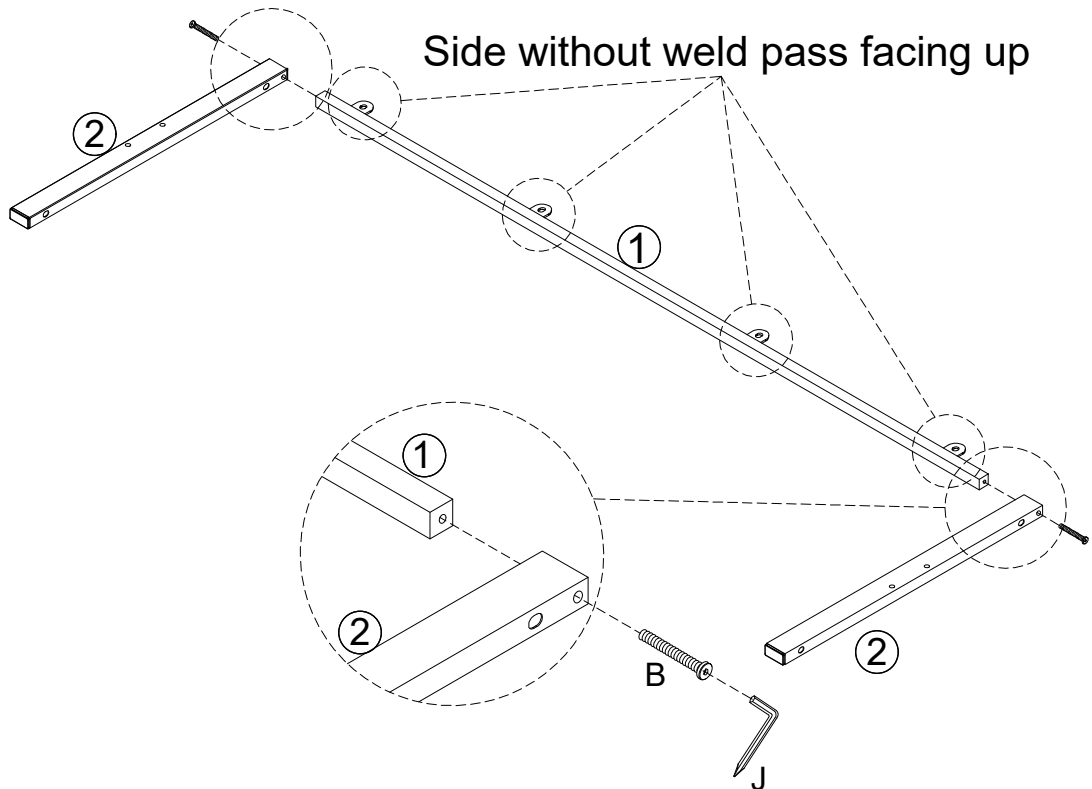

9




M6×15mm
E×10pcs

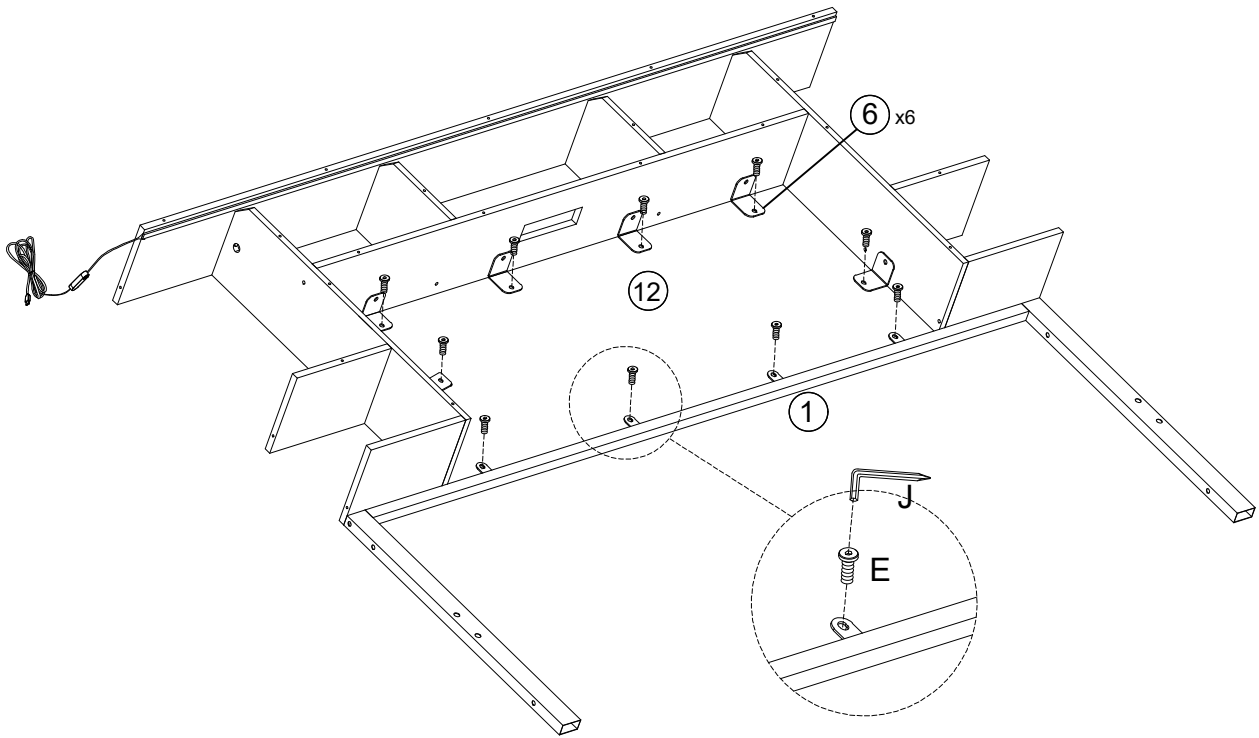


10




M5×40mm
G×13pcs

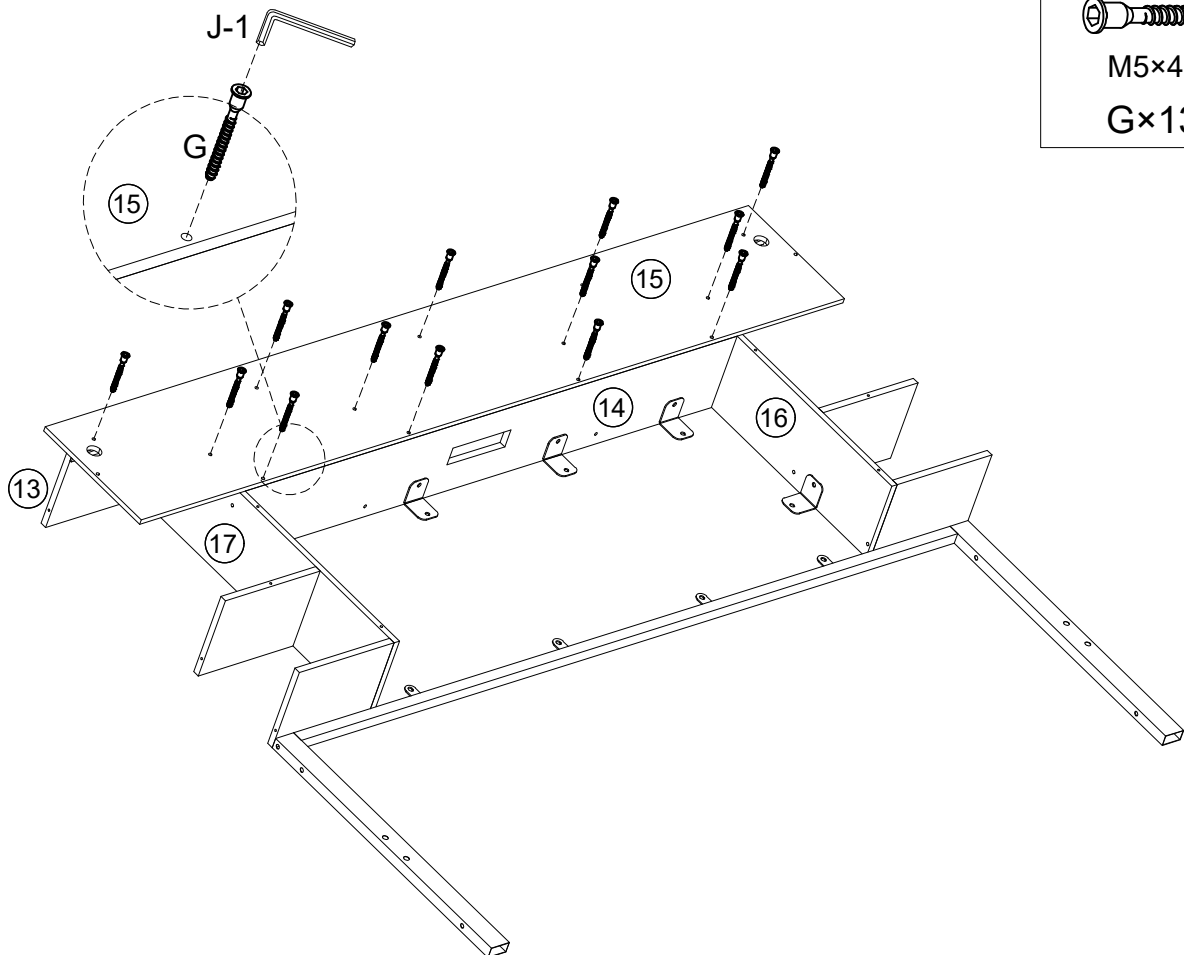


11

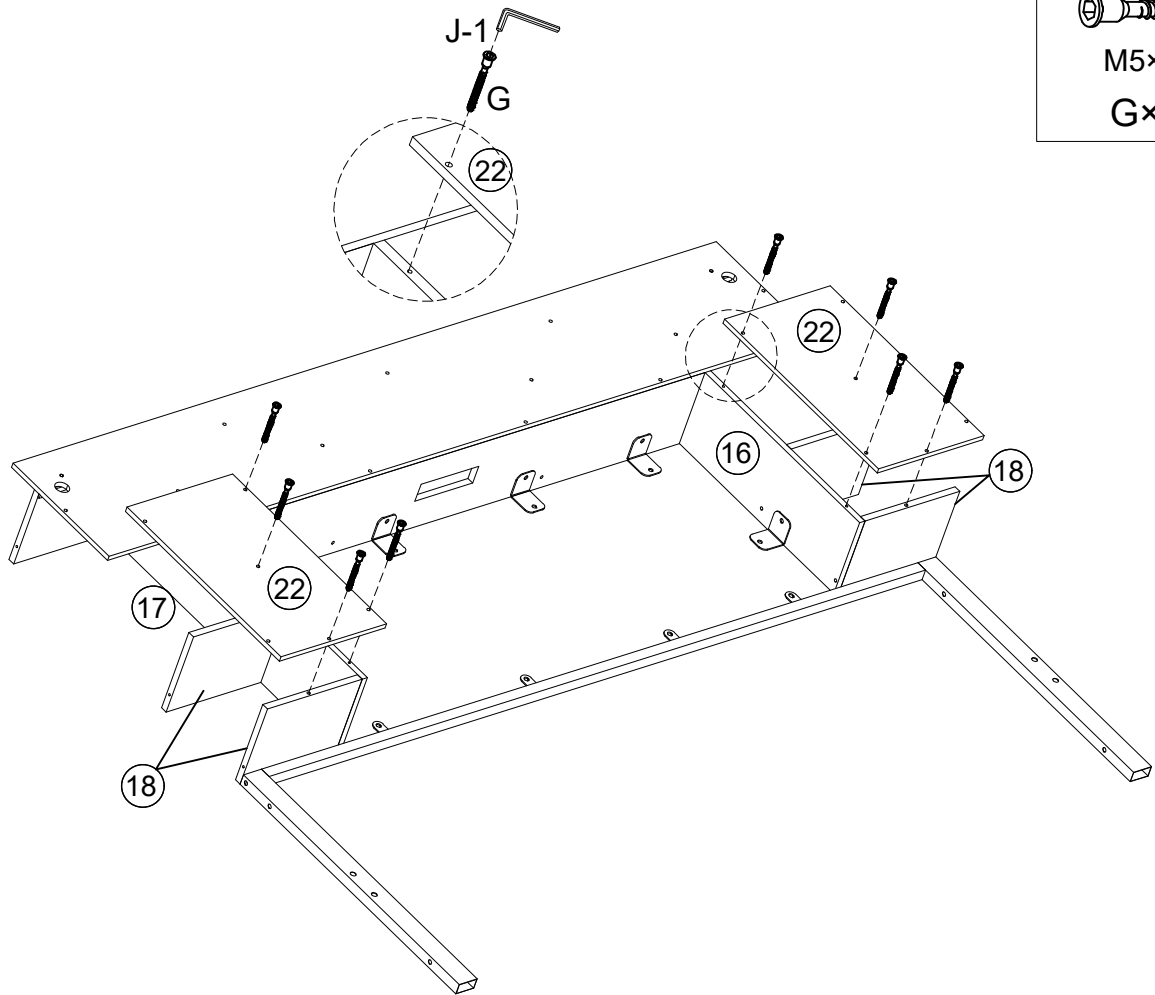

12

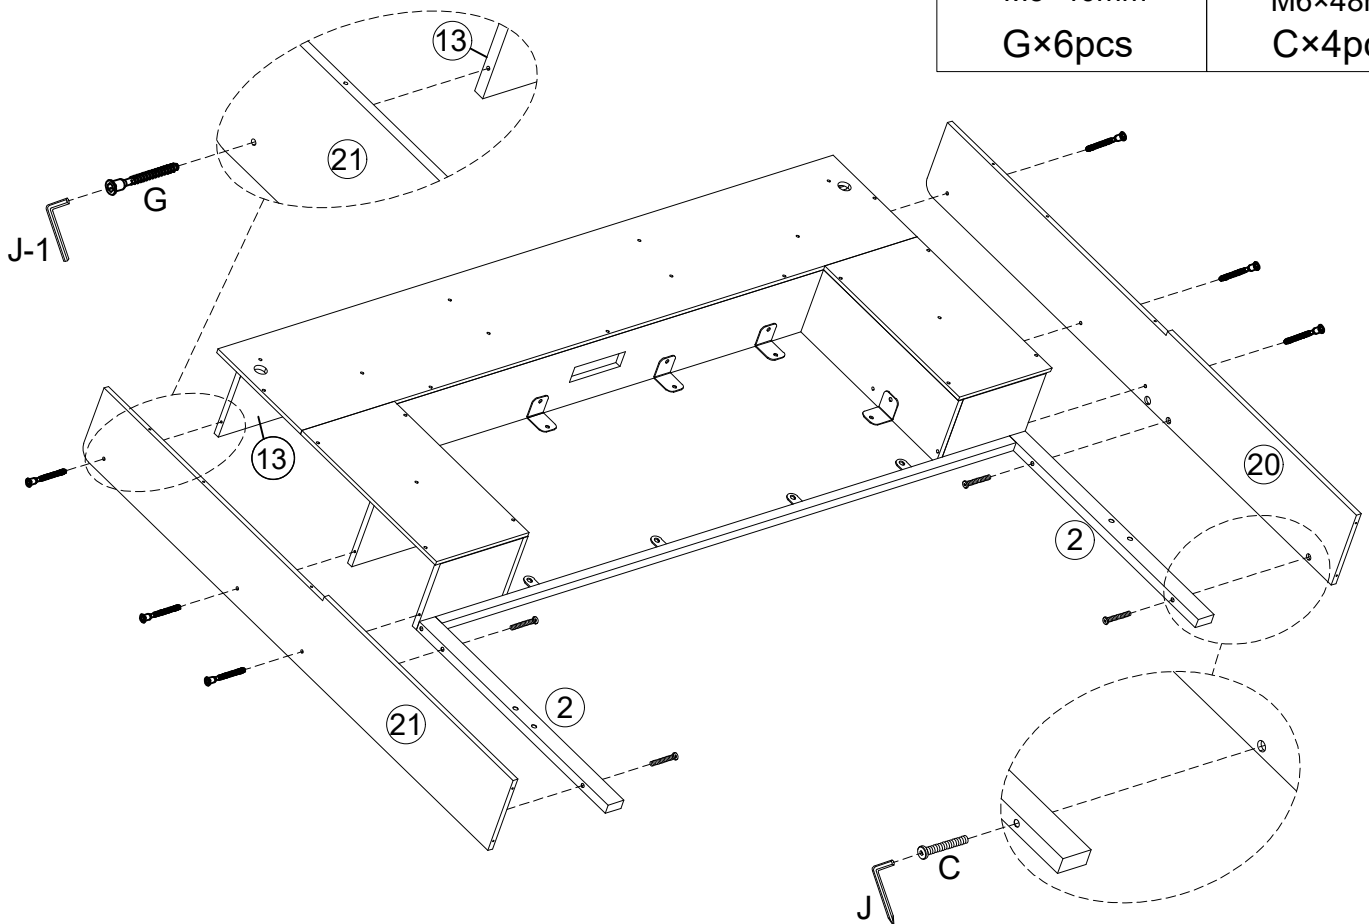


13

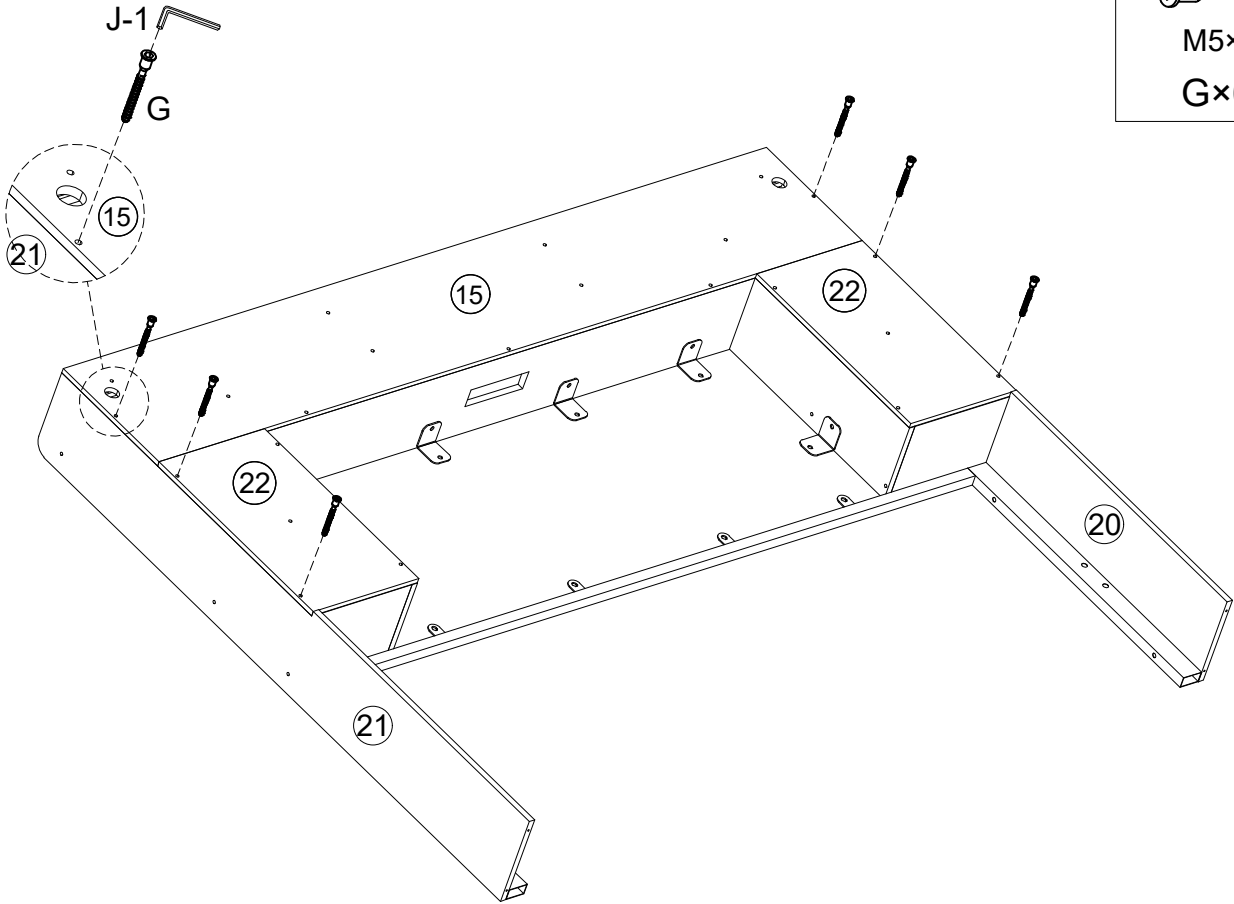


M5×40mm
G×6pcs


14

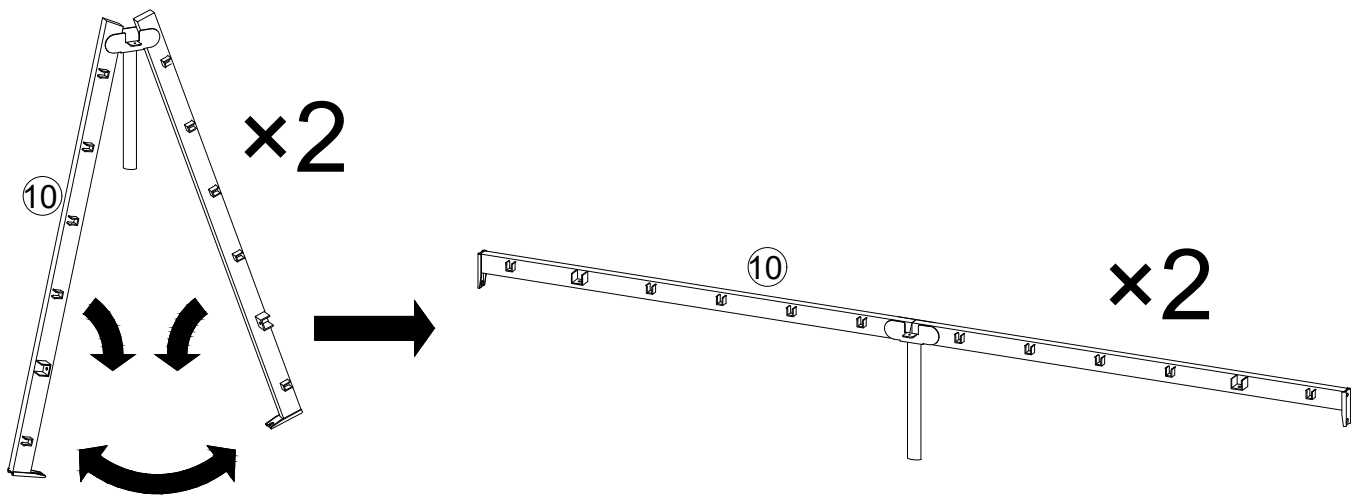


15




M8x40mm
A×4pcs

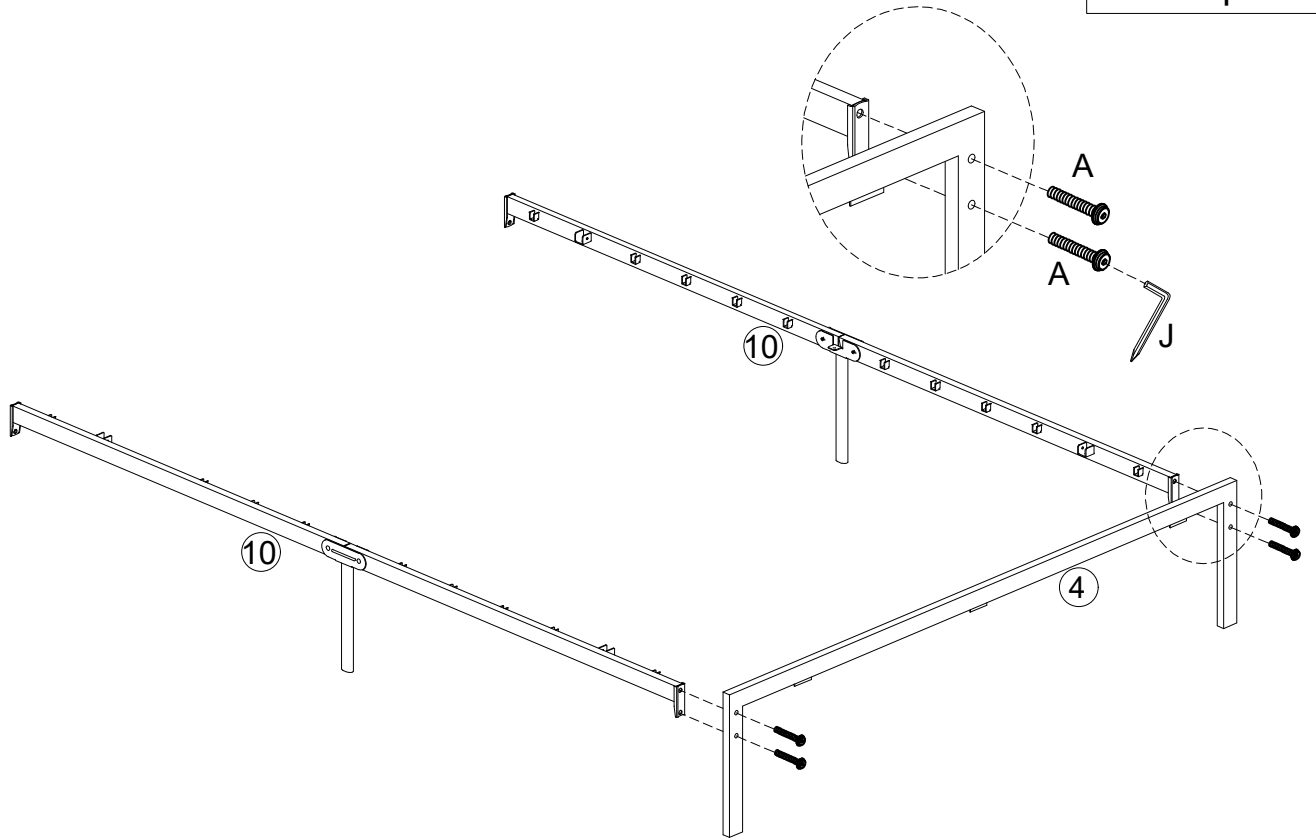

16



M8x40mm
A×4pcs

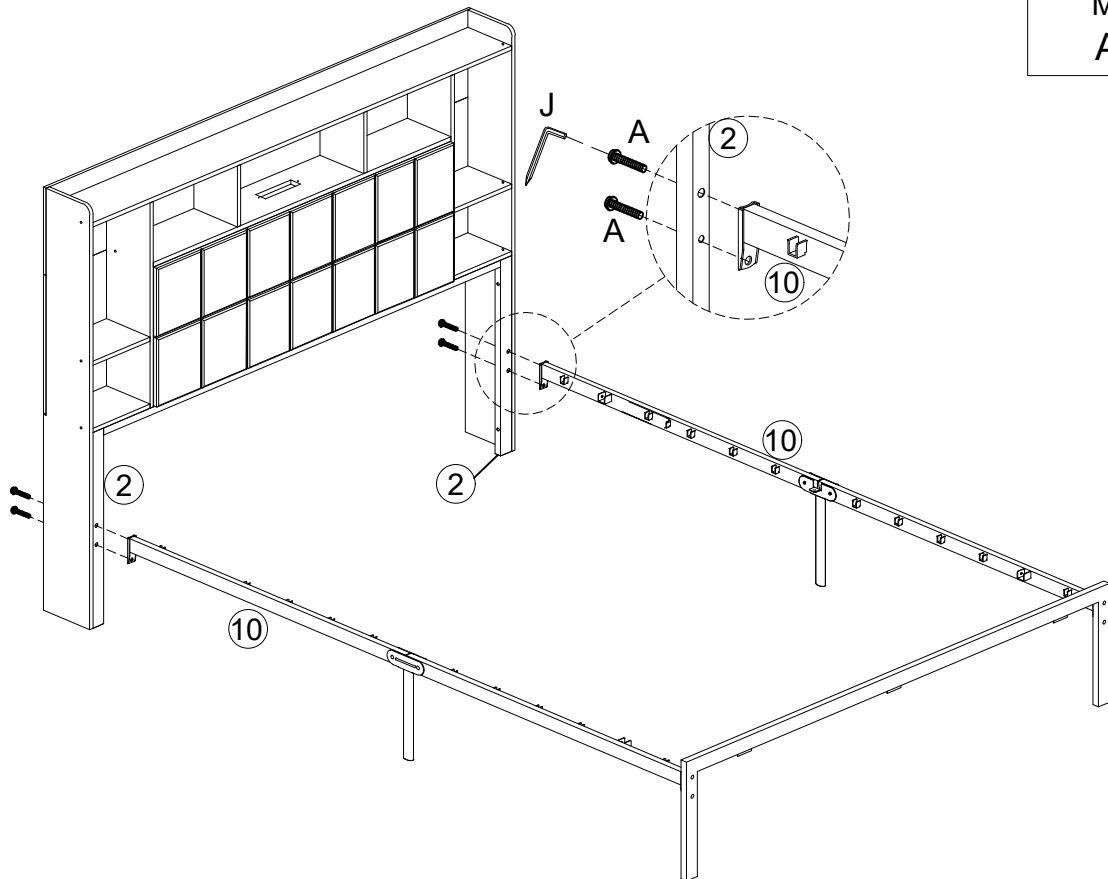

17




L×1pc




M3.5×12mm

K×2pcs

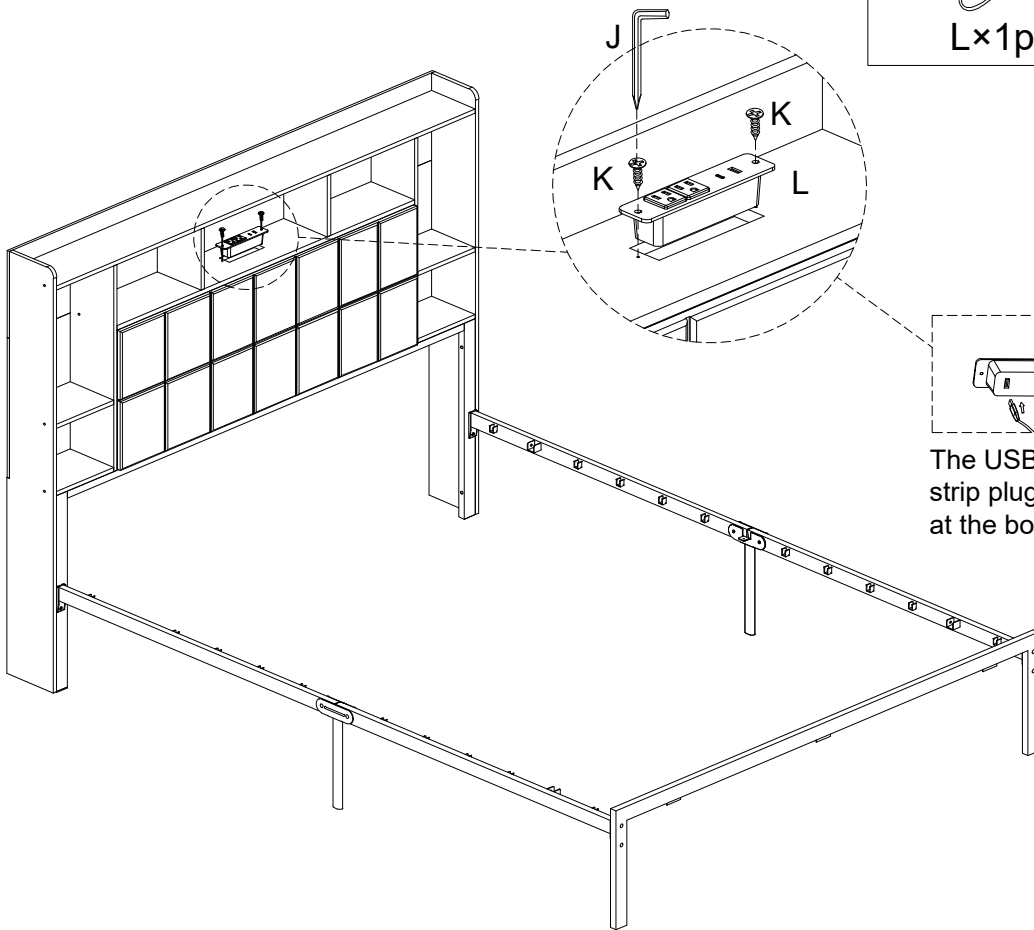


The USB port of the light strip plugs into the USB port at the bottom of the socket

18




M6×32mm


D×6pcs

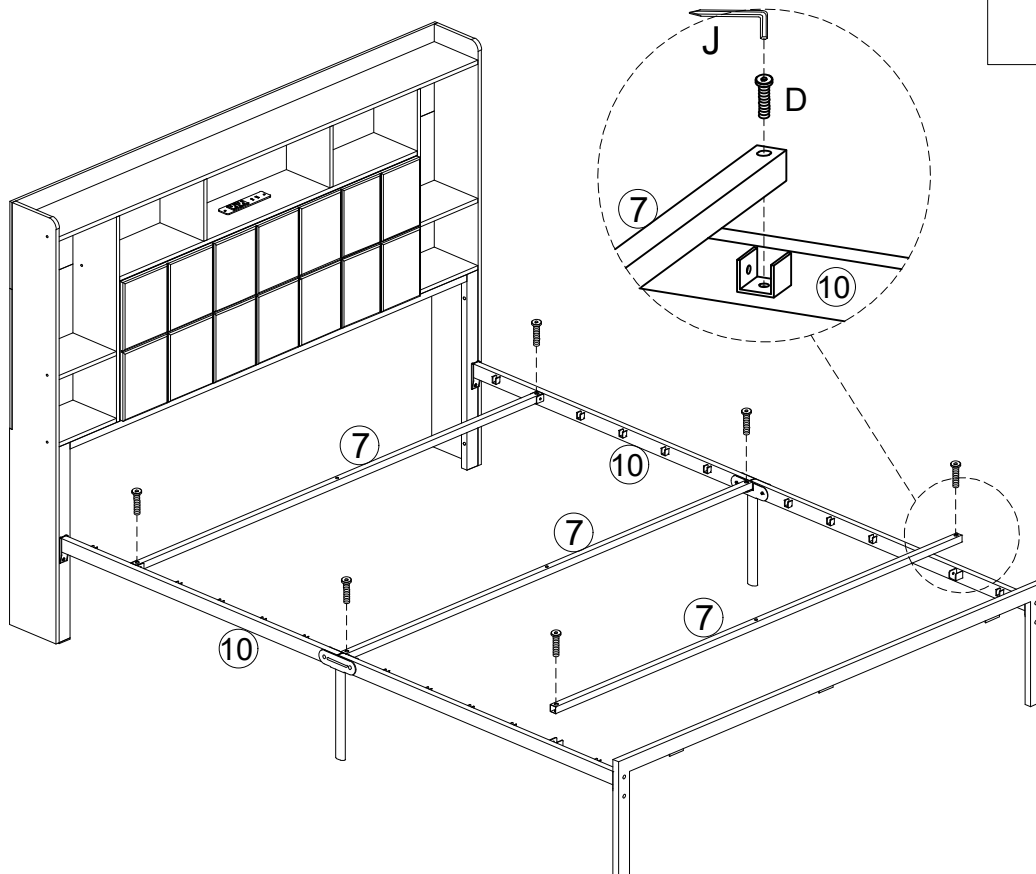


19

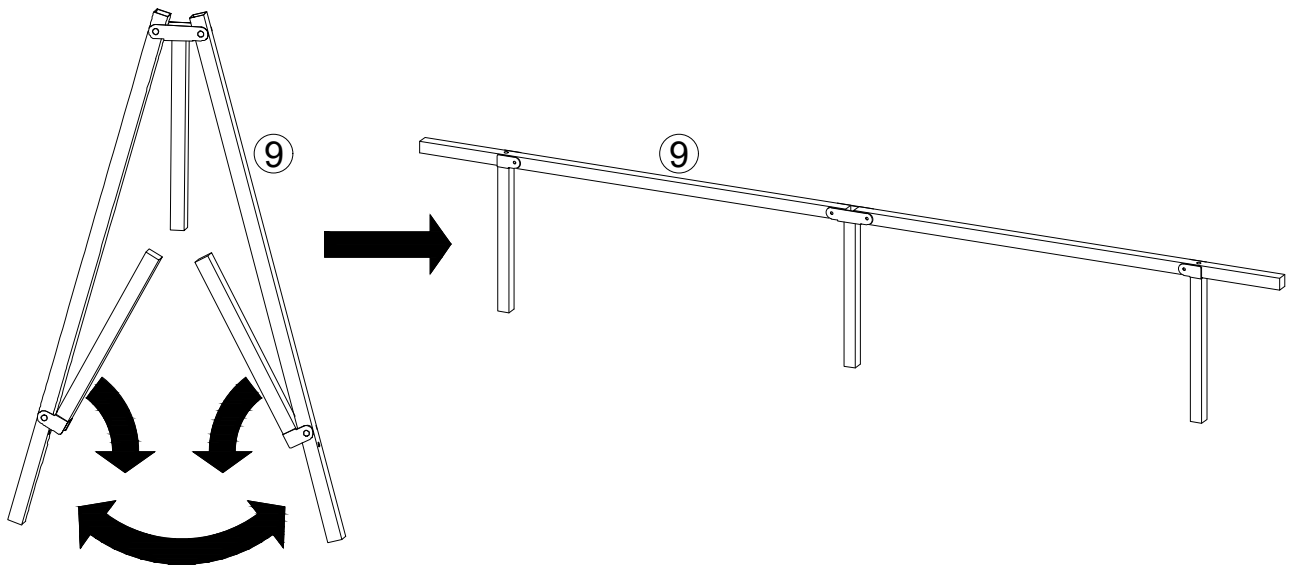

20

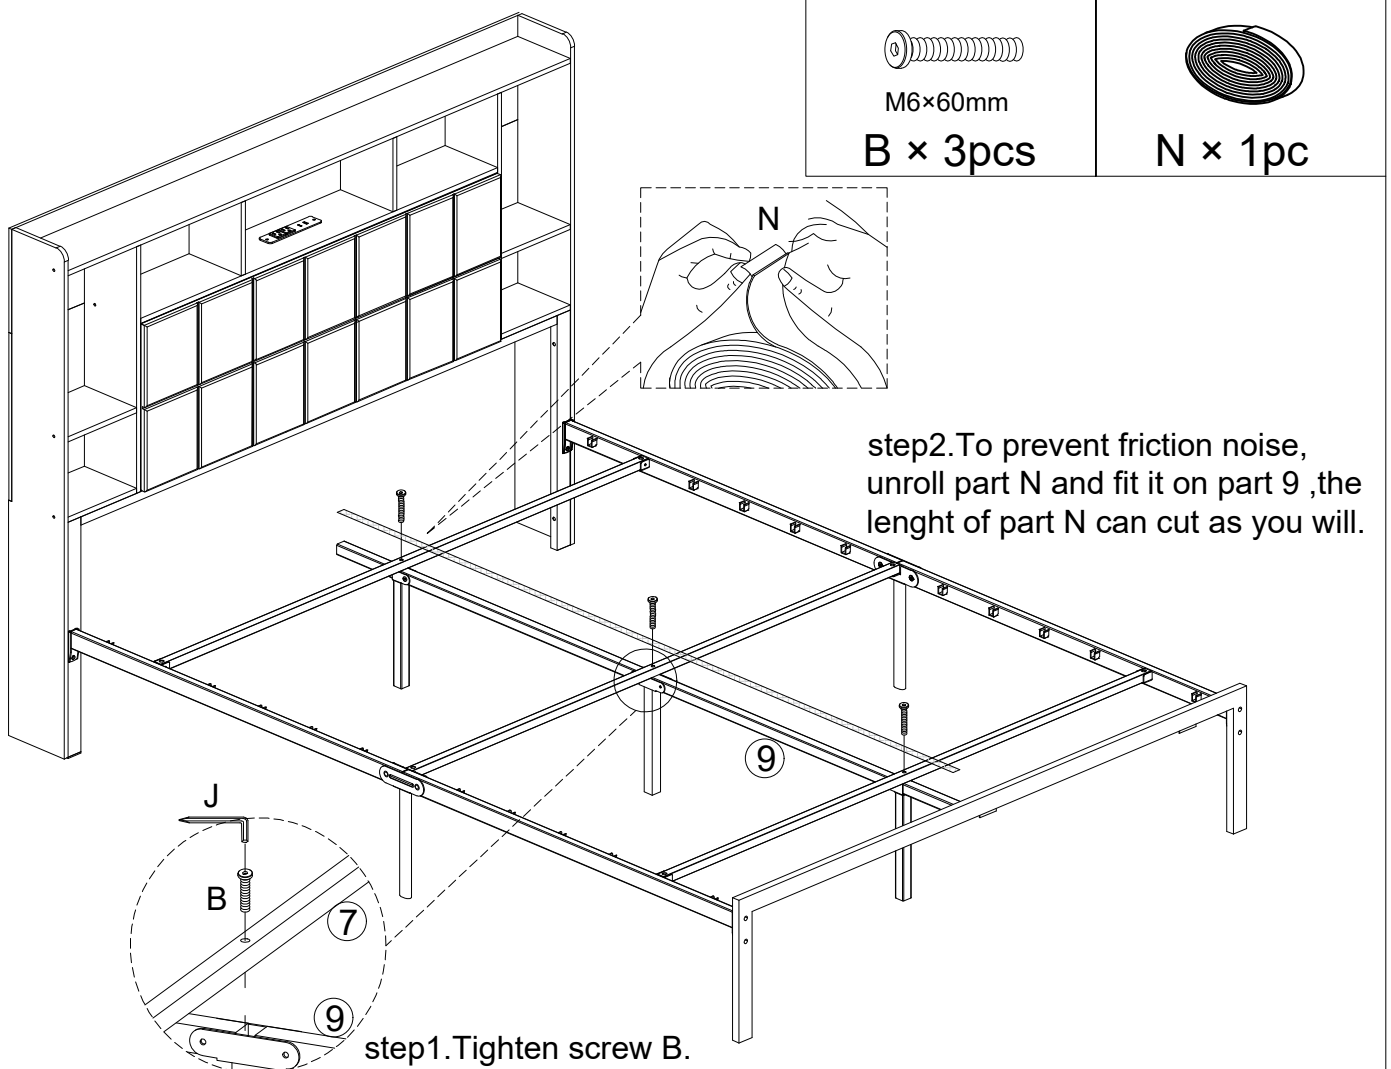


21

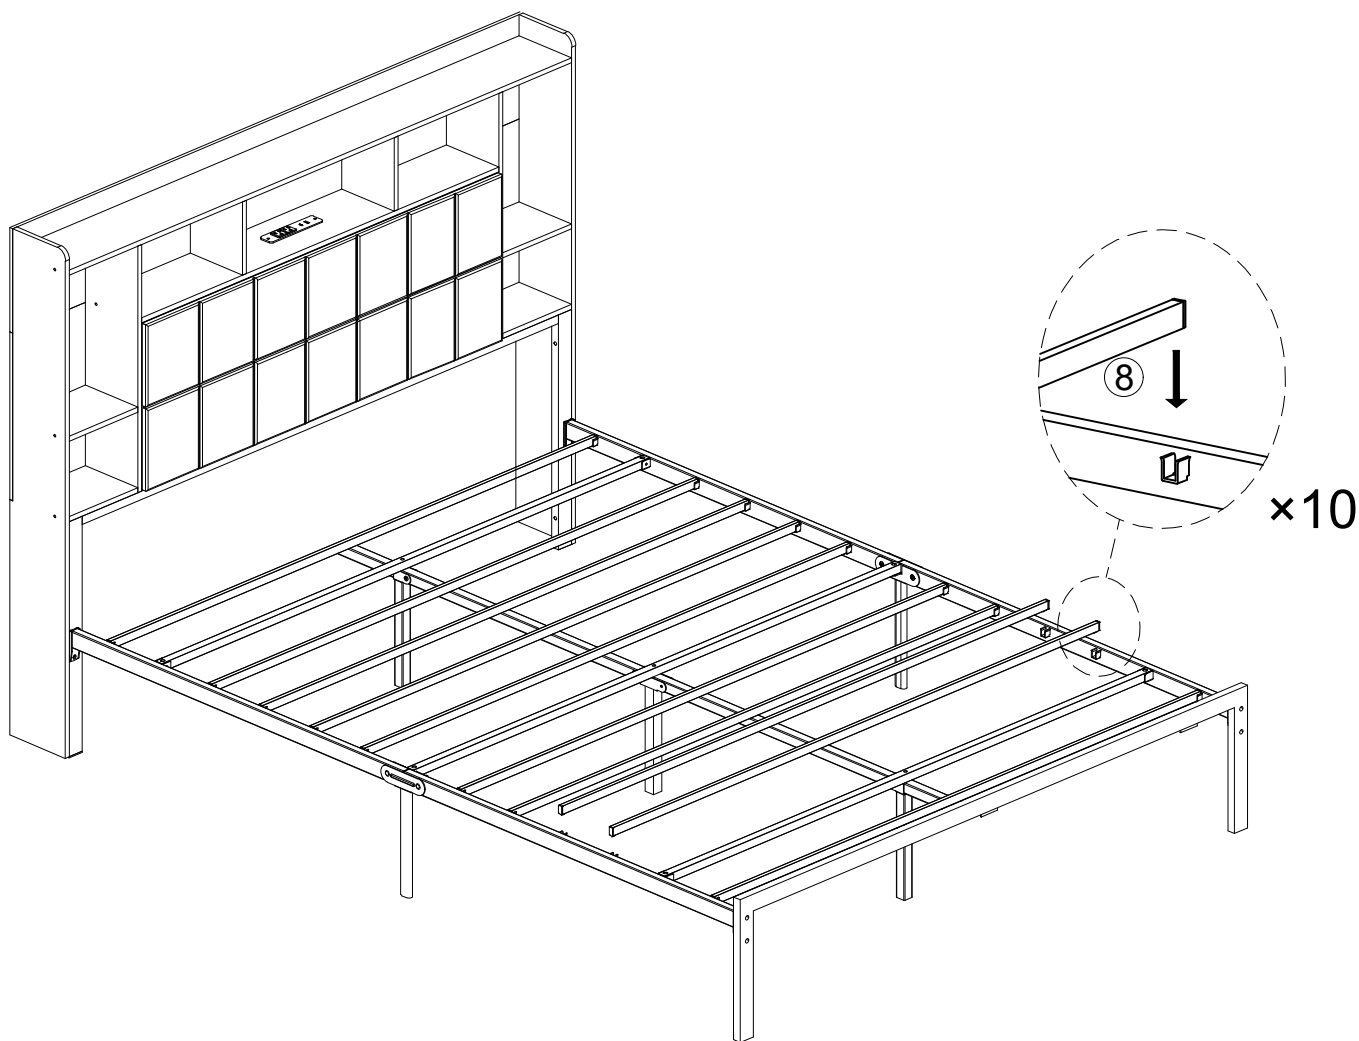

22



R \times 4pcs

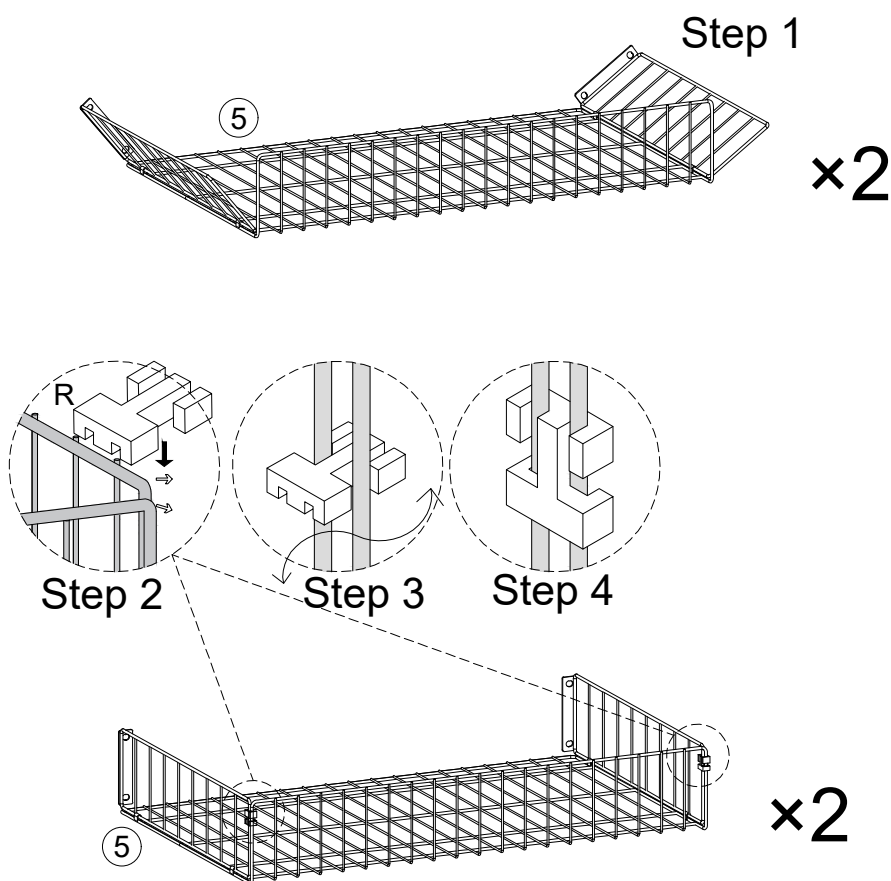


23



M6×15mm
E×10pcs



O × 2pcs

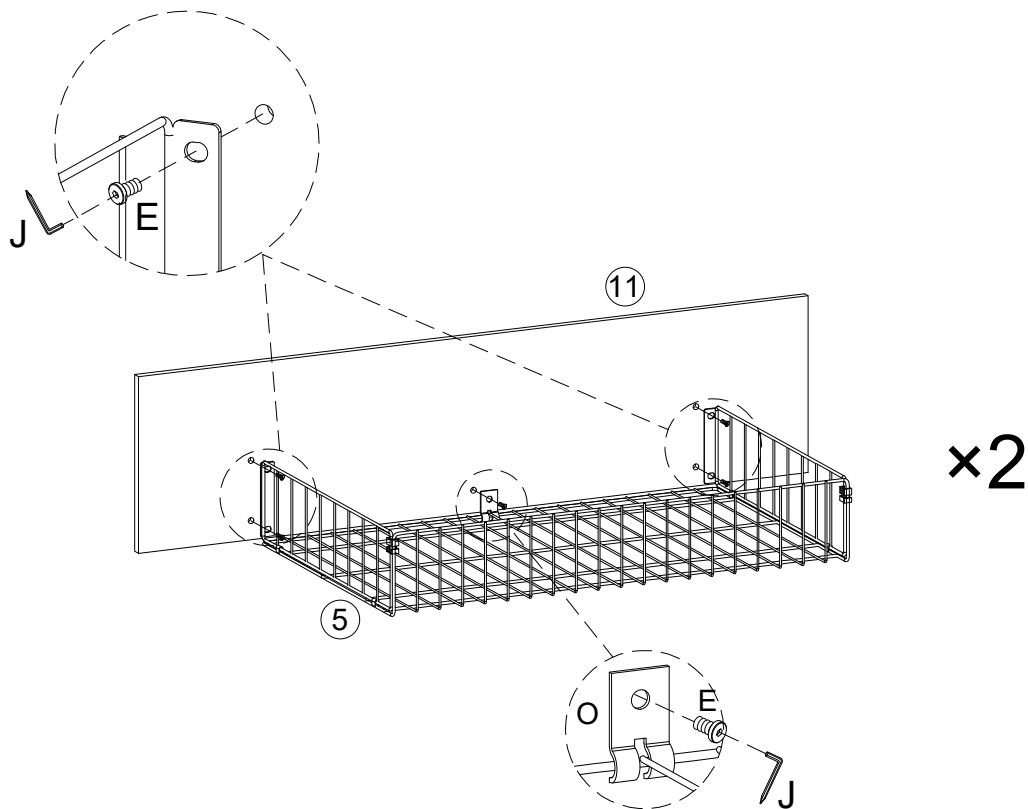


24




S × 8pcs

Clamp the wire with the opening of the front end of the wheel and press down to tighten the wire.

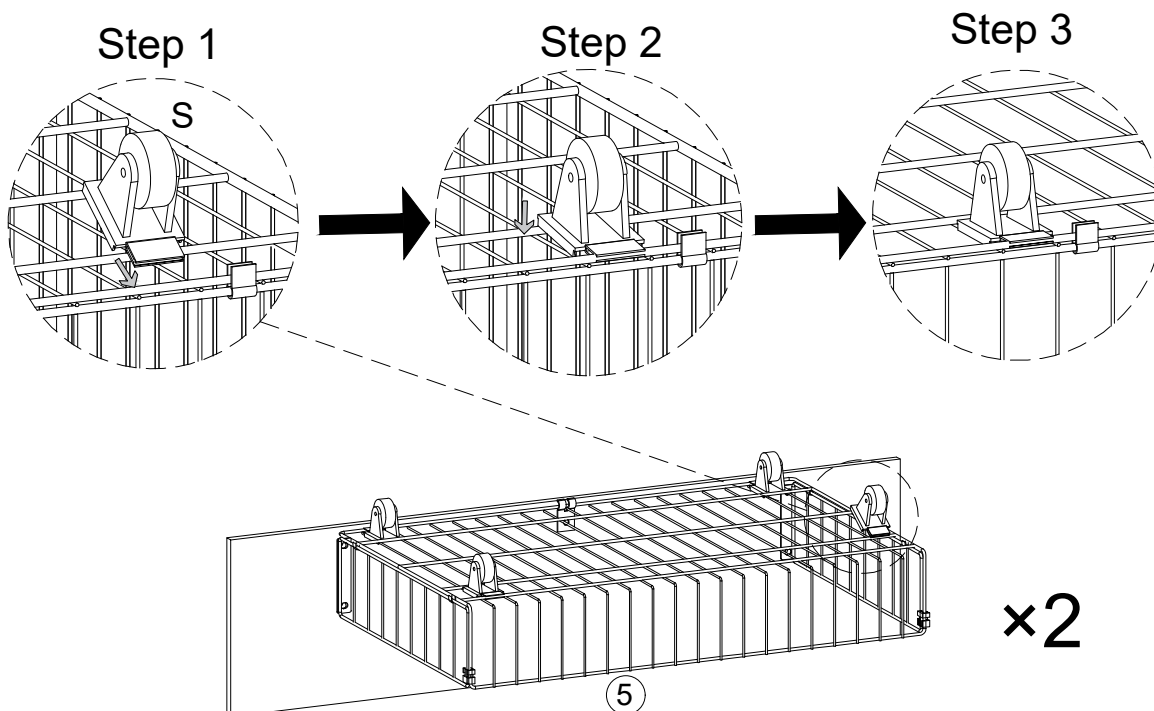

25

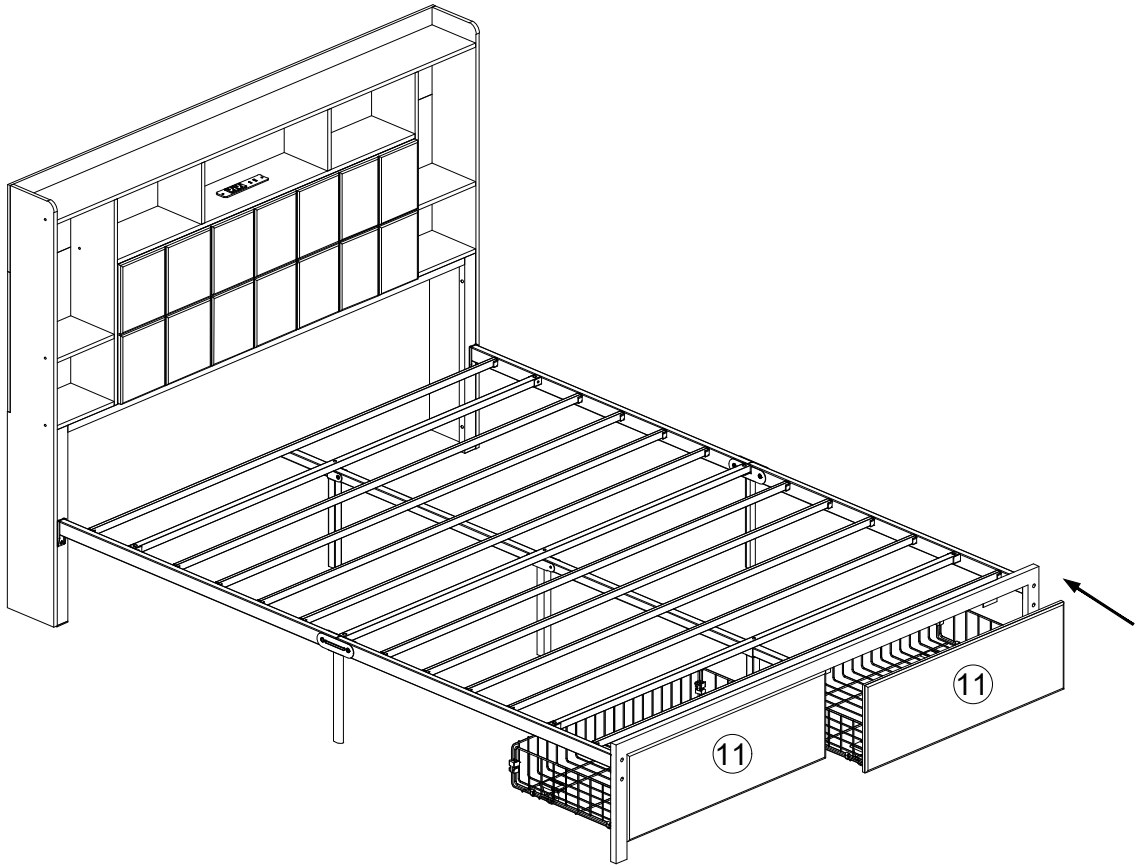

26

