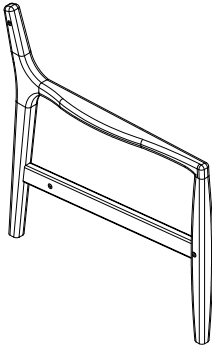
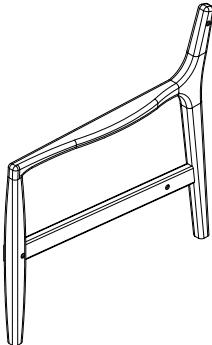


Hello ! Please read these important attentions ...

Please put a thick carpet on the ground to protect the furniture finish and corners.




During the installation process, **DON' T** fasten screws tight 100% at a time.

Assembly Instructions






NUMBER	COMPONENT	QUANTITY
A	 Right arm	1PC
B	 Left arm	1PC
C	 Middle leg	1PC



Assembly Instructions

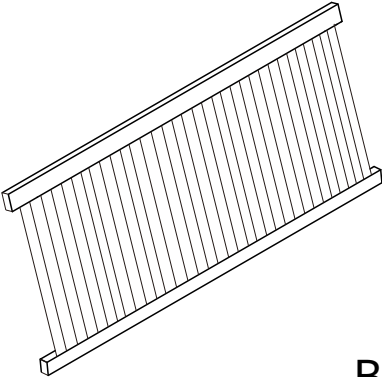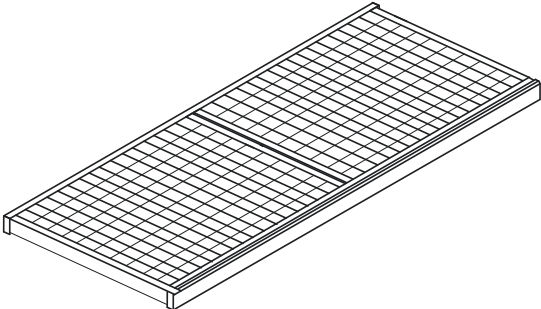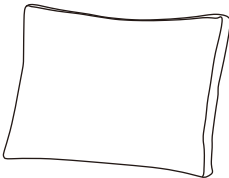
NUMBER	COMPONENT	QUANTITY
D	 Backrest	1PC
E	 Seat	1PC
F	 Seat cushion	2PCS
G	 Back cushion	2PCS

Assembly Instructions

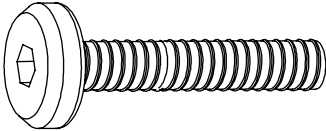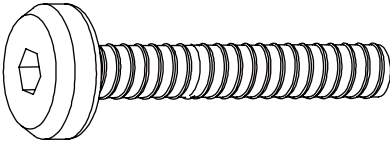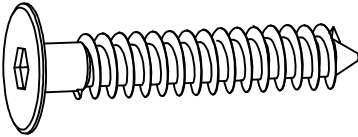NUMBER	COMPONENT	QUANTITY
H	 BoltM6x40mm	7PCS
I	 BoltM6x55mm	4PCS
J	 ScrewM6x50mm	4PCS
K	 M6 Flat washer	8PCS
L	 M6 Plastic washer	4PCS
M	 Allen Key	1PC

Assembly Instructions


1

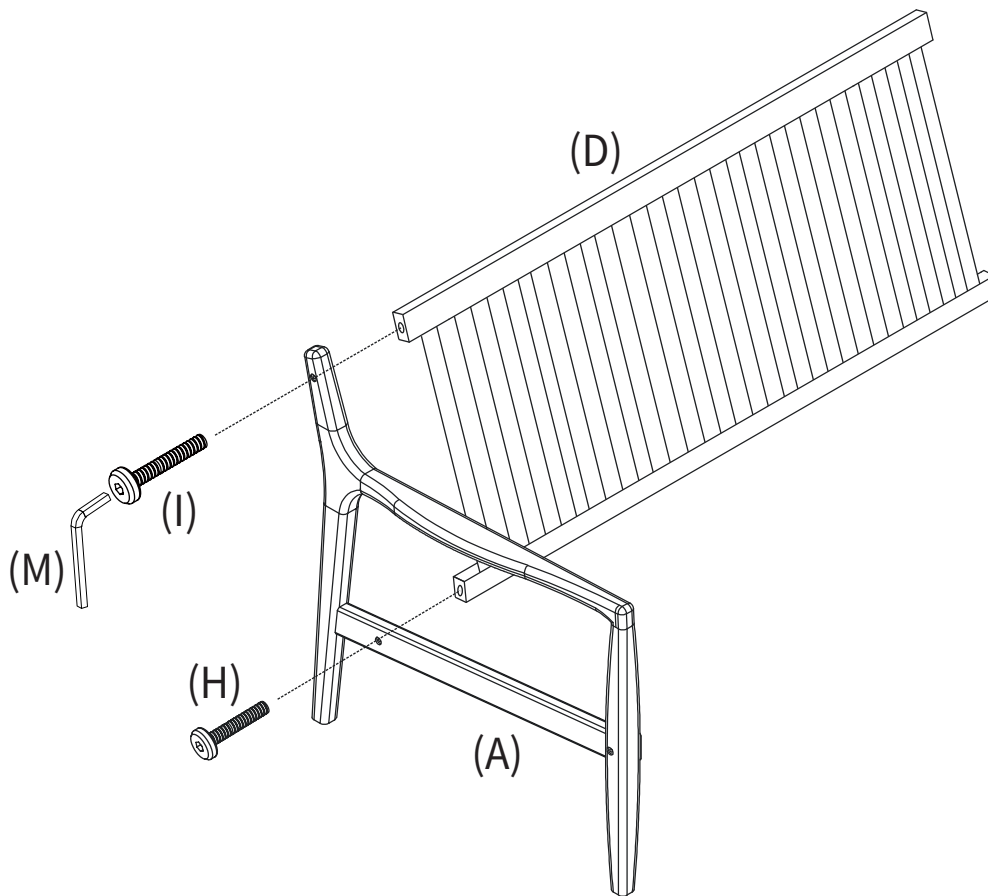

Place Right arm (A) in corresponding positions with Backrest (D).
Secure with Bolt M6x40 (H) and Bolt M6x55 (I) in the order as shown.
Engage all of the bolts by hand, then tighten them using the Allen key (M).

Assembly Instructions



2

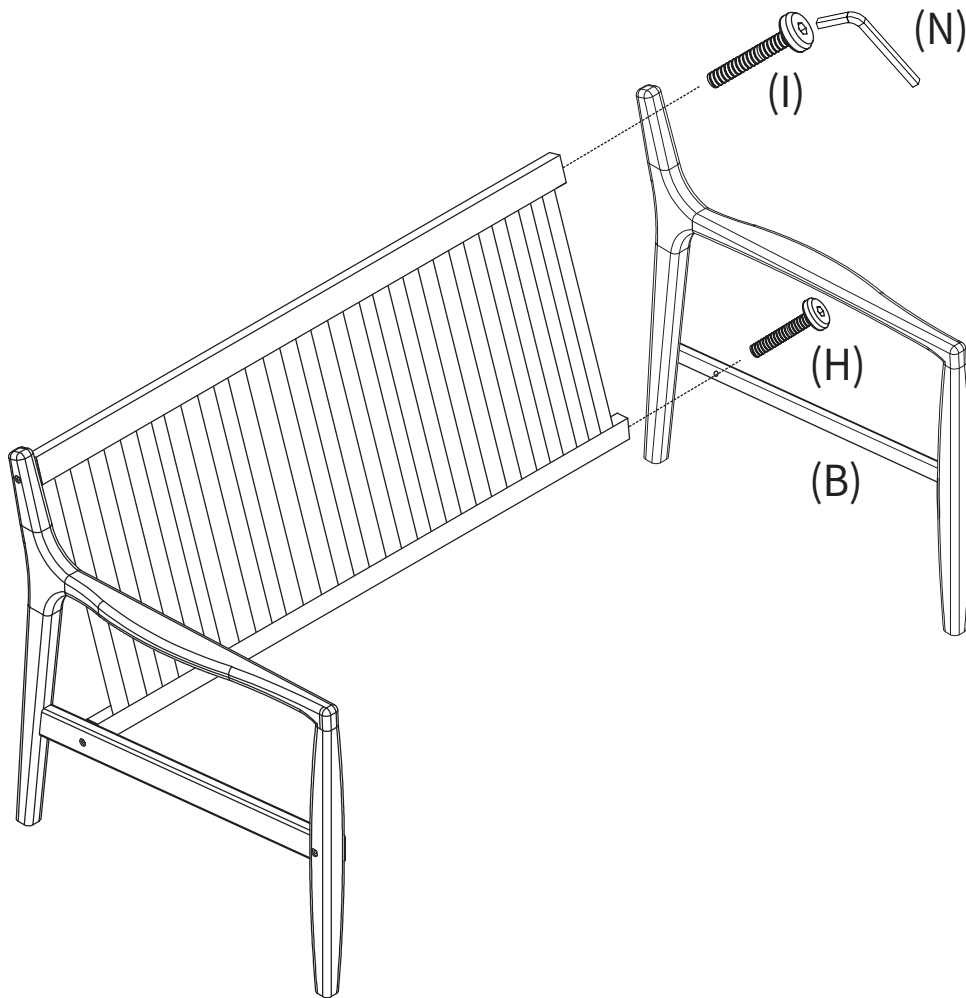

Place Left arm (B) in corresponding positions with Backrest (D).
Secure with Bolt M6x40 (H) and Bolt M6x55 (I) in the order as shown.
Engage all of the bolts by hand, then tighten them using the Allen key (N).

Assembly Instructions

3

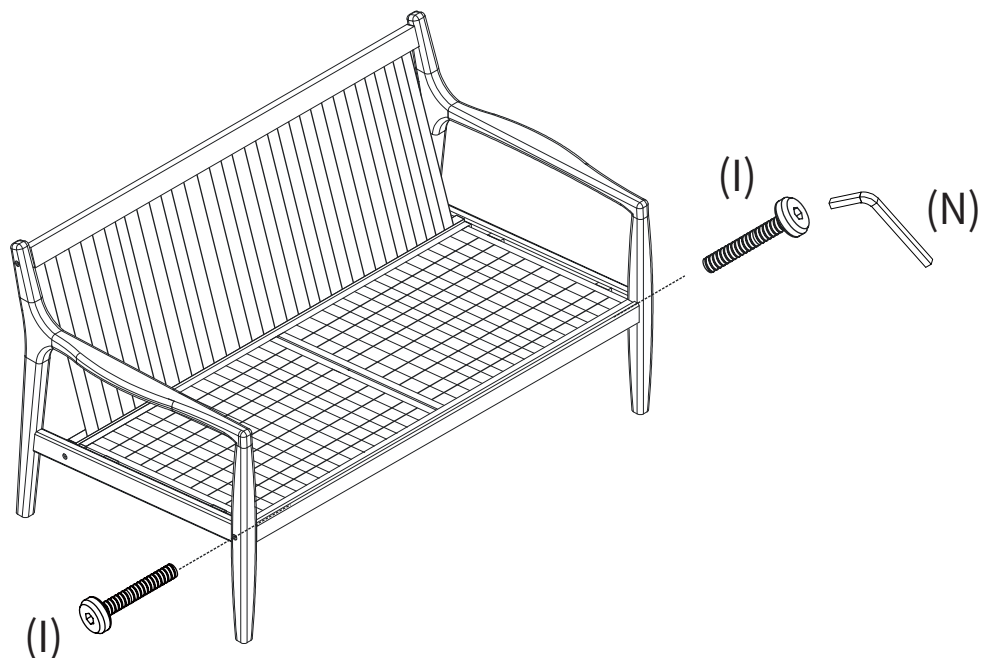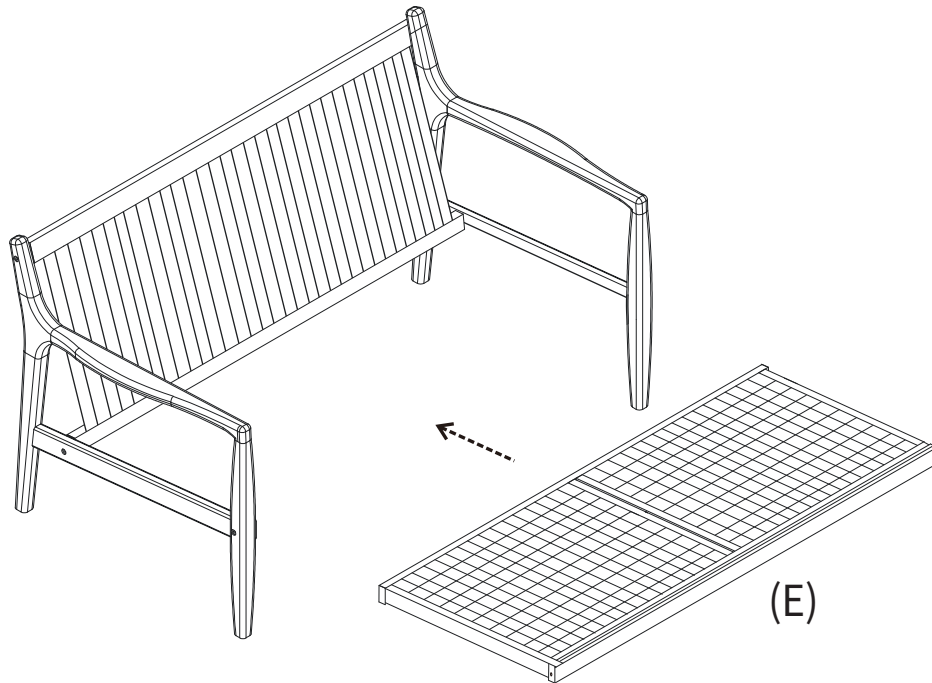


Place Seat (E) between Right arm (A) and Left arm (B) in corresponding positions.

Secure with Bolt M6x55 (I) in the order as shown.

Engage all of the bolts by hand, then tighten them using the Allen key (N).

Assembly Instructions


4

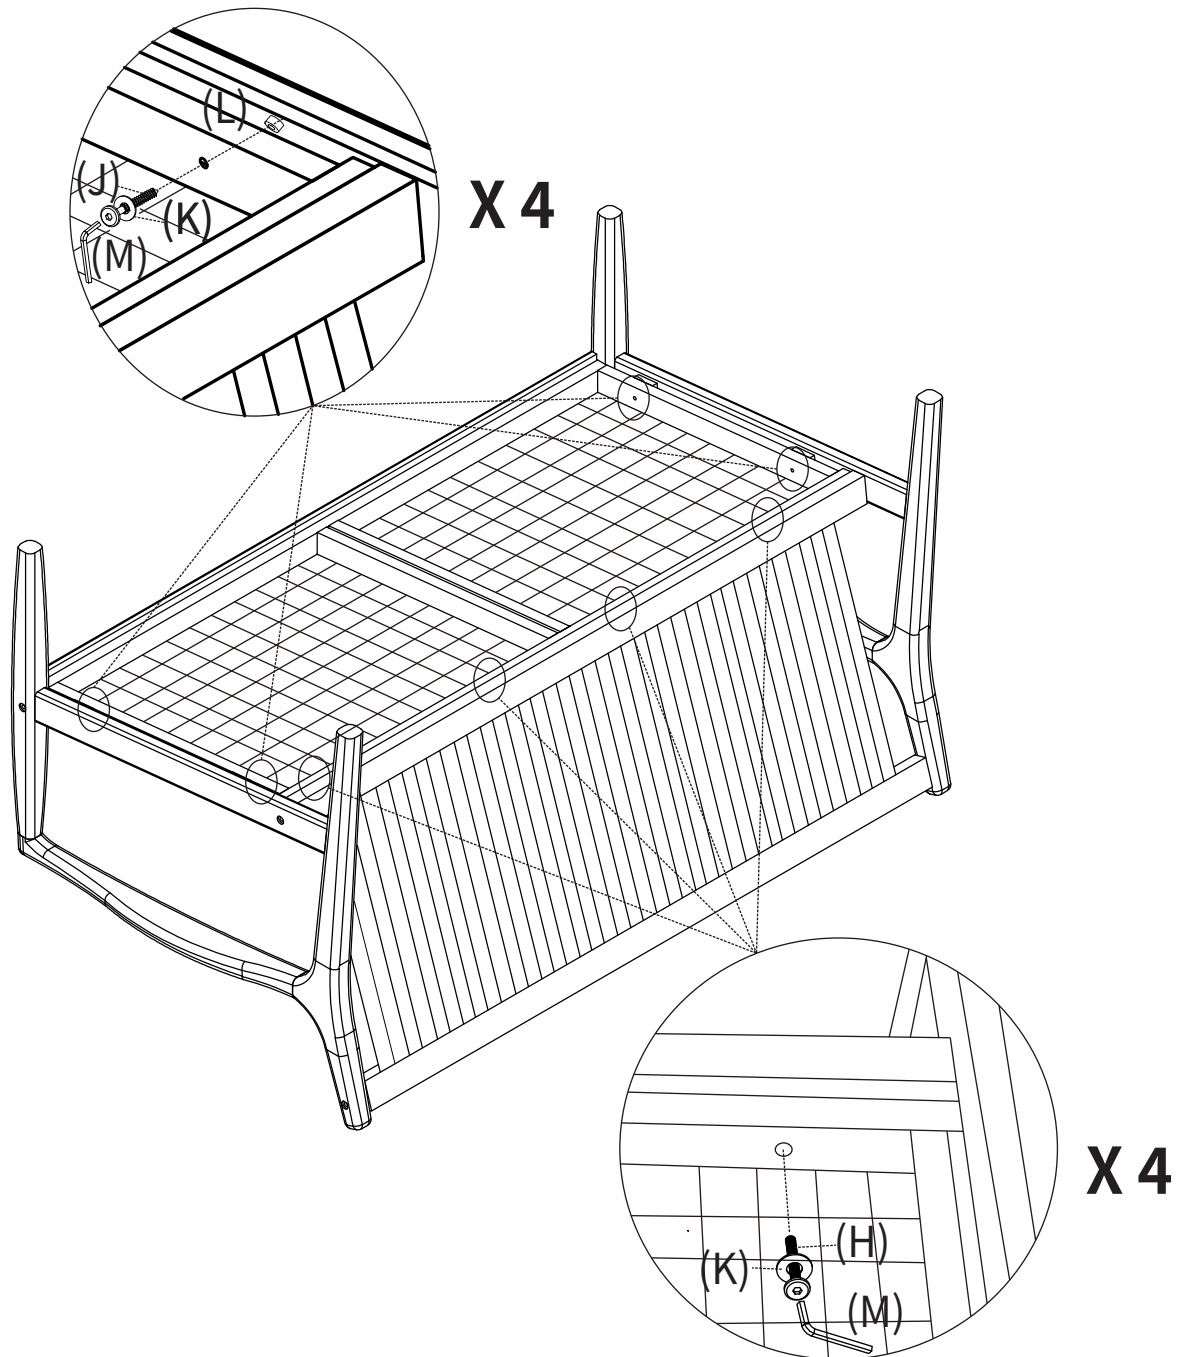

Secure with Bolt M6x40 (H) and Flat washers (K) and stacking the hardware in the order as shown. Engage all of the bolts by hand, then tighten them using the Allen key (M) to connect the Seat (E) with Backrest (D). Place Plastic washer (L) between the Seat (E) with Right arm (A) + Left arm (B), after that secure with Screw M6x50 (J) and Flat washers (K) and stacking the hardware in the order as shown. Then tighten them using the Allen key (M) to connect the Seat (E) with Right arm (A) + Left arm (B).

Assembly Instructions


5

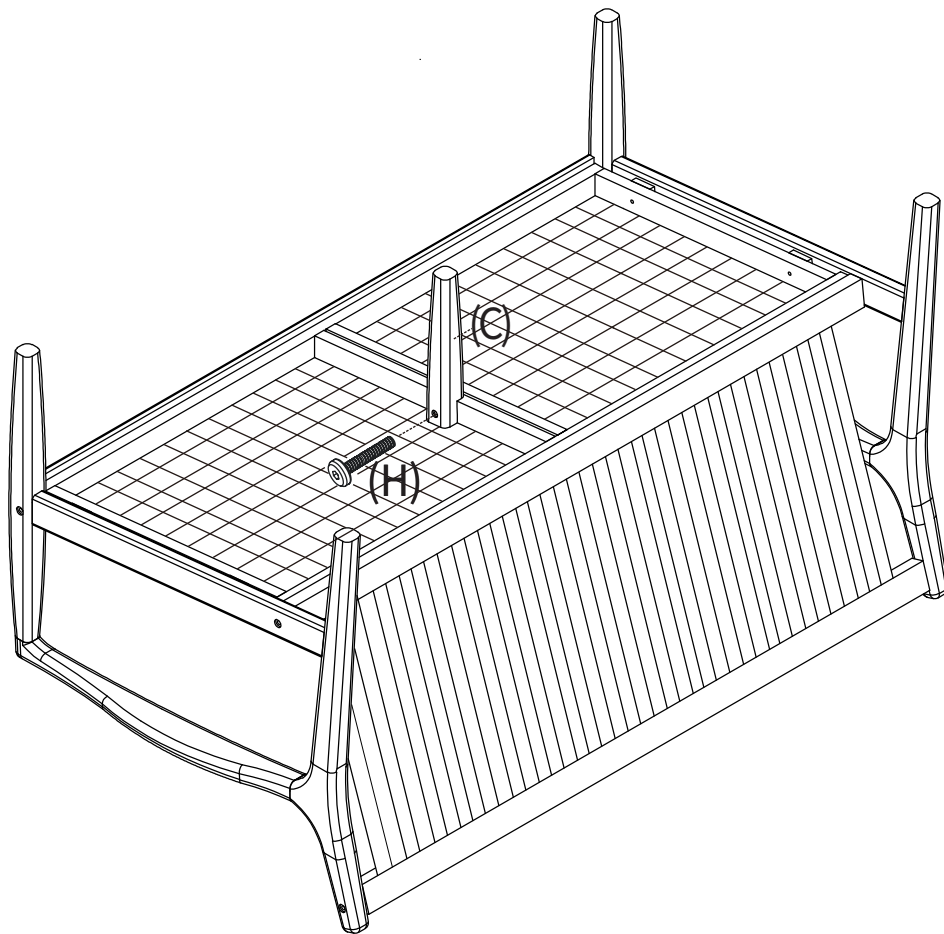

Place Middle leg (C) in corresponding positions with Seat (E).
Secure with Bolt M6x40 (H) in the order as shown. Engage all of the bolts by hand,
then tighten them using the Allen key (M).

Assembly Instructions

6

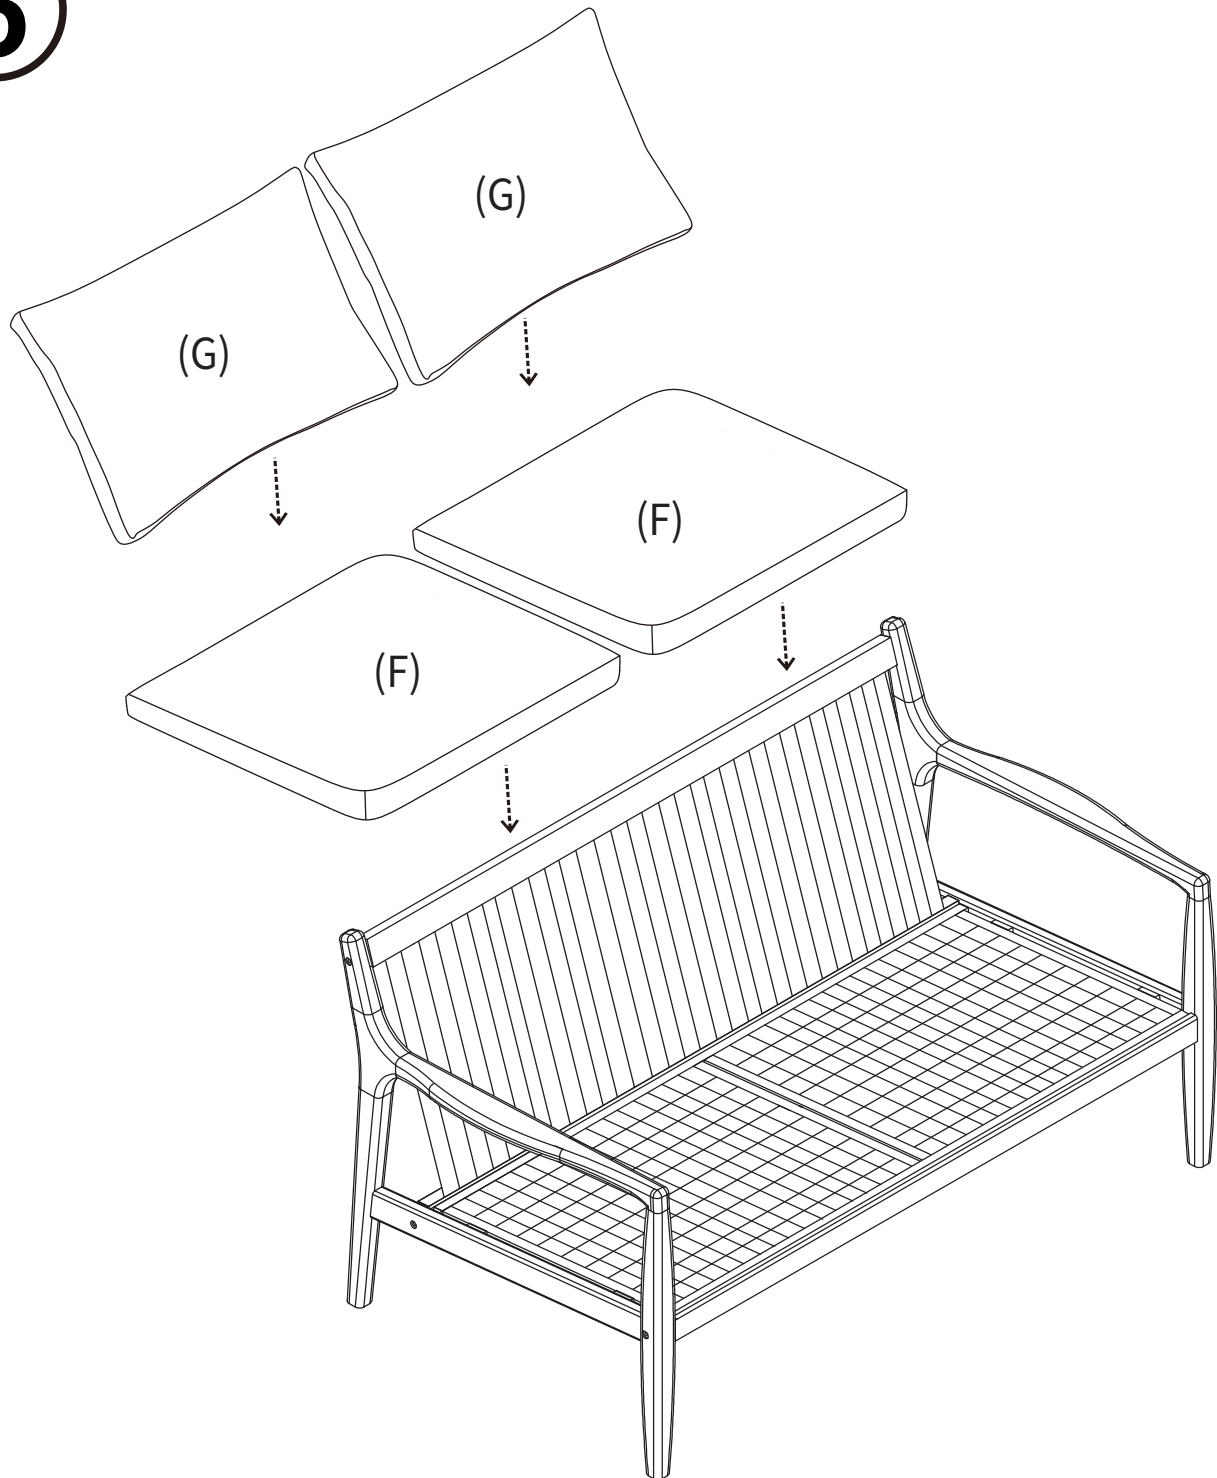

Place Seat cushion (F) and Back cushion (G) onto assembly as shown.