





IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

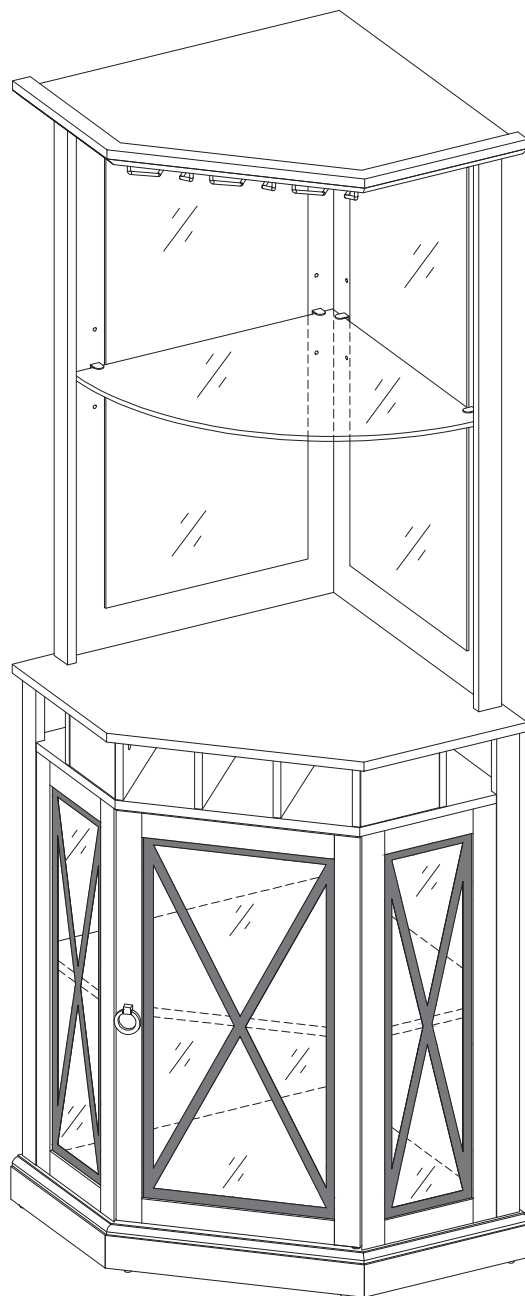

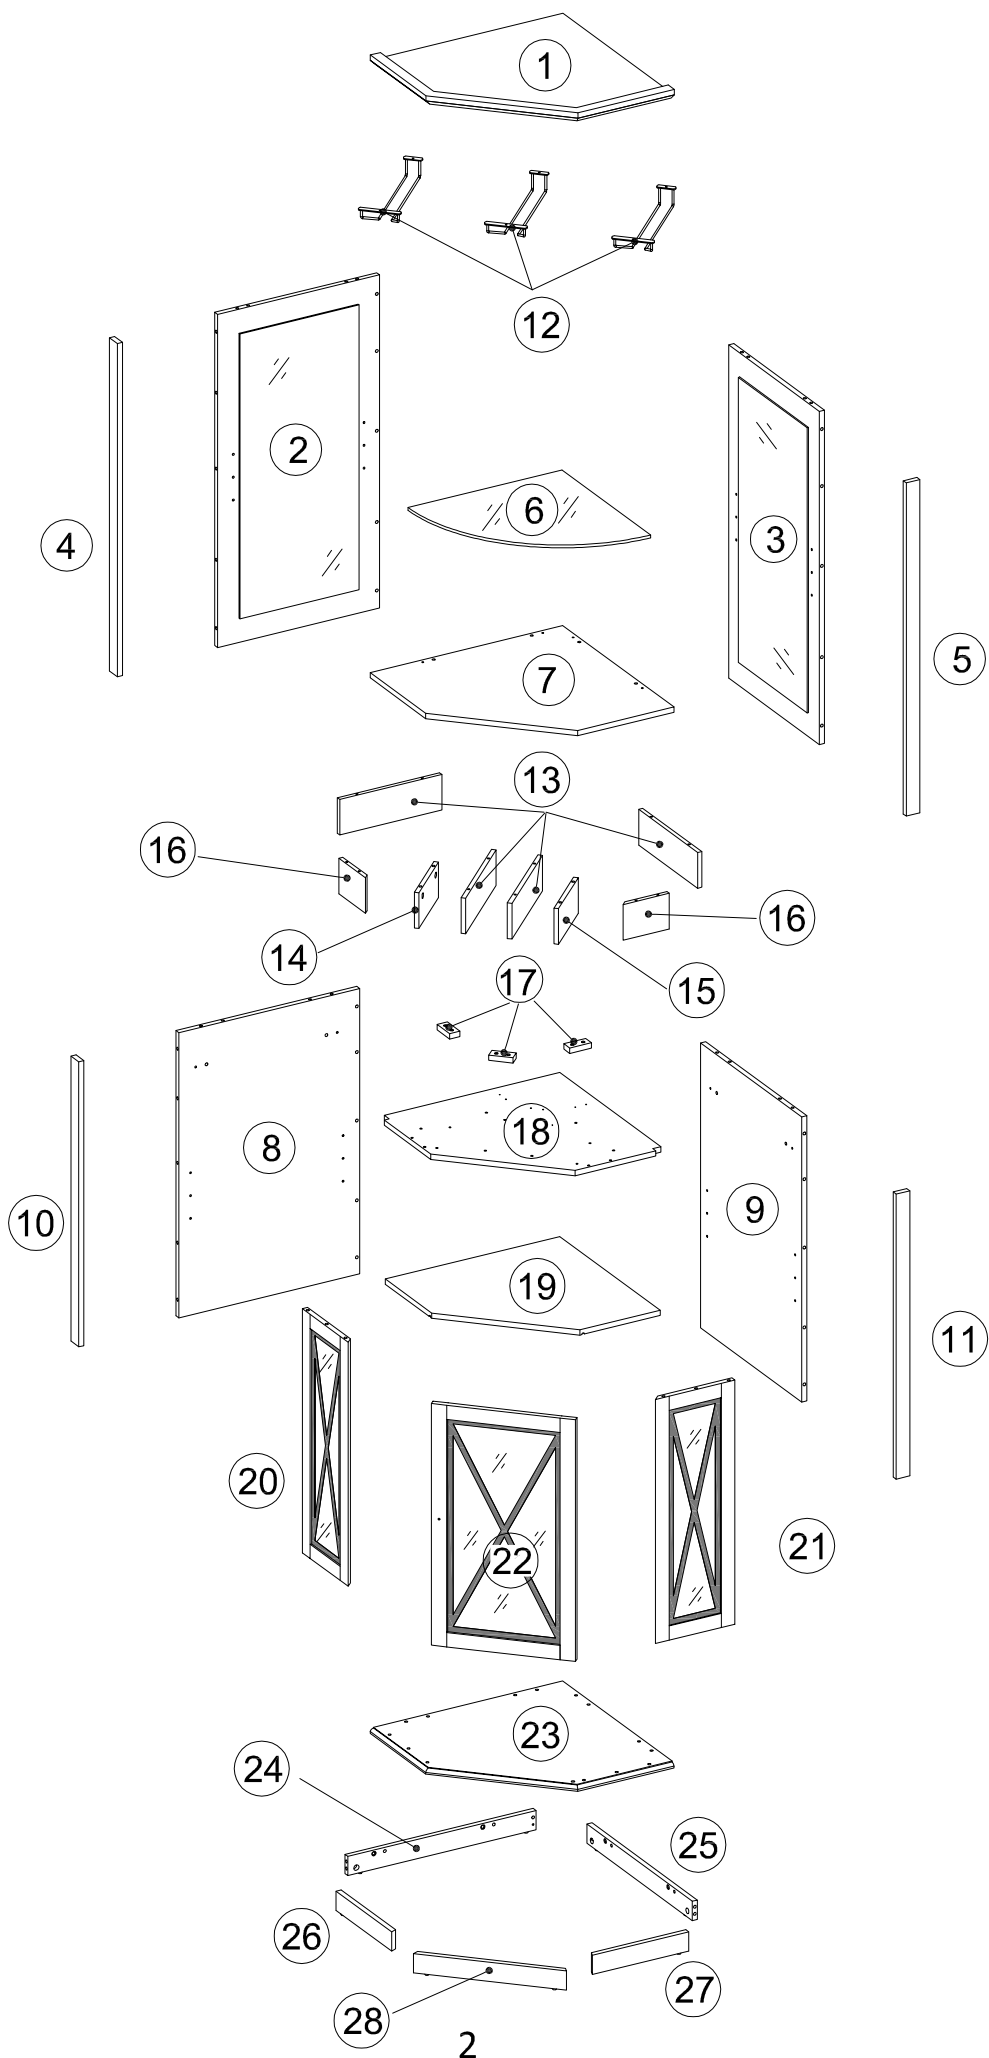




① x1



② x1



③ x1




④ x1




⑤ x1




⑥ x1



⑦ x1



⑧ x1



⑨ x1



⑩ x1



⑪ x1



⑫ x3



⑬ x4



⑭ x1



⑮ x1



⑯ x2



⑰ x3



⑱ x1




⑲ x1




⑳ x1




㉑ x1



㉒ x1



㉓ x1



㉔ x1



(25) x1



(26) x1



(27) x1



(28) x1

A	x39	B	x35	C	x39	D	x24	E	x39
Ø6x35mm		Ø15x11mm		Ø8x30mm		Ø6x30mm		Ø30mm	

F	x8	G	x4	H	x1	I	x14	J	x6
Ø4x44mm		Ø15x9mm		M4x57mm		M6x12mm		Ø4x25mm	

K	x6	L	x2	M	x1	N	x1	O	x1
Ø5x16mm		Ø12x8mm		40x15.5mm		40x15.5mm		30x22mm	

P	x1	Q	x13	R	x4	S	x7	T	x2
		Ø3x12mm				58x20x20mm		Ø3x15mm	

U	x10	V	x1	W	x1	Y	x1	Z	x10
Ø3.5x14mm		Ø4x19mm						Ø6.7x48mm	

AA	x4	BB	x2	CC	x2	DD	x1
						tool	

1



4 x1



5 x1



8 x1



9 x1




10 x1



11 x1



A x16

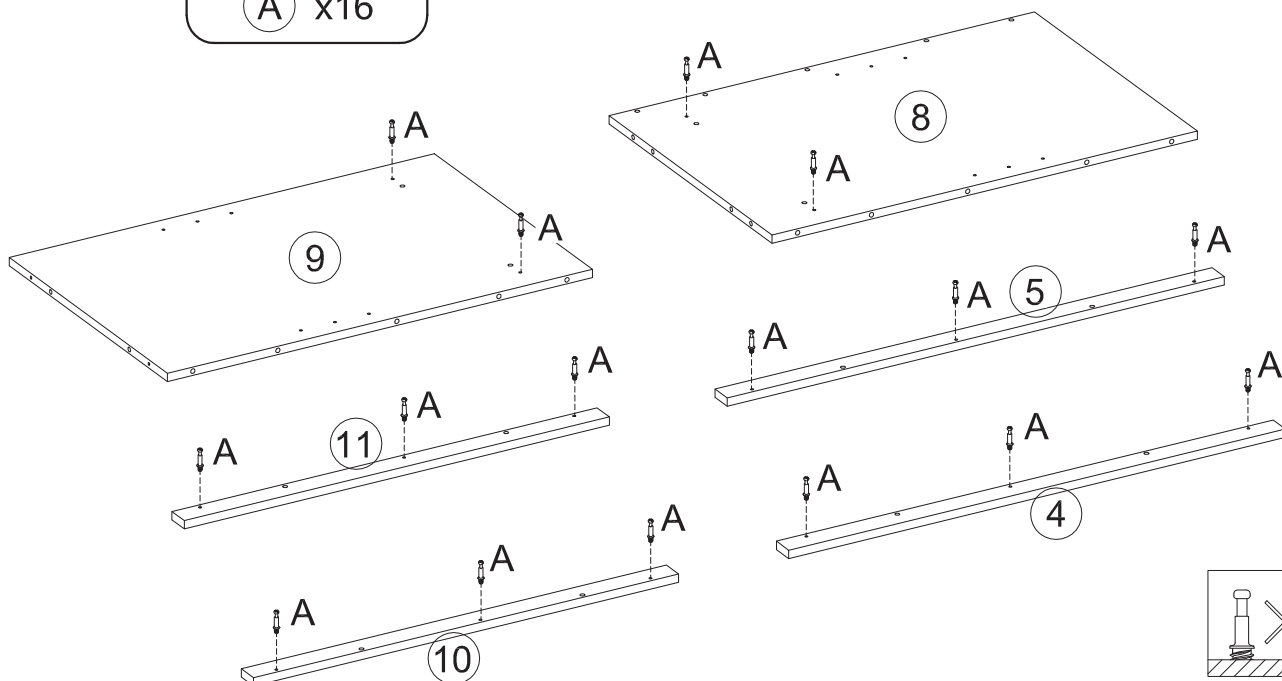

2



9 x1




11 x1




C x2



B x3

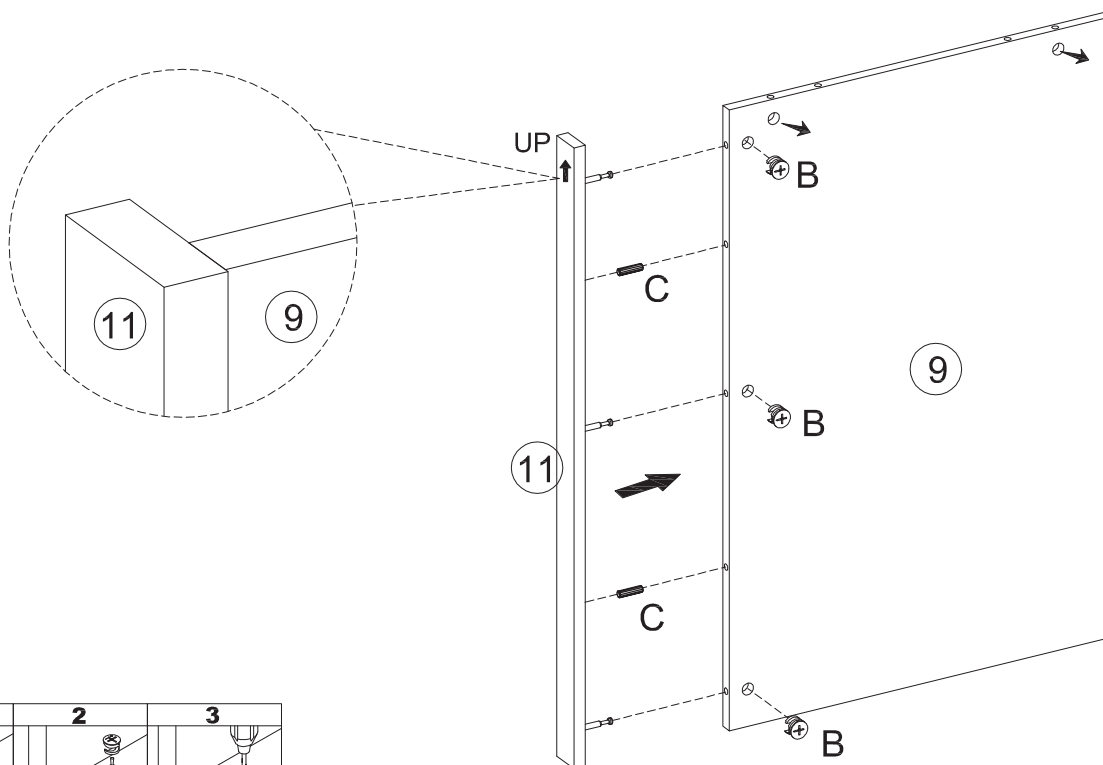

5

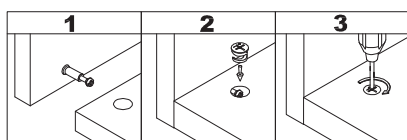

3



8 x1





10 x1



C x2



B x3

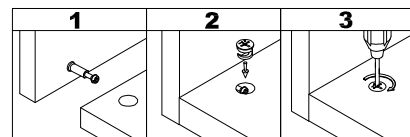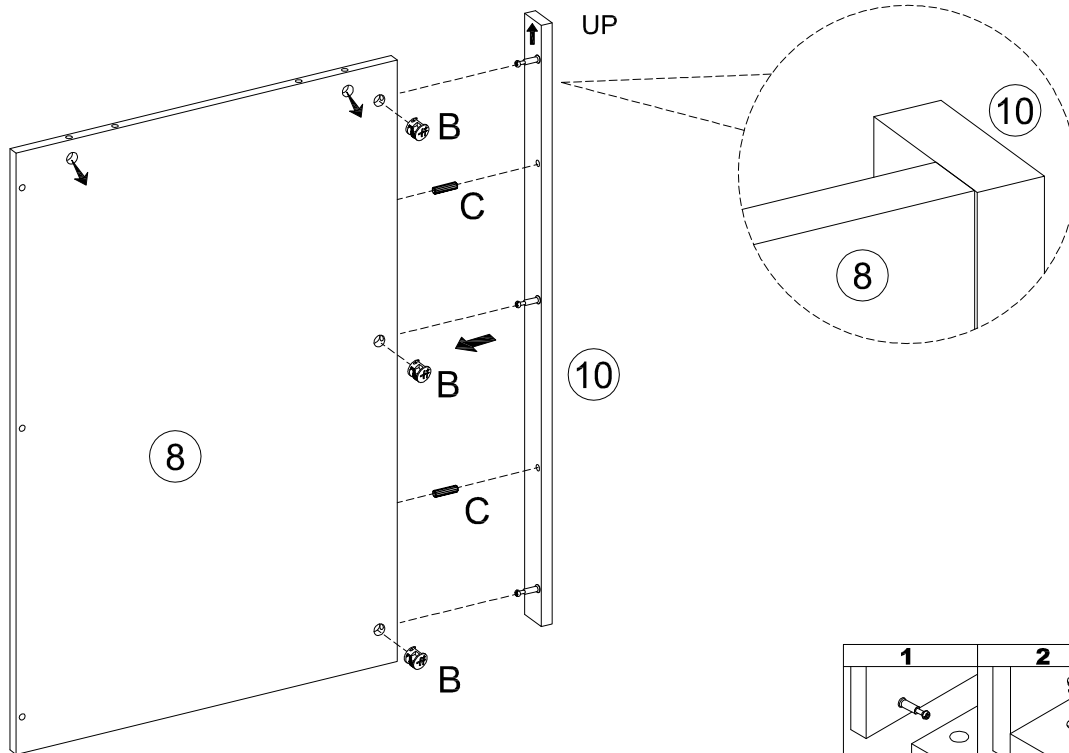

4





18 x1





C x2





B x2

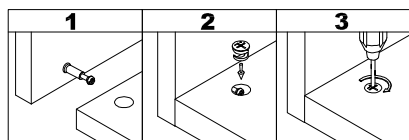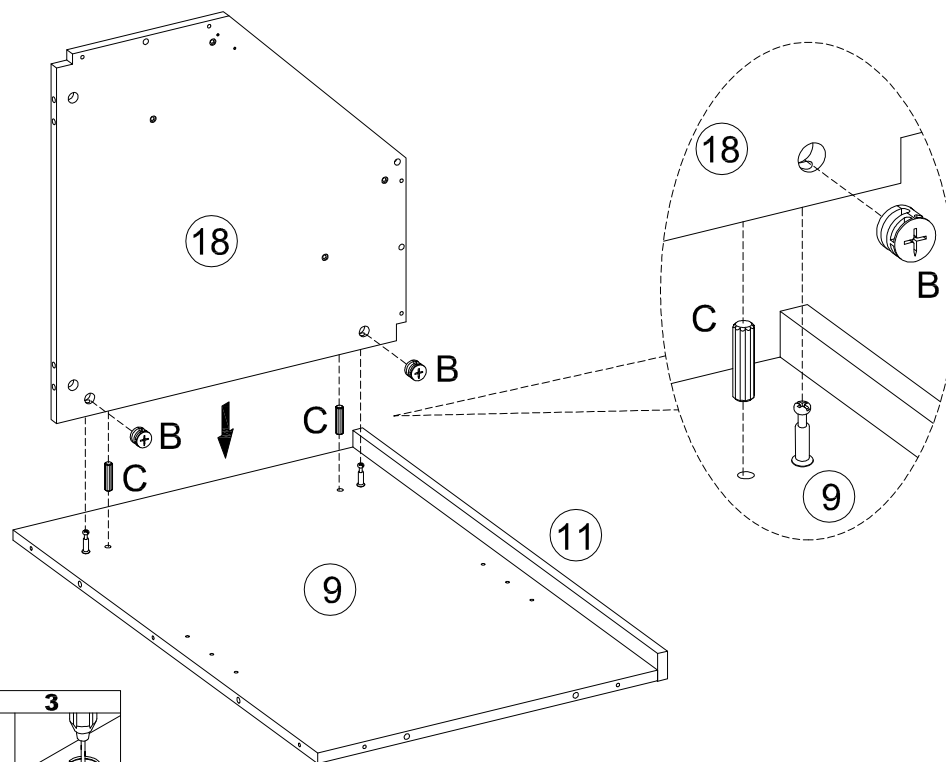




5

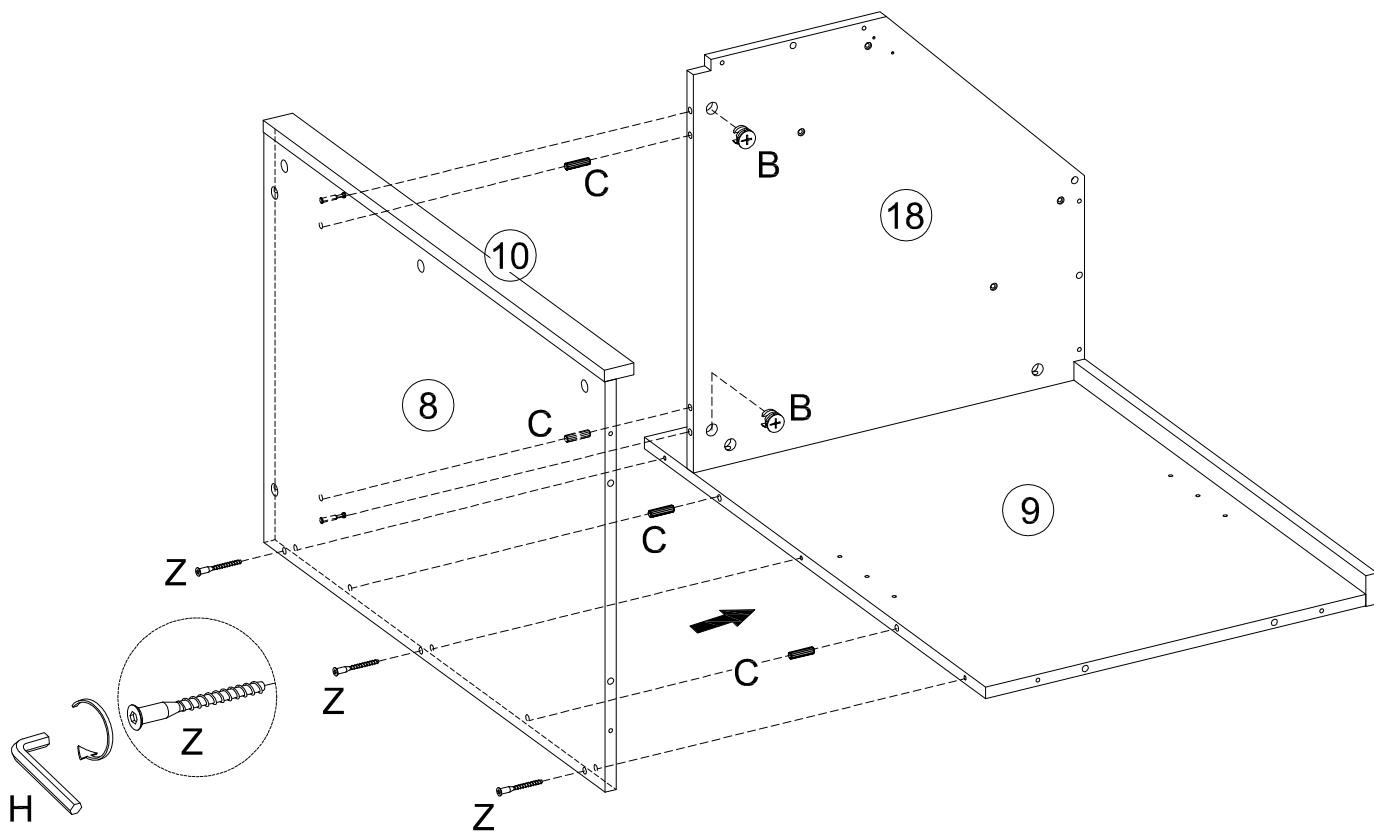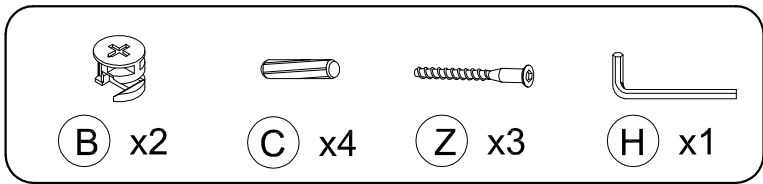



6

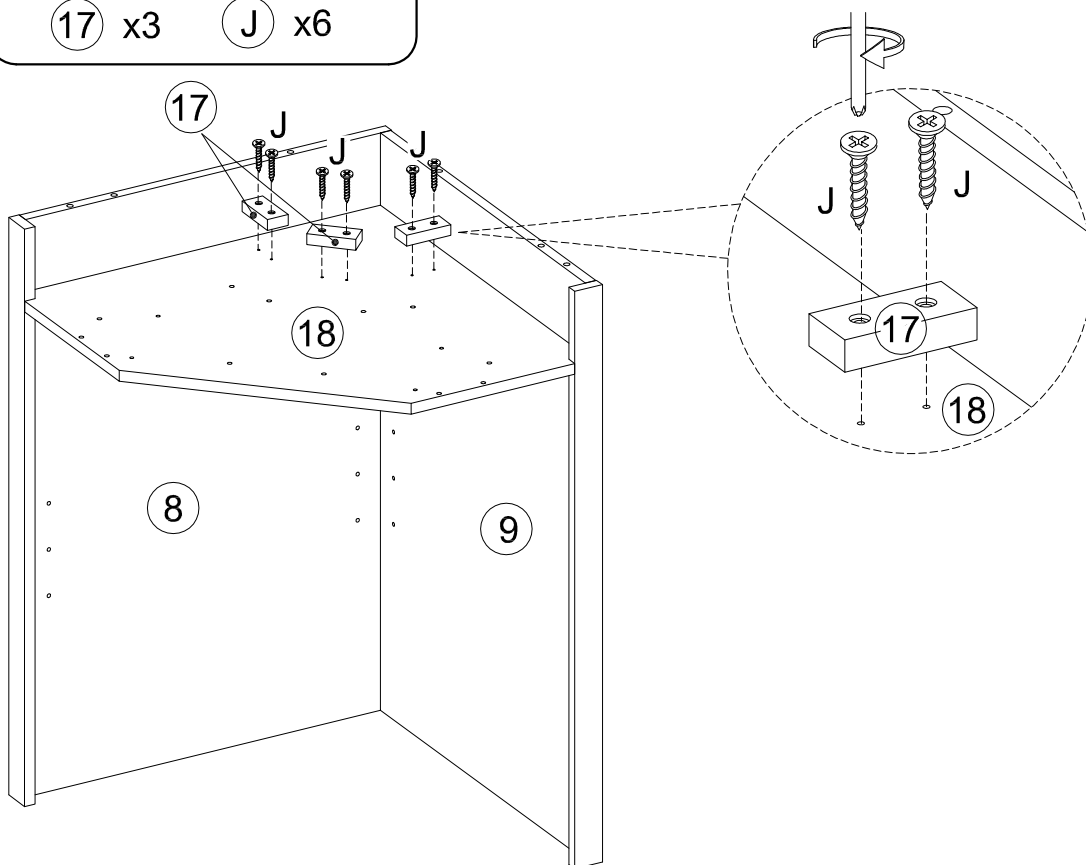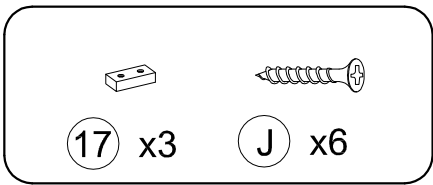

7

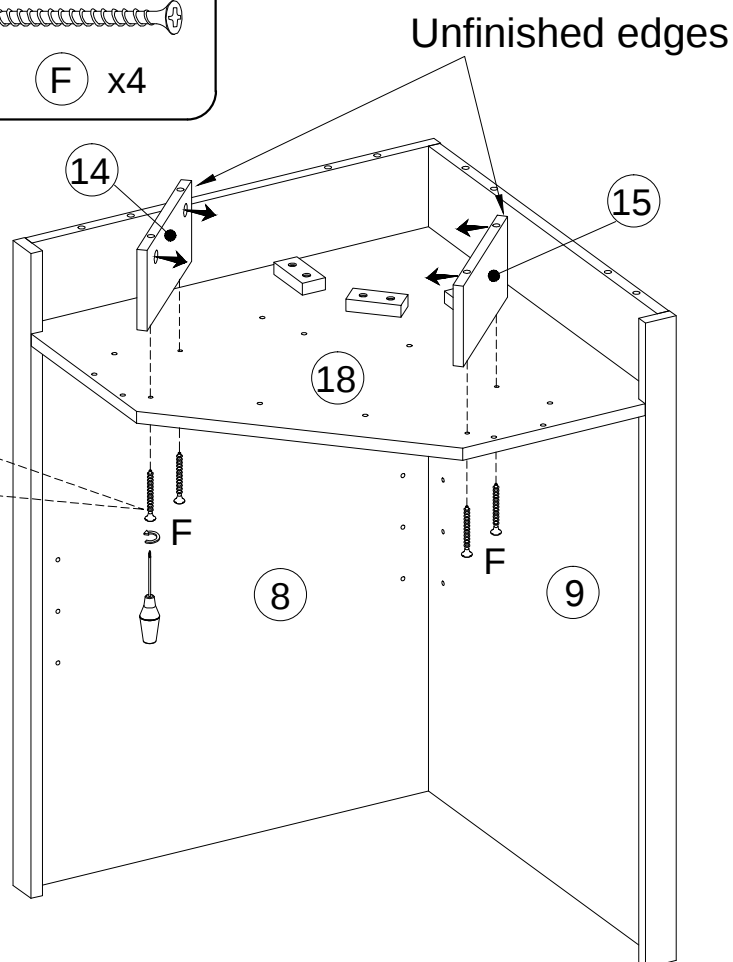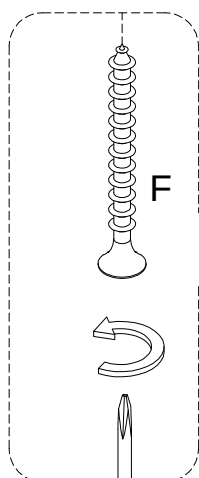

8

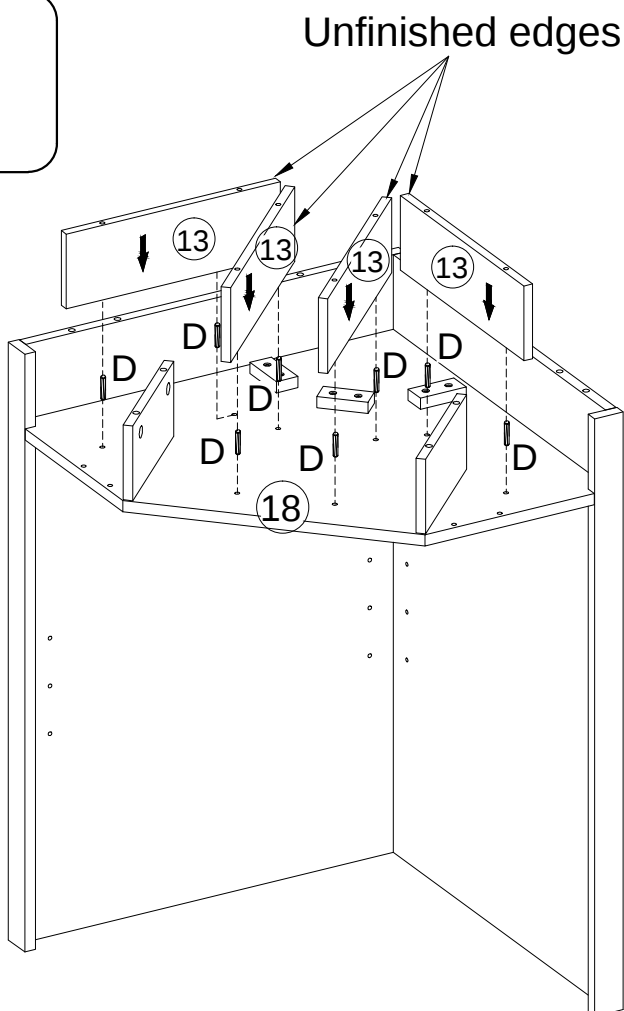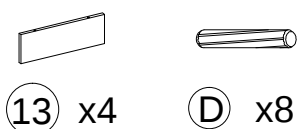


9



16 x2




D x4

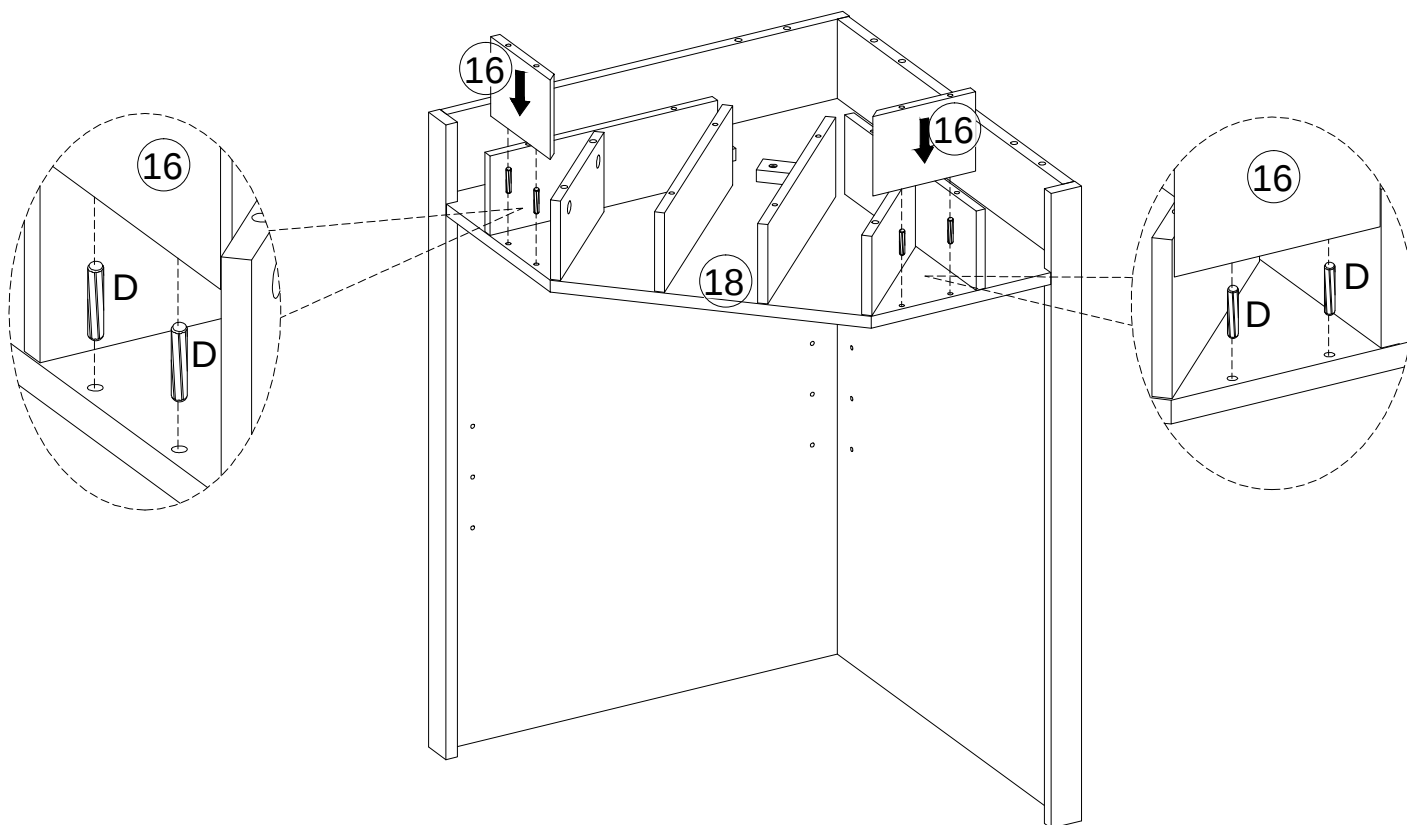


10



7 x1





A x8

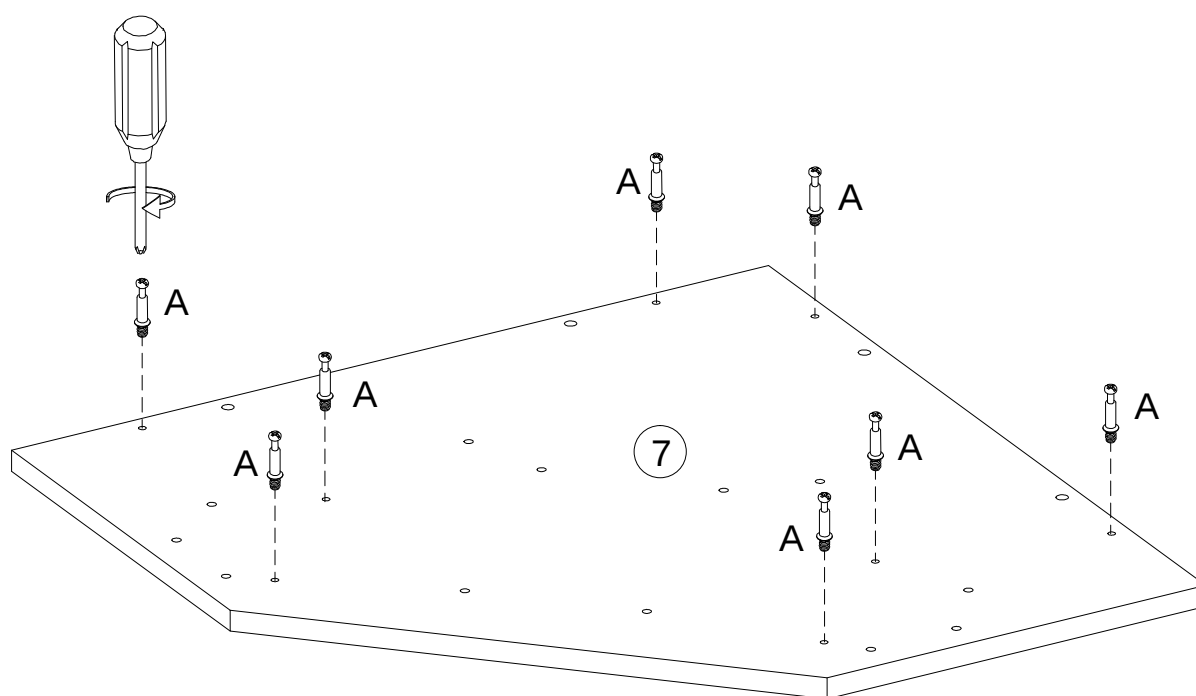


11


-  **B** x4
-  **D** x12
-  **C** x4
-  **G** x4
-  **DD** x1

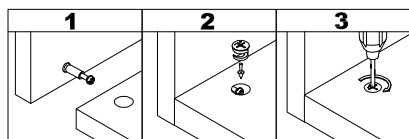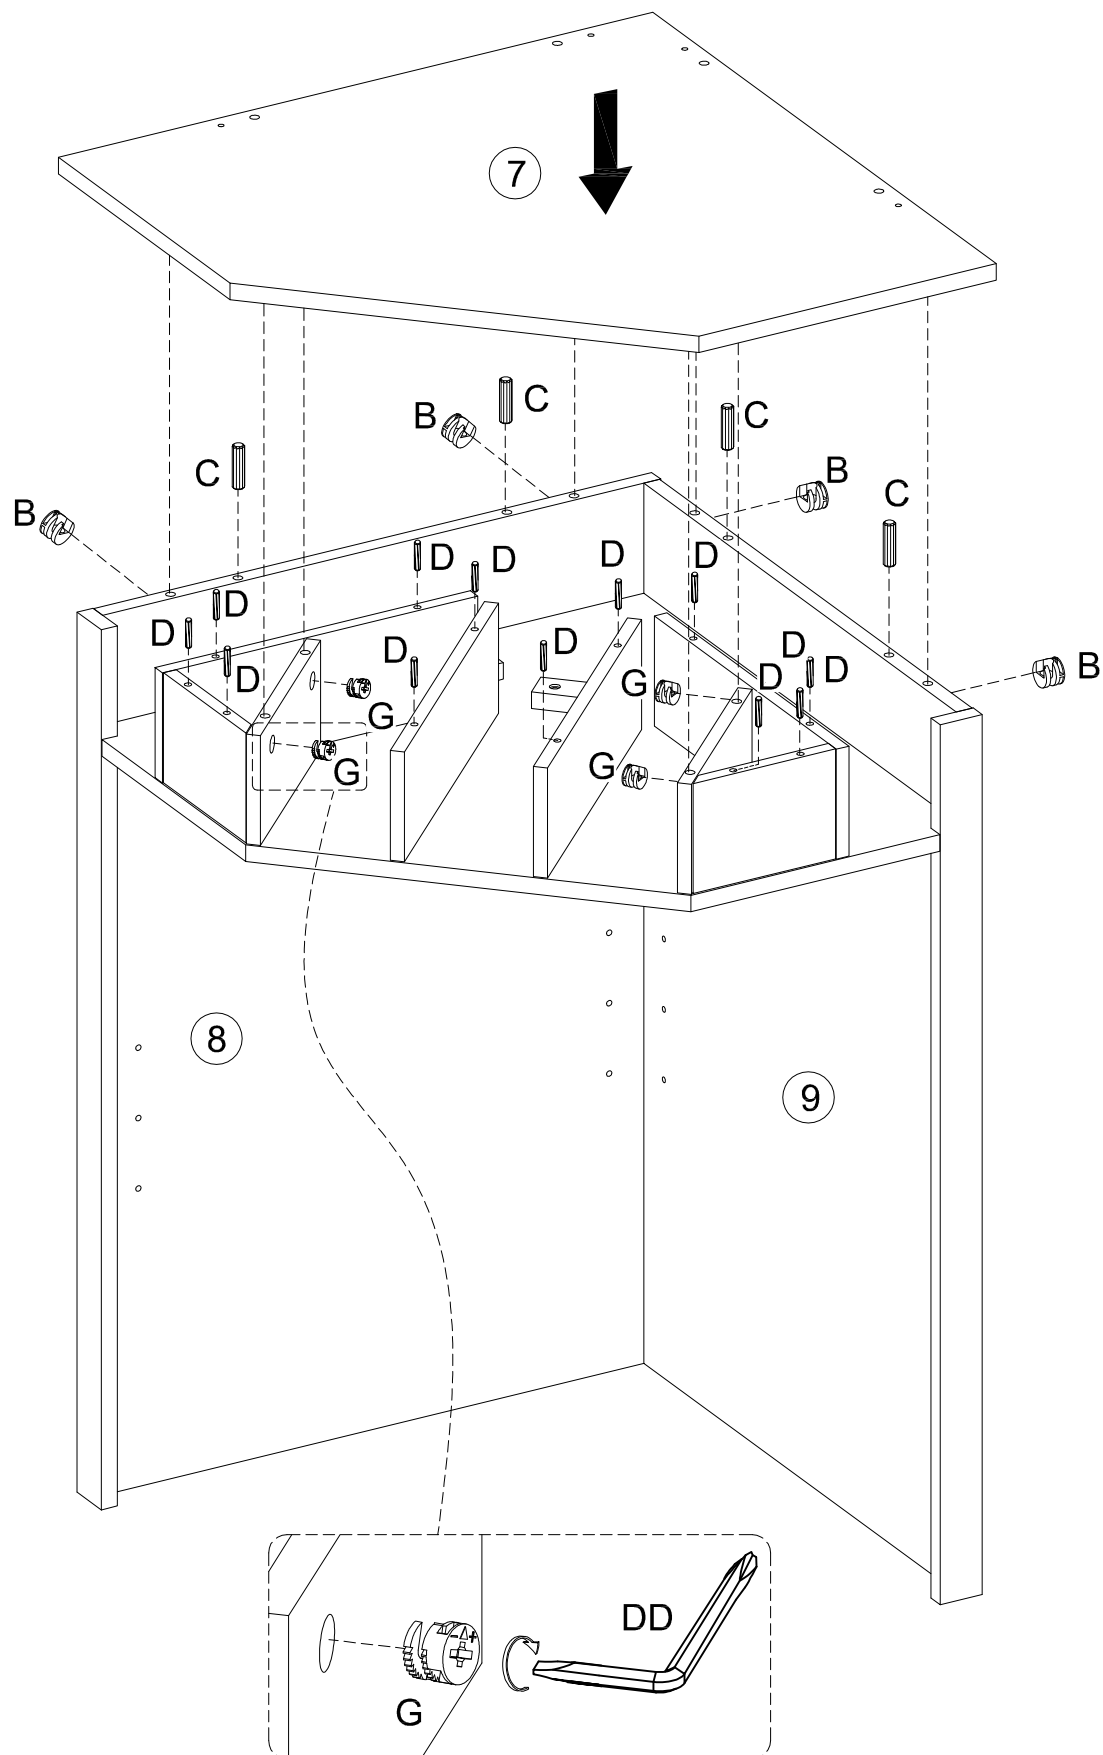

12




(A) x4




(P) x1



(T) x2

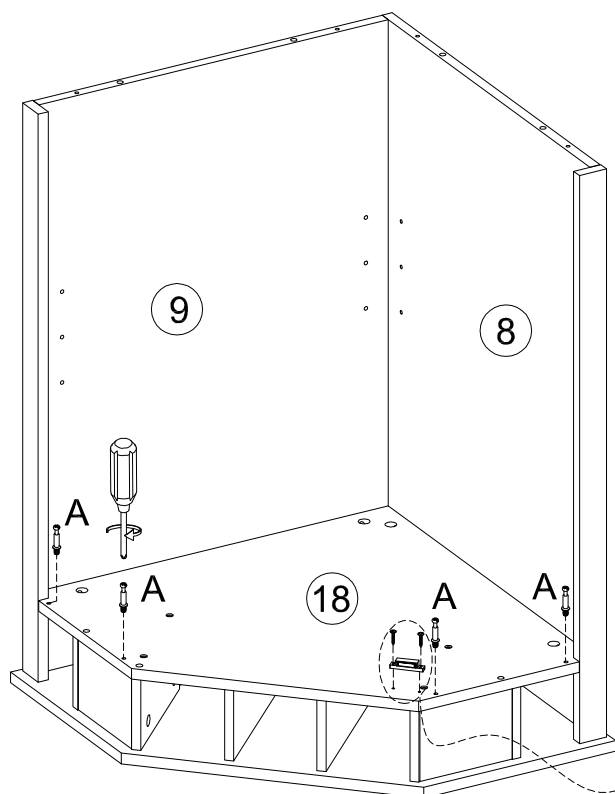

Pay attention to the magnetic direction

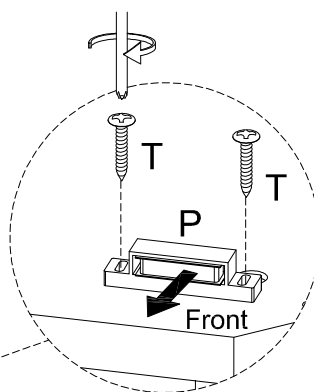

13



(20) x1





(21) x1



(B) x4



(C) x2

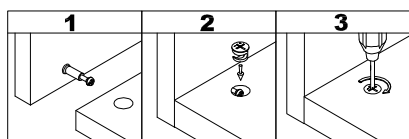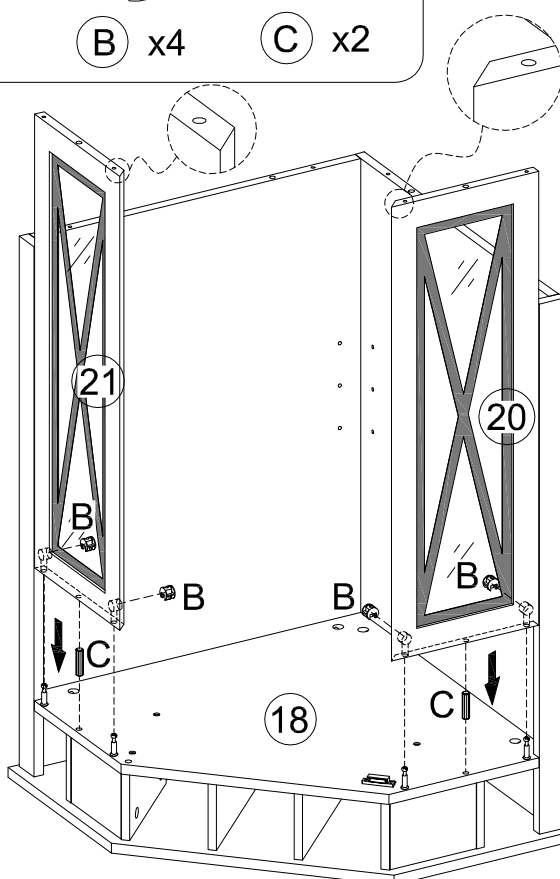


14




(23) x1



(C) x6




(F) x4



(Z) x4



(H) x1

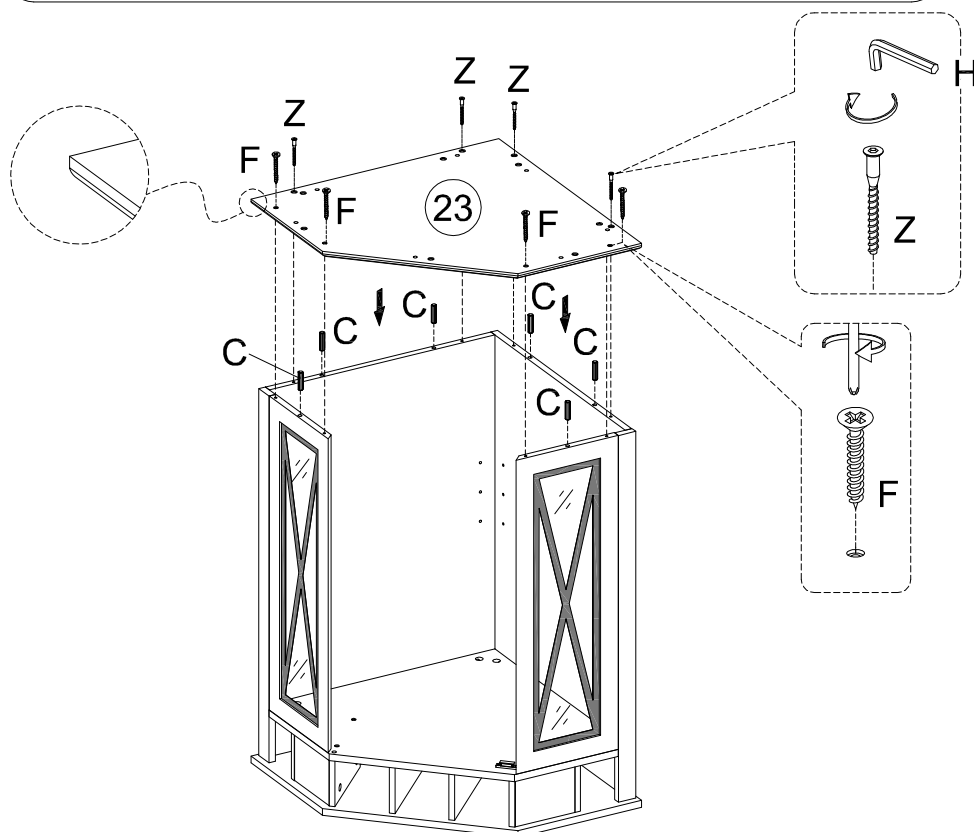

15



(24) x1



(25) x1




(26) x1



(27) x1



(28) x1



(A) x3



(BB) x2



(U) x2




(I) x7



(S) x7



(H) x1

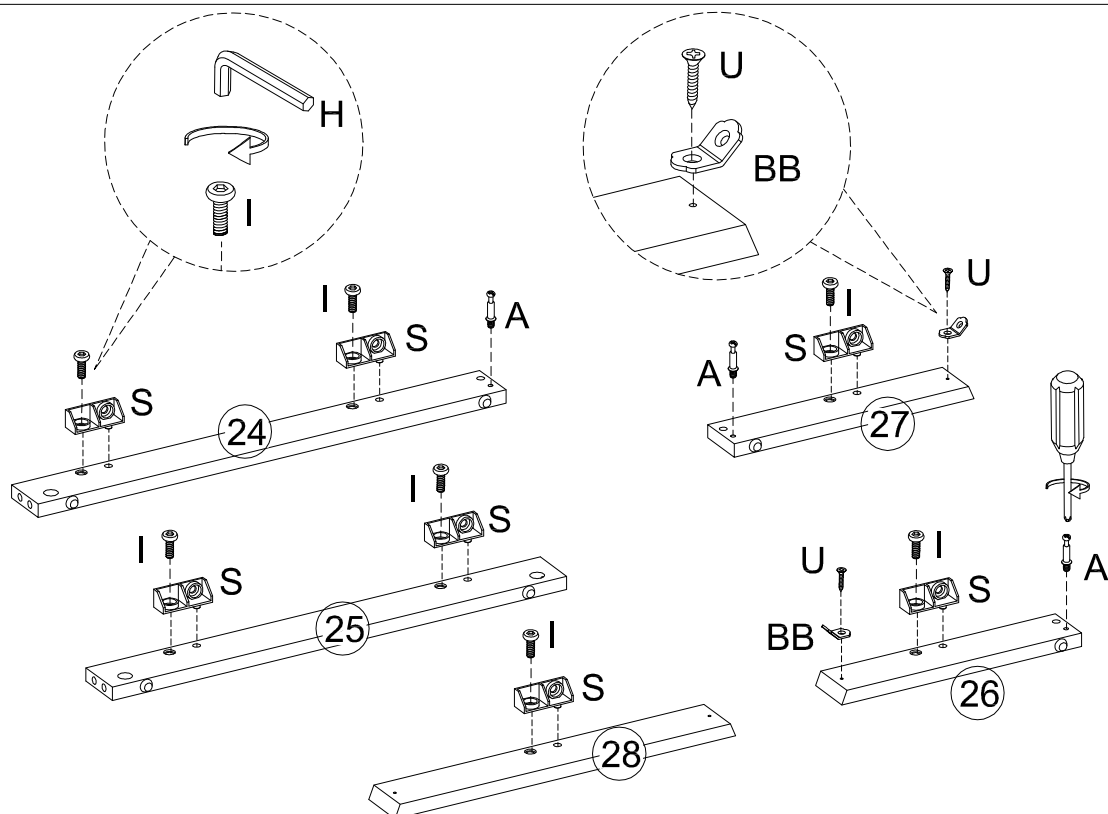



16



(C) x2



(B) x2

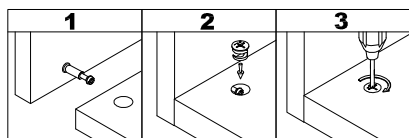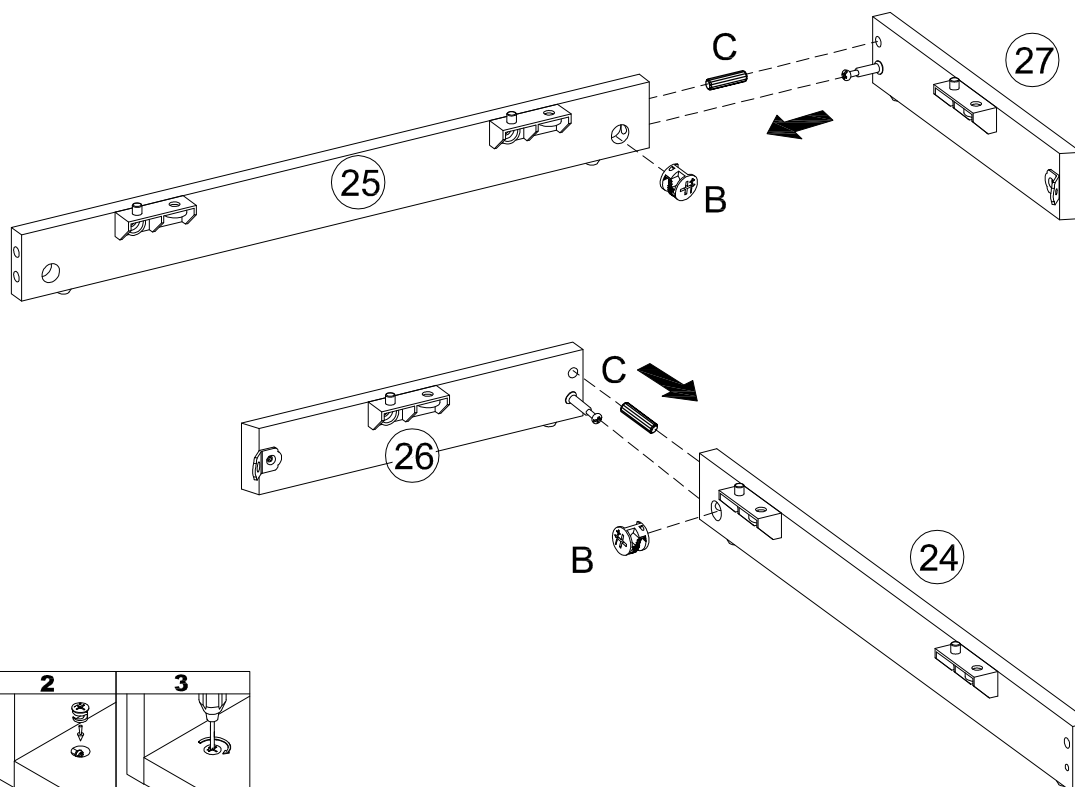



17



(C) x1




(B) x1

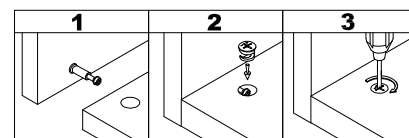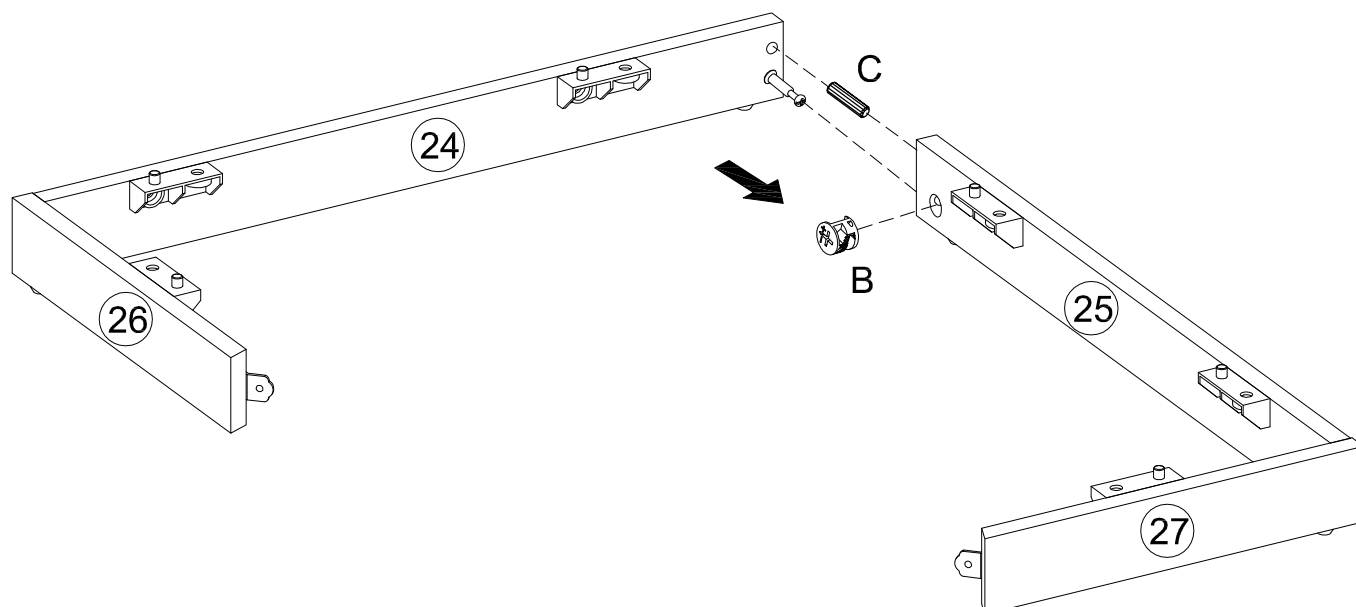

18



U x2

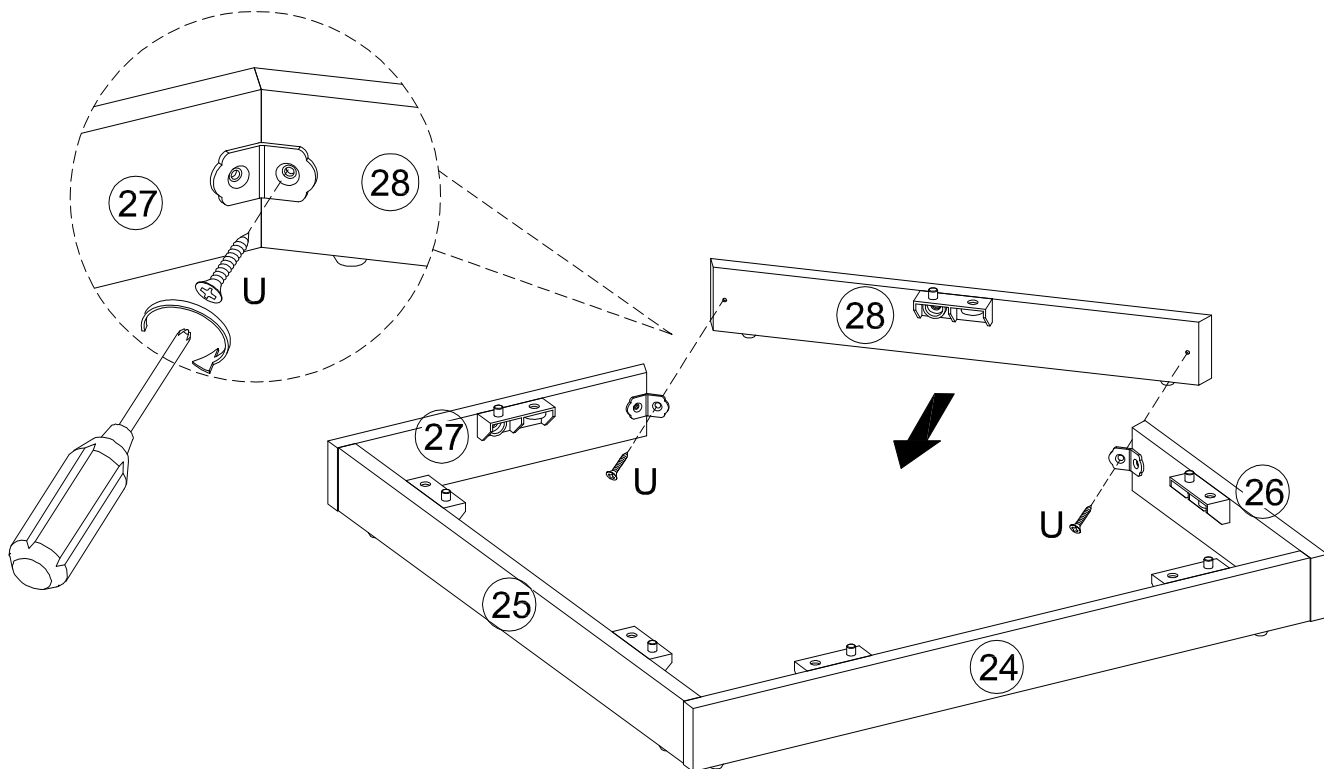



19




I x7



H x1

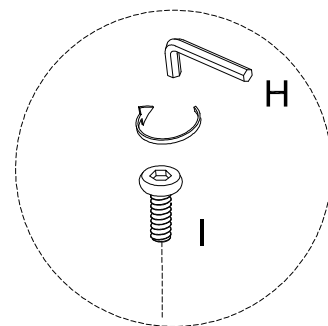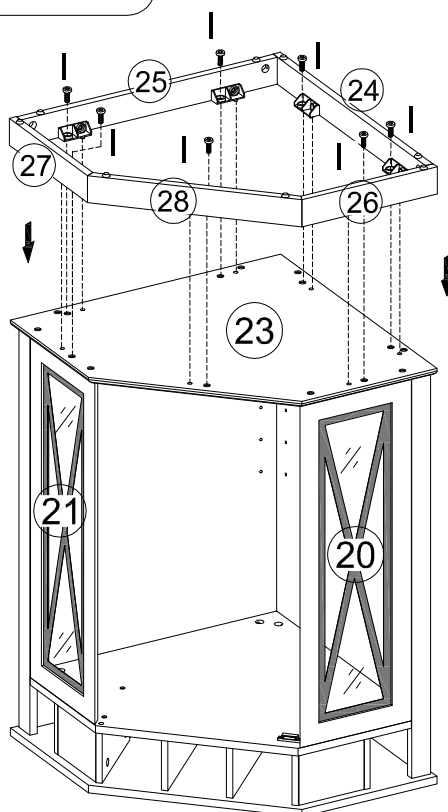




20




19 x1



K x6

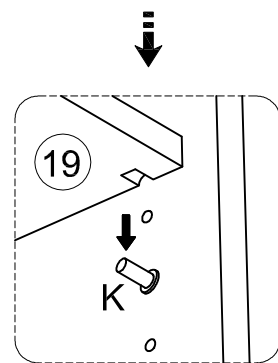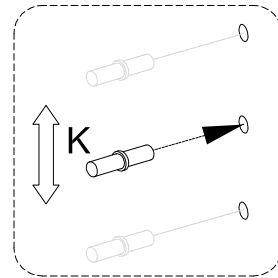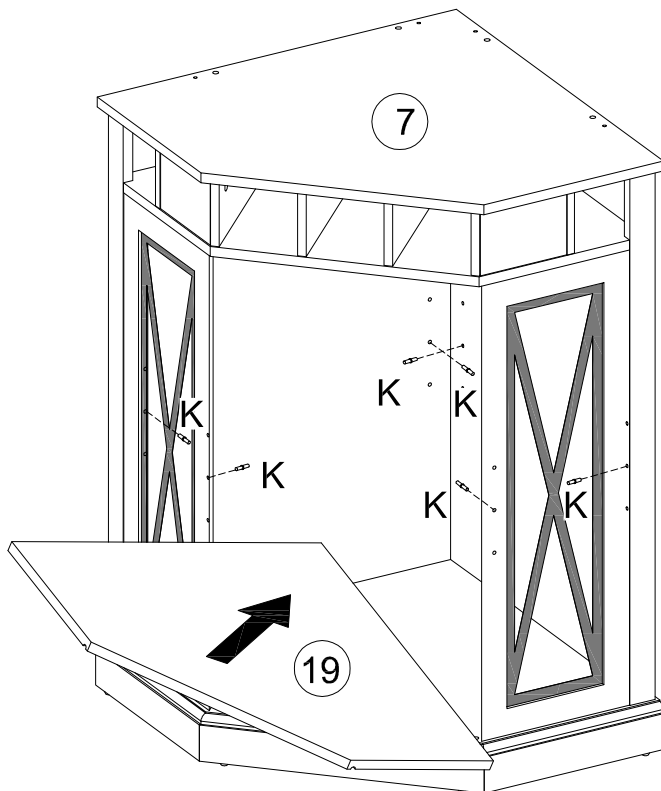

21



22 x1



O x1



Q x3




V x1





W x1





N x1

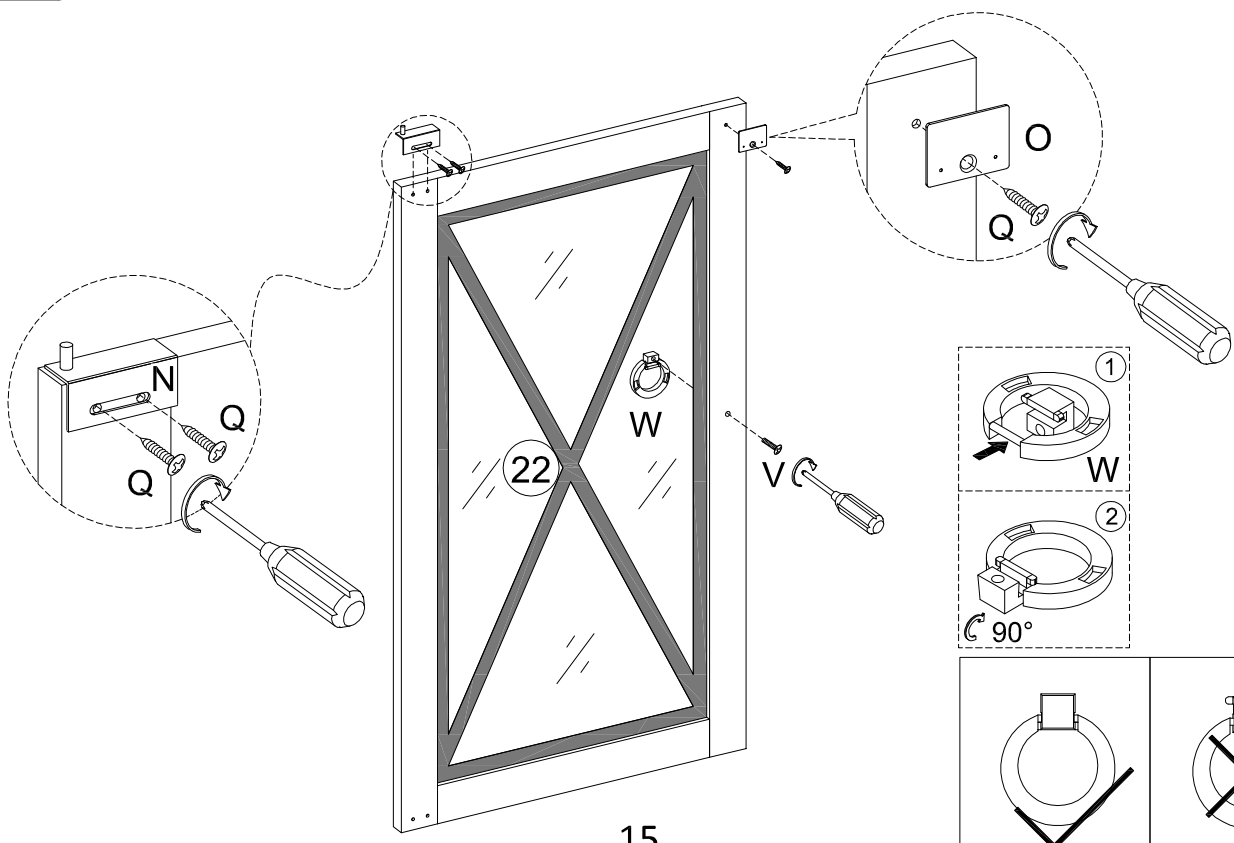




15

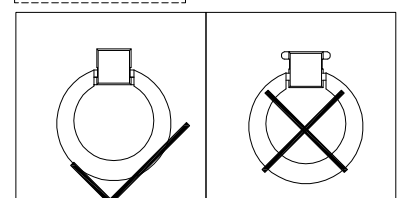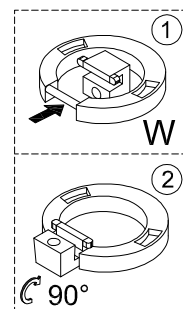


22

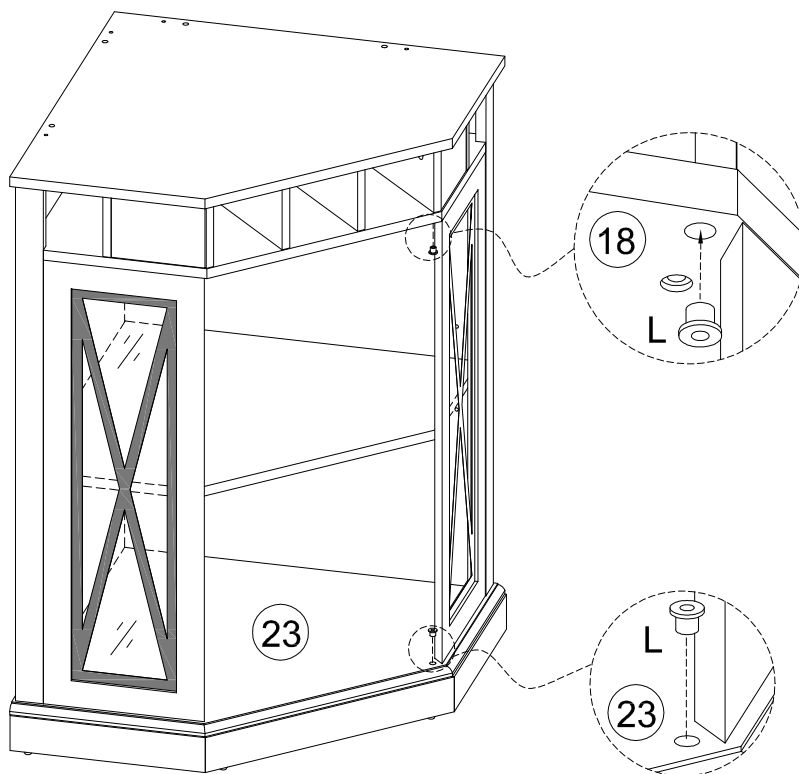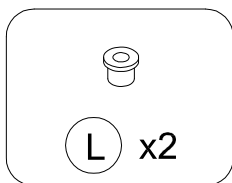


23

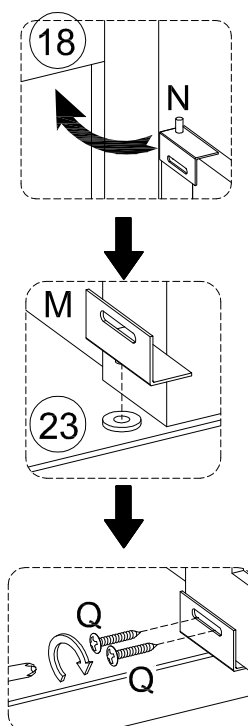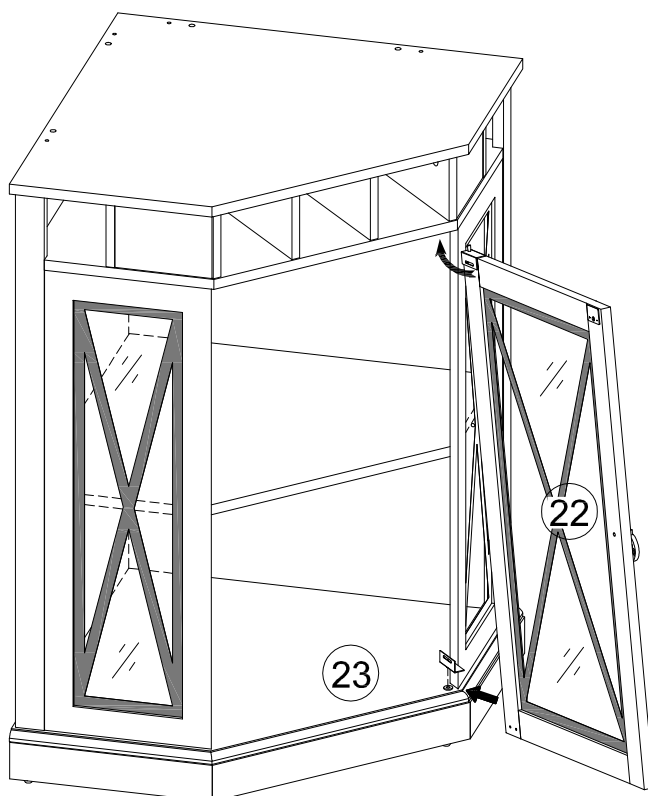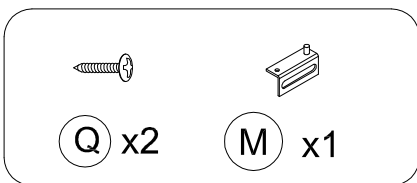


24




A x4

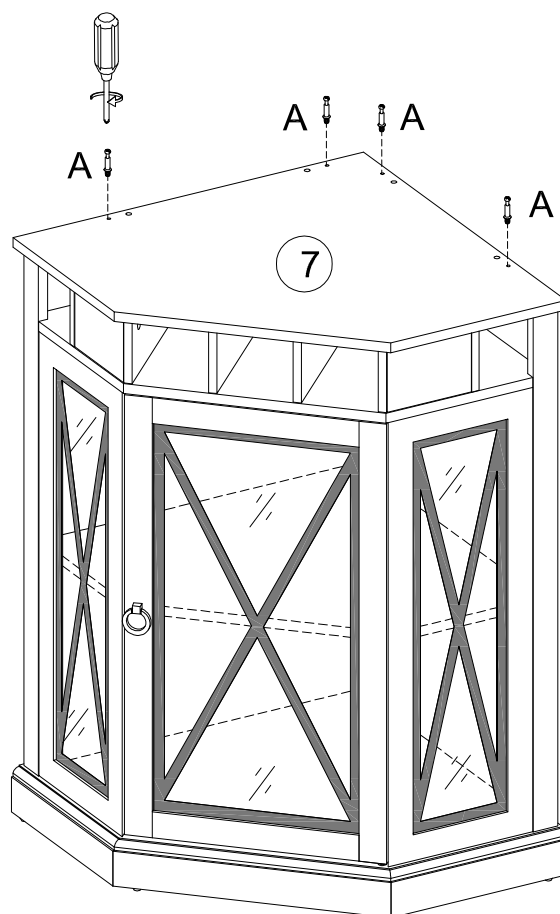

25




2 x1



3 x1




C x2






Z x3





H x1

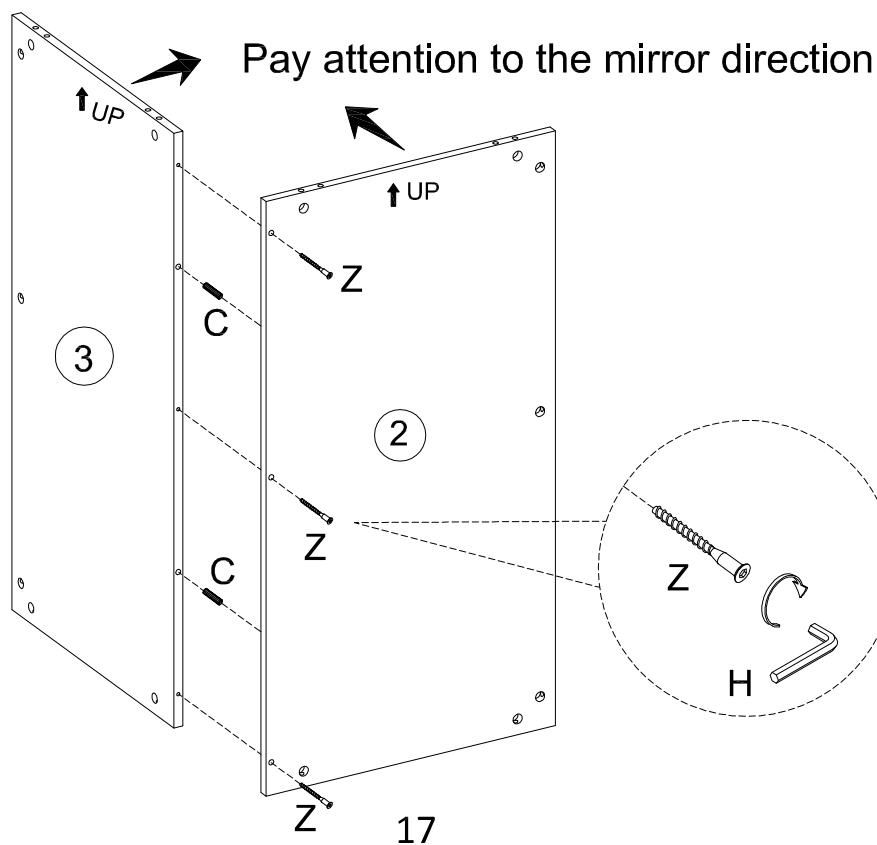

26

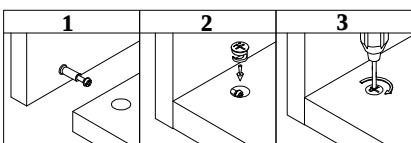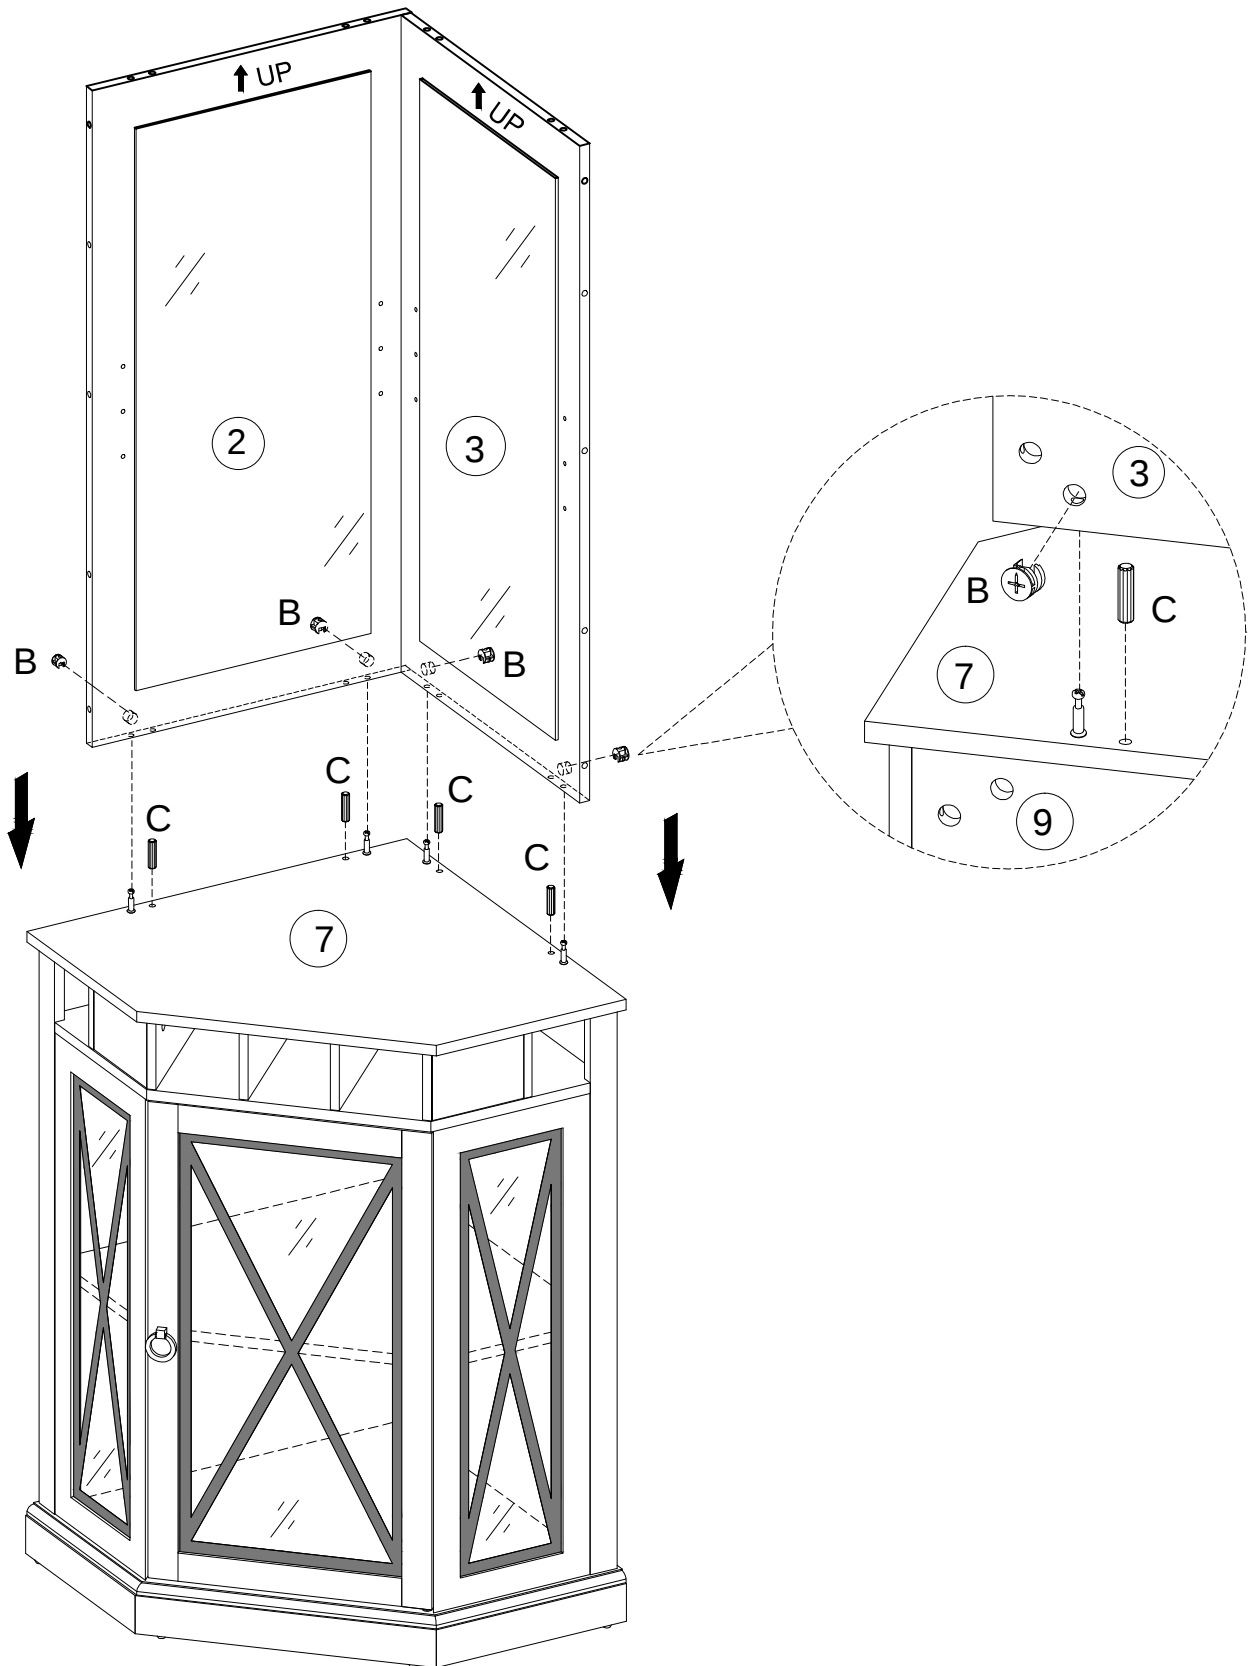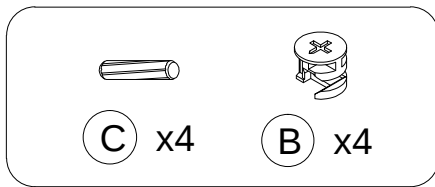





27

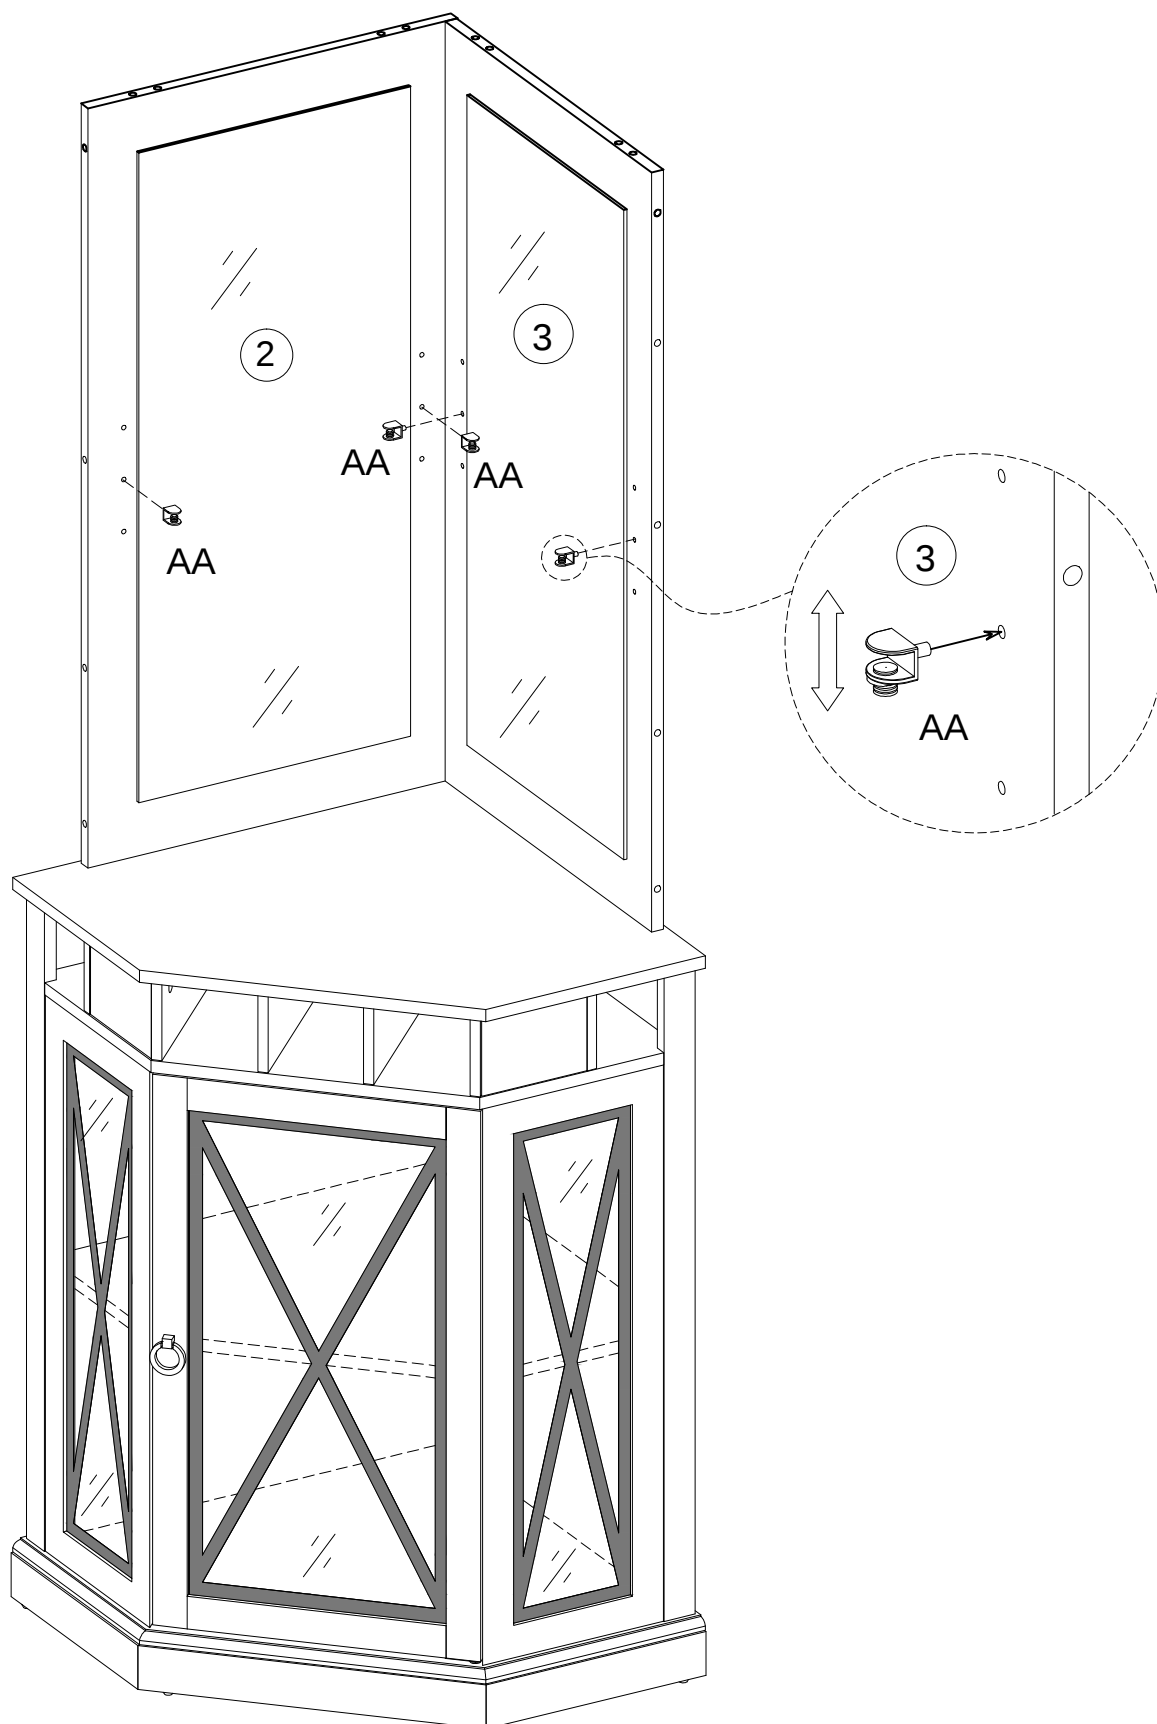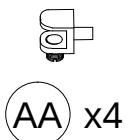

28



6 x1

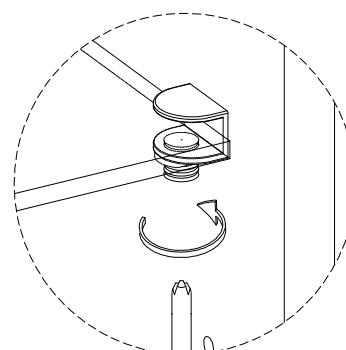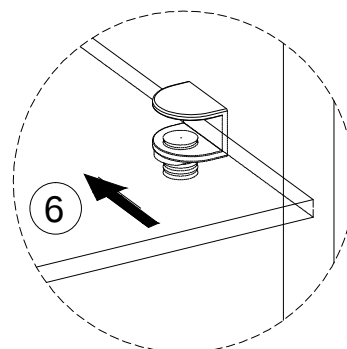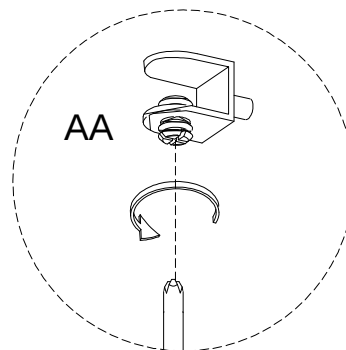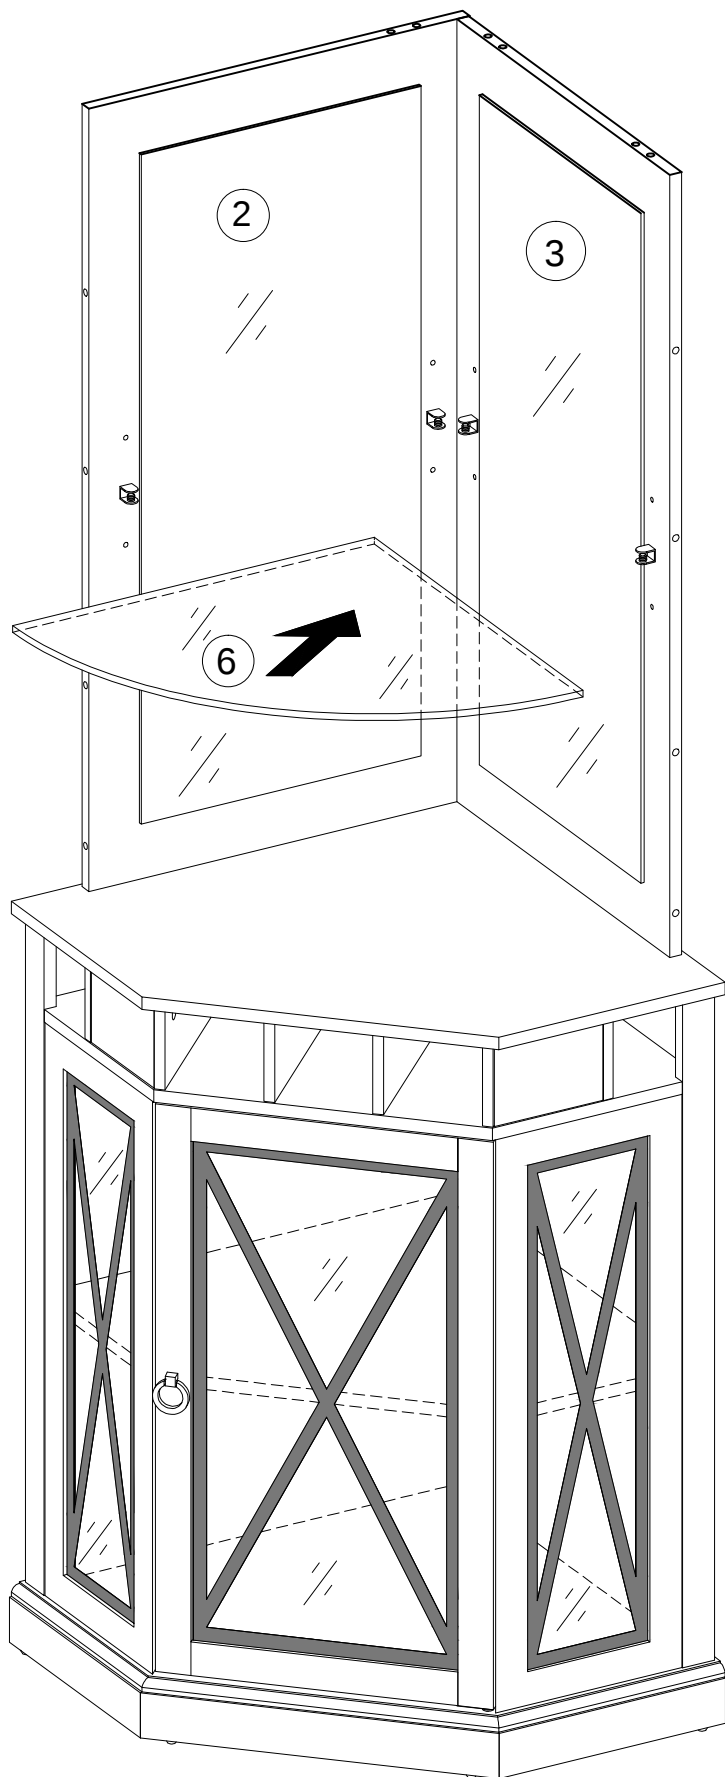

29



④ x1





⑤ x1



③ x4



② x6

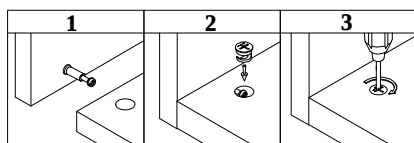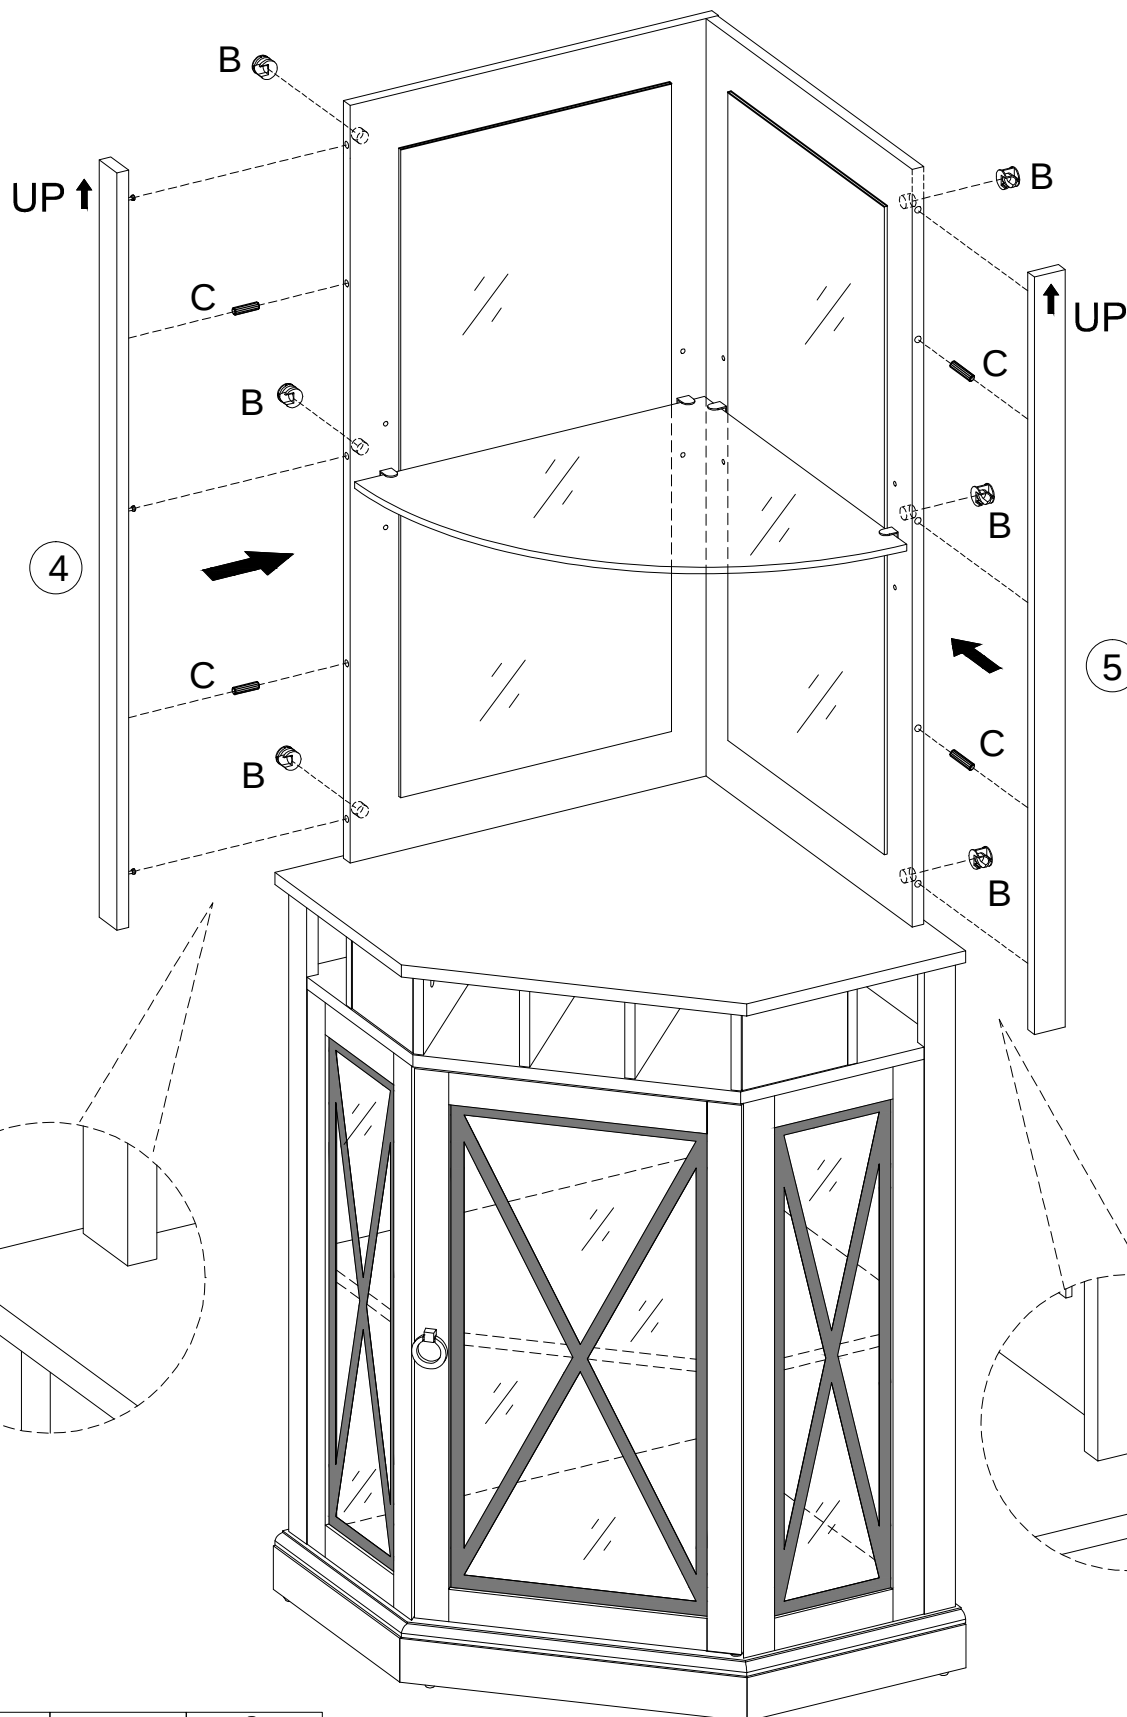

30



① x1





Y x1



R x4




Q x8

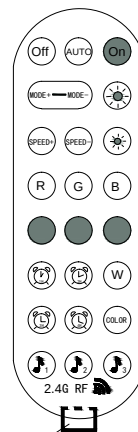
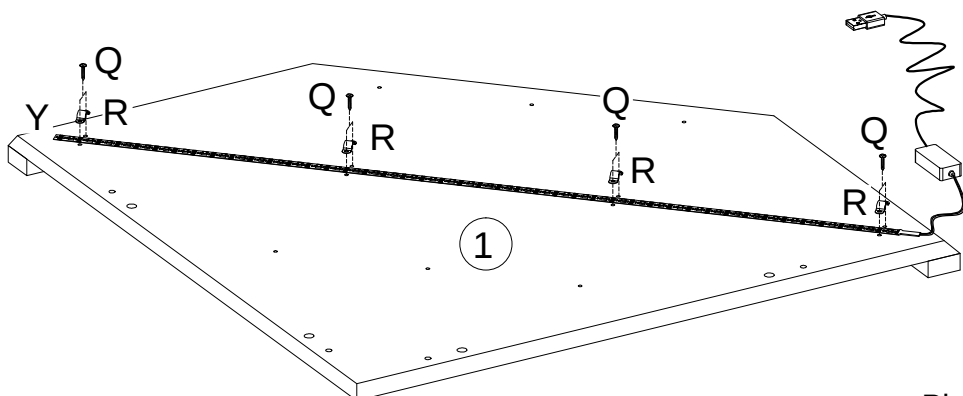


Please remove the plastic film here before using the remote control.

Remove the tape

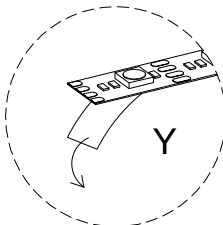

Press

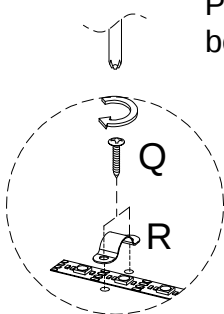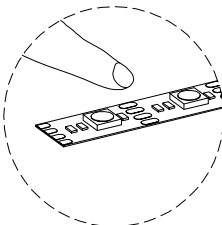



31





⑫ x3







U x6

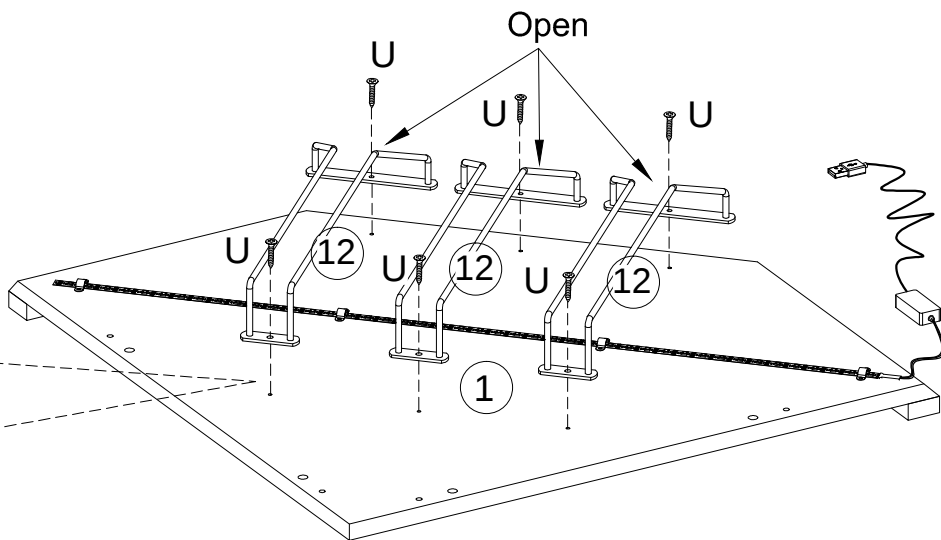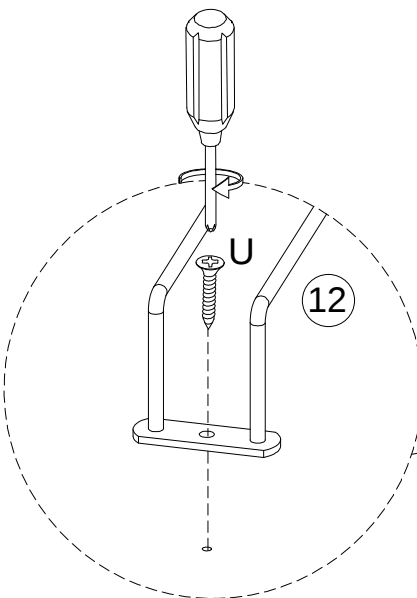

32

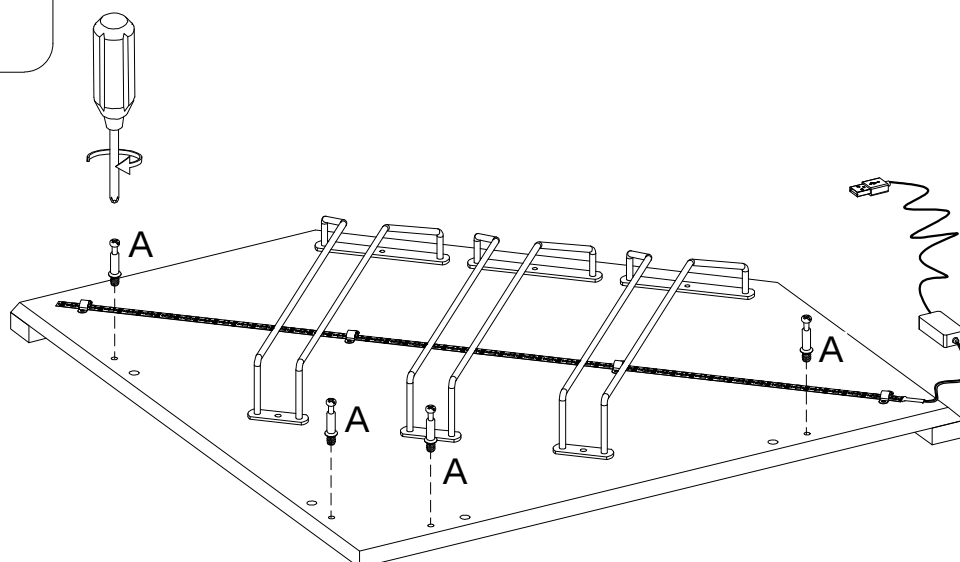
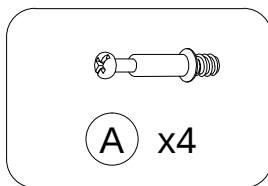


33

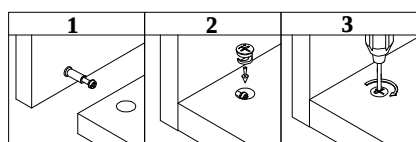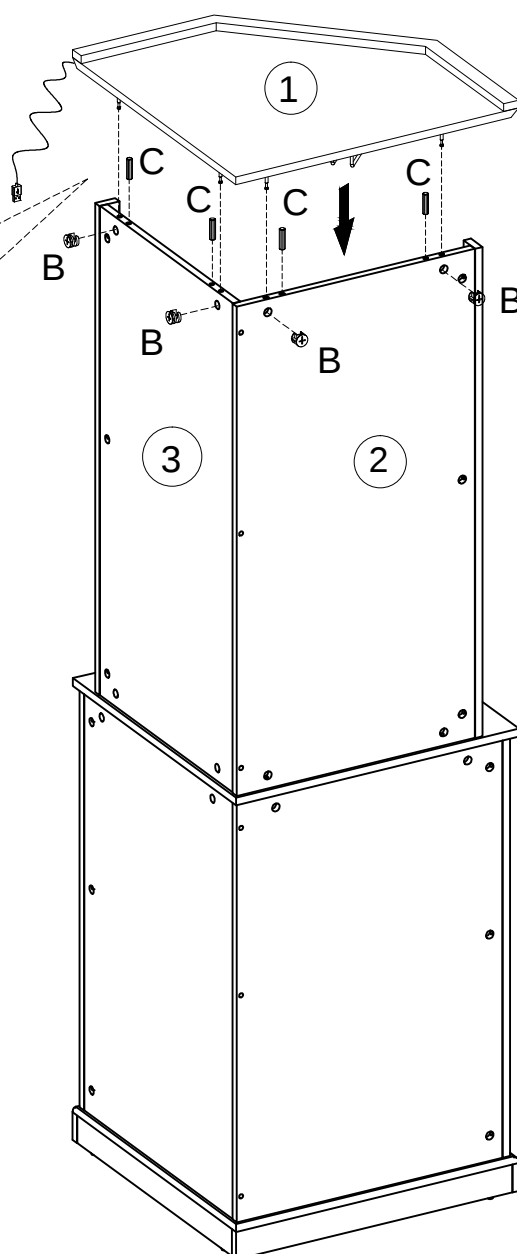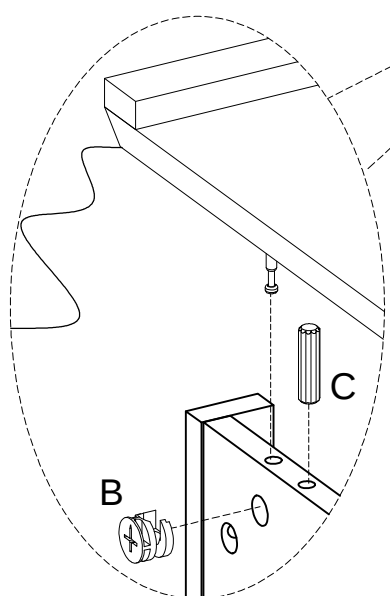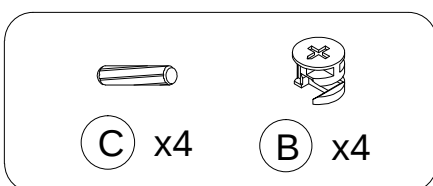

34

○
E x39

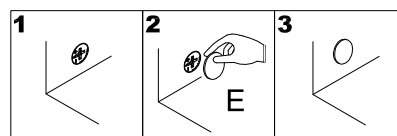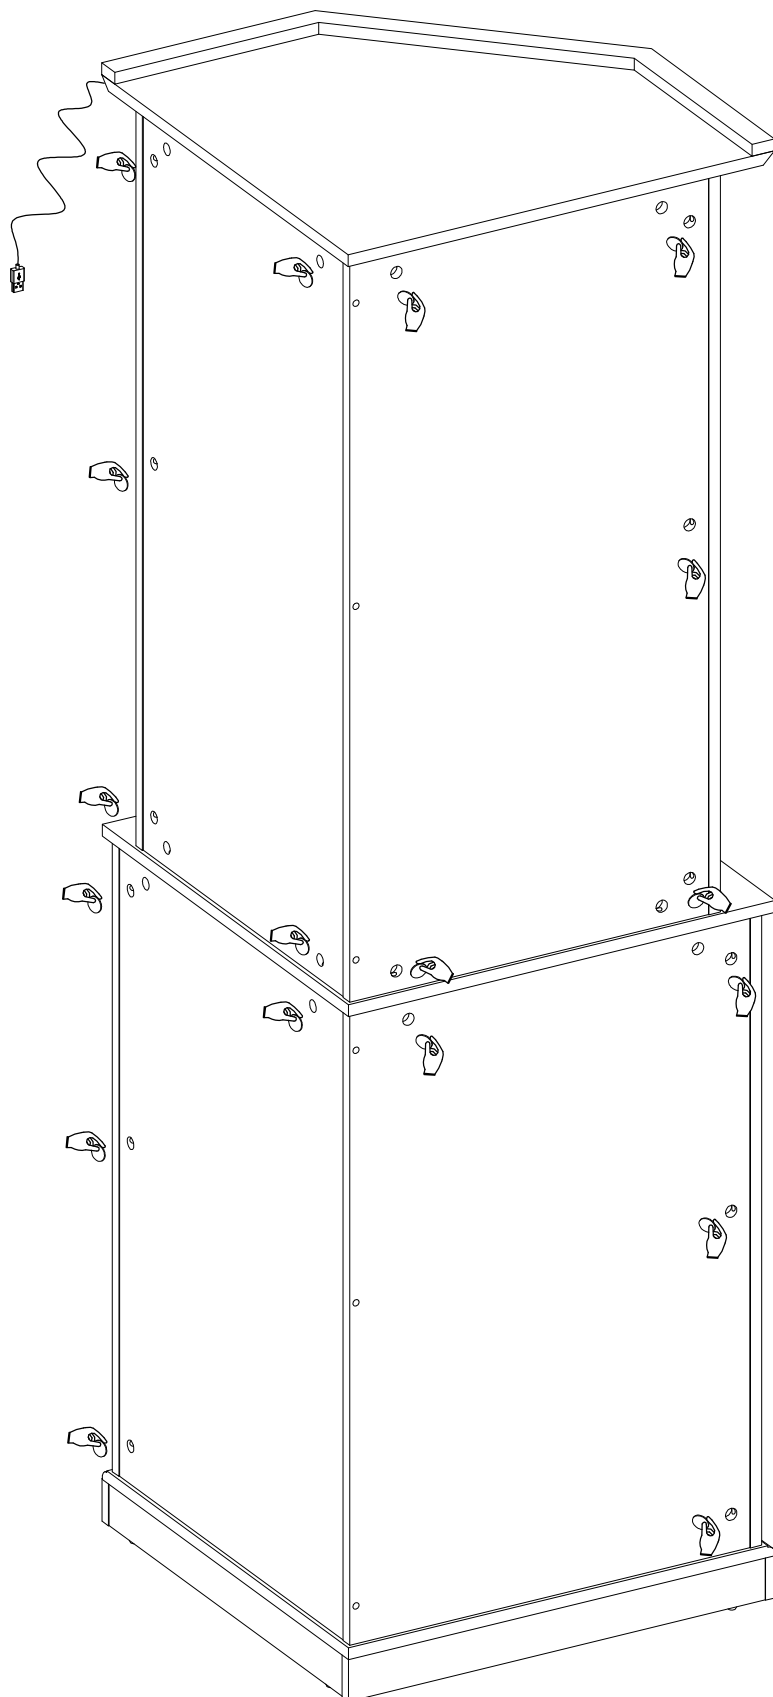

.Stick stickers (E) on cam locks (B)/(G).

35




CC x2

WARNING

You must install the tip restraint hardware to help prevent any accidents or damage to the unit. We strongly recommend attaching the tip restraint hardware to a wall stud and your unit. For all other wall types, please visit your local hardware store to obtain the proper hardware.




Short Screw

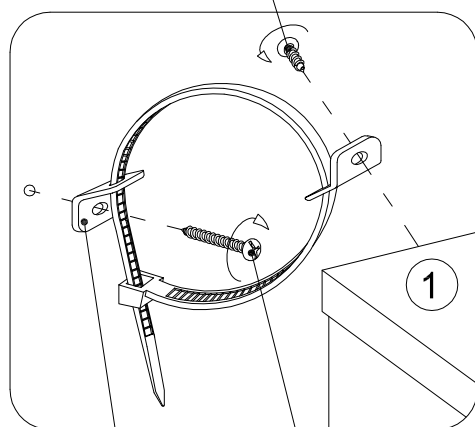

Metal Bracket

Long Screw

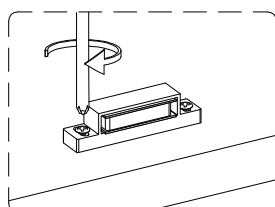

. To adjust depth.

Loosen screws(T) and adjust Magnetic catch(P), then tighten screws(T).

Wooden Stud

Wall

CC

CC

1

Installation Completed