




Installation instruction

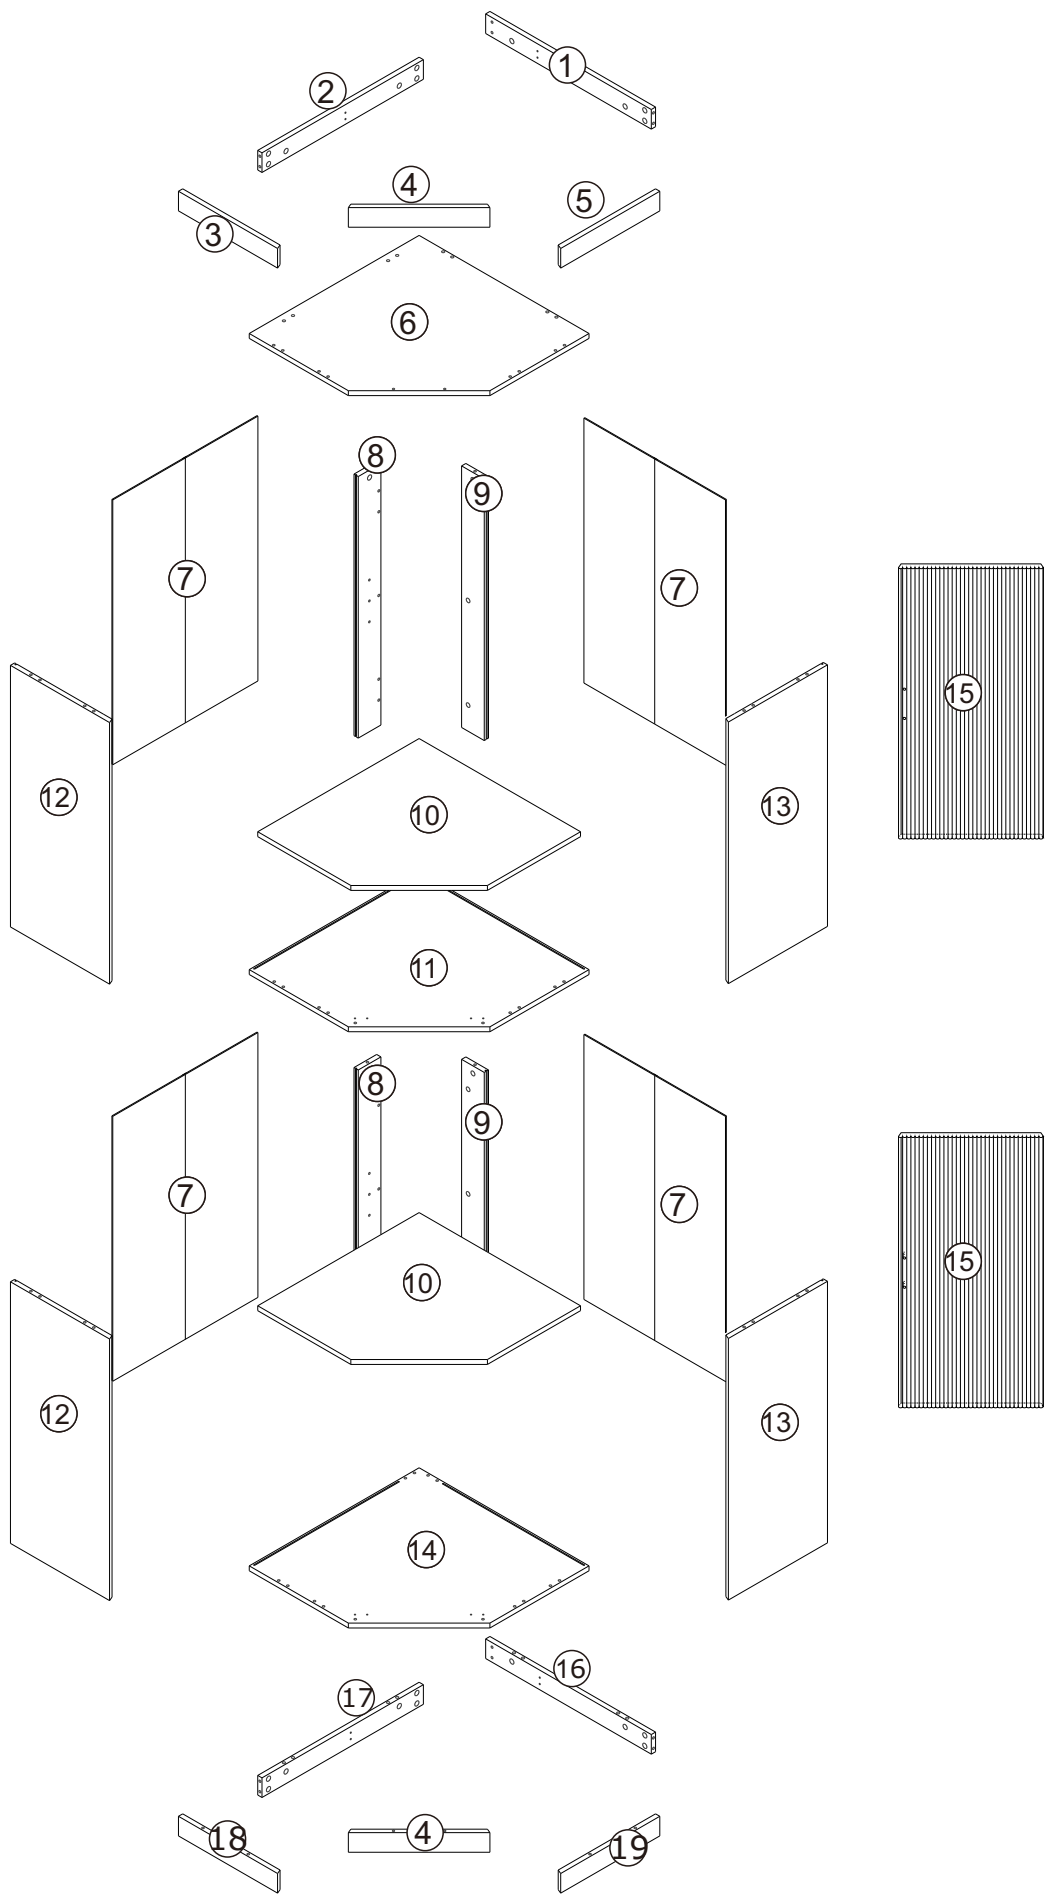


Parts and Operation Elements

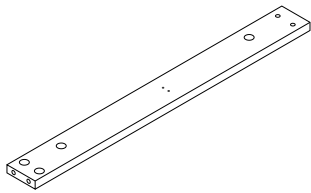


① 1pc

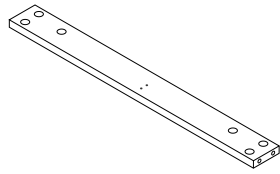


② 1pc

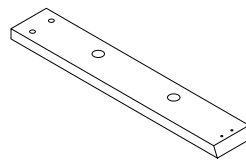


③ 1pc

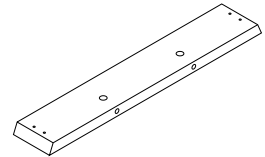


④ 2pcs

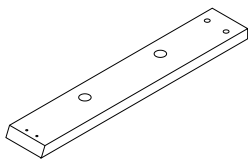


⑤ 1pc

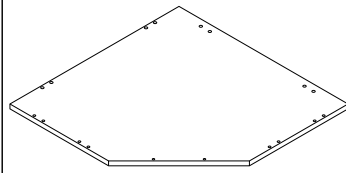


⑥ 1pc

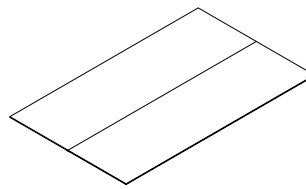


⑦ 4pcs

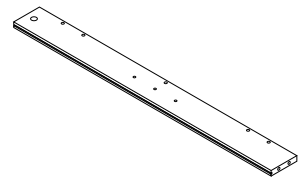


⑧ 2pcs

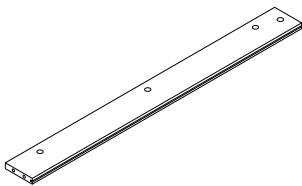


⑨ 2pcs

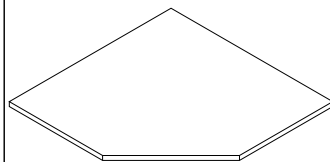


⑩ 2pcs

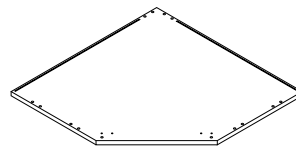


⑪ 1pc

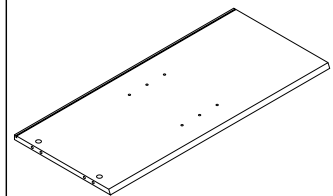


⑫ 2pcs

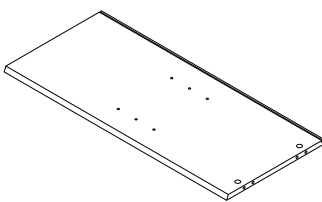


⑬ 2pcs

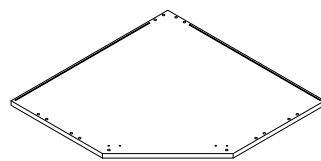


⑭ 1pc

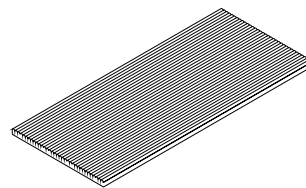


⑮ 2pcs

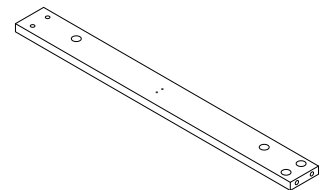


⑯ 1pc

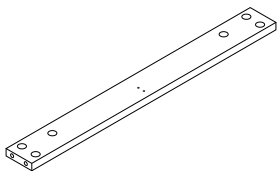

⑰ 1pc

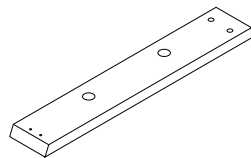

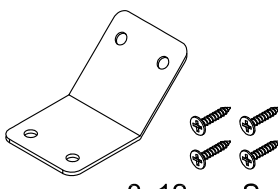

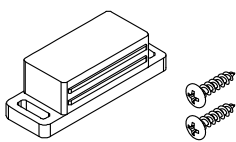


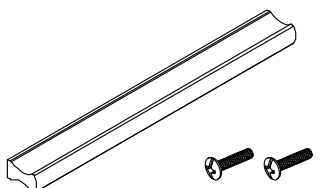

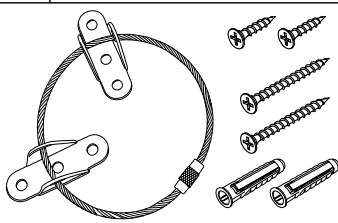




⑱ 1pc

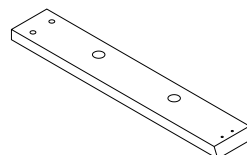

⑲ 1pc




Hardware

							
A	50+2pcs	B	50+2pcs	C	4pcs	D	12+1pcs
							
E	4pcs	F	10pcs	G	4pcs	H	2pcs
							
I	16pcs	J	1pc	K	4pcs	L	32+2pcs







SPARE BAG





THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

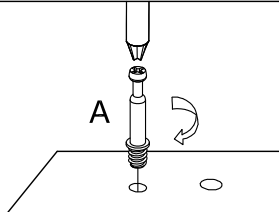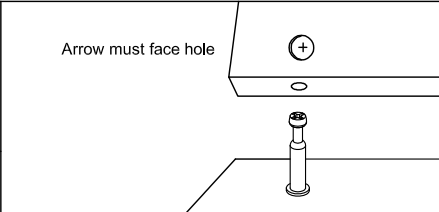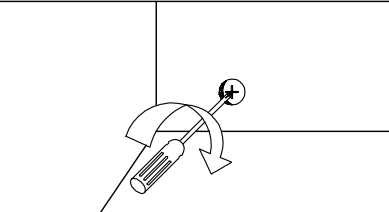		
Gently screw cam bolt into the threaded anchor	Arrow must face hole	Screw the camlock firmly into locked position.


1

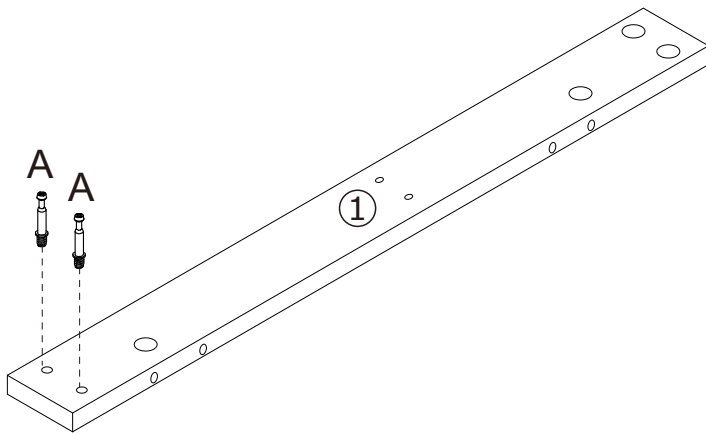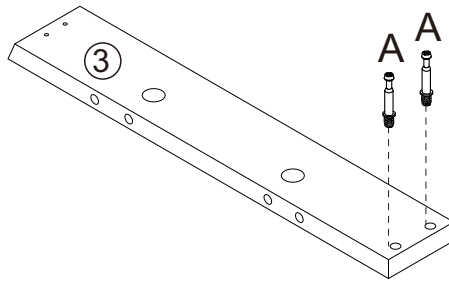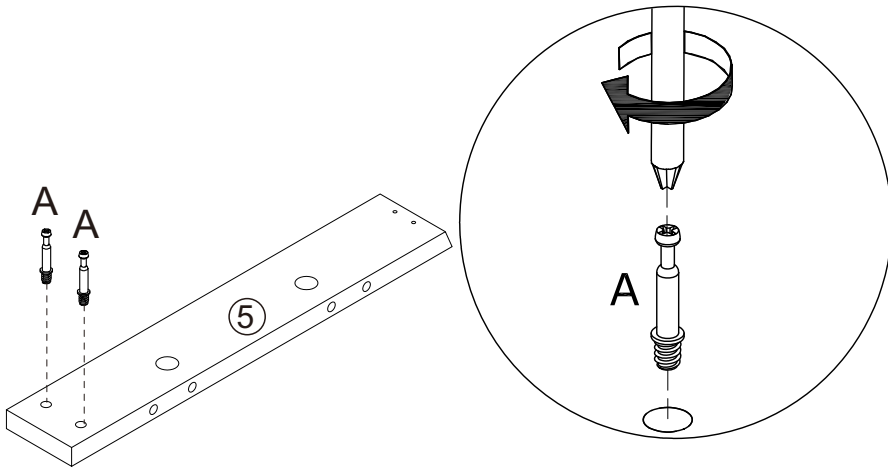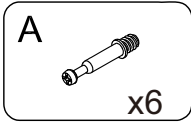

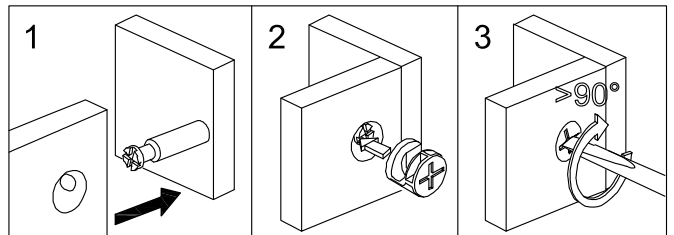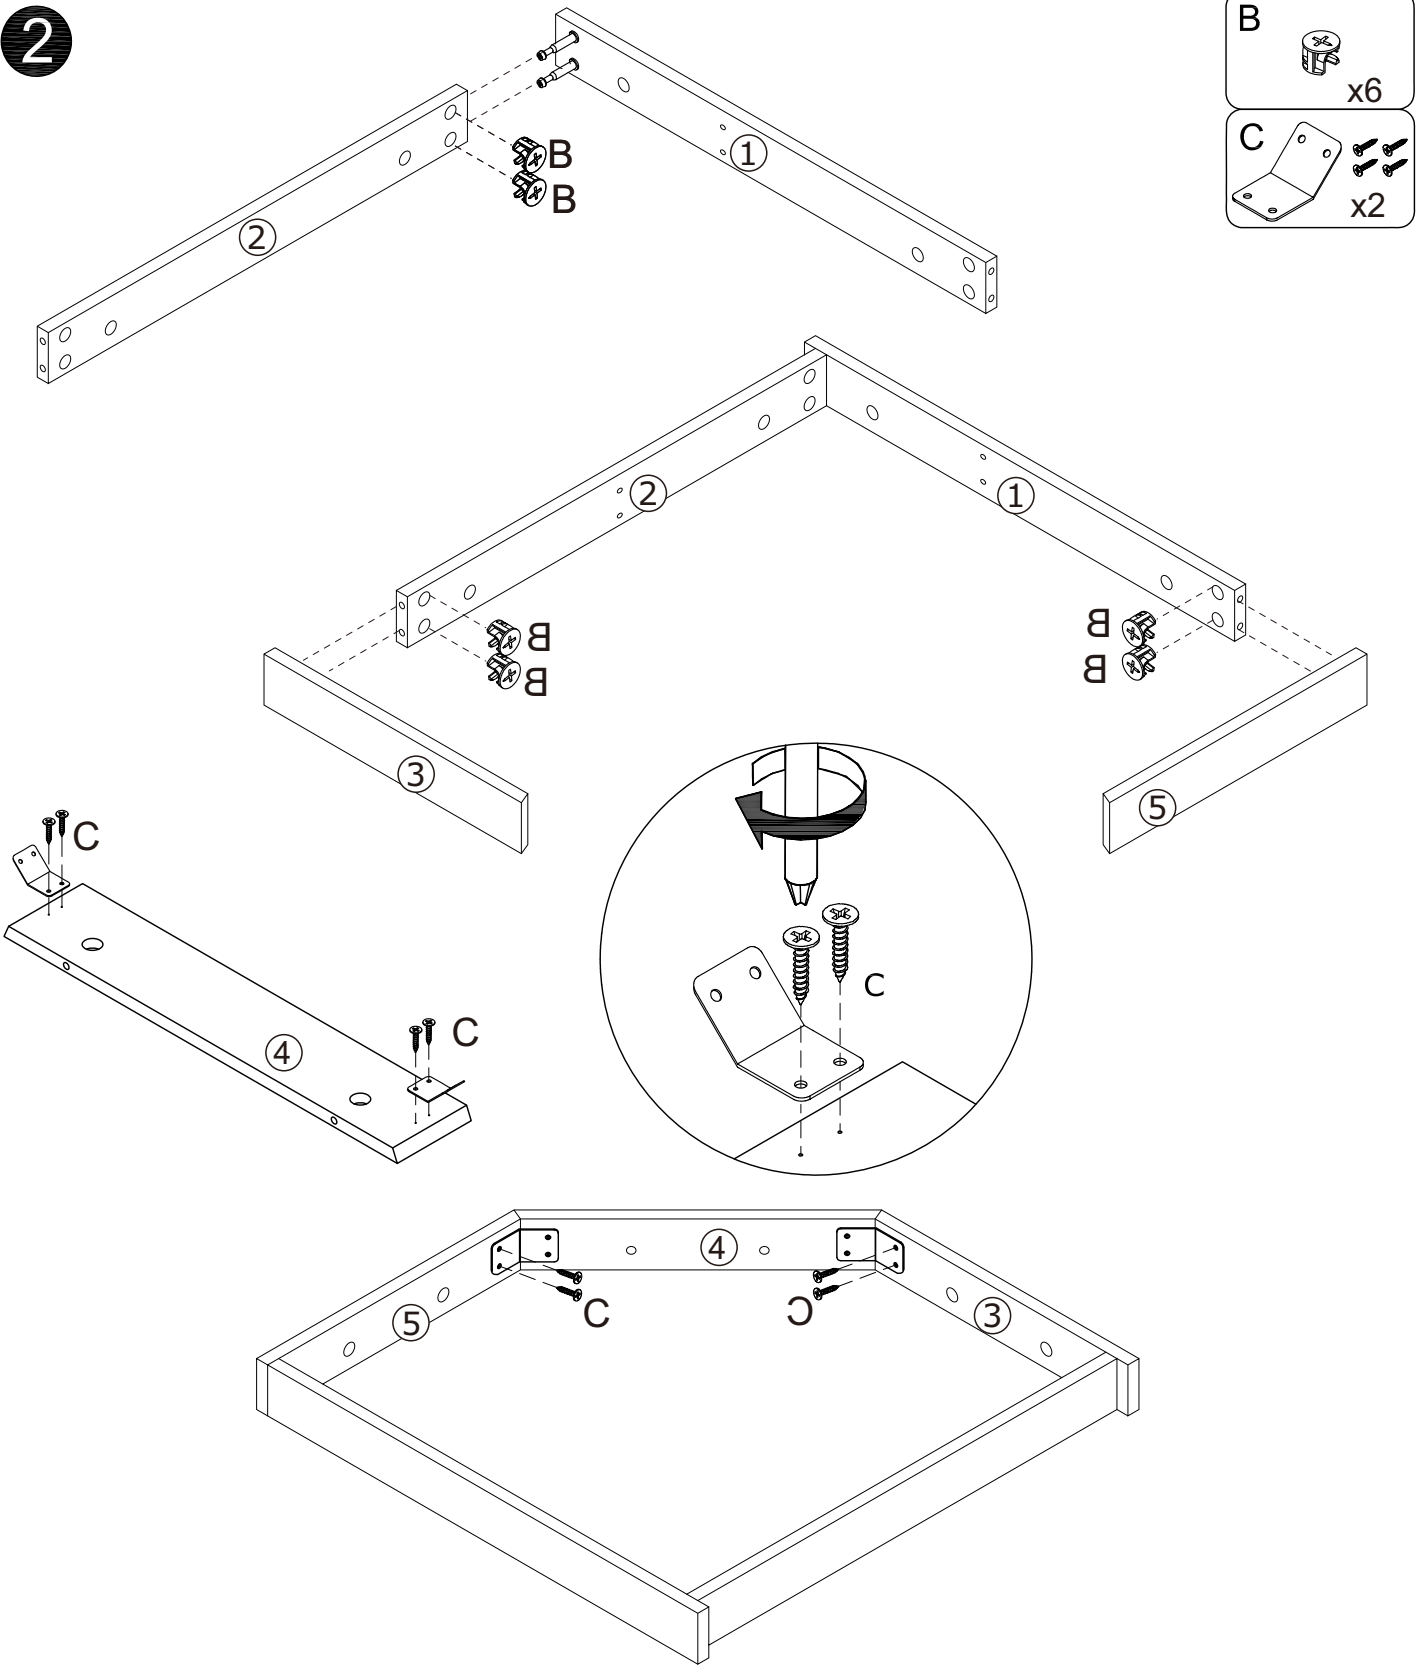


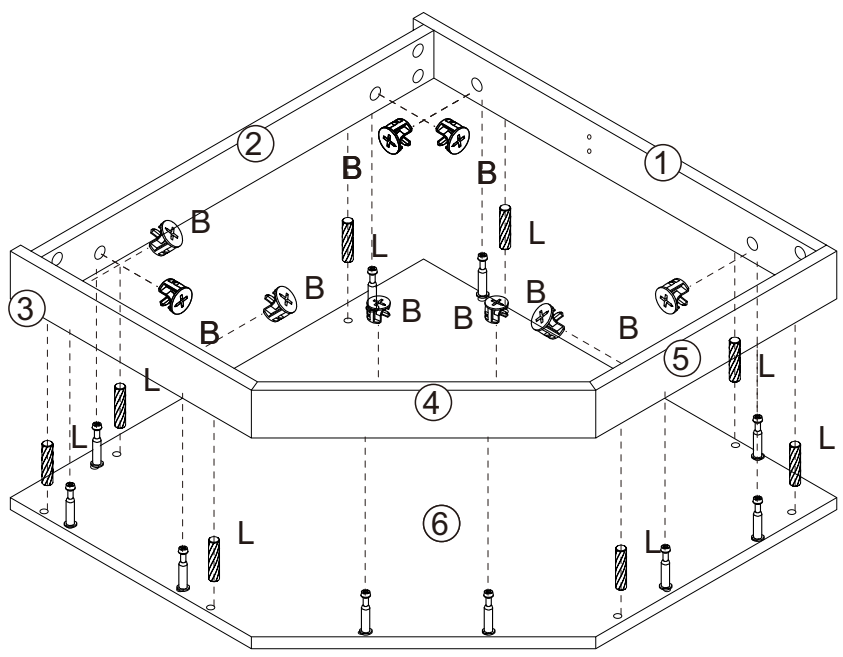
2

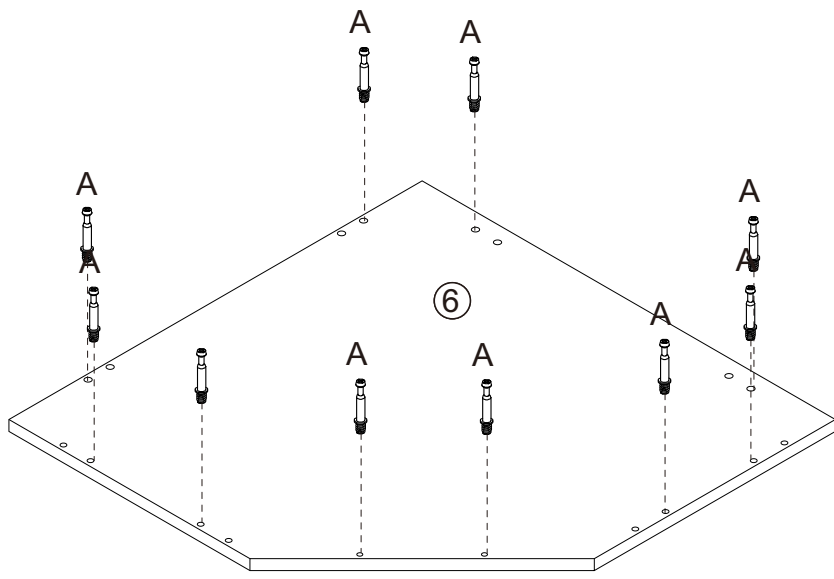


3






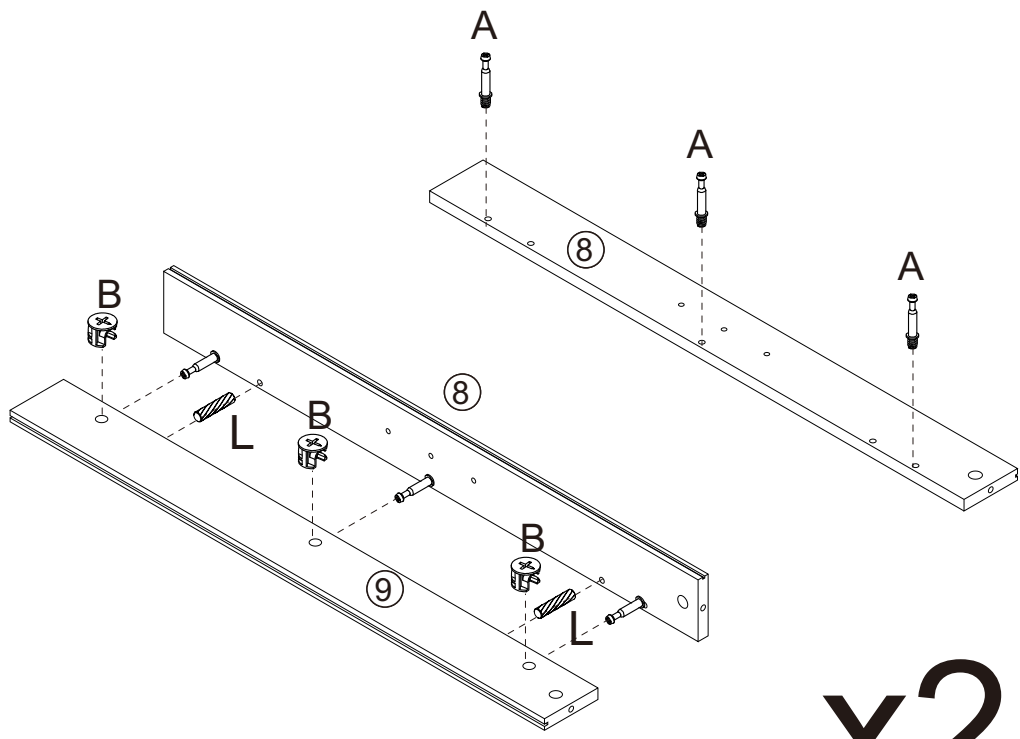
- A  x10
- B  x10
- L  x8

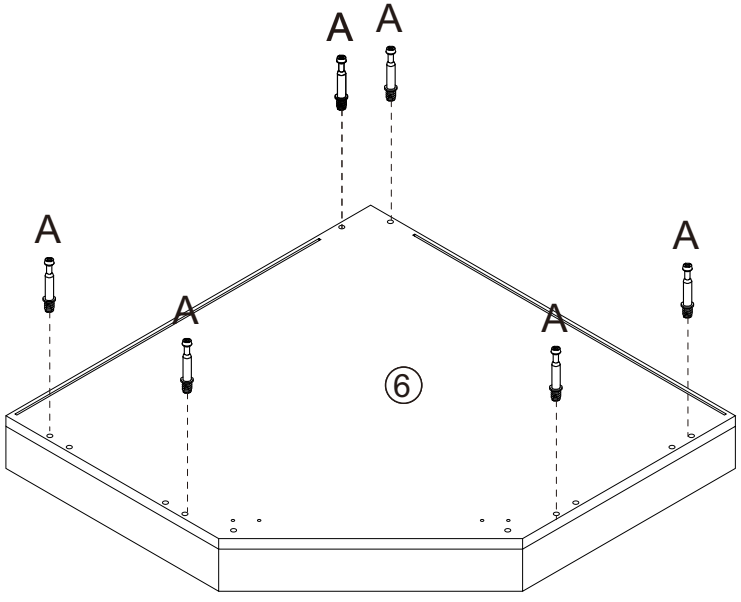

4






- A  x12
- B  x6
- L  x4








x2

5



- B  x6
- L  x4

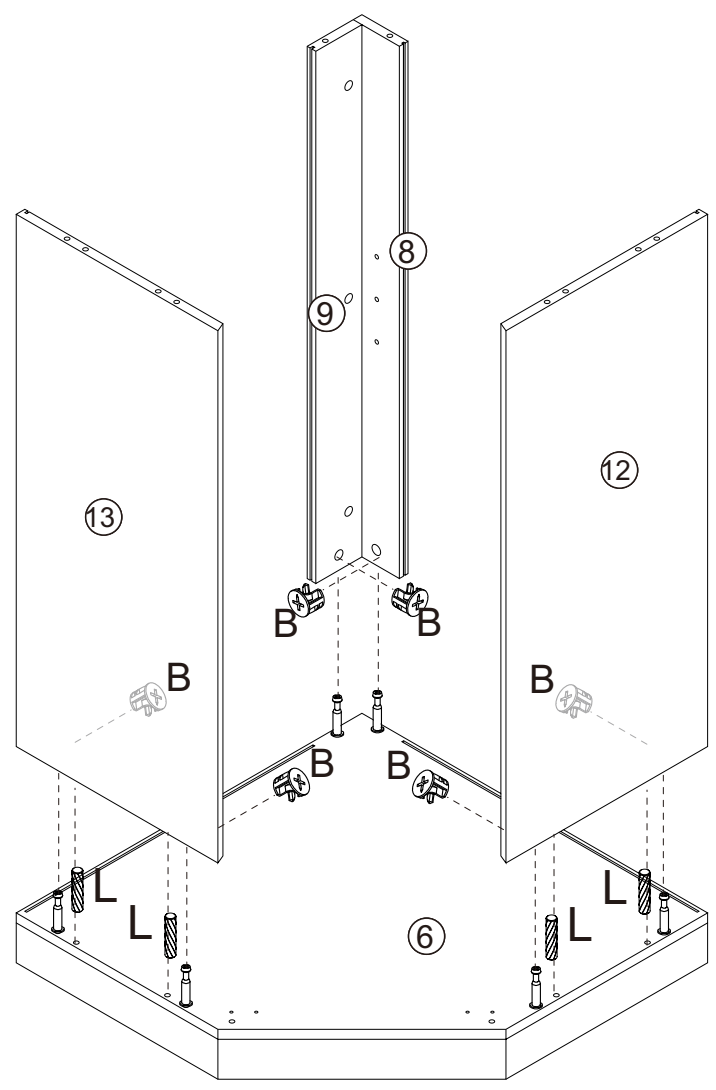

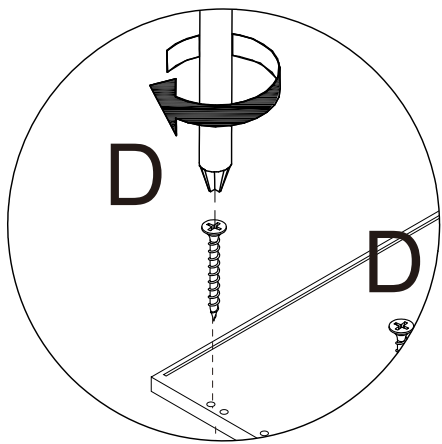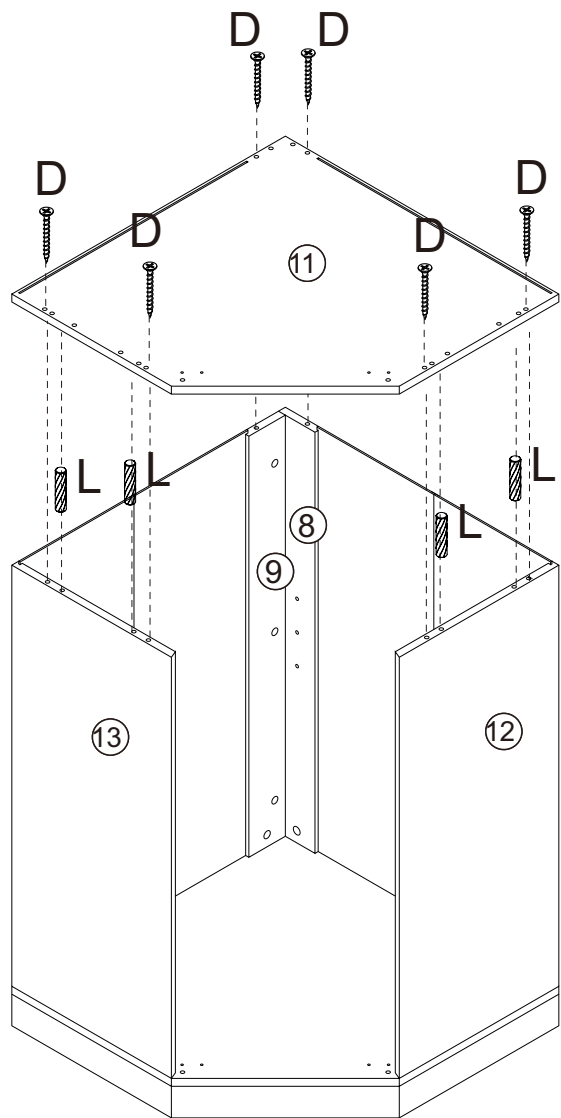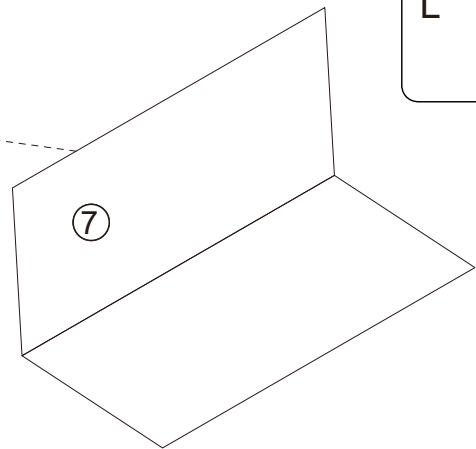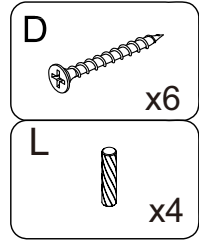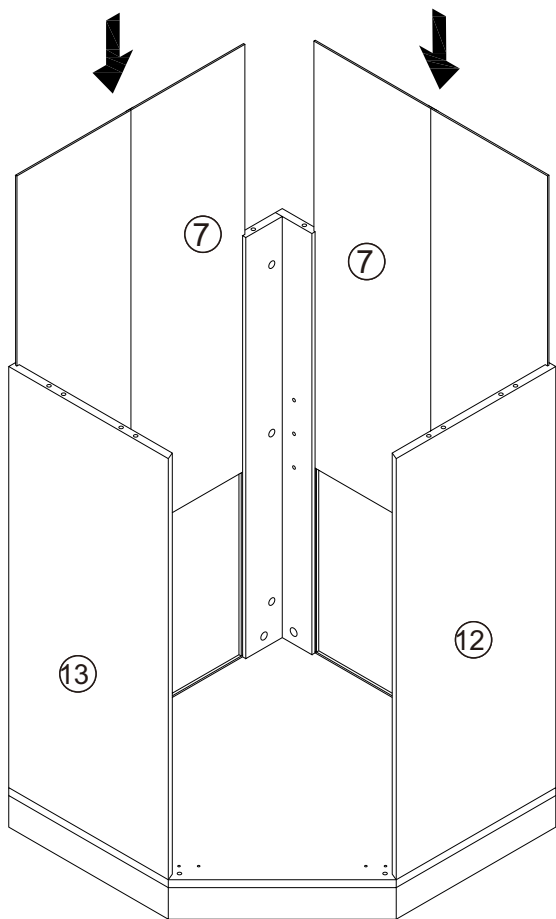


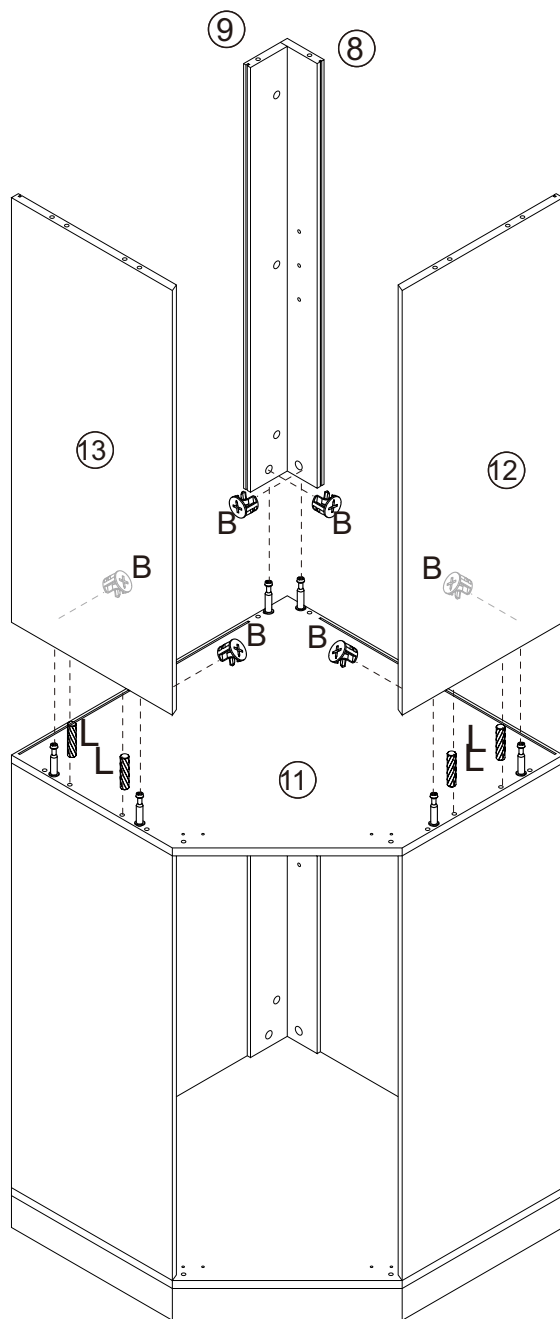
6



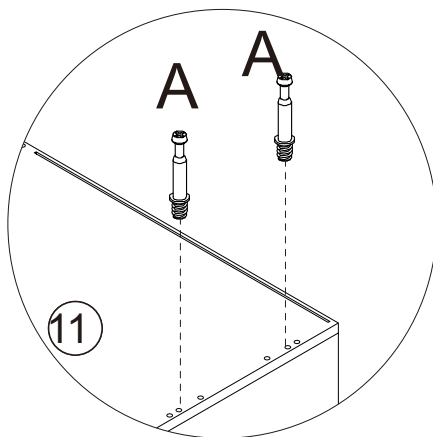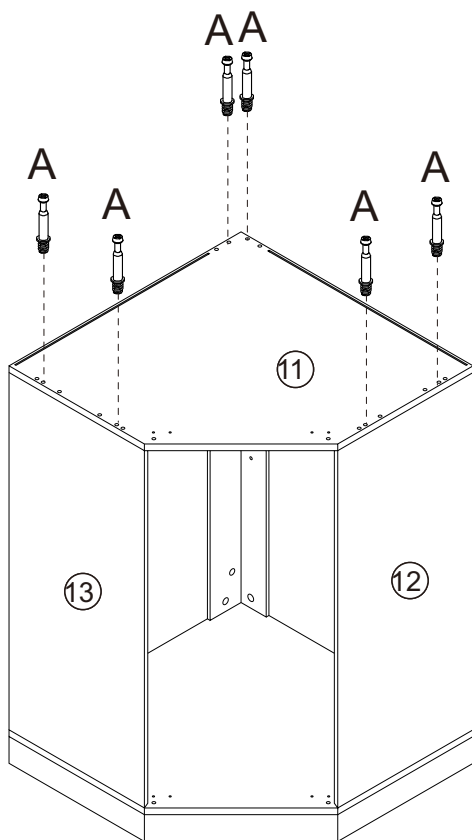

7





- A  x6
- B  x6
- L  x4







8


- D  x6
- L  x4

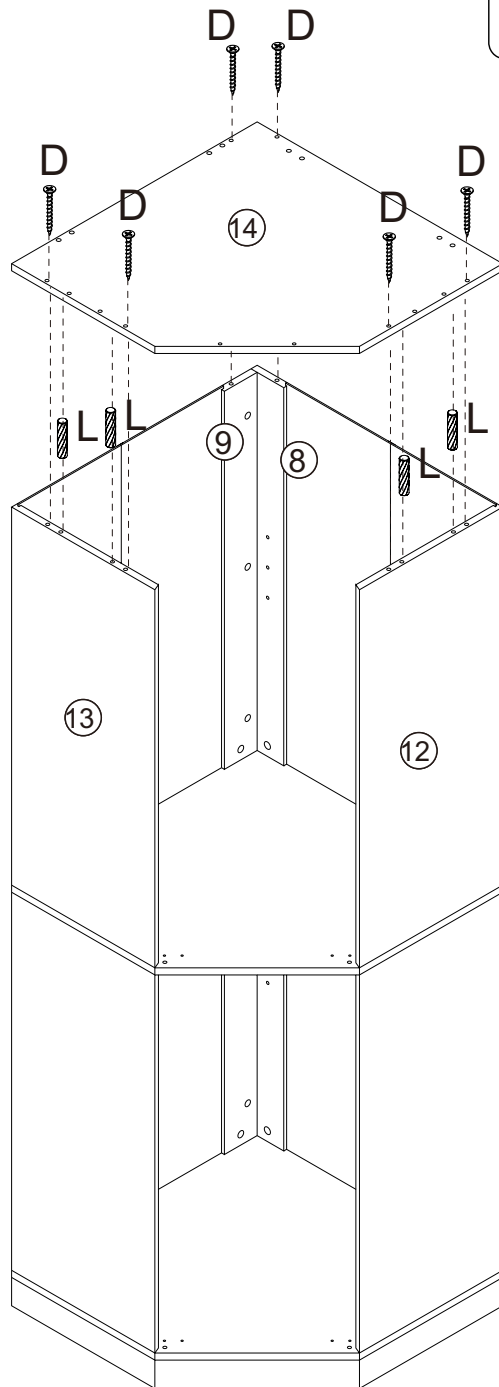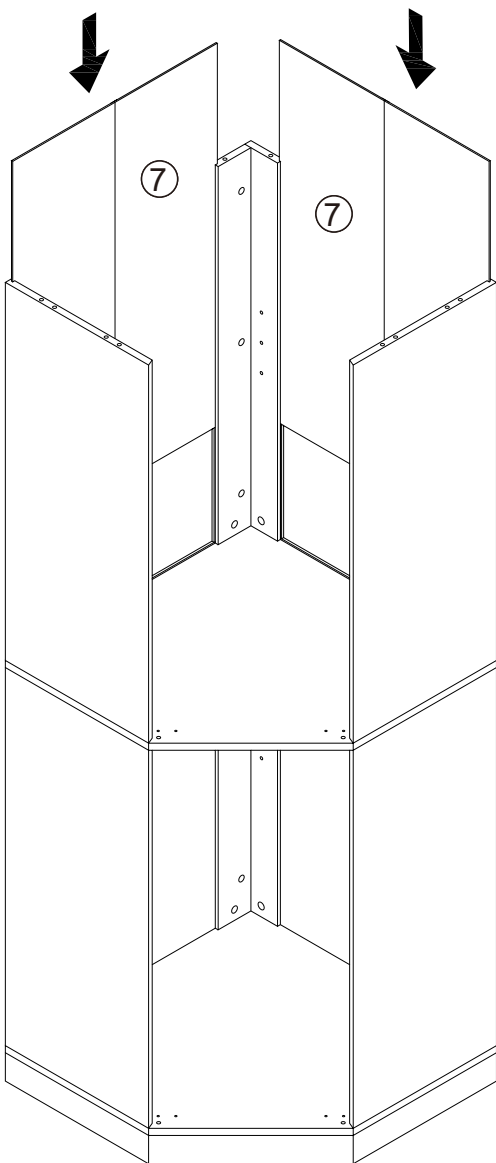



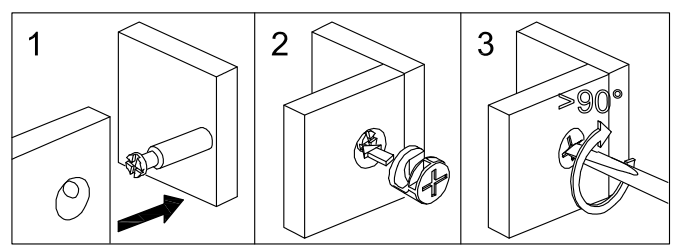
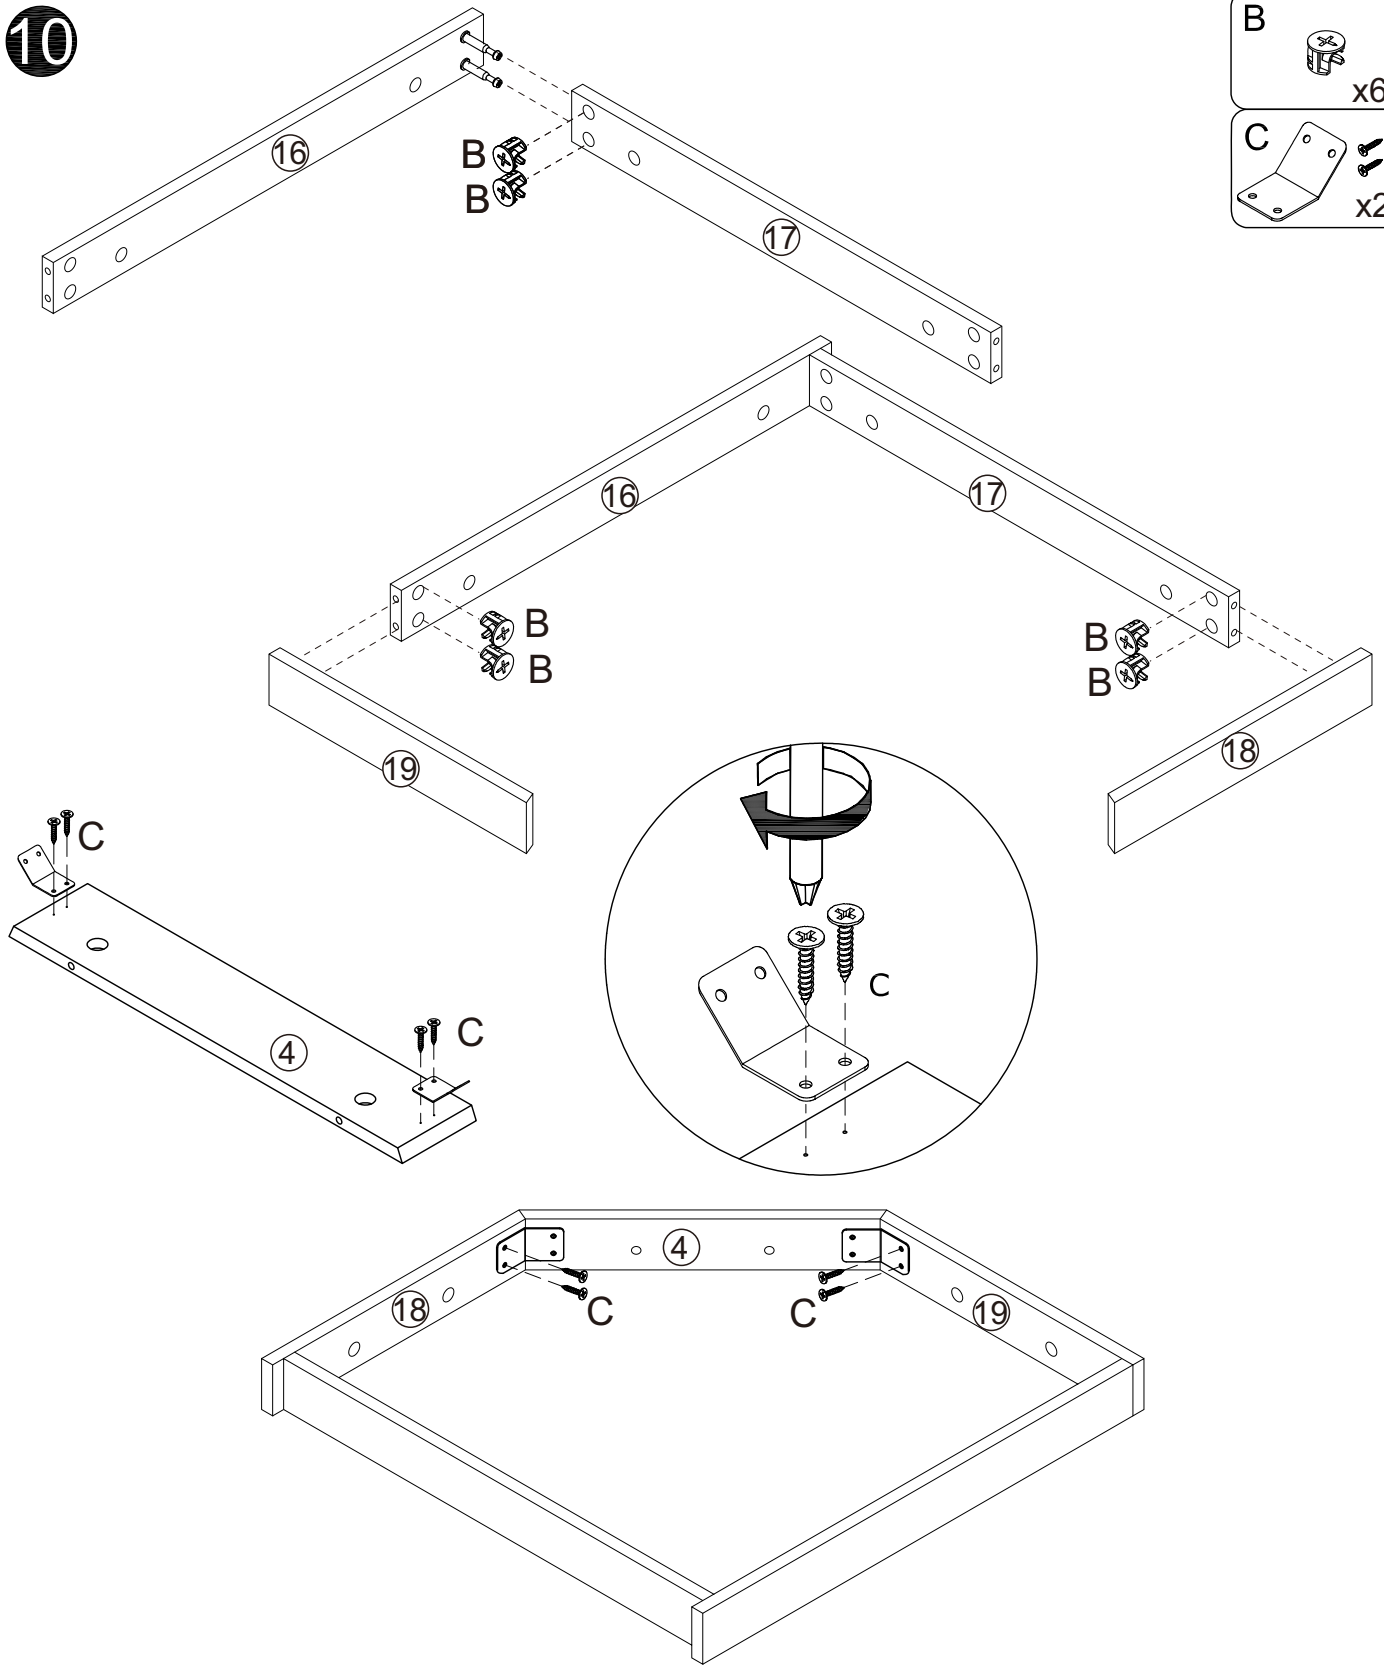
9

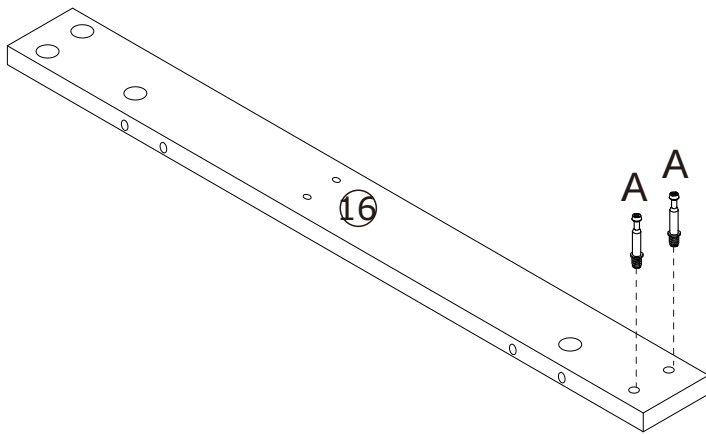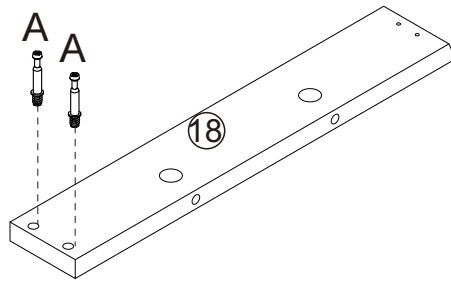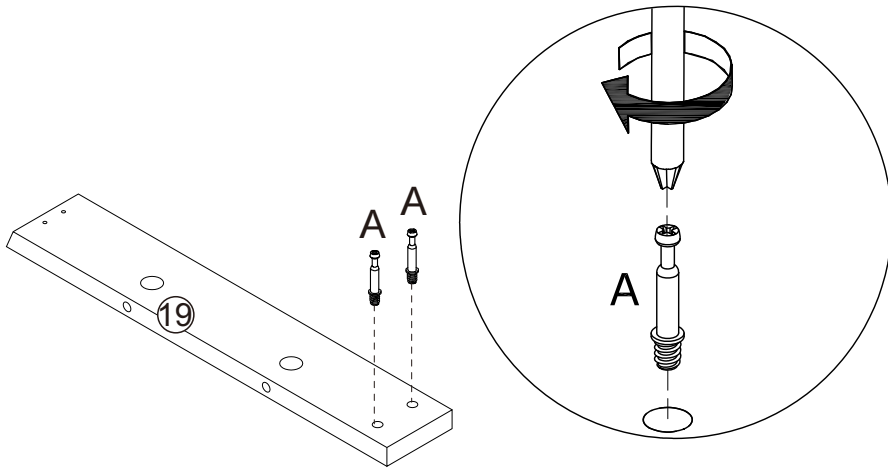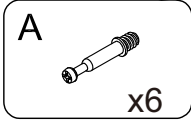




10



B  x6

C   x2



11

- A  x10
- B  x10
- L  x4


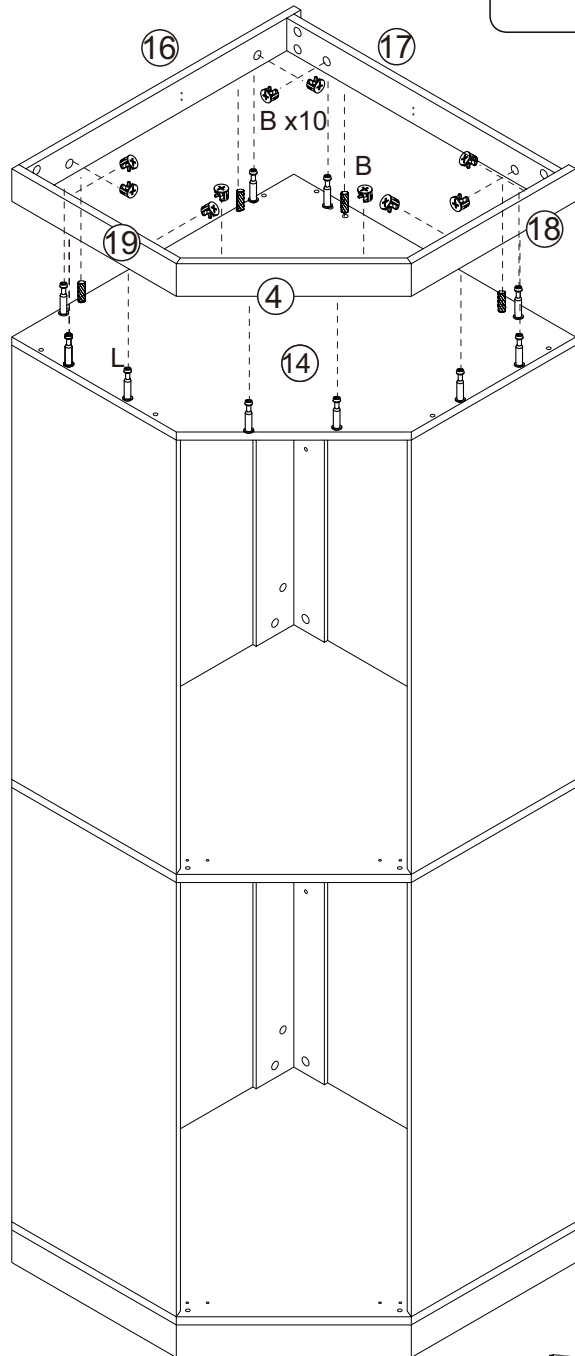
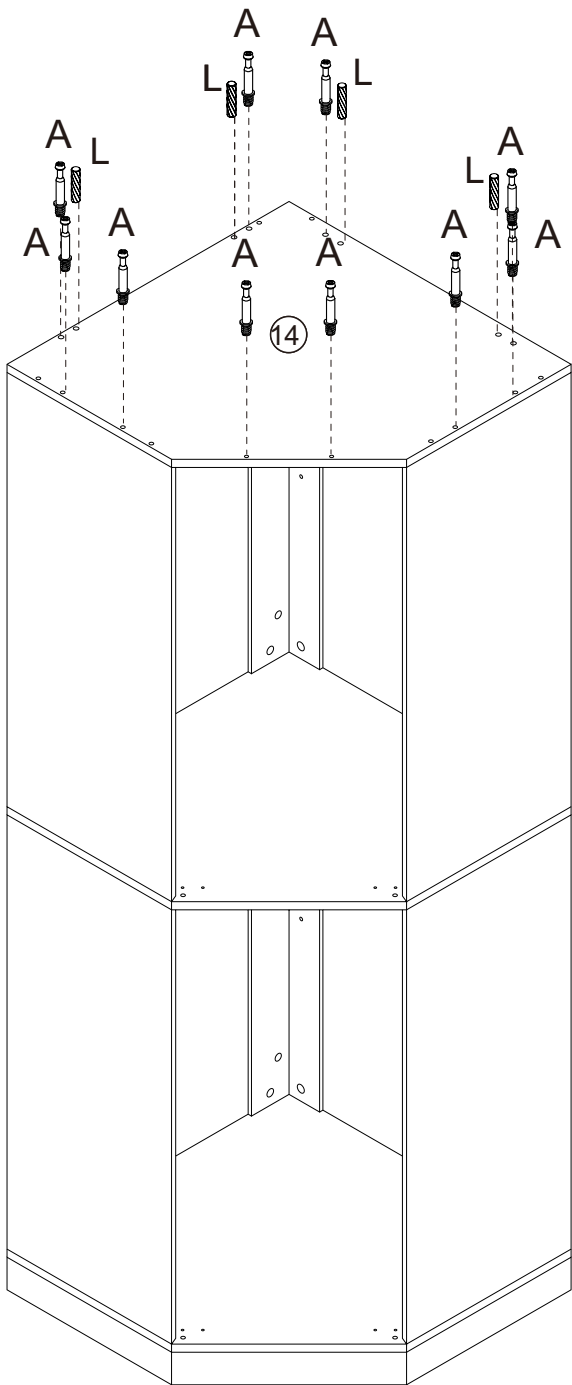


180°







12

F
x10

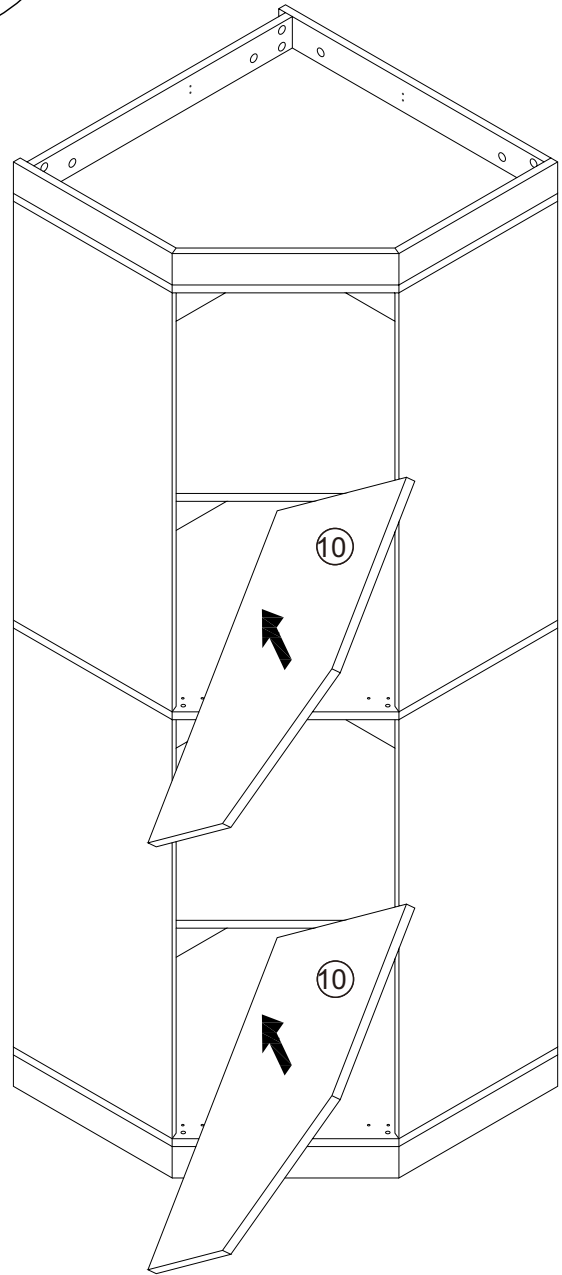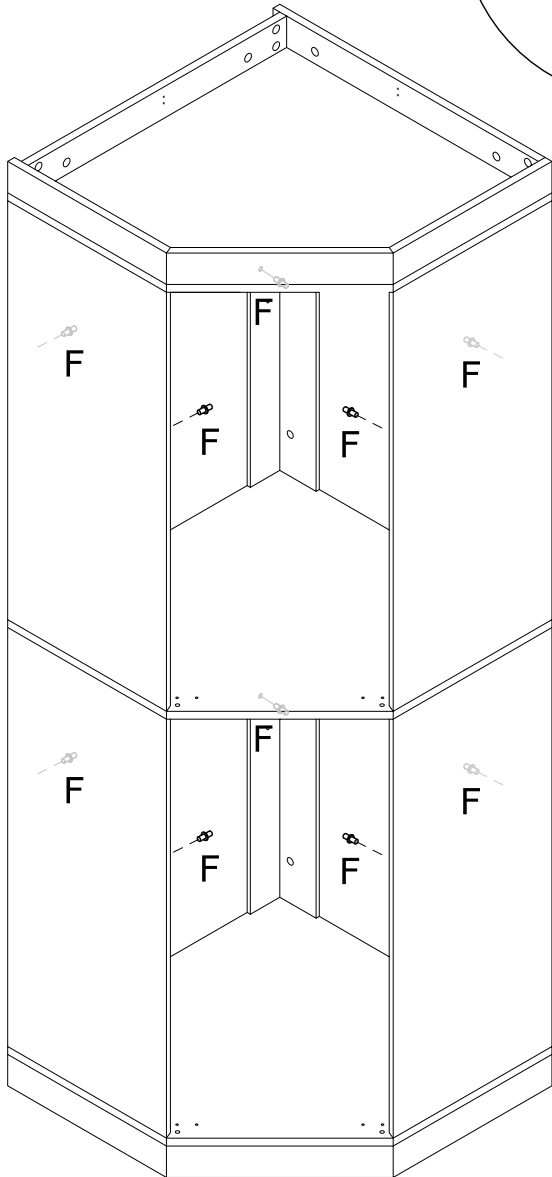
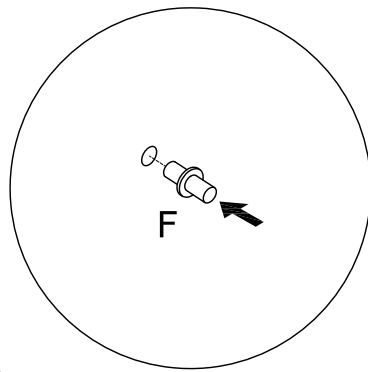


13

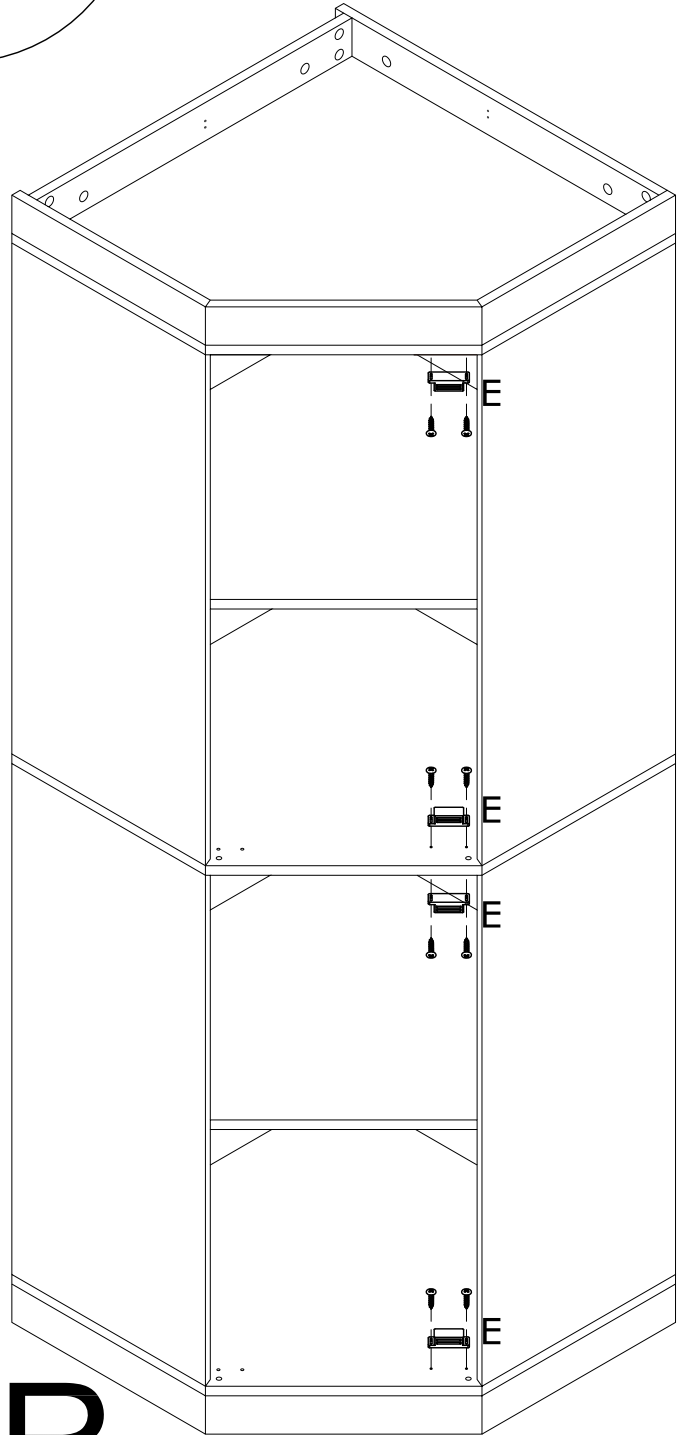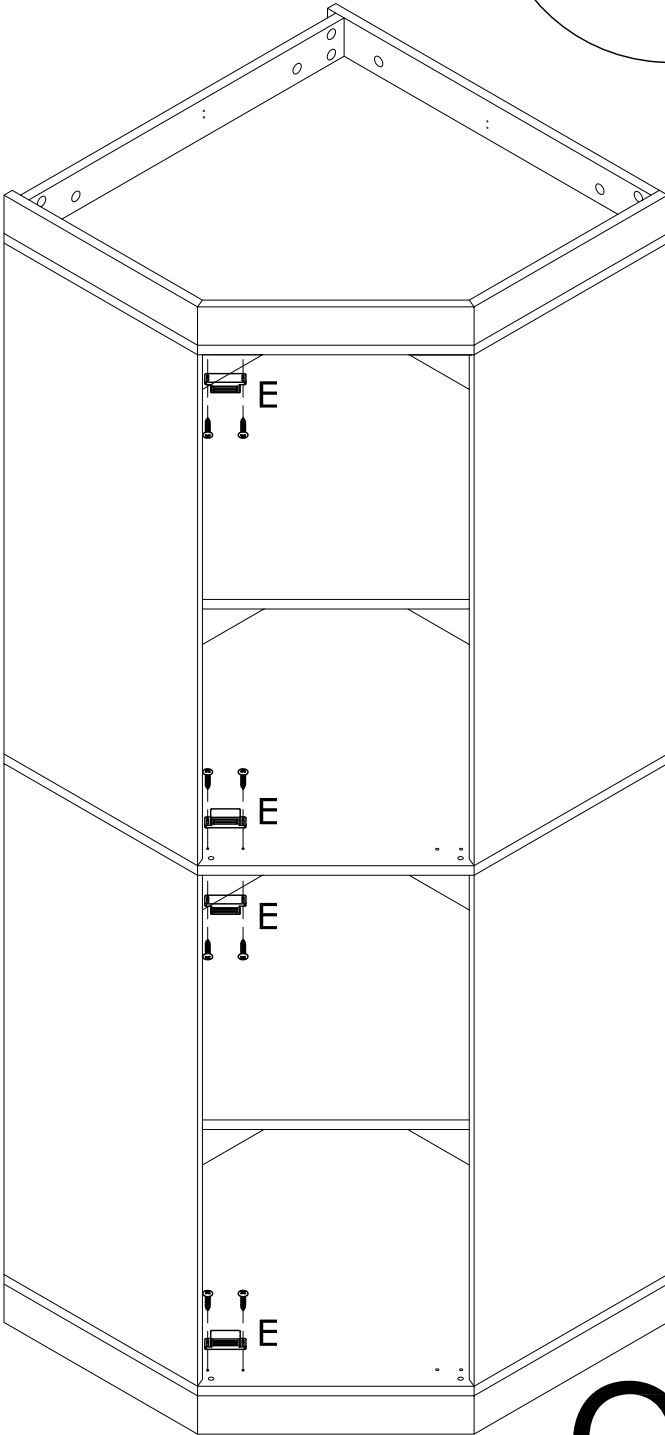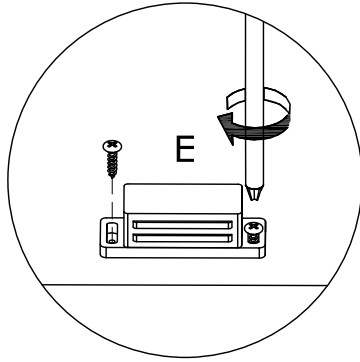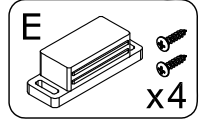


OR

14

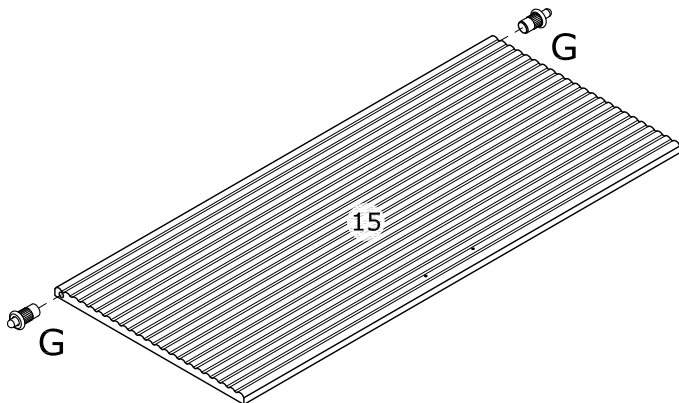
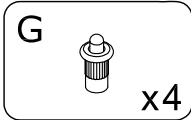


x2

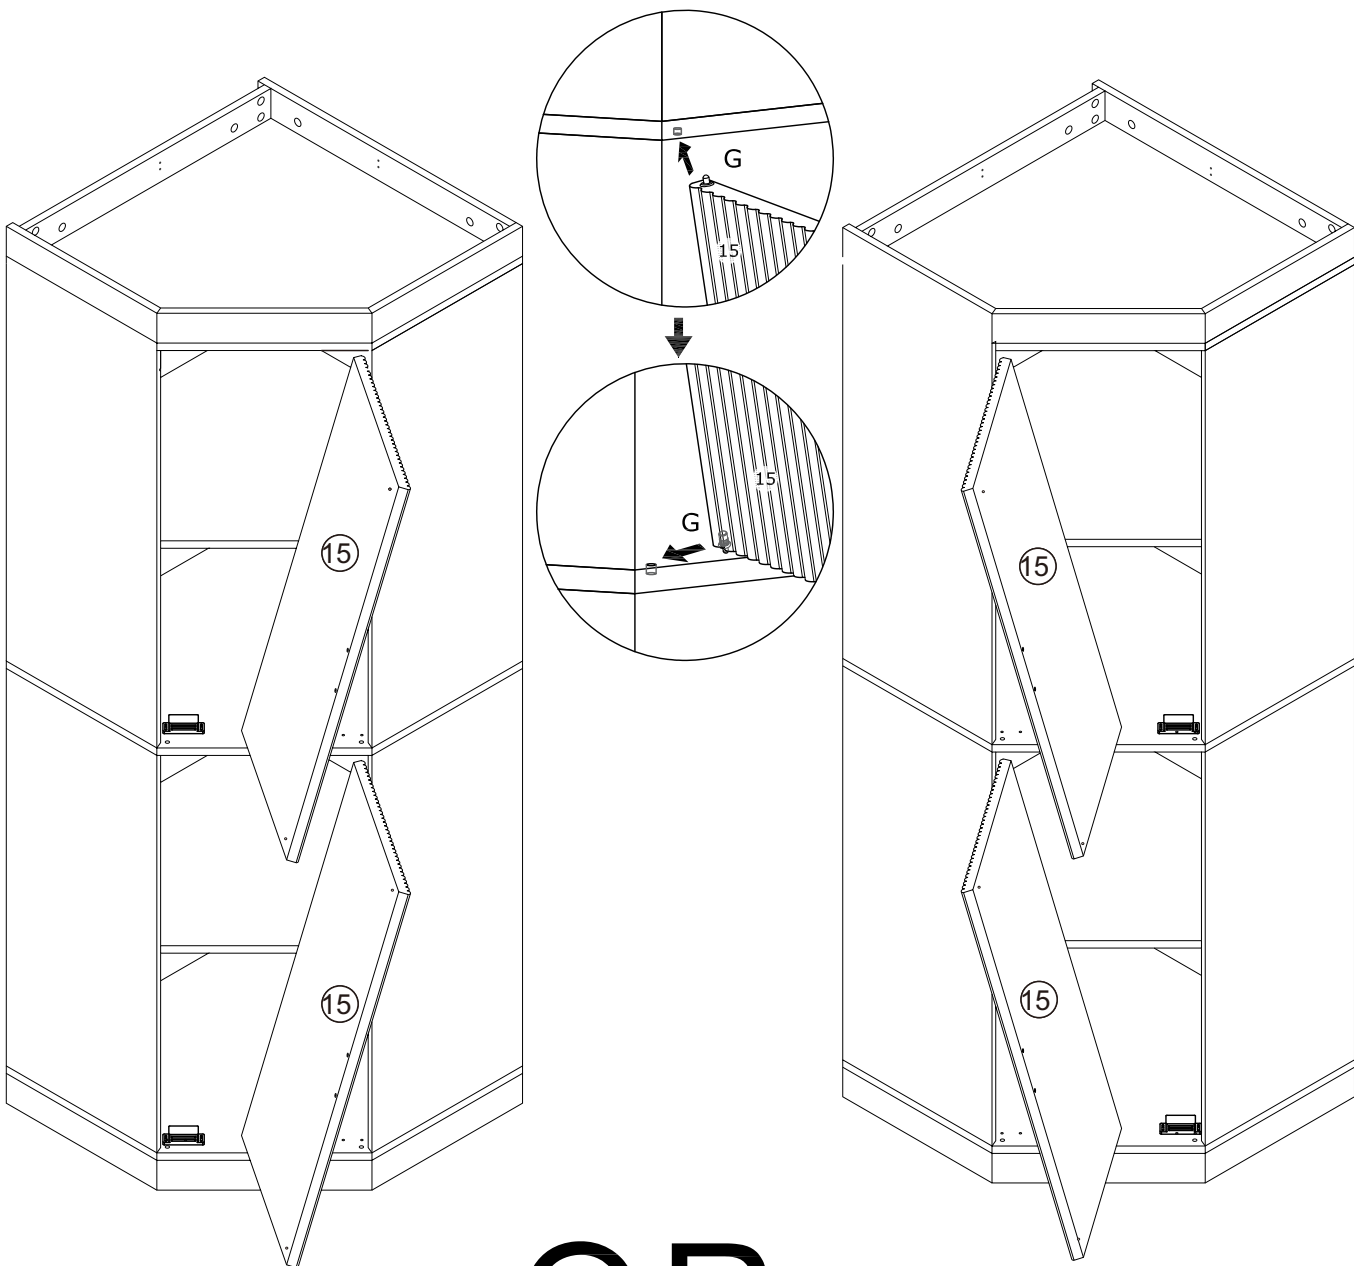




OR

15

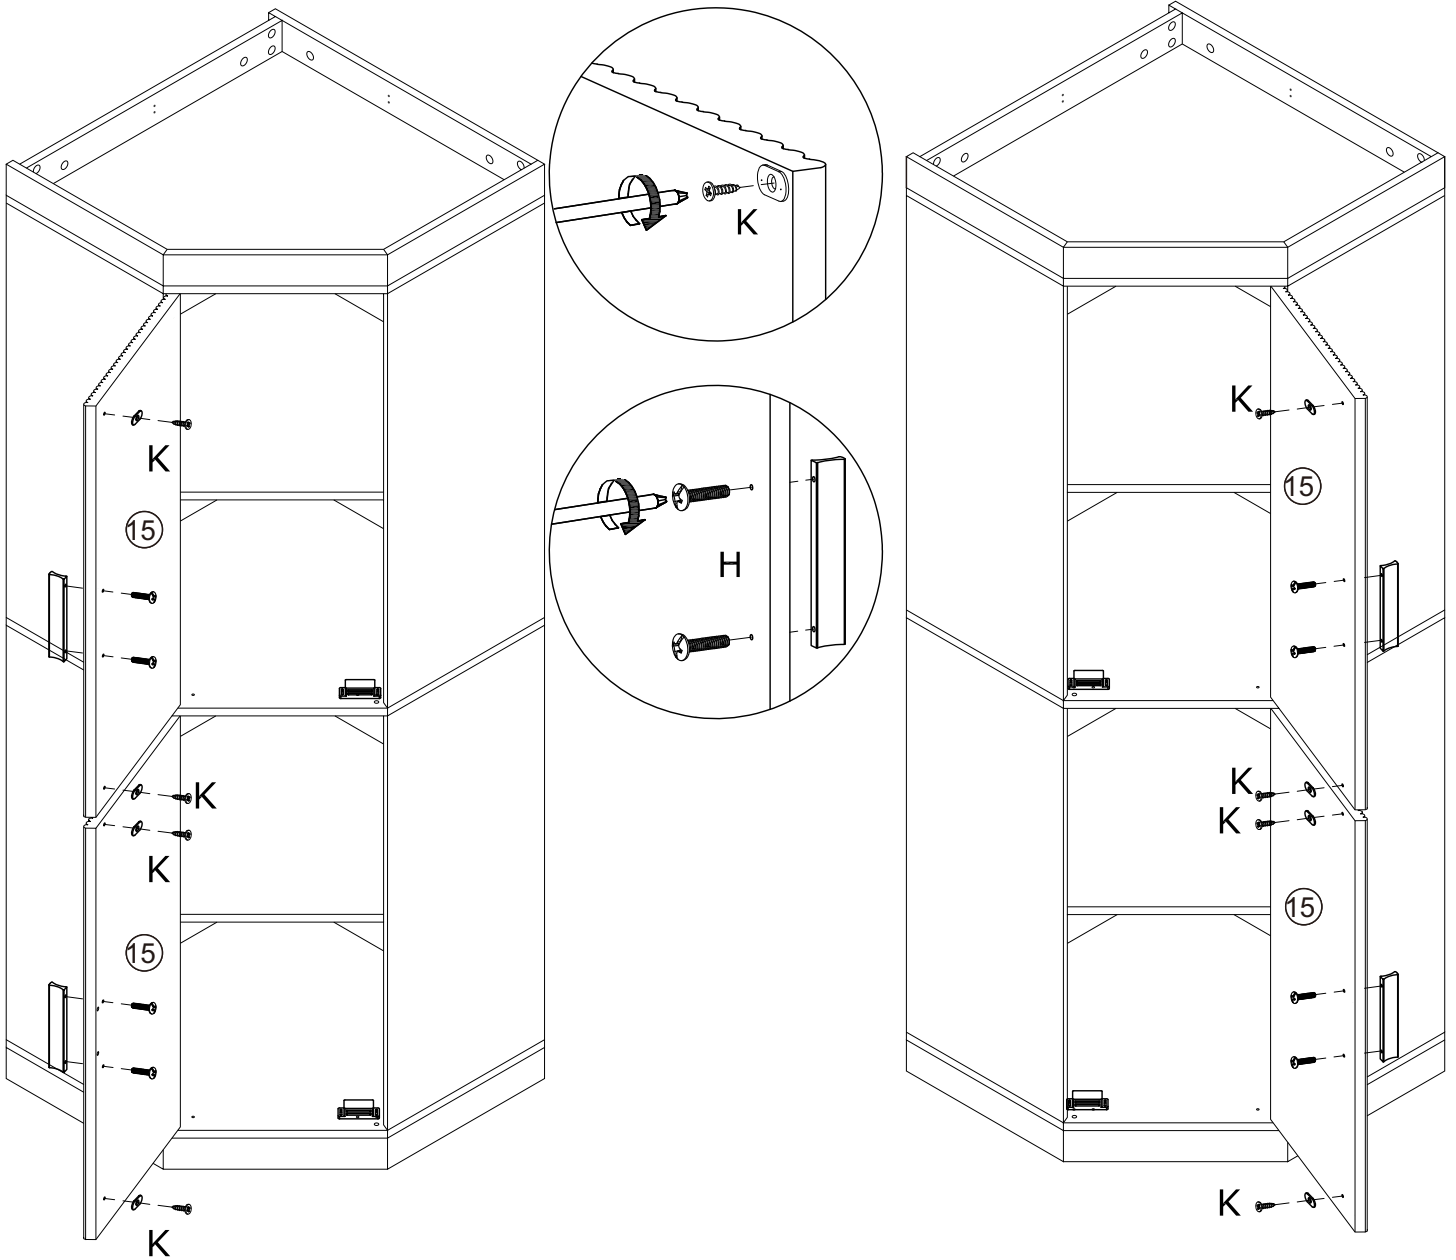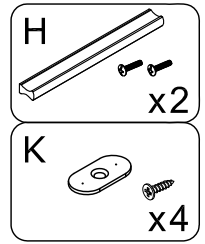

OR

16

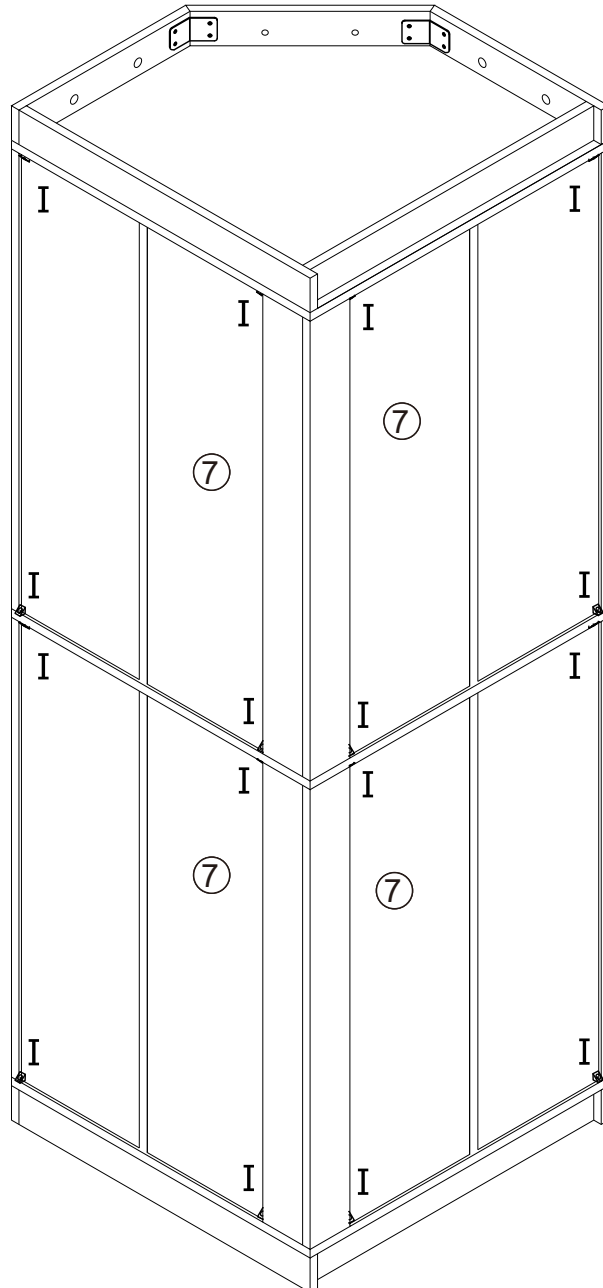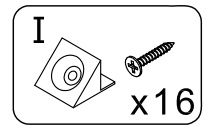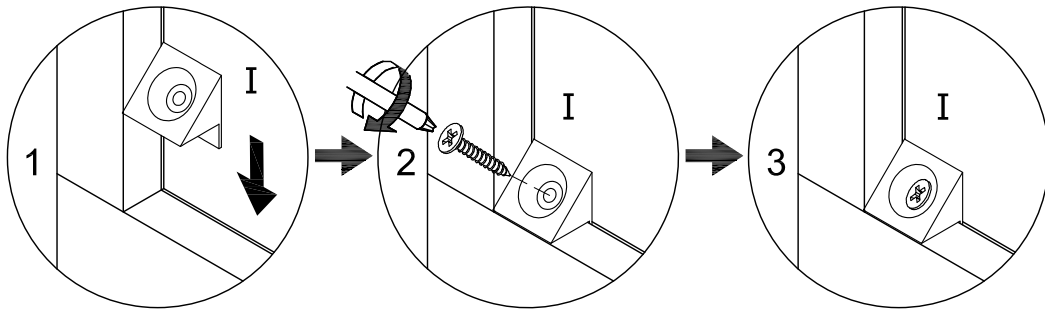

17

