

HW-AM557848
CUSTOMER MANUAL


-V0.1

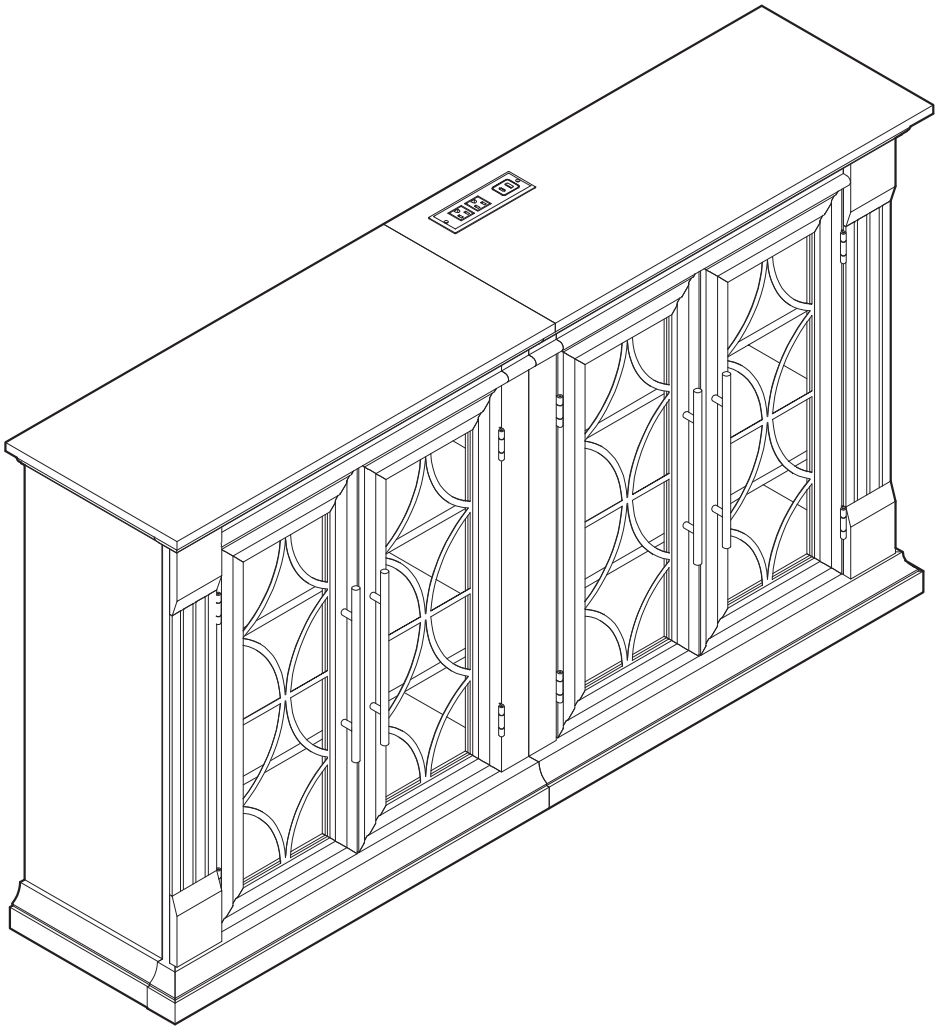



If you have any questions,
please contact us.


ASSEMBLY STRUCTURE REFERENCE DIAGRAM

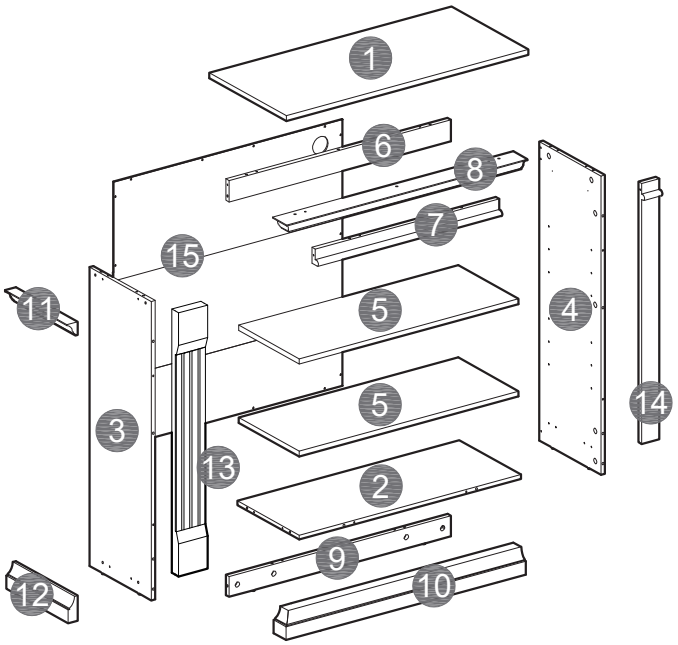


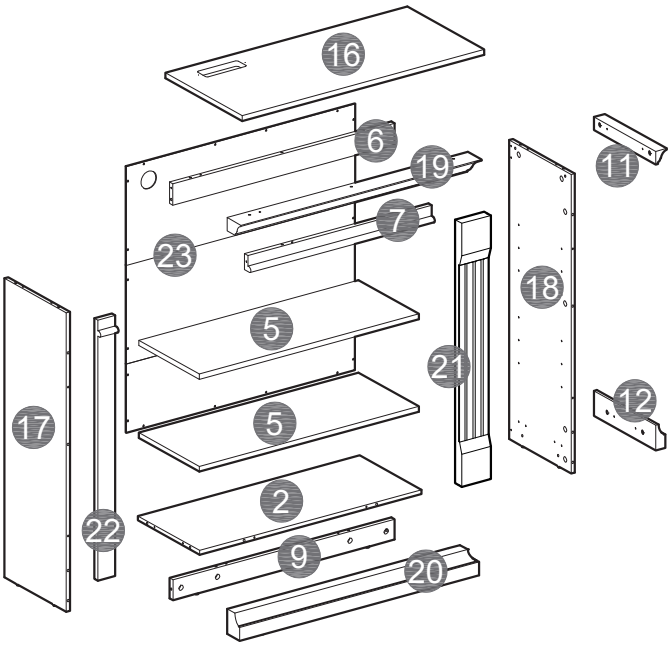

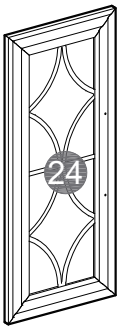

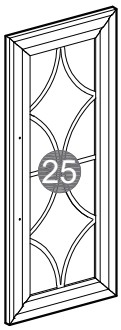


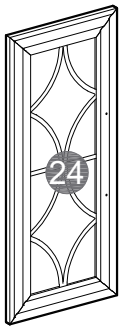

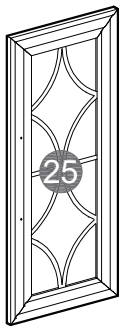


PARTS

1

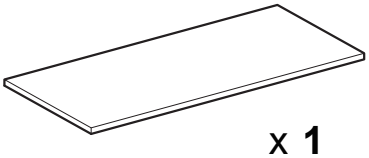


x **1**

2

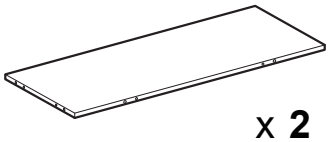


x **2**

3




x **1**

4




x **1**

5

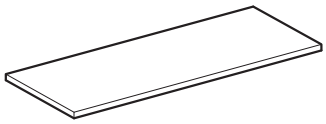

x **4**

6




x **2**

7




x **2**

8




x **1**

9




x **2**

10

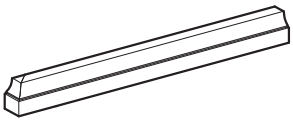


x **1**

11

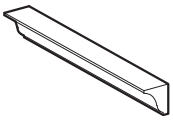


x **2**

12

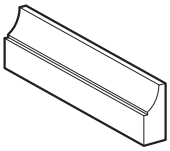

x **2**

13




x **1**

14



x **1**


15

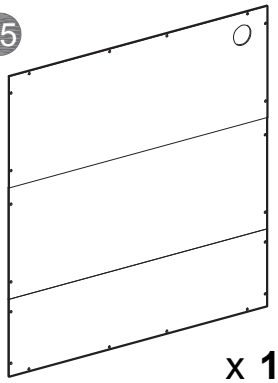

x **1**


PARTS

16

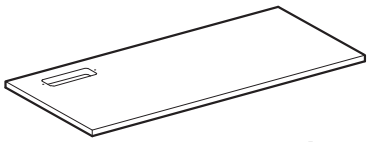


x **1**

17




x **1**

18




x **1**

19




x **1**

20



x **1**

21




x **1**

22




x **1**

23

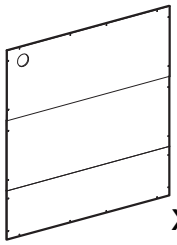


x **1**

24

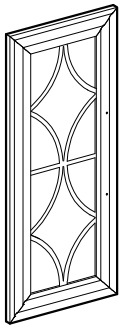

x **2**


25

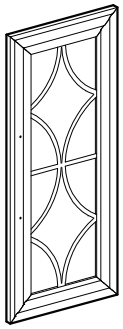

x **2**

PARTS

A

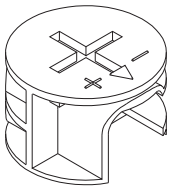

× **58+2**

B




× **58+2**

C



ø6×30mm
× **56+2**

D



ø3×12×6mm
× **22+1**

E




× **4**

F




ø3×14mm
× **40+2**

G



× **8**

H



ø3.5*14mm
× **32+2**

I



M6*25mm
× **8+1**

J



× **2**

K




× **4**

L



M4×22mm
× **8+1**

M




× **16+2**

N



ø6×20mm
× **4**

O




M6×40mm
× **6**

P



× **4**

Q




× **4**

R




ø4×35mm
× **4**

S

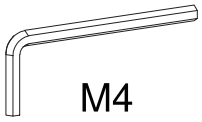


× **1**

T




× **1**

U




ø3*12*6mm
× **2**

W

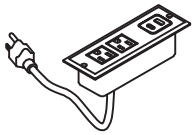


× **1**


V

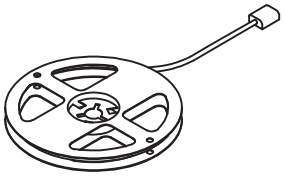

V2

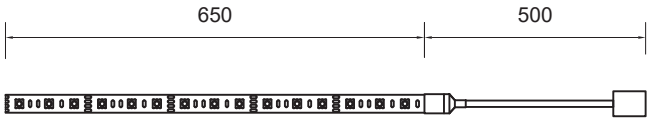


x 2

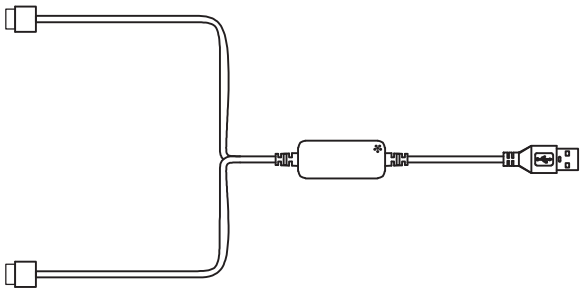


x 1

V3



V4


x **10**

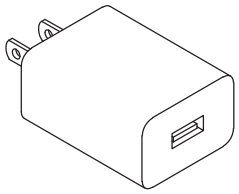



V5


x **1**

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

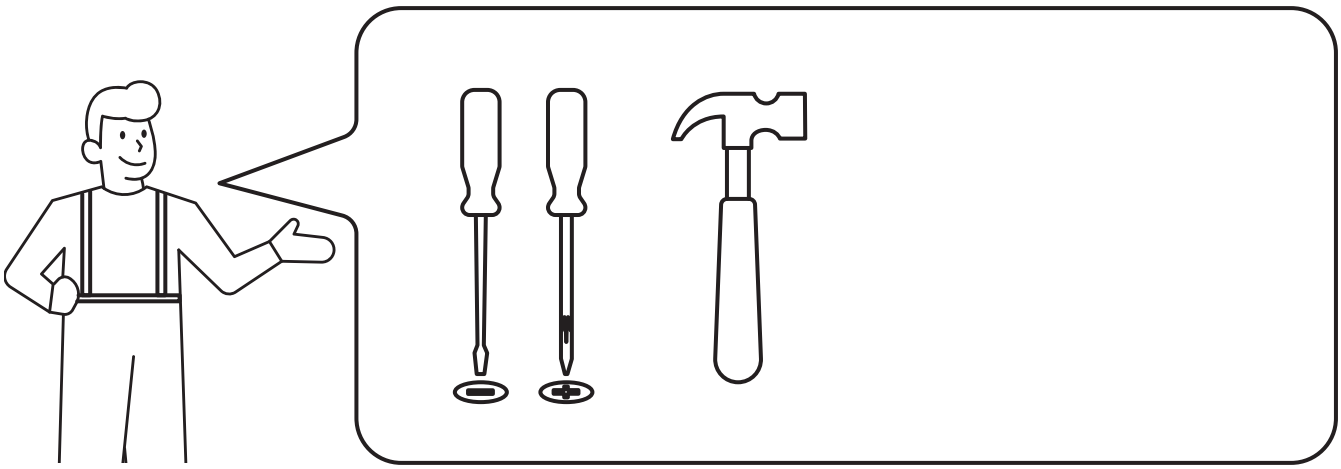


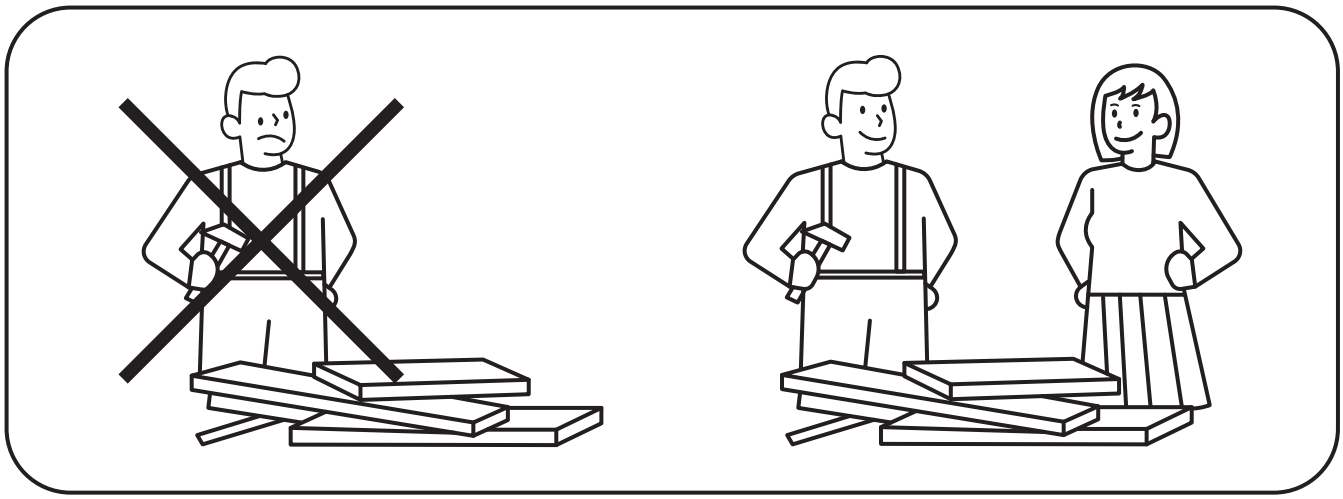

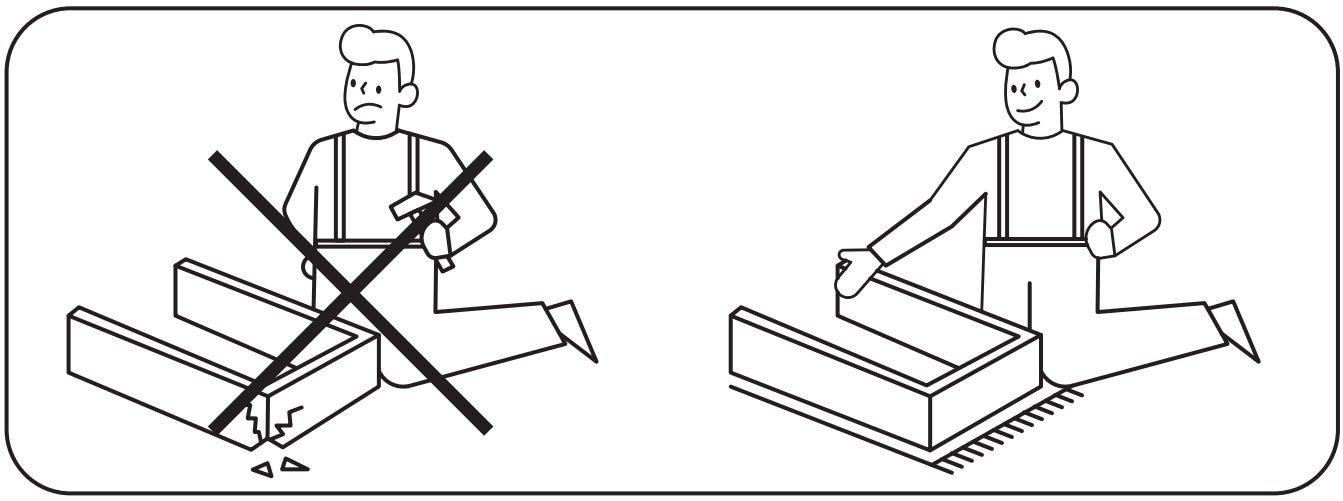

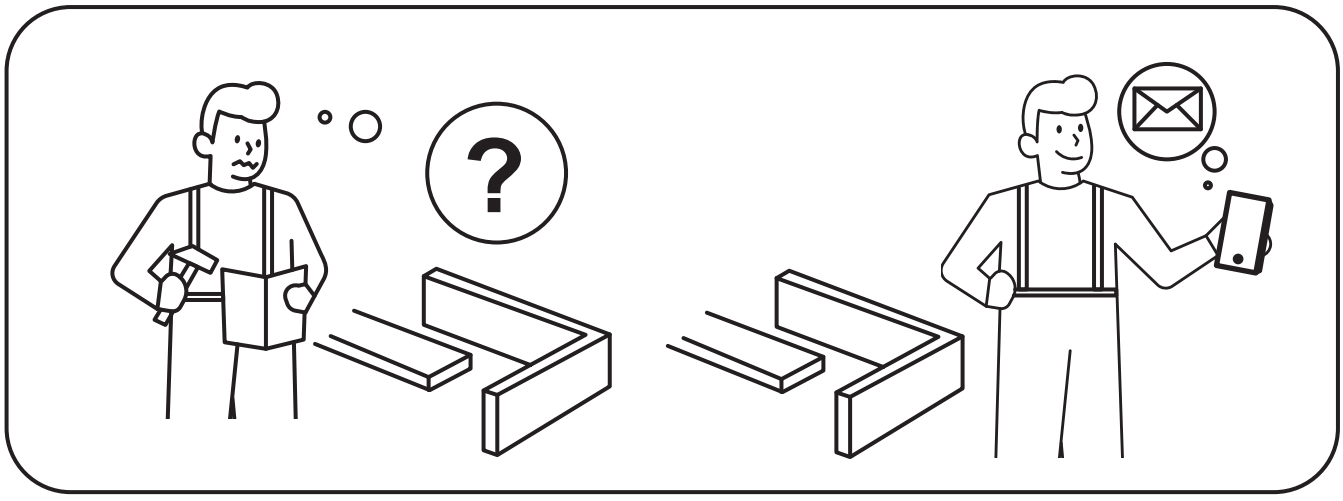


How to work the Knock Down (kd) assembly system

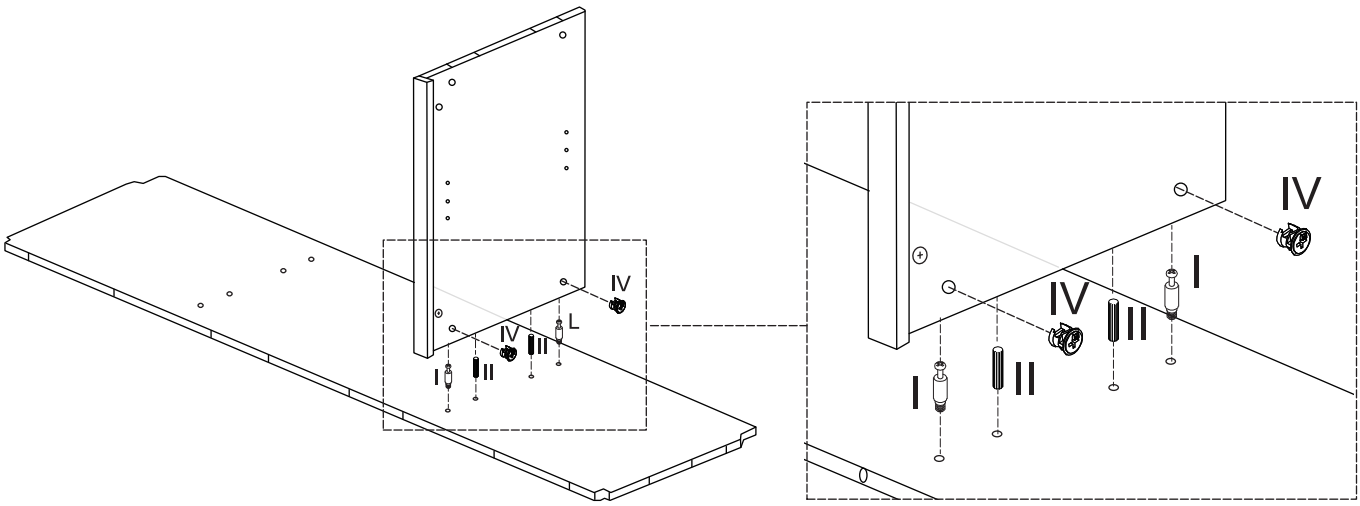


How to install Wood Dowel


Insert the wood dowel [II] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

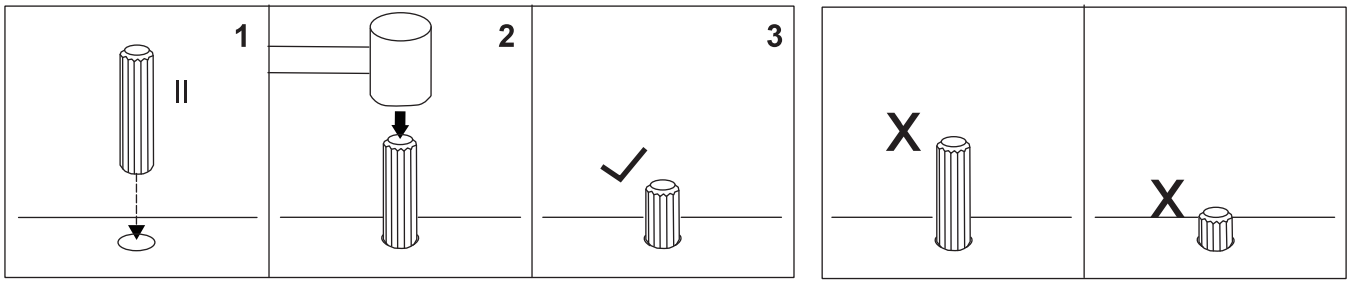

How to use the Cam Lock system

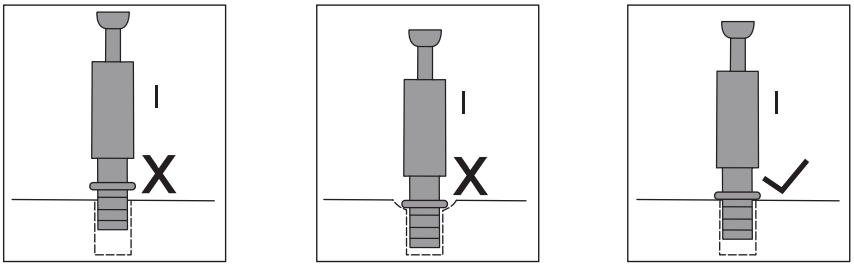


1. Screw the cam bolt [I] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt [I] goes into the pre-driled large hole on the end of panel for cam lock [IV].
3. Insert the cam lock [IV] into the pre-drilled large hole on the panel. **Make sure the cross slot of cam lock [IV] faces out.**
4. Rotate the cam lock [IV] **clockwise** with a self-supplied philips screwdriver to lock the cam bolt [I] in place.

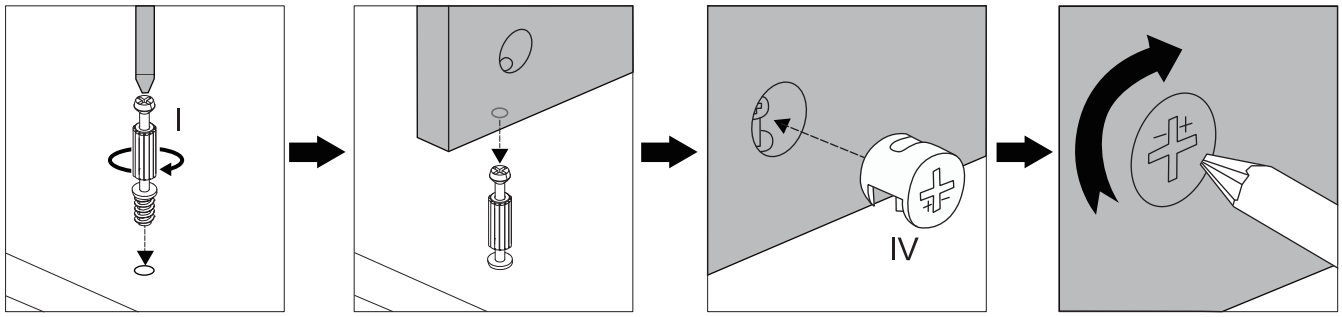


You are now ready to assemble the Glass Door Sideboard (With Light)

It is divided into three parts in total:

1. Install the base part
2. Install the middle part
3. Install the top part

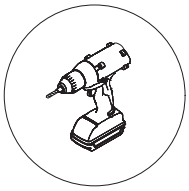


We recommend using a power drill to assemble.

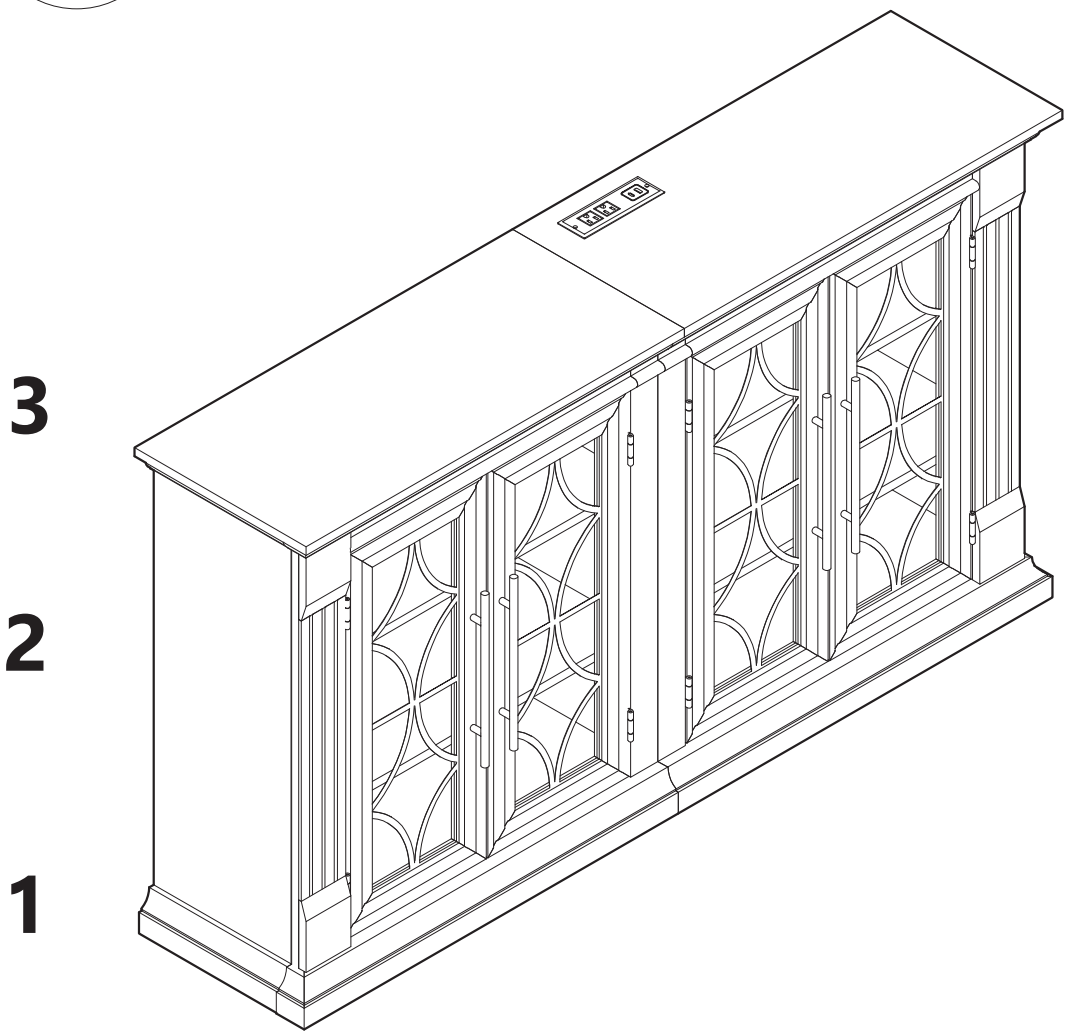


Step 1


Securing Cam Bolt (B) into Board (②).

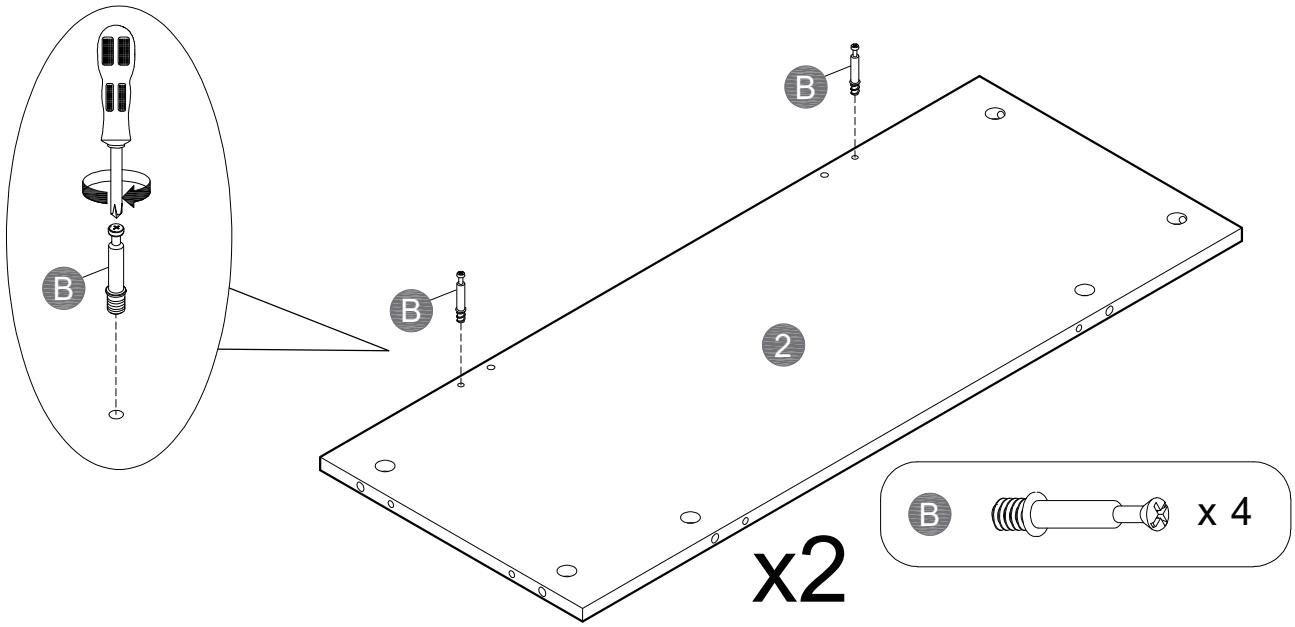

Step 2


Inserting Wooden Dowel (C) into Board (②), then attach Board (⑨) to Board (②). Using Cam Lock (A) secure Board (⑨) to Board (②).

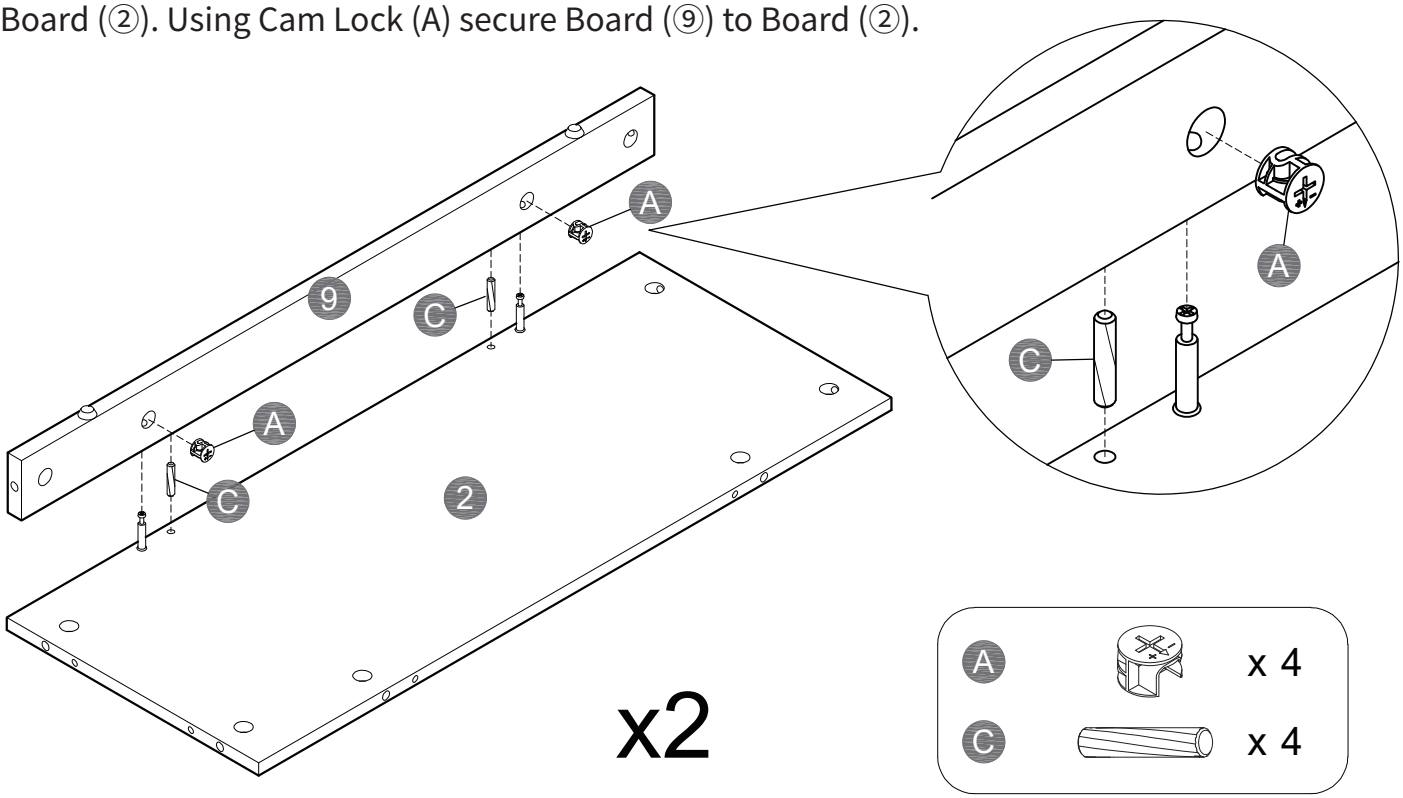


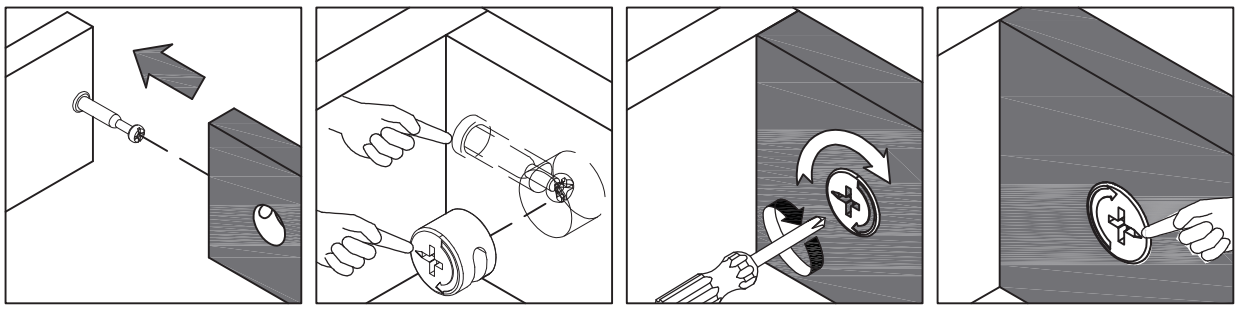

Step 3


Securing Cam Bolt (B) into Board (④&⑰).

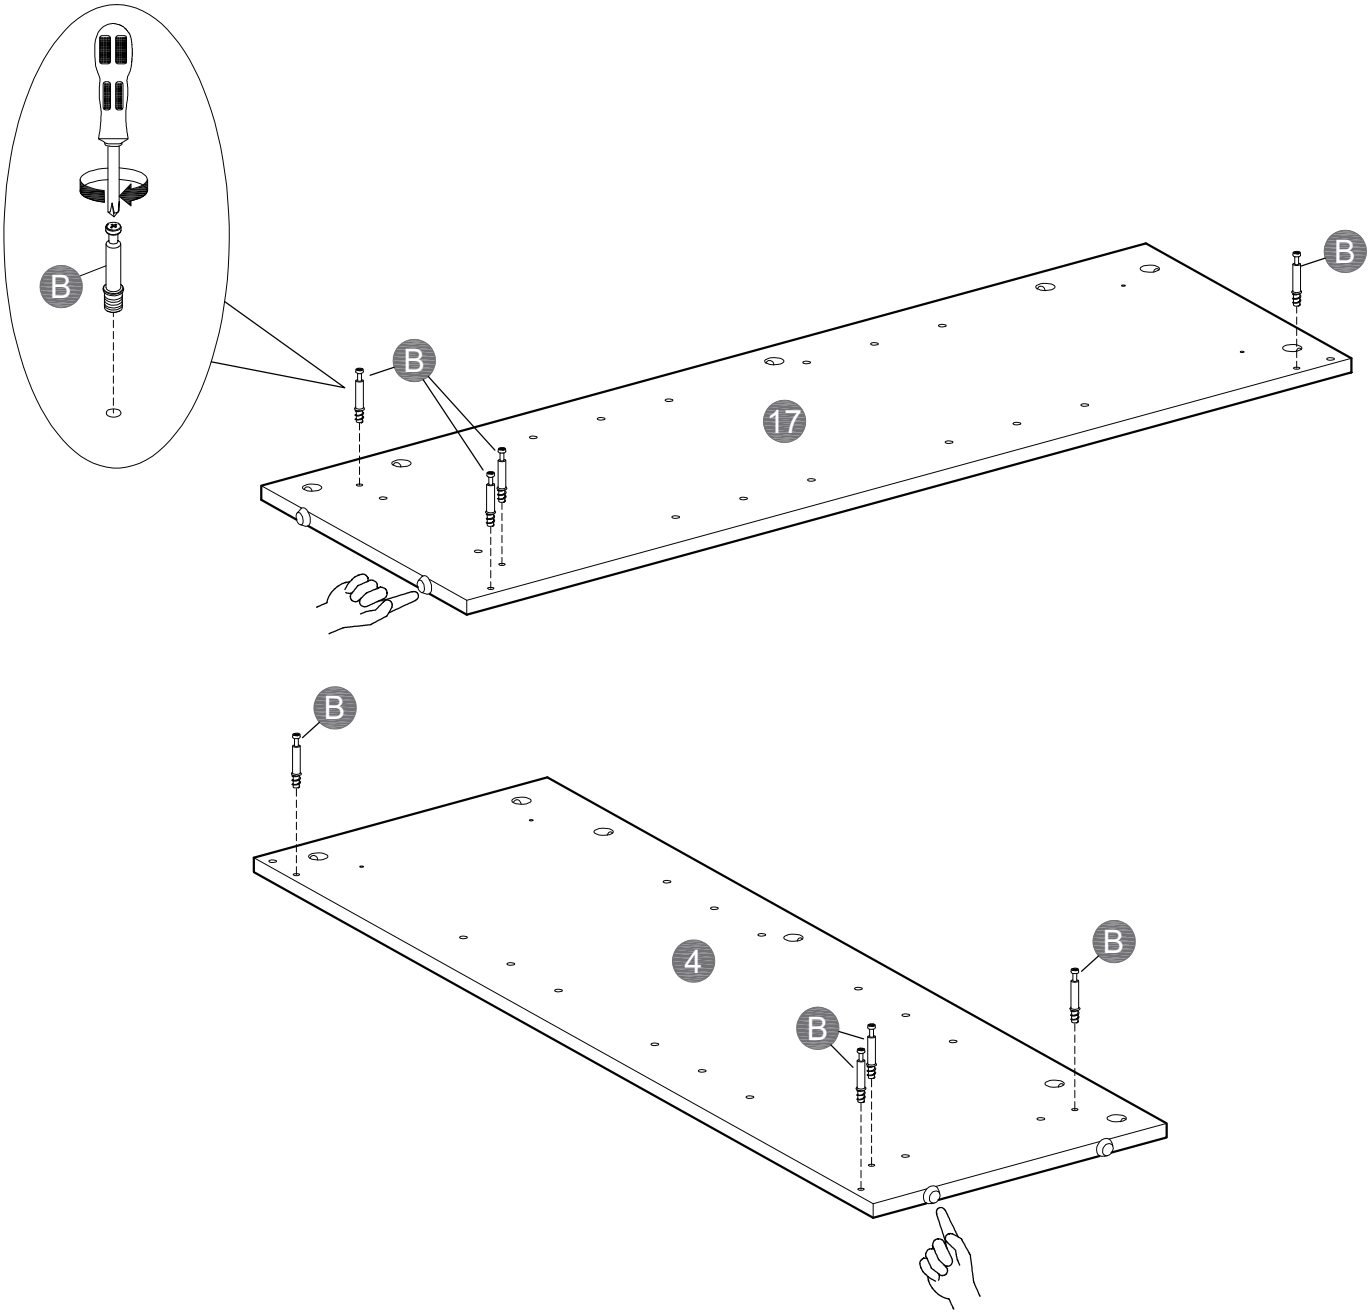





Step 4

Inserting Wooden Dowel (C) into Board (④&⑰), then attach Board (②&⑨, ⑥) to Board (④&⑰). Using Cam Lock (A) secure Board (②&⑨, ⑥)to Board (④&⑰).

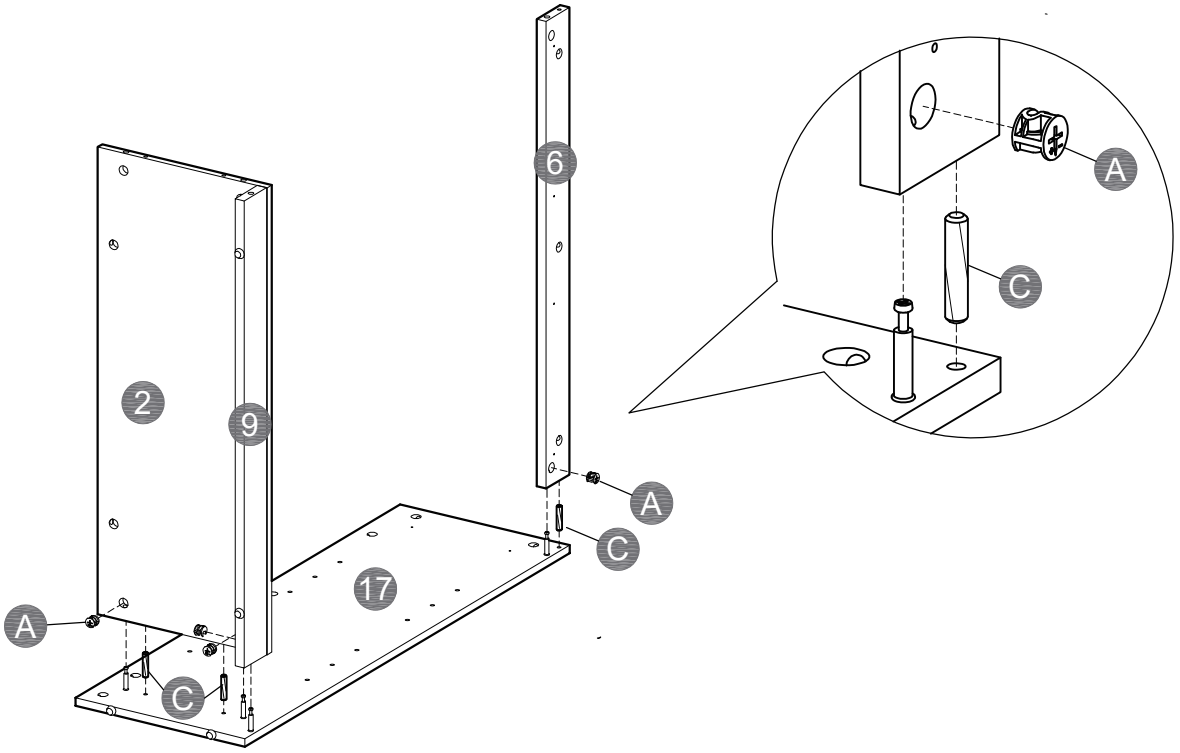


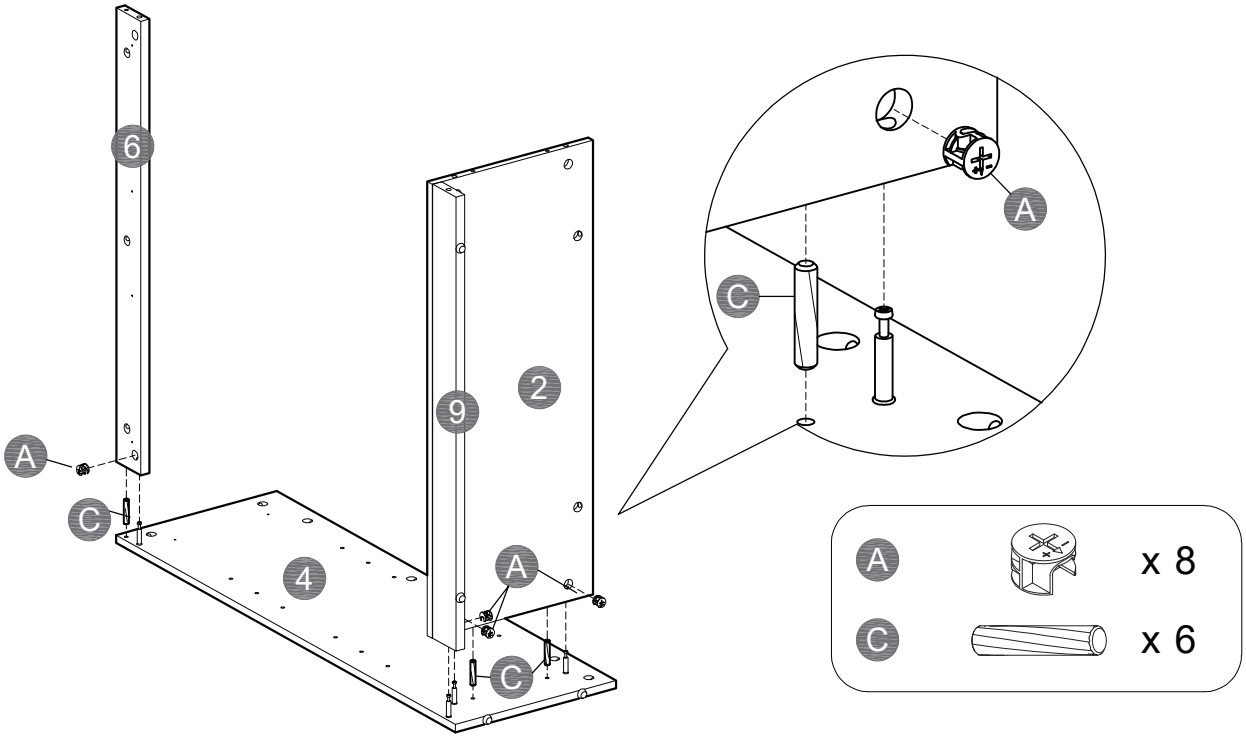


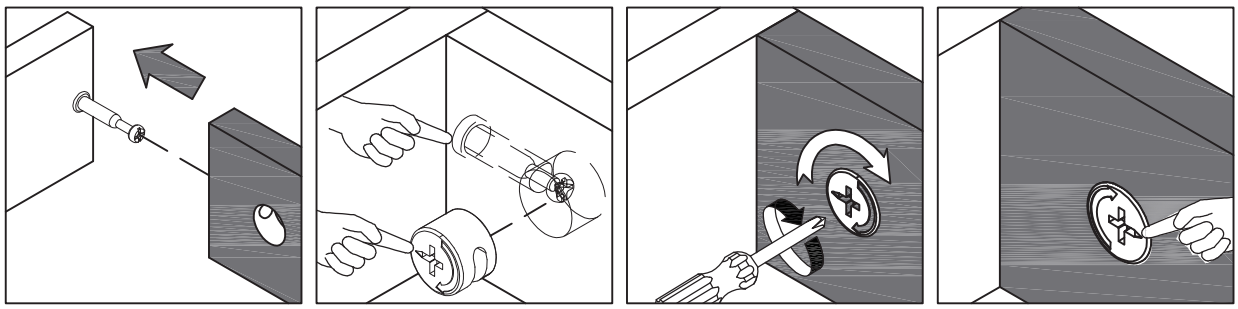

Step 5


Securing Cam Bolt (B) into Board (③&⑱).

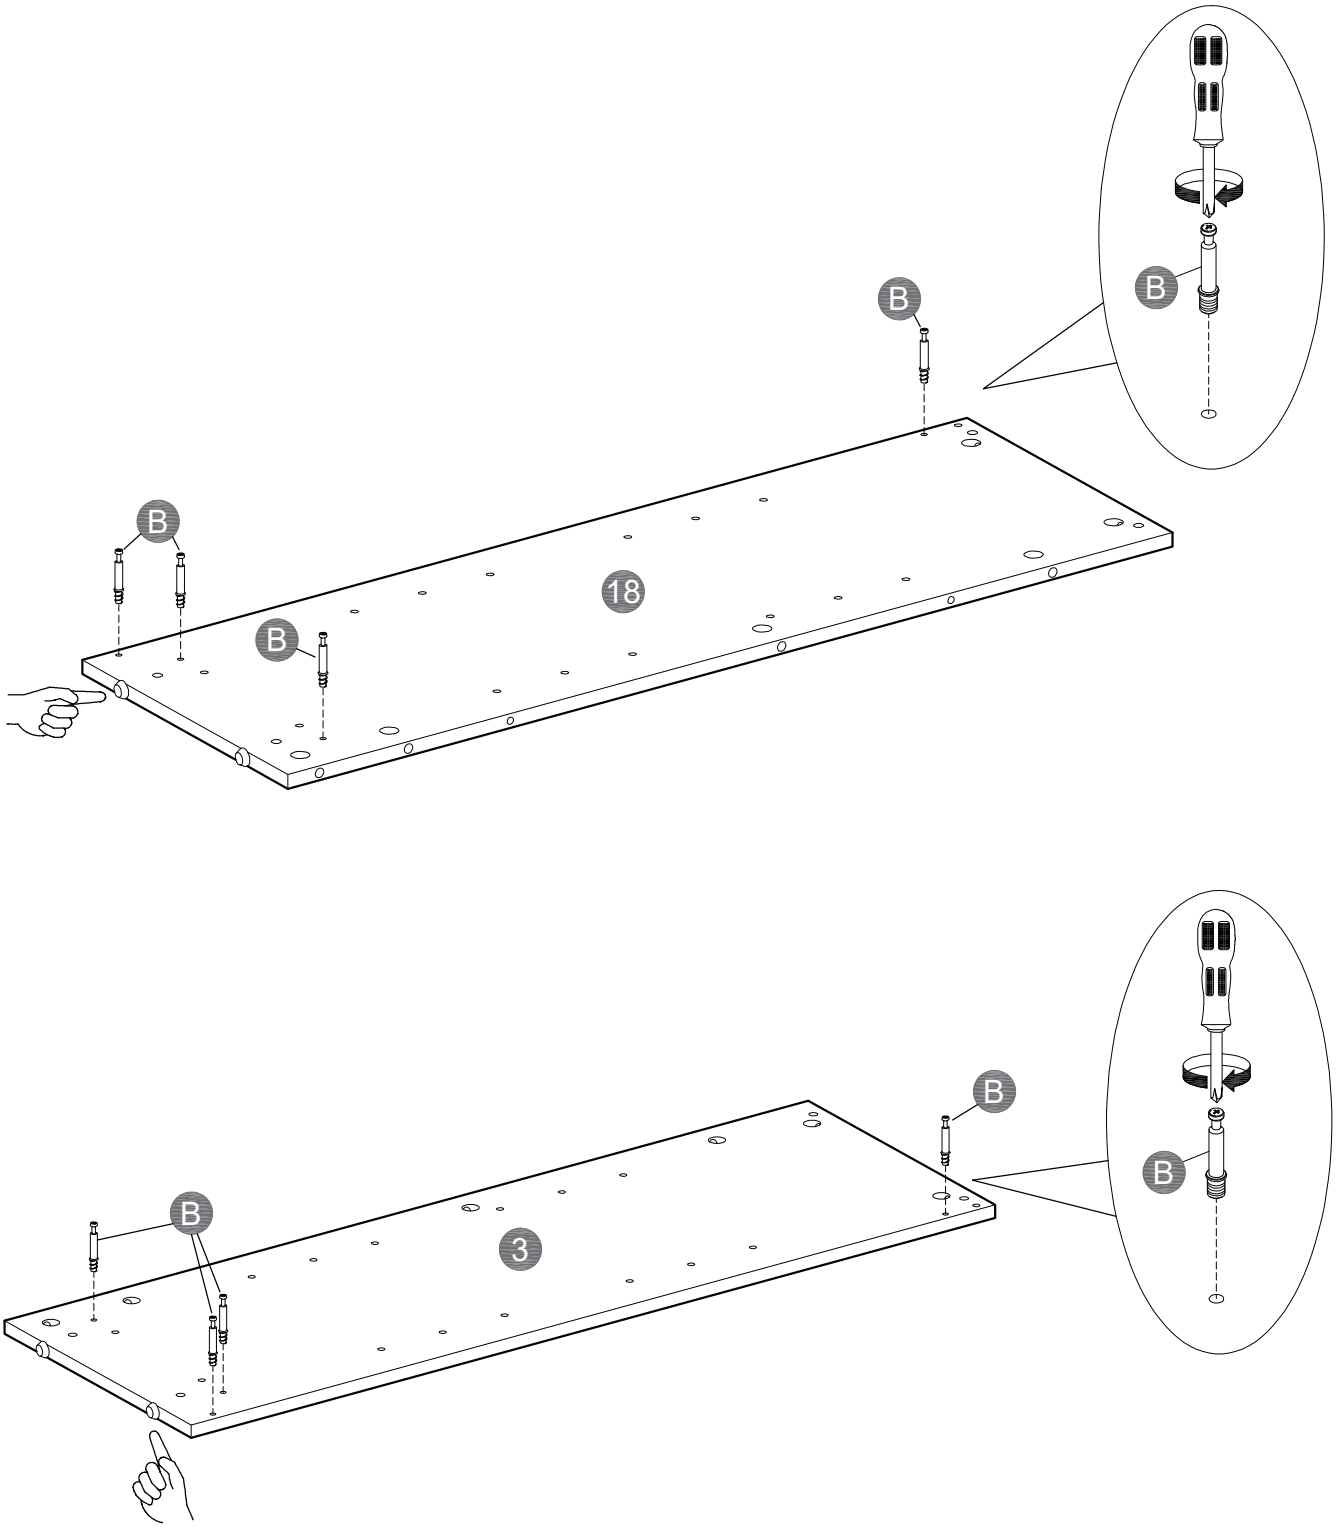





Step 6

Inserting Wooden Dowel (C) into Board (②&⑥), then attach Board (③&⑱) to Board (②&⑨, ⑥). Using Cam Lock (A) secure Board (③&⑱)to Board (②&⑨, ⑥).

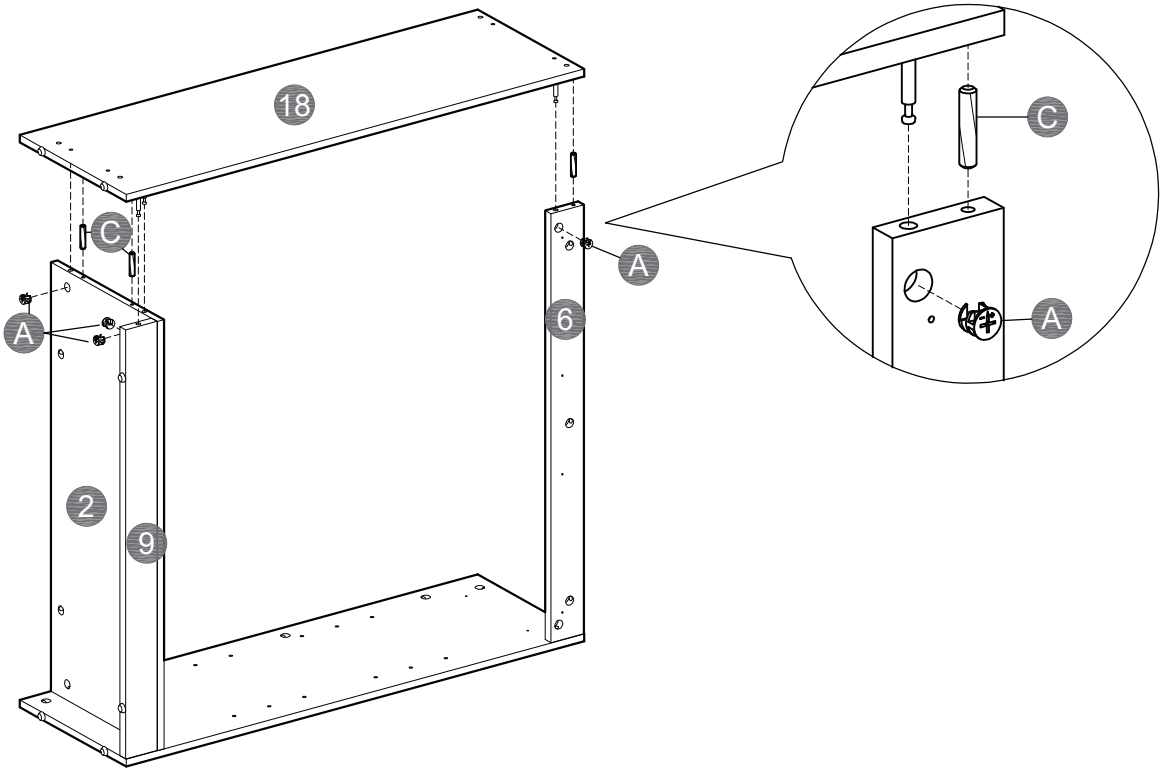

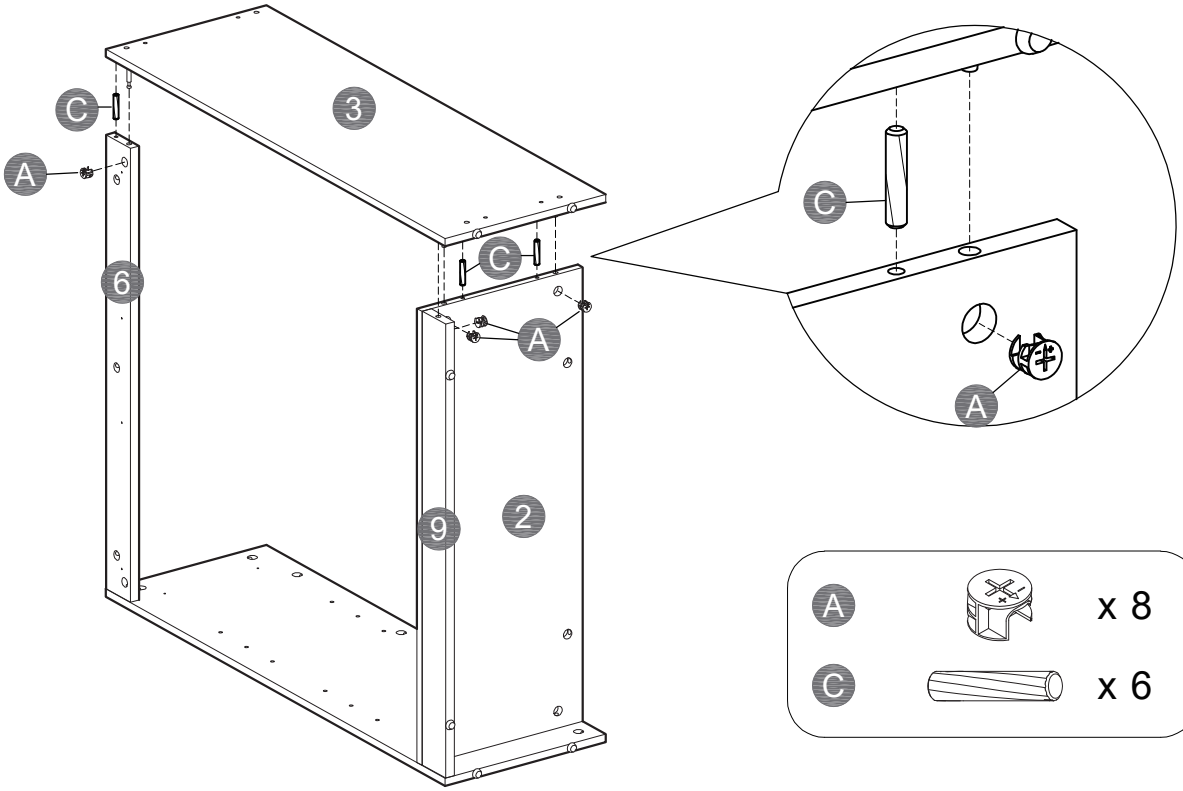


A		x 8
C		x 6

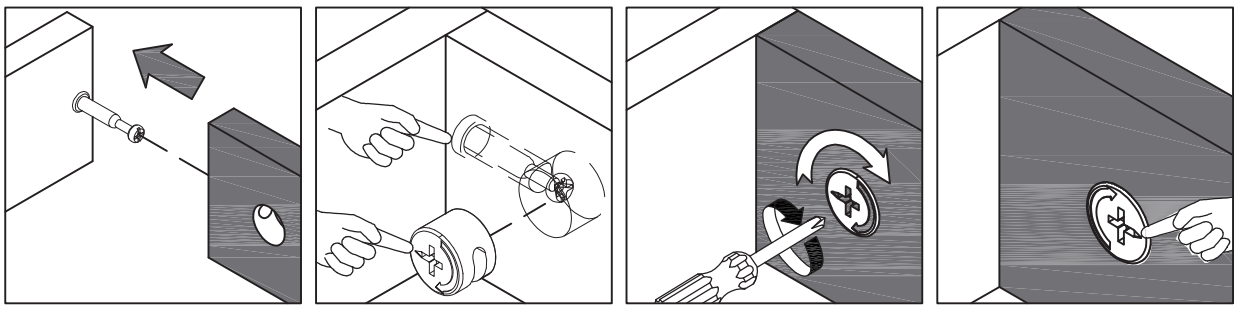

Step 7


Inserting Wooden Dowel (N) into Board (⑪), Inserting Wooden Dowel (C) into Board (⑫), then attach Board (⑪&⑫) to Board (③&⑱), then Using Screws (I) and a 7-Shaped Wrench (S) Secure Board (⑪&⑫) to Board (③&⑱).

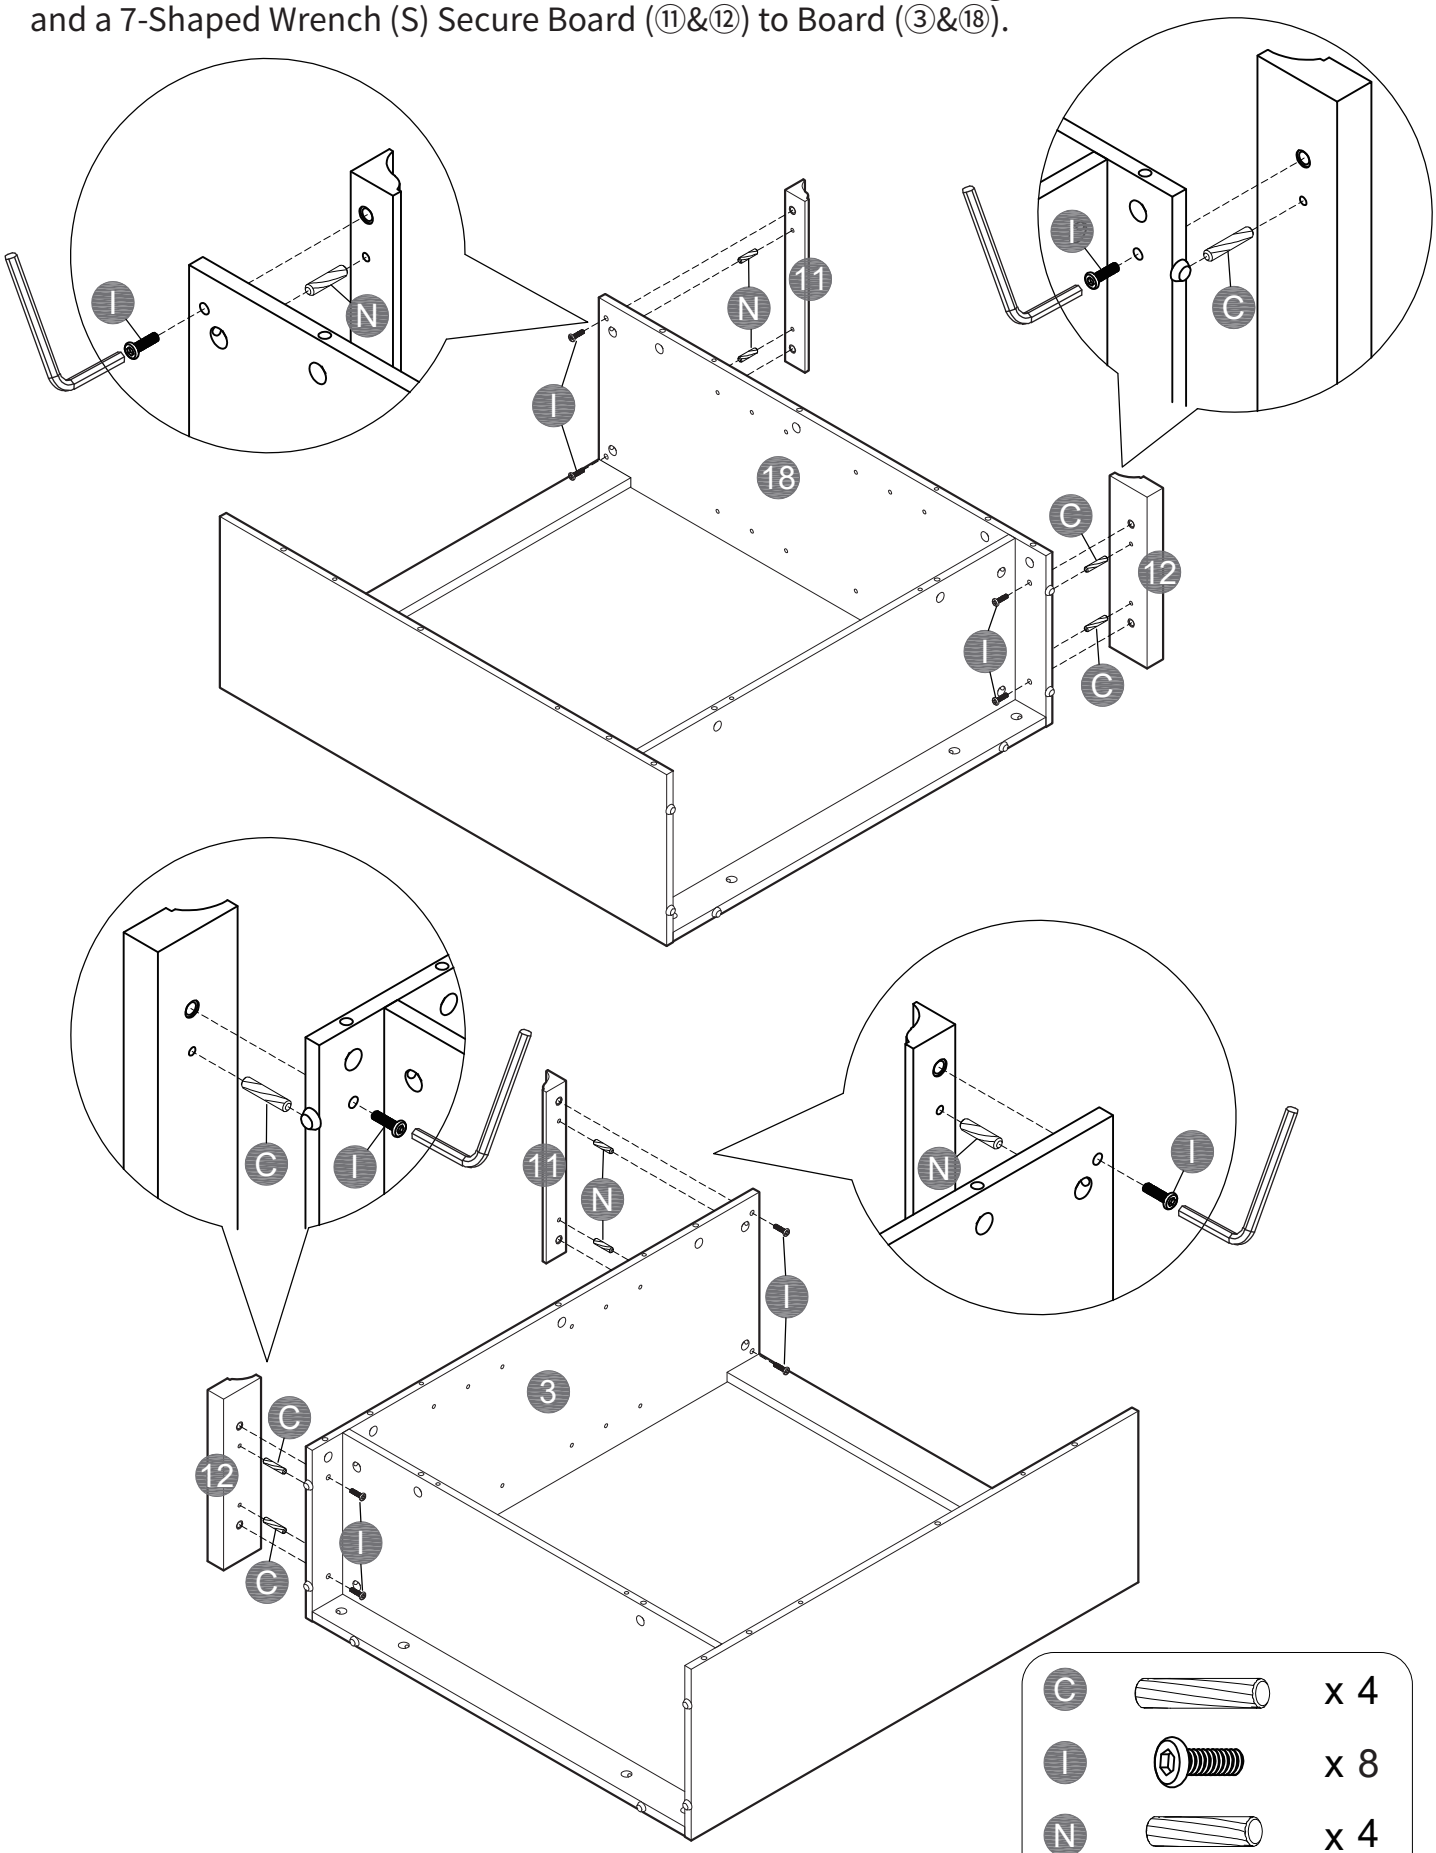


C		x 4
I		x 8
N		x 4
		x 1

Step 8


Using Screws (D) to assemble Accessories (J) to the Board (⑦).

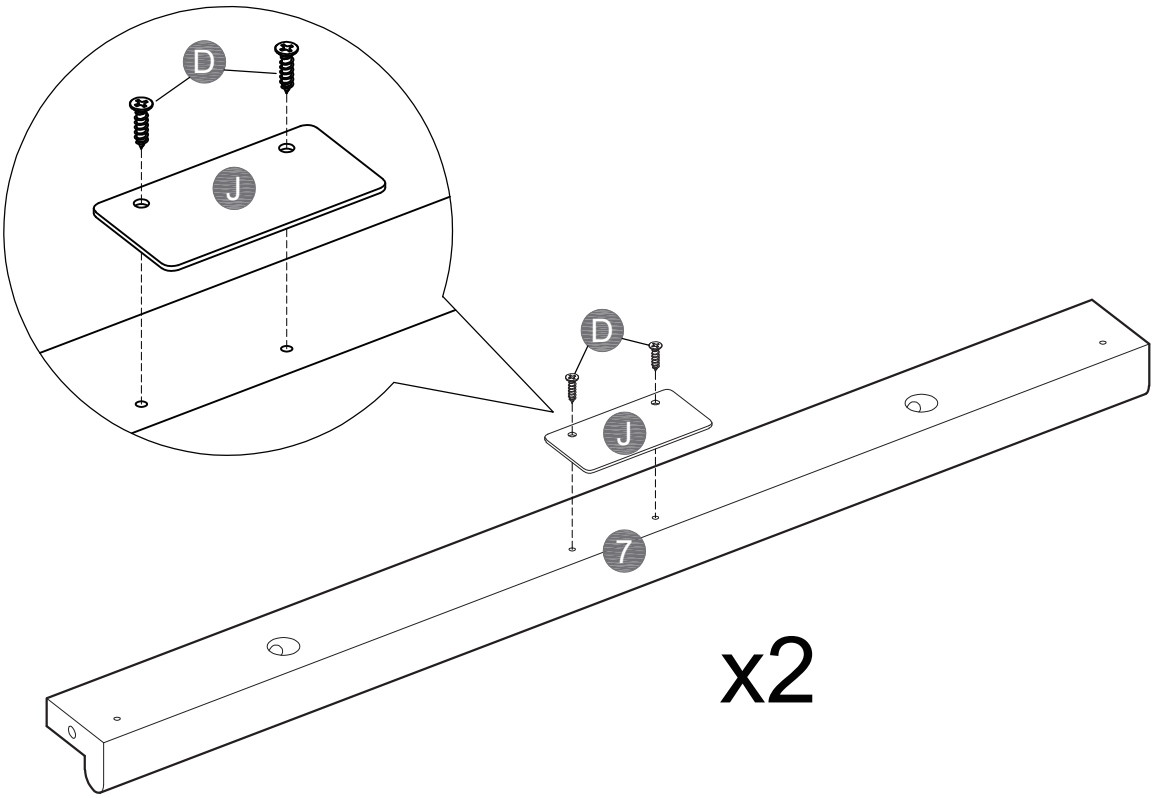


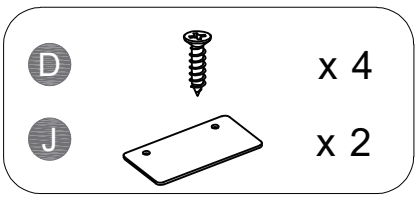

Step 9


Securing Cam Bolt (B) into Board (⑬&⑭,㉑&㉒).

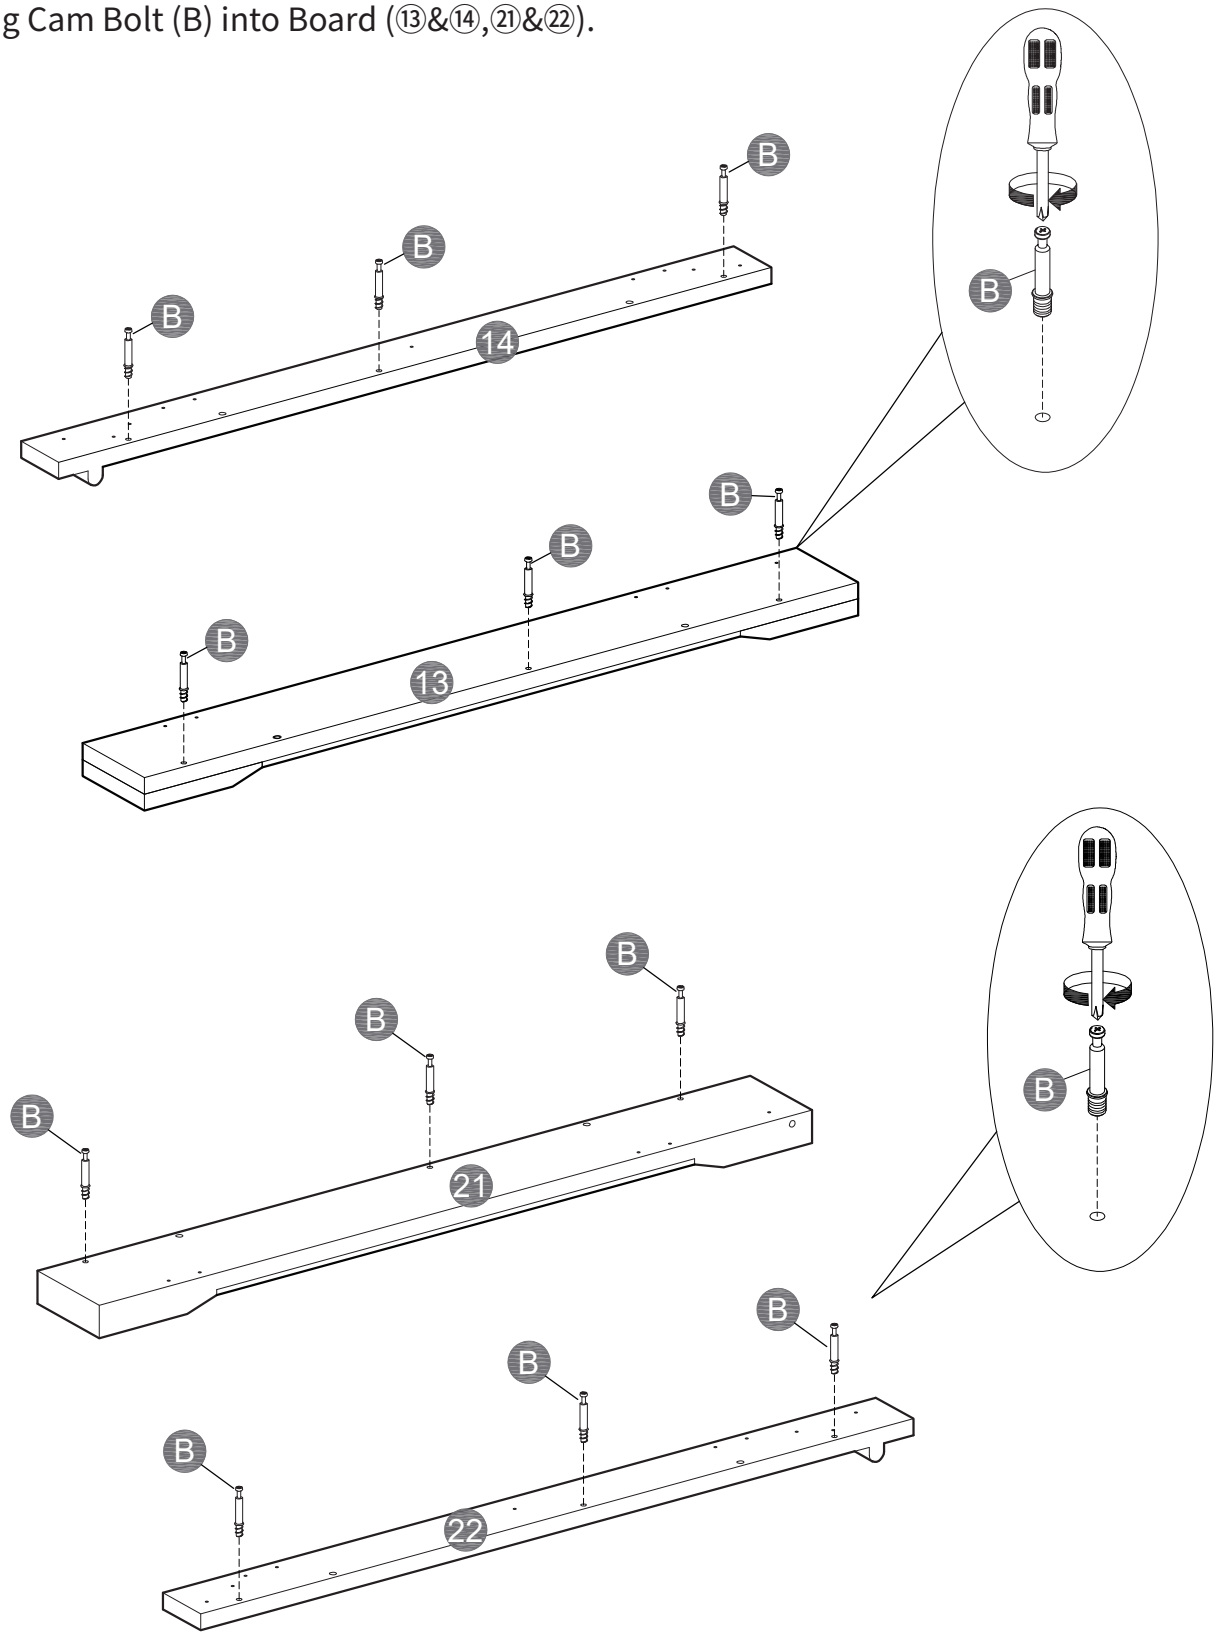



Step 10


Using Screws (H) secure Hinge (G) to Board (⑬&⑭&㉑&㉒).

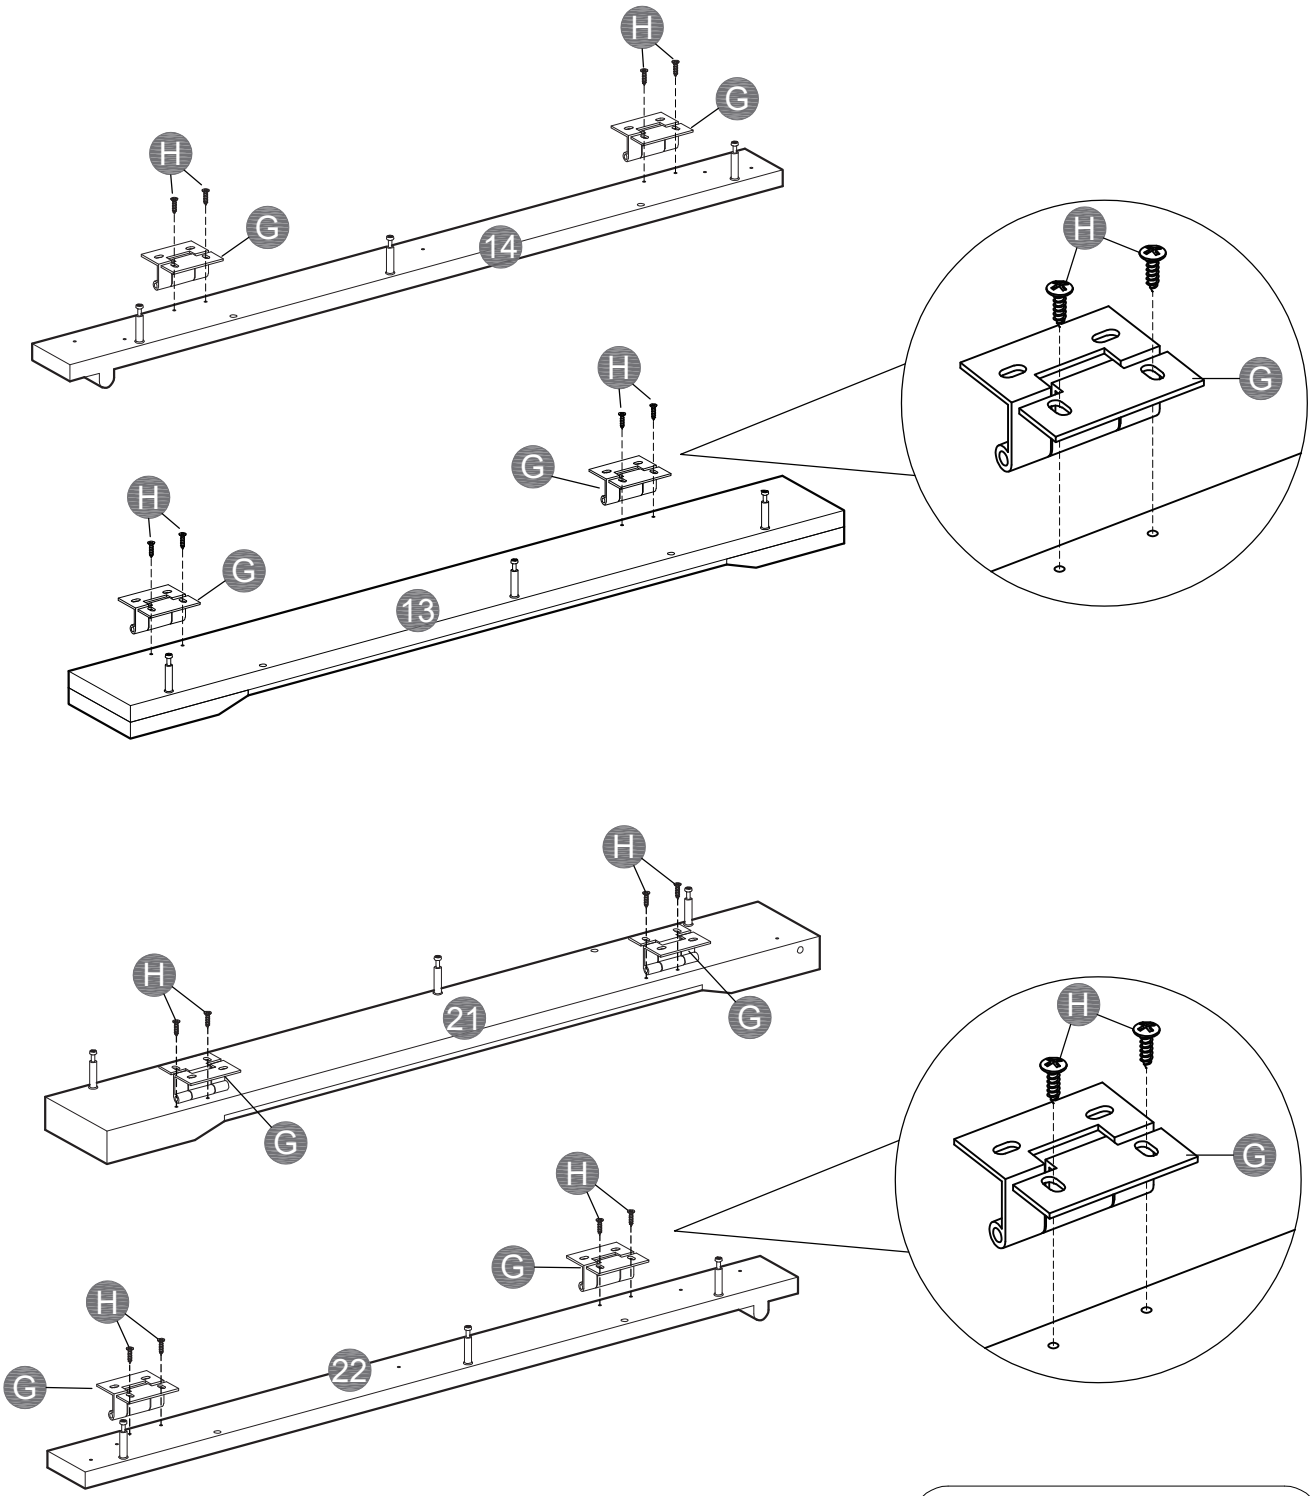

G		x 8
H		x 16

Step 11


Take the light strip (V2) out of the circular slot and tear off the back glue of the light strip.

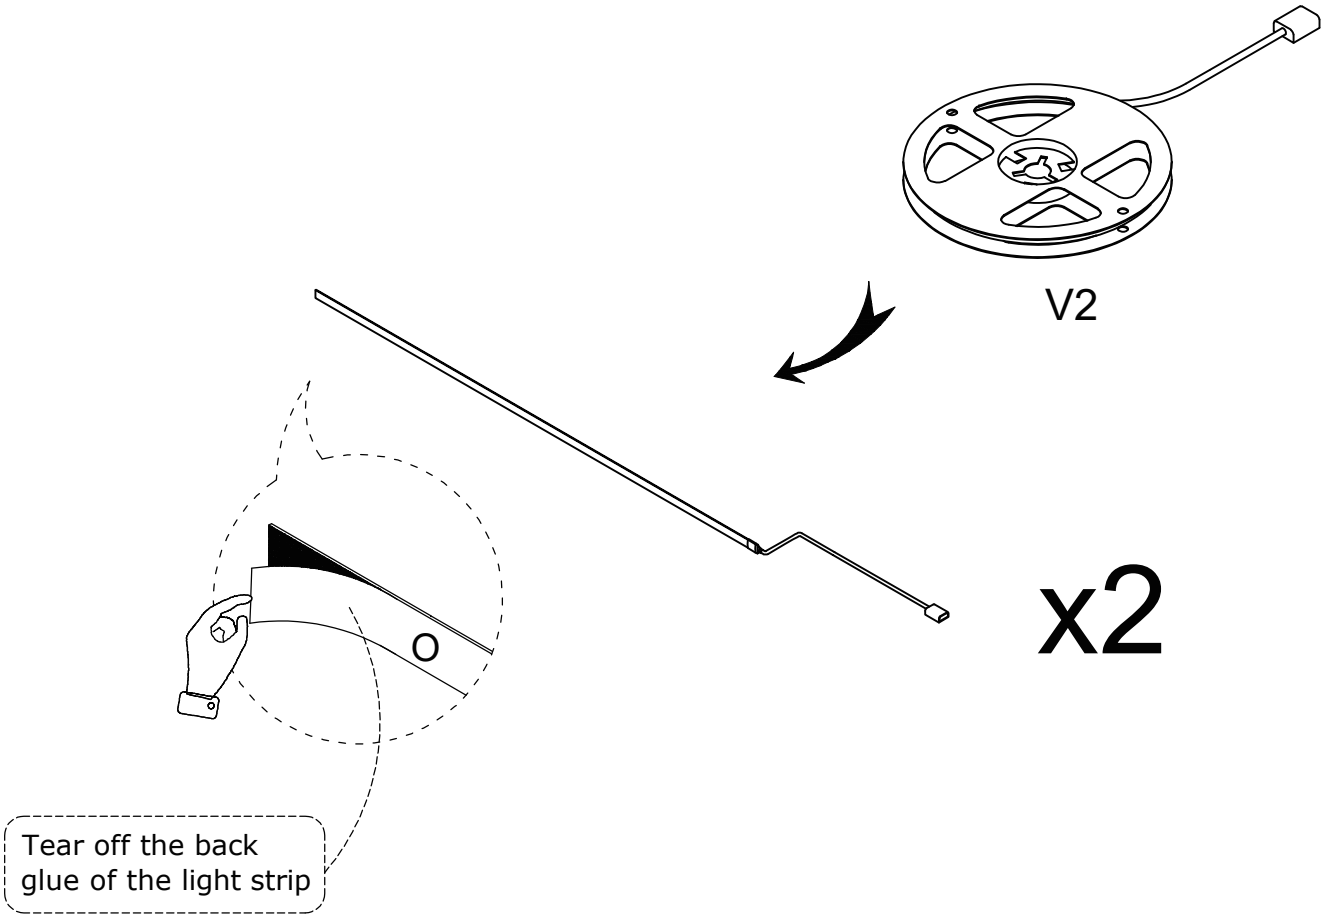


V2 x 2

Step 12

Attach the LED Strip Light (V2) to Board (⑭&㉒).

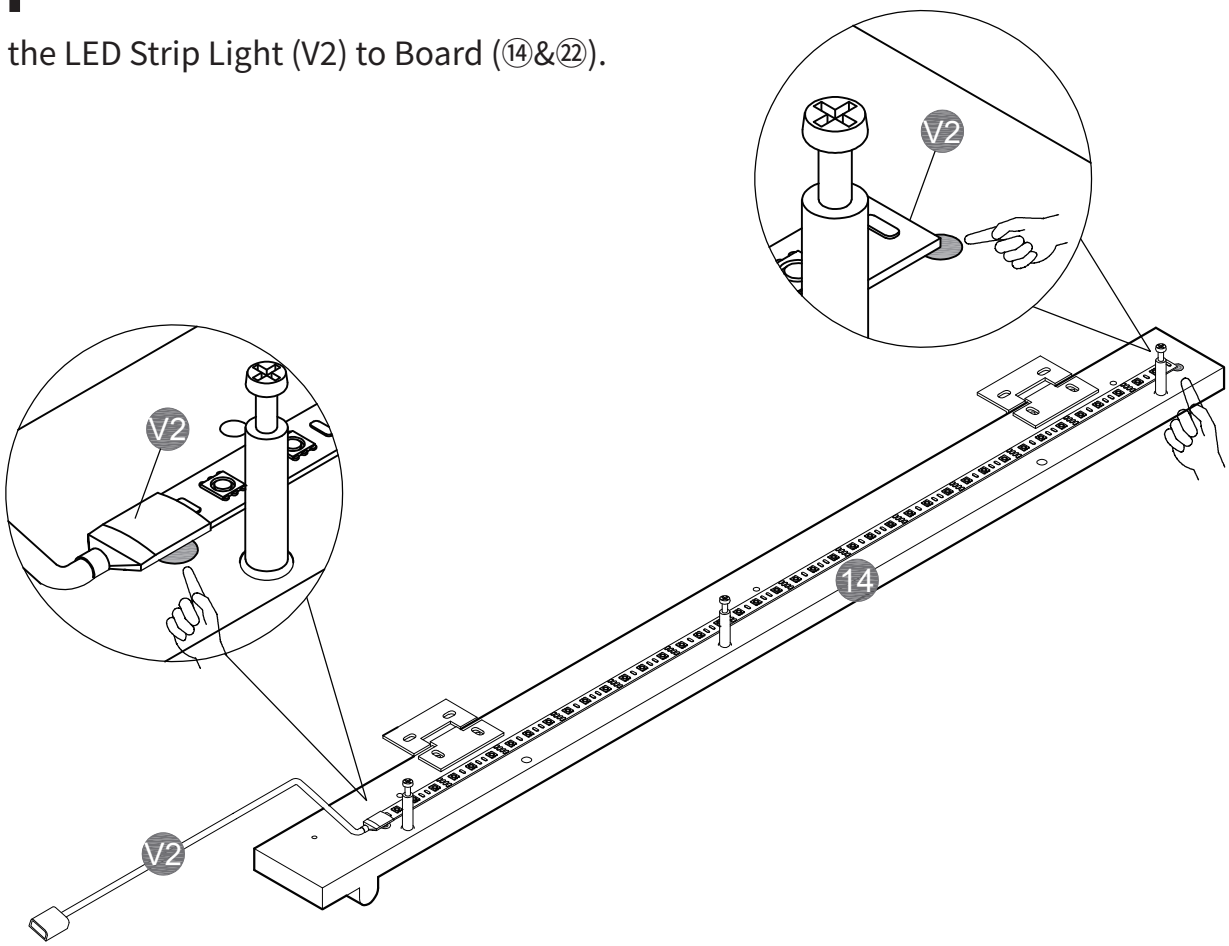


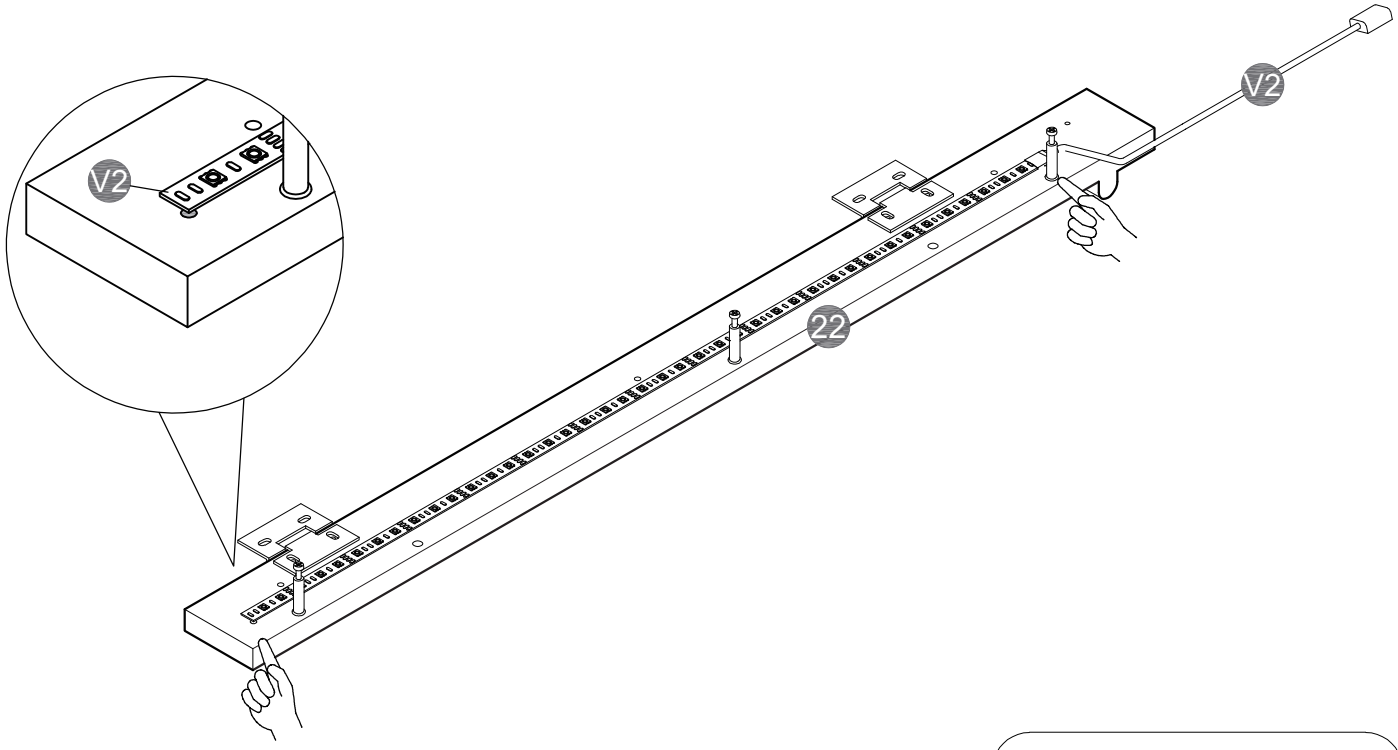


V2 x 2

Step 13

Inserting Wooden Dowel (C) into Board (⑦), then attach Board (⑬&⑭,㉑&㉒) to Board (⑦).

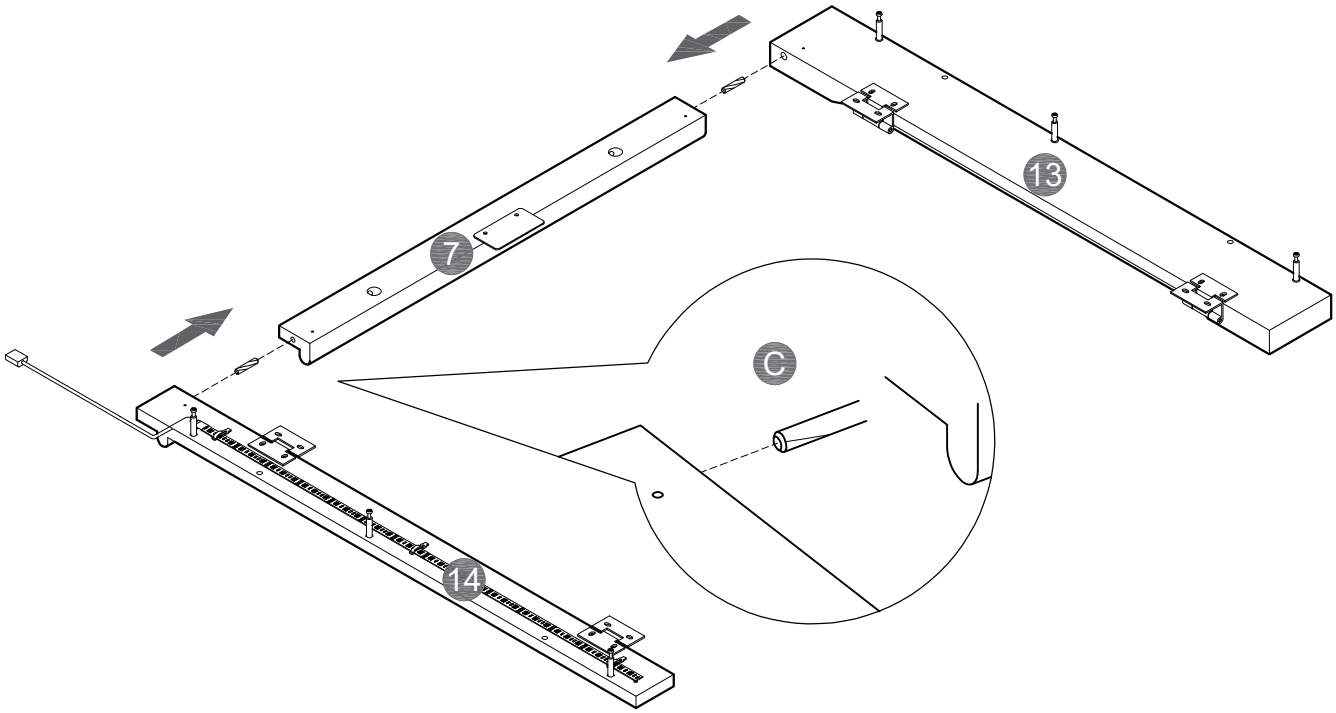


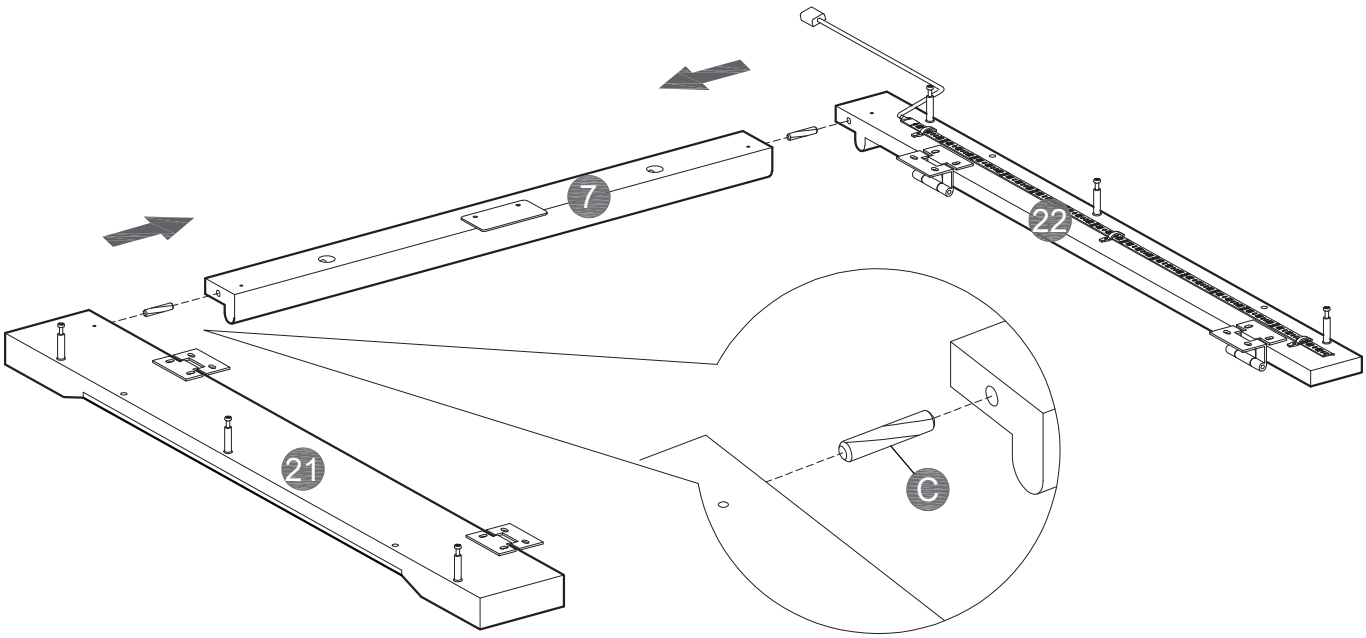



C x 4

Step 14

Using Screws (D&V4) secure Light Strip (V2) to Board (⑭&㉒).

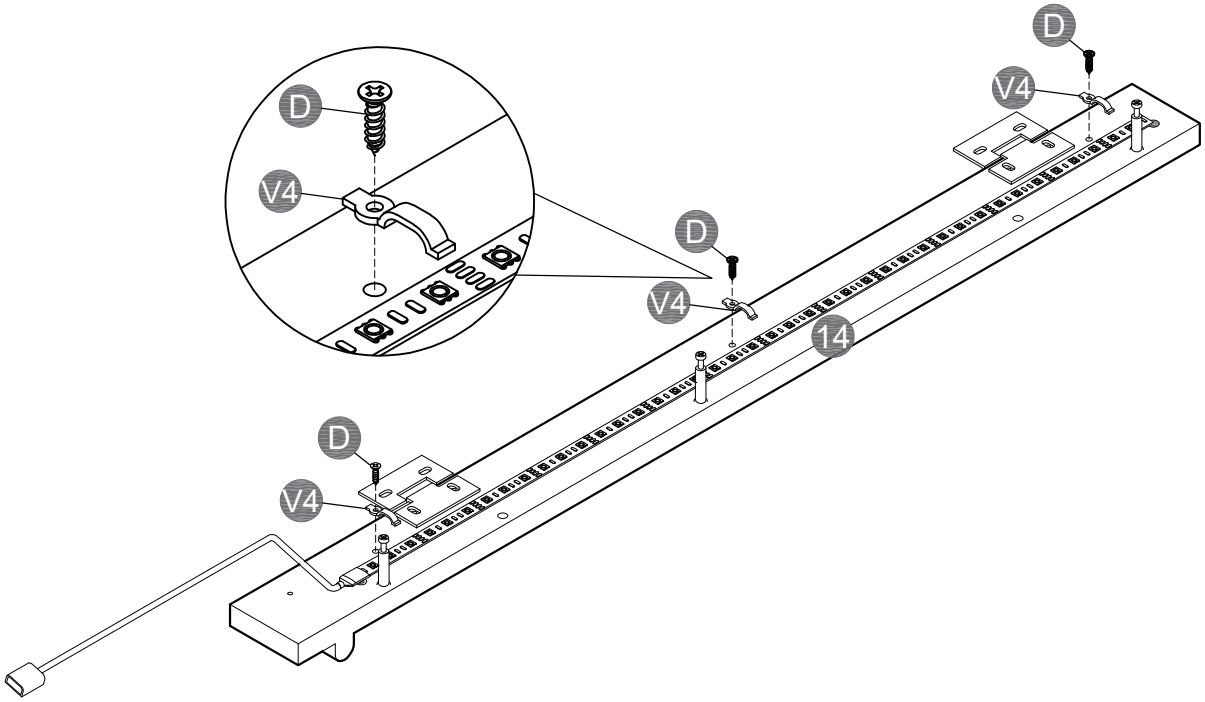


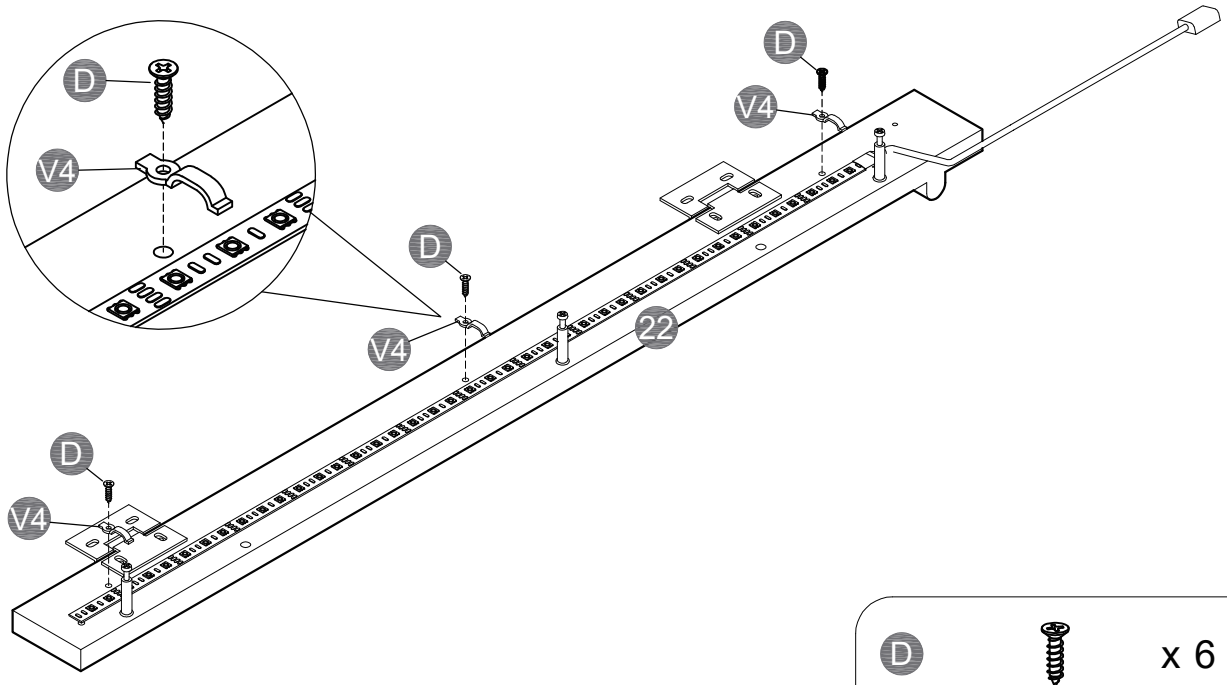


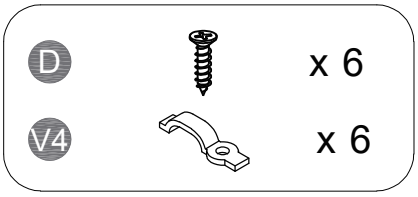



Step 15


Using Screws (D) secure Connector (E) to Board (⑦&⑬,⑦&⑭,⑦&㉑,⑦&㉒)

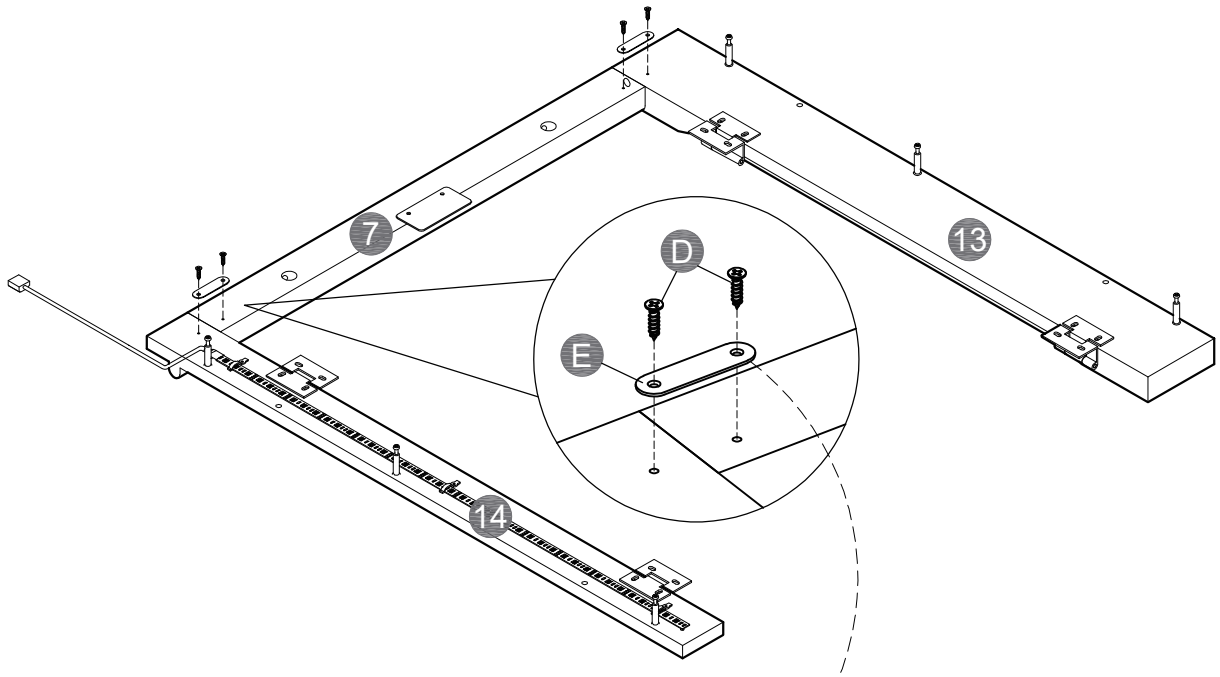

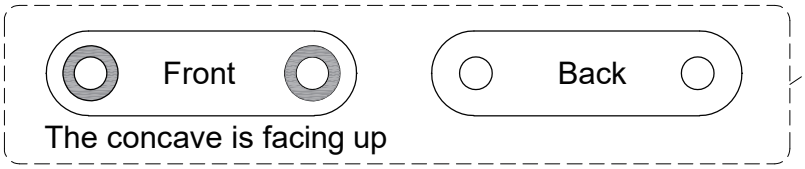

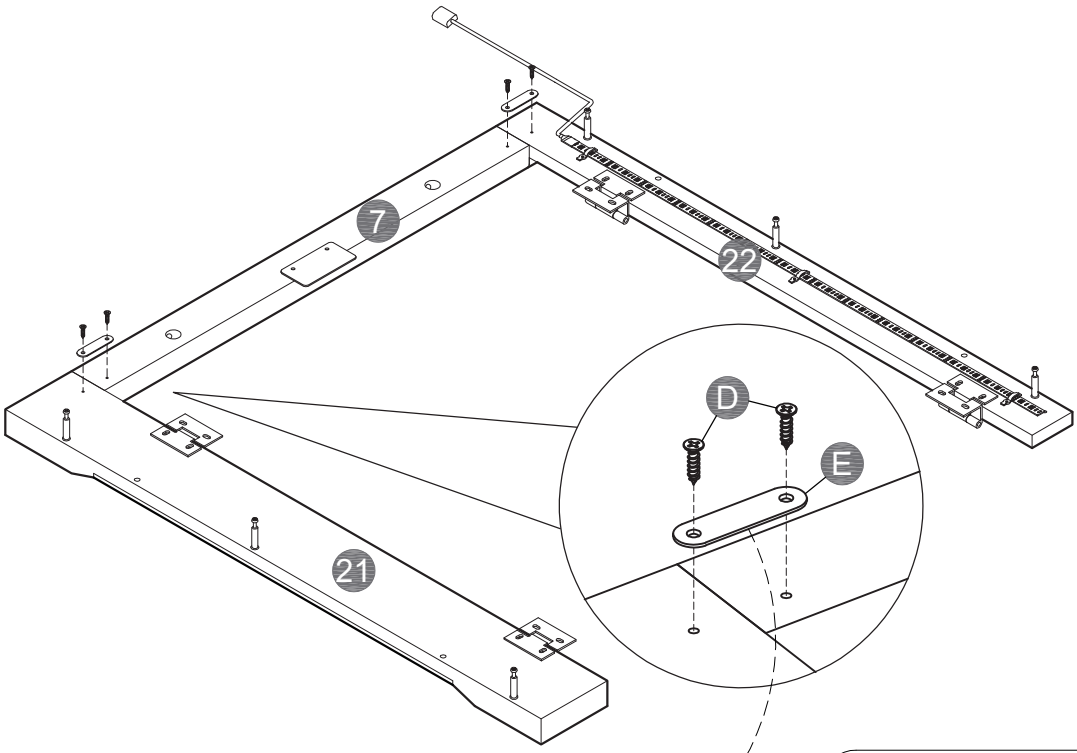


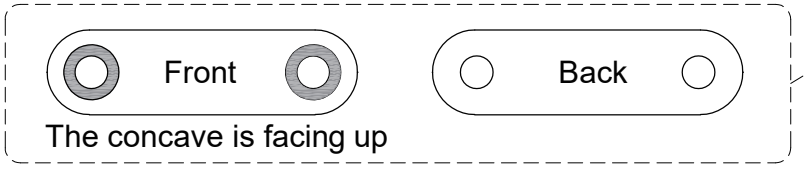


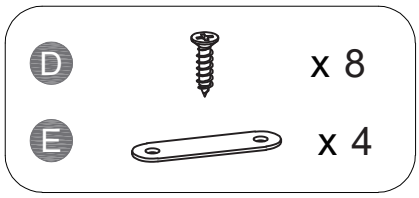


Step 16

Inserting Wooden Dowel (C) into Board (③&④, ⑰&⑱), then attach Board (⑬&⑭) to Board (③&④). then attach Board (㉒&㉑) to Board (⑰&⑱). Using Cam Lock (A) secure Board (⑬&⑭, ㉑&㉒) to Board (③&④, ⑰&⑱,).

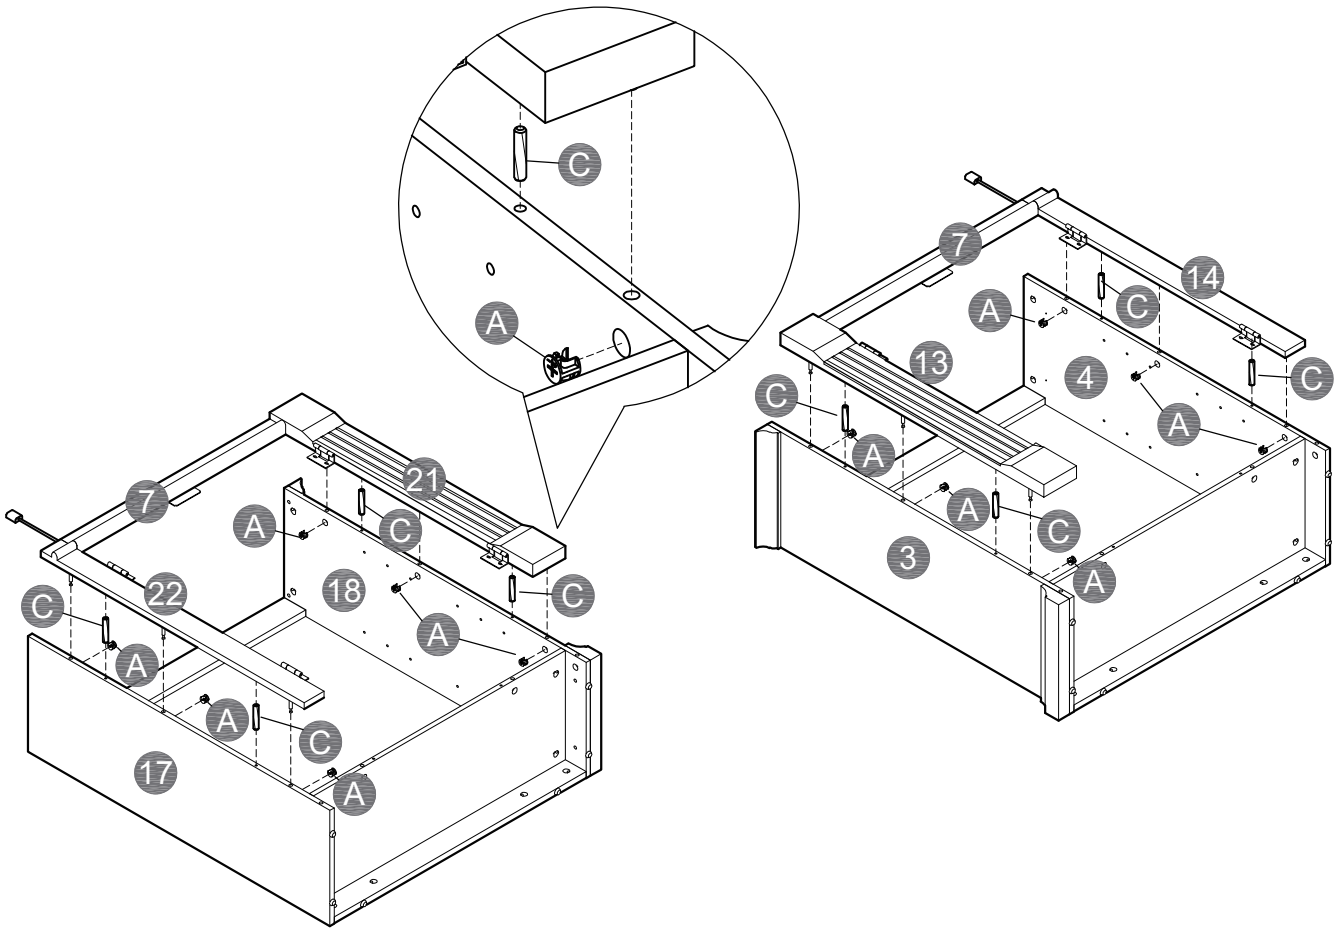


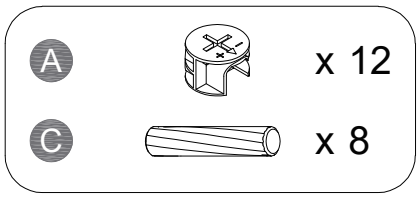


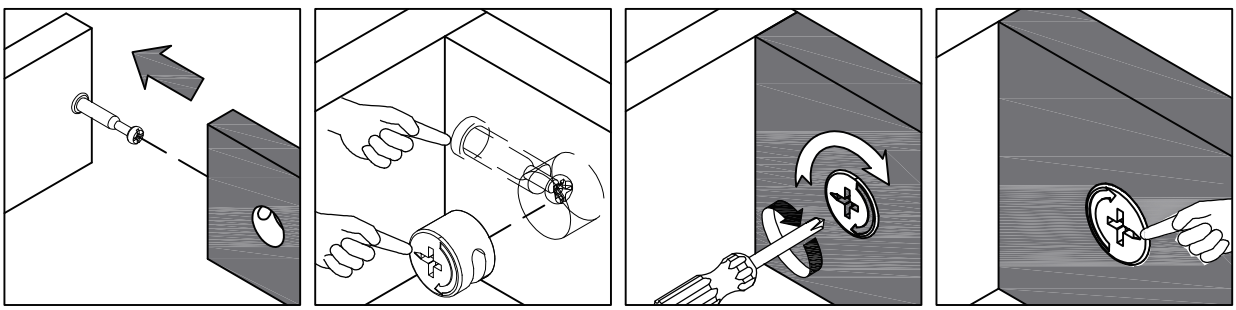

Step 17


Securing Cam Bolt (B) into Board (⑩&⑳).

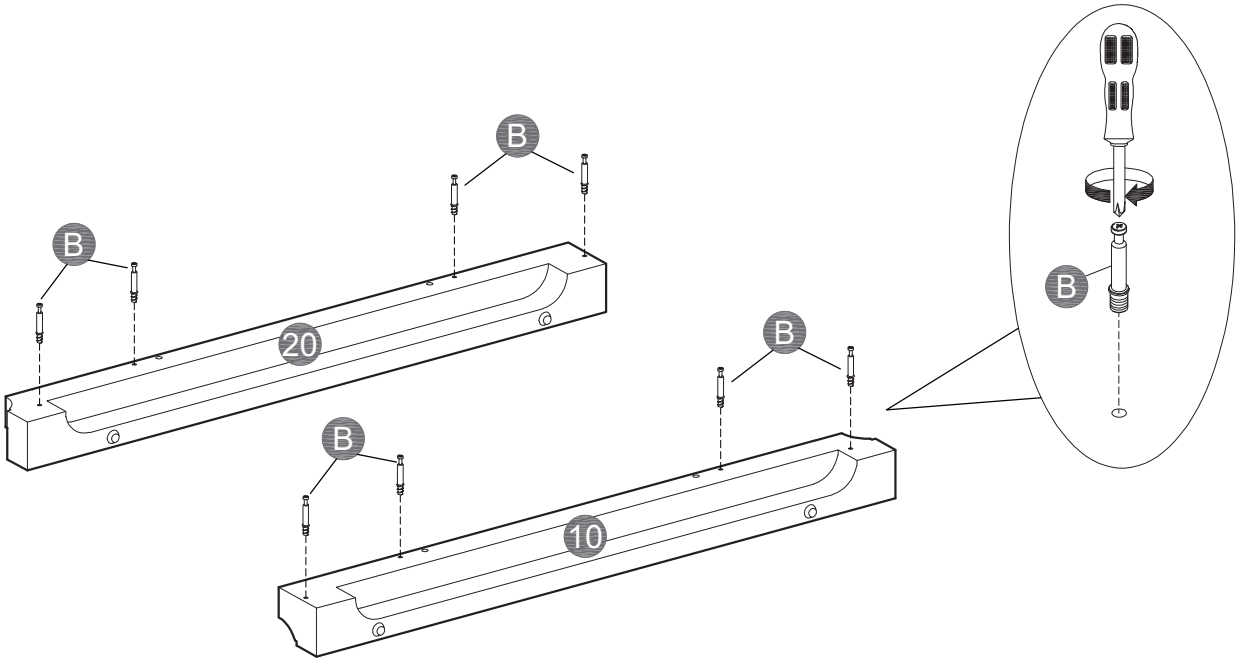





Step 18

Inserting Wooden Dowel (C) into Board (②), then attach Board (⑩&⑳) to Board (②&③&④, ②&⑰&⑱). Using Cam Lock (A) secure Board (⑩&⑳) to Board (②&③&④, ②&⑰&⑱).

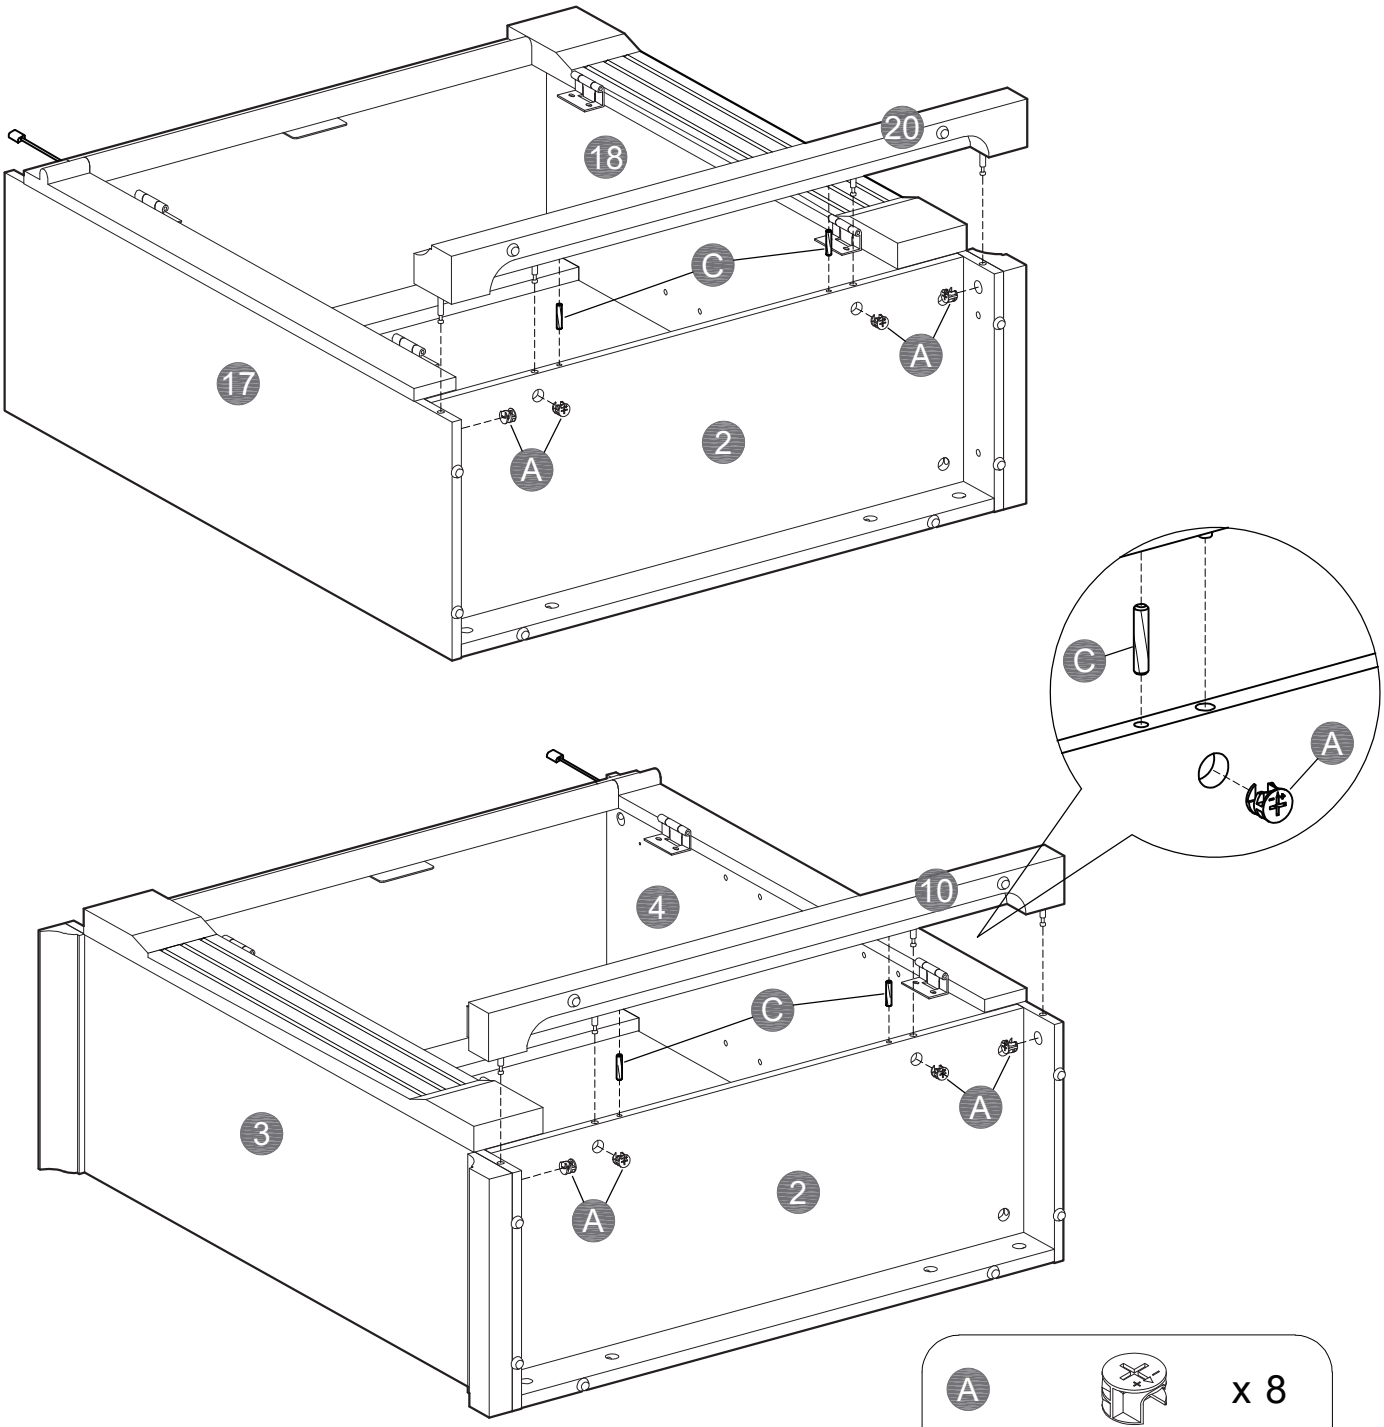


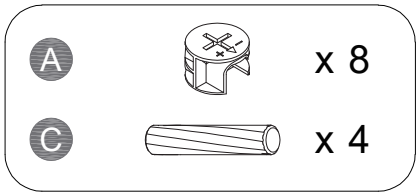

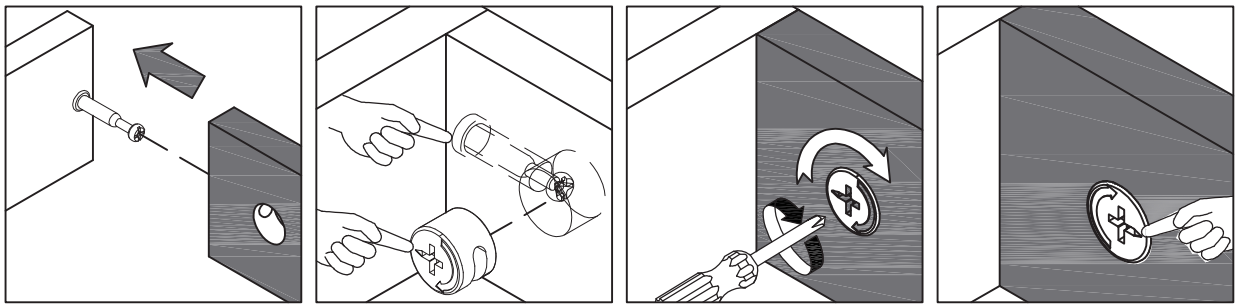


Step 19

Inserting Wooden Dowel (C) into Board (①&⑯), then Using Screws (O) and a 7-Shaped Wrench (S) secure Board (⑧) to Board (①), And secure Board (⑲) to Board (⑯).

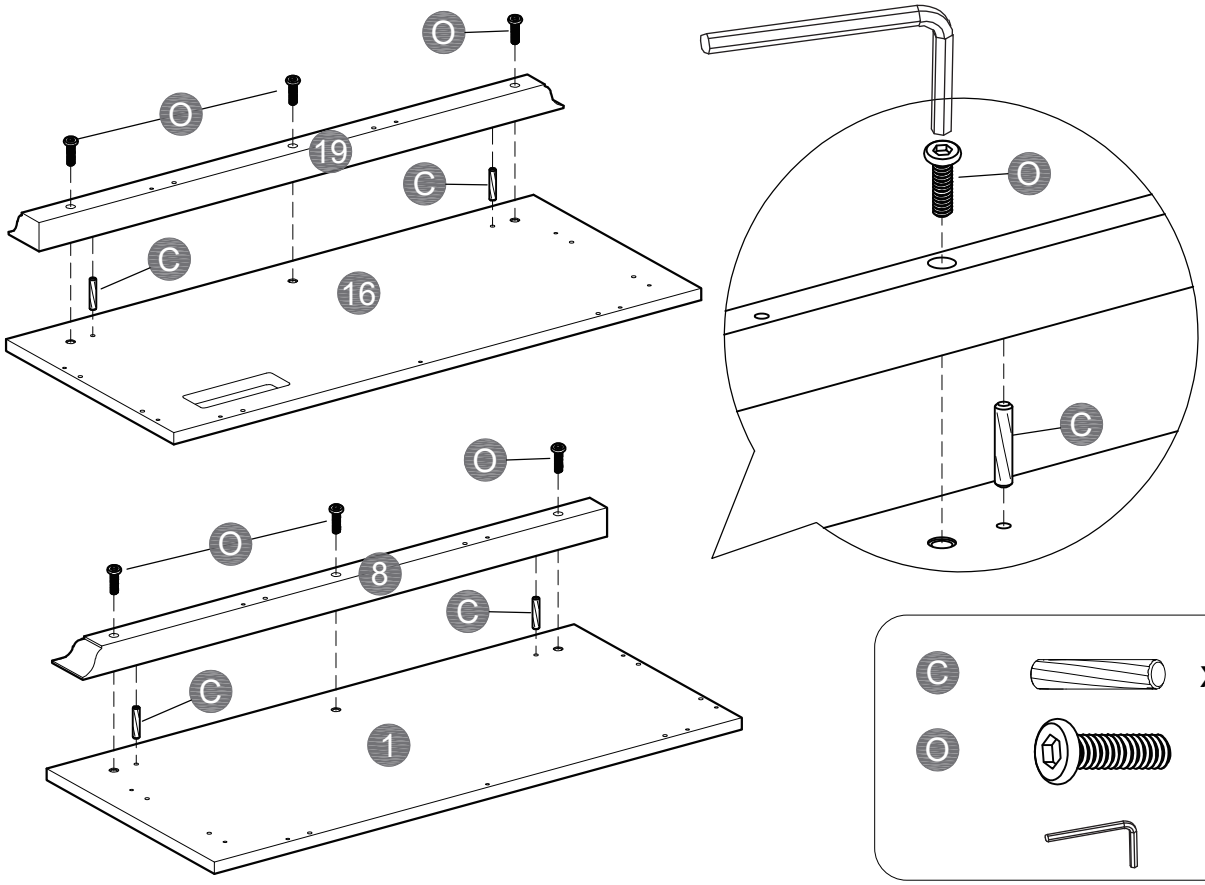


Step 20


Securing Cam Bolt (B) into Board (①&⑯).

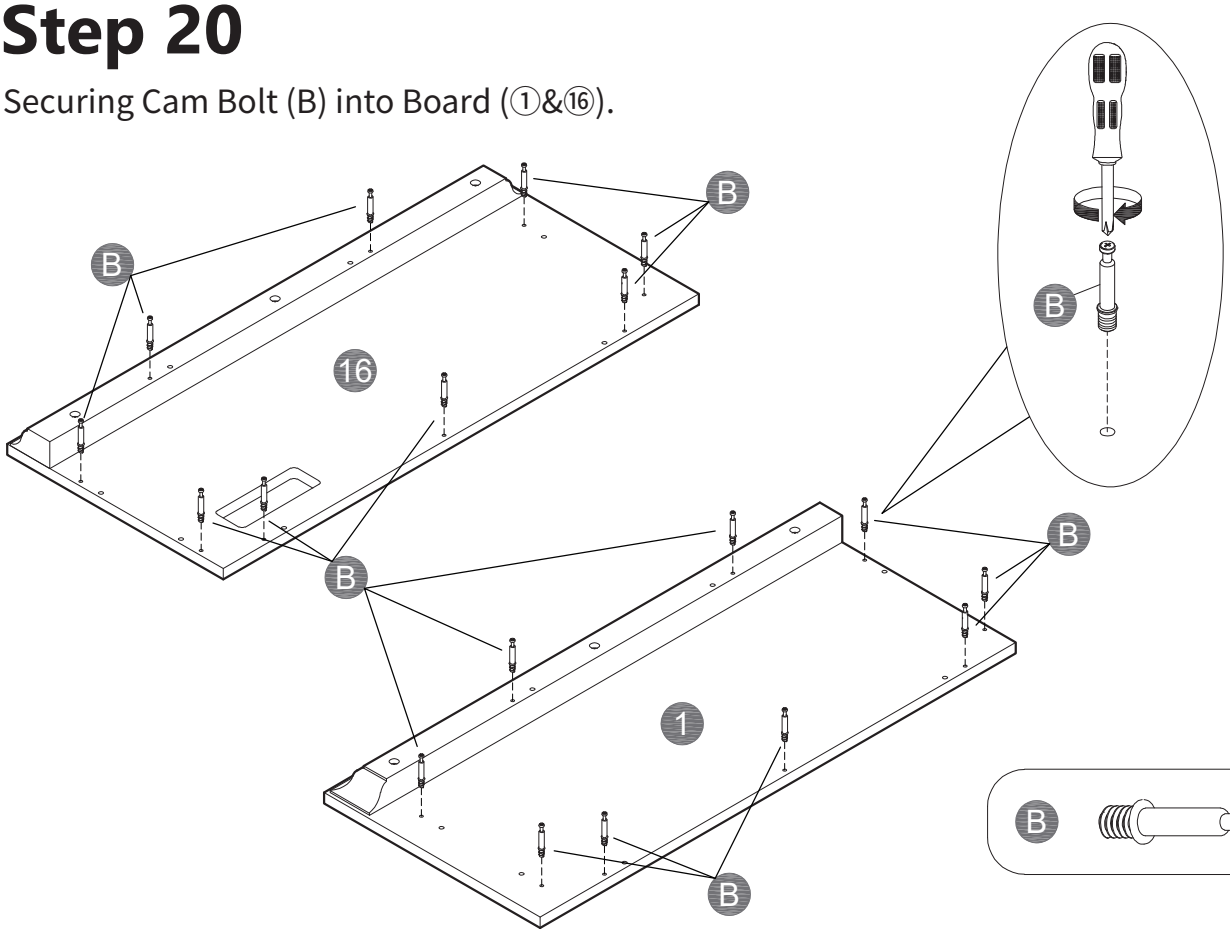


Step 21

Inserting Wooden Dowel (C) into Board (③&④&⑥&⑦), then attach Board (①) to Board (③&④&⑥&⑦), Using Cam Lock (A) secure Board (①) to Board (③&④&⑥&⑦).

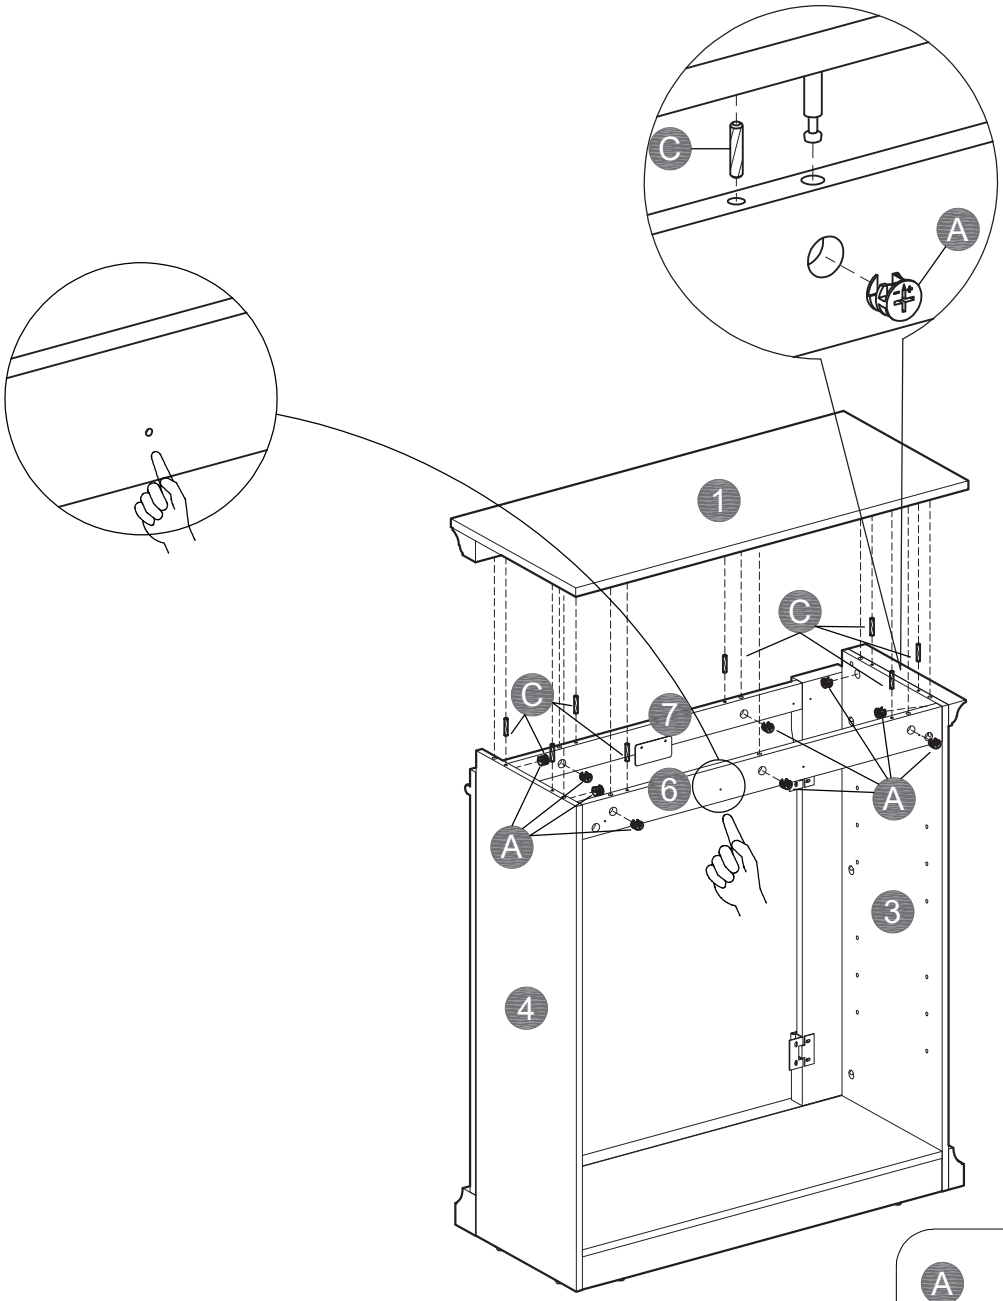


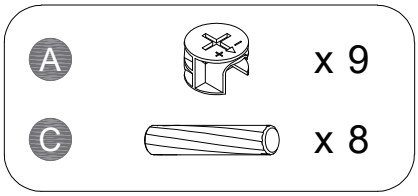


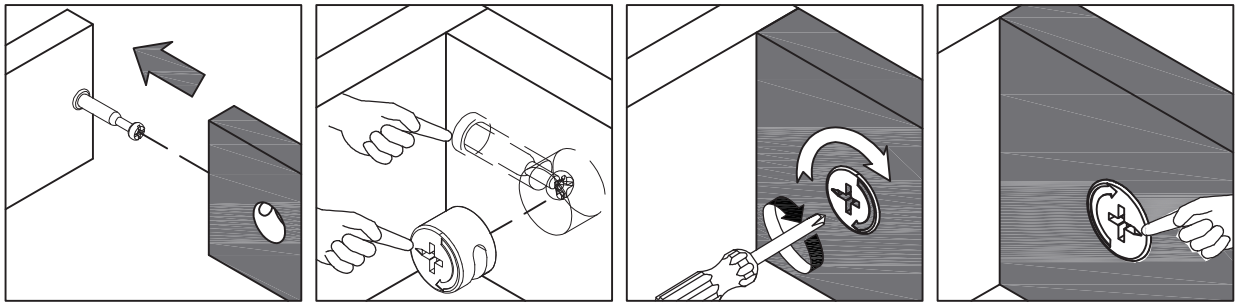


Step 22

Inserting Wooden Dowel (C) into Board (⑥&⑦&⑰&⑱), then attach Board (⑯) to Board (⑥&⑦&⑰&⑱), Using Cam Lock (A) secure Board (⑯) to Board (⑥&⑦&⑰&⑱).

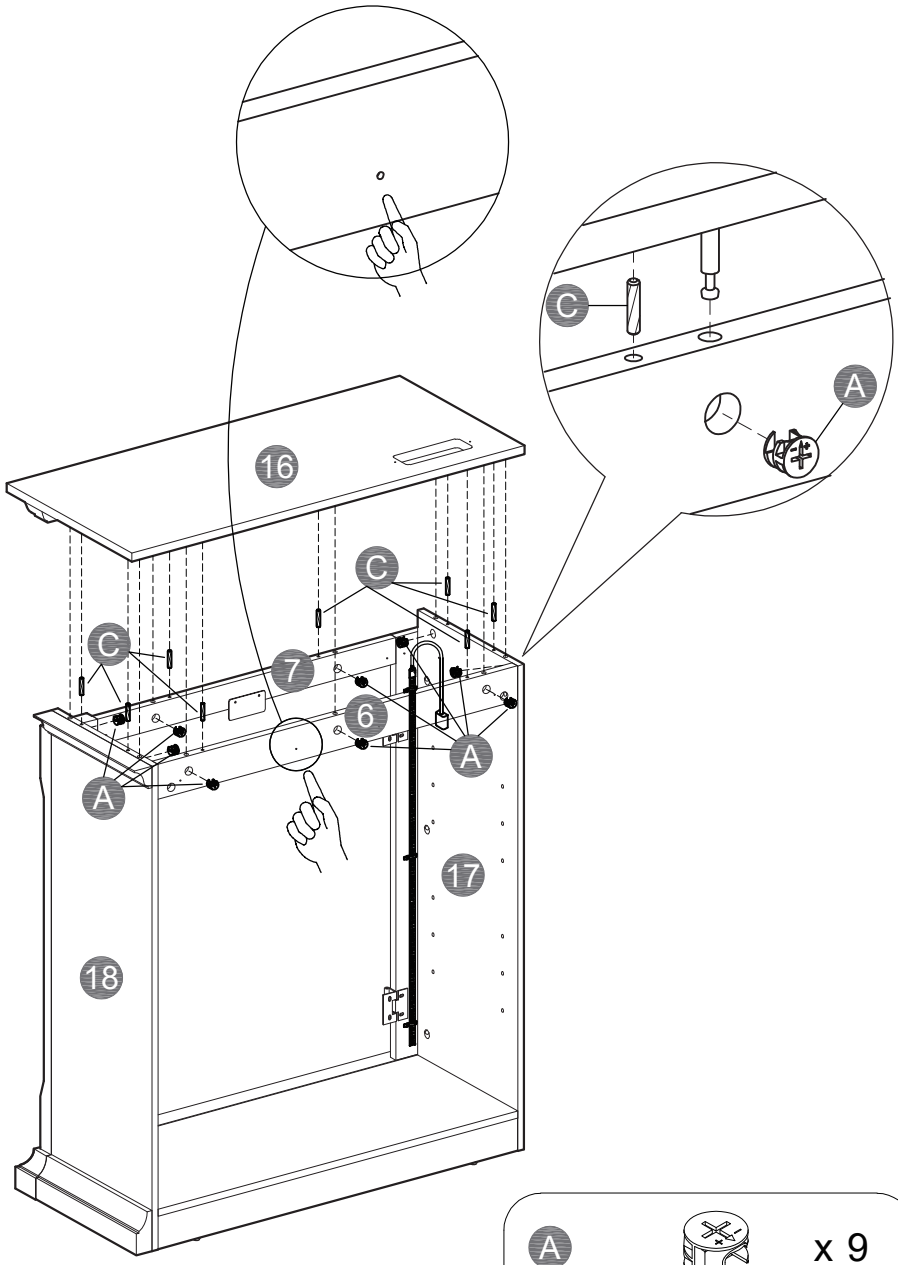


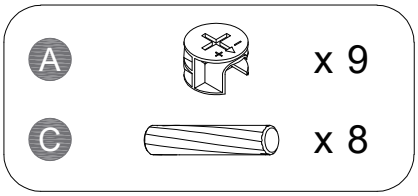


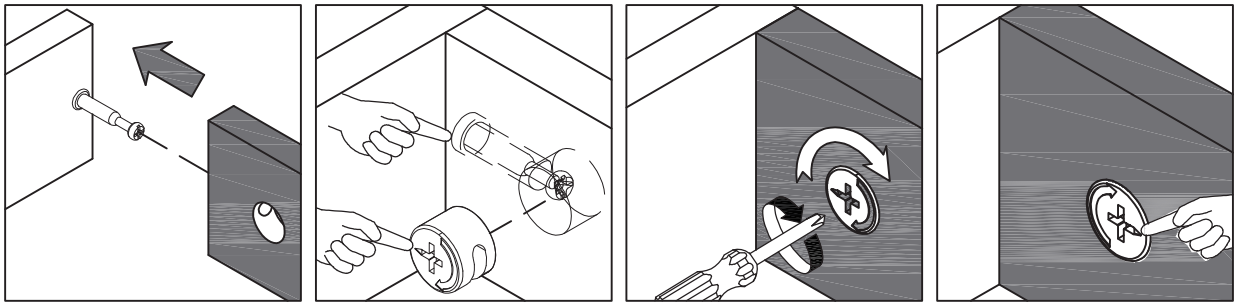

Step 23


Using Screws (D & V4) secure the Light Strip (V2) to the Board (④&⑰).

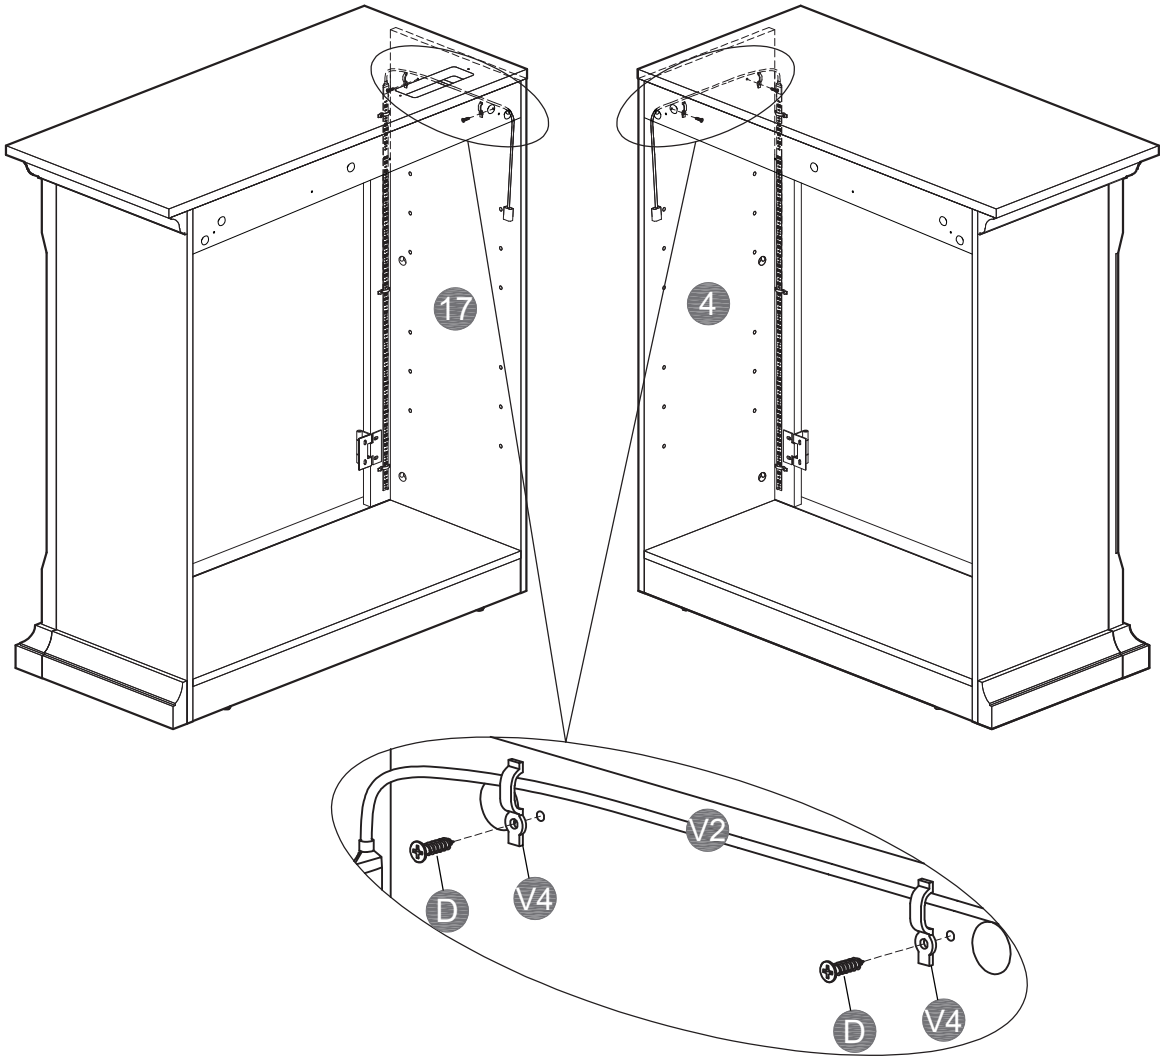


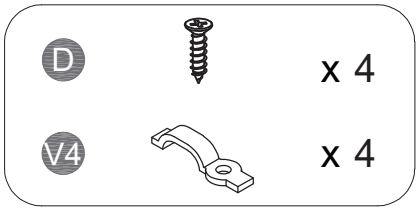


Step 24

Using Screws (H) to assemble Doors (㉔&㉕) to the Board(③&④, ⑰&⑱)
Since the door hinge's mounting holes are adjustable
in all directions, be sure to center the screws during installation.

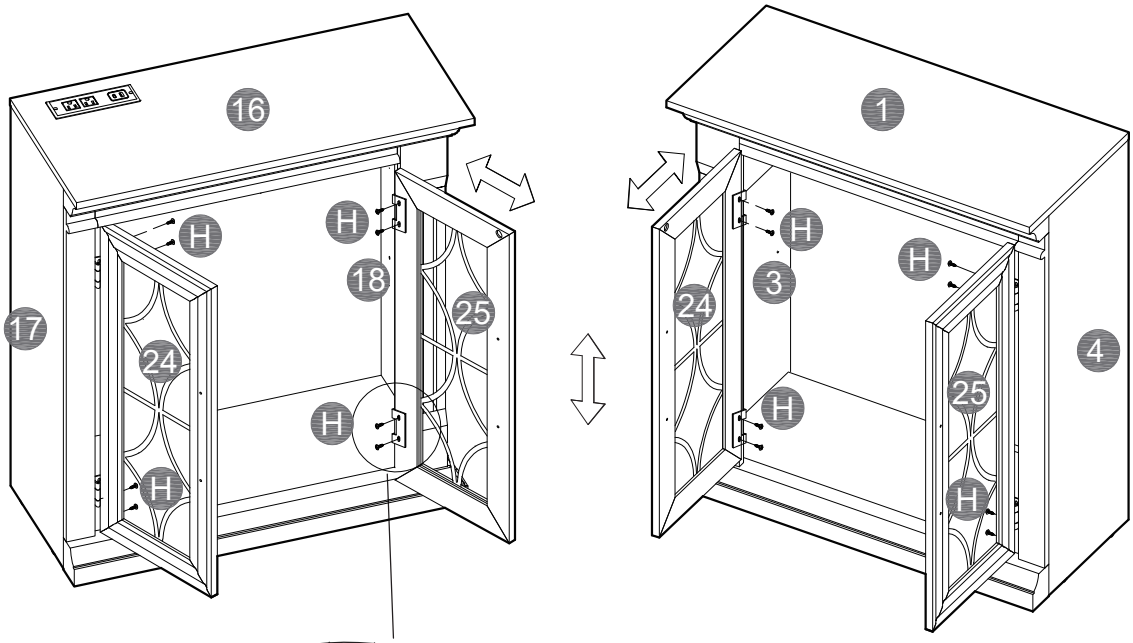

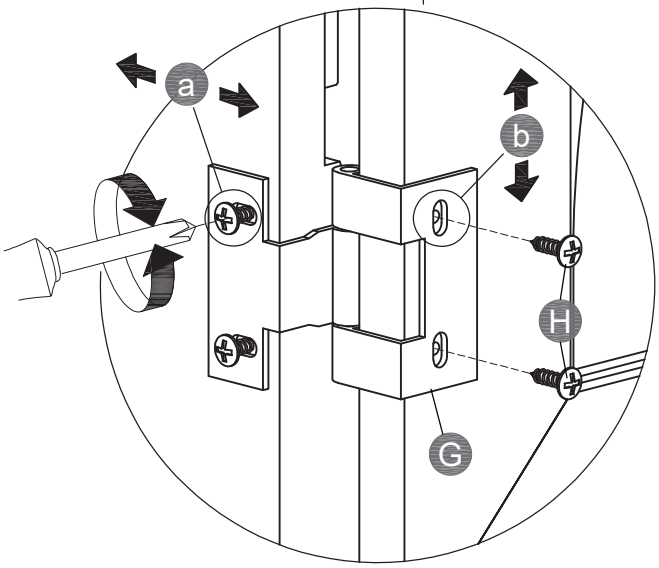


(a)TO ADJUST THE DOOR TO RIGHT OR TO LEFT
(b)TO ADJUST THE DOOR UP OR DOWN

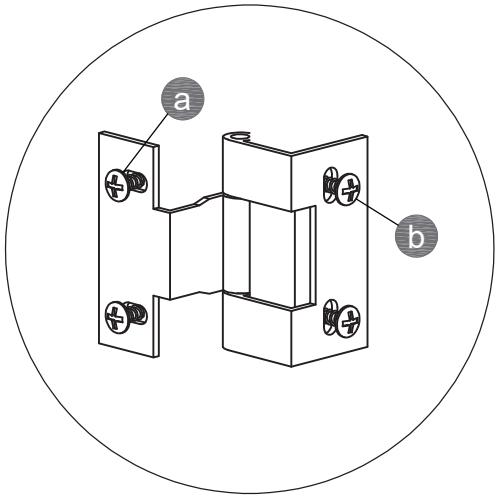

H  x 16


Step 25

Using Screws (L) to assemble Handle (K) to the Board (㉔&㉕).

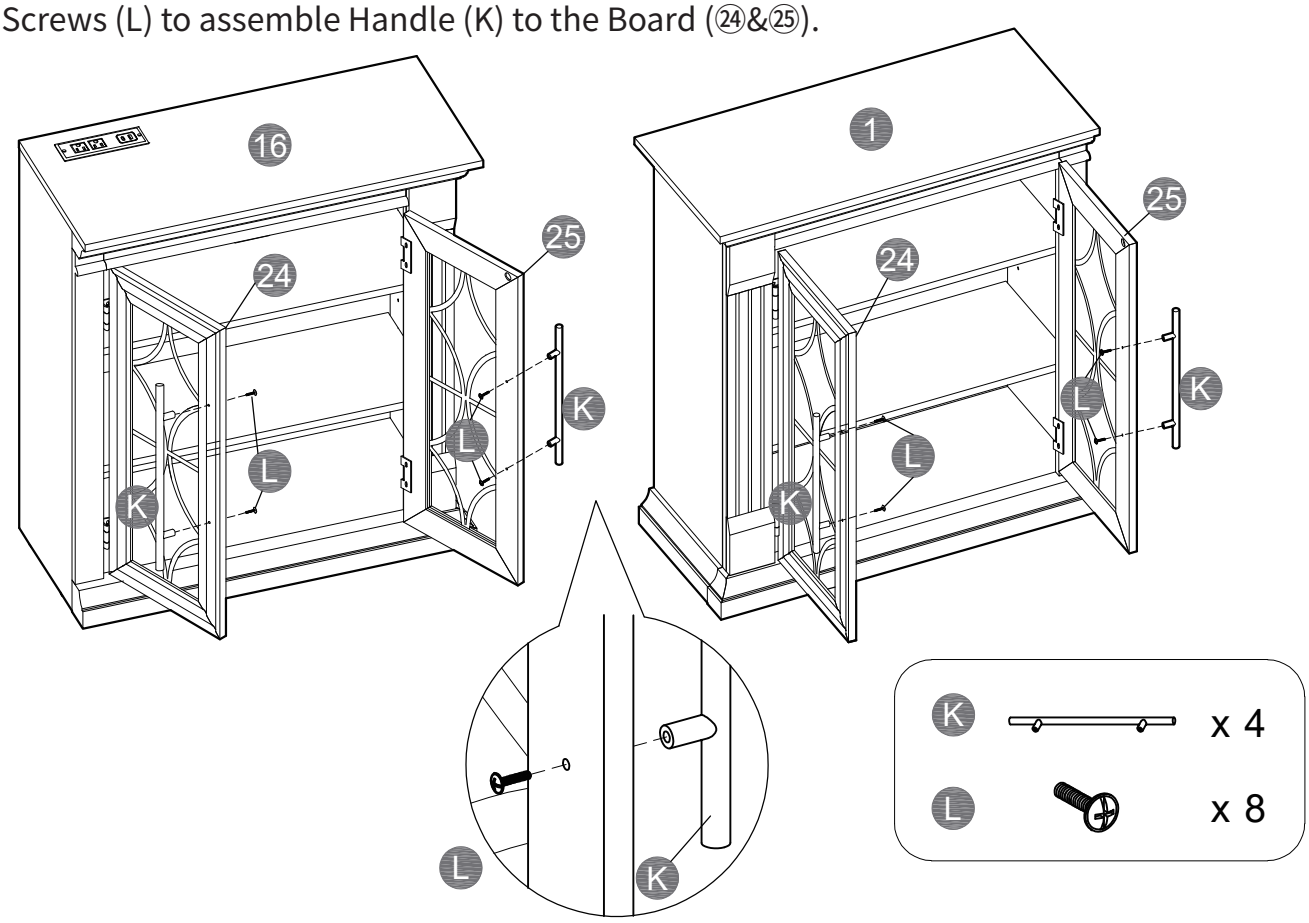


Step 26

Securing Support Accessories (M) into Board(③&④, ⑰&⑱).
There are three heights can be adjusted.

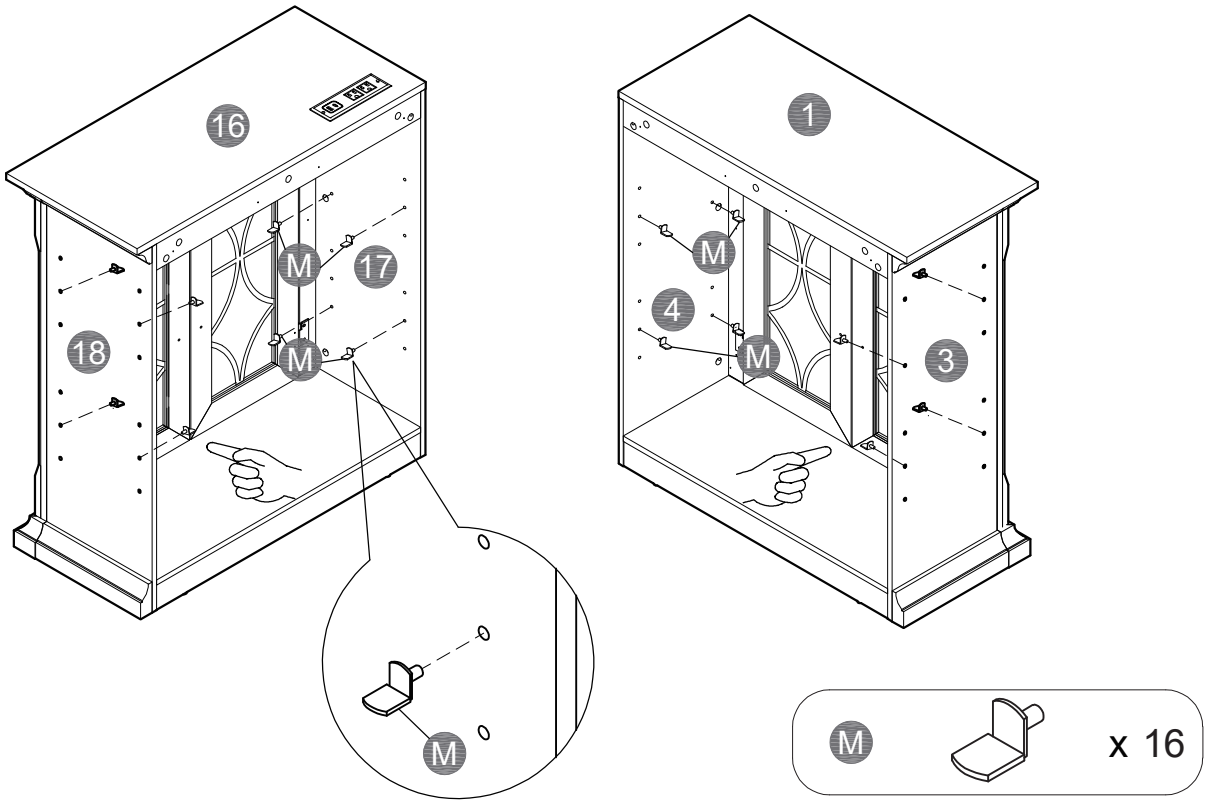


Step 27

Place the Board (⑤) into Board (③&④,⑰&⑱).

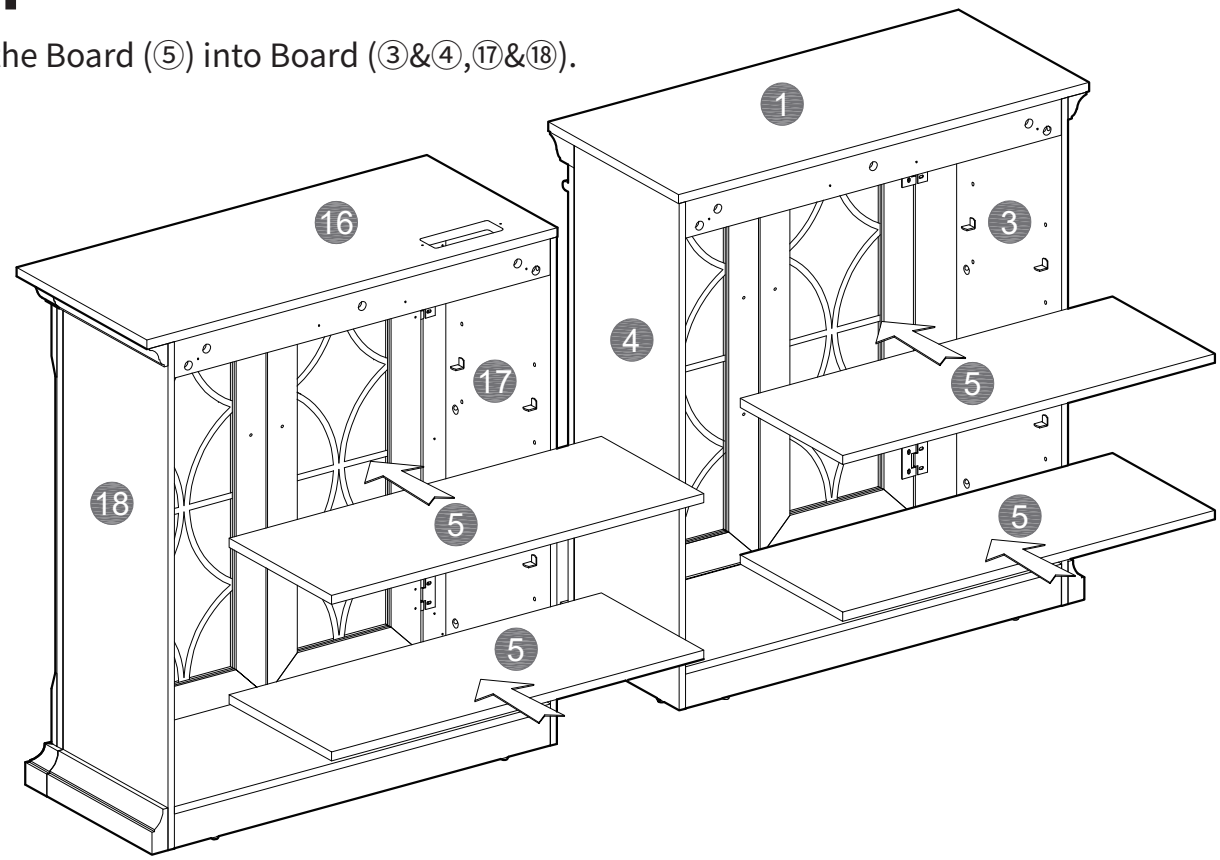


Step 28


Using Screws (U) secure Charging Staion (W) to Board (⑯).

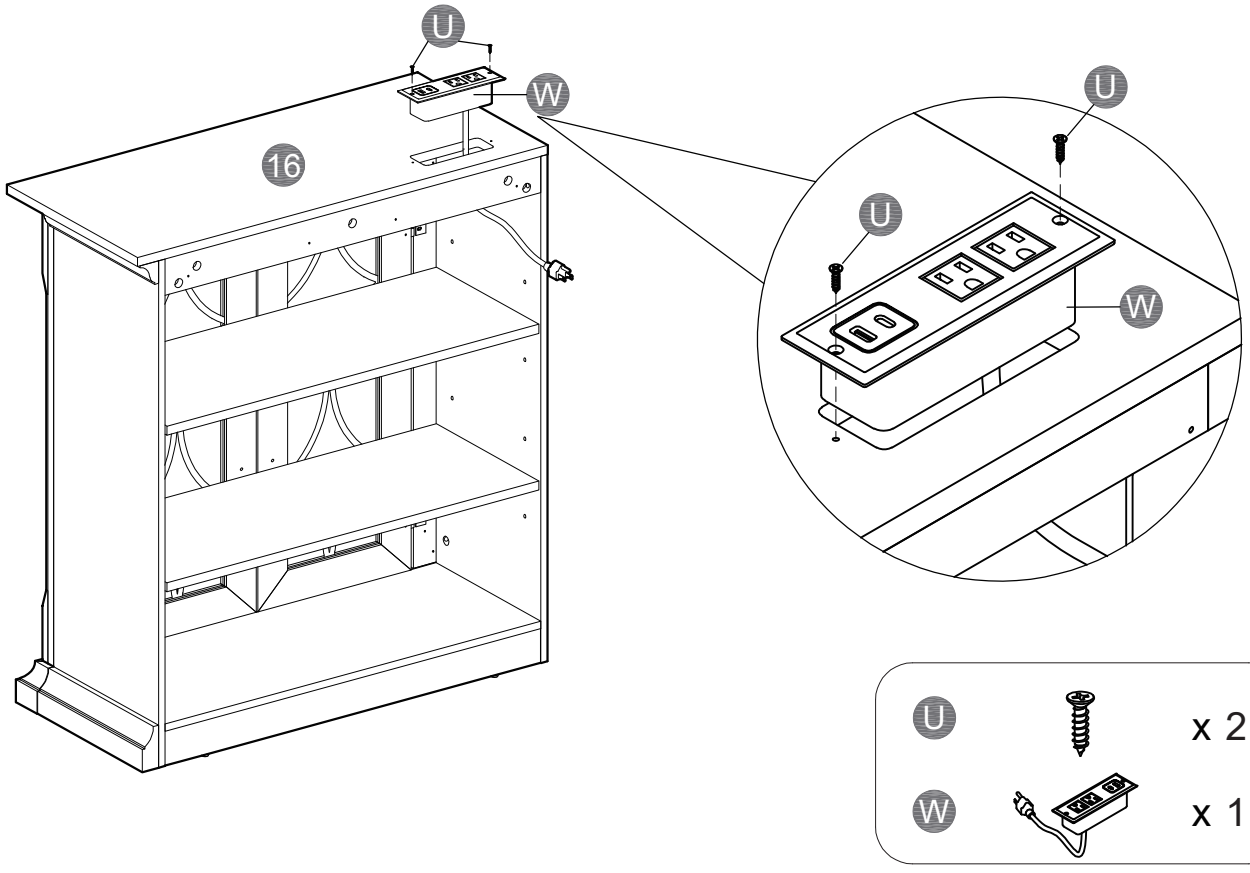

Step 29


Using Screws (F) through Anti-tipping Belt (P) to assemble Back Panels (⑮&㉓) to the main body.

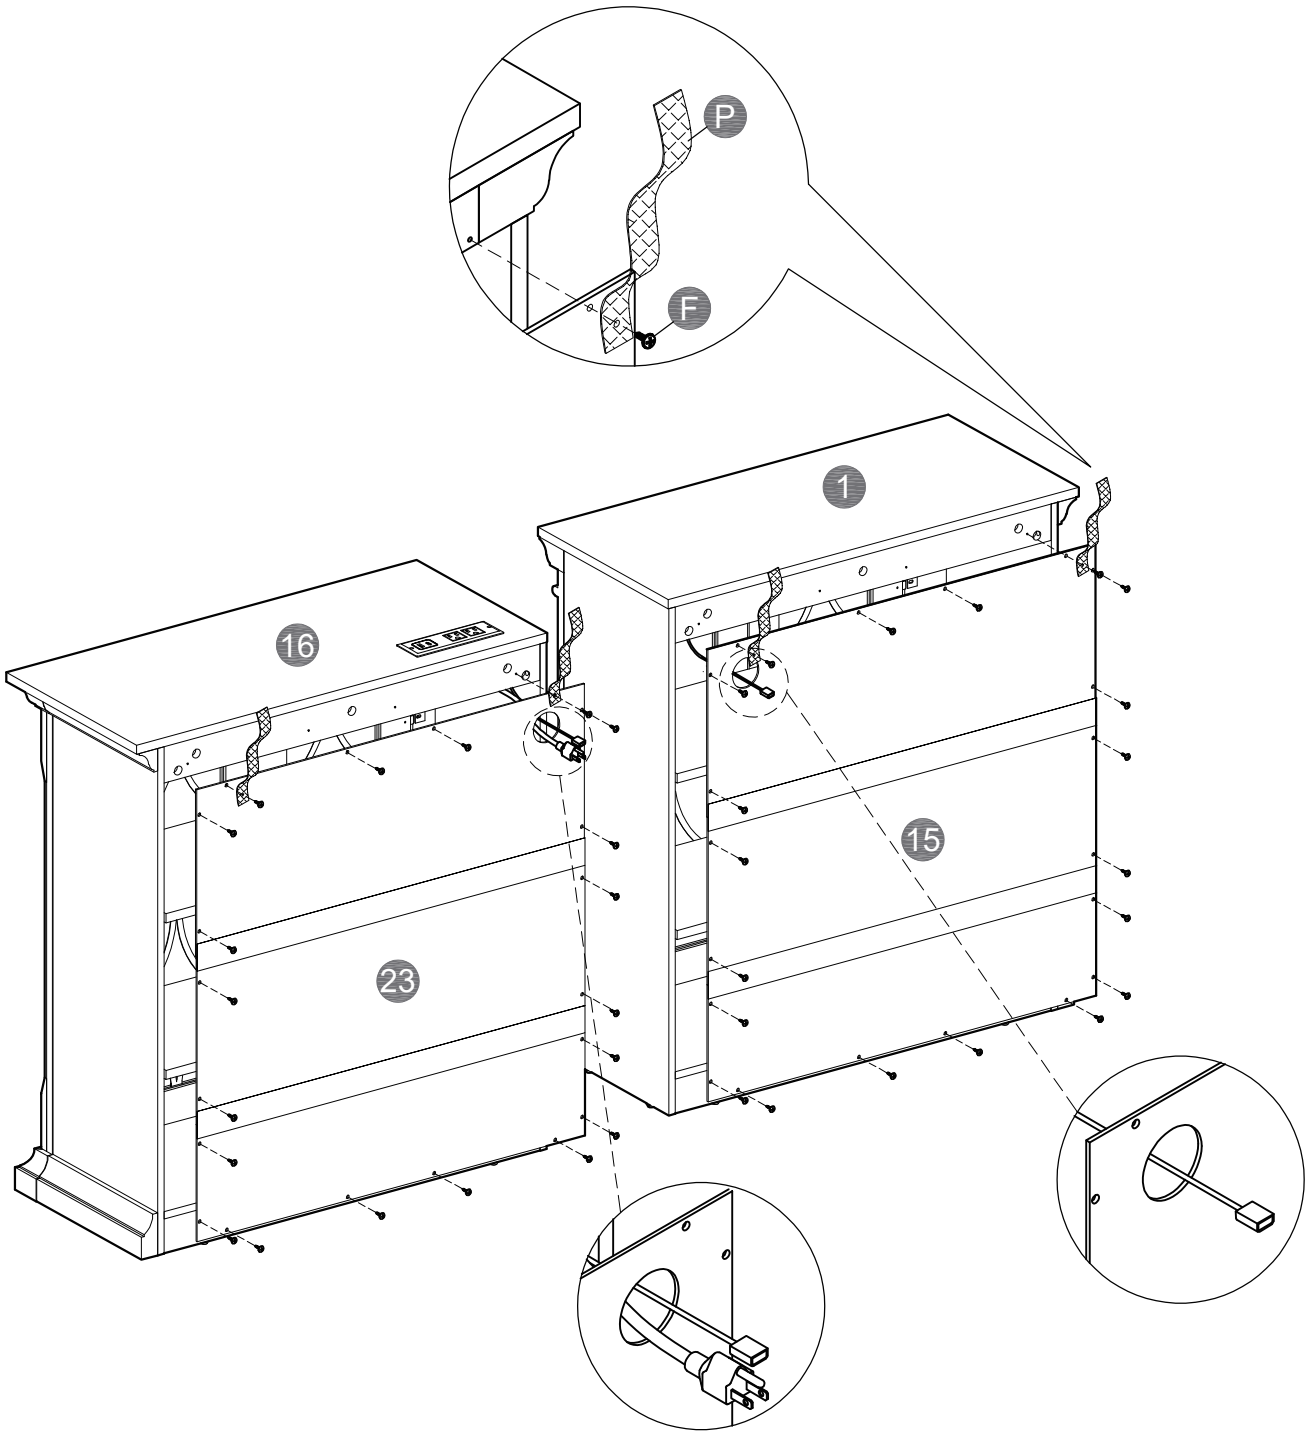


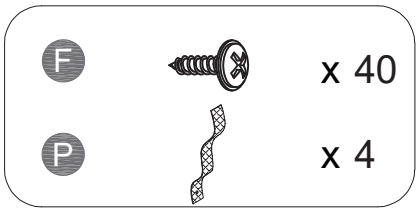

Step 30


Connect Accessories(V3&V5) to the Light Strip (V2).

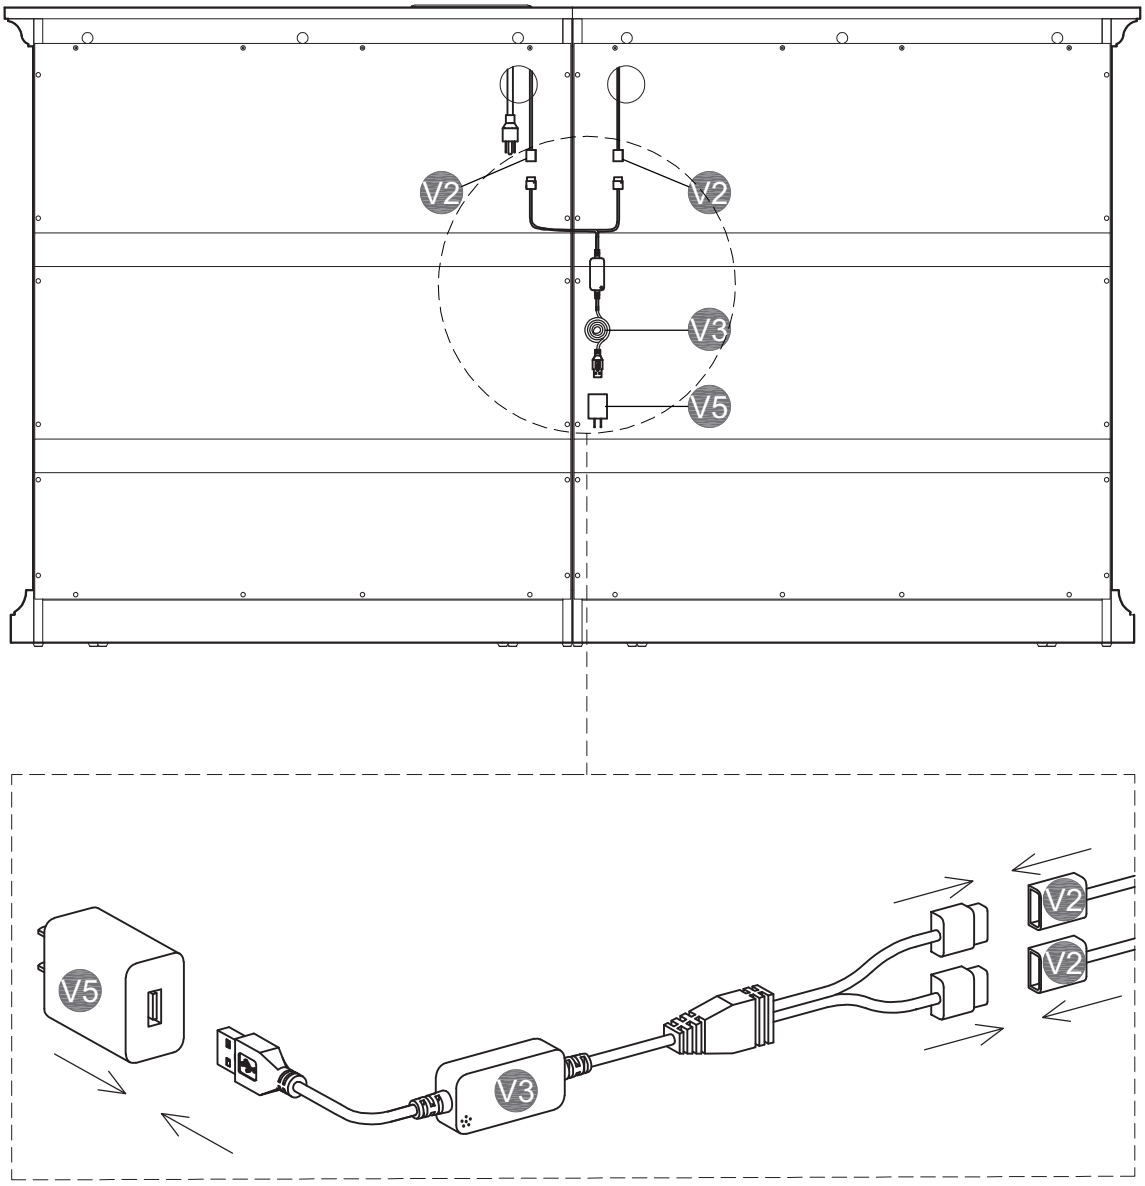

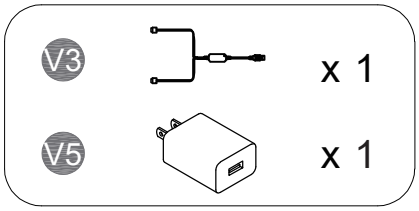

Step 31


Drill 4 holes in the wall and Hammer the (Q) in.

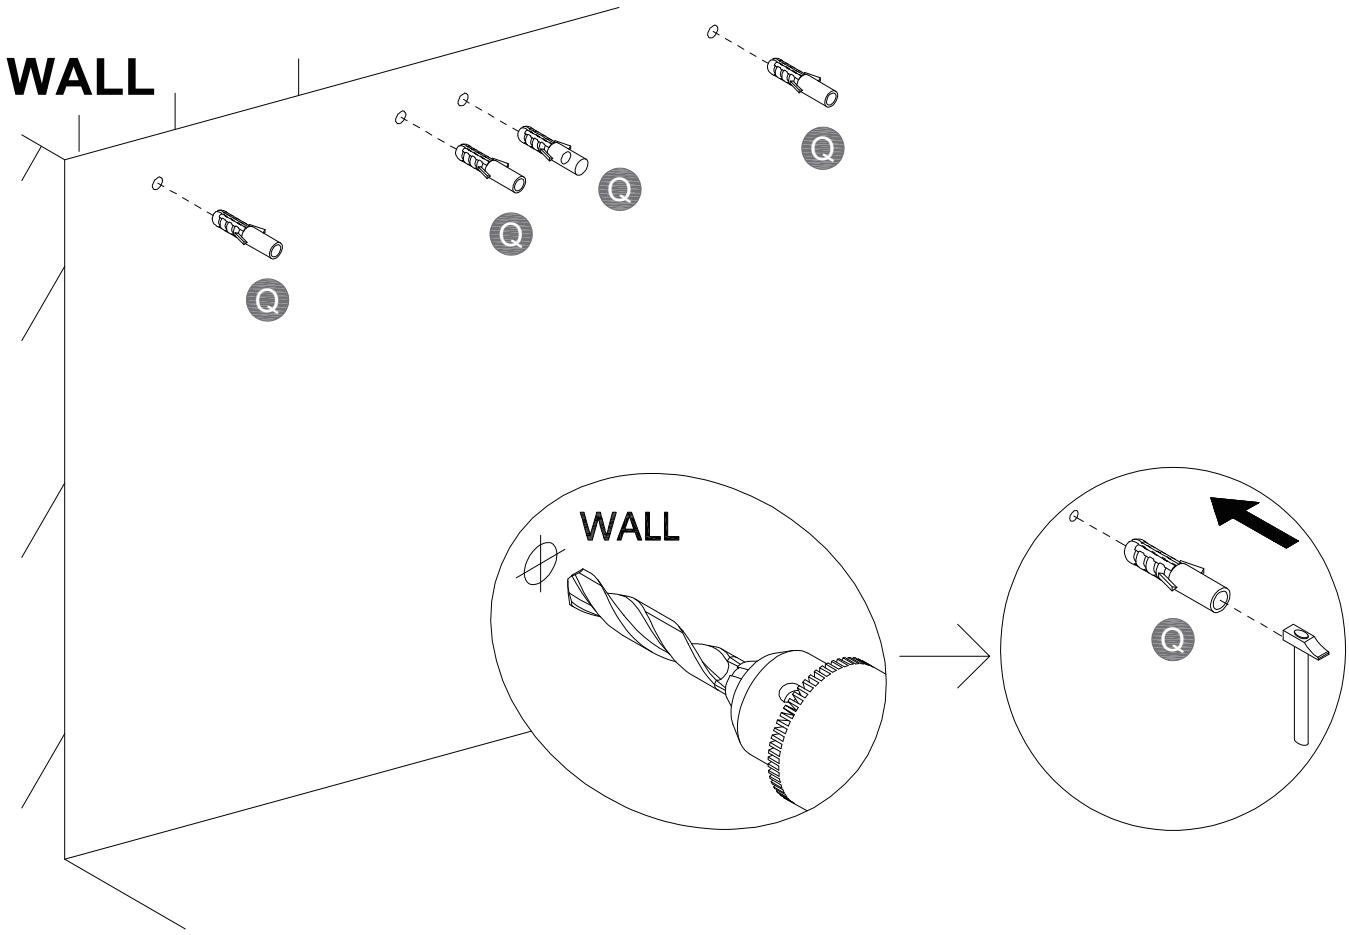

Q x 4

Step 32

Using Screw (R) attach Anti-tipping Belt (P) into Nut (Q) to wall.

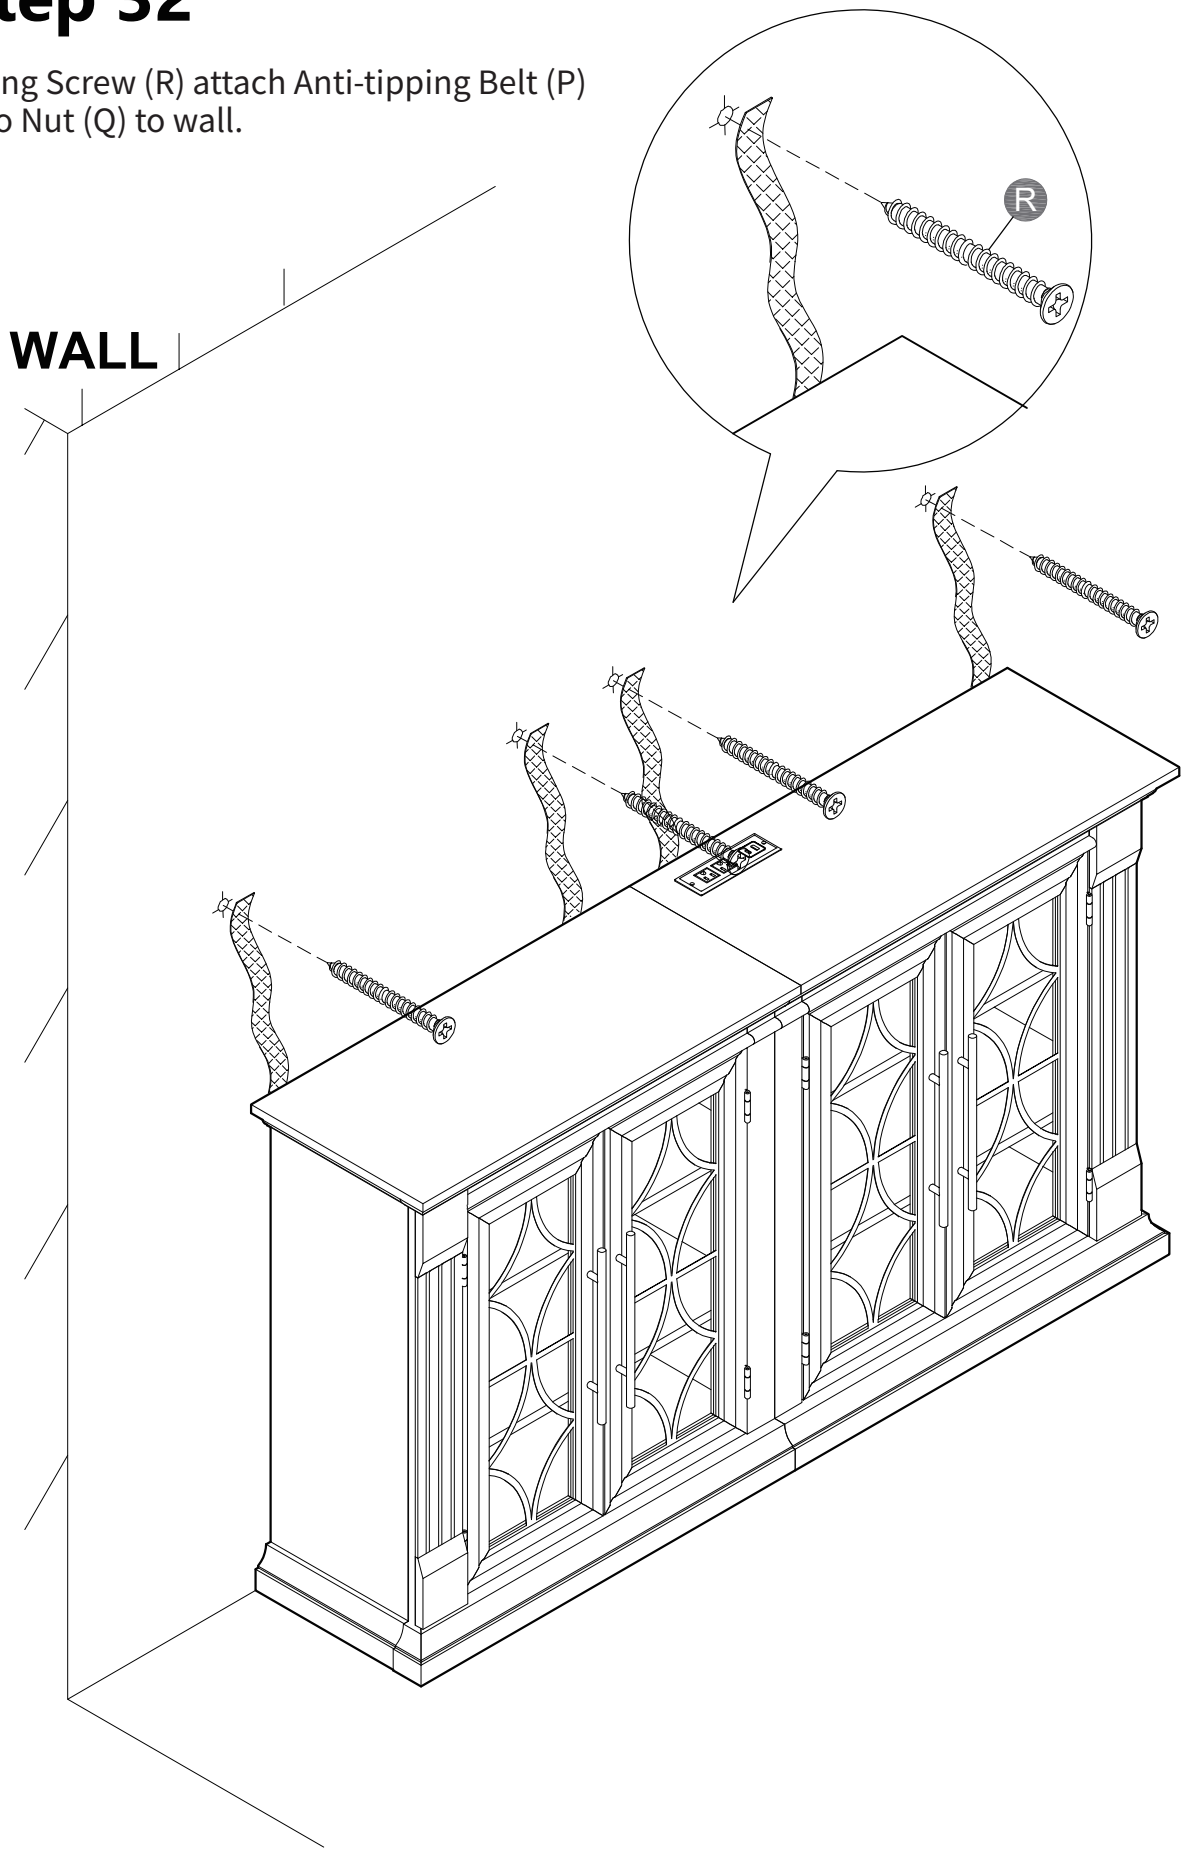

R x 4

This 47-inch fireplace HW-AM557847 can be combined with the storage cabinet HW-AM557848 sold separately in our store to create a 104-inch fireplace unit. Should you wish to create this configuration, we recommend purchasing both items together.
When assembling the combination: Using Screws (D&V3) attach Light Strip to Board (③), as shown.

HW-AM557847+HW-AM557848

