

installation instructions:

SIGNATURE URETHANE RAFTER TAILS

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear safety goggles.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

Rafter tails are not load-bearing, decorative use only.

TOOL & MATERIAL CHECKLIST

- | | |
|---|---------------------------------------|
| <input type="checkbox"/> electric drill | <input type="checkbox"/> wood blocks |
| <input type="checkbox"/> drill bit for pilot hole | <input type="checkbox"/> adhesive |
| <input type="checkbox"/> countersink bit | <input type="checkbox"/> caulking gun |
| <input type="checkbox"/> screws | |
| <input type="checkbox"/> caulk | |


IMPORTANT INFO

- Clean installation surface and product of all dirt and dust with a clean cloth or dry sponge.
- It is highly recommended that you paint/finish the rafter tails before installation.
- Once installed, you can apply any necessary touch up paint/finish.
- Measure and mark the location where the rafter tail is going to be installed.
- All Signature Urethane rafter tails are decorative only and are built with hollow tops to slip over wood blocking strips.
- Wood blocking strips should fit snugly into the back of rafter tail.

INSTALL INSTRUCTIONS:

1. Attach wood blocks to surface with screws.
2. Apply adhesive to the top of rafter tail.
3. Place rafter tail over wood blocking firmly against eaves or soffit.
4. Screw or nail through side of rafter tail into wood blocks to properly secure.
5. Use acrylic caulk to seal edges of rafter tail against surface after installation.
6. Fill in any holes with caulk and smooth the surface with finger.
7. Let caulk dry. Once dry, lightly sand with extra fine sandpaper.
8. Touch up rafter tail with paint as needed.

EXAMPLE DIAGRAM:

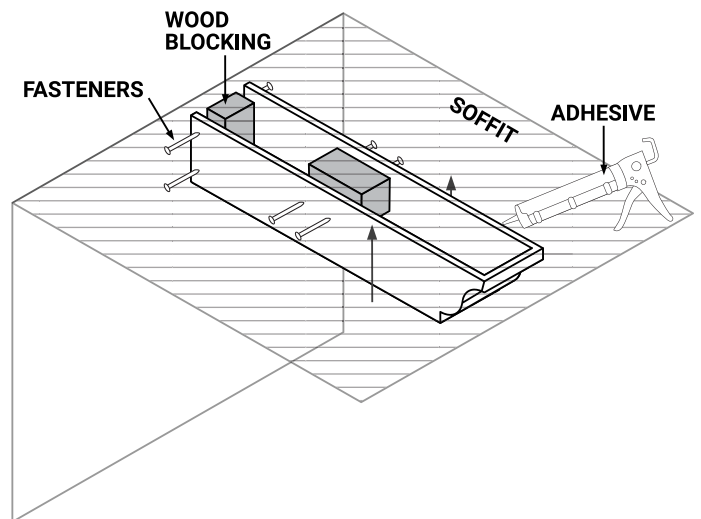

We Can Help. Call (866) 607-0453



Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

www.ekenamillwork.com