


# **3 Drawer Dresser**

## **Installation & Assembly**

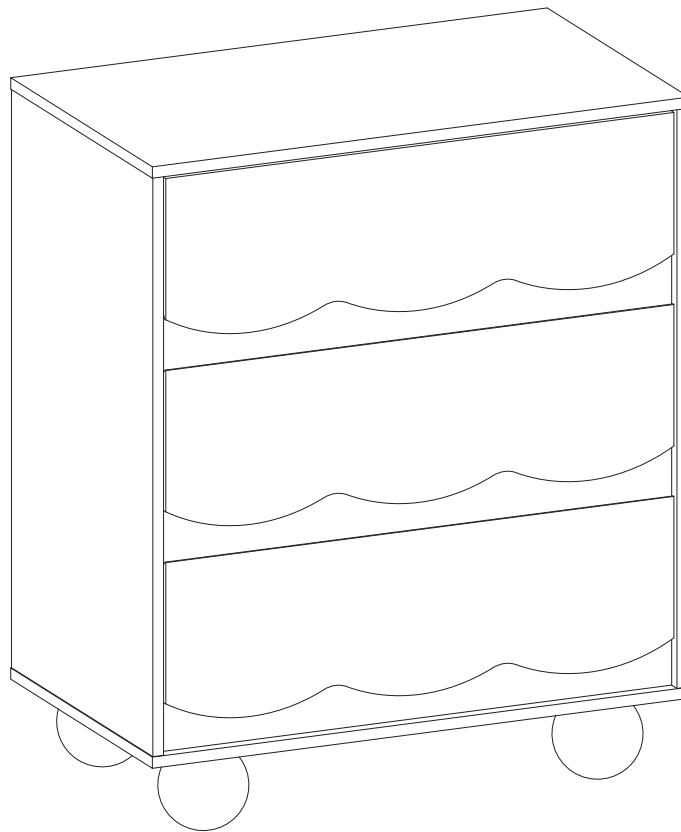


If you have any questions about assembly or use, please feel free to contact customer service.

# Before Assembly

## Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

## QUICKFIT

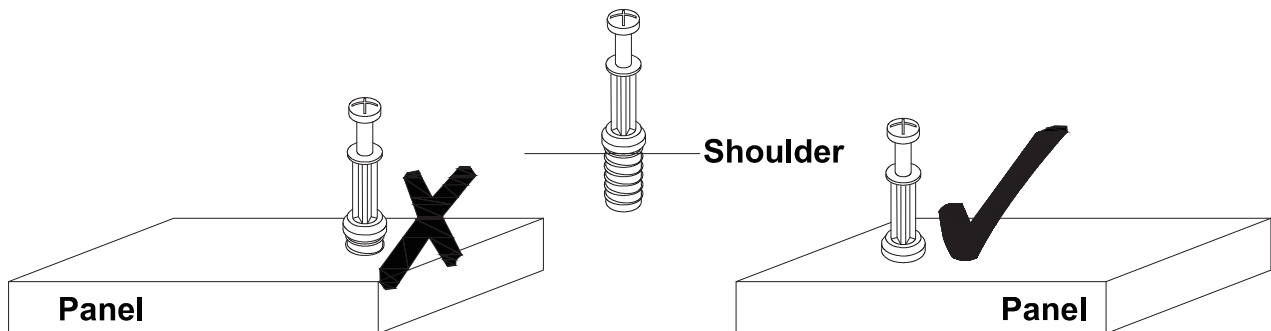

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

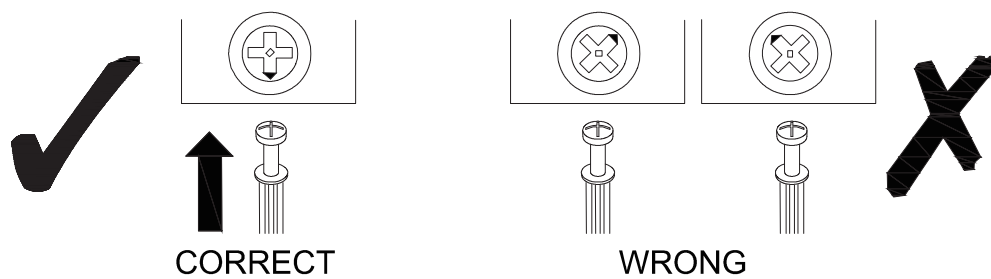

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

















Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

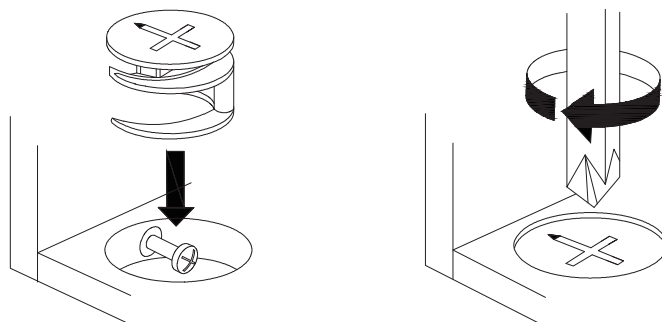


Turn cam lock clockwise to tighten.

# Part List

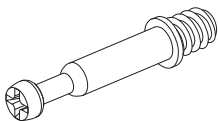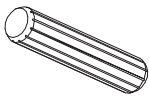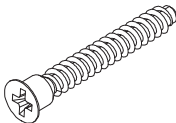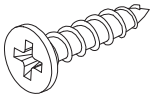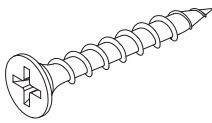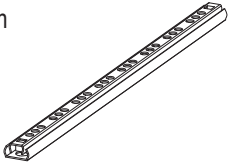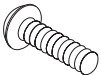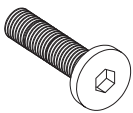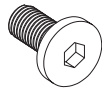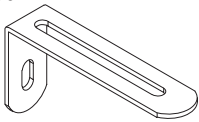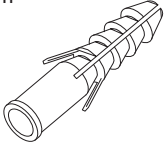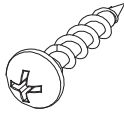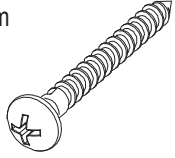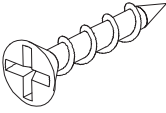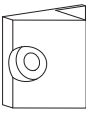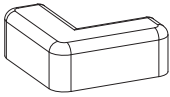
|                                                                                                                                                                       |                                                                                                                                                       |                                                                                                                                              |                                                                                                                                                  |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>No. A</b><br>Quantity: 33+2 PCS<br>Cam Bolt<br>ø6x33.5mm<br>                      | <b>No. B</b><br>Quantity: 33+2 PCS<br>Cam<br>ø15x9.5mm<br>           | <b>No. C</b><br>Quantity: 33+2 PCS<br>Sticker<br>ø20mm<br> | <b>No. D</b><br>Quantity: 10+1 PCS<br>Dowel<br>ø6x30mm<br>    |
| <b>No. E</b><br>Quantity: 6+1 PCS<br>Screw<br>ø5x48mm<br>                            | <b>No. F</b><br>Quantity: 18+2 PCS<br>Screw<br>ø3.5x12mm<br>         | <b>No. G</b><br>Quantity: 18+1 PCS<br>Screw<br>ø4x30mm<br> | <b>No. H</b><br>Quantity: 6 PCS<br>Drawer Slider<br>278mm<br> |
| <b>No. I</b><br>Quantity: 6+1 PCS<br>Screw<br>M4x10mm<br>                          | <b>No. J</b><br>Quantity: 6+1 PCS<br>Bolt<br>M6x25mm<br>            | <b>No. K</b><br>Quantity: 2+1 PCS<br>Bolt<br>M6x12mm<br> | <b>No. L</b><br>Quantity: 1 PC<br>Hex Key<br>4mm<br>        |
| <b>No. N</b><br>Quantity: 1 PC<br>L-Shaped anti tipping iron bar<br>76x15x30mm<br> | <b>No. O</b><br>Quantity: 1 PC<br>Plastic Expansion<br>ø8x40mm<br> | <b>No. P</b><br>Quantity: 1 PC<br>Screw<br>ø4x12mm<br>   | <b>No. Q</b><br>Quantity: 1 PC<br>Screw<br>ø4x38mm<br>      |
| <b>No. R</b><br>Quantity: 8 PCS<br>Screw<br>ø3x16mm<br>                            | <b>No. S</b><br>Quantity: 8 PCS<br>Back Buckle<br>15x15x10mm<br>   | <b>No. T</b><br>Quantity: 2 PCS<br>                      |                                                                                                                                                  |

**Tip: To ensure greater product stability, please install Accessory S during Step 13. Do not omit this step.**


# Product structure

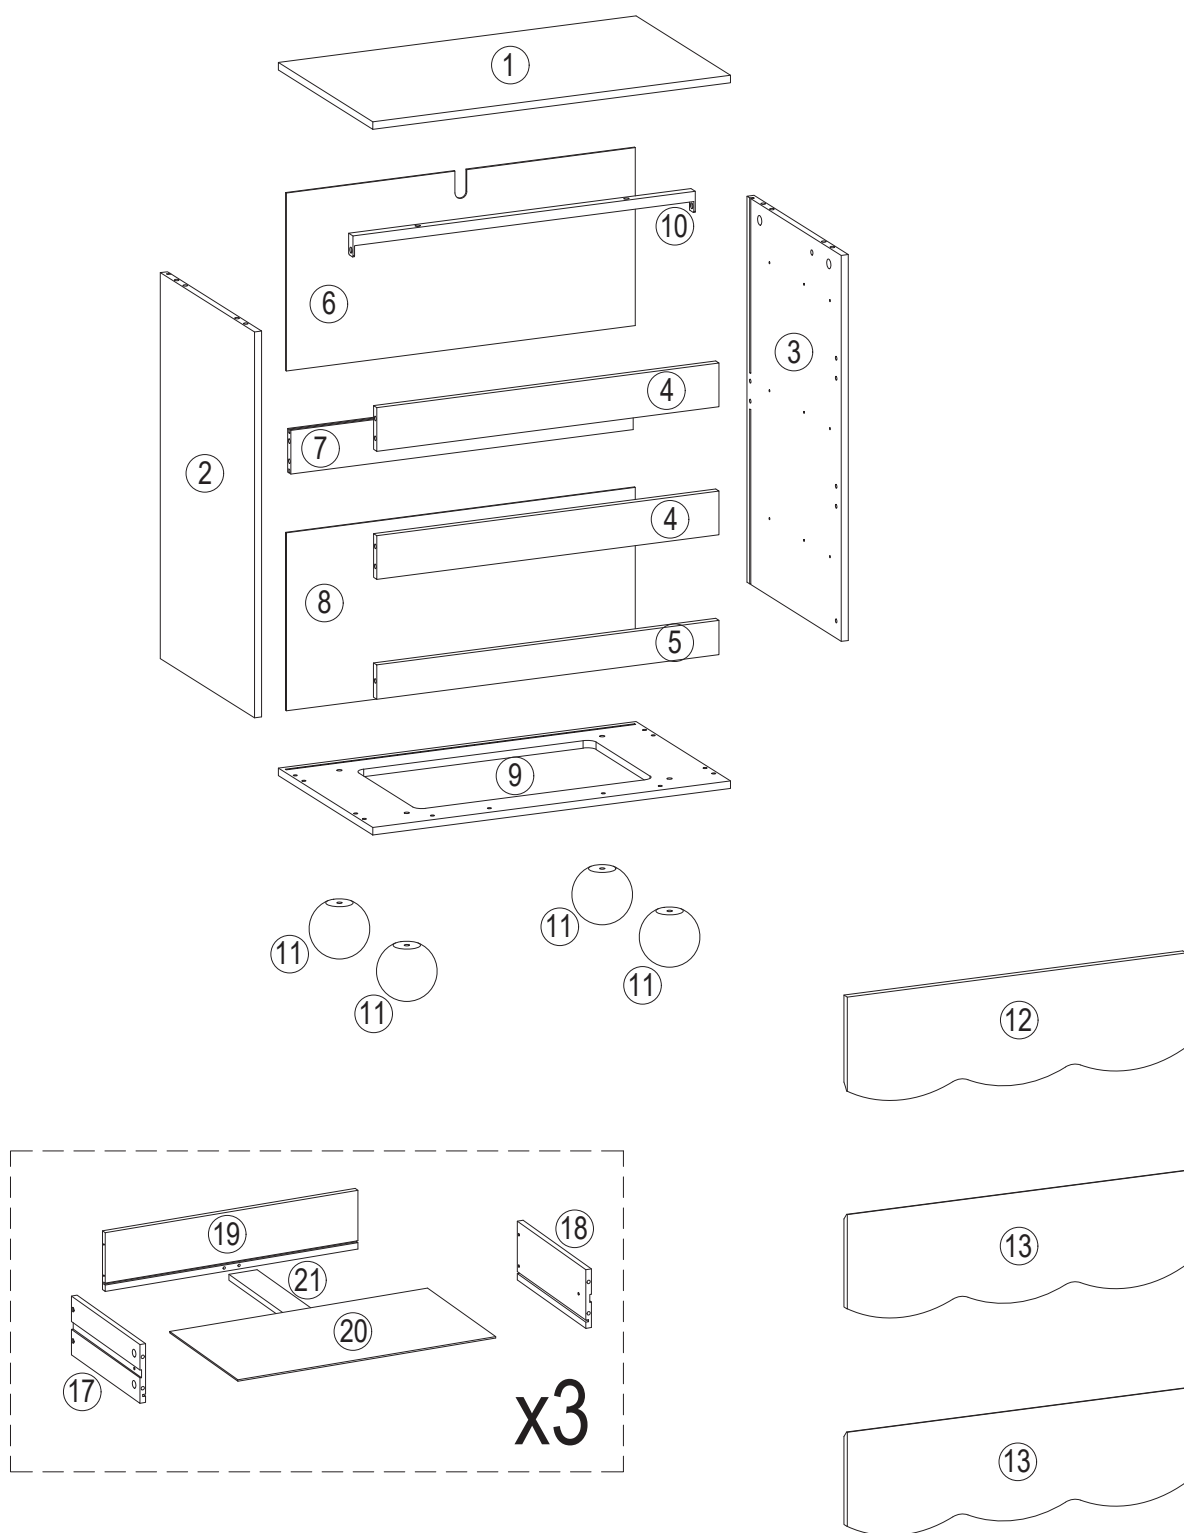

# Step 1

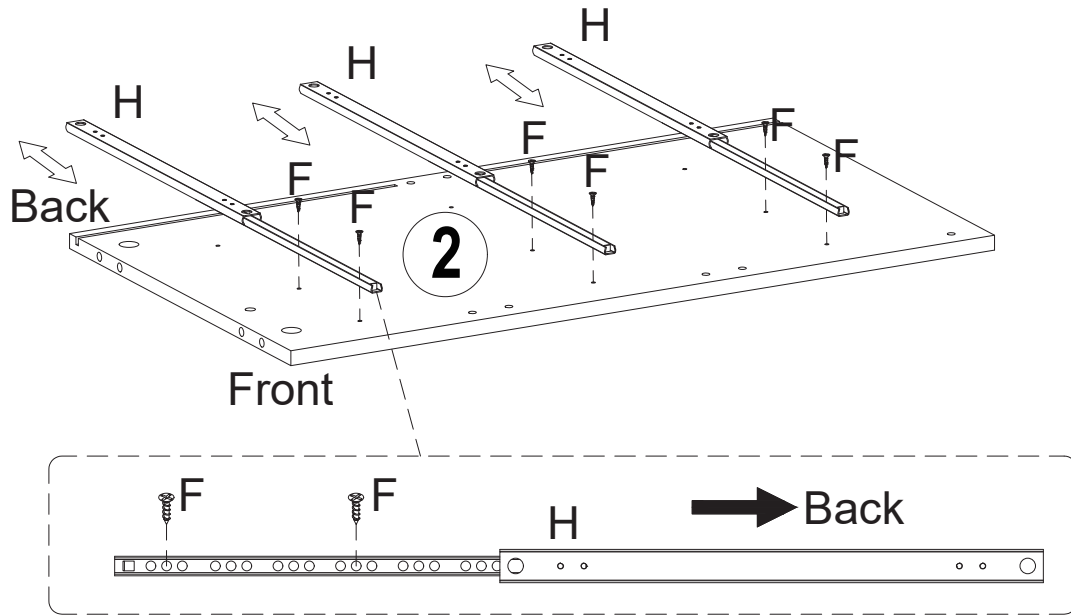


Tip: The slide rail must be pulled back; install the two front F-screws first.

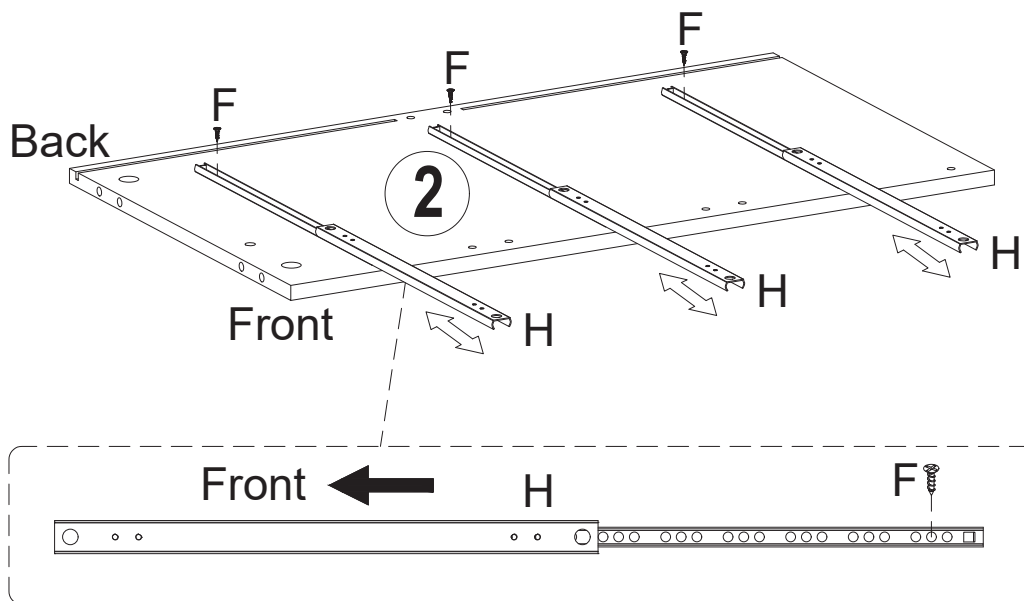


Tip: You need to pull the slide rail forward to install the rear F-screw.


No. F  
Quantity: 9 PCS  
Screw  
ø3.5x12mm

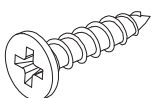


No. H  
Quantity: 3 PCS  
Drawer Slider  
278mm

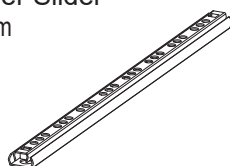

## Step 2

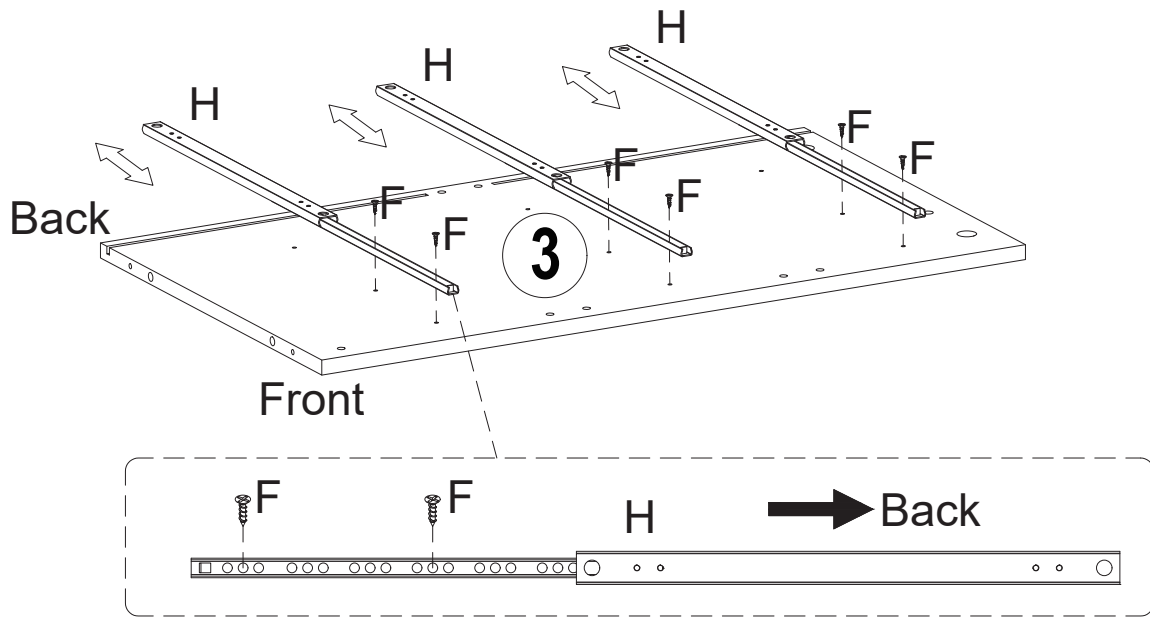


Tip: The slide rail must be pulled back; install the two front F-screws first.

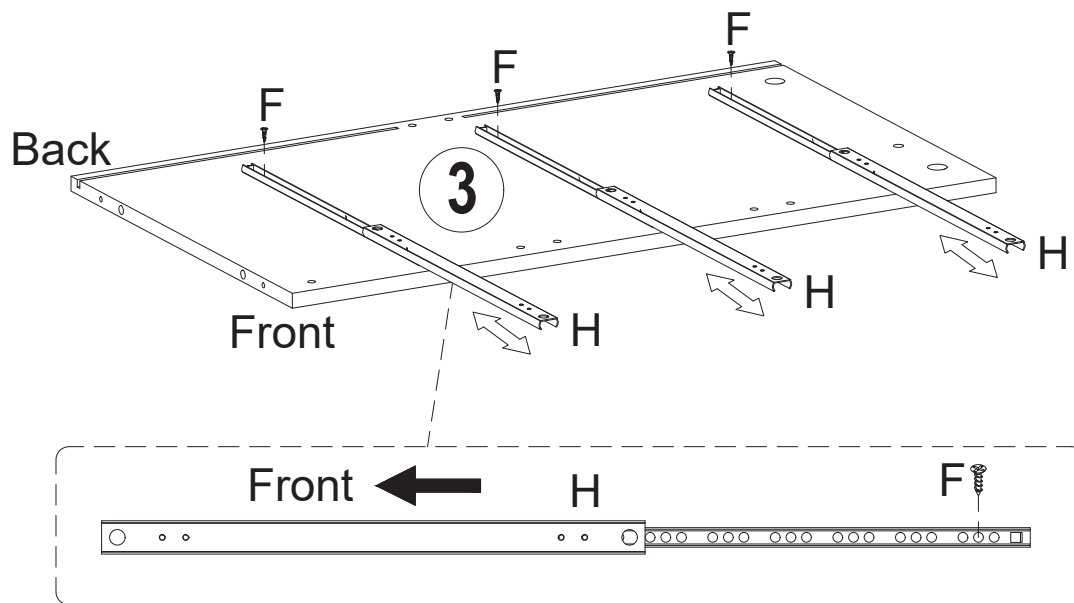


Tip: You need to pull the slide rail forward to install the rear F-screw.



No. F  
Quantity: 9 PCS  
Screw  
ø3.5x12mm

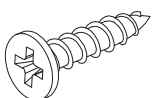


No. H  
Quantity: 3 PCS  
Drawer Slider  
278mm

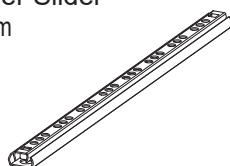



# Step 3

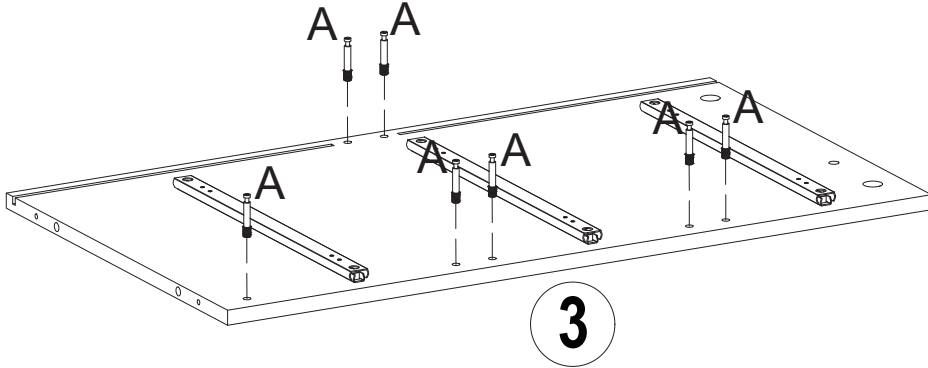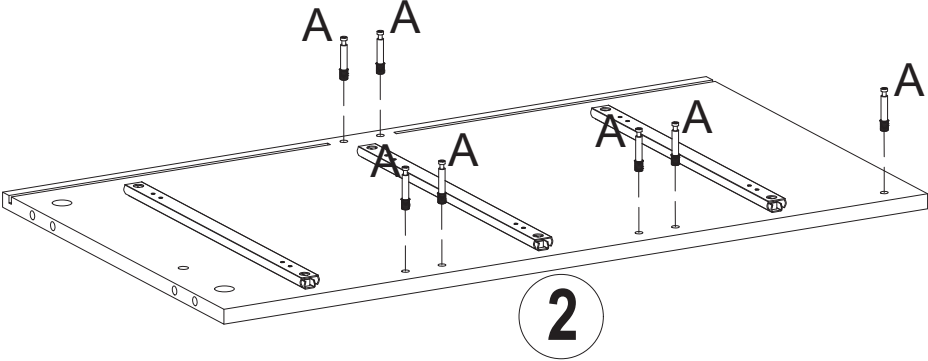

No. A  
Quantity: 14 PCS  
Cam Bolt  
ø6x33.5mm

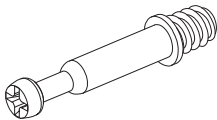


# Step 4

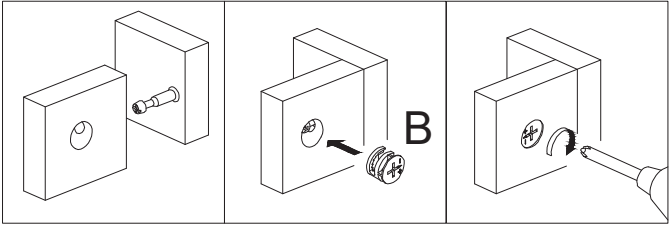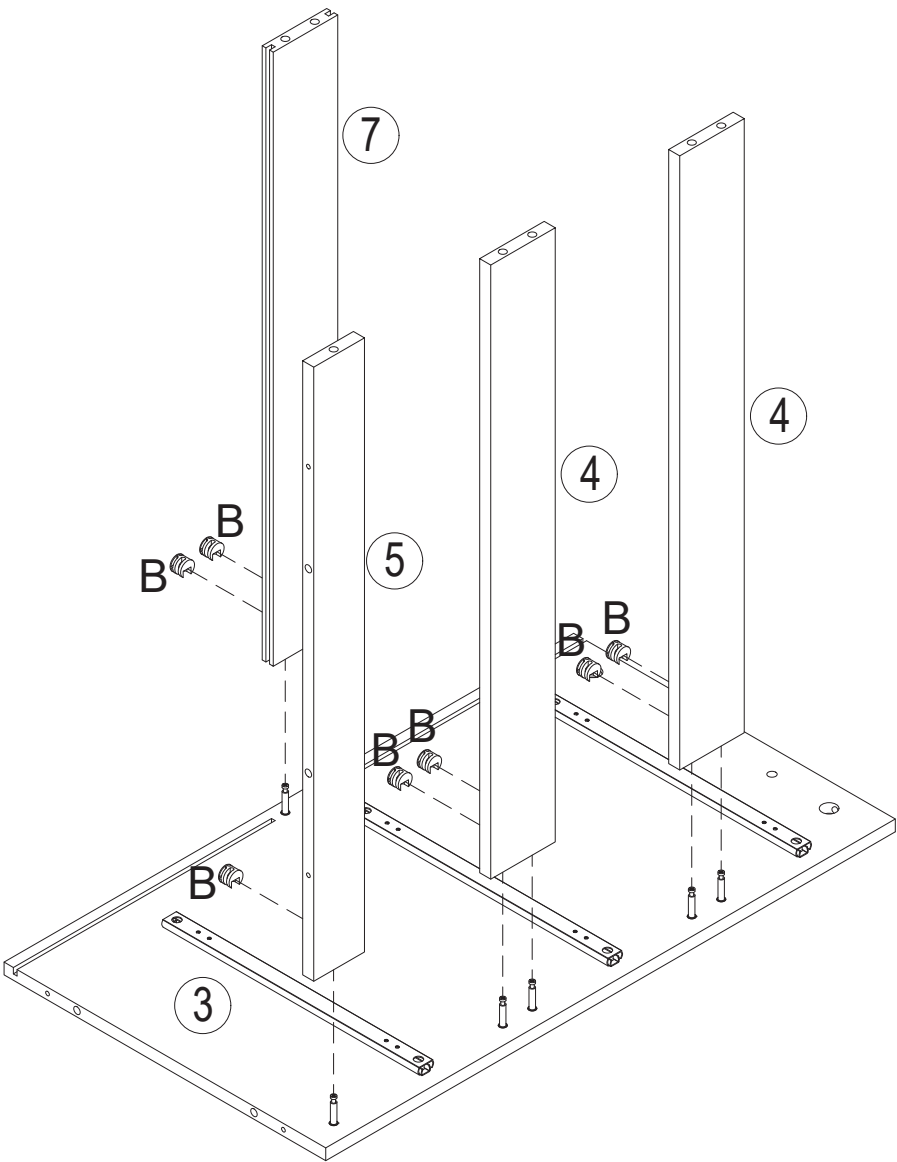

No. B  
Quantity: 7 PCS  
Cam  
ø15x9.5mm




# Step 5

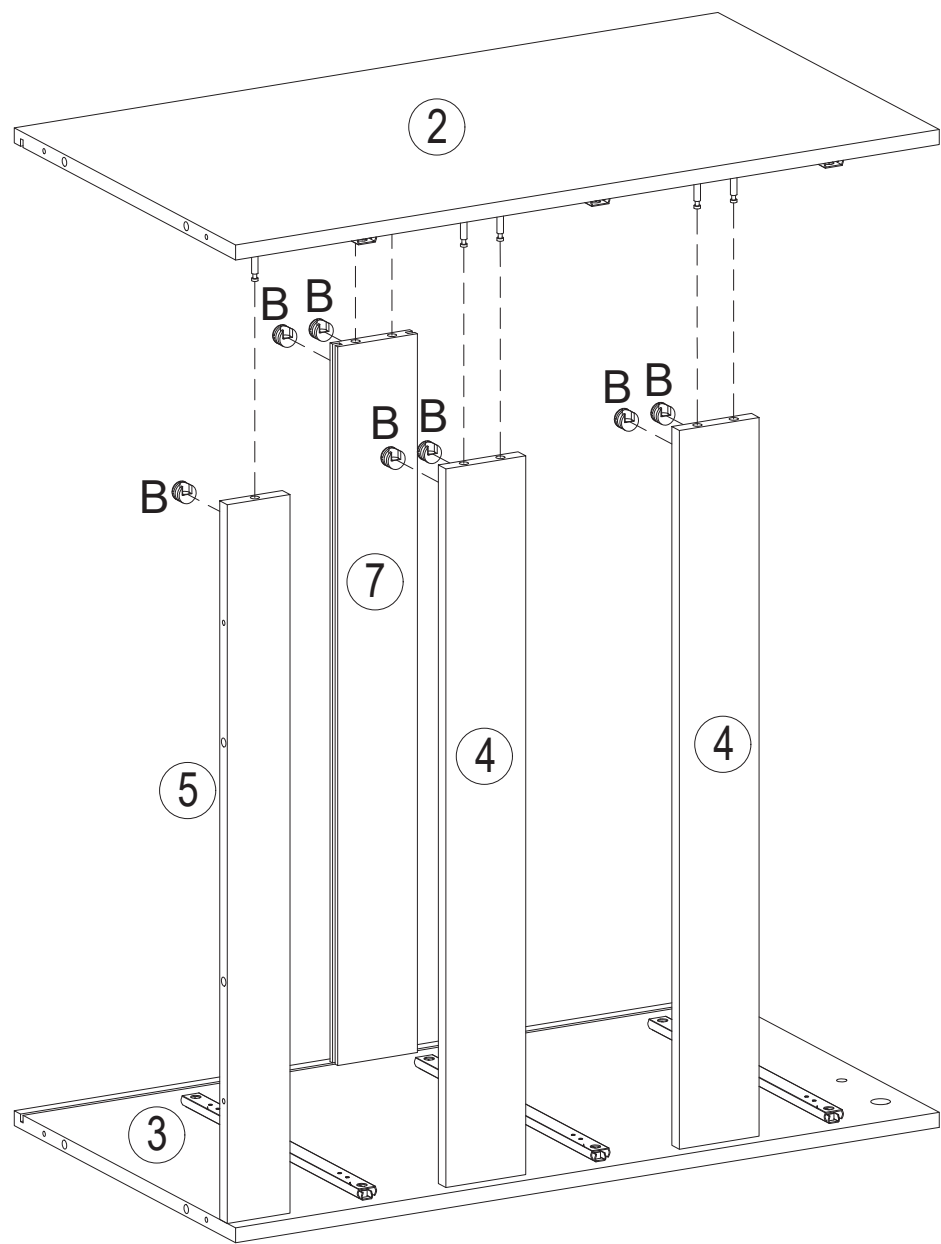


No. B  
Quantity: 7 PCS  
Cam  
ø15x9.5mm




# Step 6

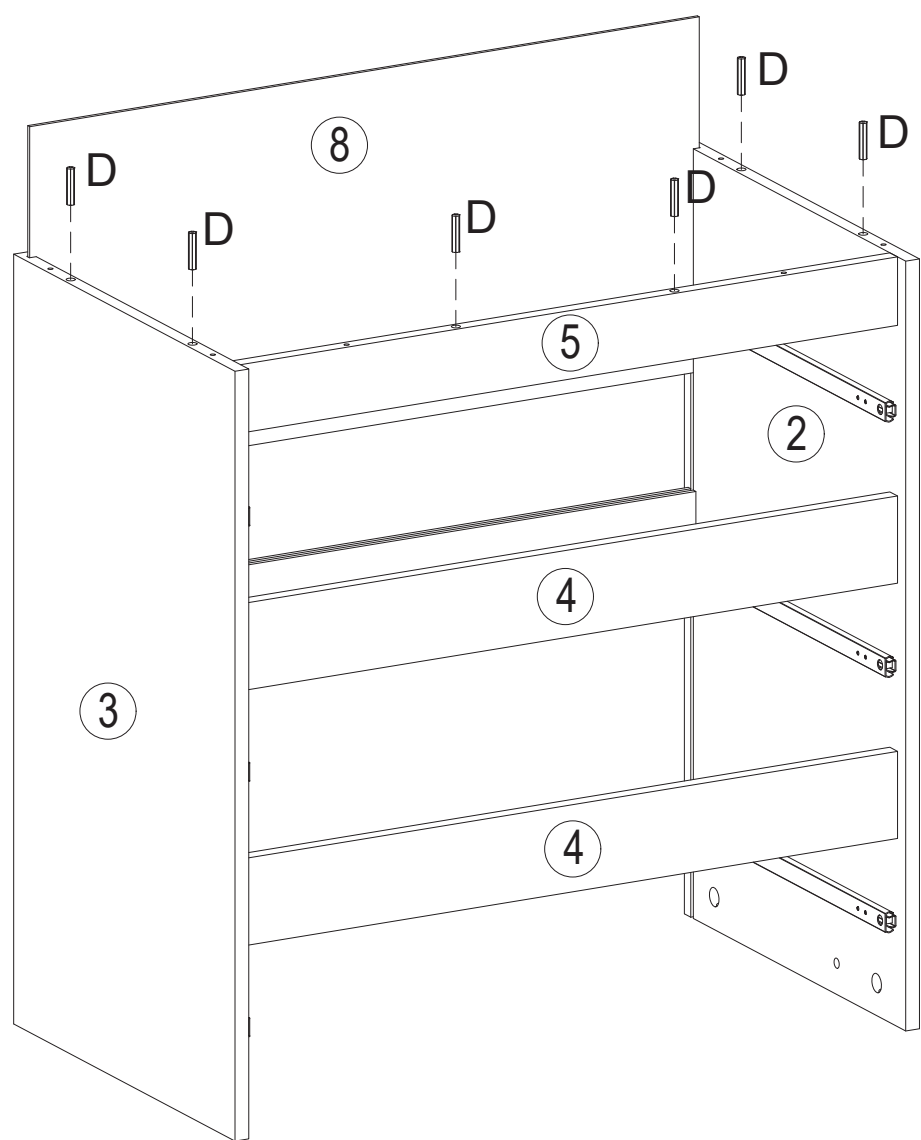


No. D  
Quantity: 6 PCS  
Dowel  
ø6x30mm

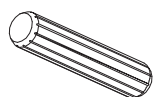


# Step 7

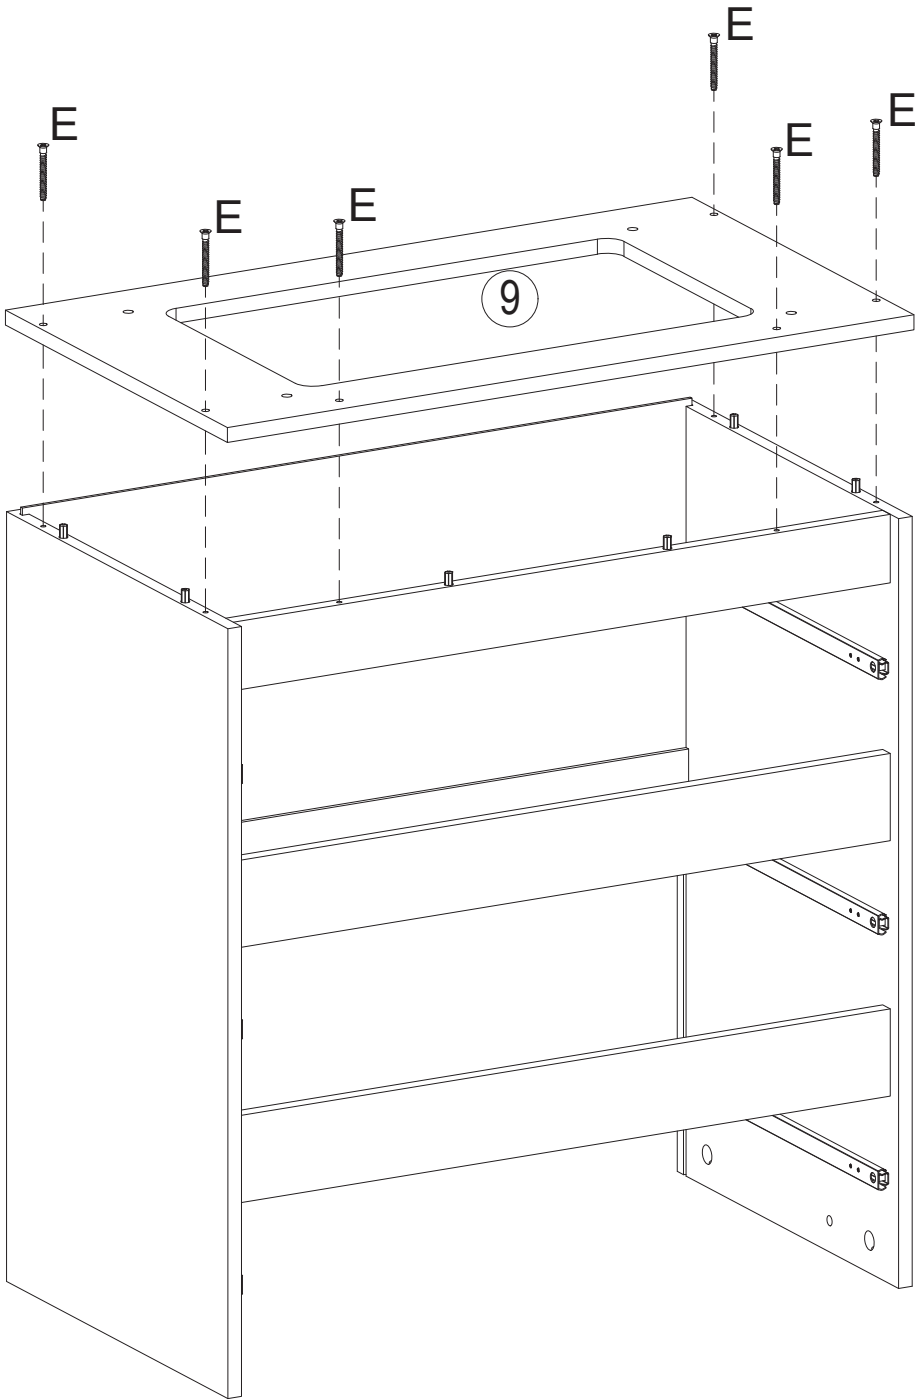


No. E  
Quantity: 6 PCS  
Screw  
ø5x48mm

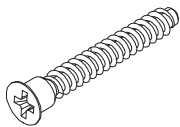

# Step 8

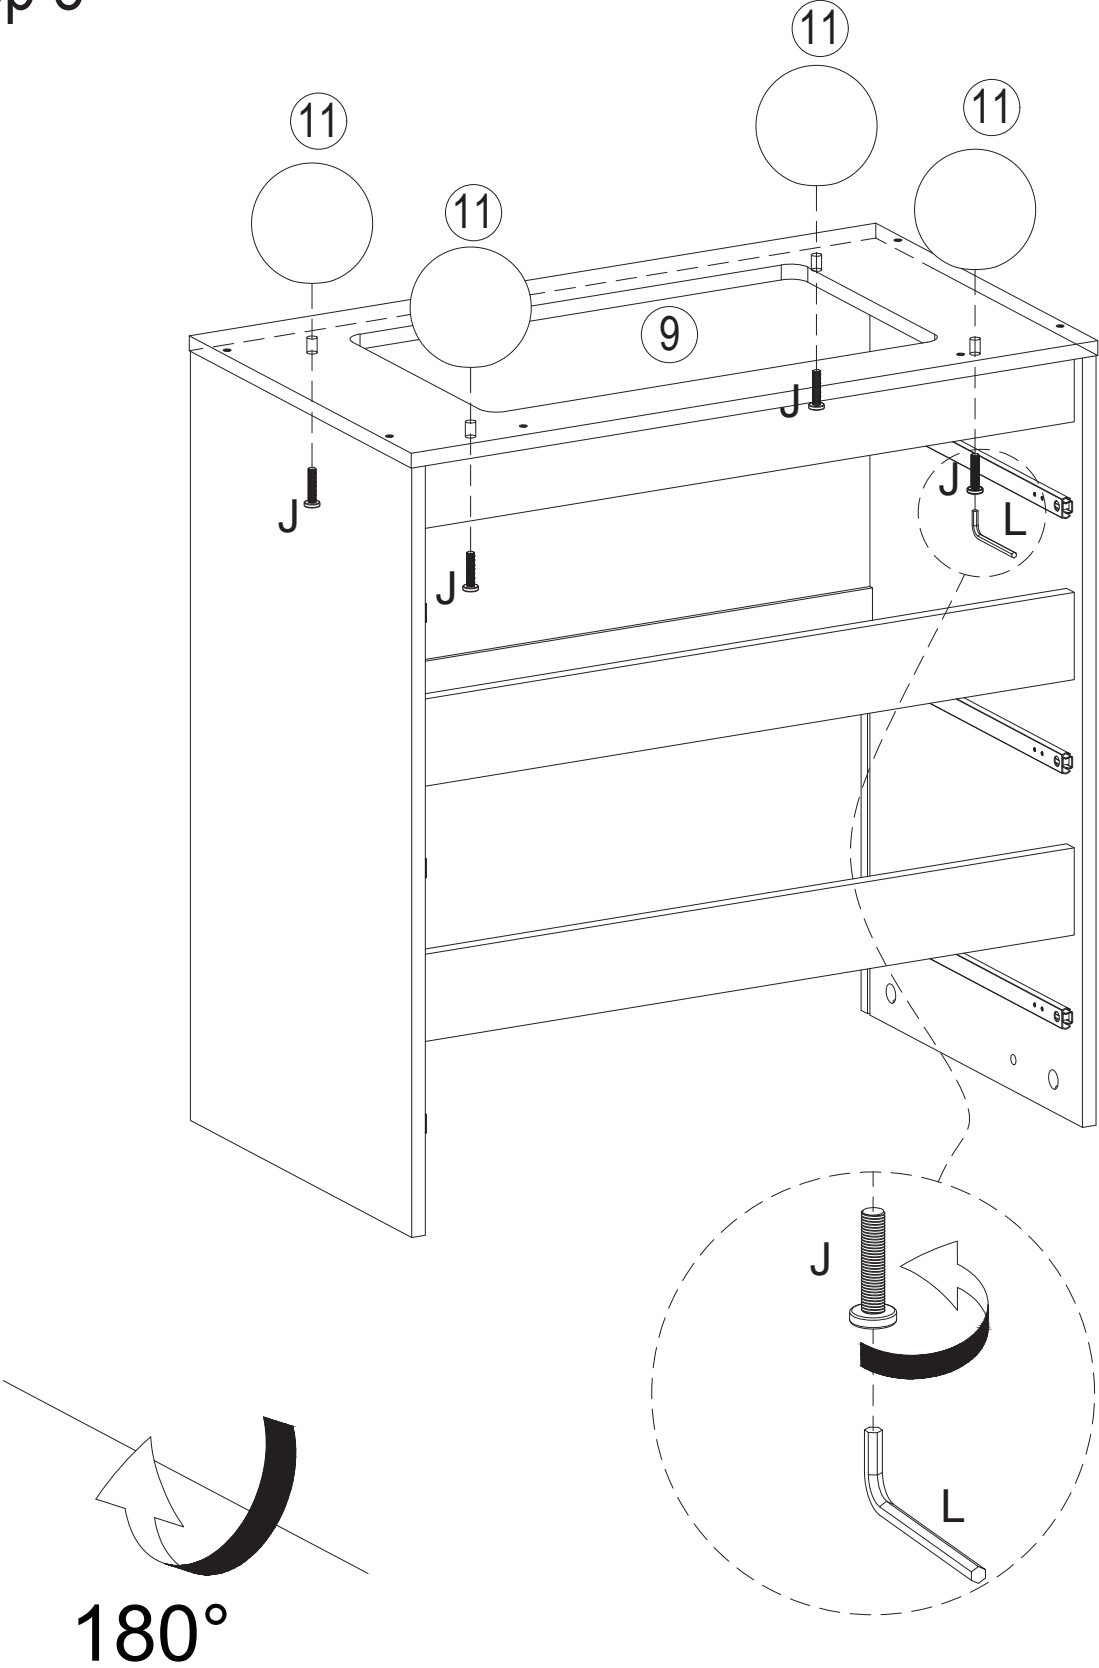


No. J  
Quantity: 4 PCS  
Bolt  
M6x25mm

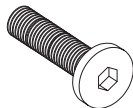


No. L  
Quantity: 1 PC  
Hex Key  
4mm



# Step 9

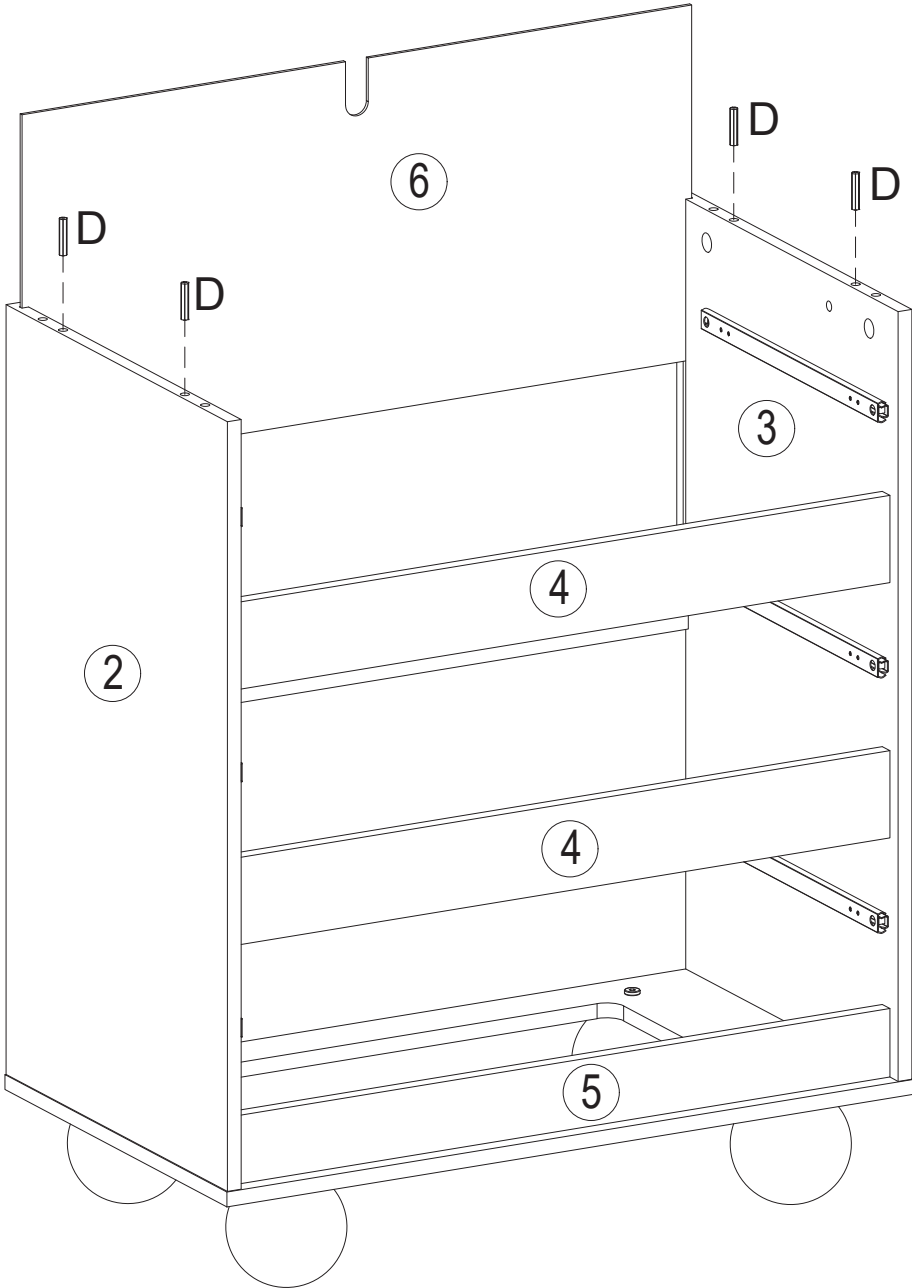


No. D  
Quantity: 4 PCS  
Dowel  
ø6x30mm

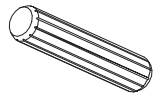


# Step 10


Tighten All bolt #J to 80% first.  
After completing Step12,  
tighten All bolt completely.

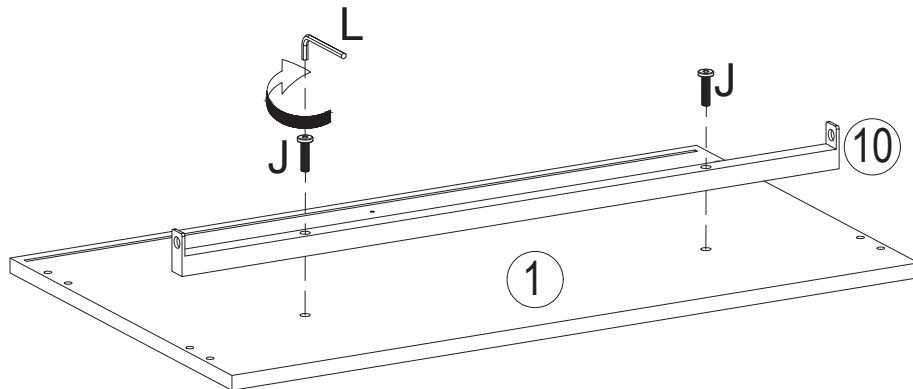


**No. J**  
Quantity: 2 PCS  
Bolt  
M6x25mm

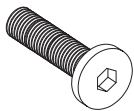


**No. L**  
Quantity: 1 PC  
Hex Key  
4mm

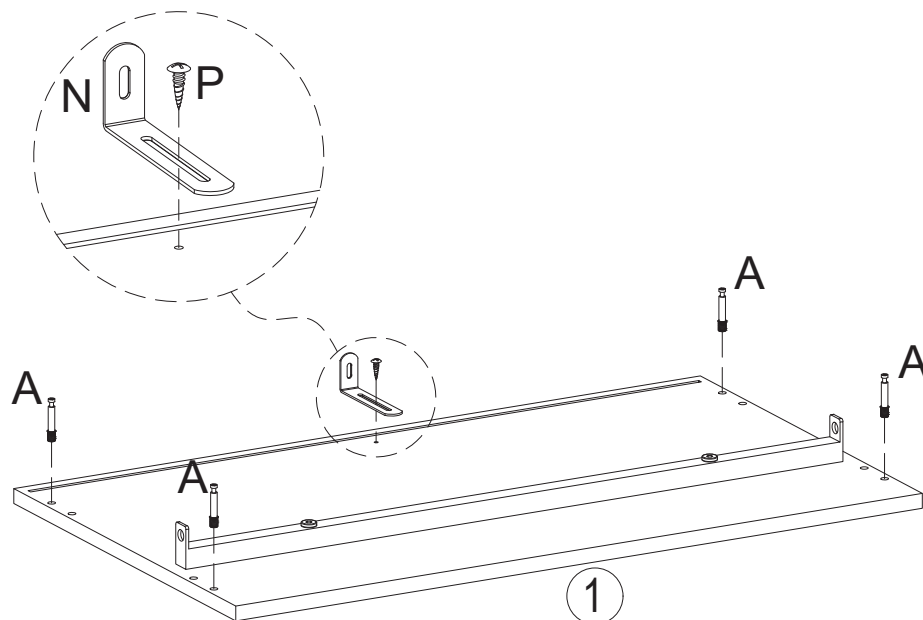


**No. A**  
Quantity: 4 PCS  
Cam Bolt  
ø6x33.5mm

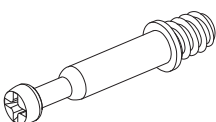


**No. N**  
Quantity: 1 PC  
L-Shaped anti tipping iron  
bar  
76x15x30mm

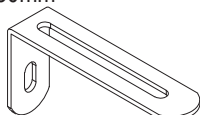

**No. P**  
Quantity: 1 PC  
Screw  
ø4x12mm

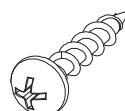

# Step 11

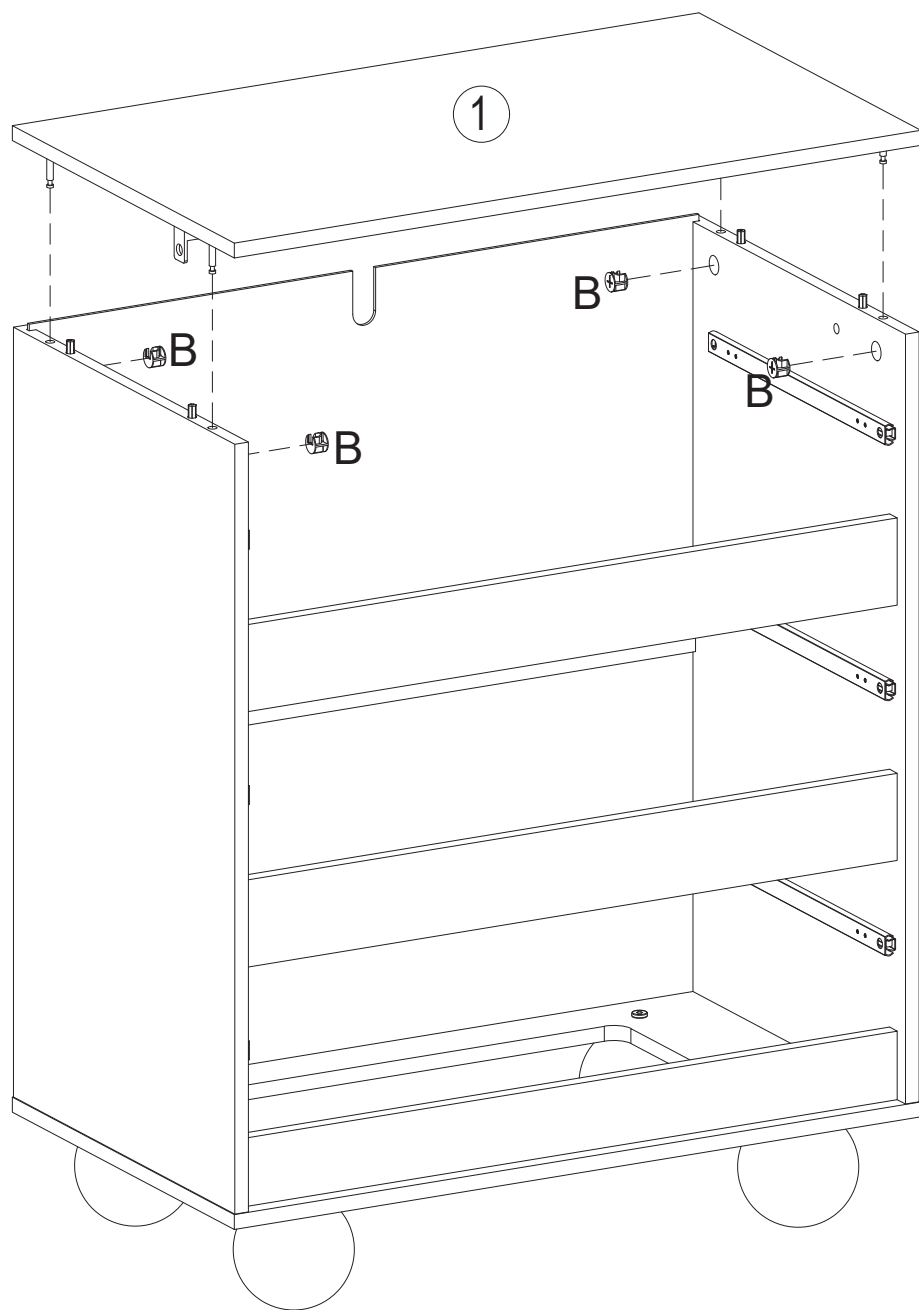


No. B  
Quantity: 4 PCS  
Cam  
ø15x9.5mm




# Step 12

NOTE:

Tighten all Bolt (J and K) In the #10

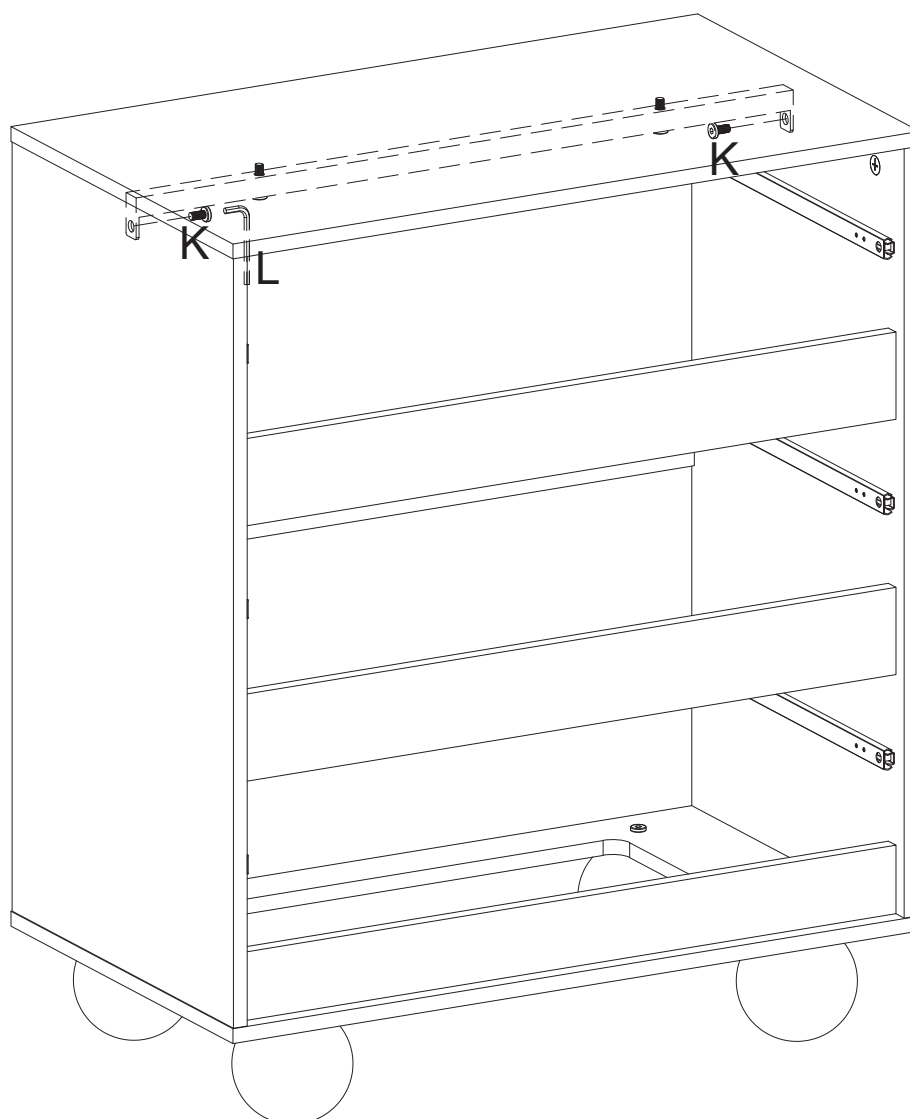

No. K  
Quantity: 2 PCS  
Bolt  
M6x12mm


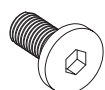


No. L  
Quantity: 1 PC  
Hex Key  
4mm



## Step 13

Please Note: To ensure greater product stability, parts S and R must be installed according to the instructions. Failure to install them will cause the product to wobble.

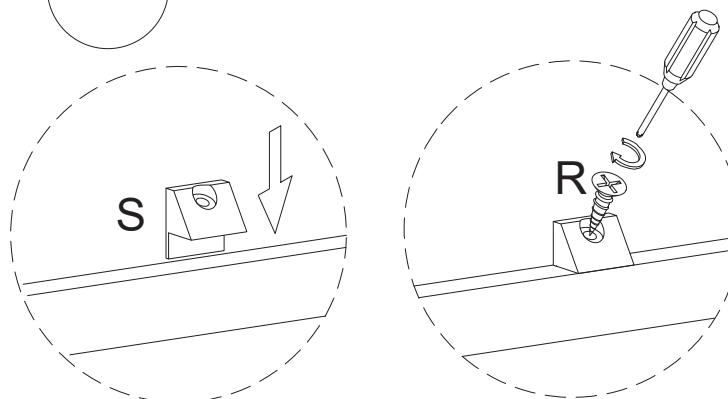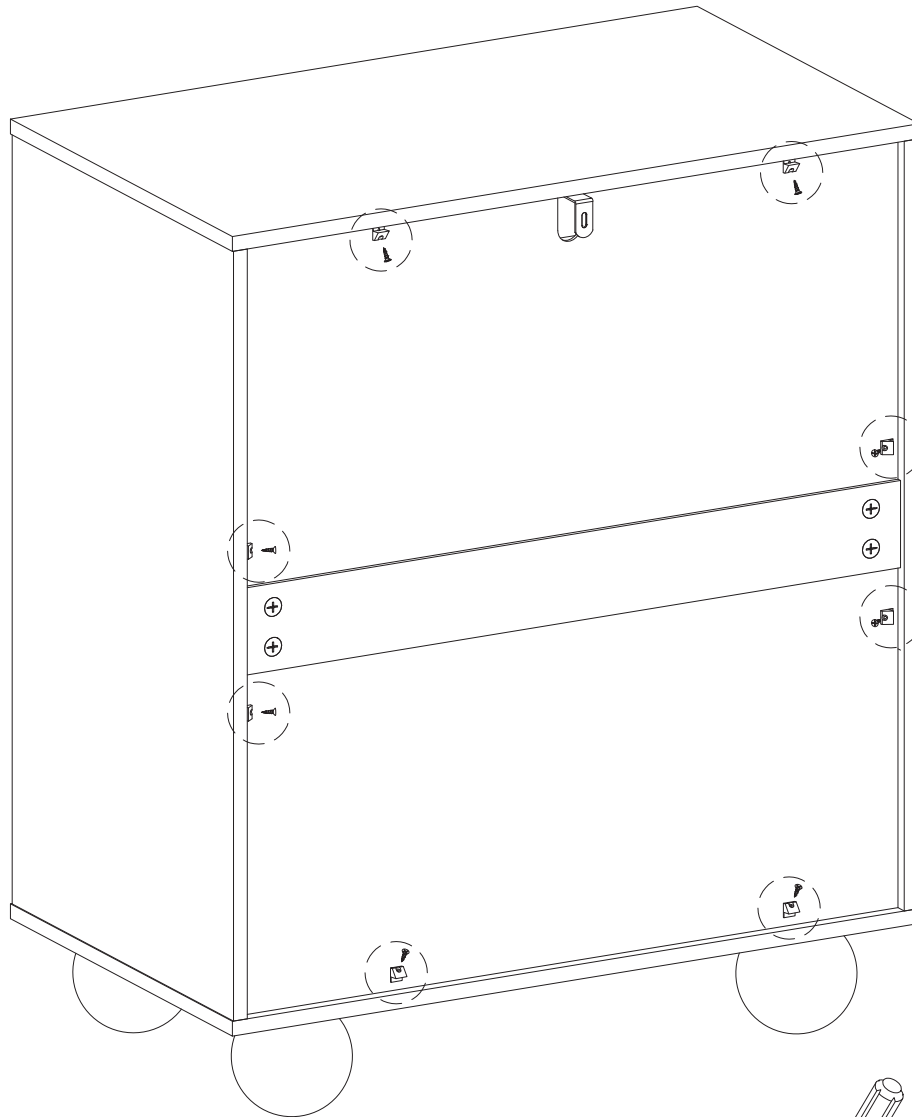


x8

No. R

Quantity: 8 PCS


Screw  
ø3x16mm

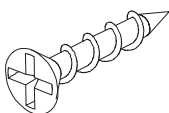



No. S

Quantity: 8 PCS


Back Buckle  
15x15x10mm

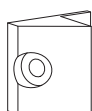




# Step 14

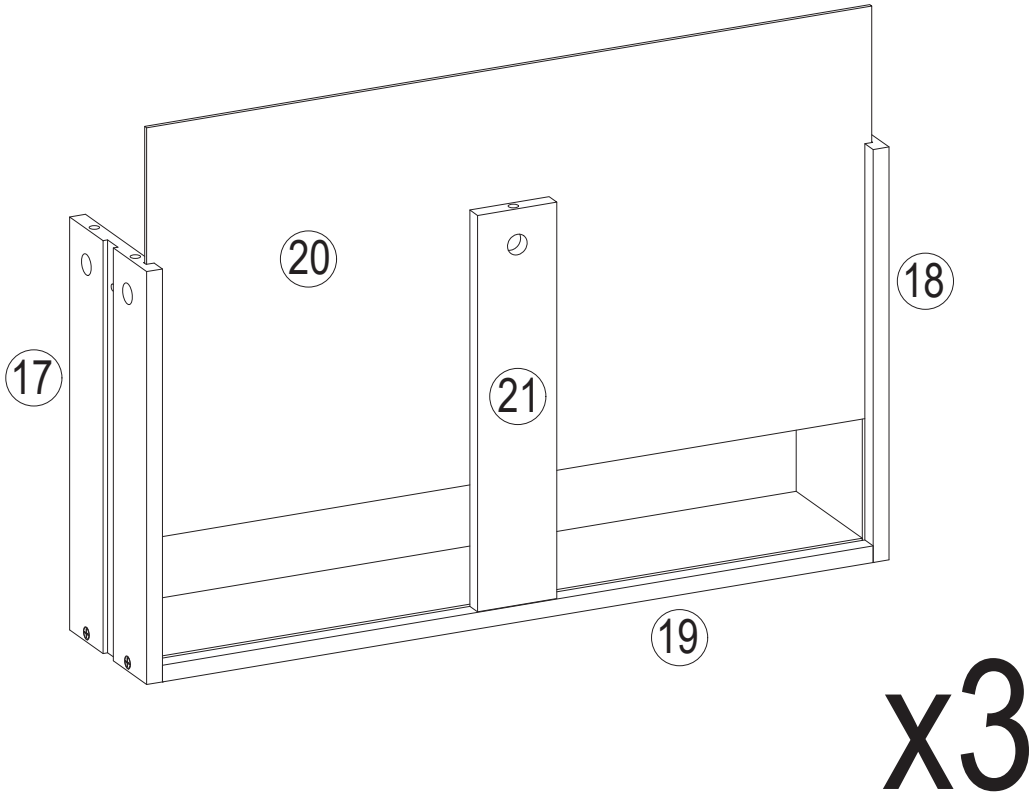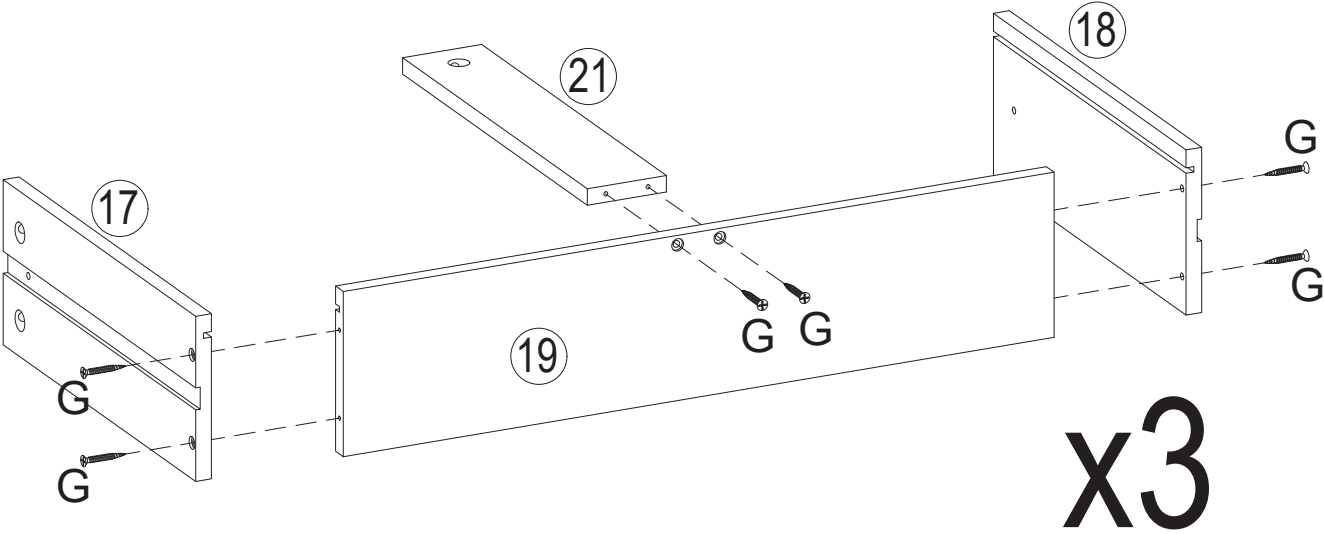


No. G  
Quantity: 18 PCS  
Screw  
ø4x30mm

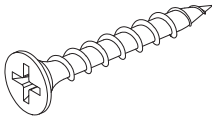




# Step 15

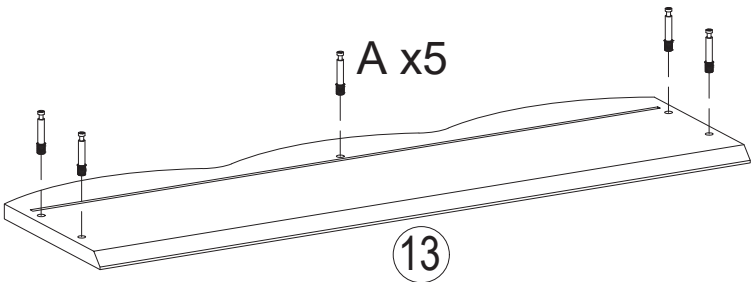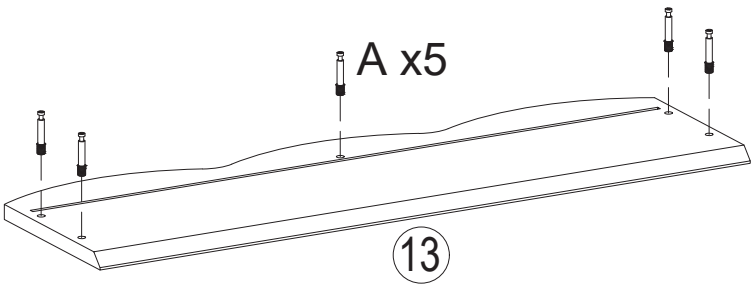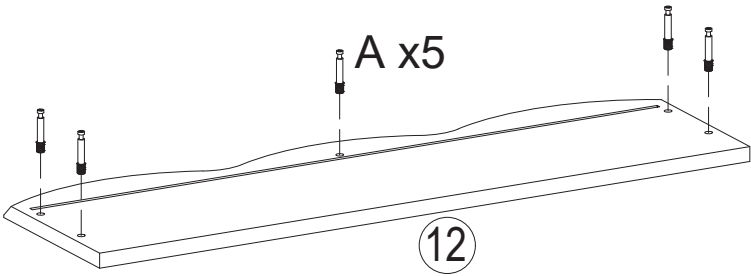

No. A  
Quantity: 15 PCS  
Cam Bolt  
ø6x33.5mm

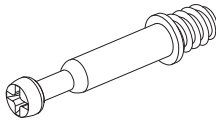


# Step 16

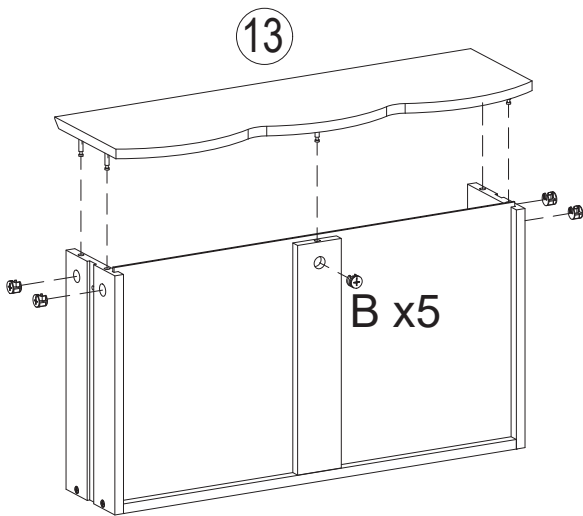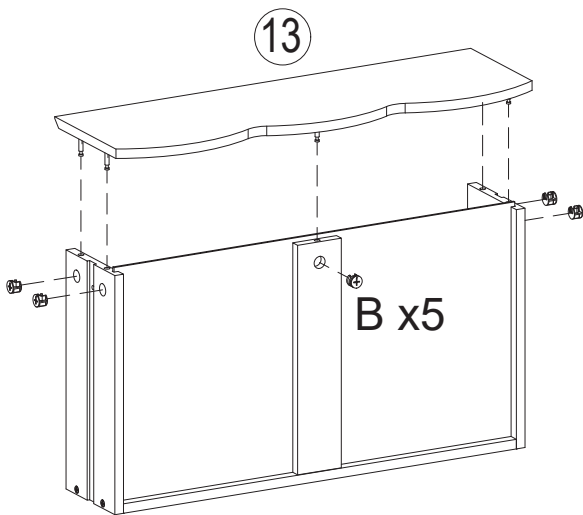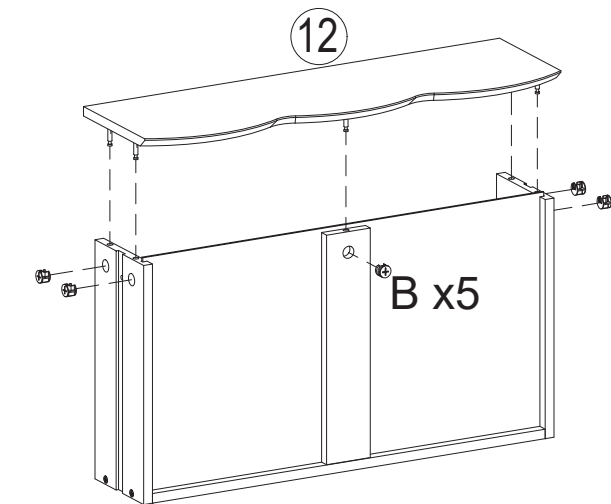


No. B  
Quantity: 15 PCS  
Cam  
ø15x9.5mm



# Step 17

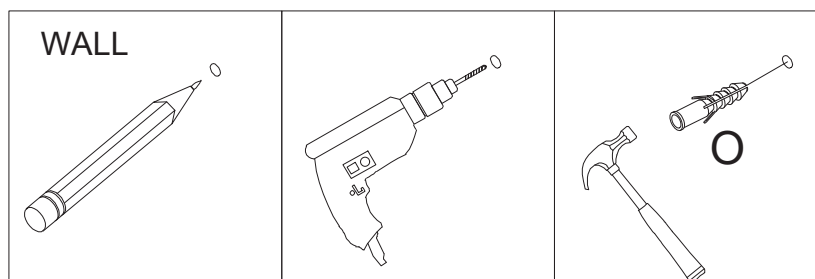


1. The customer must mark the desired mounting positions on the wall, then use their own hammer drill to drill holes into the wall surface.
2. Use a hammer to tap the one plastic expansion anchors into the wall.
3. Insert the corresponding screws into the plastic expansion anchors to complete the installation.

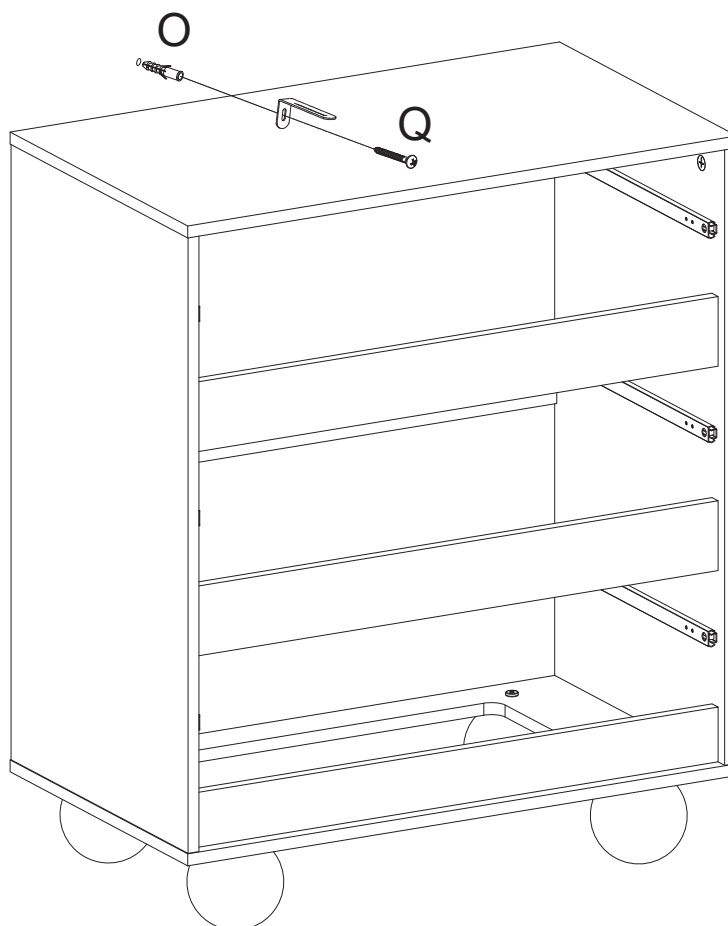


No. O

Quantity: 1 PC  
Plastic Expansion  
ø8x40mm

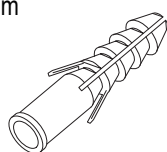


No. Q






Quantity: 1 PC  
Screw  
ø4x38mm

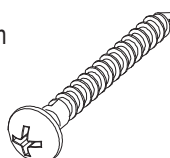

# Step 18

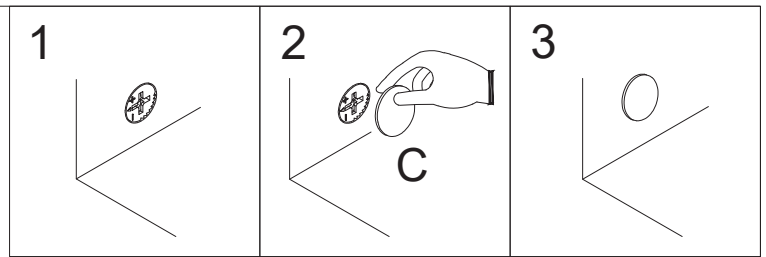

C is a cover, and B is a lock. Once B is installed, it will be very noticeable, so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

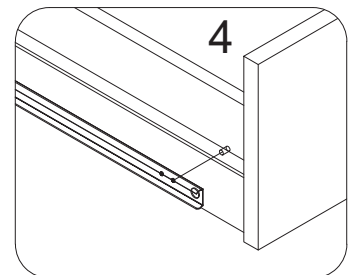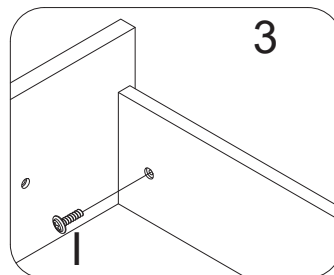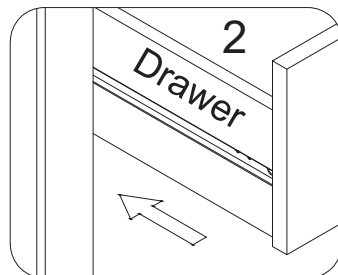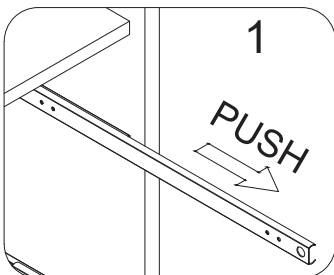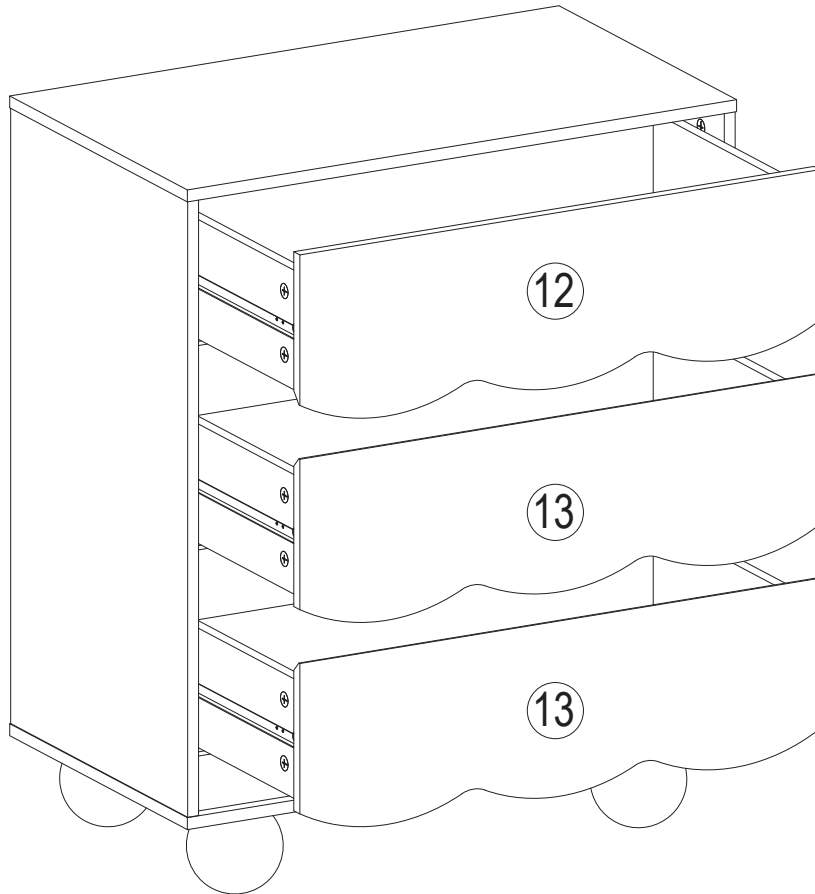


Tip: I-Screws must be installed on both sides of the drawer.  
This applies to all 3 drawers; please ensure none are omitted.


No. C  
Quantity: 33 PCS  
Sticker  
ø20mm




No. I  
Quantity: 6 PCS  
Screw  
M4x10mm

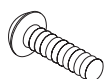

# Step 19

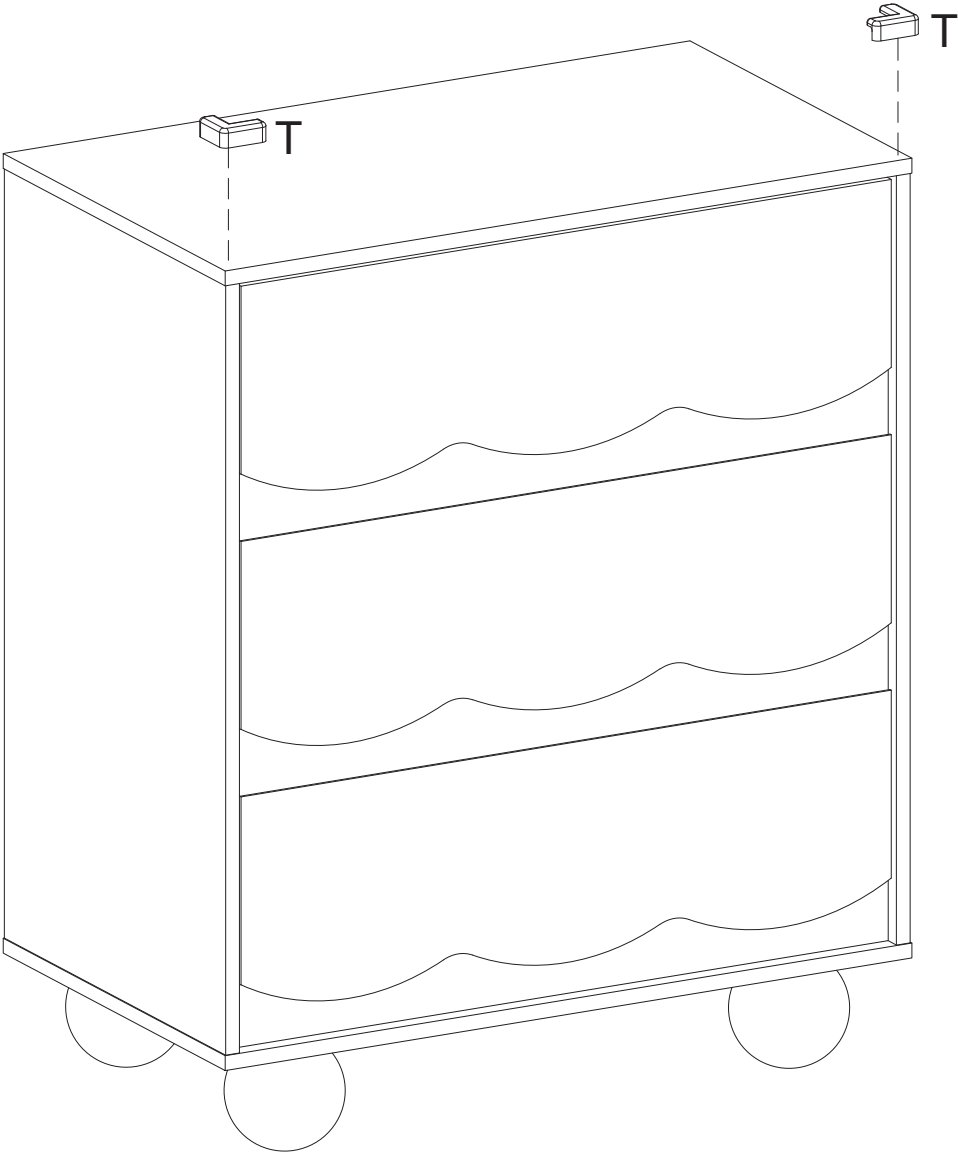

No. T  
Quantity: 2 PCS

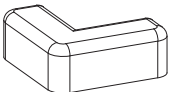

# Step 20

