

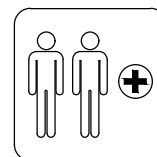
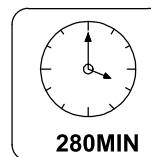
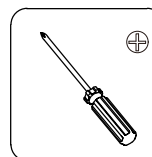
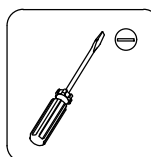


HLG167


Version:1.2

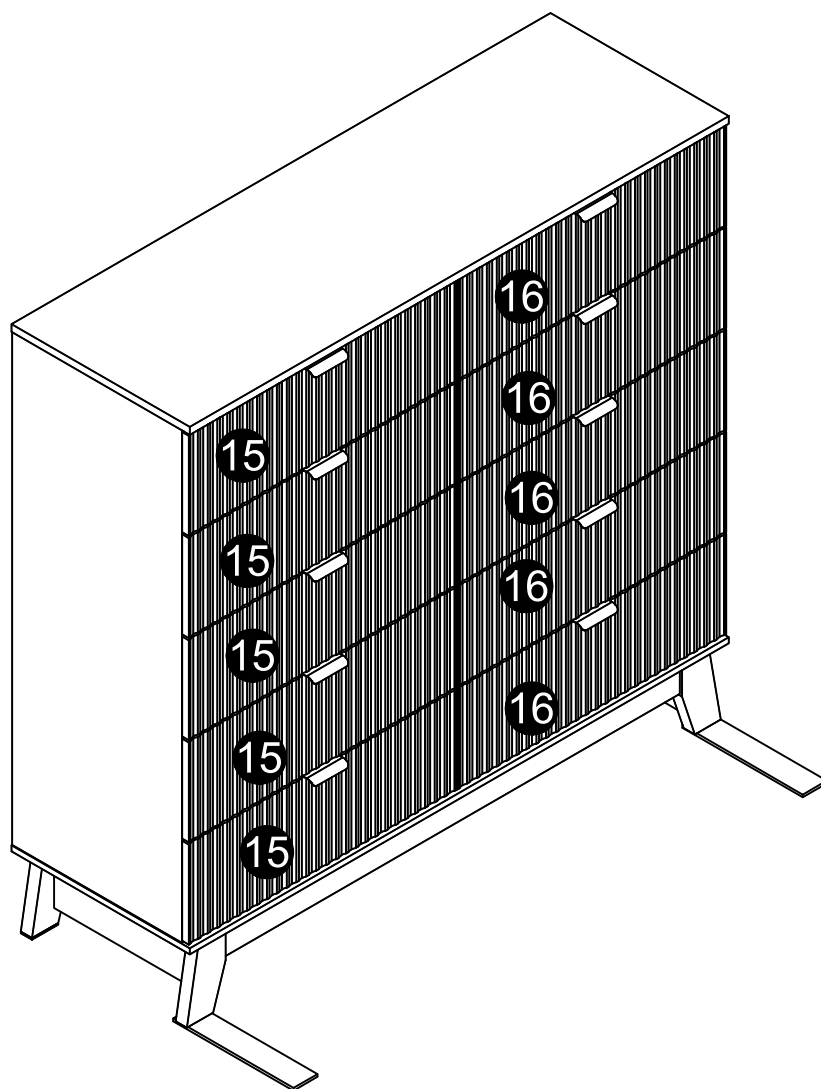


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

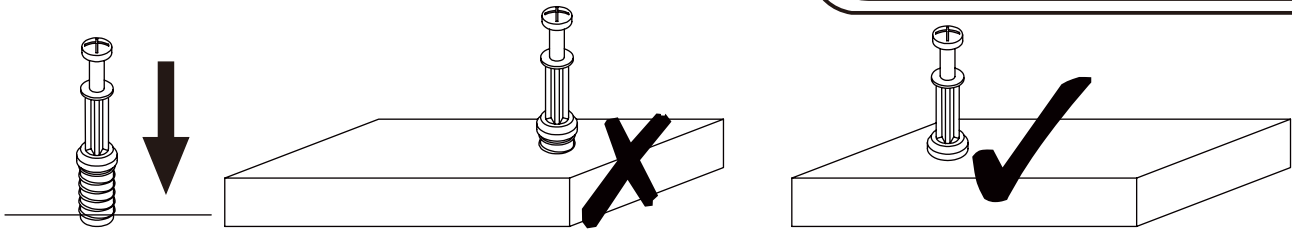


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

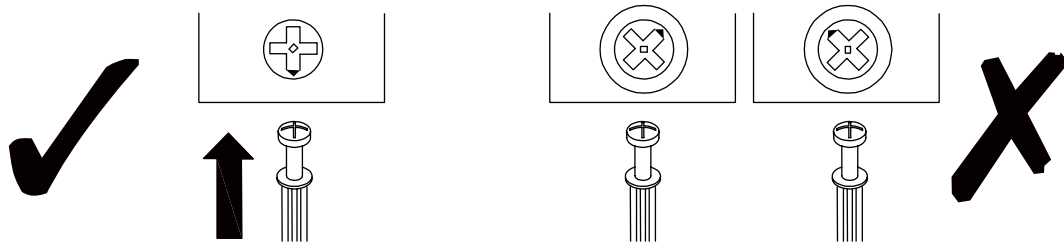








EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.









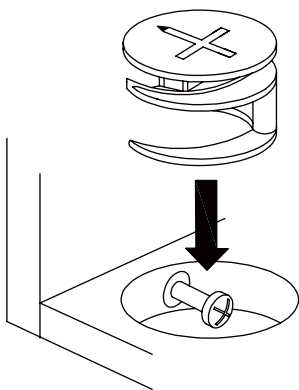






EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.



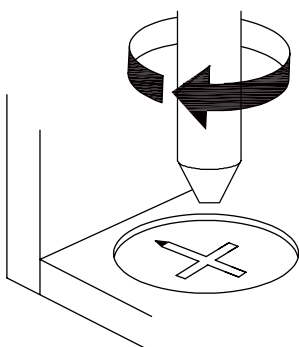









EN_Turn cam lock clockwise to tighten.

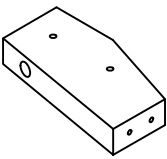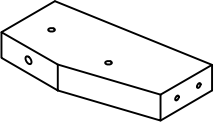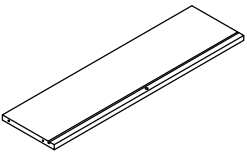
Carton A			
NO.	PARTS	QTY	SPARE
3		x2	
4		x2	
5		x1	
17		x10	
18		x10	
19		x10	
	 Hardware Kit	x1	

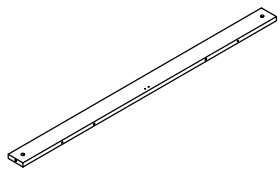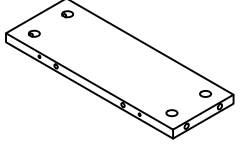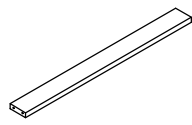

Carton B			
NO.	PARTS	QTY	SPARE
1		x2	
2		x2	
6		x1	
7		x1	
8		x1	
9		x1	
10		x1	
11		x2	
12		x4	
13		x10	

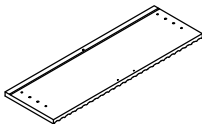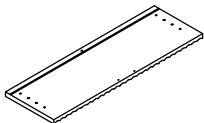Carton B			
NO.	PARTS	QTY	SPARE
14		x3	
15		x5	
16		x5	
20		x10	

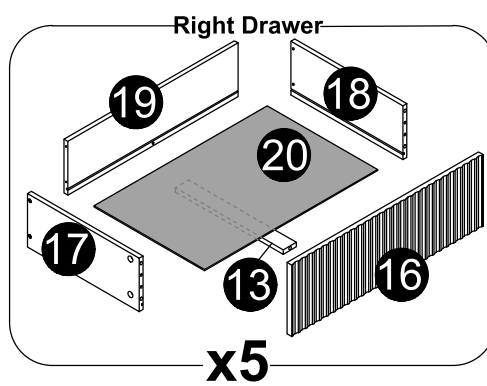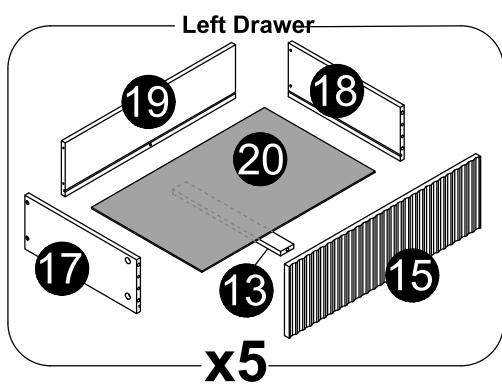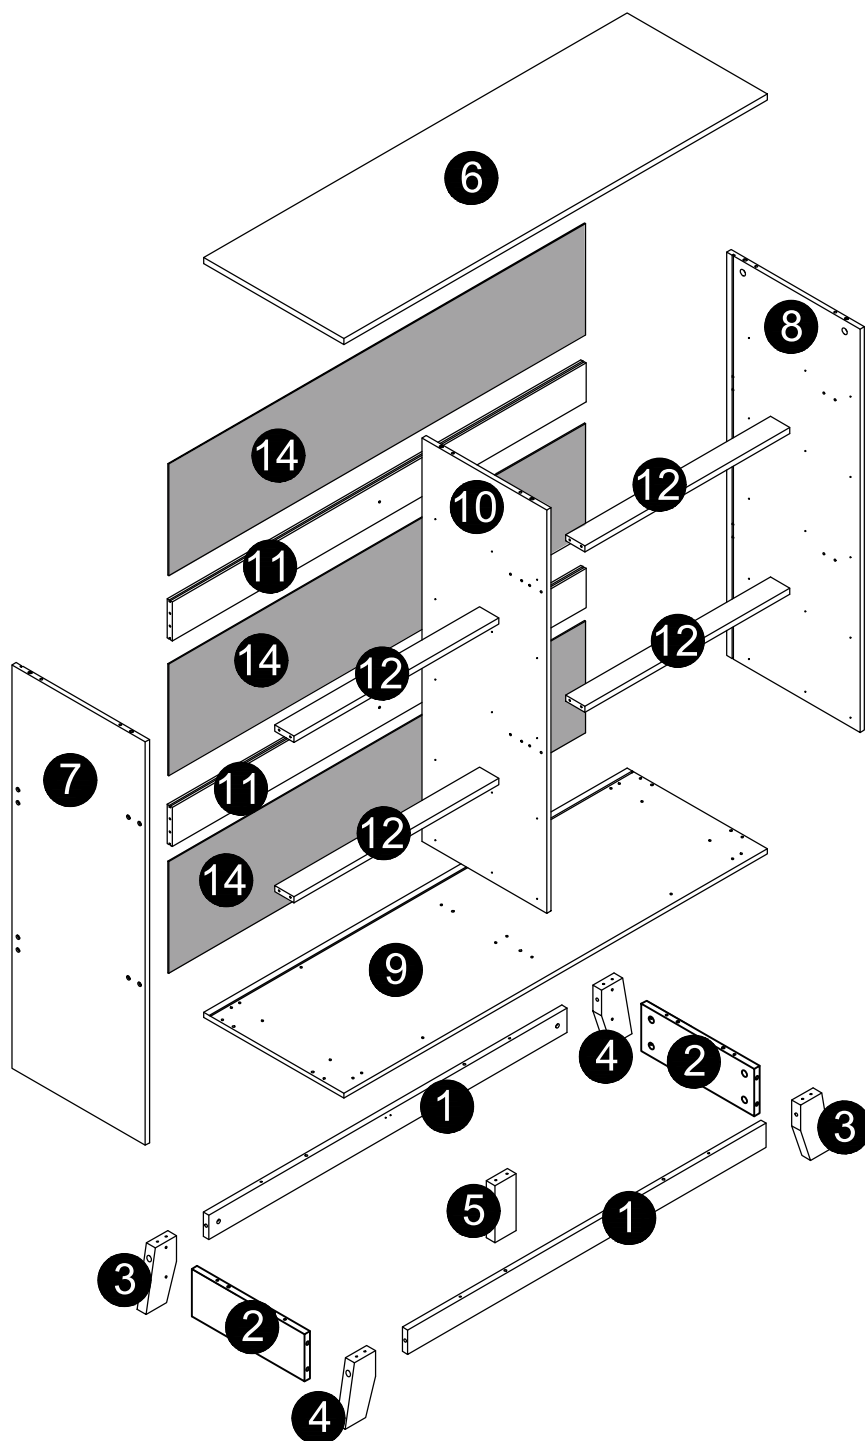


 A x64 Ø6x35mm +3(spare)	 B x64 Ø15x10mm +3(spare)	 C x60 Ø6x30mm +3(spare)	 D x58 Ø4x35mm +3(spare)	 E x120 Ø3.5x12mm +6(spare)	 F x10
 G x20 Ø3.5x10mm +2(spare)	 H1  H2 H x18 Ø3x16mm +1(spare)	 I x2 Ø6x30mm	 J x2 Ø4x14mm	 K x44 Ø5x35mm +3(spare)	 L x1
 M x4 Ø6x80mm	 N x4 Ø10x10mm	 O x2	 P x8 Ø4x12mm +1(spare)	 Q x2	 R x20 +2(spare)
 S x2	 T x4	 U x2	 CL x10 330mm	 CR x10 330mm	 DL x10 330mm
 DR x10 330mm					

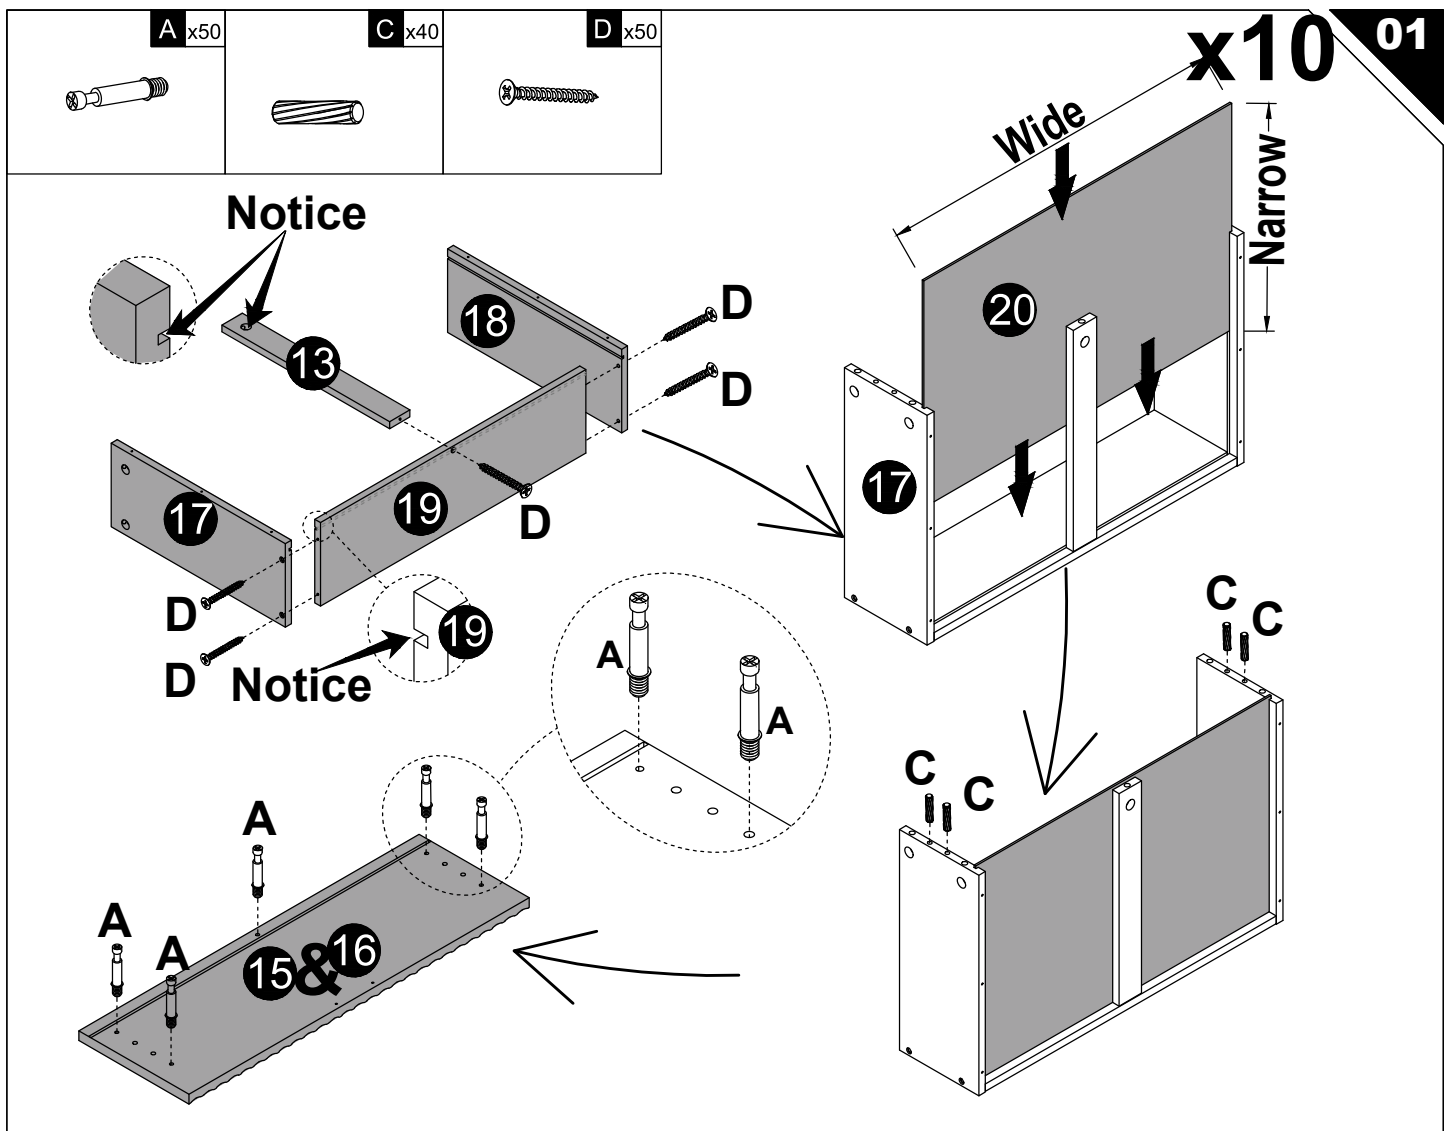


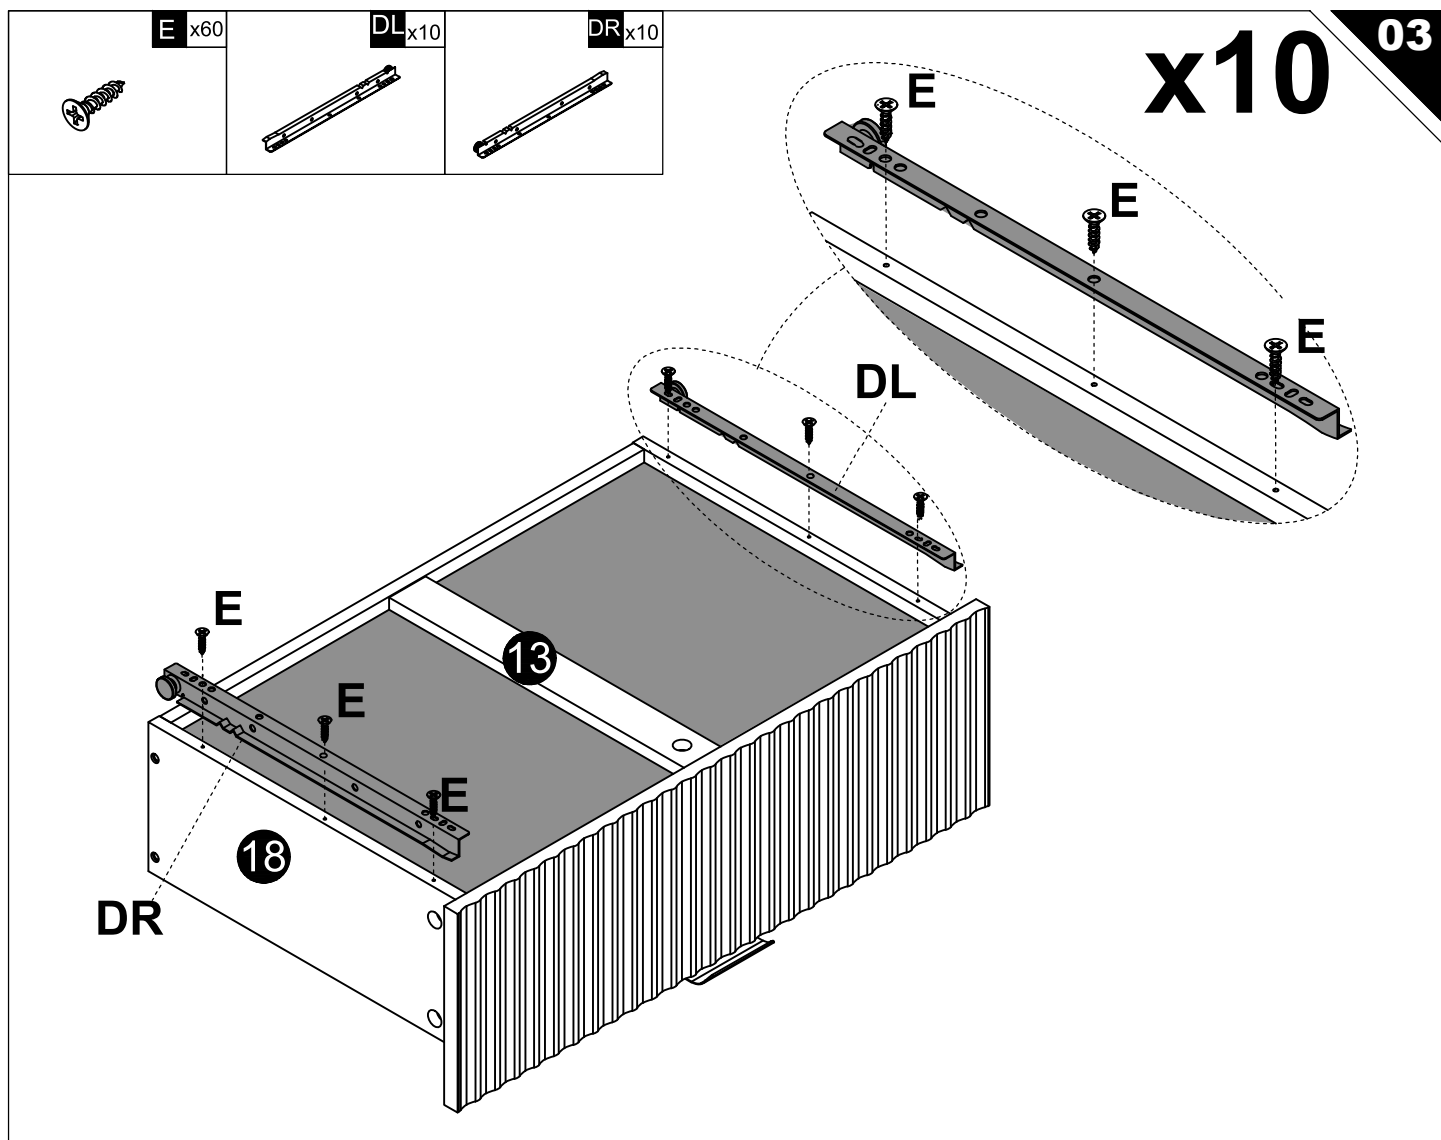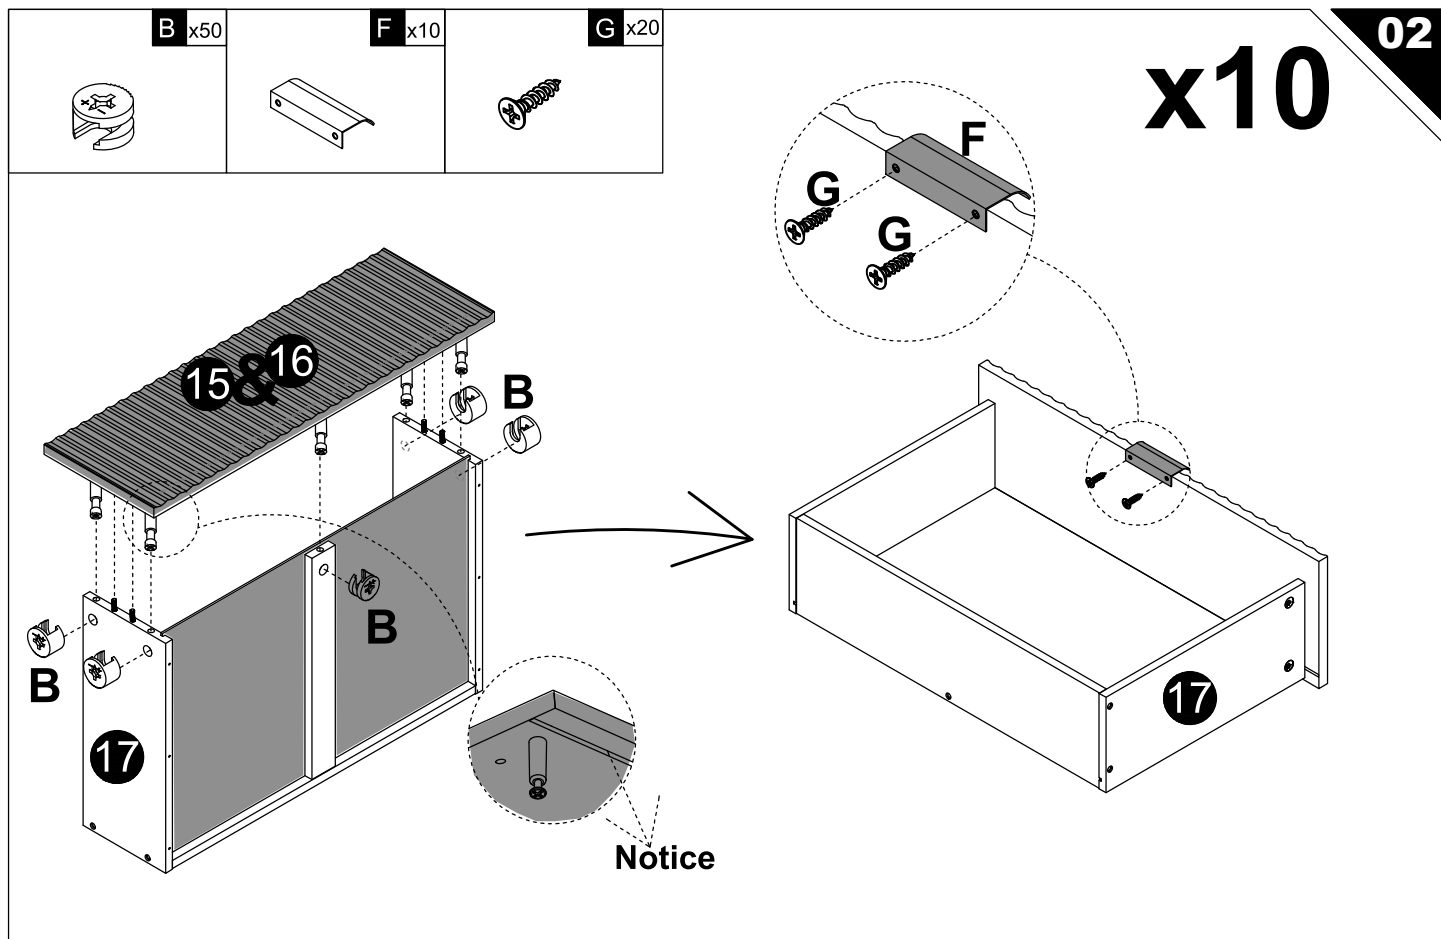


04

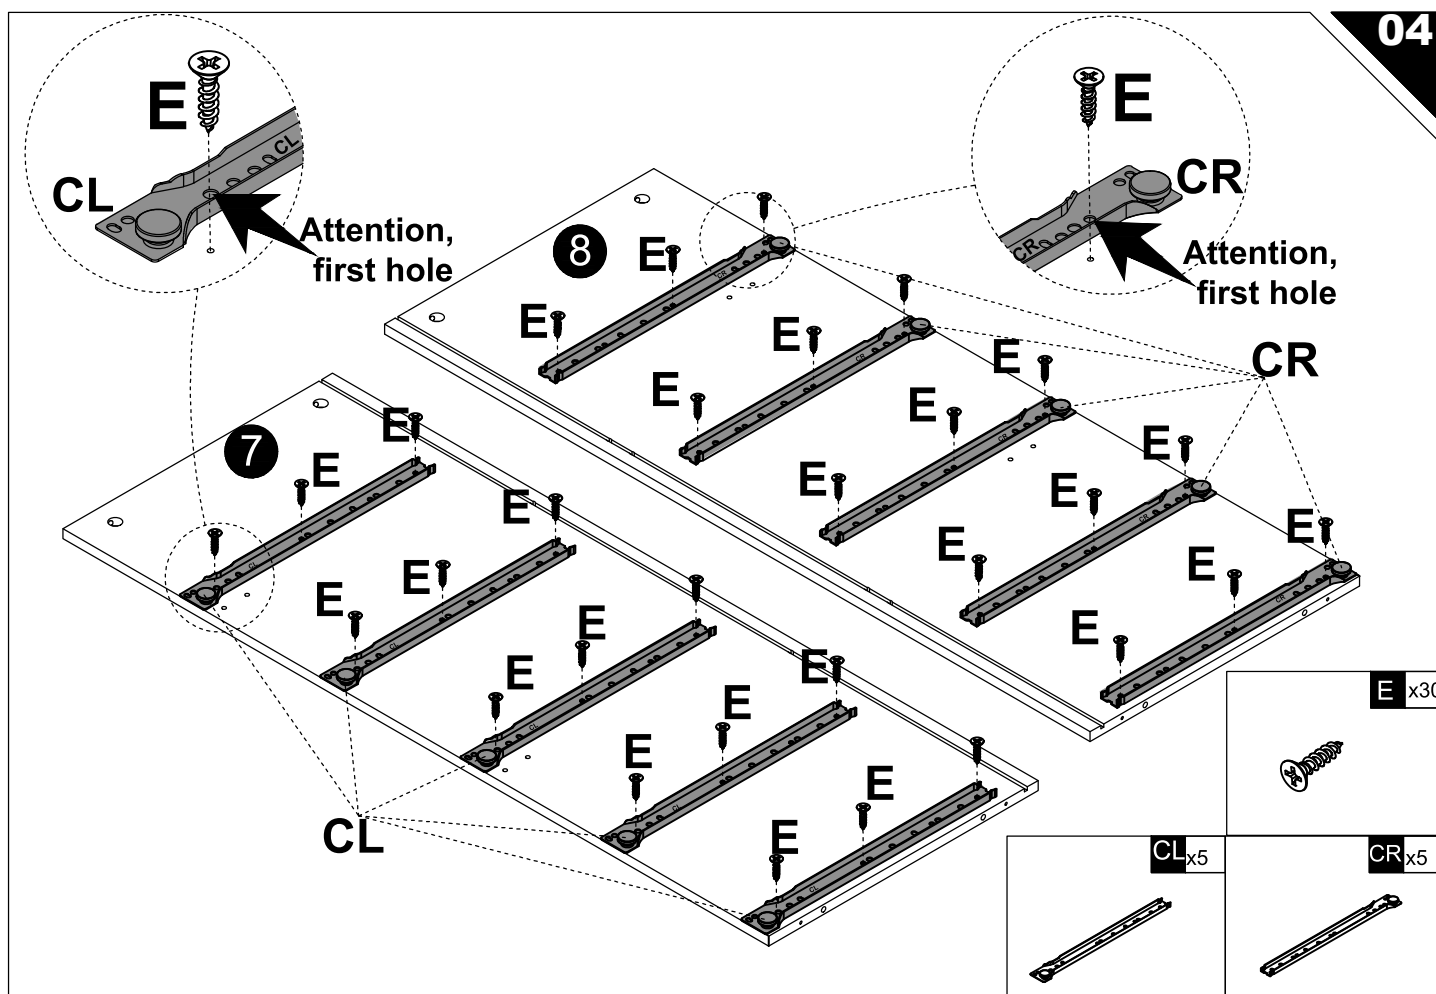

05

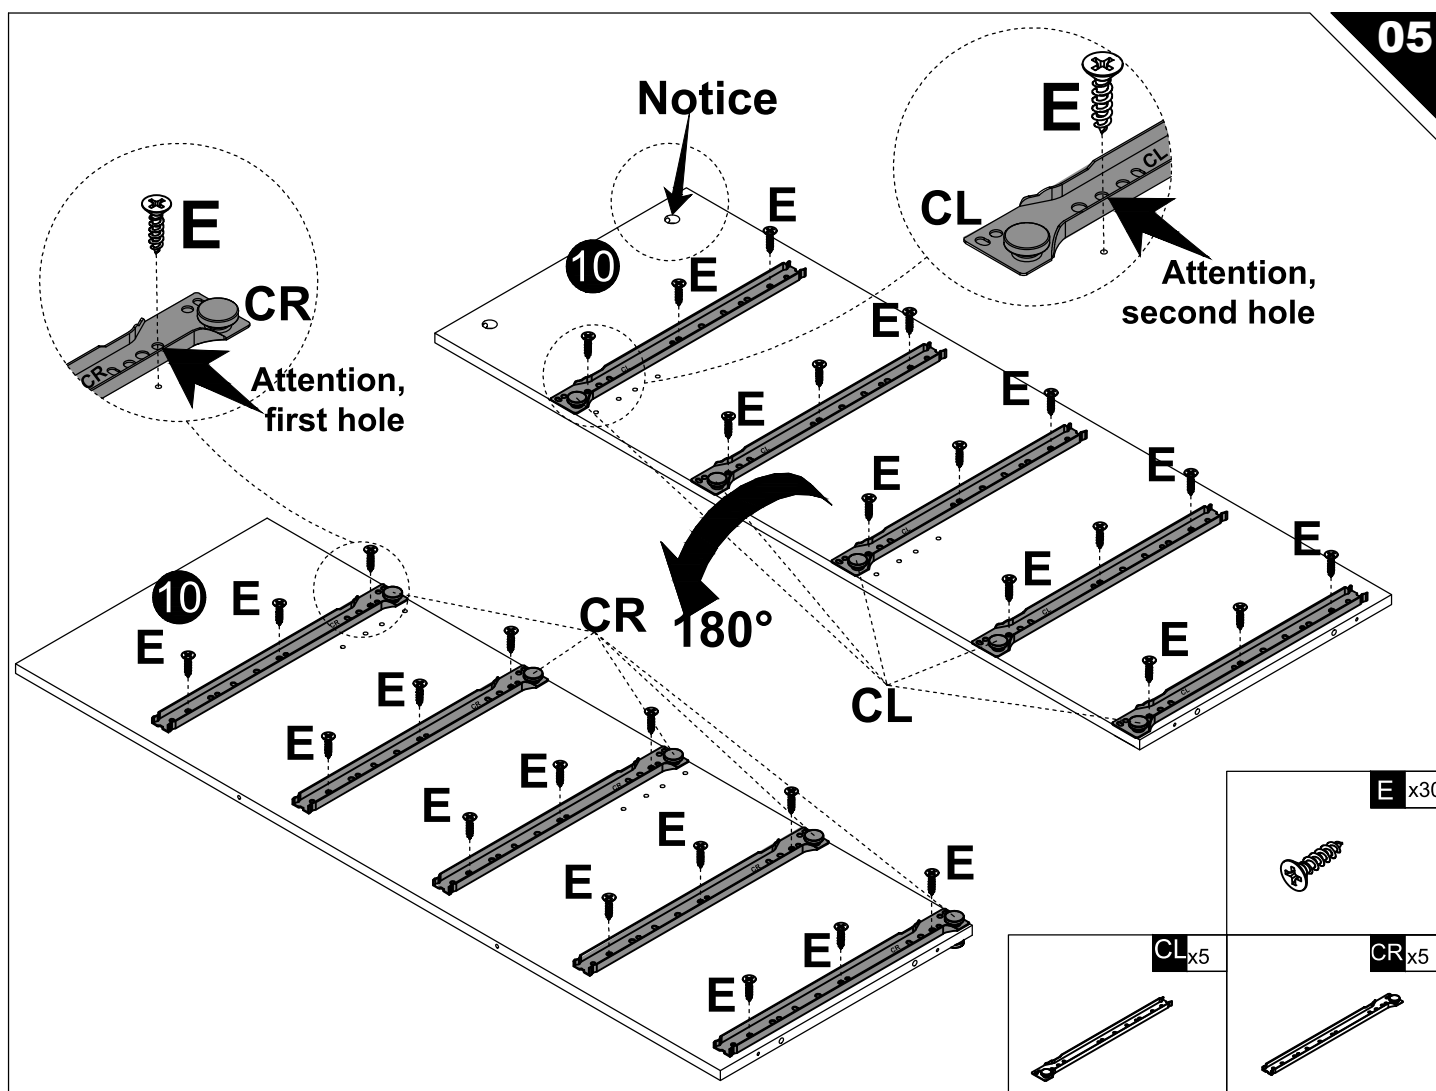

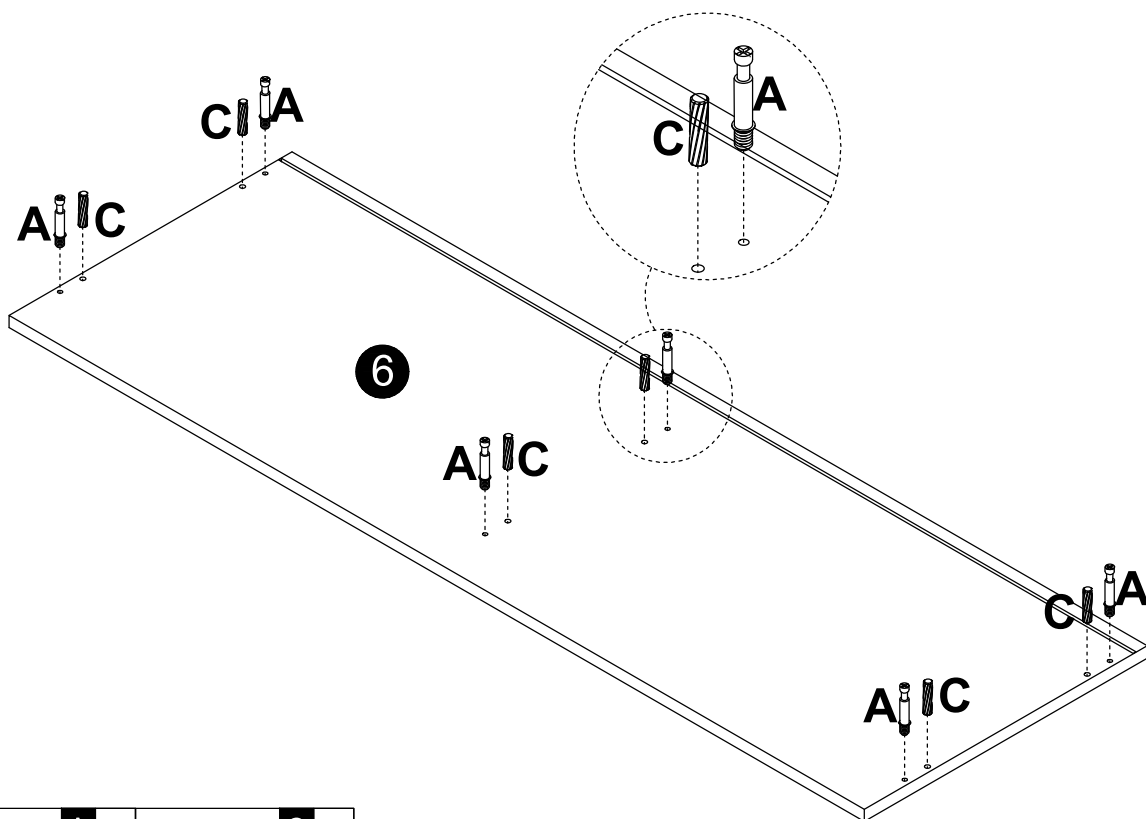


A x6





C x6



B x4

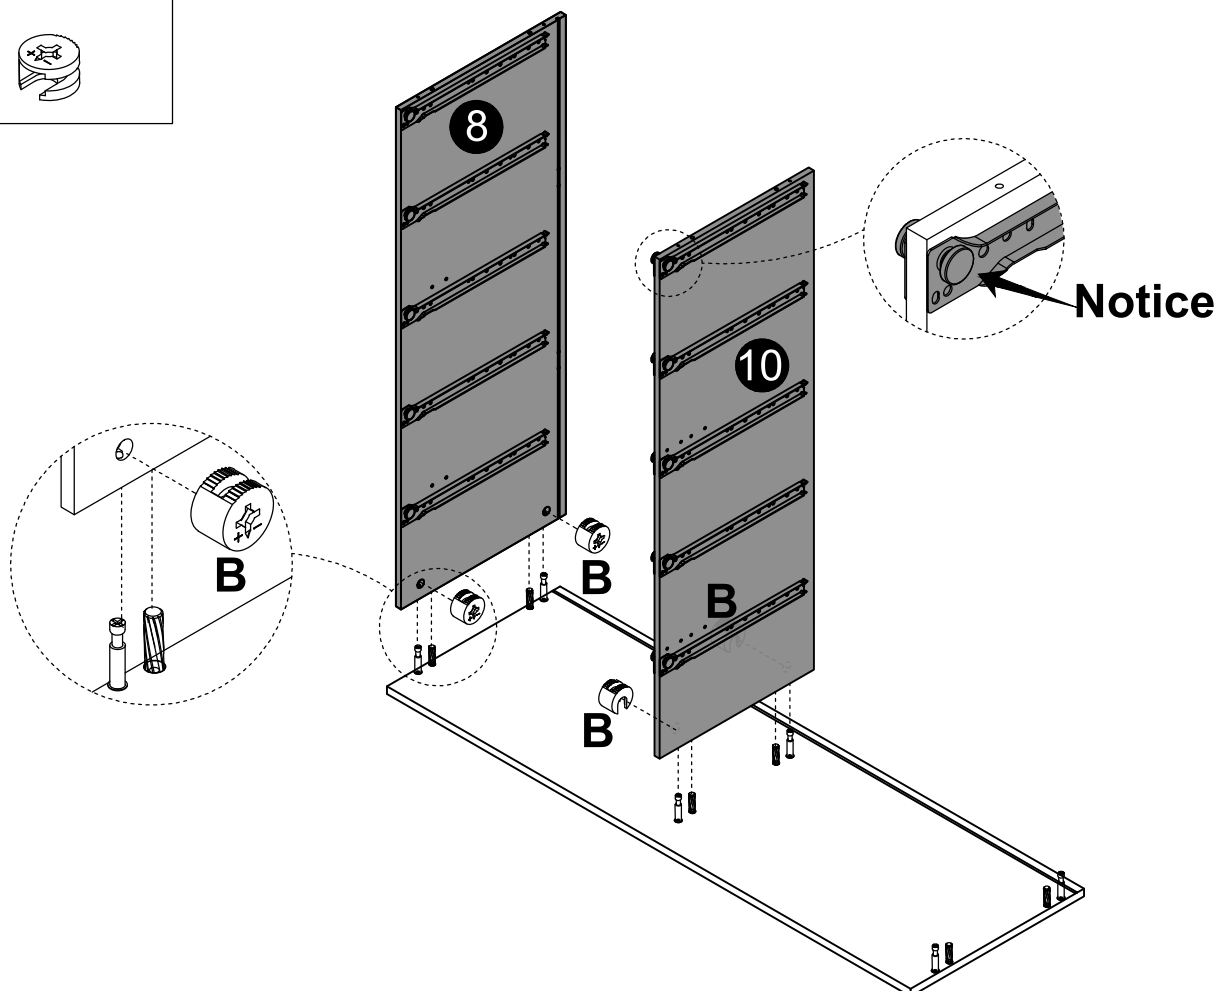

Notice

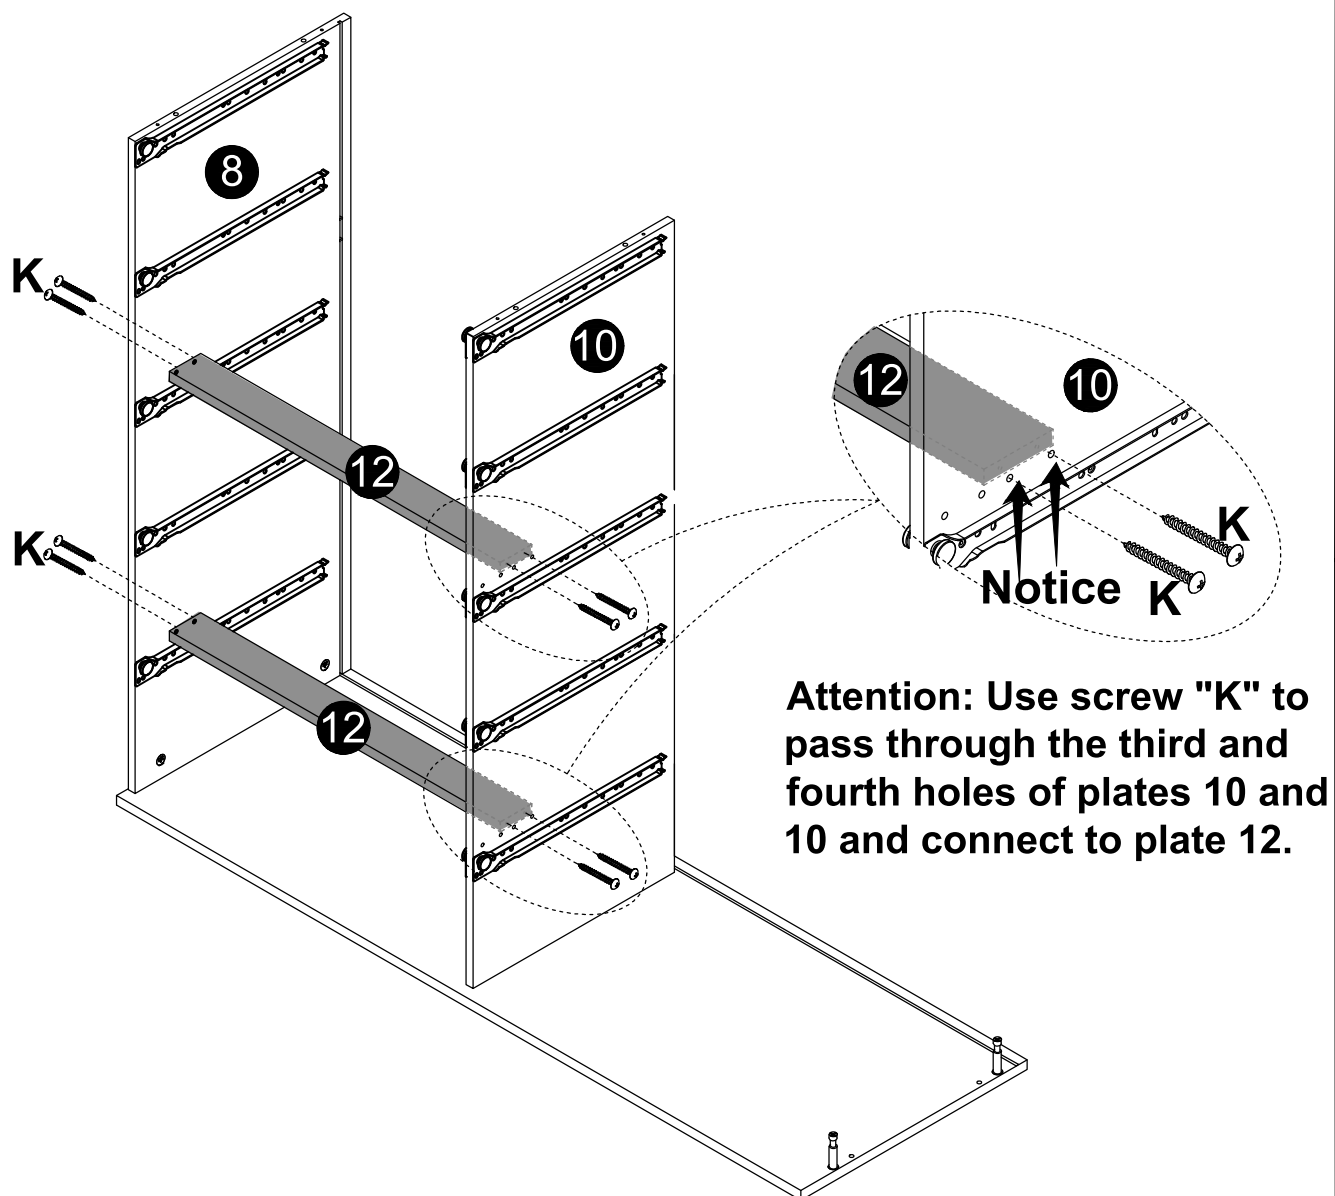

B x2




C x6



K x8









Notice

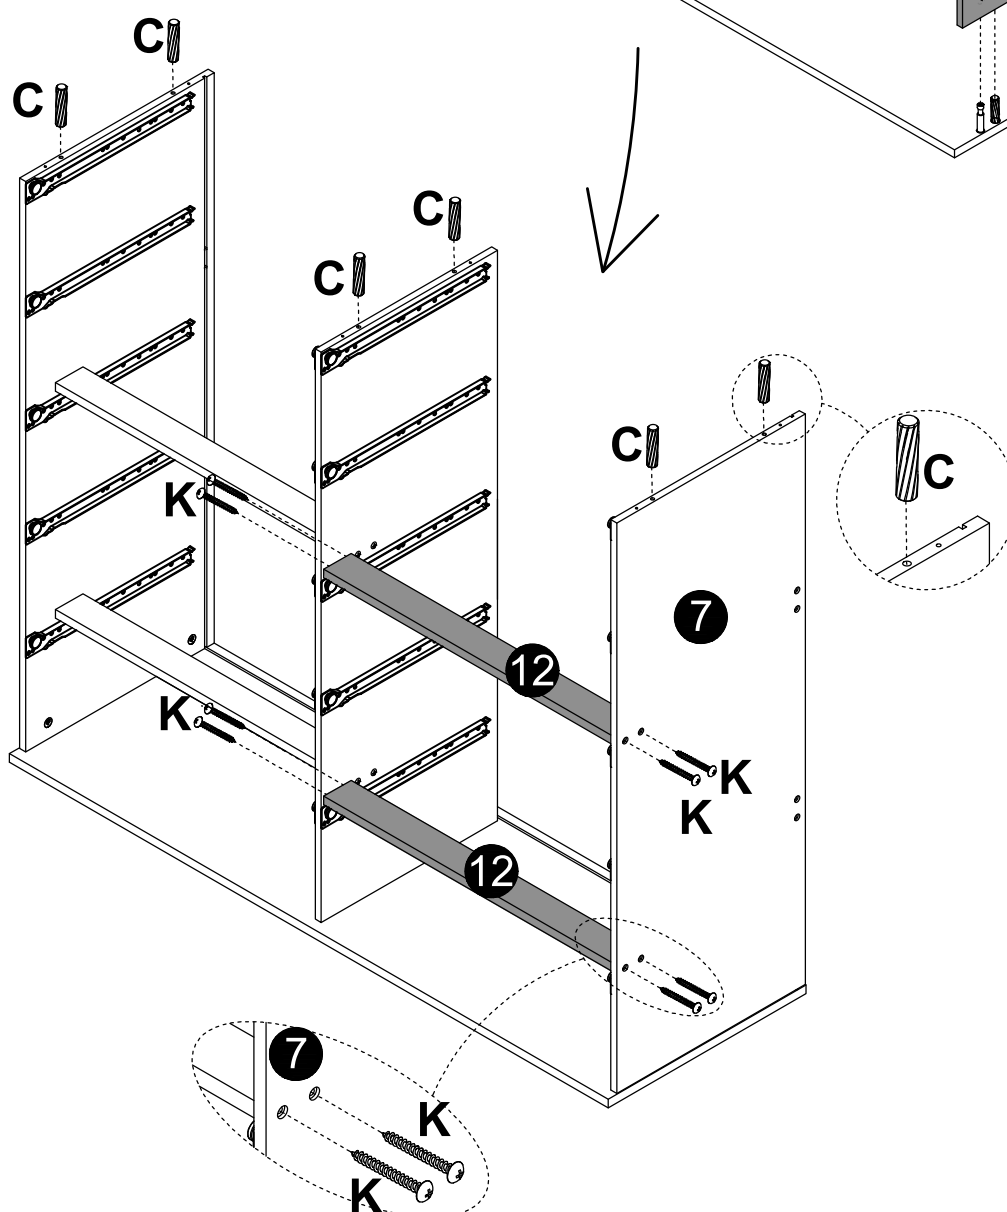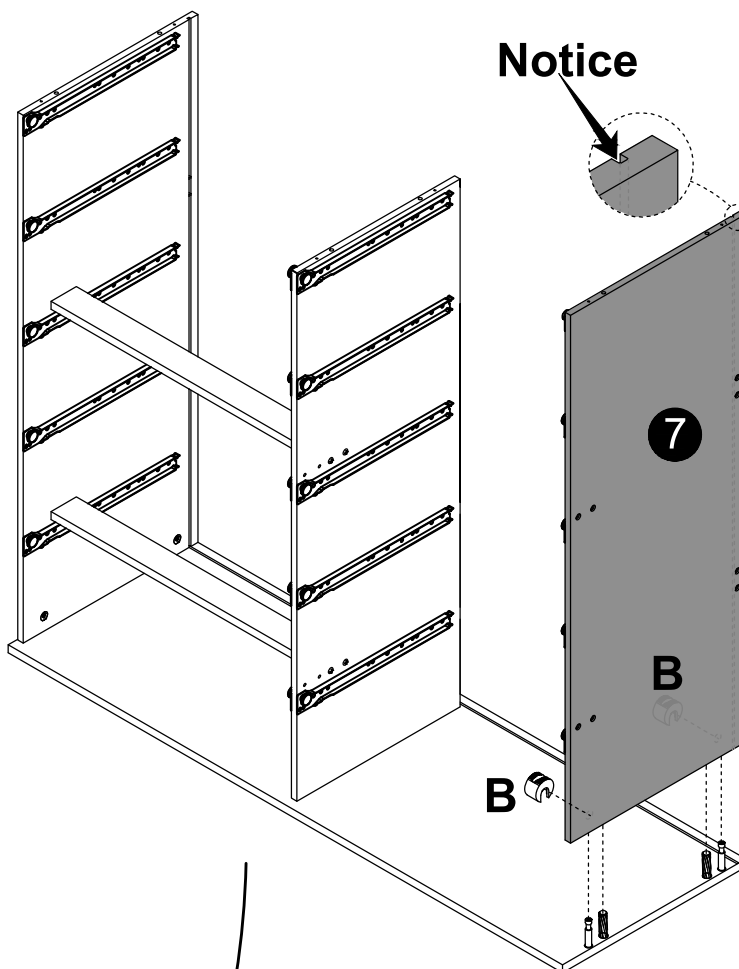




Note: At least two people are required for this step.

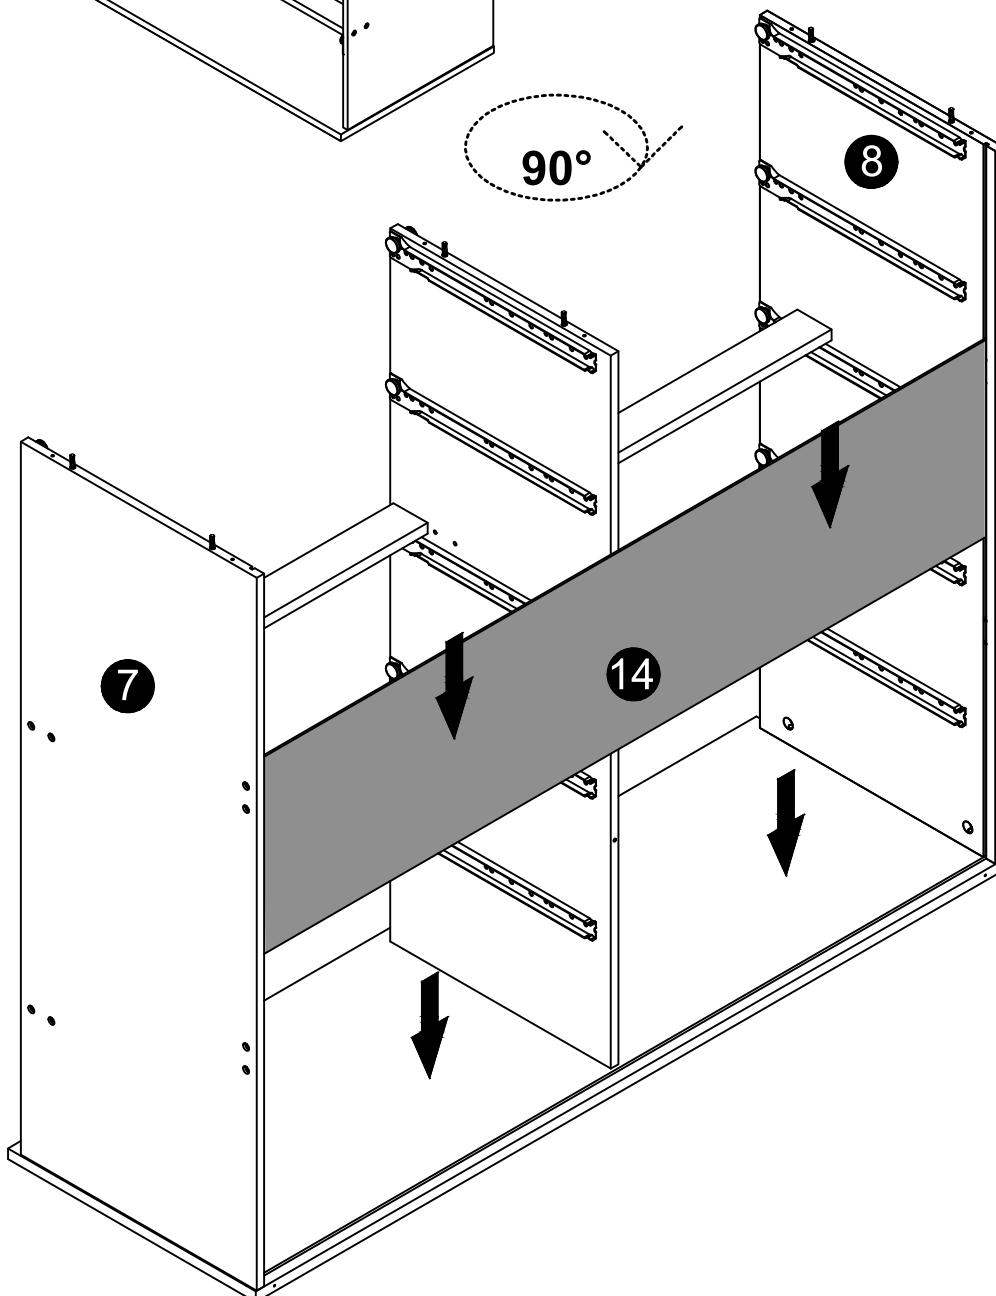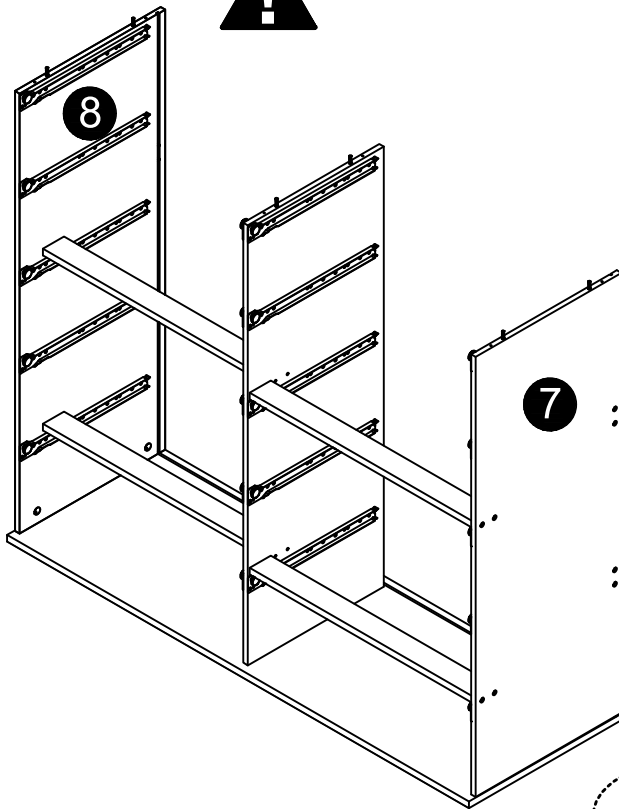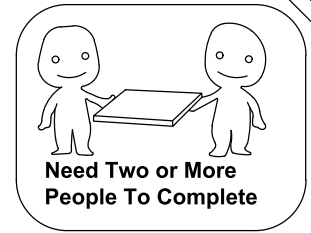


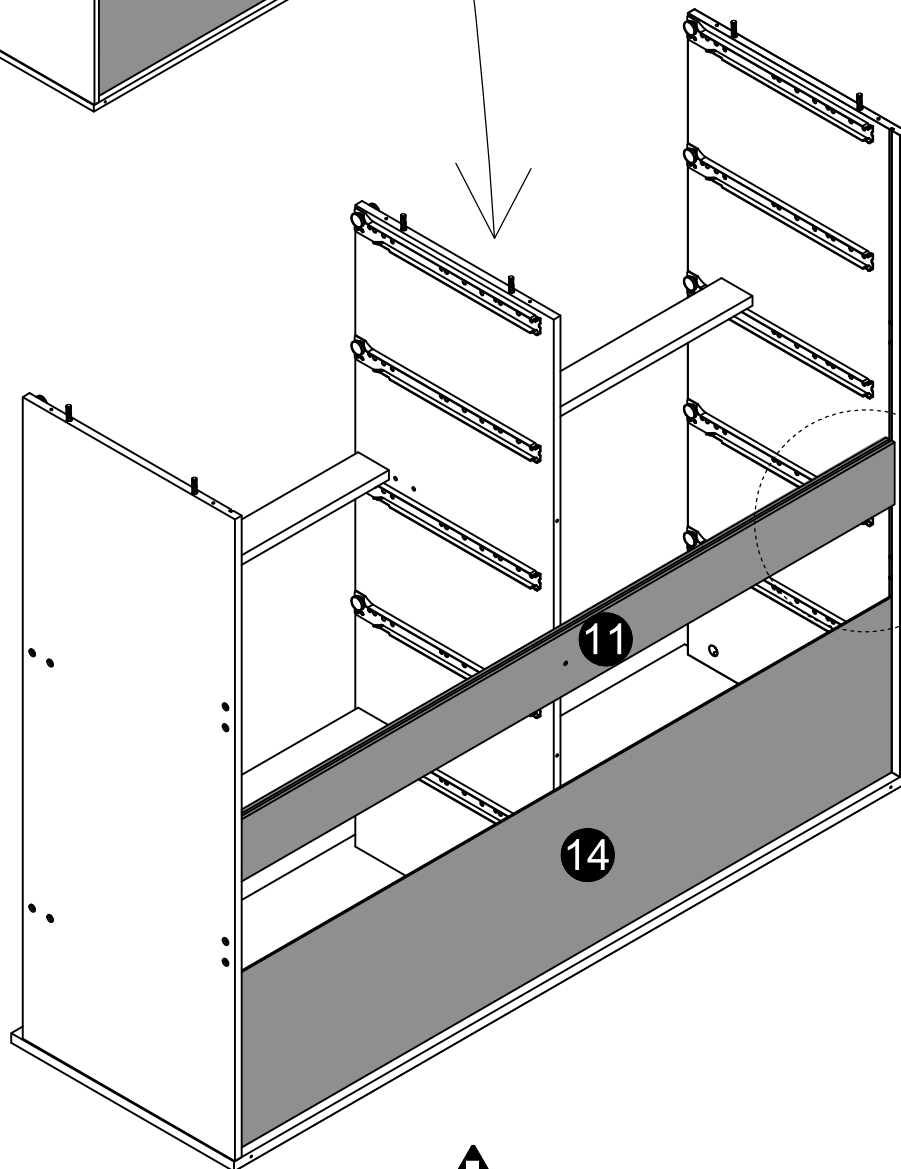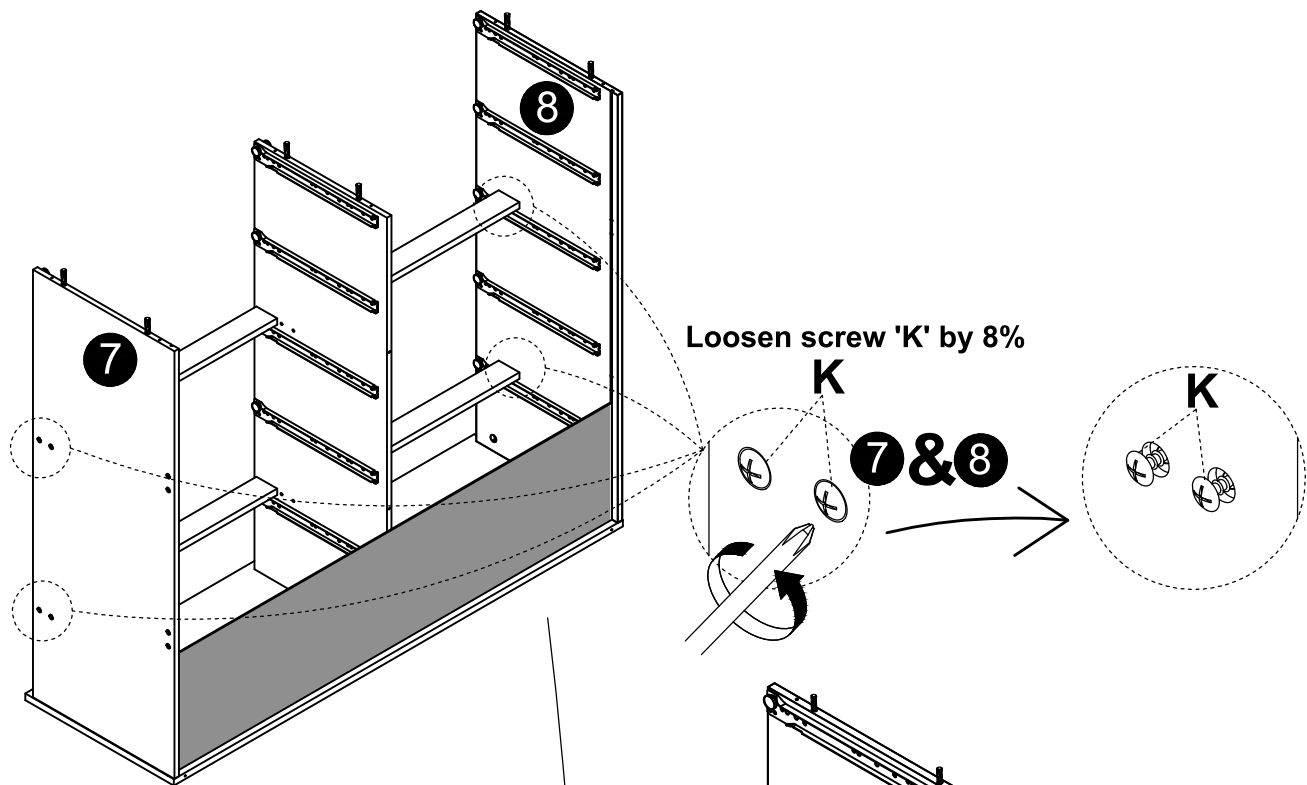



Attention: Please note that board 14 needs to be inserted into slot 11.

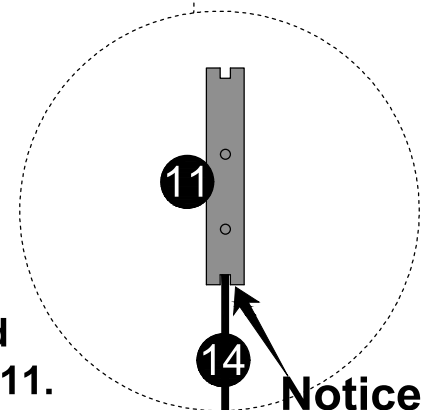



K x5

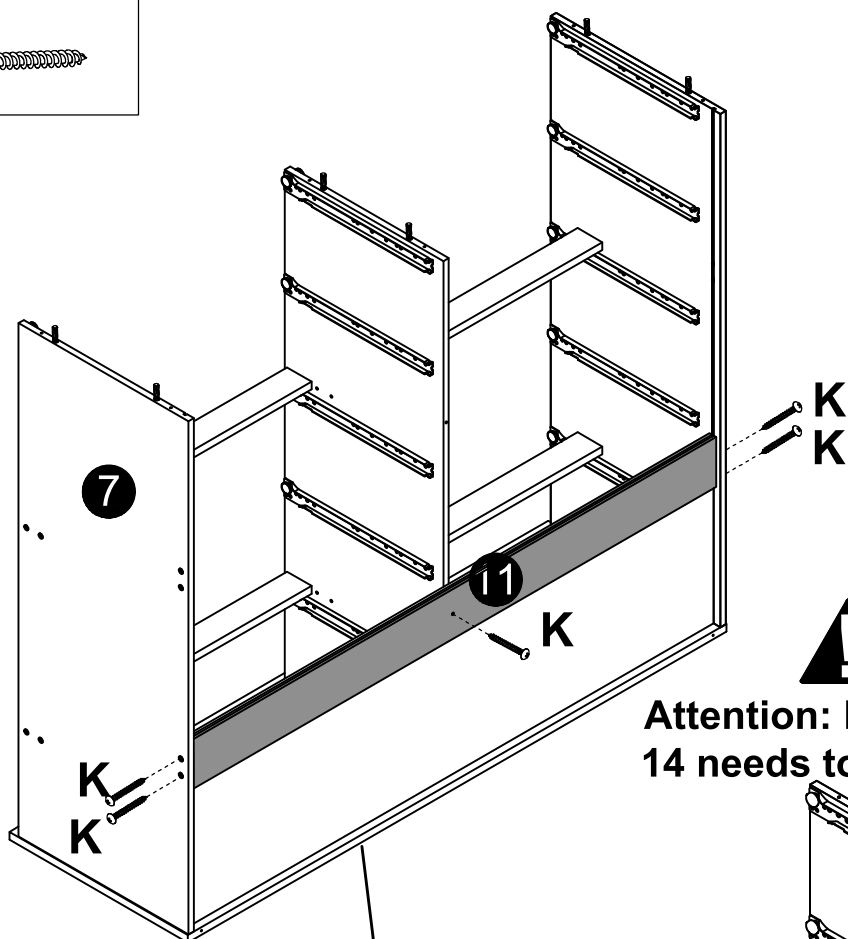

Attention: Please note that board 14 needs to be inserted into slot 11.

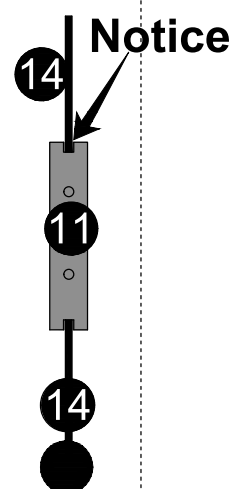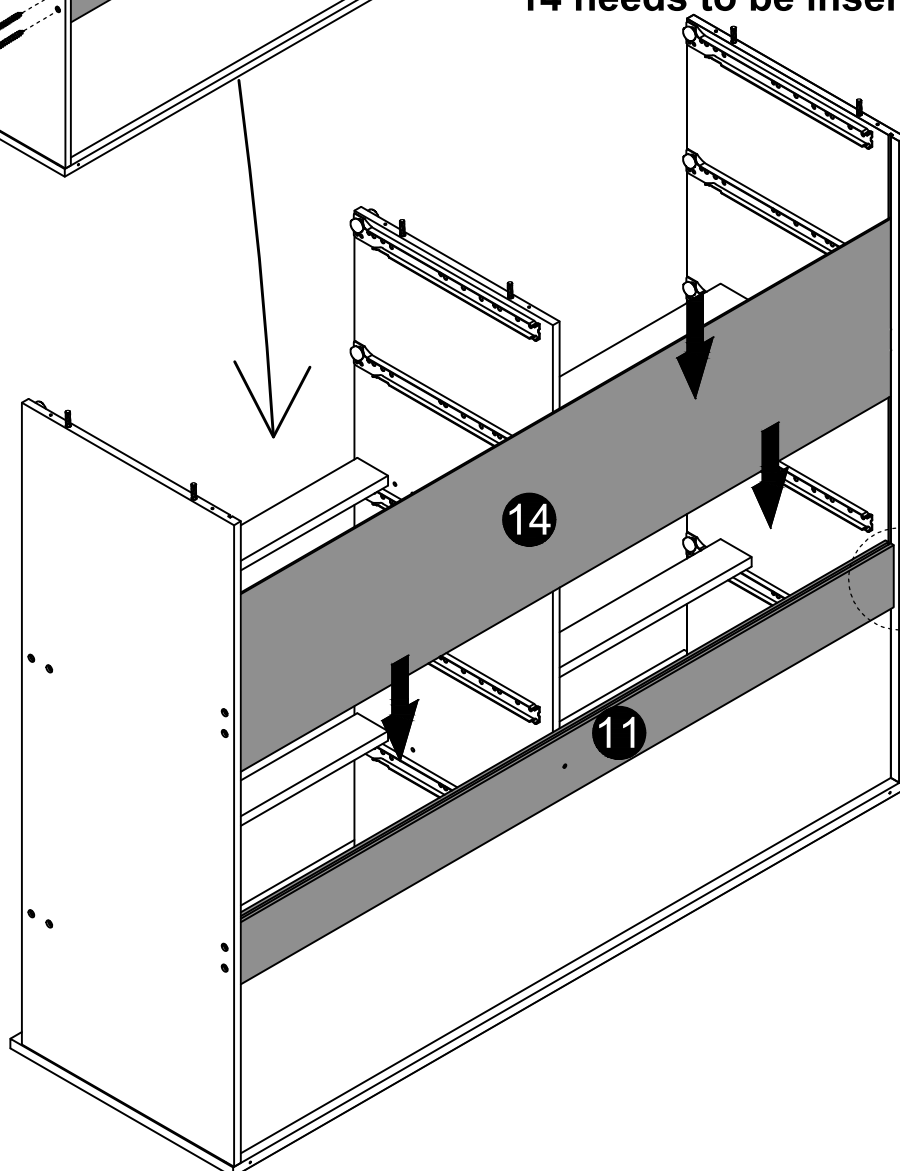


K x5

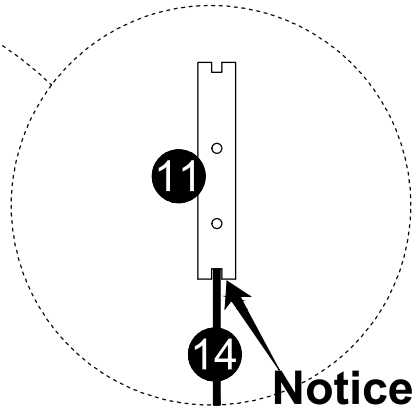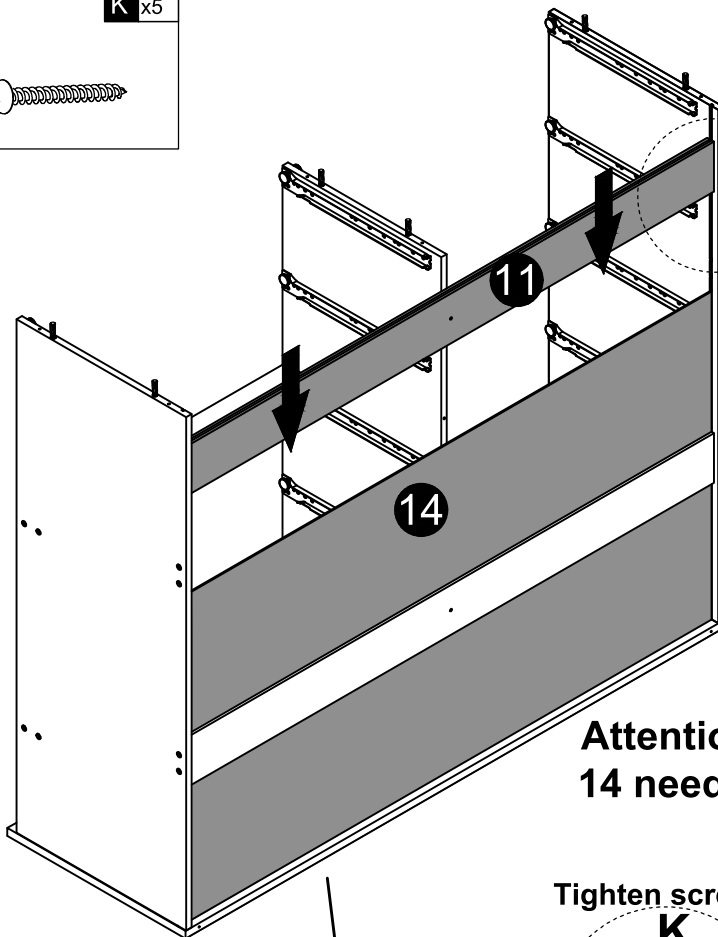


Attention: Please note that board 14 needs to be inserted into slot 11.

Tighten screw 'K' to 100%


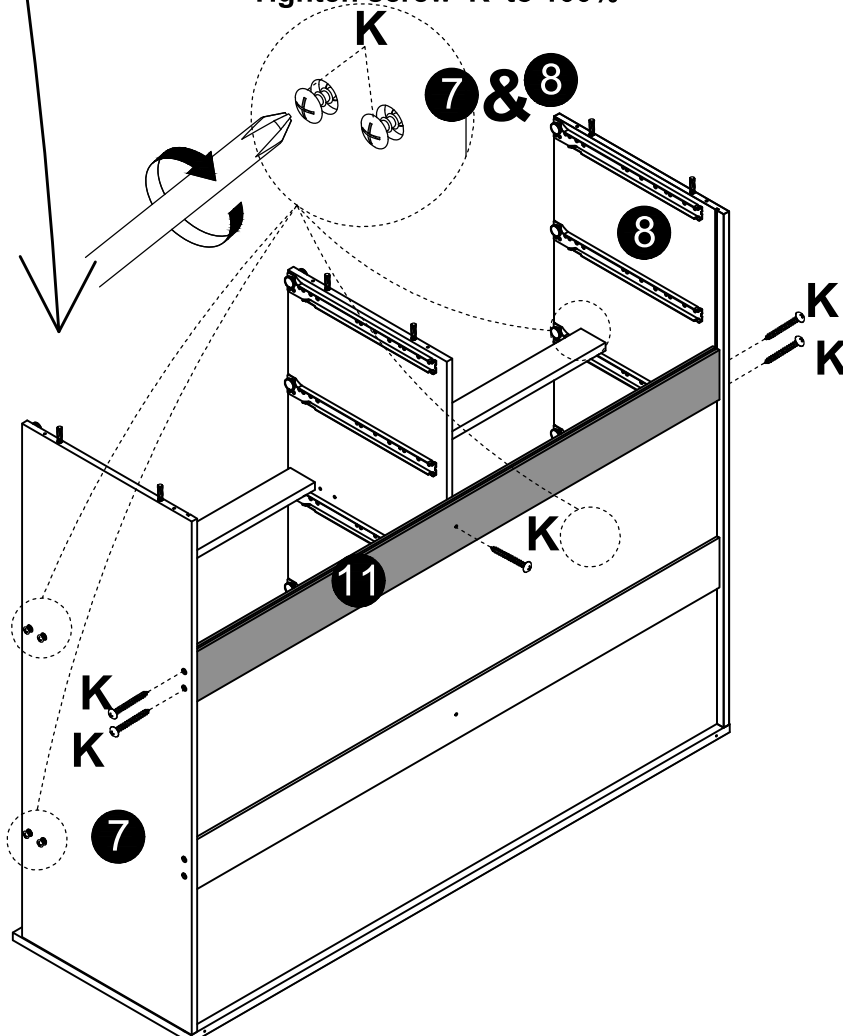




Attention: Please note that board 14 needs to be inserted into slot 11.

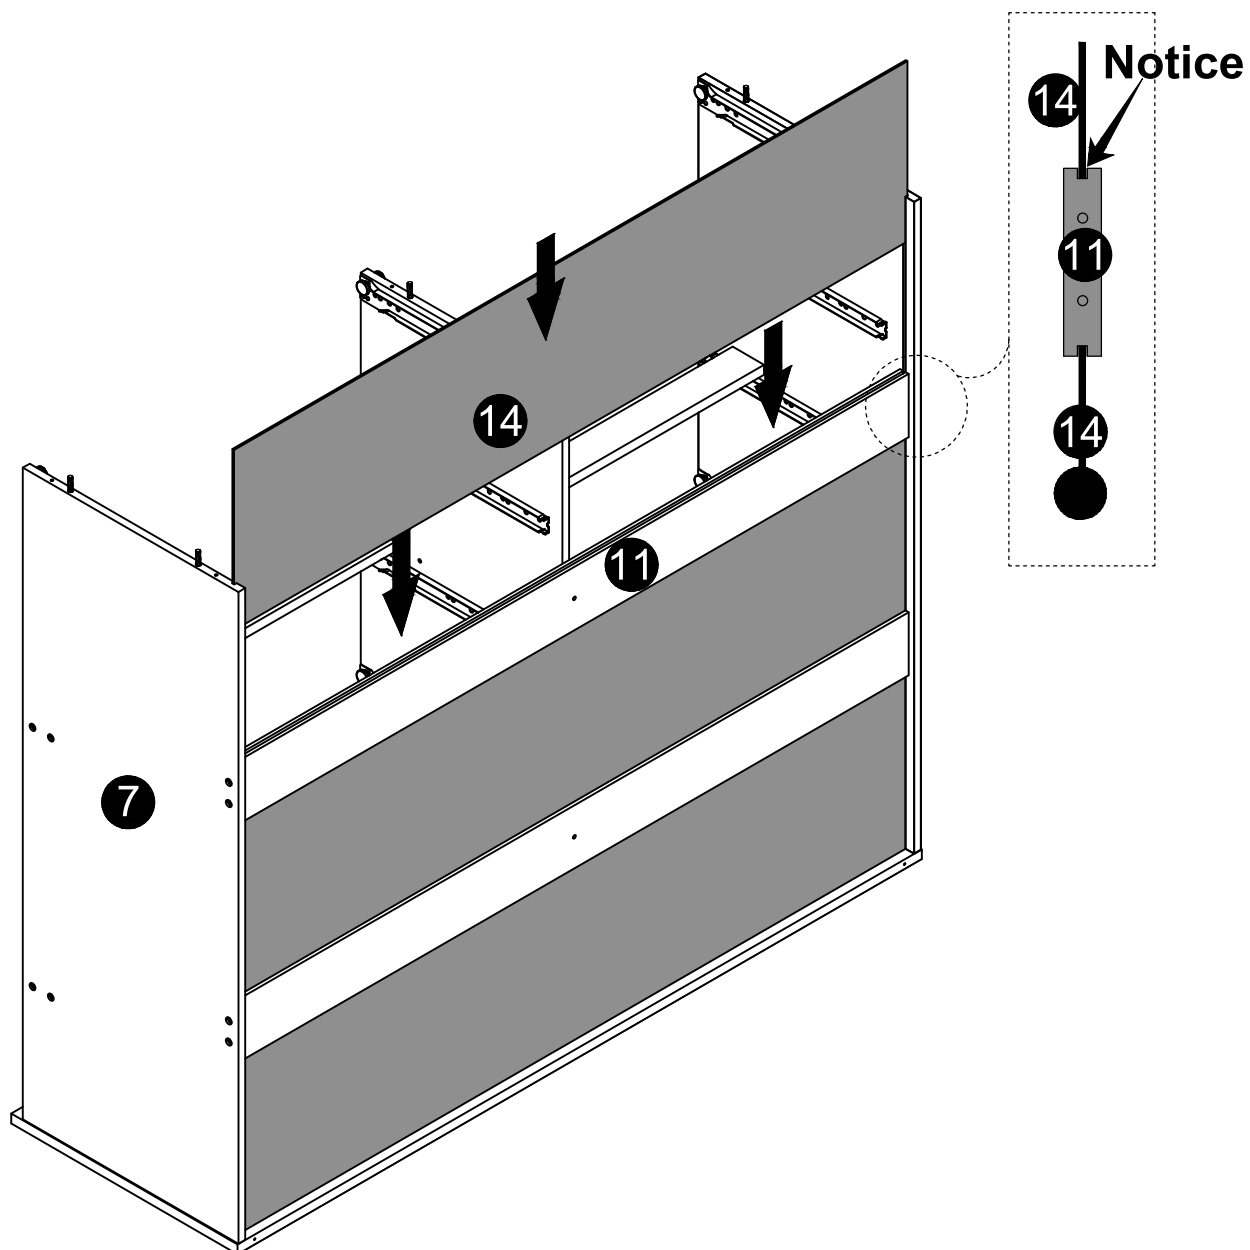

A x8

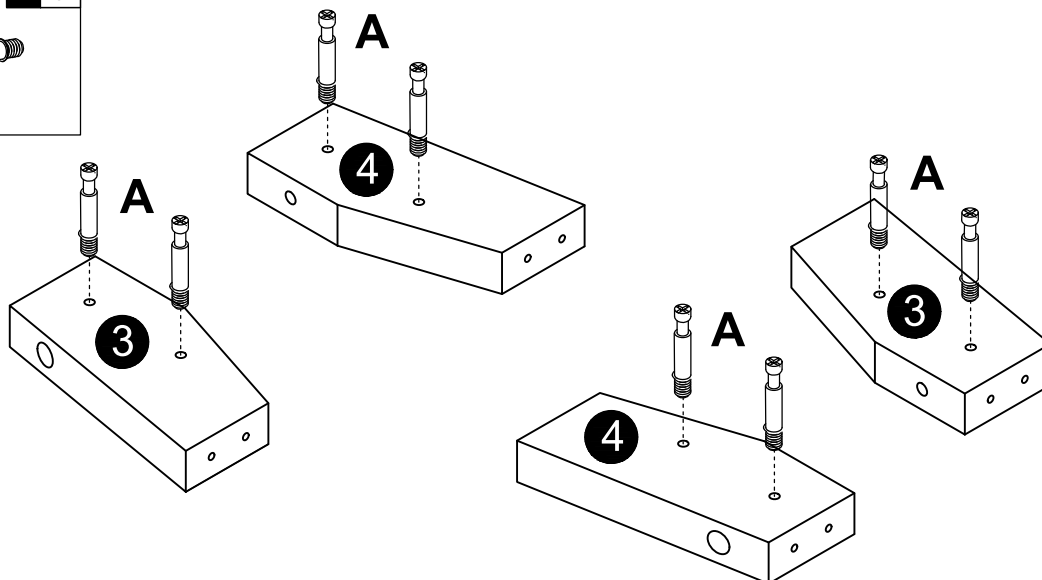


B x8



O x2



P x4

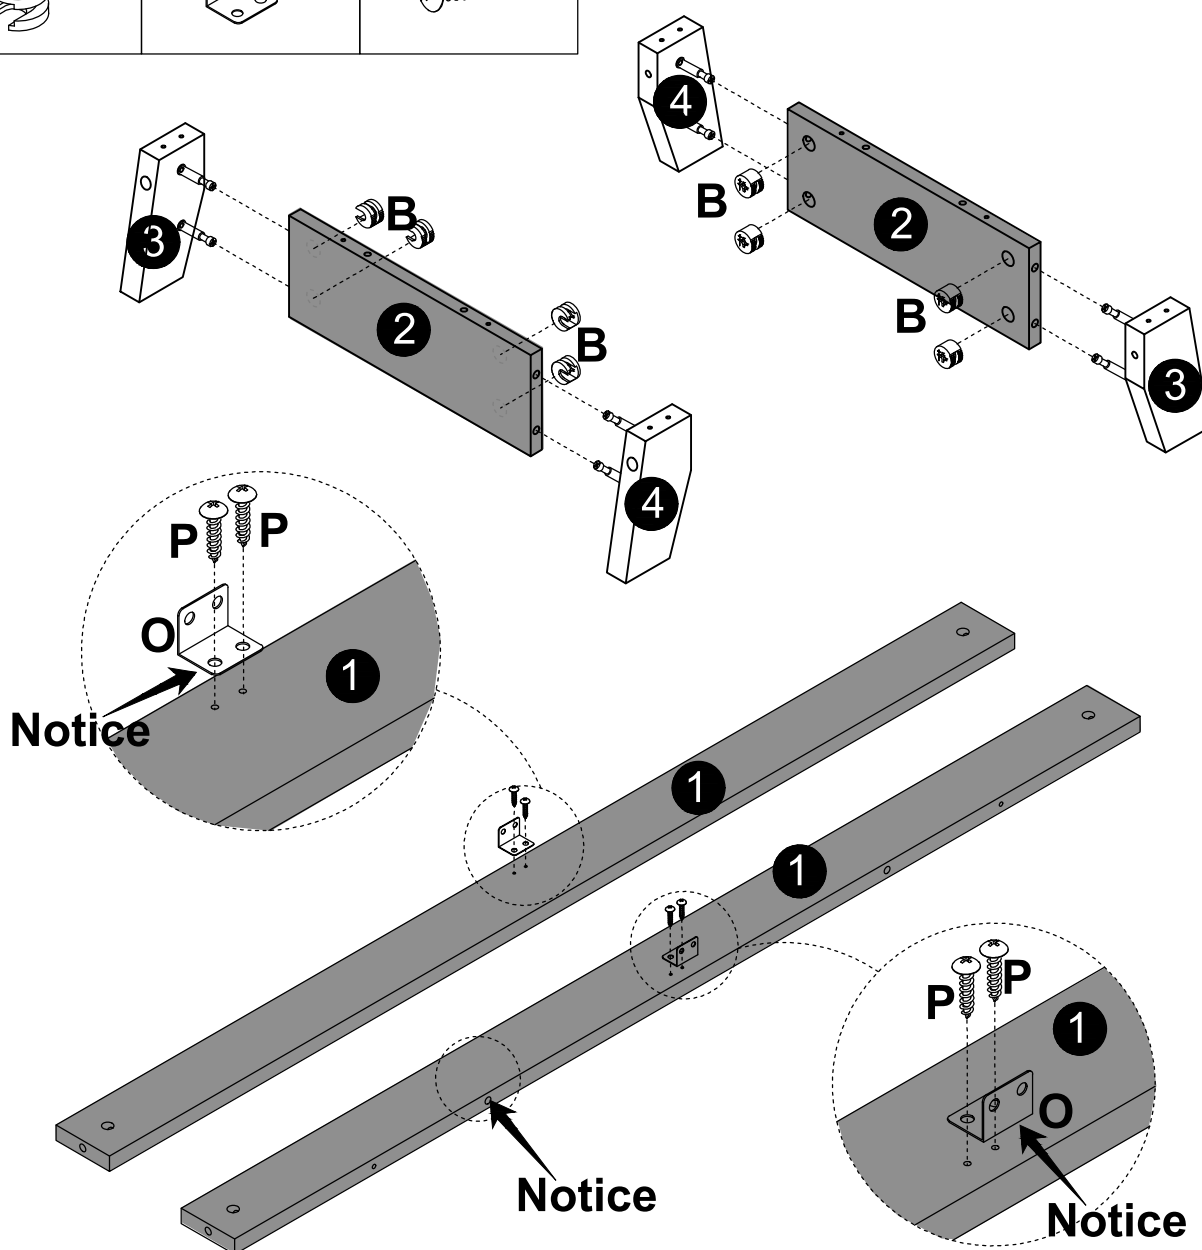


C x8



M x4





N x4

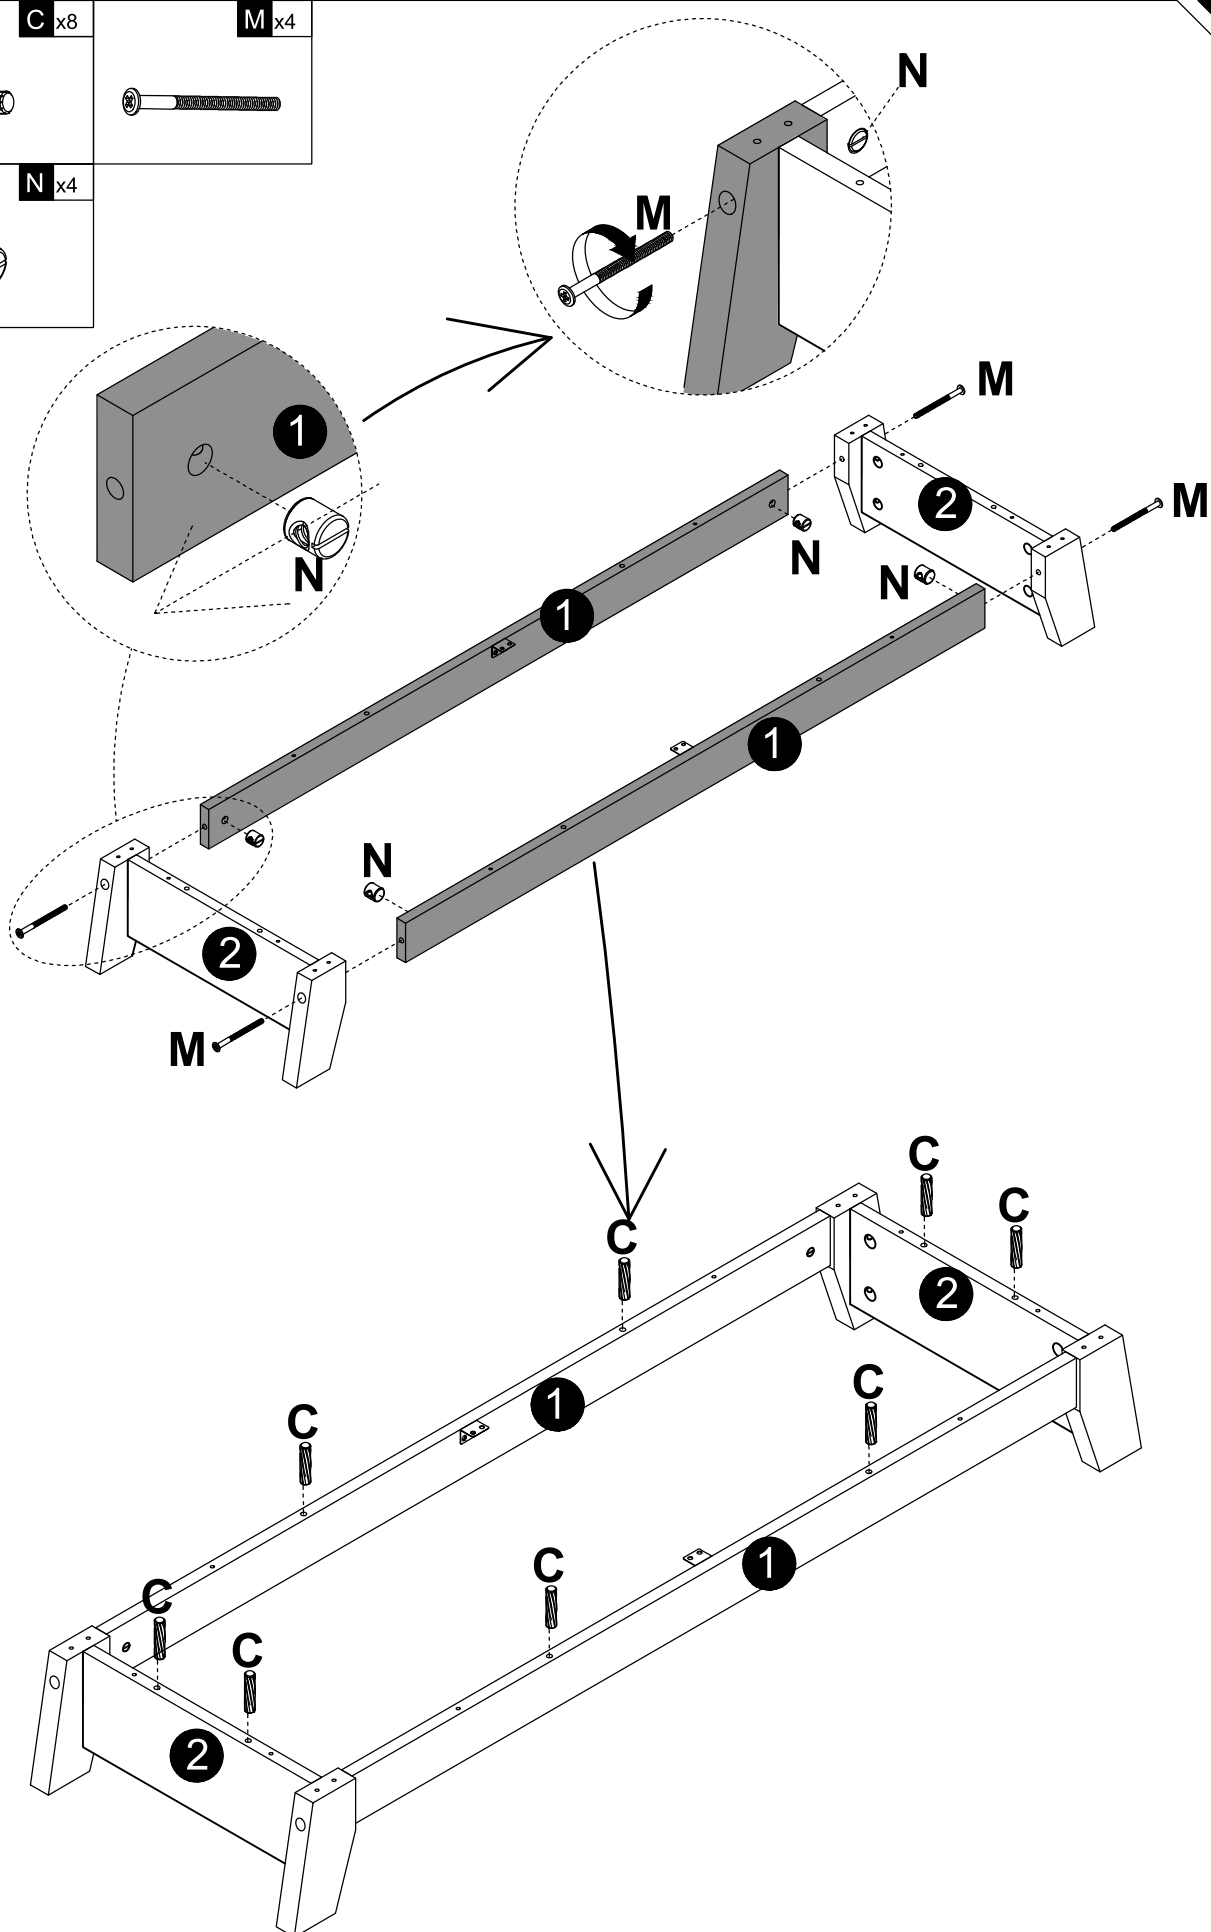


K x16

L x1

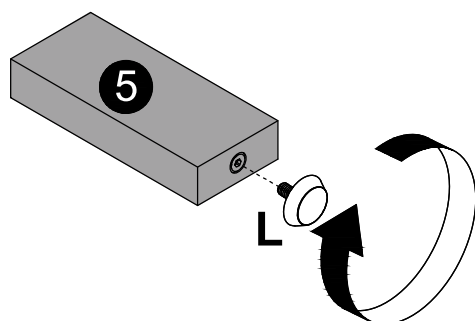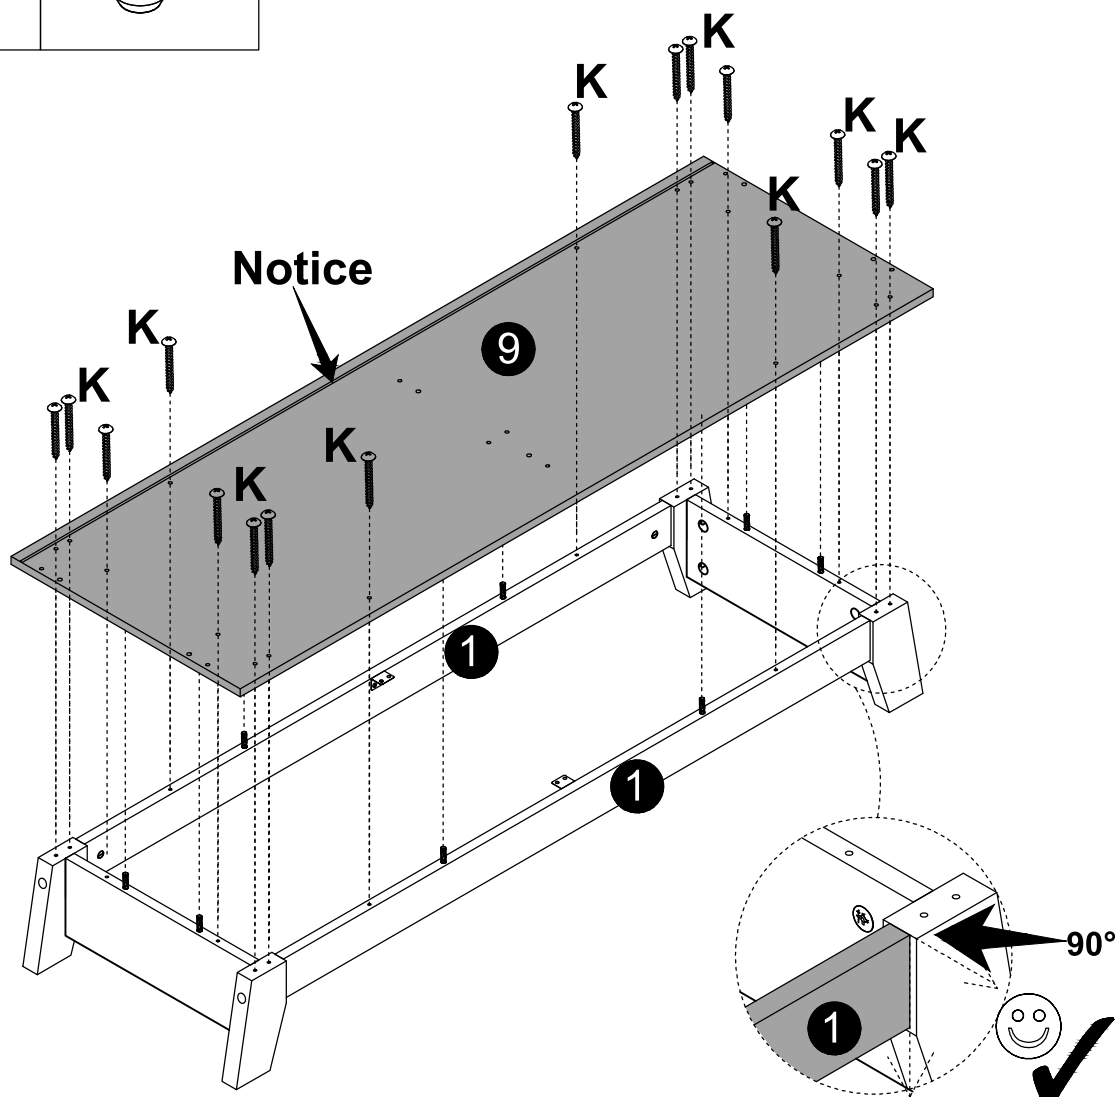


If board 1 does not have a 90 degree angle, please rotate board 1 90 degrees by hand.

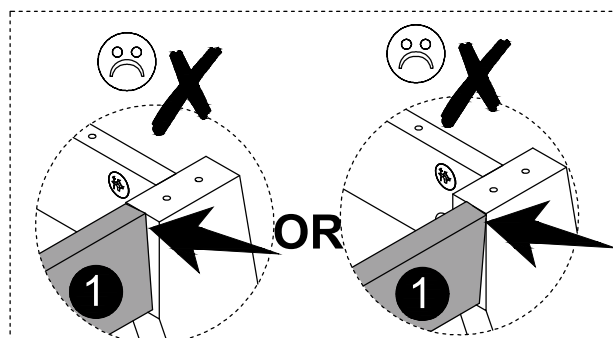

P x4



K x2

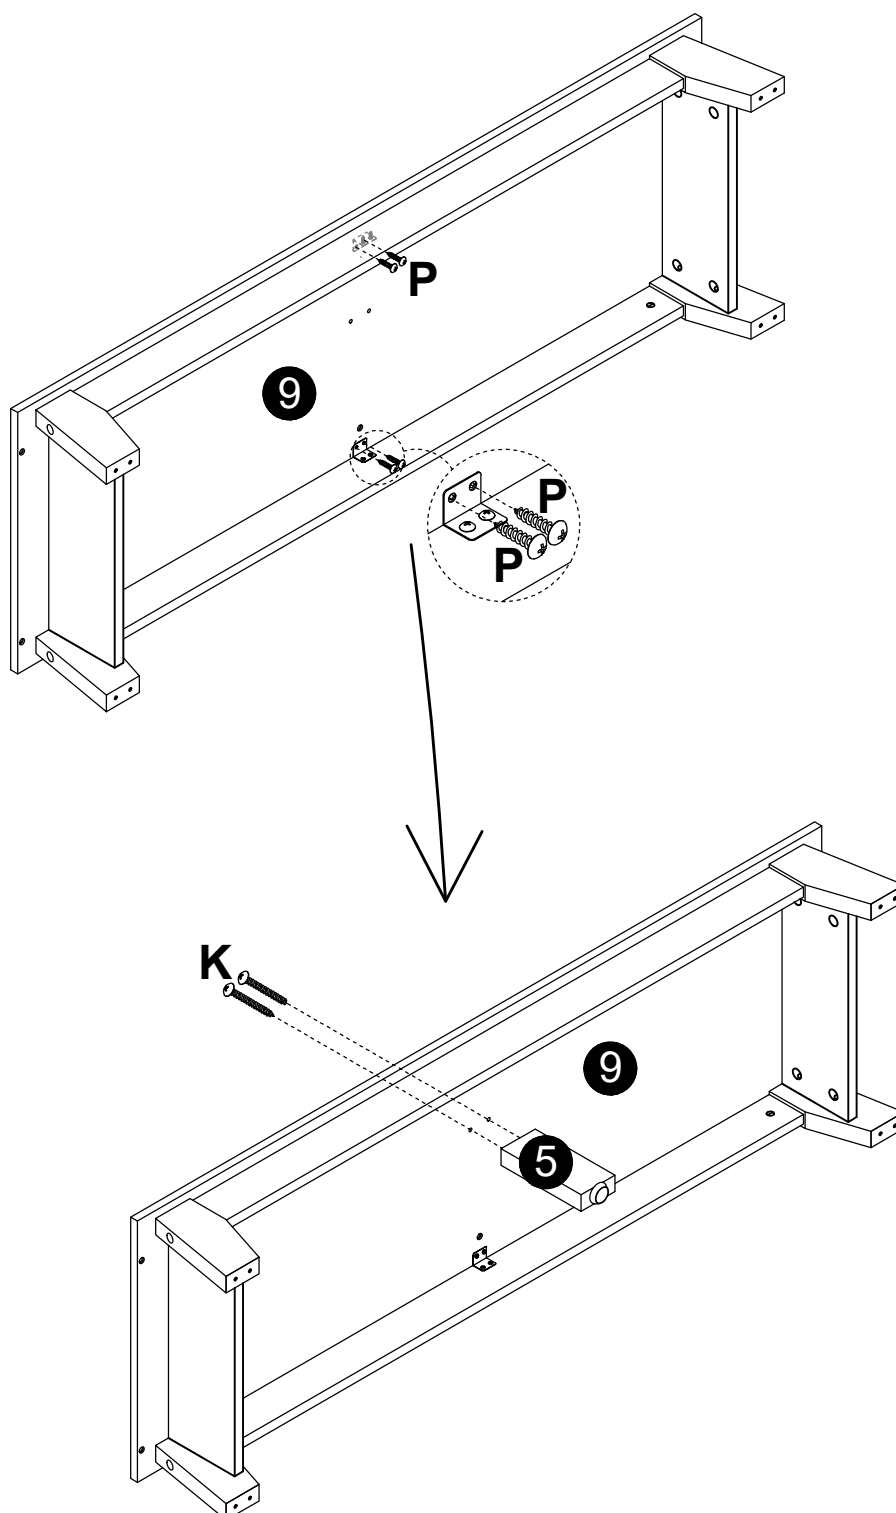



D x6



Note: At least two people are required for this step.



20

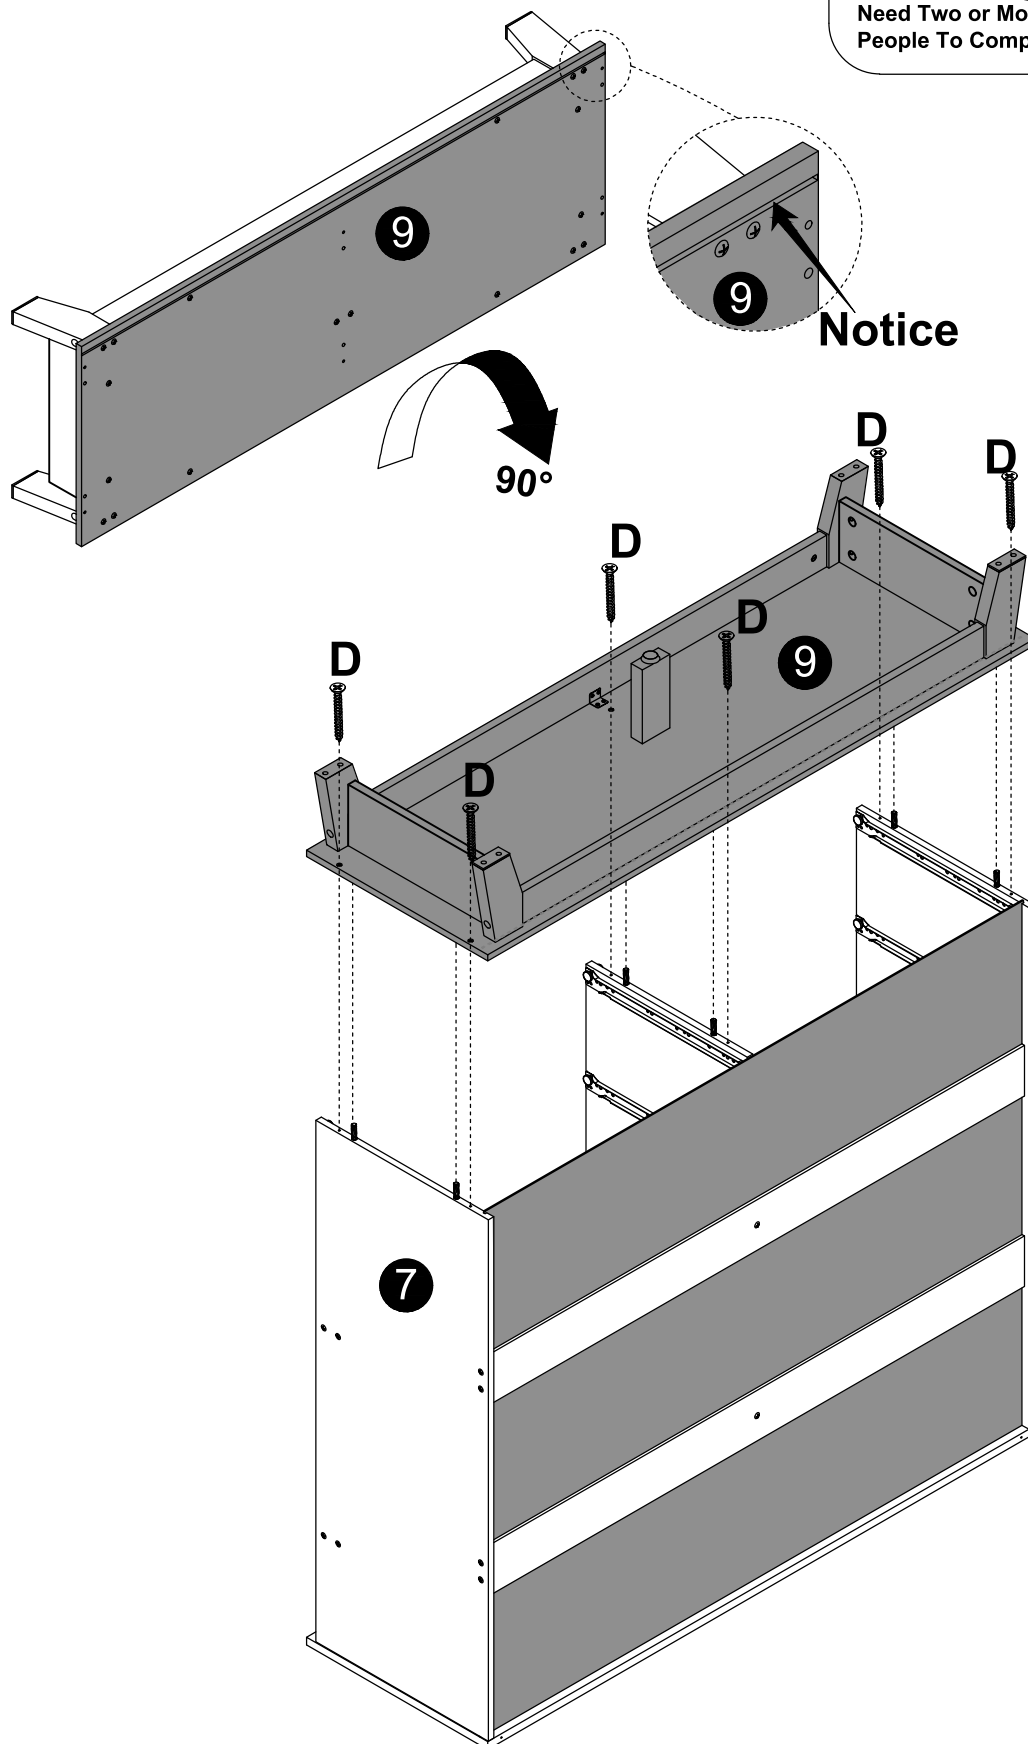









Attention: The drawers are divided into left drawer and right drawer.
As shown, the left drawer is installed on the cabinet.

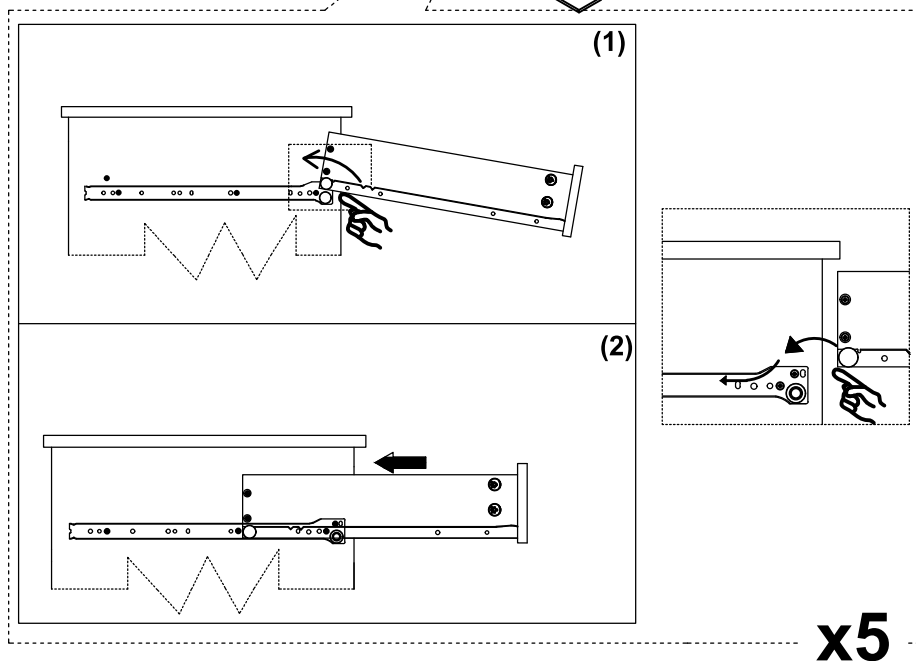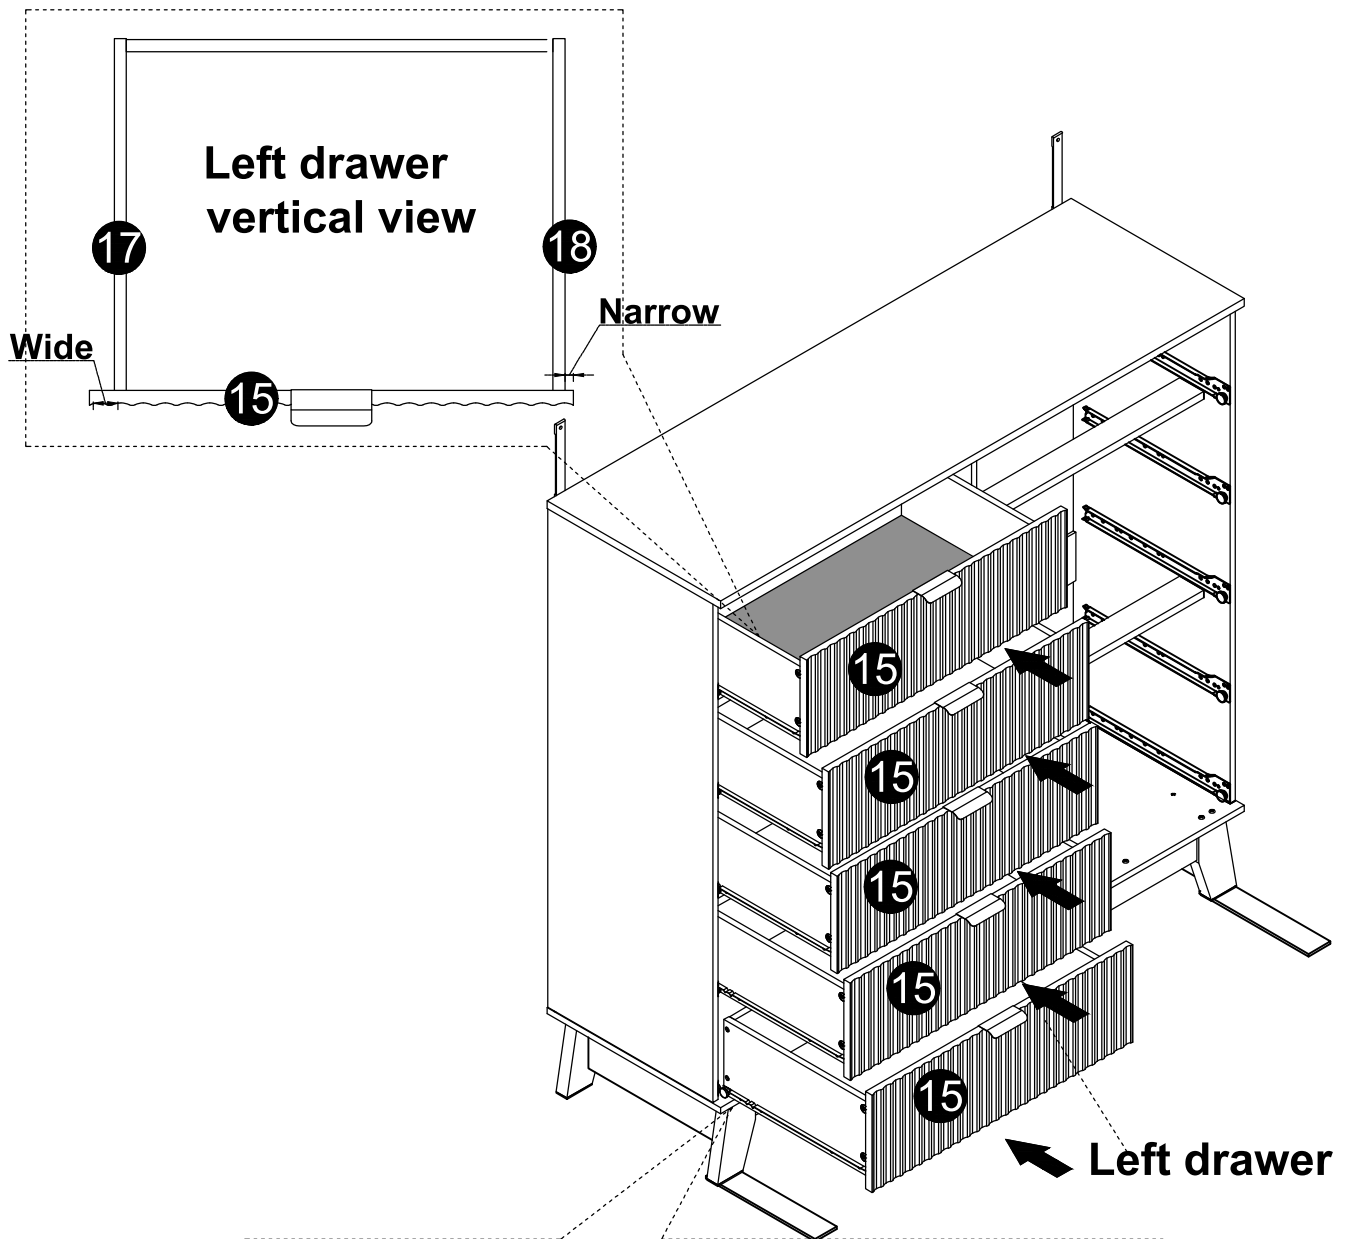

Attention: The drawers are divided into left drawer and right drawer.
As shown, the right drawer is installed on the cabinet.

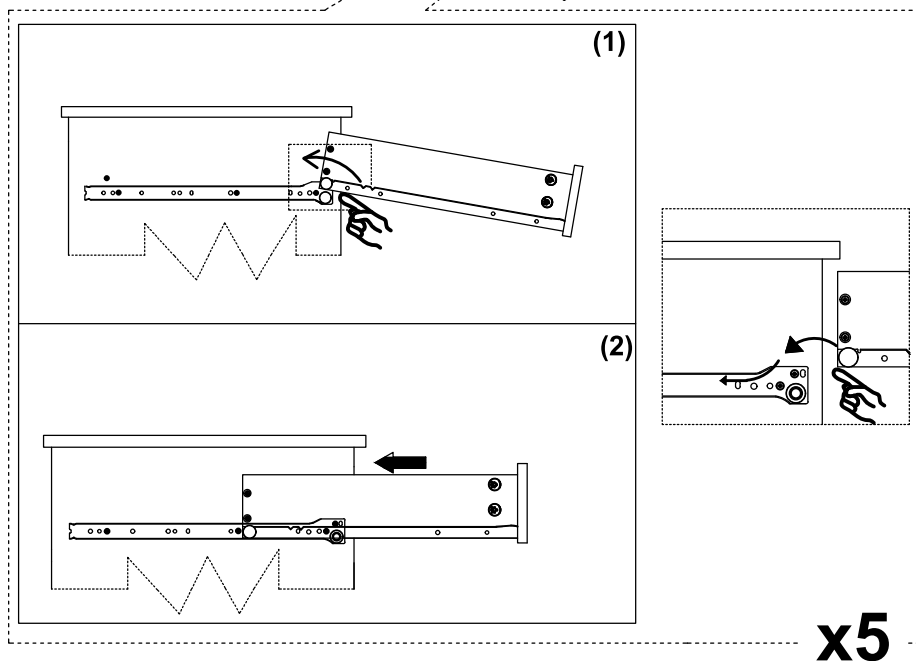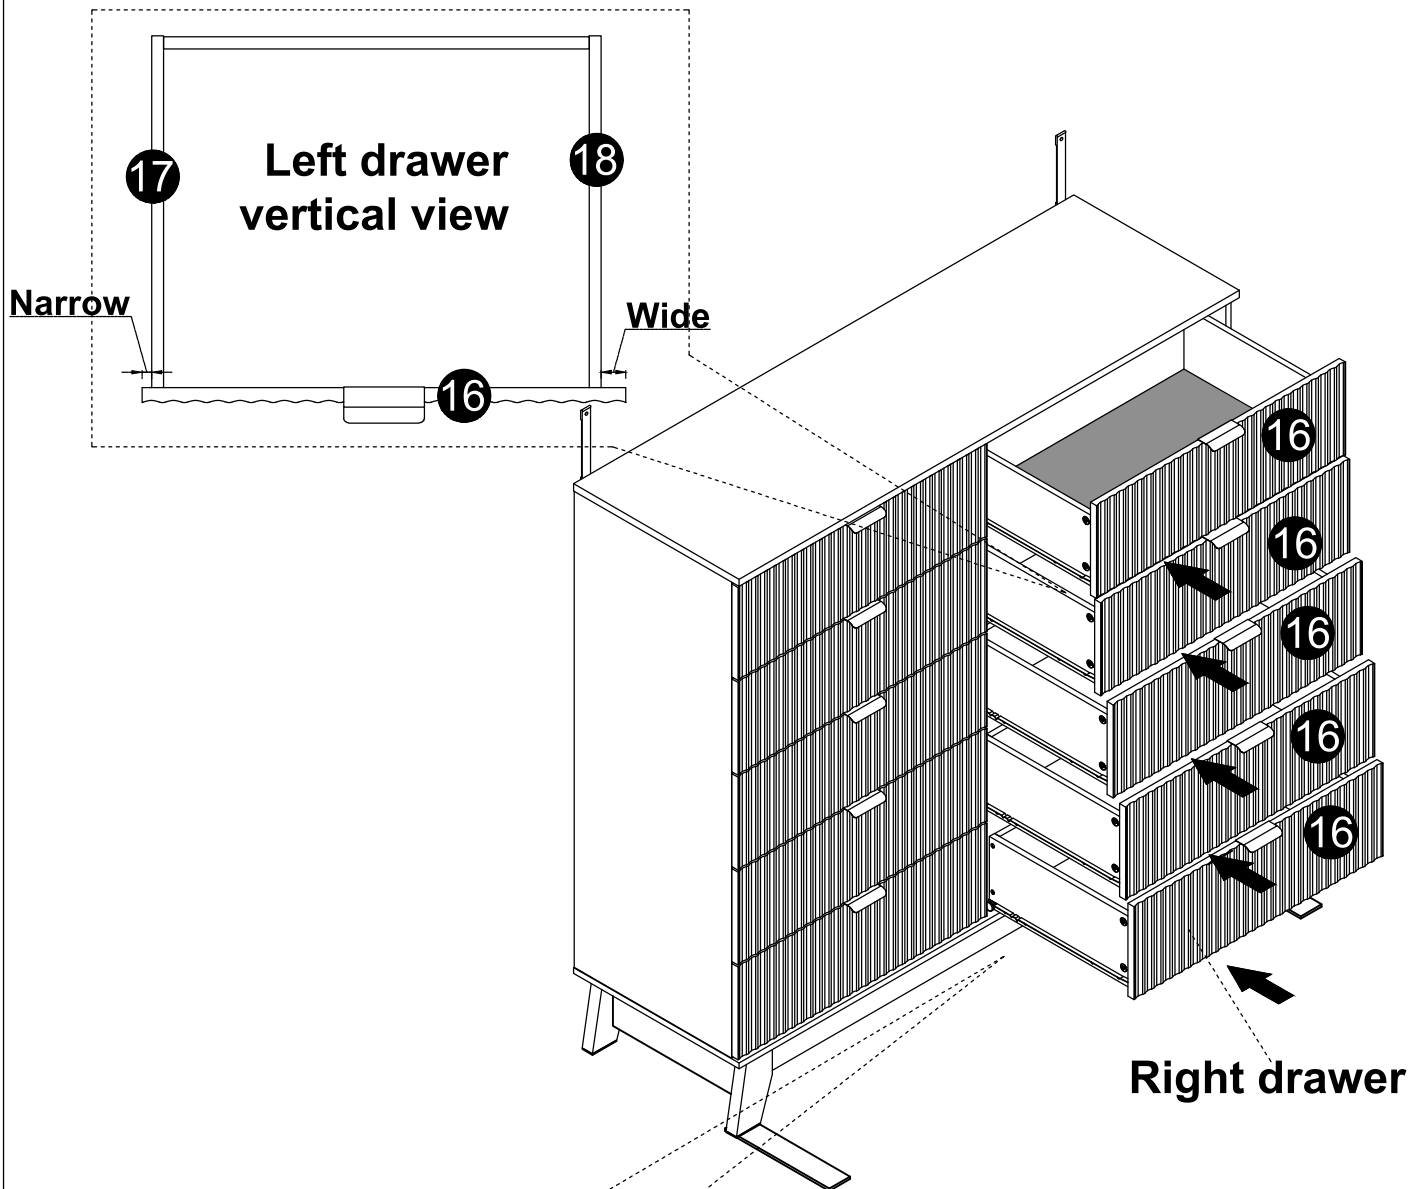

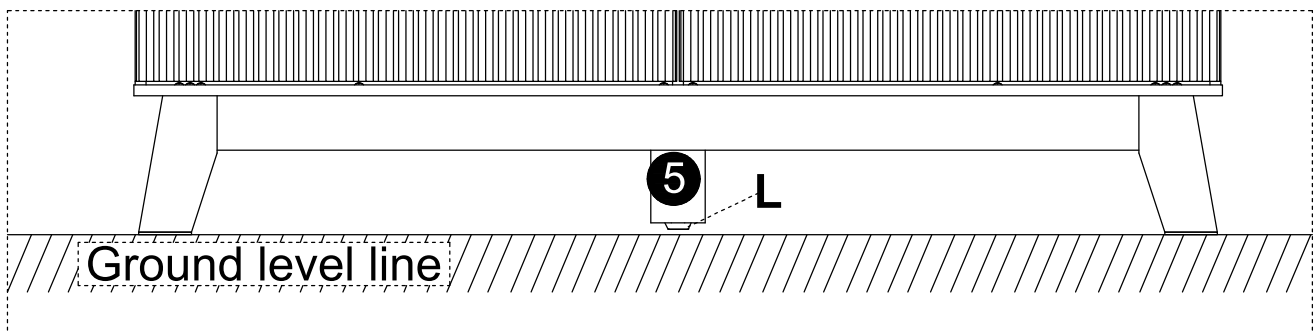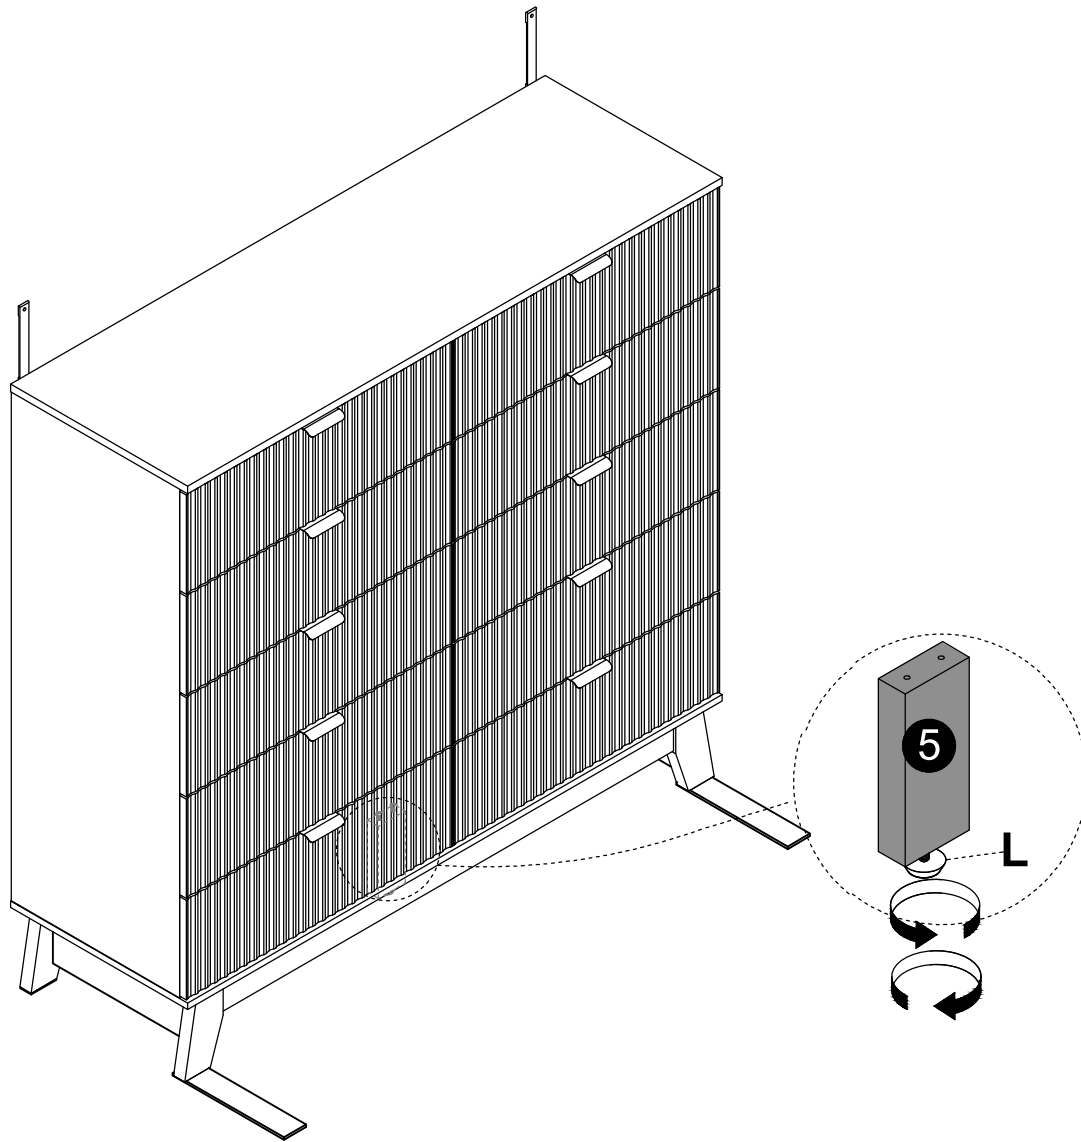


If the drawers are not aligned or if there is a sinking in the middle of the cabinet, you can rotate the accessory "L" under board 5.


D x2




I x2

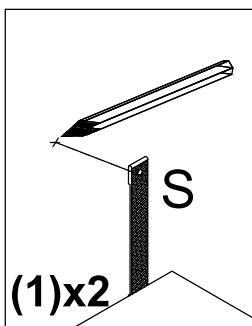


First, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

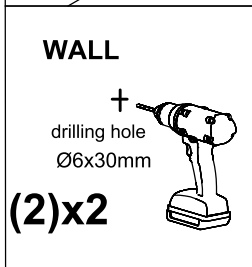

Then use a tape drill to make holes in the wall that are suitable for the product screws.

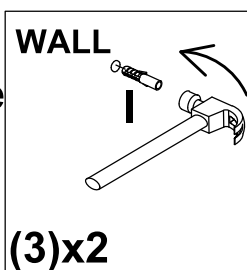

Then, put the expansion bolt into the hole

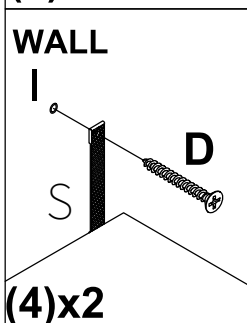

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

