




Installation Guide
Bathroom Basin - Drop In

Supplies Needed:

silicone sealant
rags
jigsaw or keyhole saw
pencil
scissors

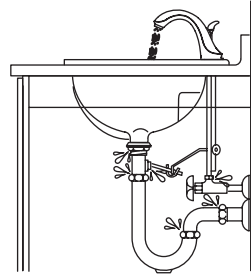

1. Place sink upside down on a piece of cardboard or large heavy paper. Trace around the edge of the sink with a pencil. Remove the sink. Cut approximately 1/2" inside the line, remove the cutout.
2. Tape the cardboard piece onto the counter where the sink is going to be installed making sure it is straight. Trace inside the cutout area.
3. Drill a hole and then using a jigsaw cut the countertop opening along the line to make the hole where the sink will sit.
4. Install the faucet into the sink, then connect to the drain below.
5. Lower the sink into the cutout and test the fit and adjust the cutout if changes are needed.
6. Finish connecting the faucet and drain below the cabinet top.
7. Apply the sealant around the edge and wipe away any excess with a cloth. Fill any voids and allow to dry.
8. Run water and check for leaks.