
Shampoo Chair

OWNER'S MANUAL

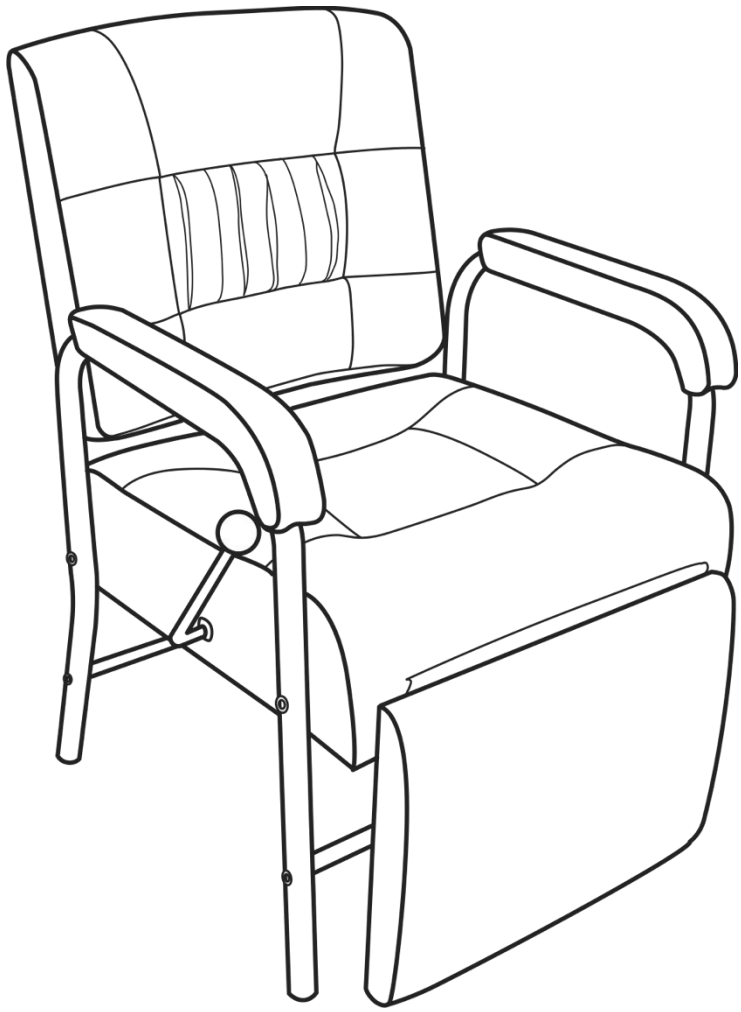

CAUTION! Please read through this manual before assembling, installing or using the product to ensure safe and correct use.

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Table of Contents


Main Parts----------03

Preinstalled Accessories----------03









Accessory Kit---------- 03

Installation Diagram ----------04

Instructions for Use ---------- 11

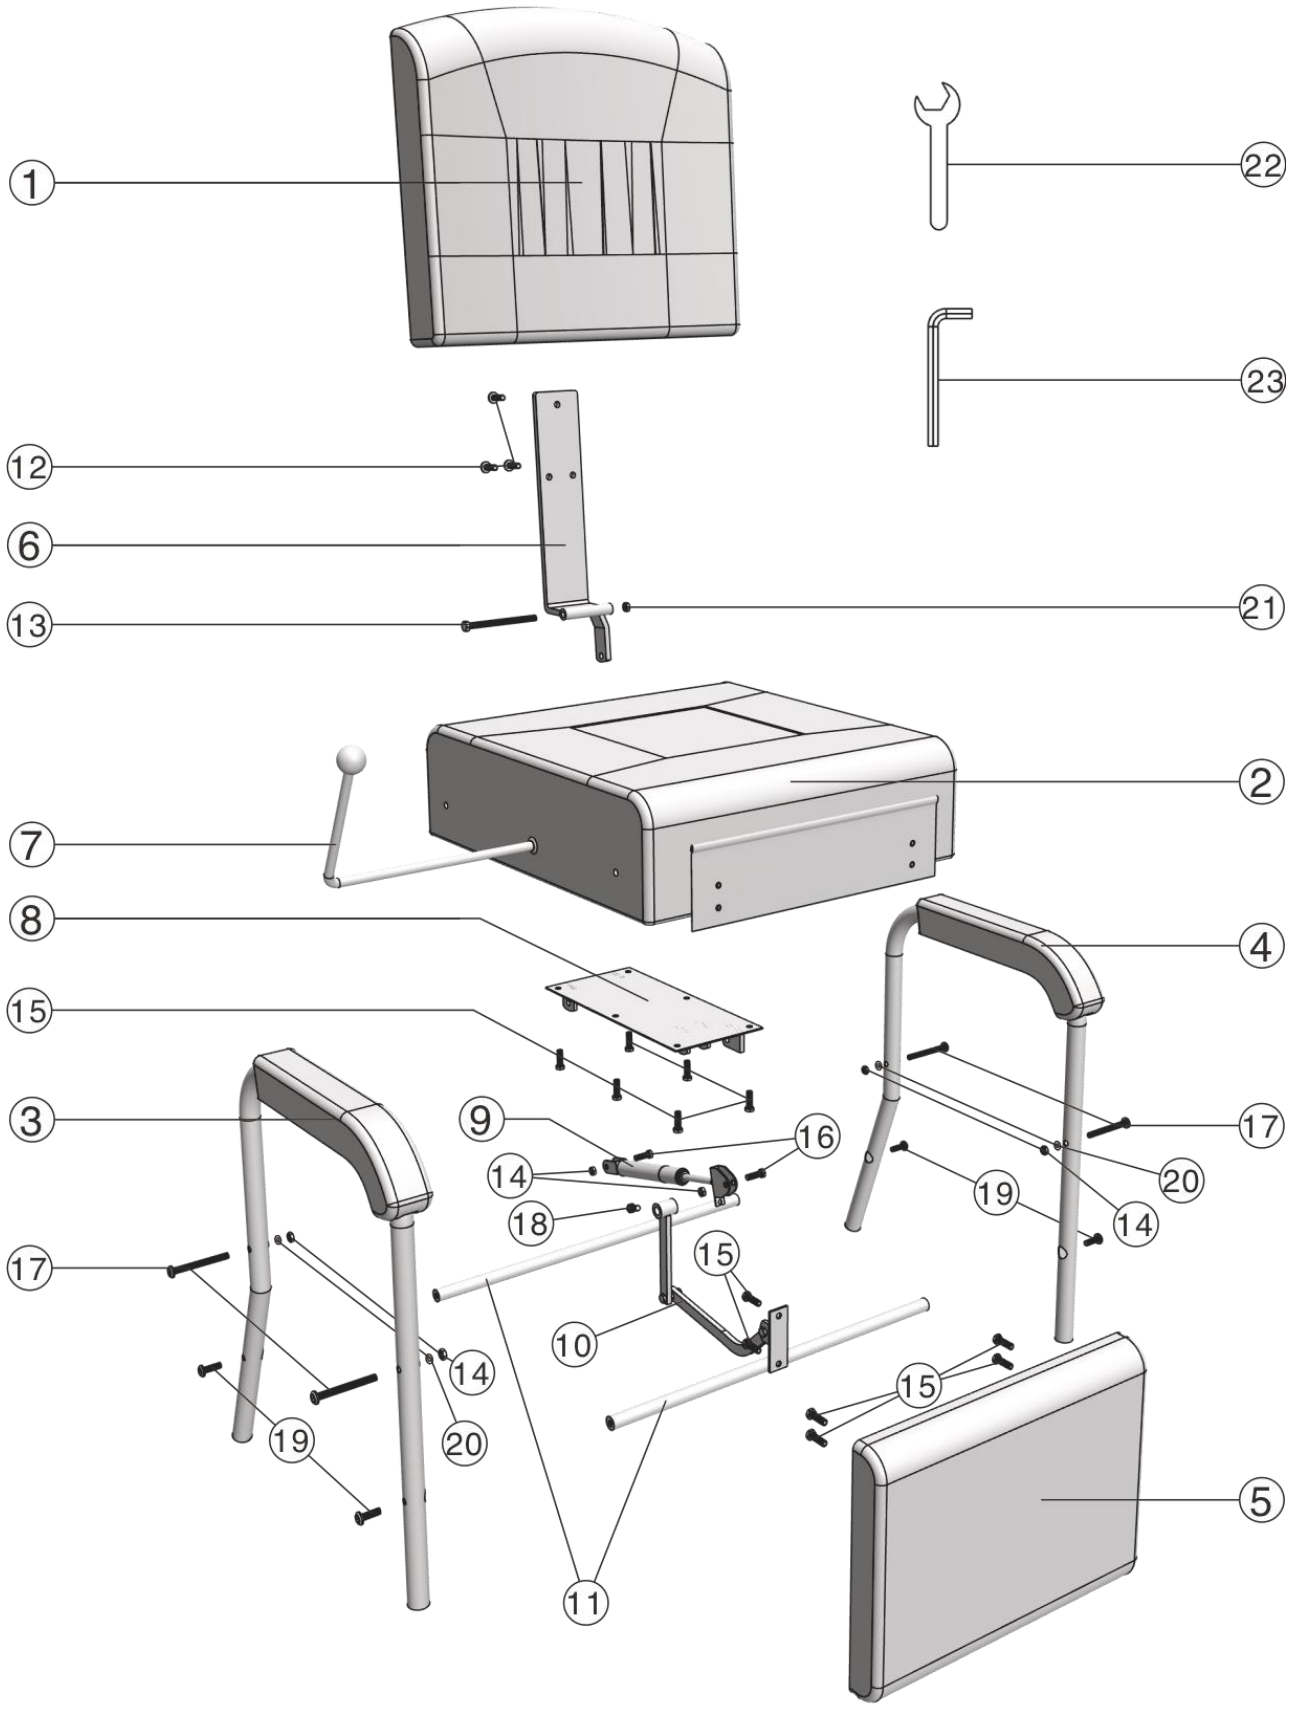
1
22
23
12
6
13
21
2
7
8
4
15
3
9
16
14
18
17
20
19
14
15
10
15
17
14
19
20
5
11


Main Parts

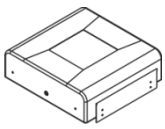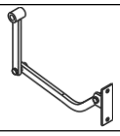Code	Image	Name	Qty	Code	Image	Name	Qty
1		Backrest	1	*2*		Seat	1
3		Right Armrest	1	*4*		Left Armrest	1
5		Leg Rest	1	*6*		Rotating Shaft	1
7		Leg Rest Lever	1	*8*		Tray	1
9		Reclining Aerobar	1	*10*		Transmission Arm	1
11		Support Rod	2				

Preinstalled Accessories

Code	Image	Where to find	Name	Qty	Code	Image	Where to find	Name	Qty
12		Preinstalled on ①	Allen Socket Screw M8*30	3	*14*		Preinstalled on ⑨	Hex Nut M8	2
15		Preinstalled on ② Preinstalled on ⑤	Hex Screw M8*25	12	*16*		Preinstalled on ⑨	Hex Screw M8*30	2
18		Preinstalled on ⑩	Hex Screw M8*16	1	*19*		Preinstalled on ⑪	Allen Socket Screw M8*25	4


Accessory Kit *(Packed in a Small Bag)*

Code	Image	Name	Qty	Code	Image	Name	Qty
13&21		Hex Screw M8*110 & Anti Retreat Nut M8	1&1	*14*		Hex Nut M8	4
17		Allen Socket Screw M8*80	4	*20*		Washer M8	4
22		Wrench 14mm	2	*23*		Allen Key 5mm	1

Installation Diagram

Step One：


Unscrew six Hex Screws M8*25 ⑮ from the back of Seat ② for later use.

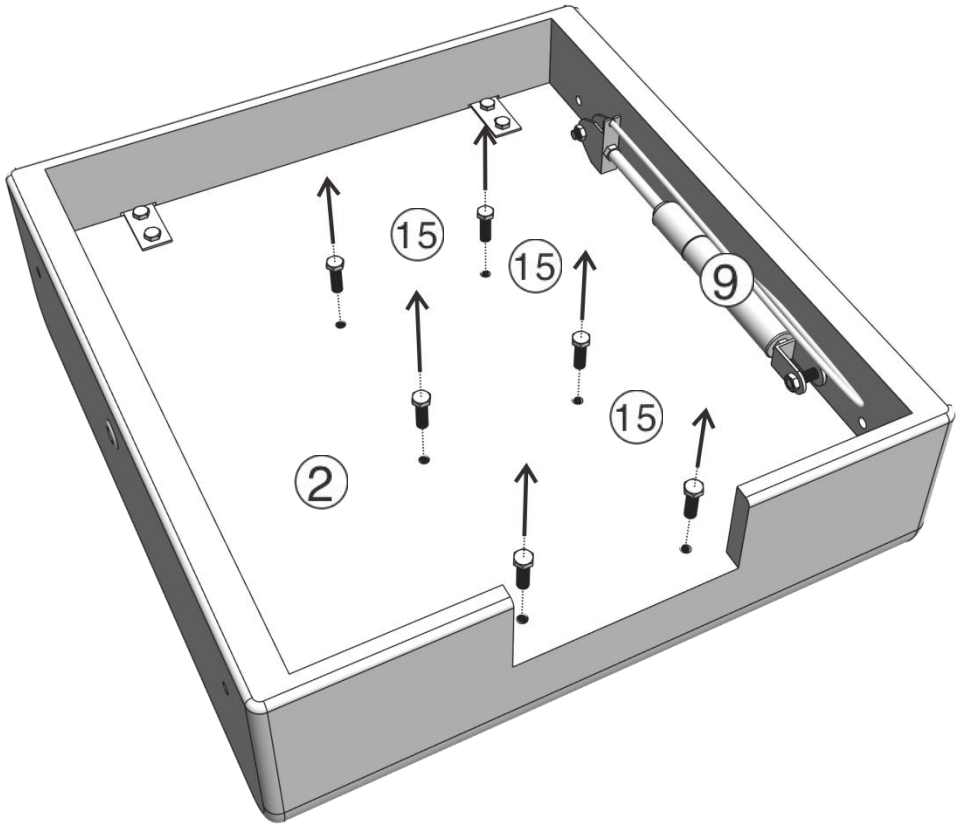

Six Hex Screws M8*25 ⑮ were preinstalled on back of Seat ②.

Step Two：


Install Tray ⑧ to the back of Seat ② and secure it with six Hex Screws M8*25 ⑮.

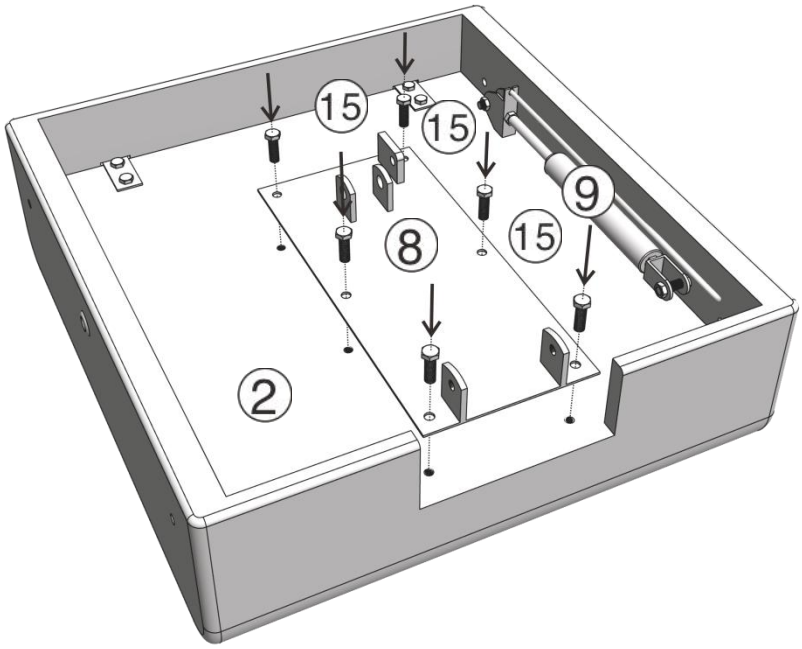

Six Hex Screws M8*25 ⑮ were preinstalled on back of Seat ②.

Step Three：


Install Rotating Shaft ⑥ to the Tray ⑧ at the back of Seat ②.

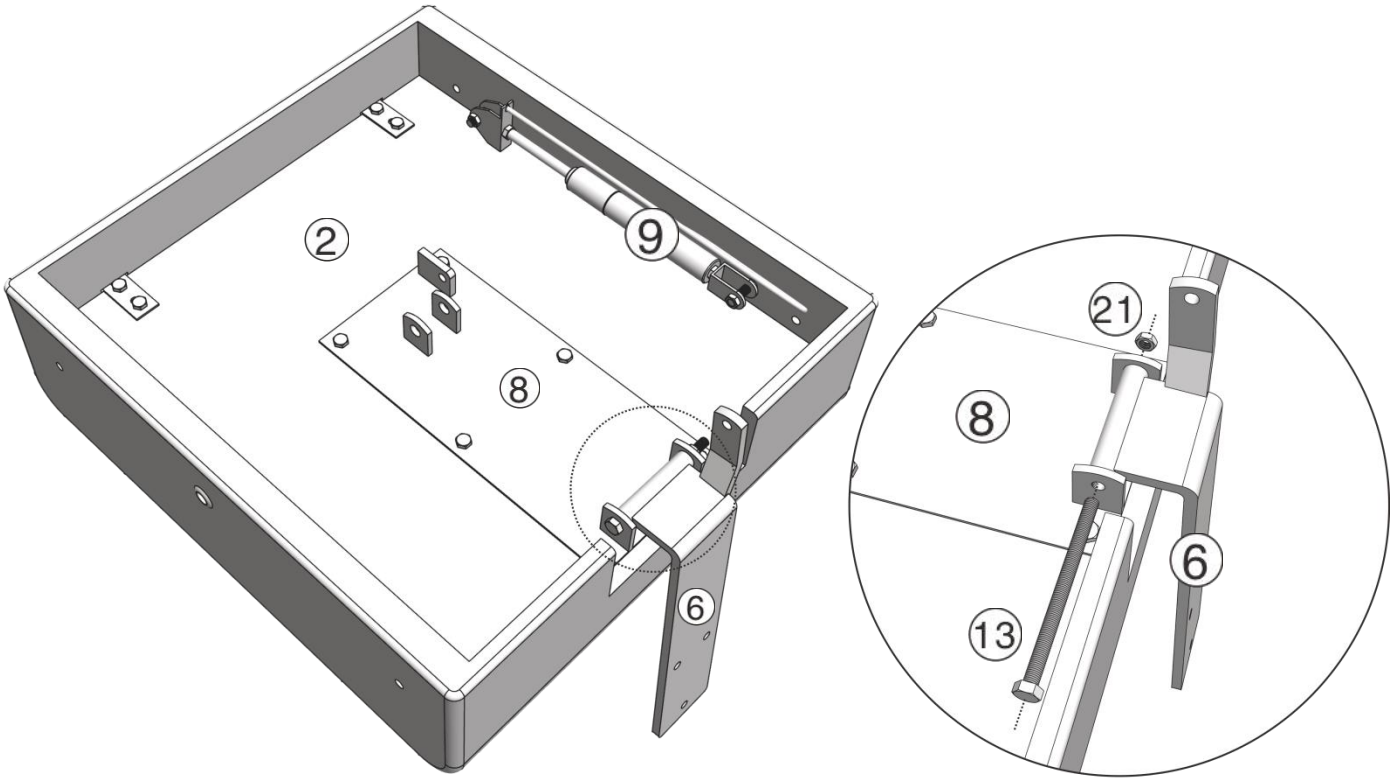

One Hex Screw M8*110 ⑬ and one Anti Retreat Nut M8 ㉑ were packed in Accessory Kit (a small bag).

Step Four：

Install Reclining Aerobar ⑨ at the back of Seat ②.

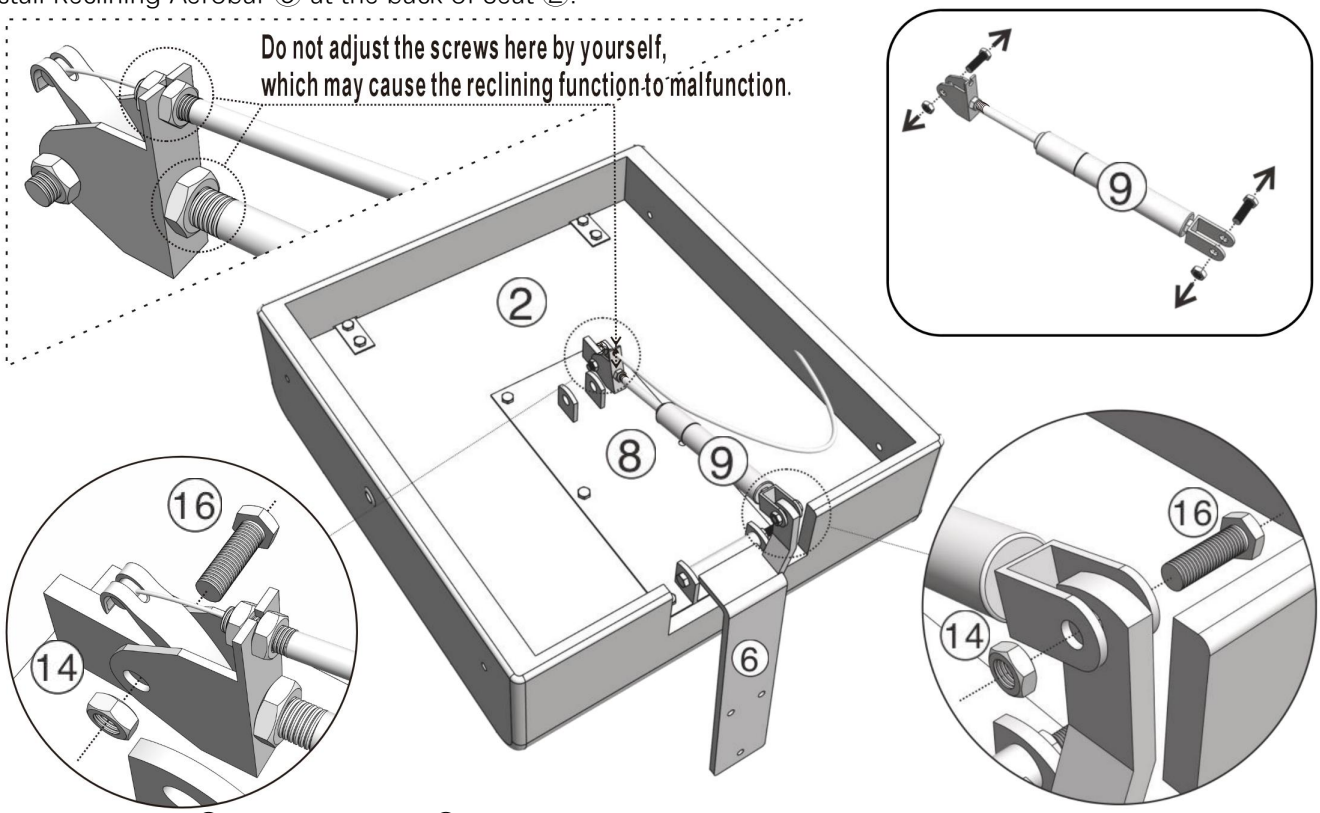



Two Hex Screws M8*30 ⑯ and two Hex Nuts M8 ⑭ were preinstalled on Reclining Aerobar ⑨.


Step Five：

Unscrew Hex Screw M8*16 ⑱ and Install Leg Rest Lever ⑦ and Transmission Arm ⑩ to Tray ⑧.

Tighten the Hex Screw M8*16 ⑱ until it reaches the bottom of the hole of Leg Rest Lever ⑦.

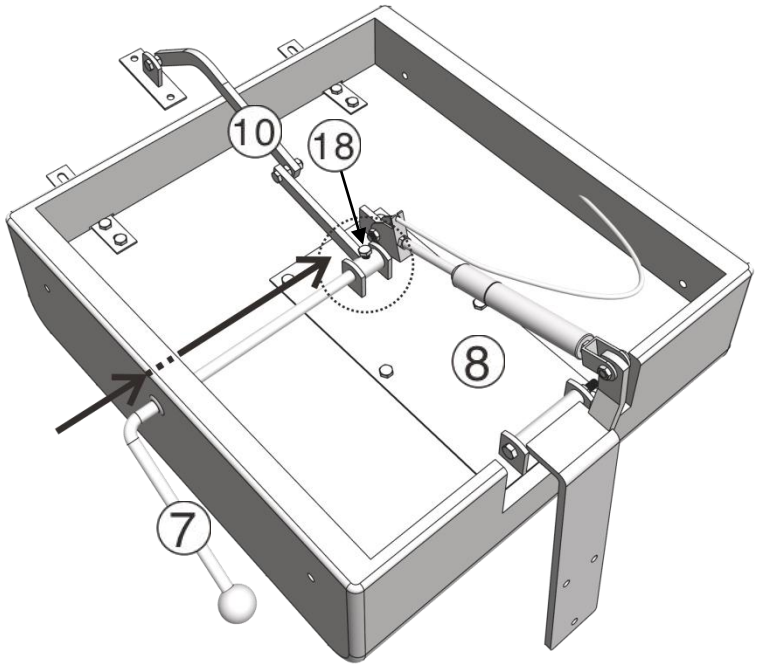

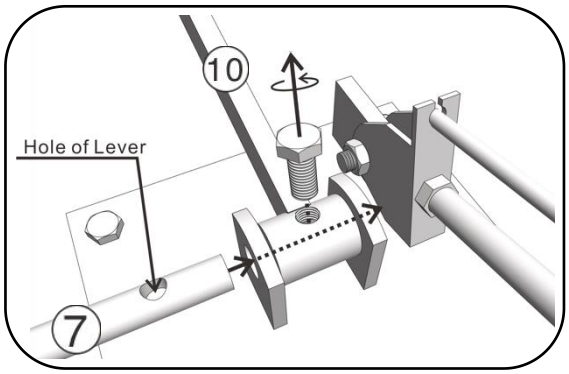


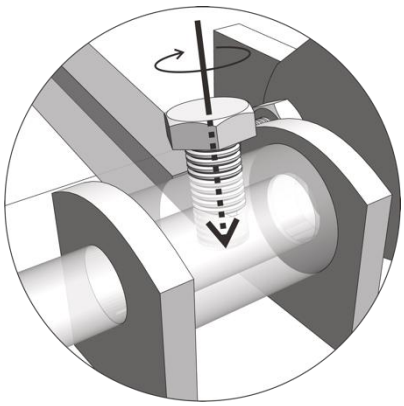

Hex Screw M8*16 ⑱ was preinstalled on Transmission Arm ⑩.

Step Six：


Unscrew the six Hex Screws M8*25 ⑮ from the back of Leg Rest ⑤ for later use.

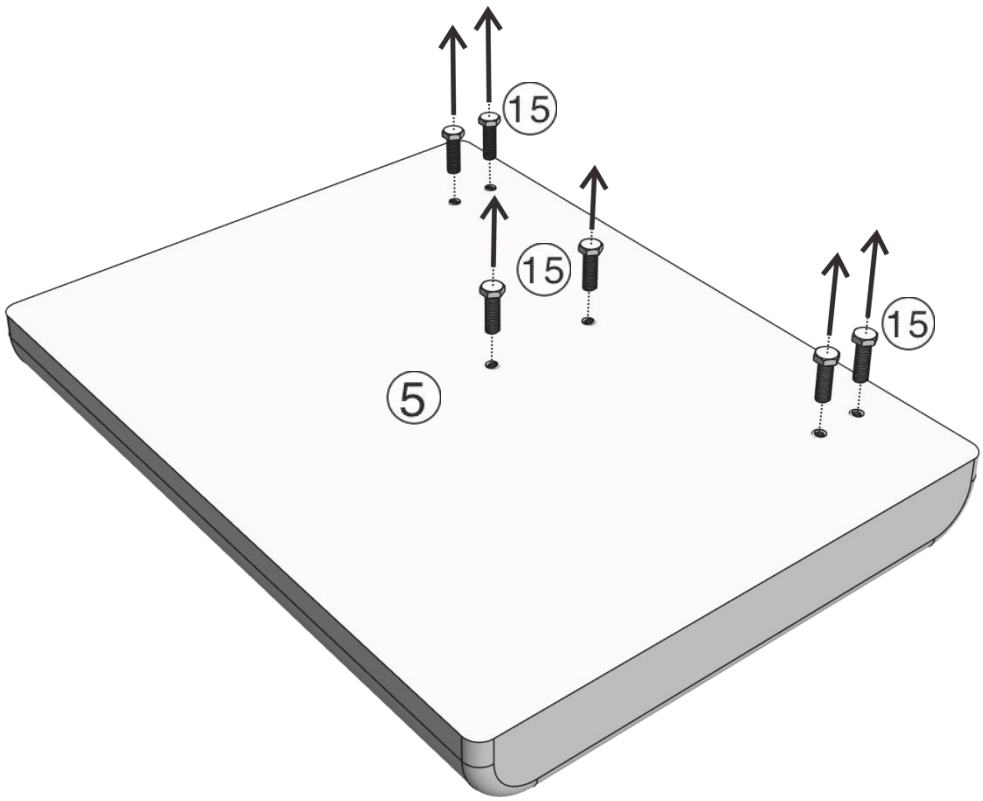

Six Hex Screws M8*25 ⑮ were preinstalled on the back of Leg Rest ⑤.

Step Seven：


Connect Leg Rest ⑤ to Seat ② and secure it with four Hex Screws M8*25 ⑮.

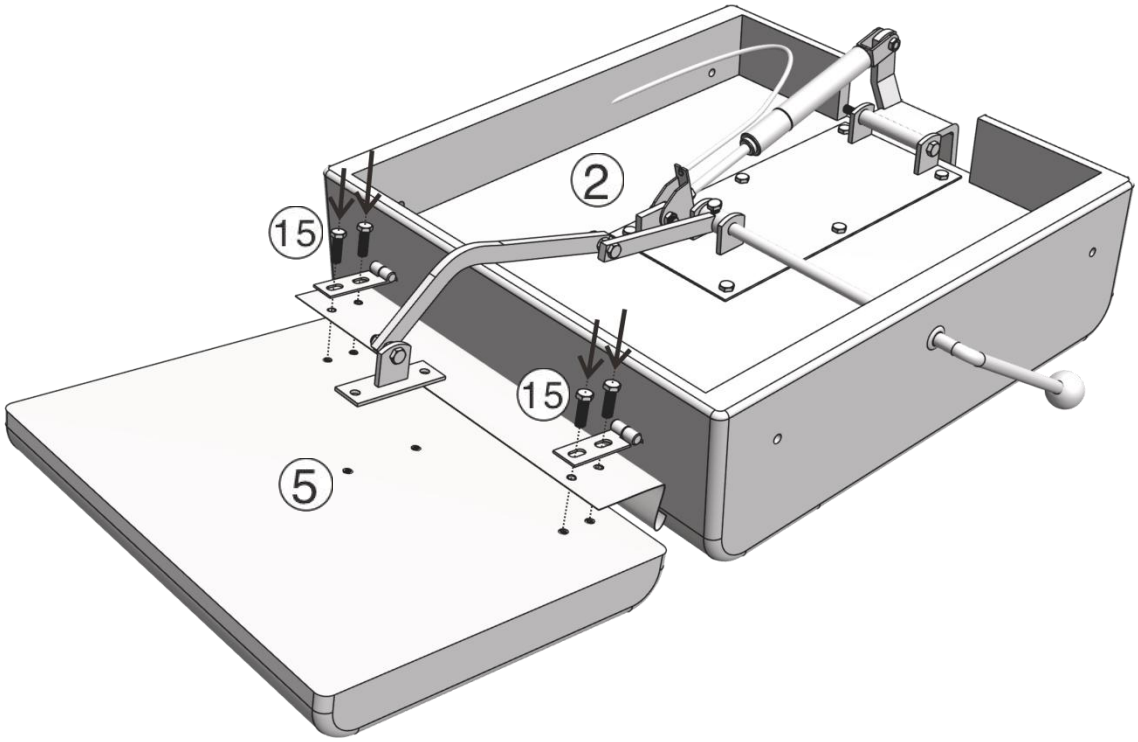

Four Hex Screws M8*25 ⑮ were preinstalled on the back of Leg Rest ⑤.

Step Eight：

Connect Transmission Arm ⑩ to Leg Rest ⑤ and secure it with two Hex Screws M8*25 ⑮.

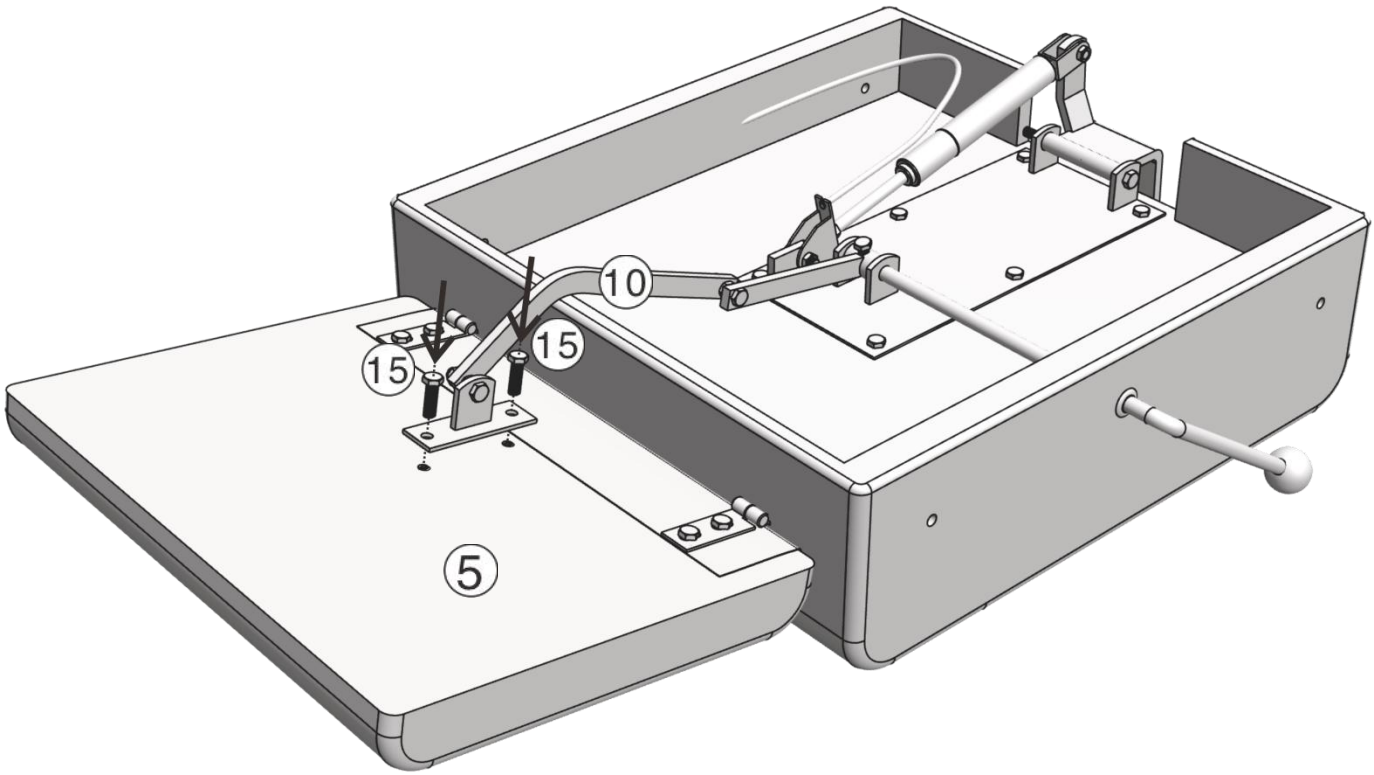



Two Hex Screws M8*25 ⑮ were preinstalled on the back of Leg Rest ⑤.

Step Nine:

Combine Left Armrest ④ to Seat ② and secure with two Allen Socket Screws M8*80 ⑰ and two Washers M8 ⑳ and two Hex Nuts ⑭. Install two Support Rods ⑪ to Left Armrest ④ and secure with two Allen Socket Screws M8*25 ⑲.

(Don't tighten the screws and nuts to the end until Step Eleven when chair is on flat).

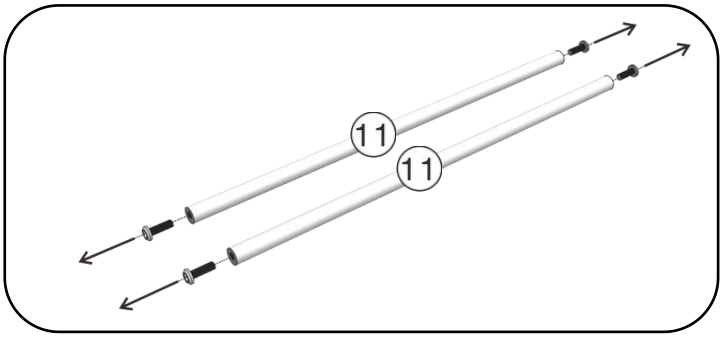

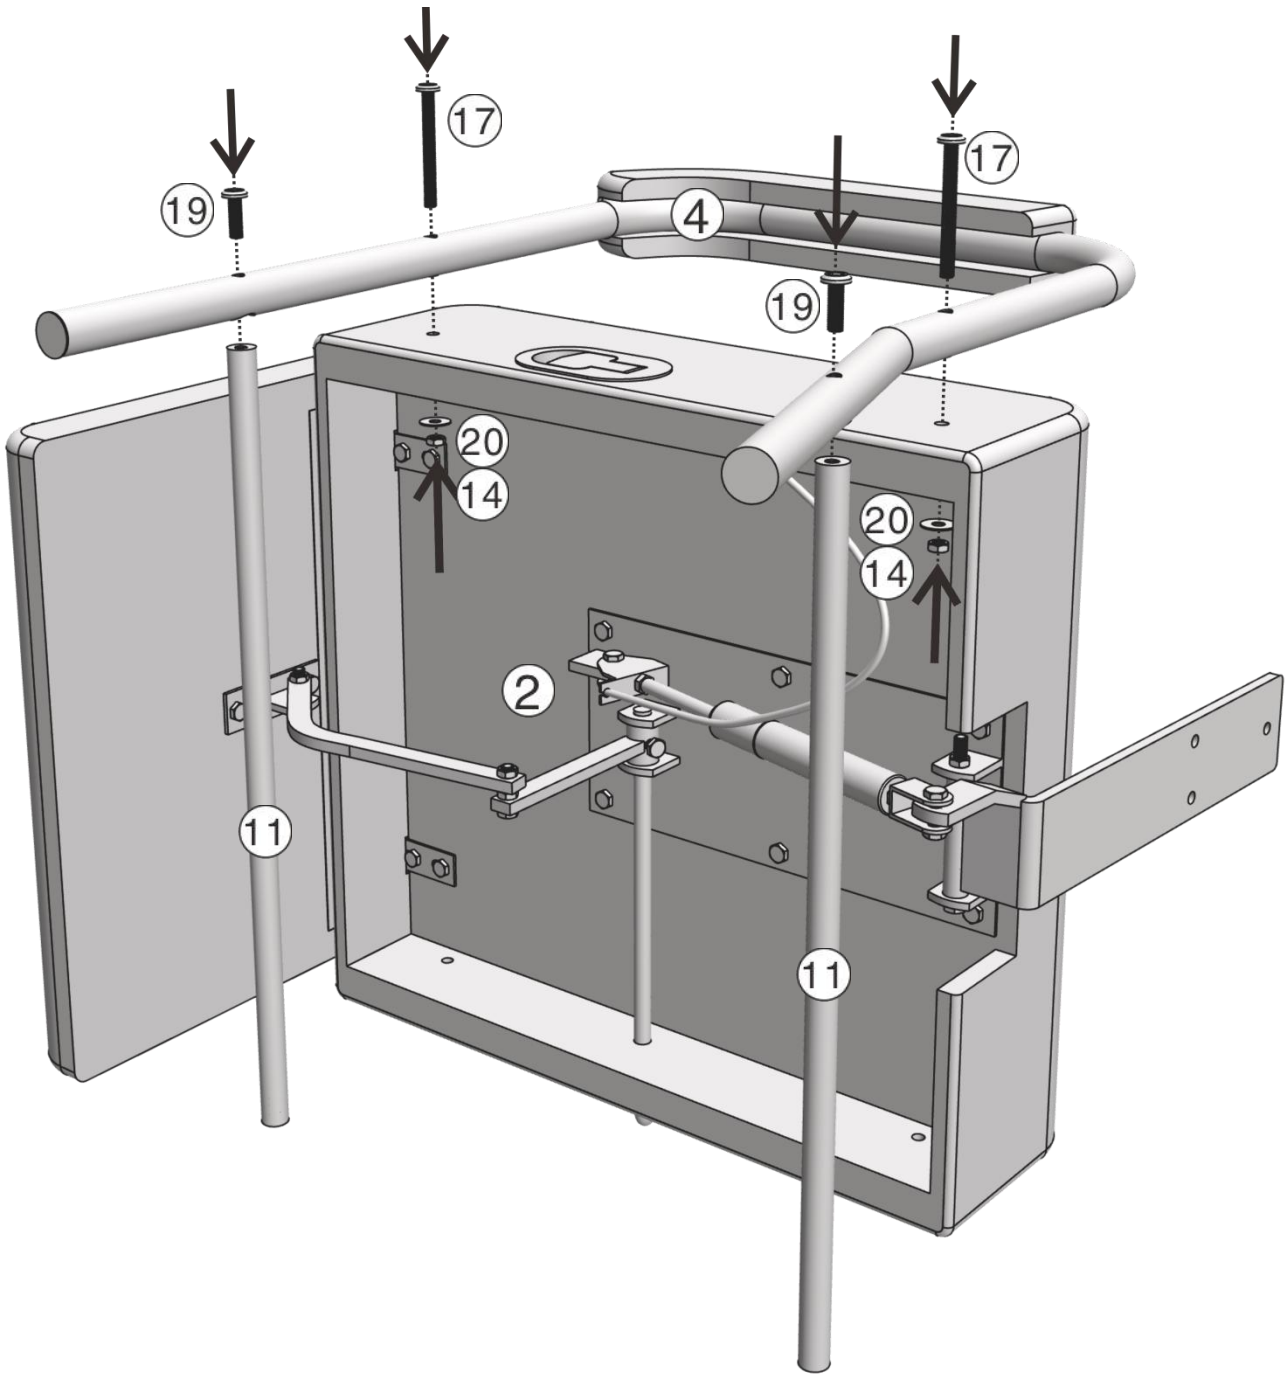


Two Allen Socket Screws M8*80 ⑰ and two Washers M8 ⑳ and two Hex Nuts M8 ⑭ were packed in Accessory Kit (a small bag).

Two Allen Socket Screws M8*25 ⑲ were preinstalled on Support Rods ⑪.

Step Ten：

Combine Right Armrest ③ to Seat ② and secure with two Allen Socket Screws M8*80 ⑰ and two Washers M8 ⑳ and two Hex Nuts ⑭. Install two Support Rods ⑪ to Right Armrest ③ and secure with two Allen Socket Screws M8*25 ⑲. **(Don't tighten the screws and nuts to the end until Step Eleven when chair is on flat).**

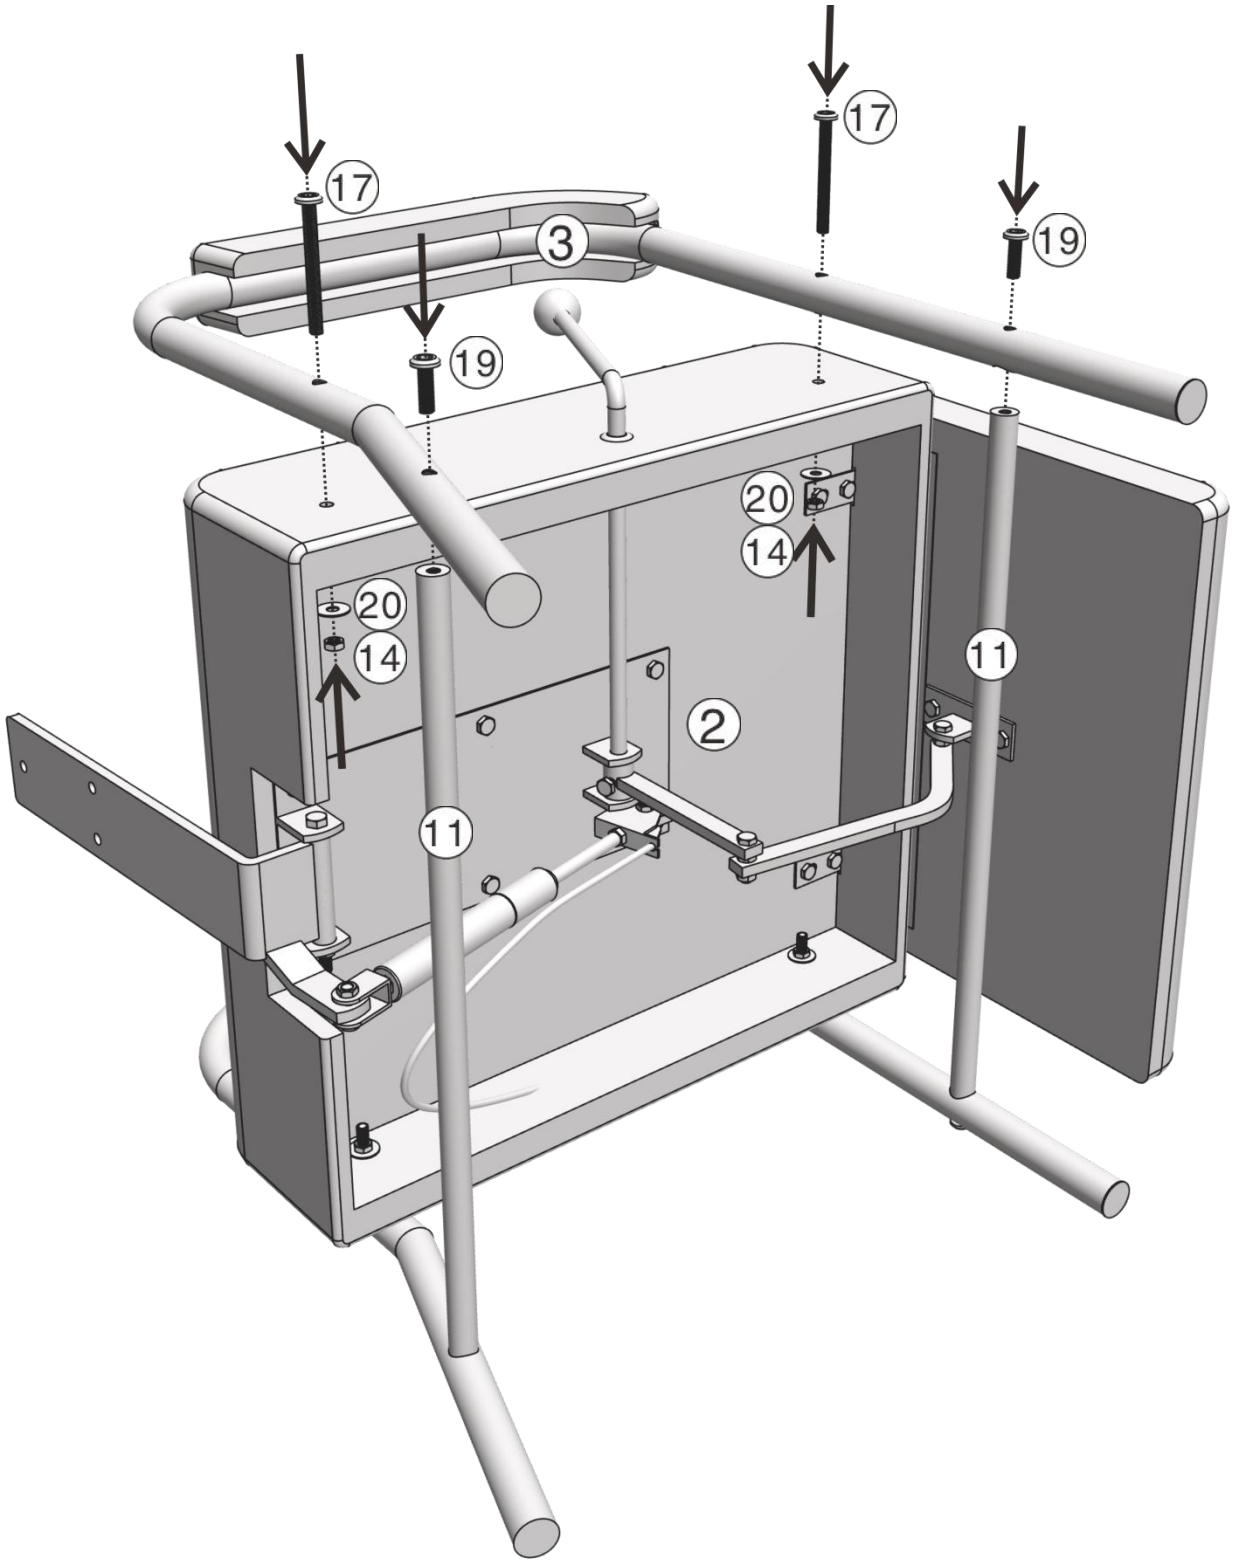


Two Allen Socket Screws M8*80 ⑰ and two Washers M8 ⑳ and two Hex Nuts M8 ⑭ were packed in Accessory Kit (a small bag).

Two Allen Socket Screws M8*25 ⑲ were preinstalled on Support Rods ⑪.


Step Eleven：

Place the chair on flat ground and then tighten all the screws and nuts.

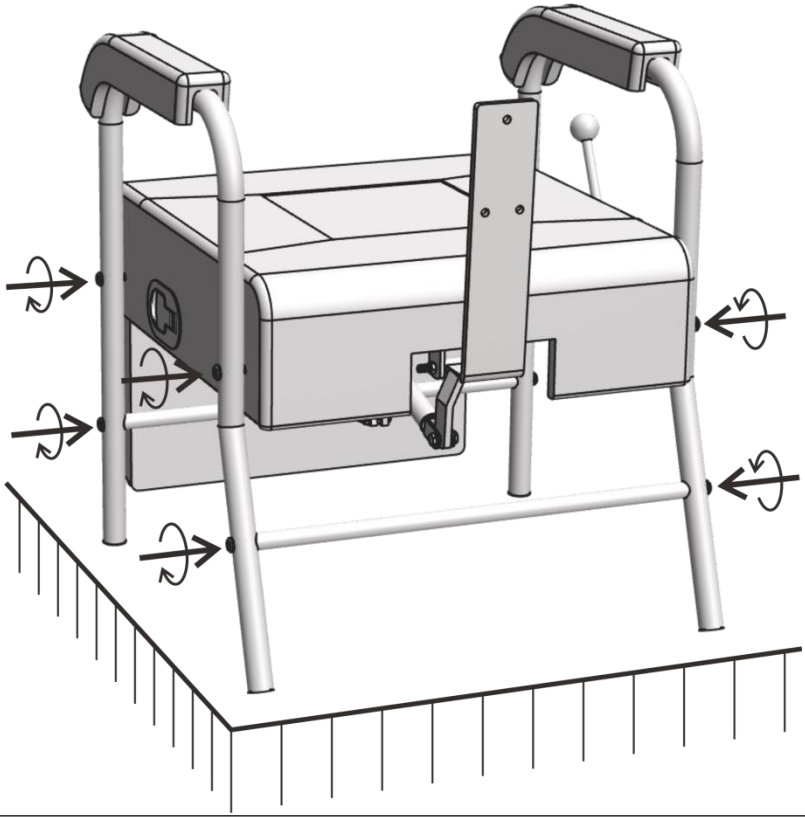


Step Twelve：

Install Backrest ① to Rotating Shaft ⑥ with three Allen Socket Screws M8*30 ⑫.

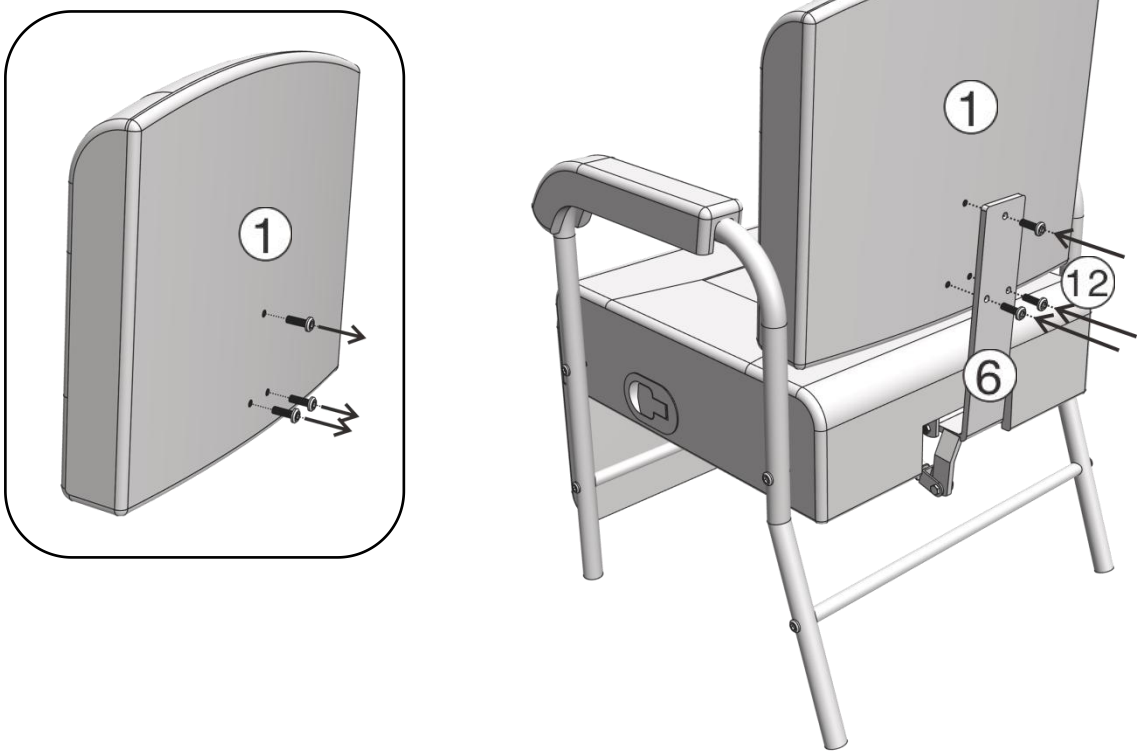


Three Allen Socket Screws M8*30 ⑫ were preinstalled on the back of Backrest ①.

Instructions for use

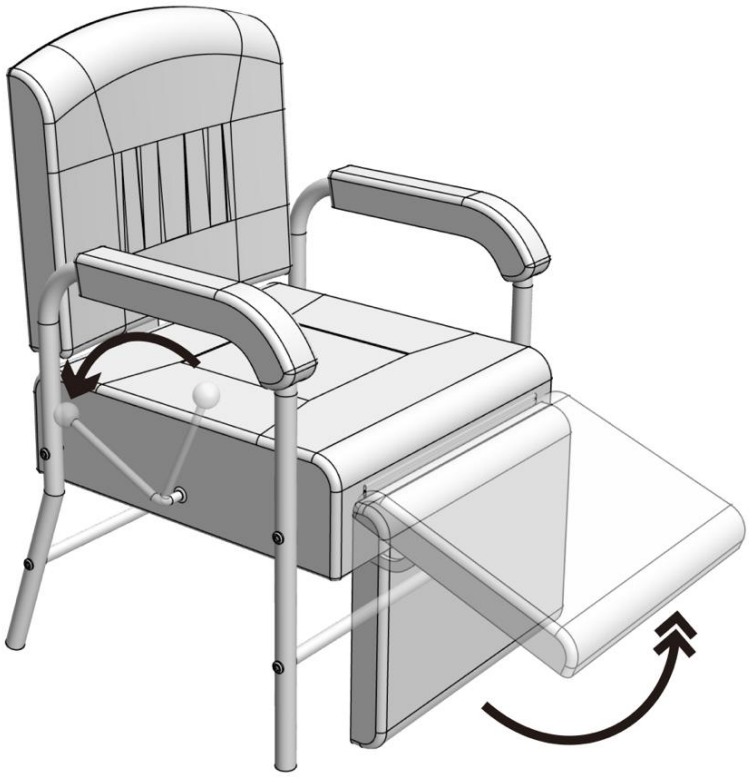

Rotate the Leg Rest Lever to raise the Leg Rest.

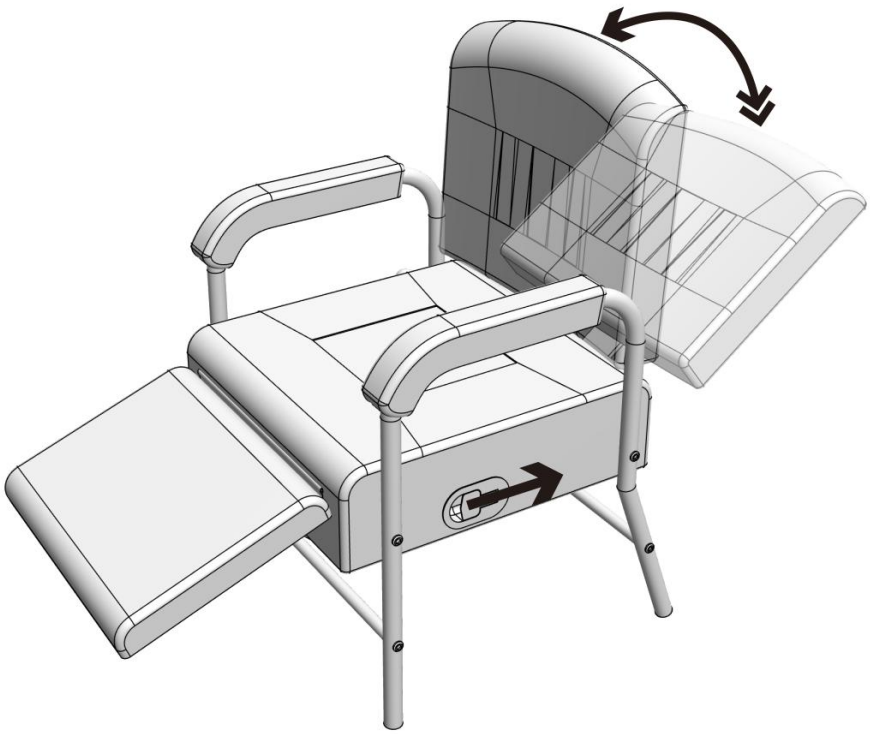

Reclining the backrest: Sit on the chair and pull the handle on the left side of the seat without letting go, while leaning back hard while the backrest is down. Release the handle at the desired angle and fix the backrest angle.

Backrest rebound upright: Return to the body upright, pull the handle on the left side of the seat back again, and the seat back rebounds and stands upright.