

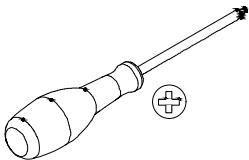
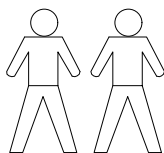
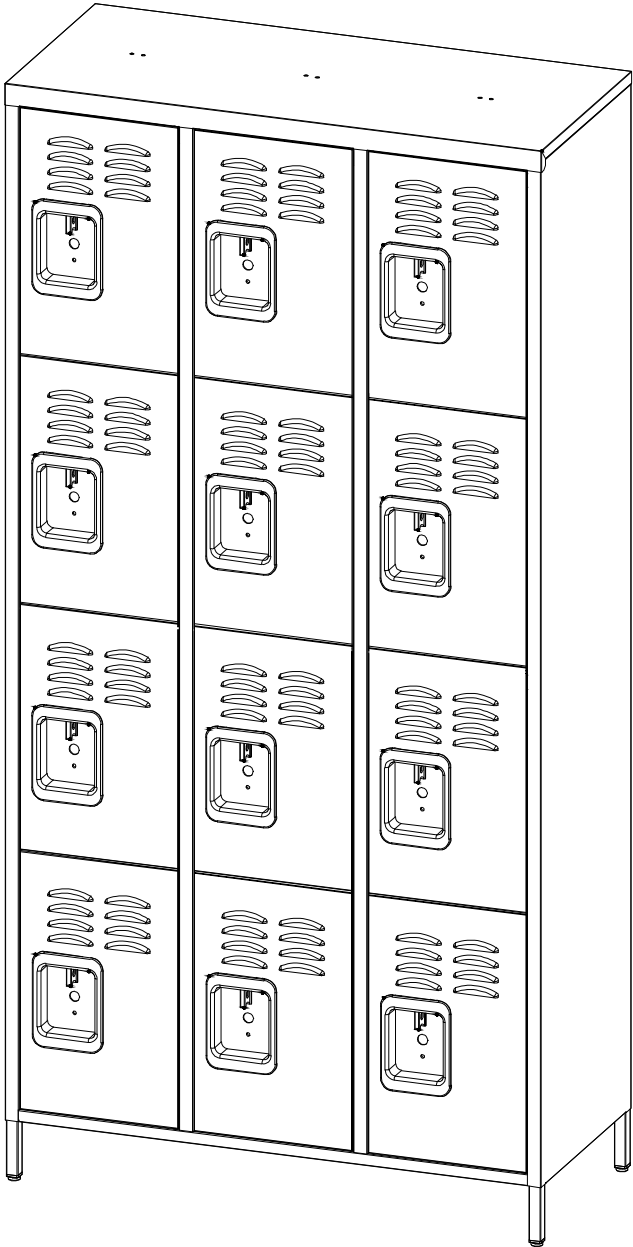
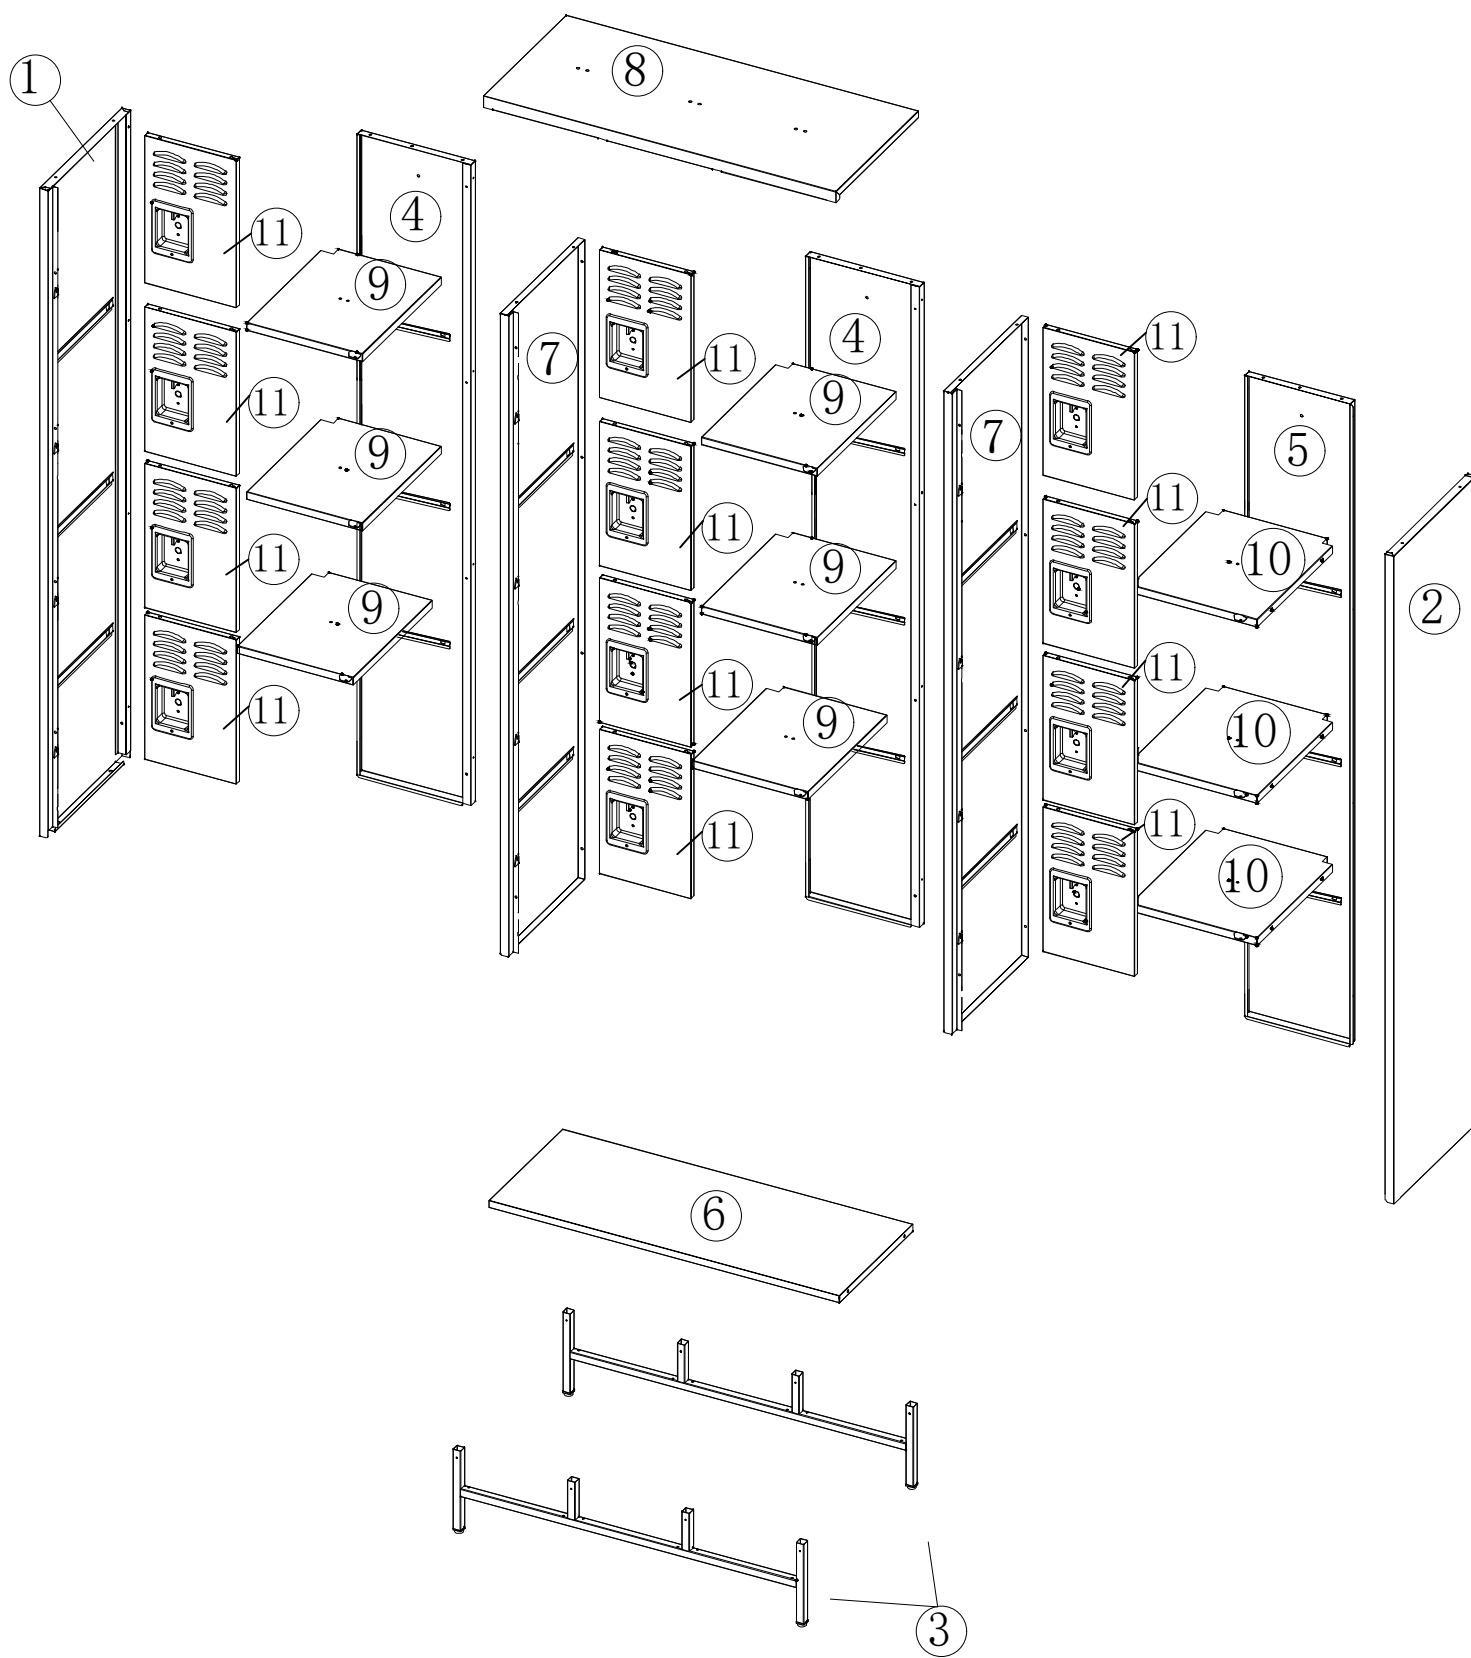
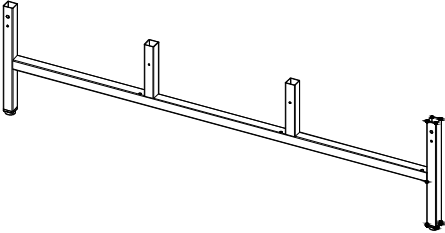








Metal Storage Locker Instructions




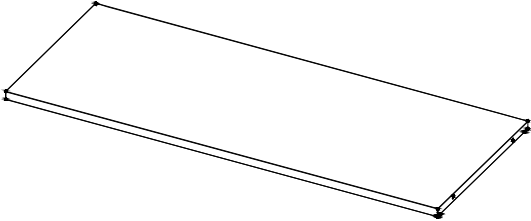

Accessories

1-Left Panel	1PC	2-Right Panel	1PC
			
3-Cross Leg	2PCS	4-Left Back Panel	2PCS
			
5-Right Back Panel	1PC	6-Bottom Panel	1PC
			

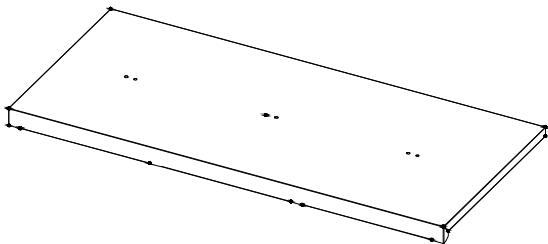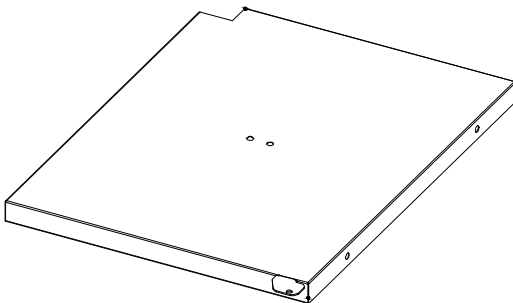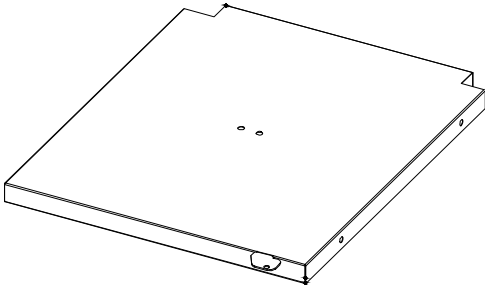7-Middle Side Panel	2PCS	8-Top Panel	1PC
			
9-Left Shelf	6PCS	10-Right Shelf	3PCS
			
11-Door	12PCS		
			

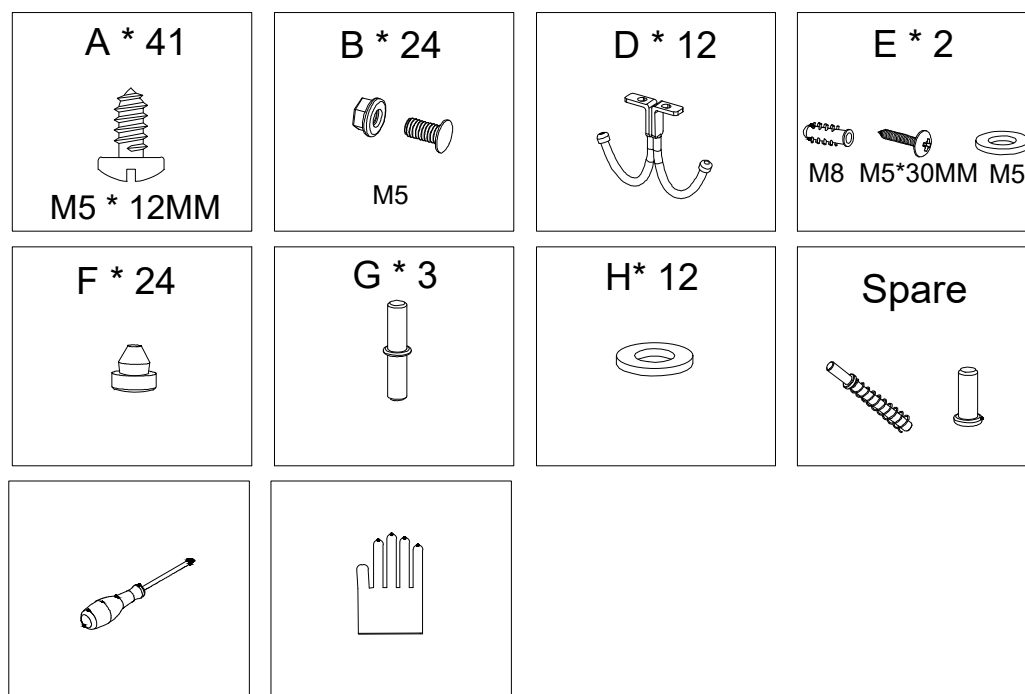


If there is any problem, please feel free to contact our customer service team and we are always here to assist with you!


If there is any slight dent or damage, you can try to fix it by pliers or hammers.

Installation Steps


Step 1: Prepare two Part 3 (Pay attention to the direction)

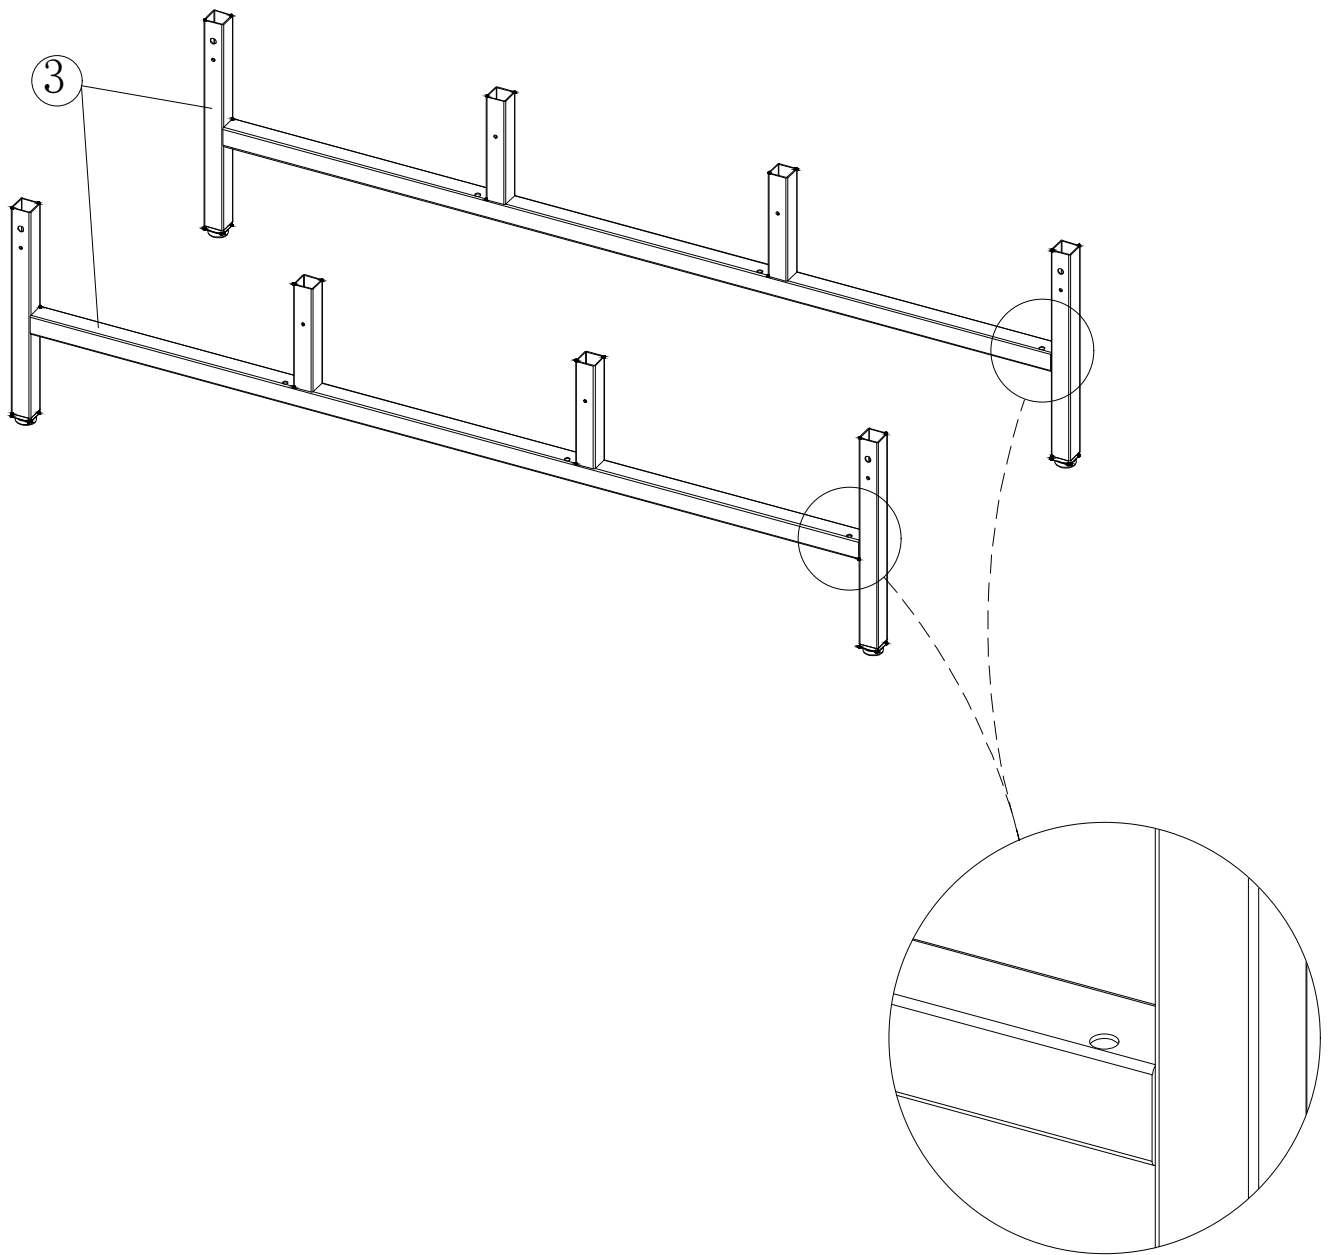

Step 2: Insert Part 1 into Part 3

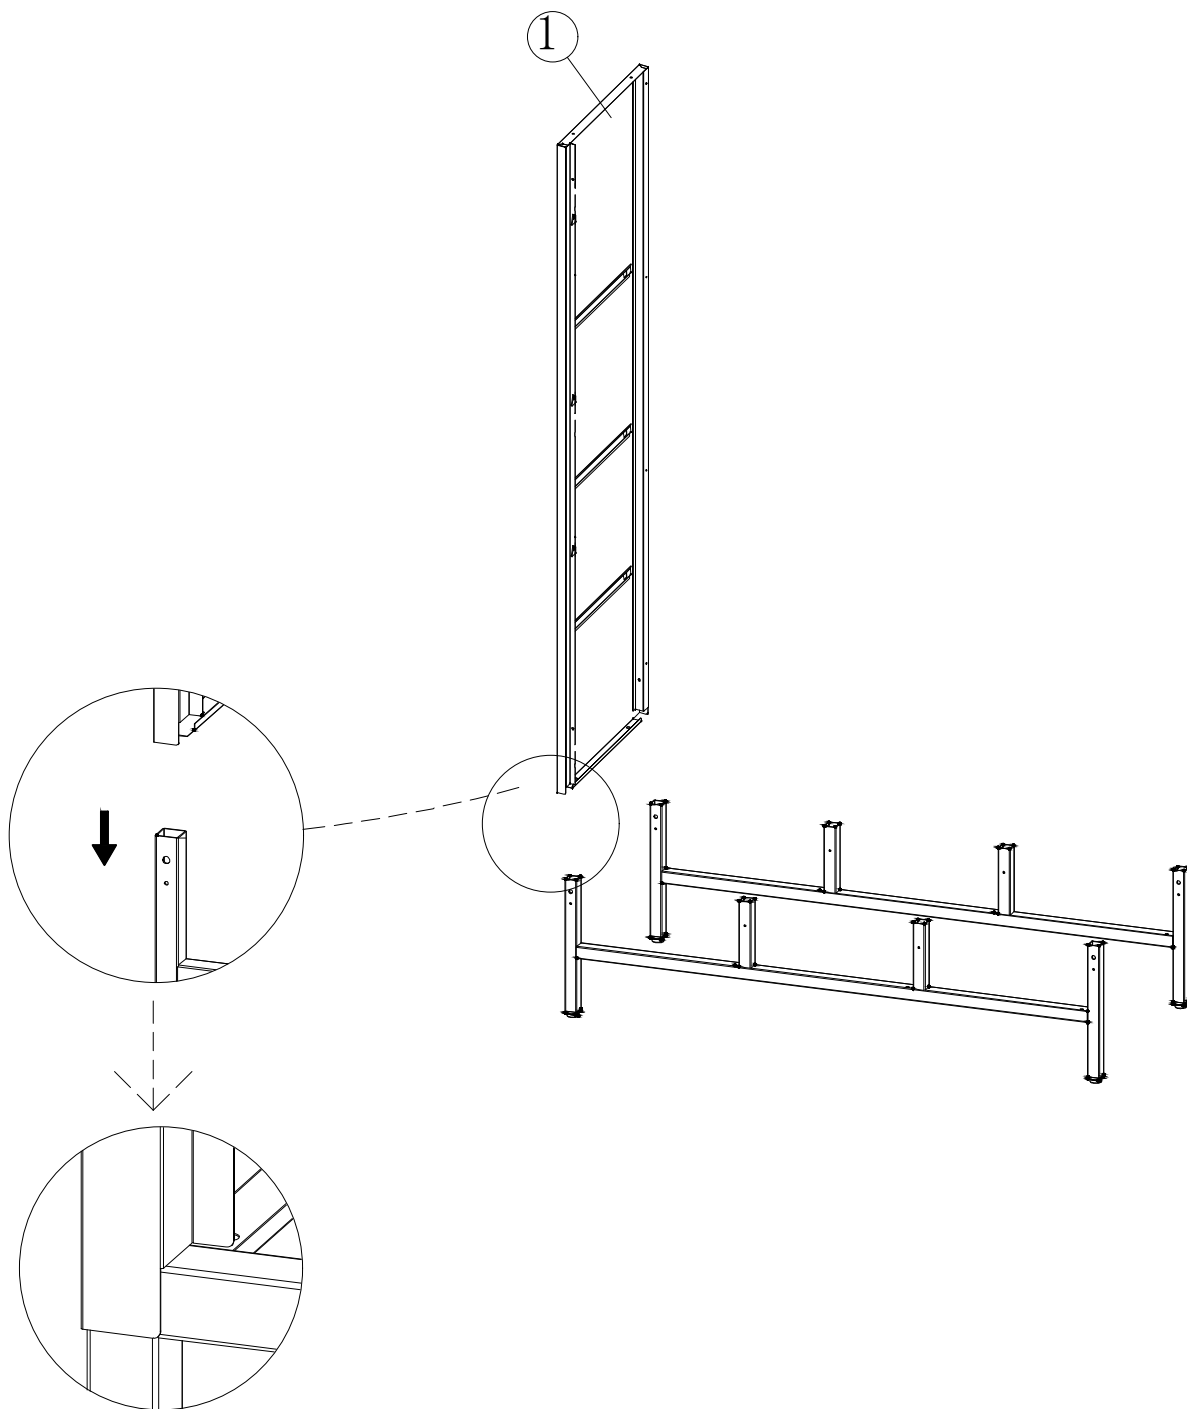

Step 3: Insert Part 2 into Part 3


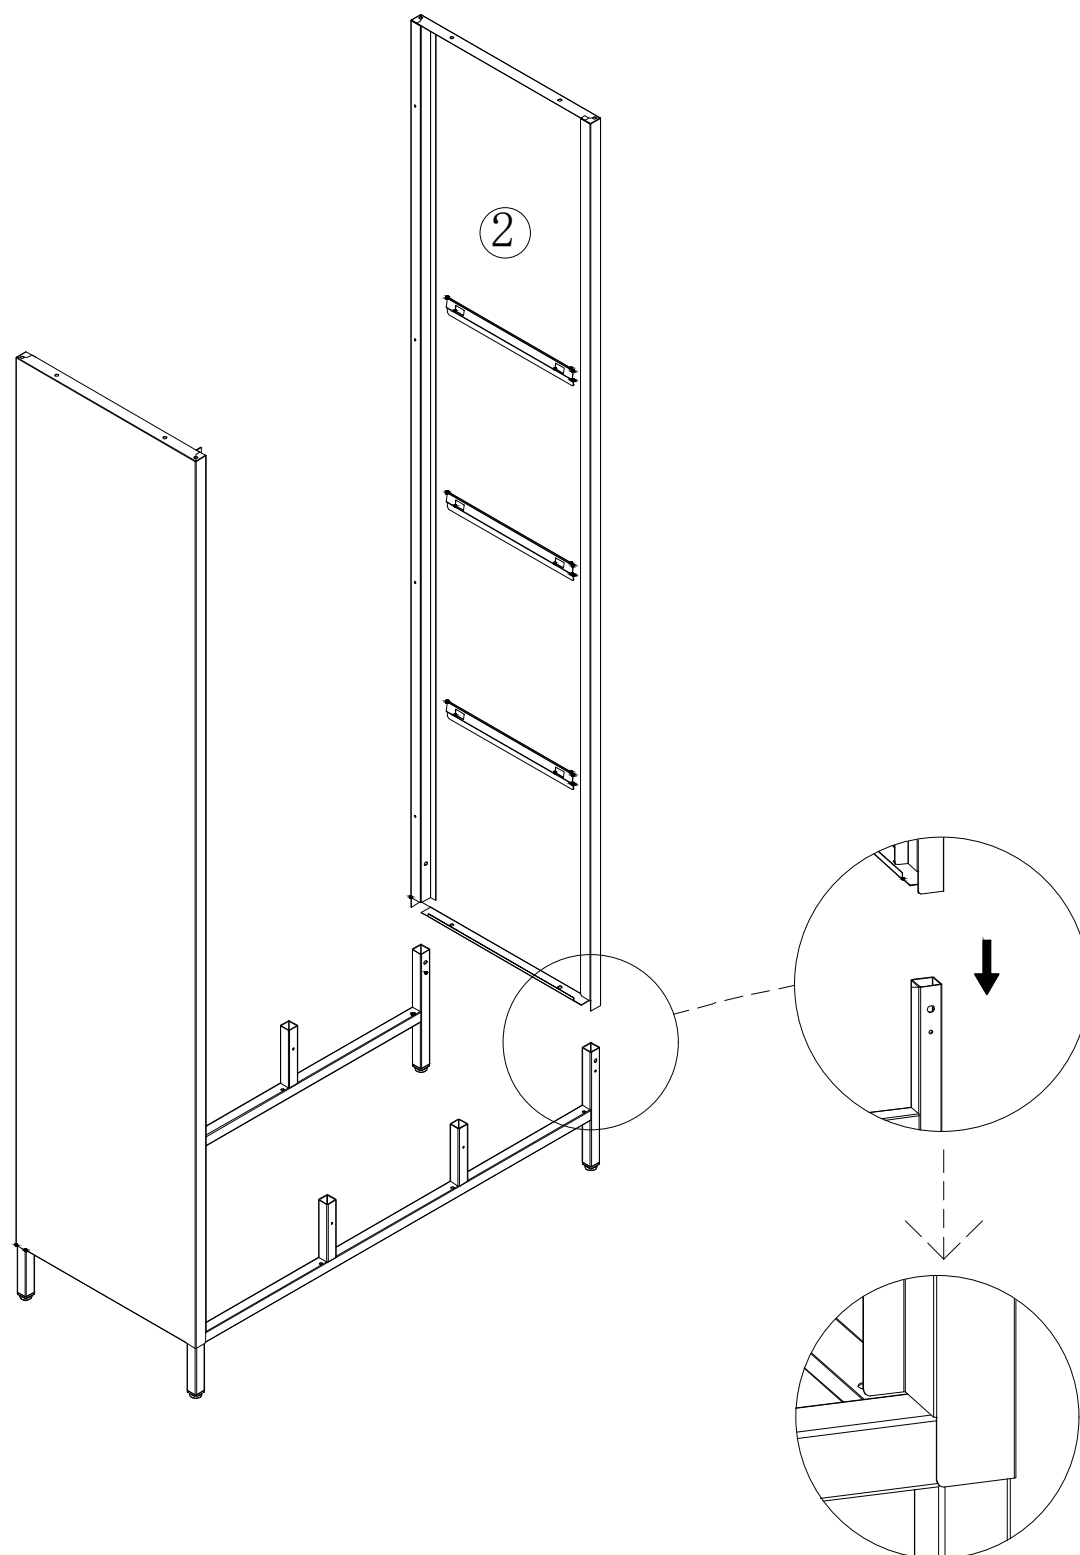


A*4



M5*12MM

Step 4: Connect Part 1, Part 2 and Part 3 with Part A

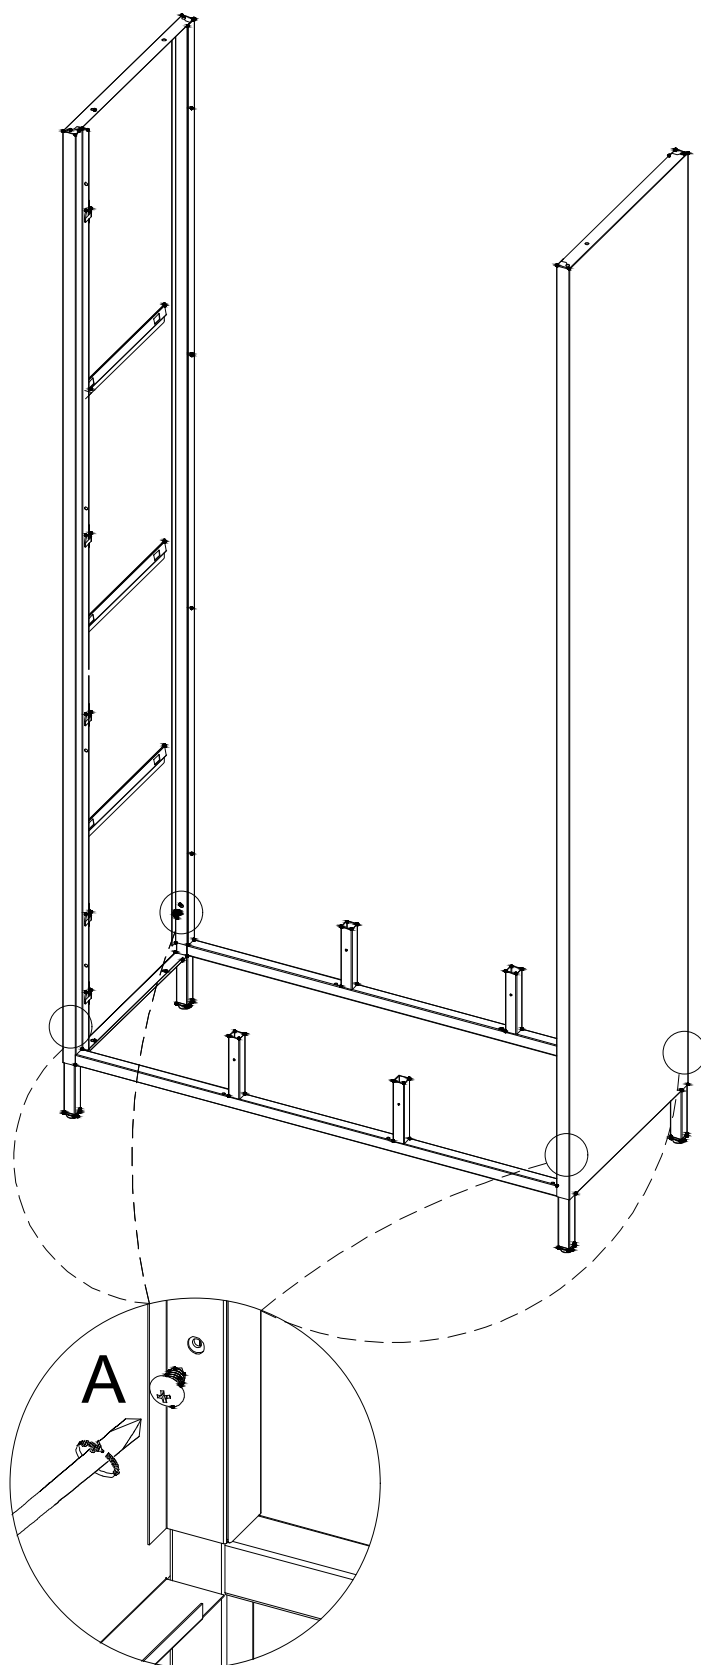
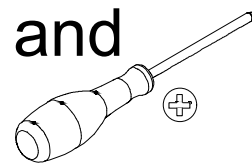


A*4



M5*12MM

Step 5: Install Part 4 with Part A

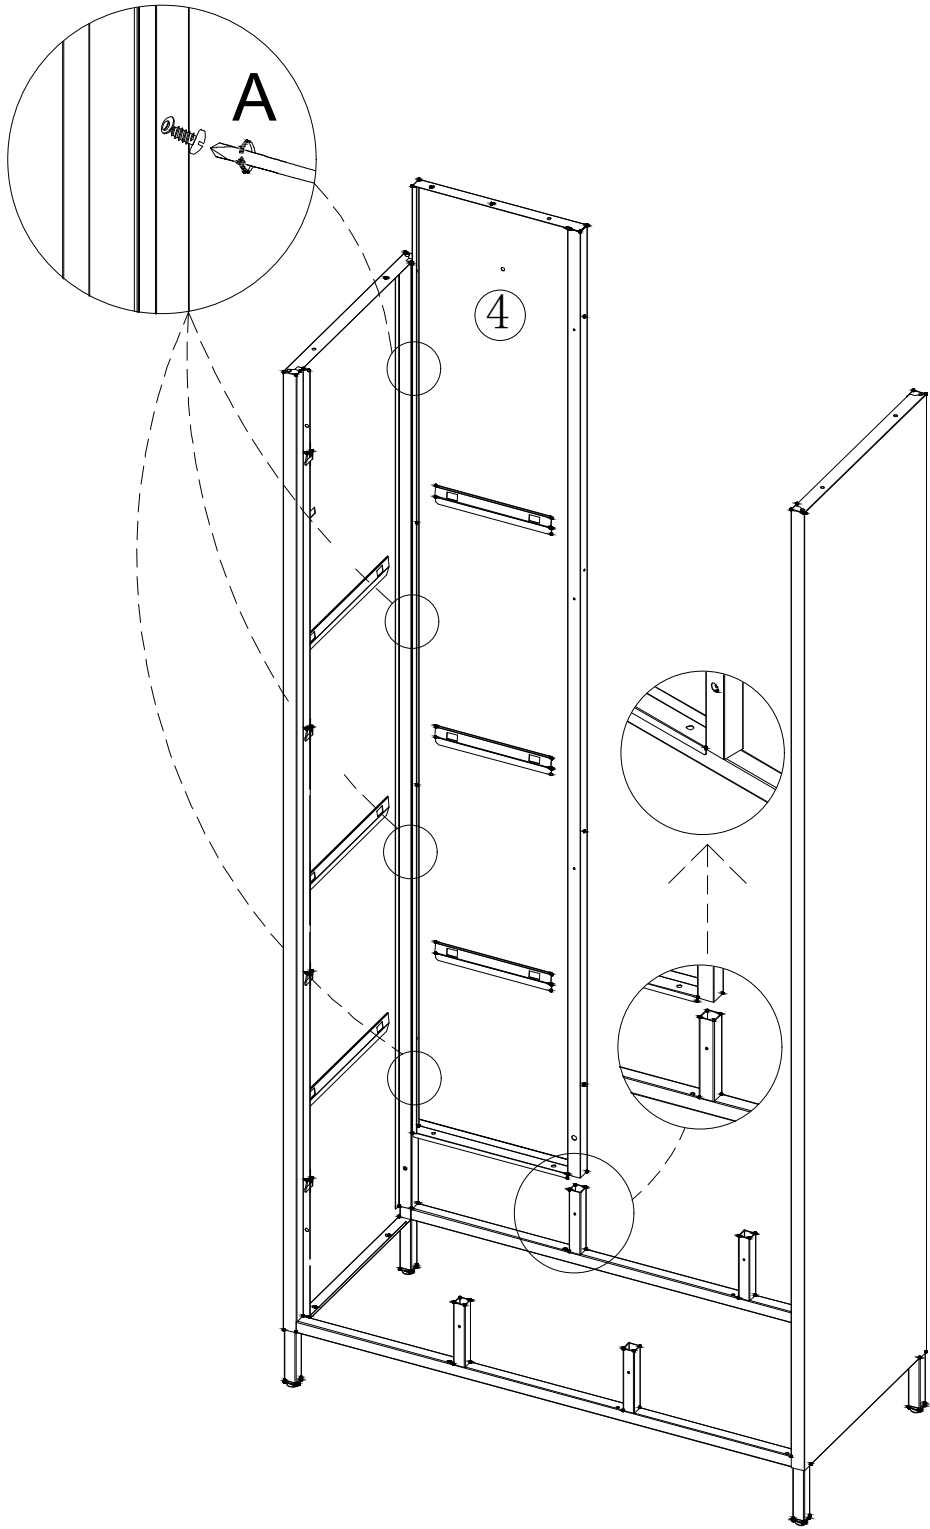
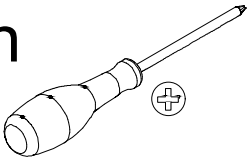


A*4









M5*12MM

Step 6: Install another Part 4 with Part A

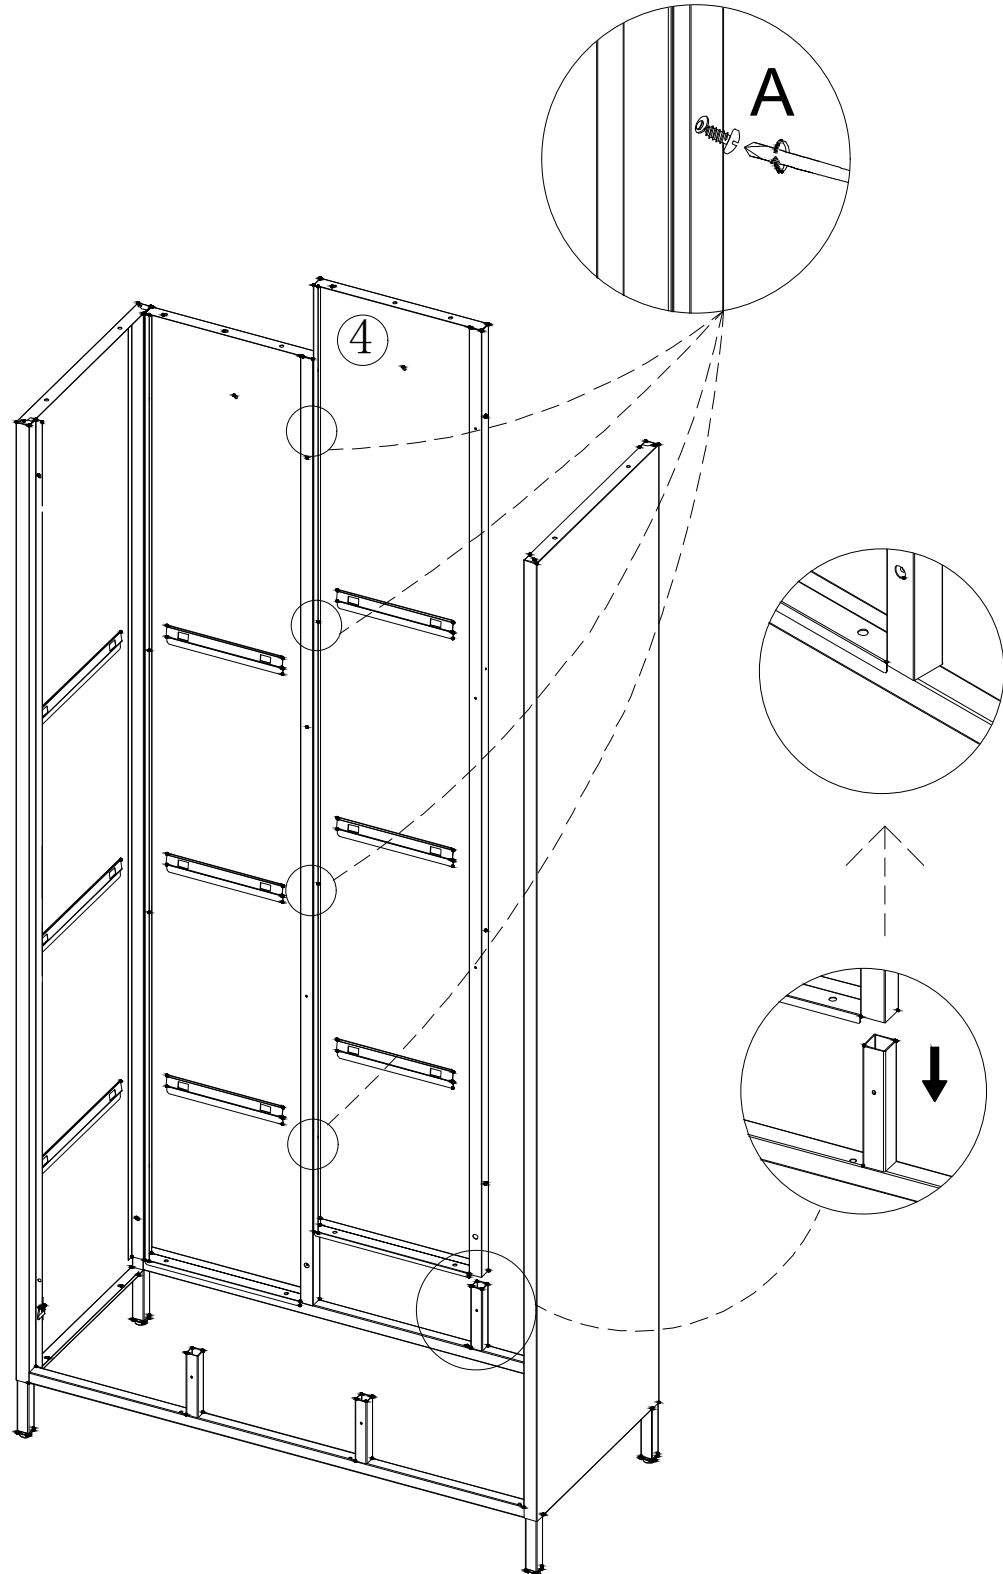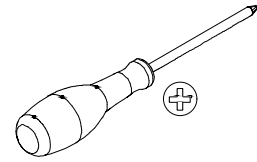

A*8
 M5*12MM

Step 7: Install Part 5 with Part A

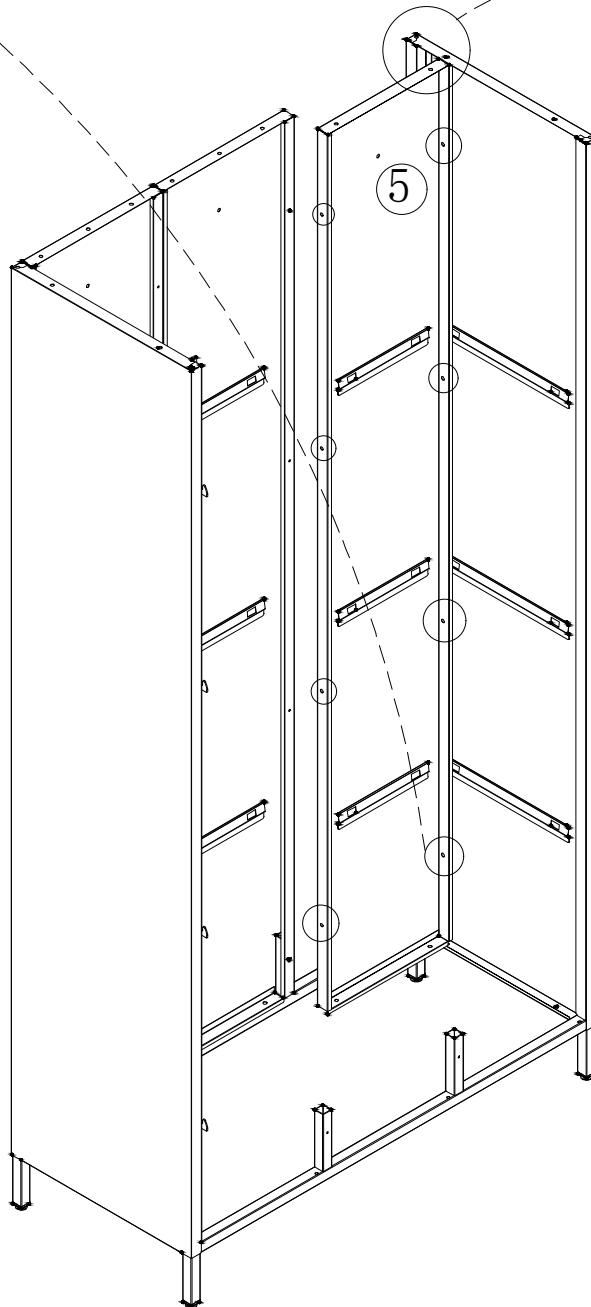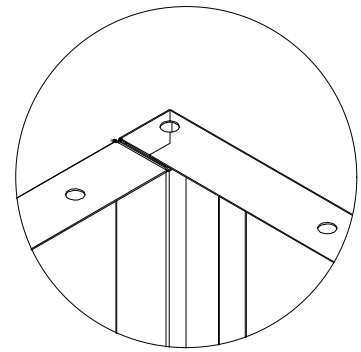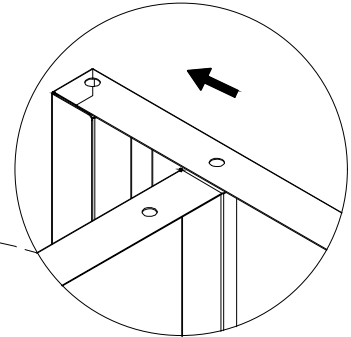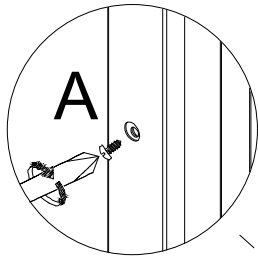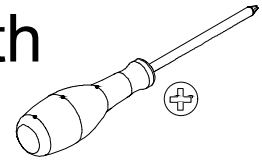

Step 8: Put Part 6 on Part 3







A*10





M5*12MM


Step 9: Install Part 7 with Part A

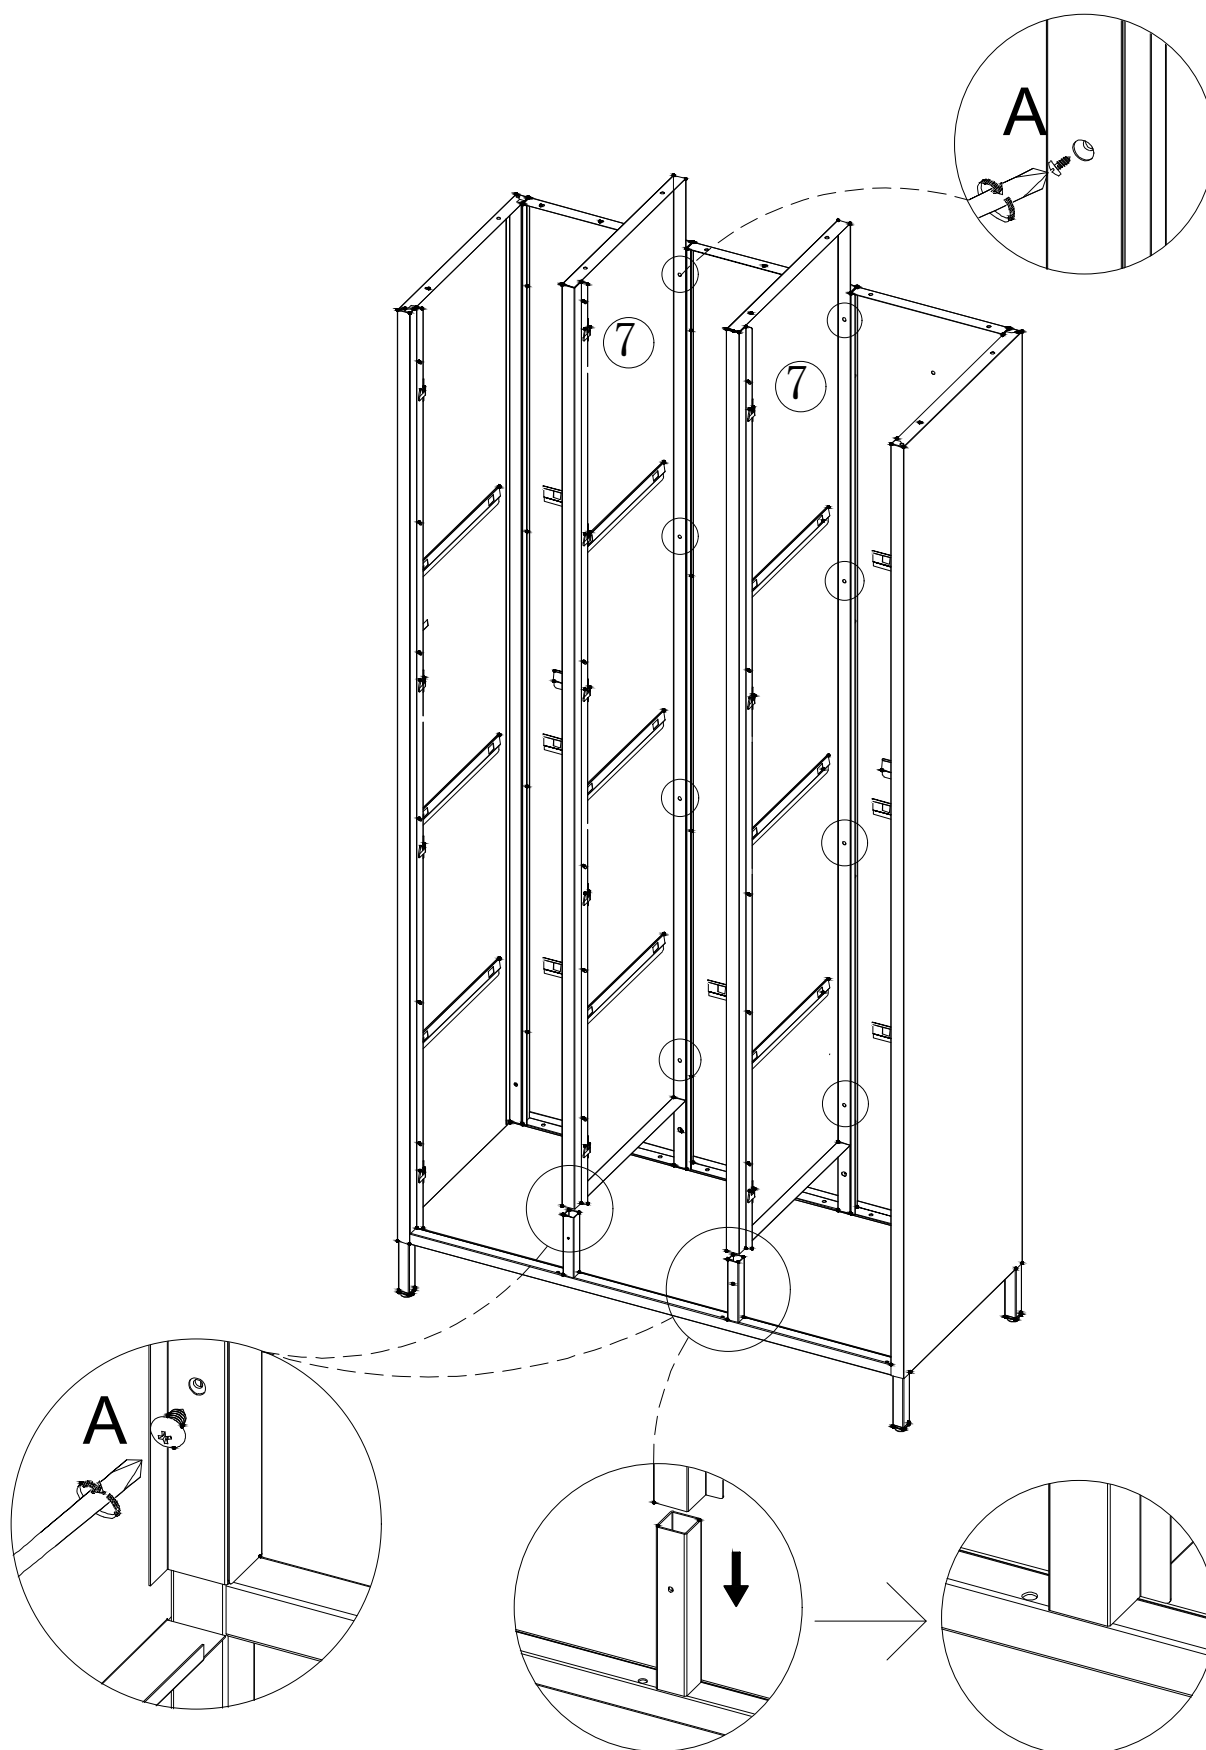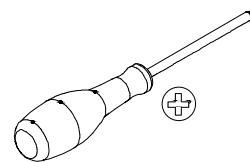

B*6	D*3	Step 10: Install Part D on Part 8 with Part B
		

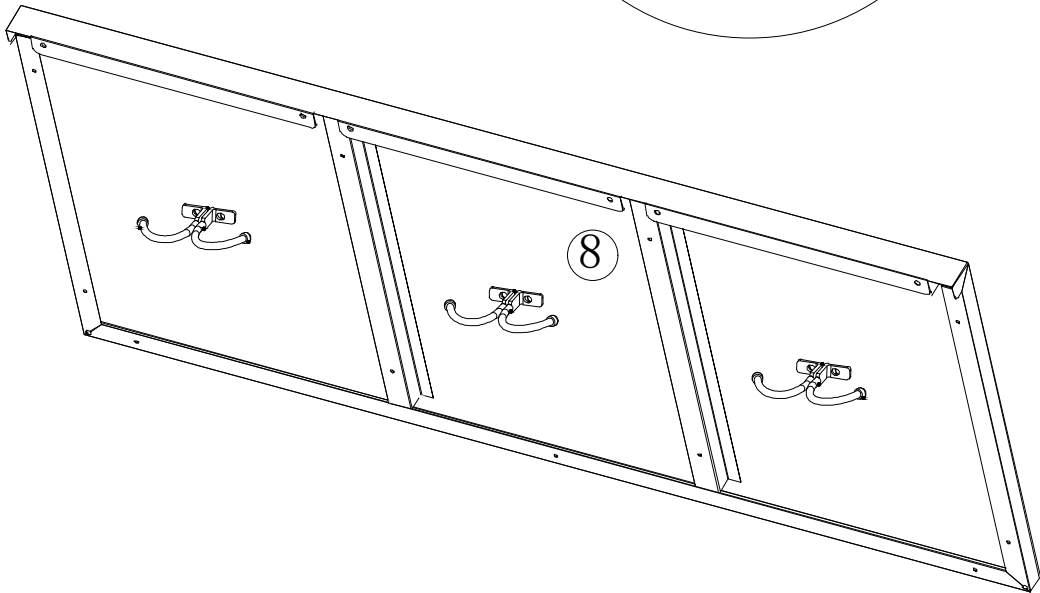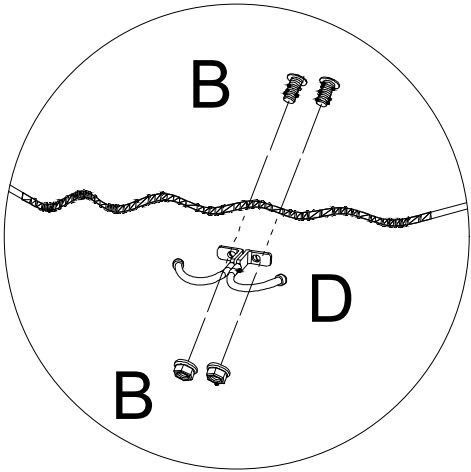

Step 11: Install Part 8


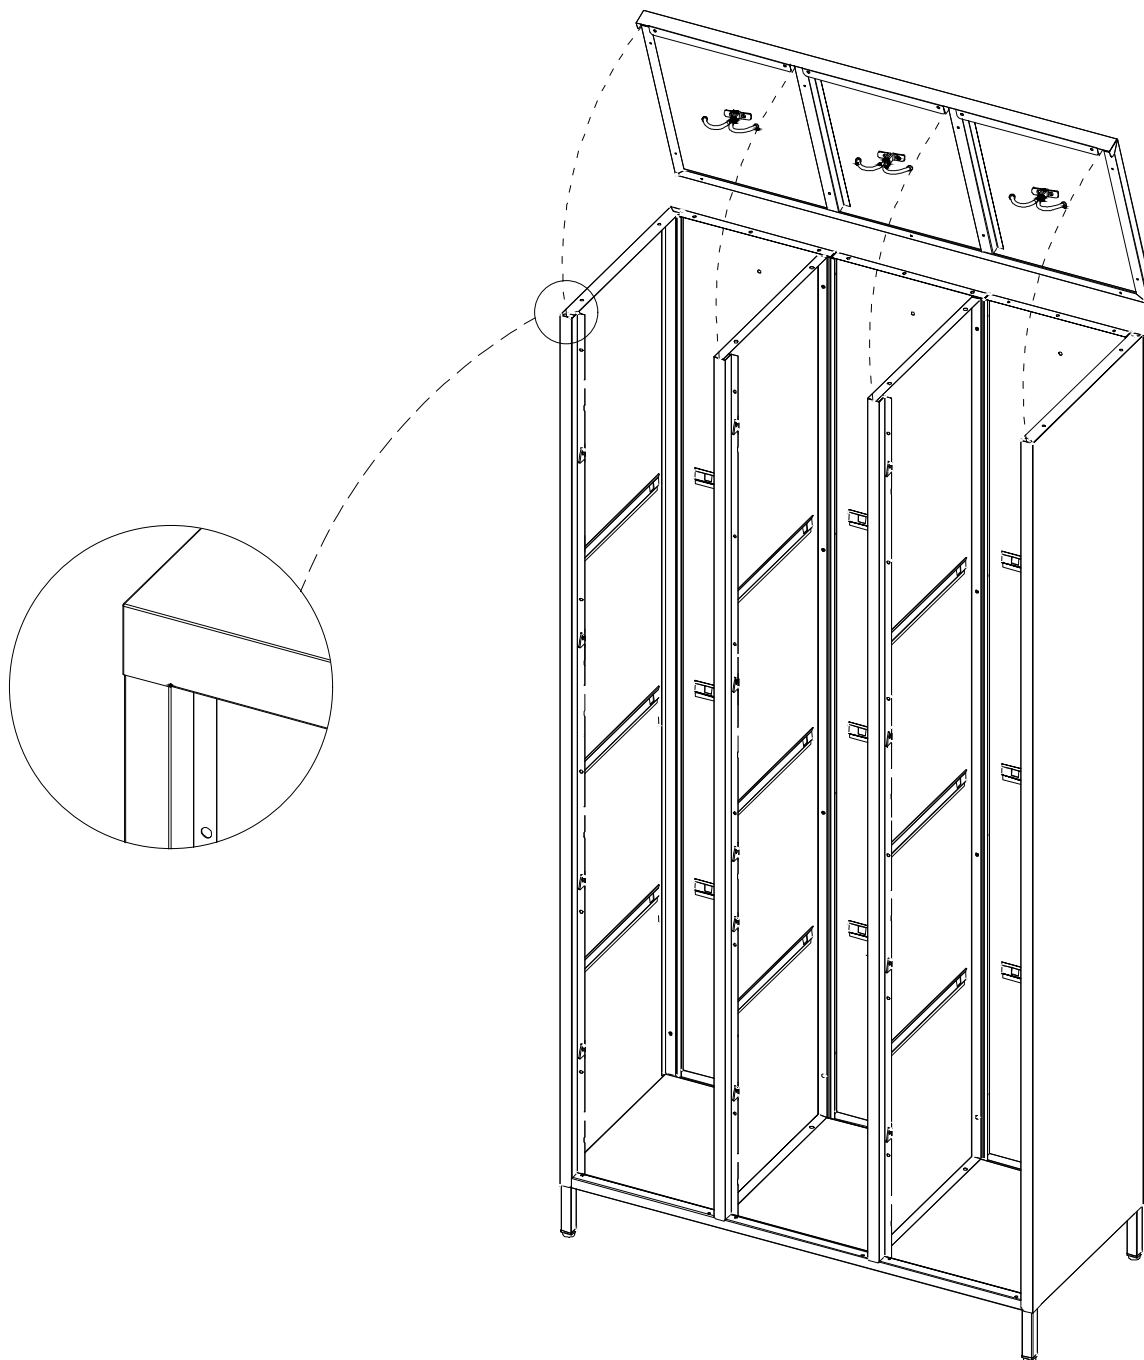


A*11



M5*12MM


Step 12: Install Part 8 with Part A

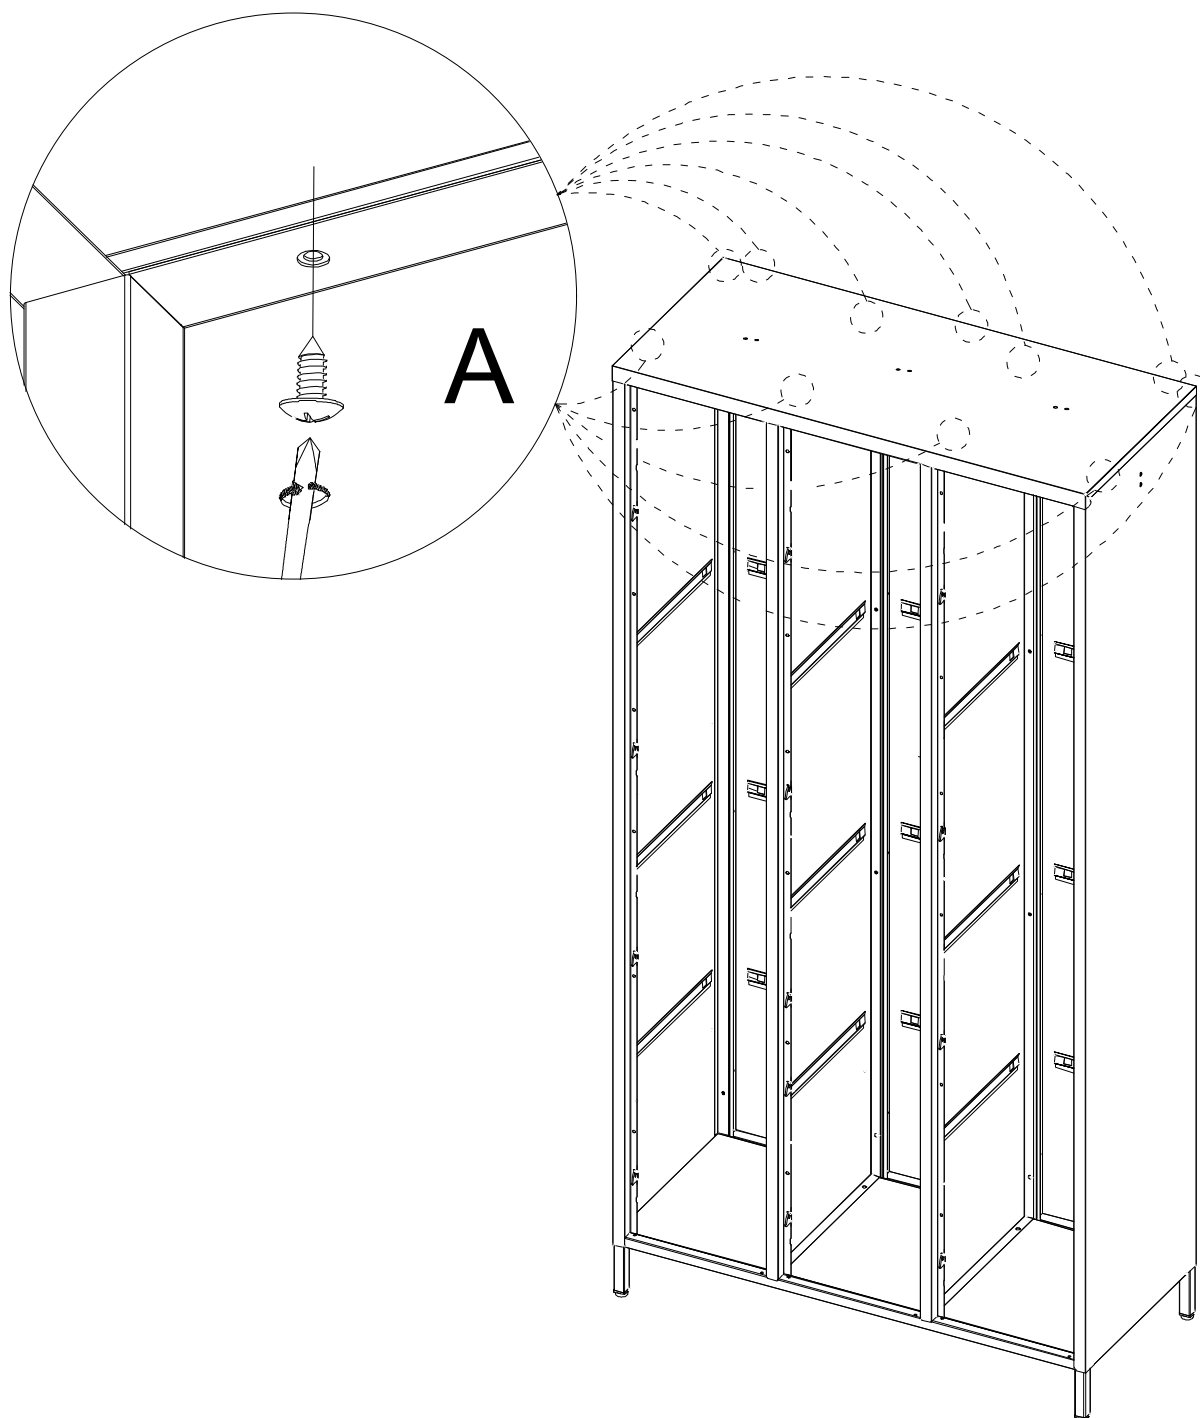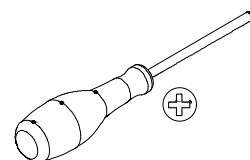


Step 13:	E*2			
	 M8	 M5*30MM	 M5	




This step can help you
fix the cabinet on the
wall.


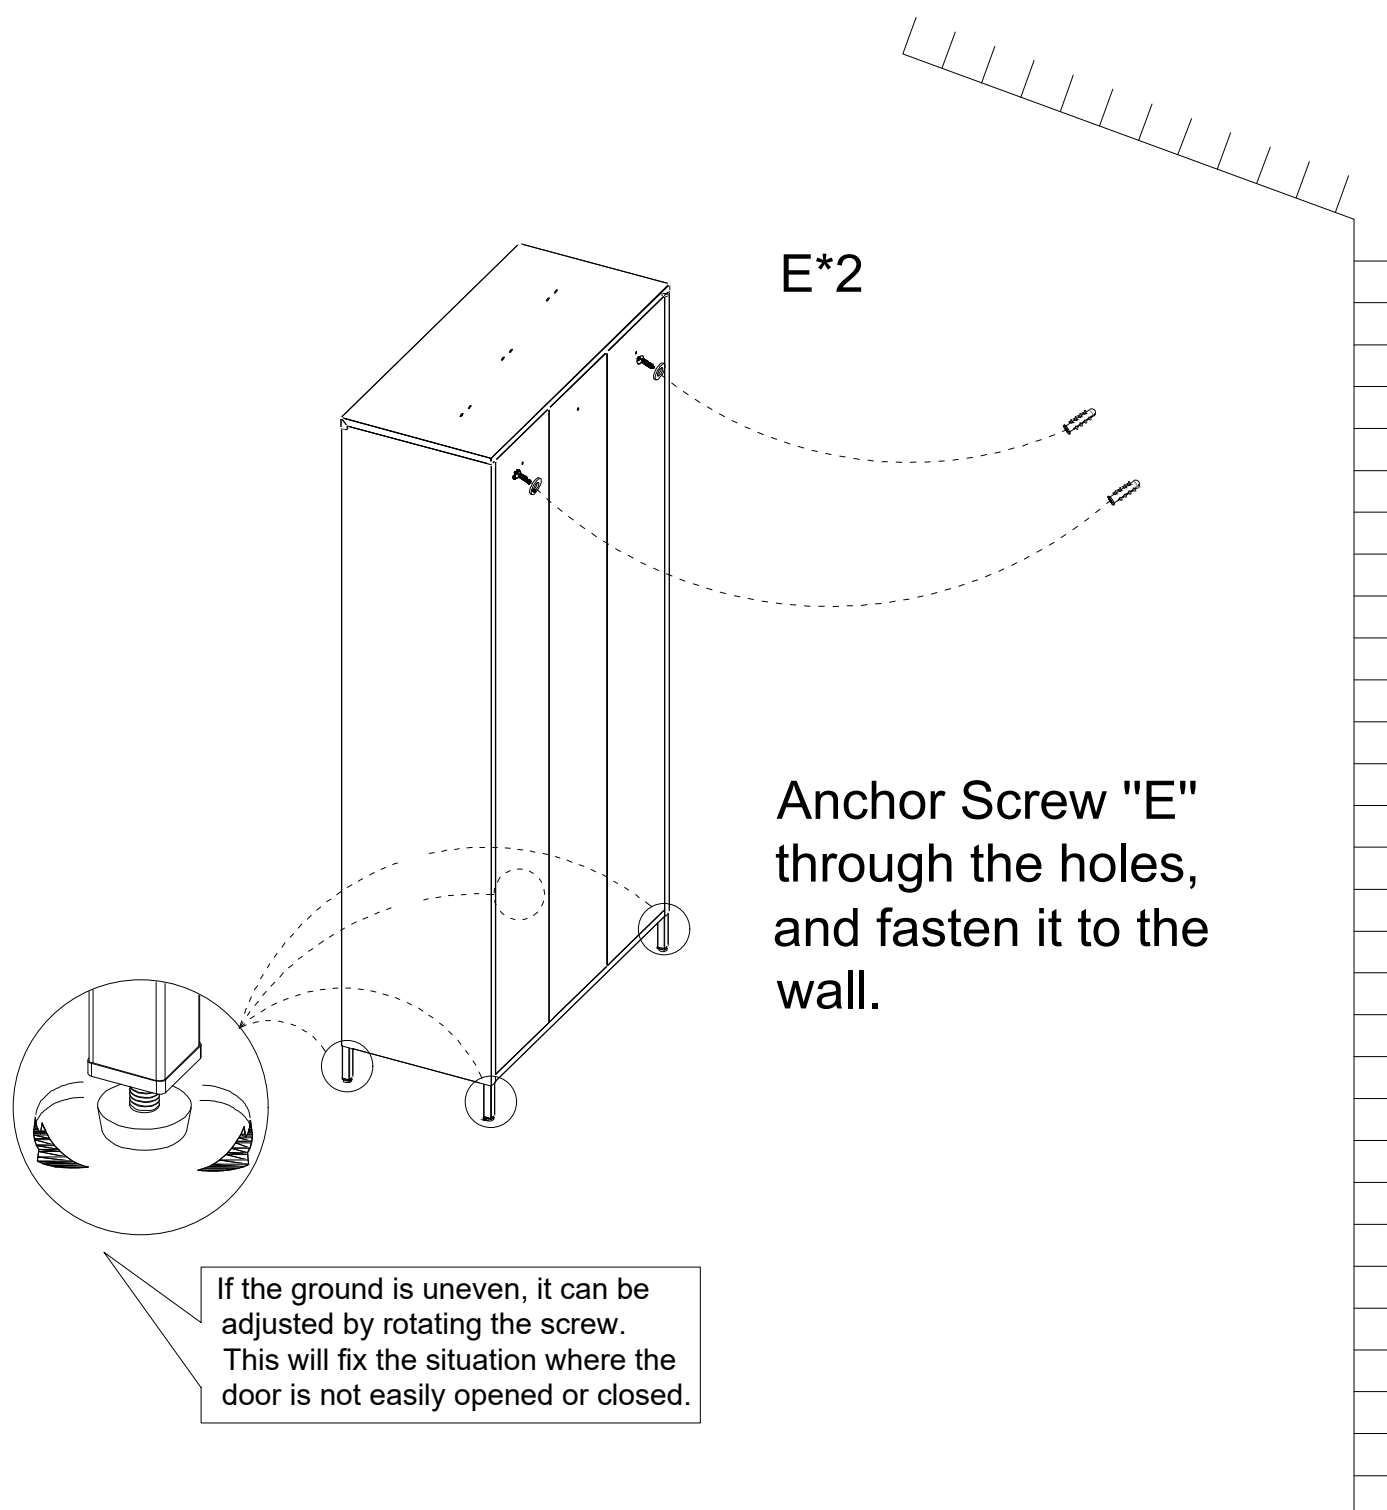




Step 14: Install Part 9

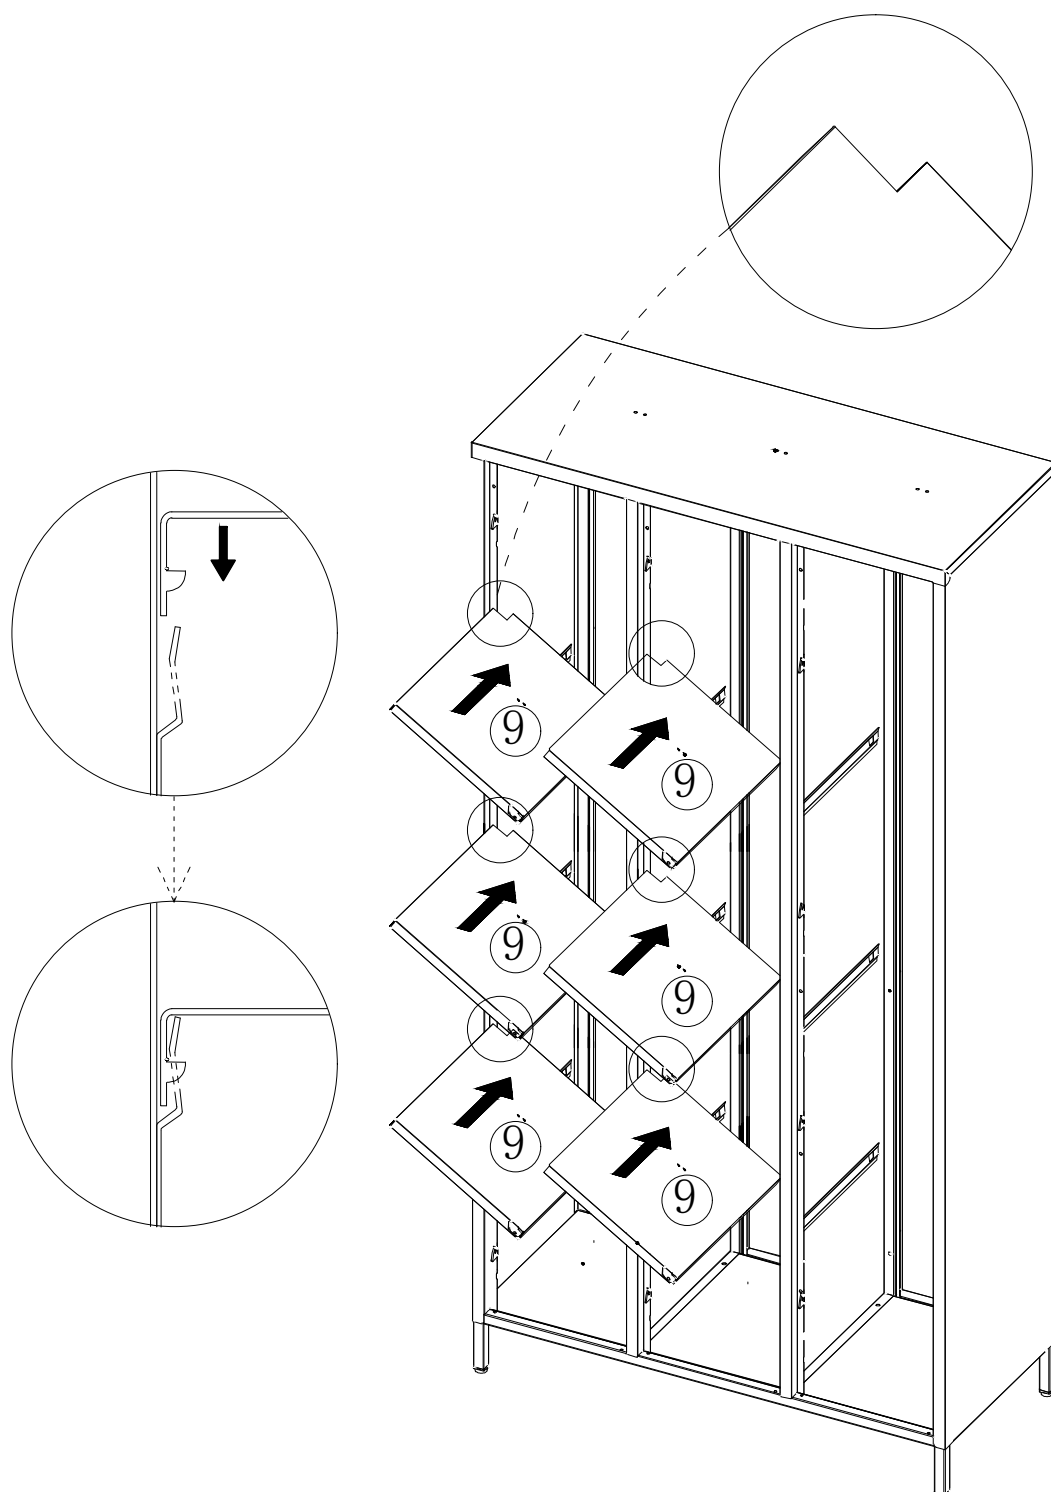

Step 15: Install Part 10

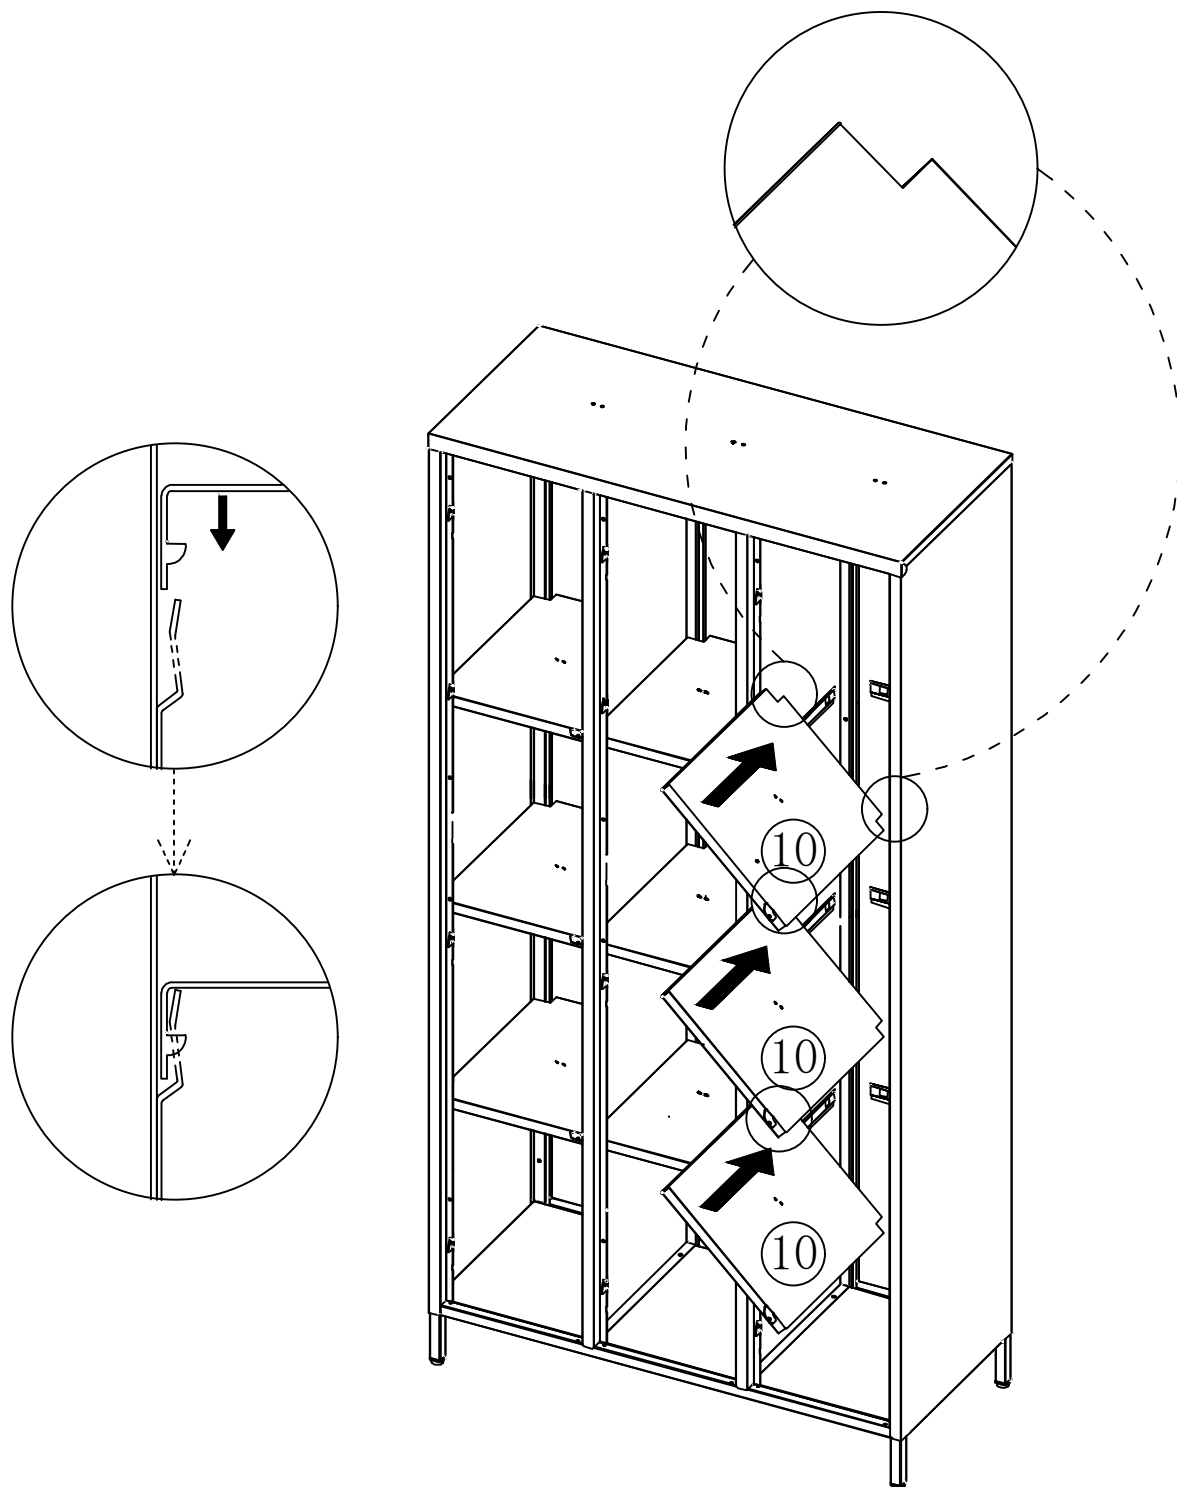

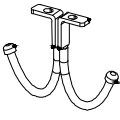
B*18	D*9	Step 16: Install Part D on Part 9 and Part 10 with Part B
		

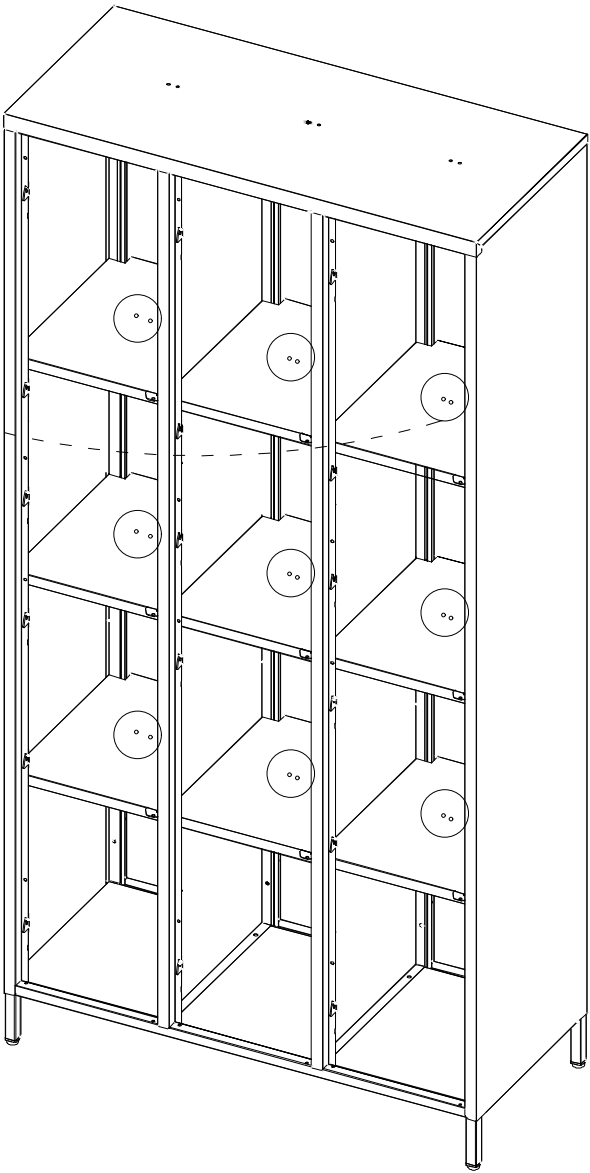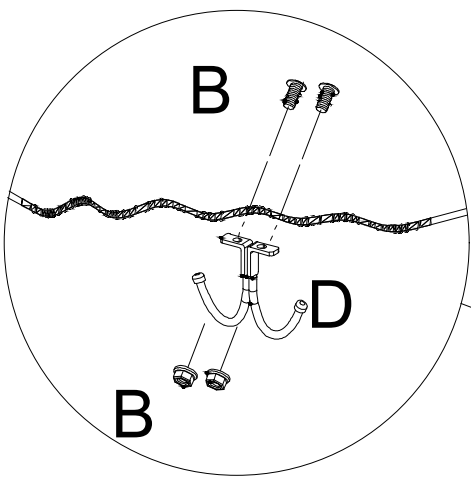


F*24




Step 17: Install Part F

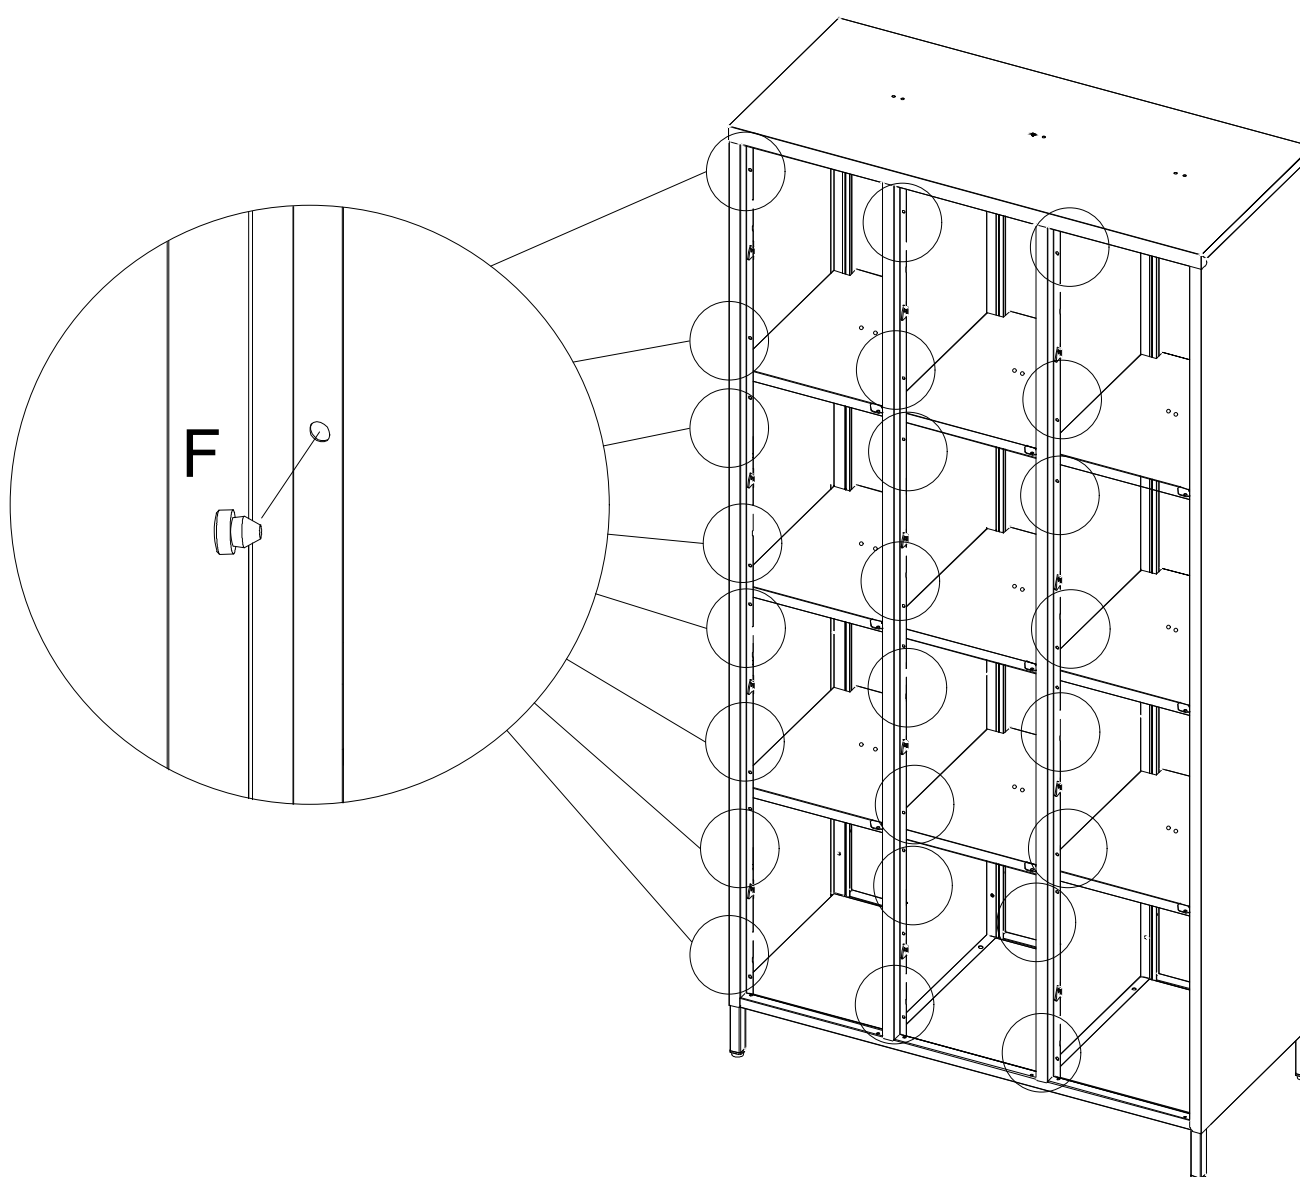

G*3	H*12
	

Step 18: Install the doors (Part 11)

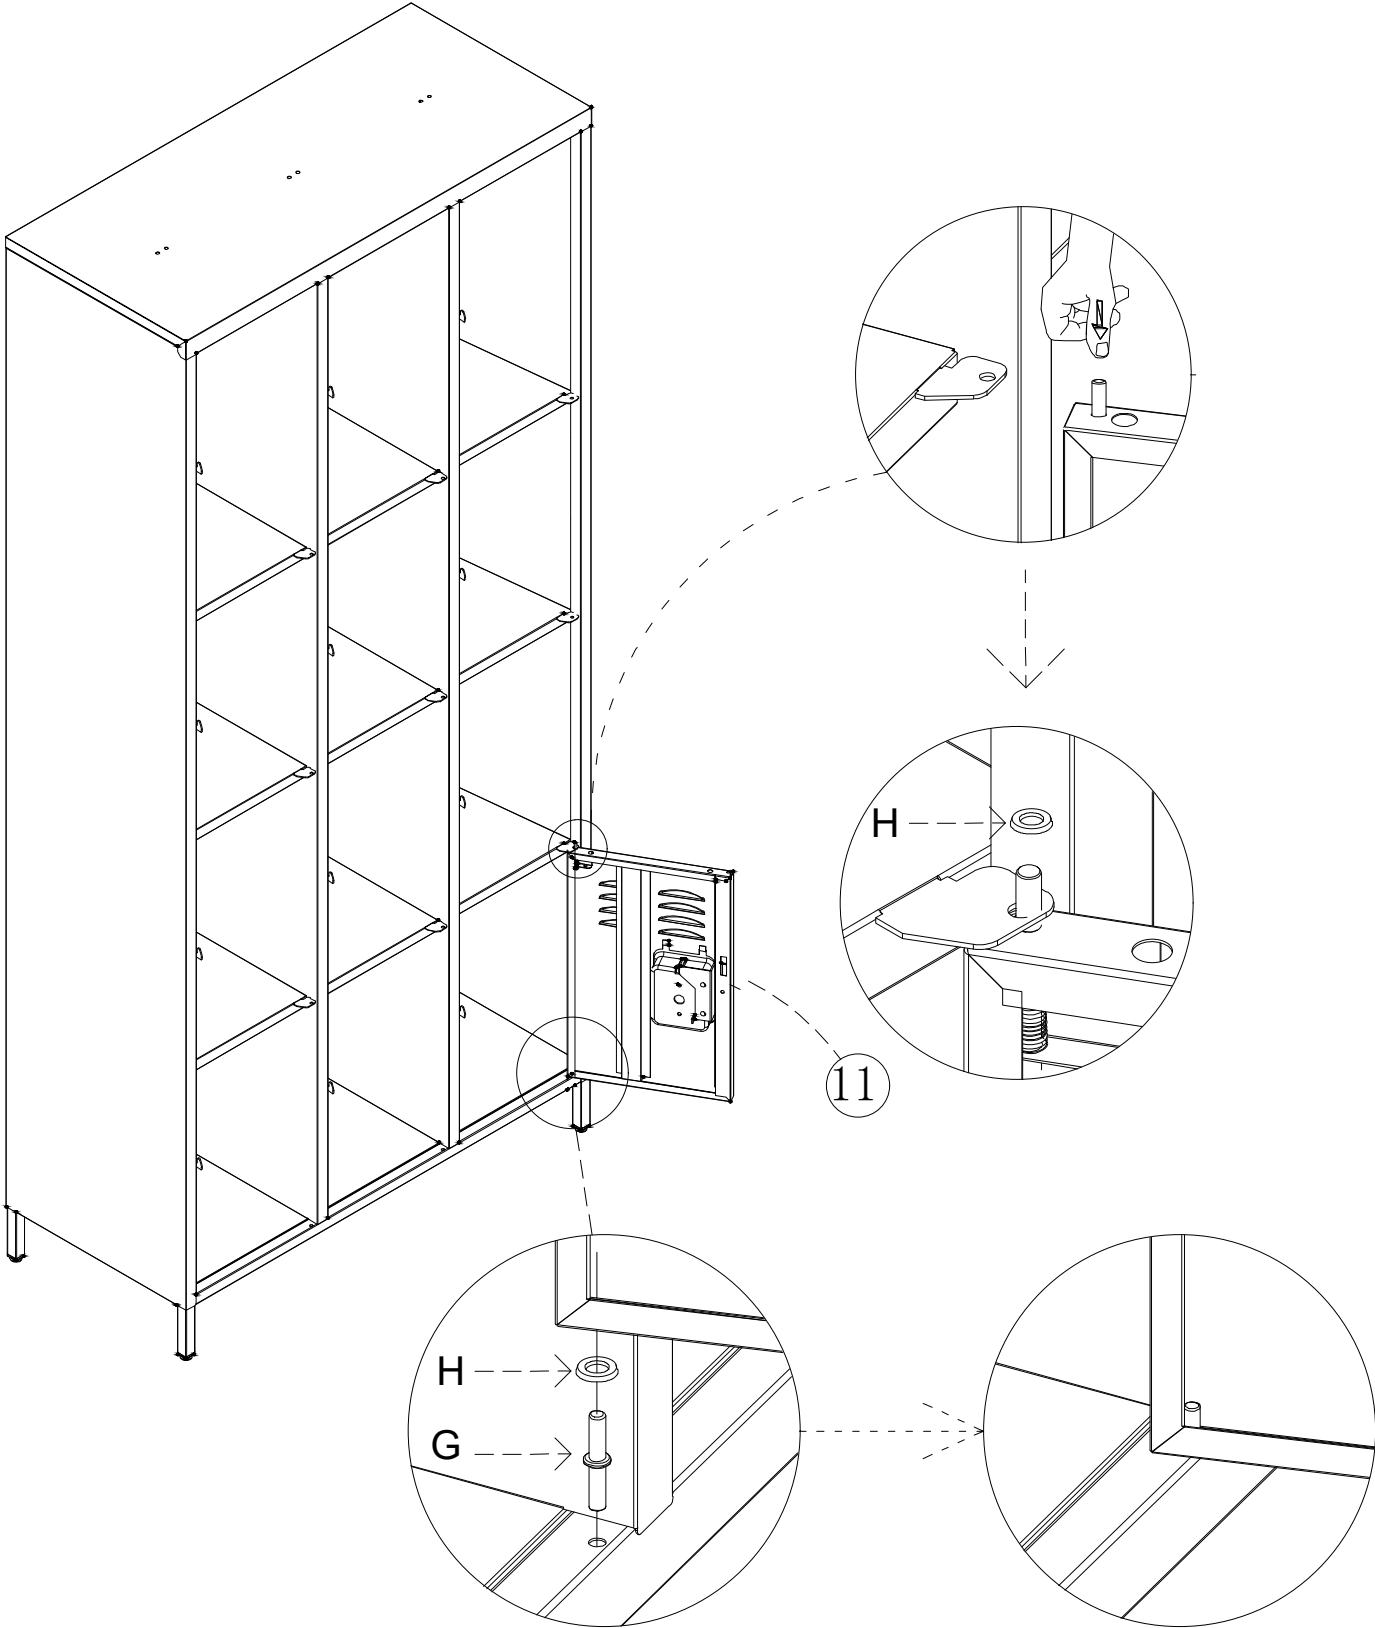

Step 19: Install all the doors

