



# Assembly Instructions

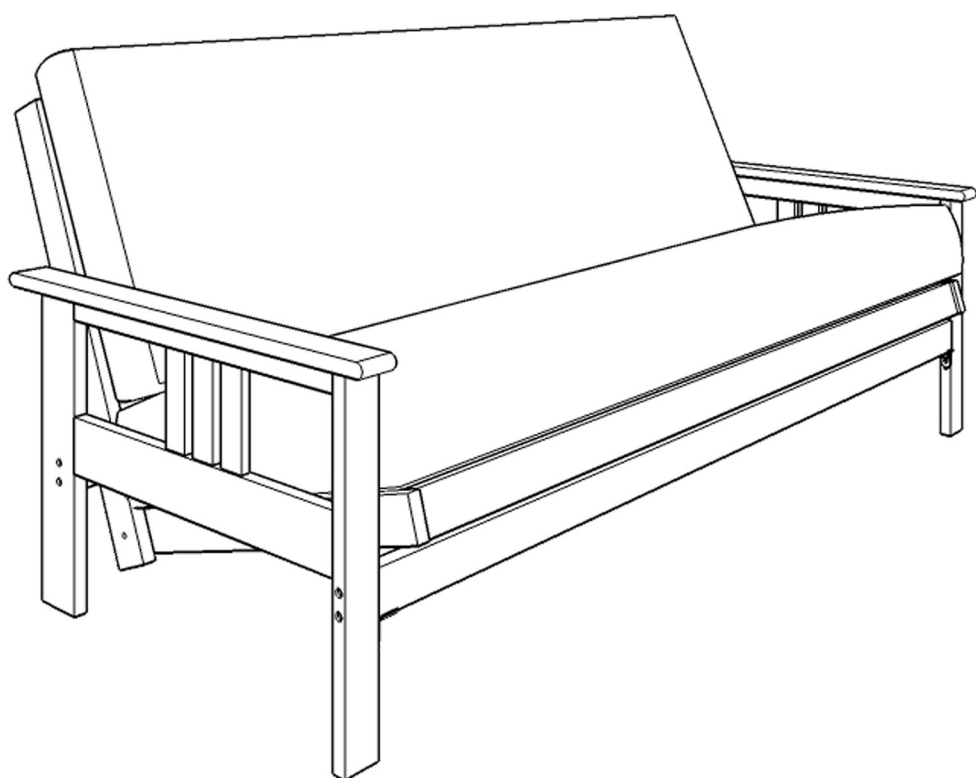

Required:

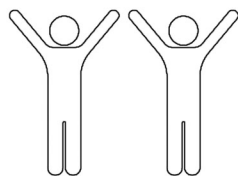

Tools Needed:




Allen Key provided

Please cover floor with corrugated cardboard / paper / carpet  
to avoid scratches / damages to floor




# Body

## Assembly Instructions

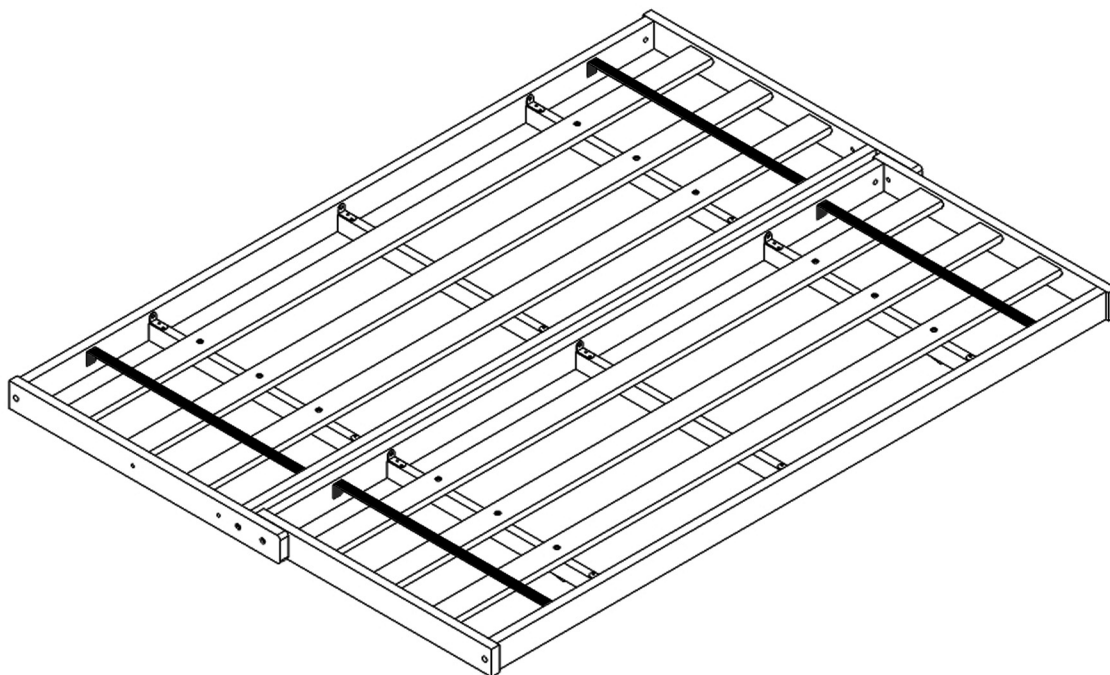

Recommended:

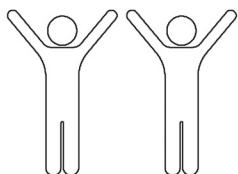

Tools Needed:



Allen Key provided

Please cover floor with corrugated cardboard / paper / carpet  
to avoid scratches / damages to floor


# Assembly Checklist

Please make sure that you have all of the below items before you start. If any are missing, please contact us for a replacement.




## Parts supplied for assembly

Box A

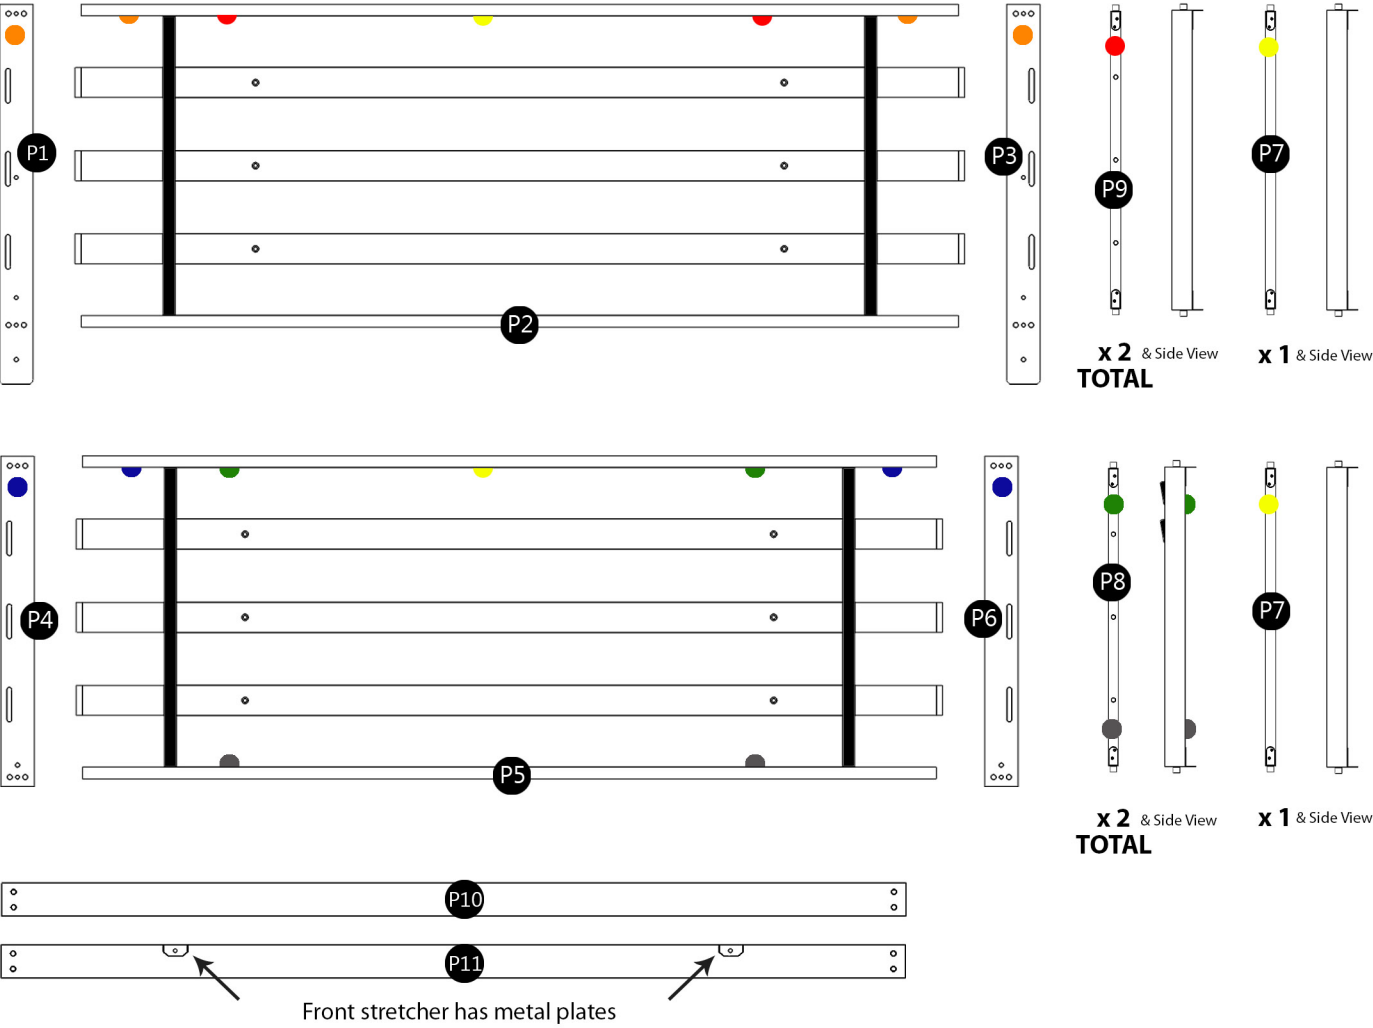



## Hardware supplied for assembly

Tools required for assembly:  
- Allen Key (supplied)

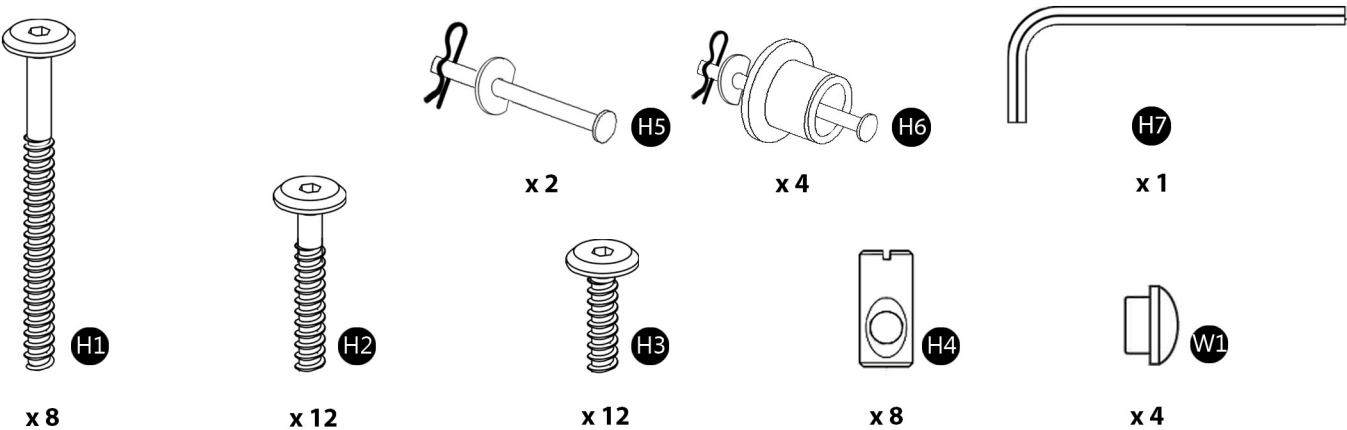


**Step 1:** Locate parts P2, P9(2), & P7


Use colored dots to align parts for connection.

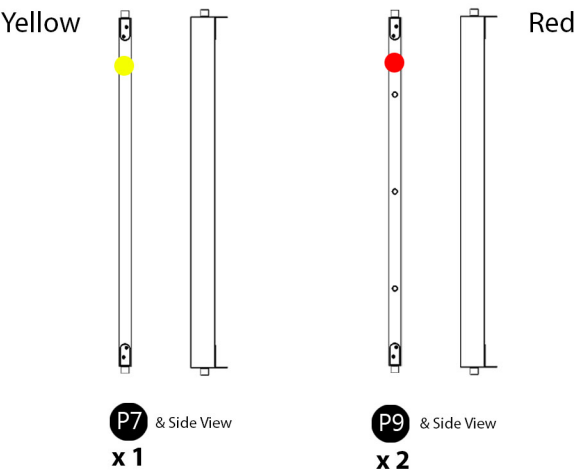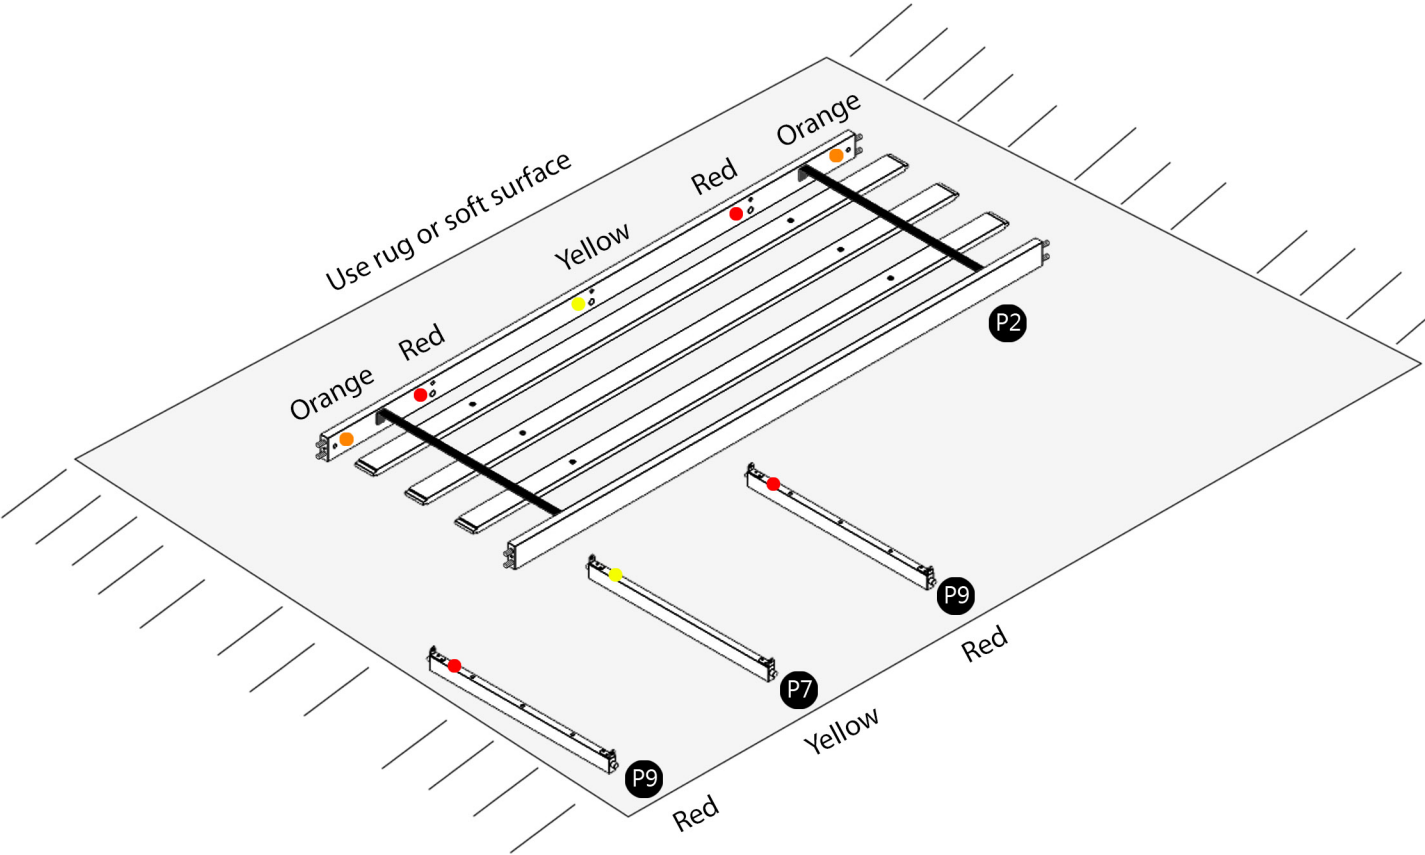



## Step 2: Attach P7 and P9(2) to P2 with hardware as shown

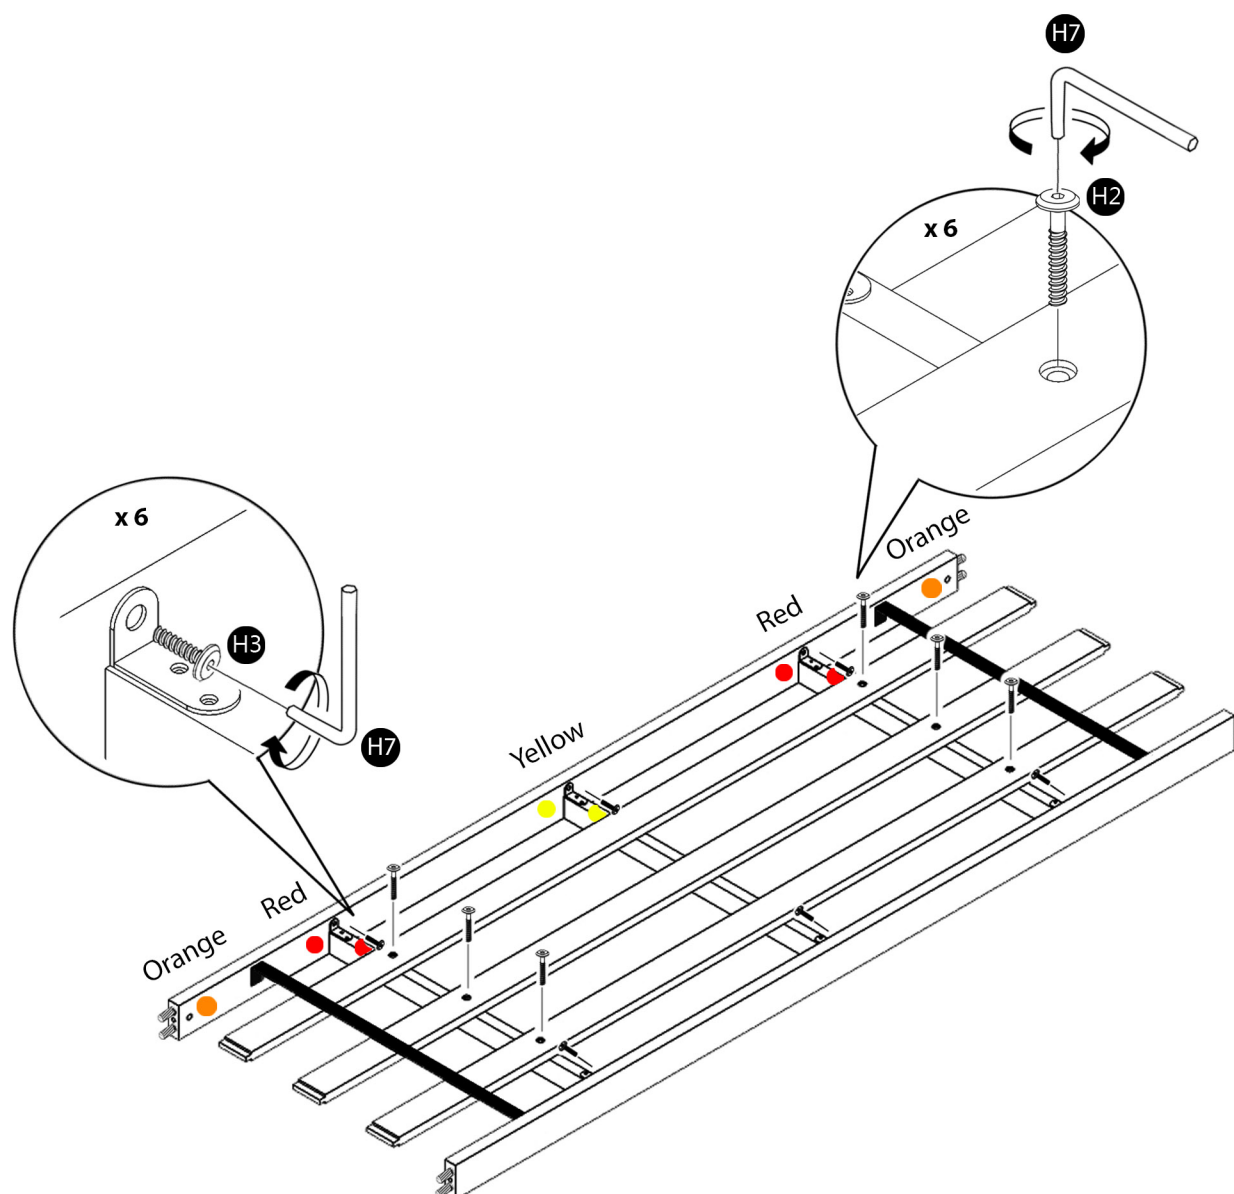

Loosely attach H2 and H3 bolts.

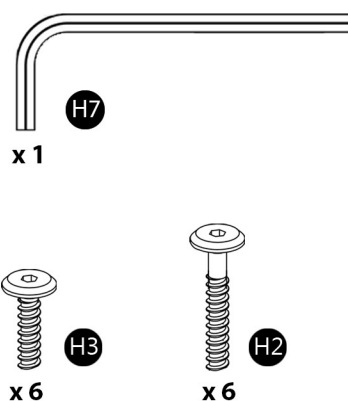


**Step 3:** Attach four nylon guides (H6) as shown

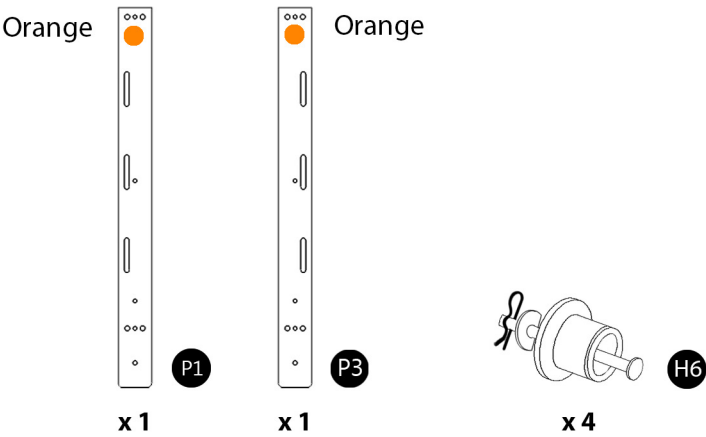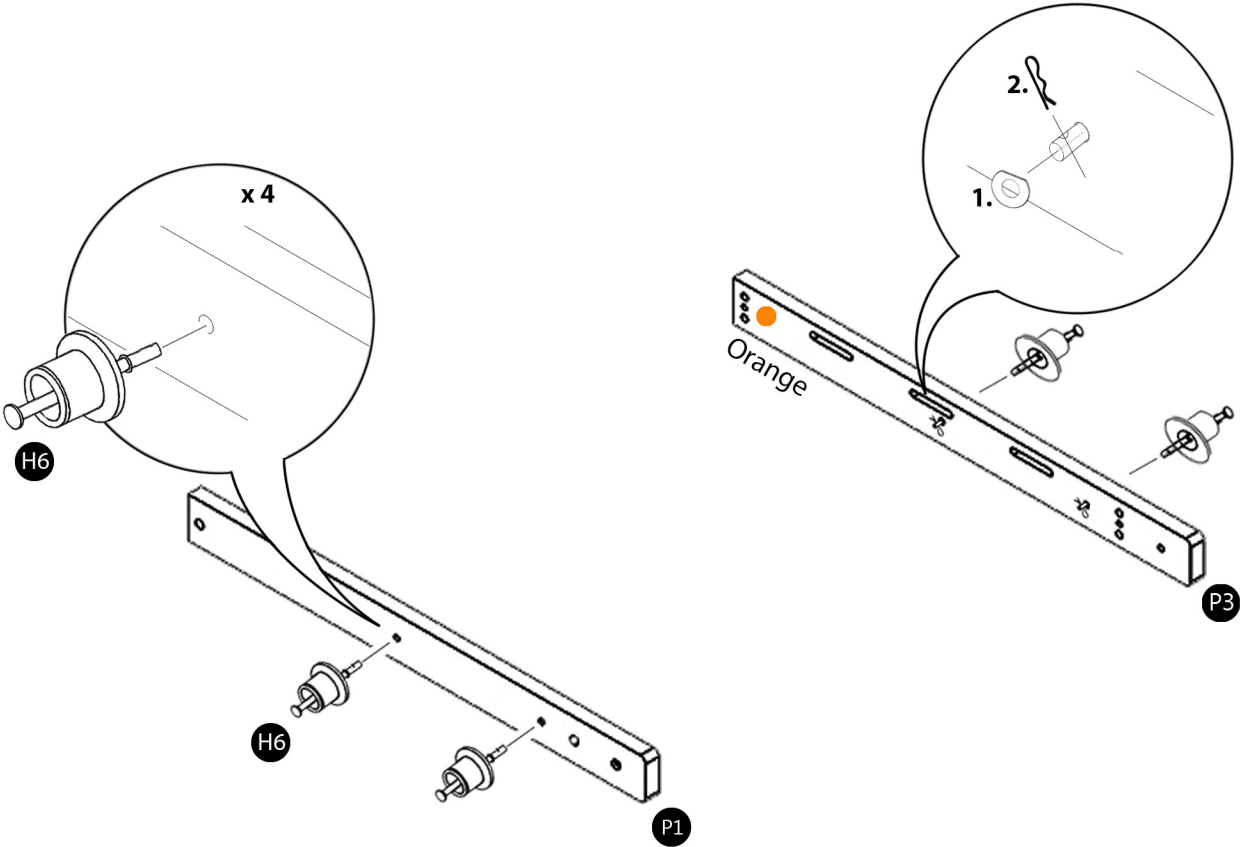


# Step 4: Attach P1 & P3 to back deck P2

Use colored dots to align parts for connection.

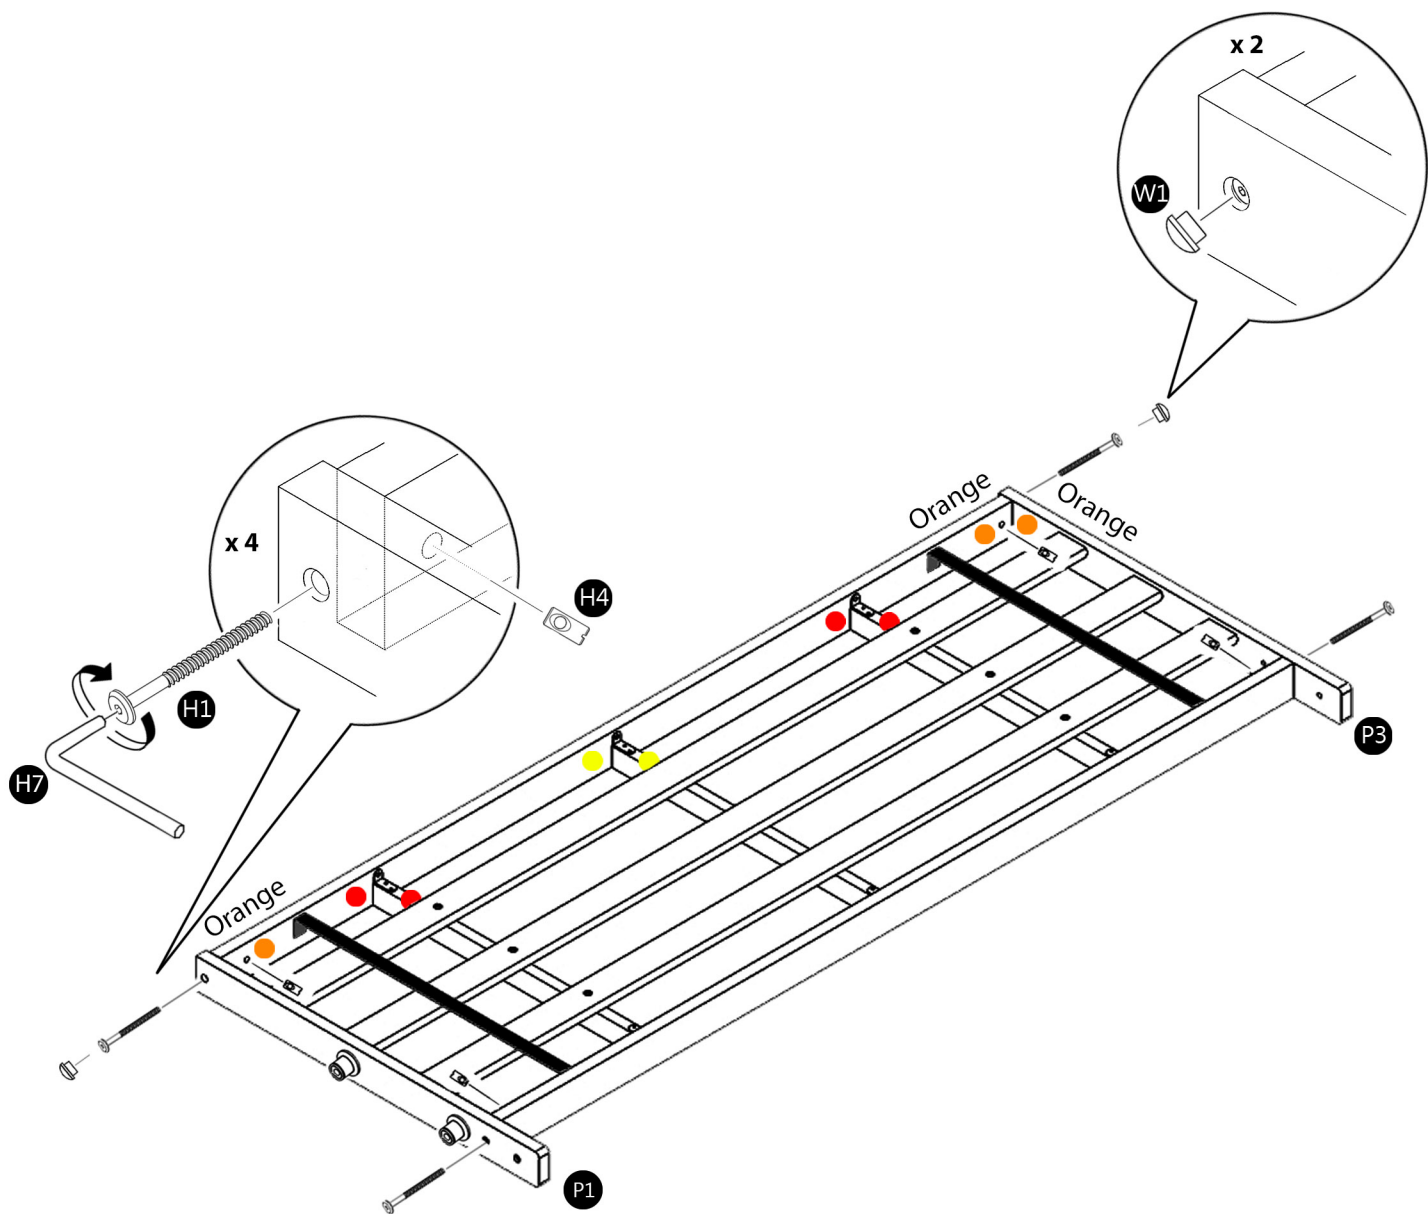


All bolts can be tightened at this point.



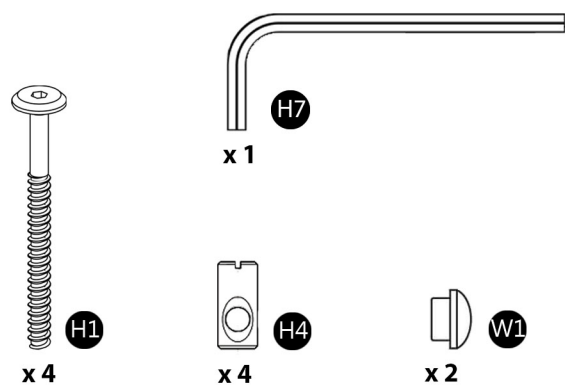


# Queen Size Frames

If your frame is queen size, you will need to attach part P12(2)



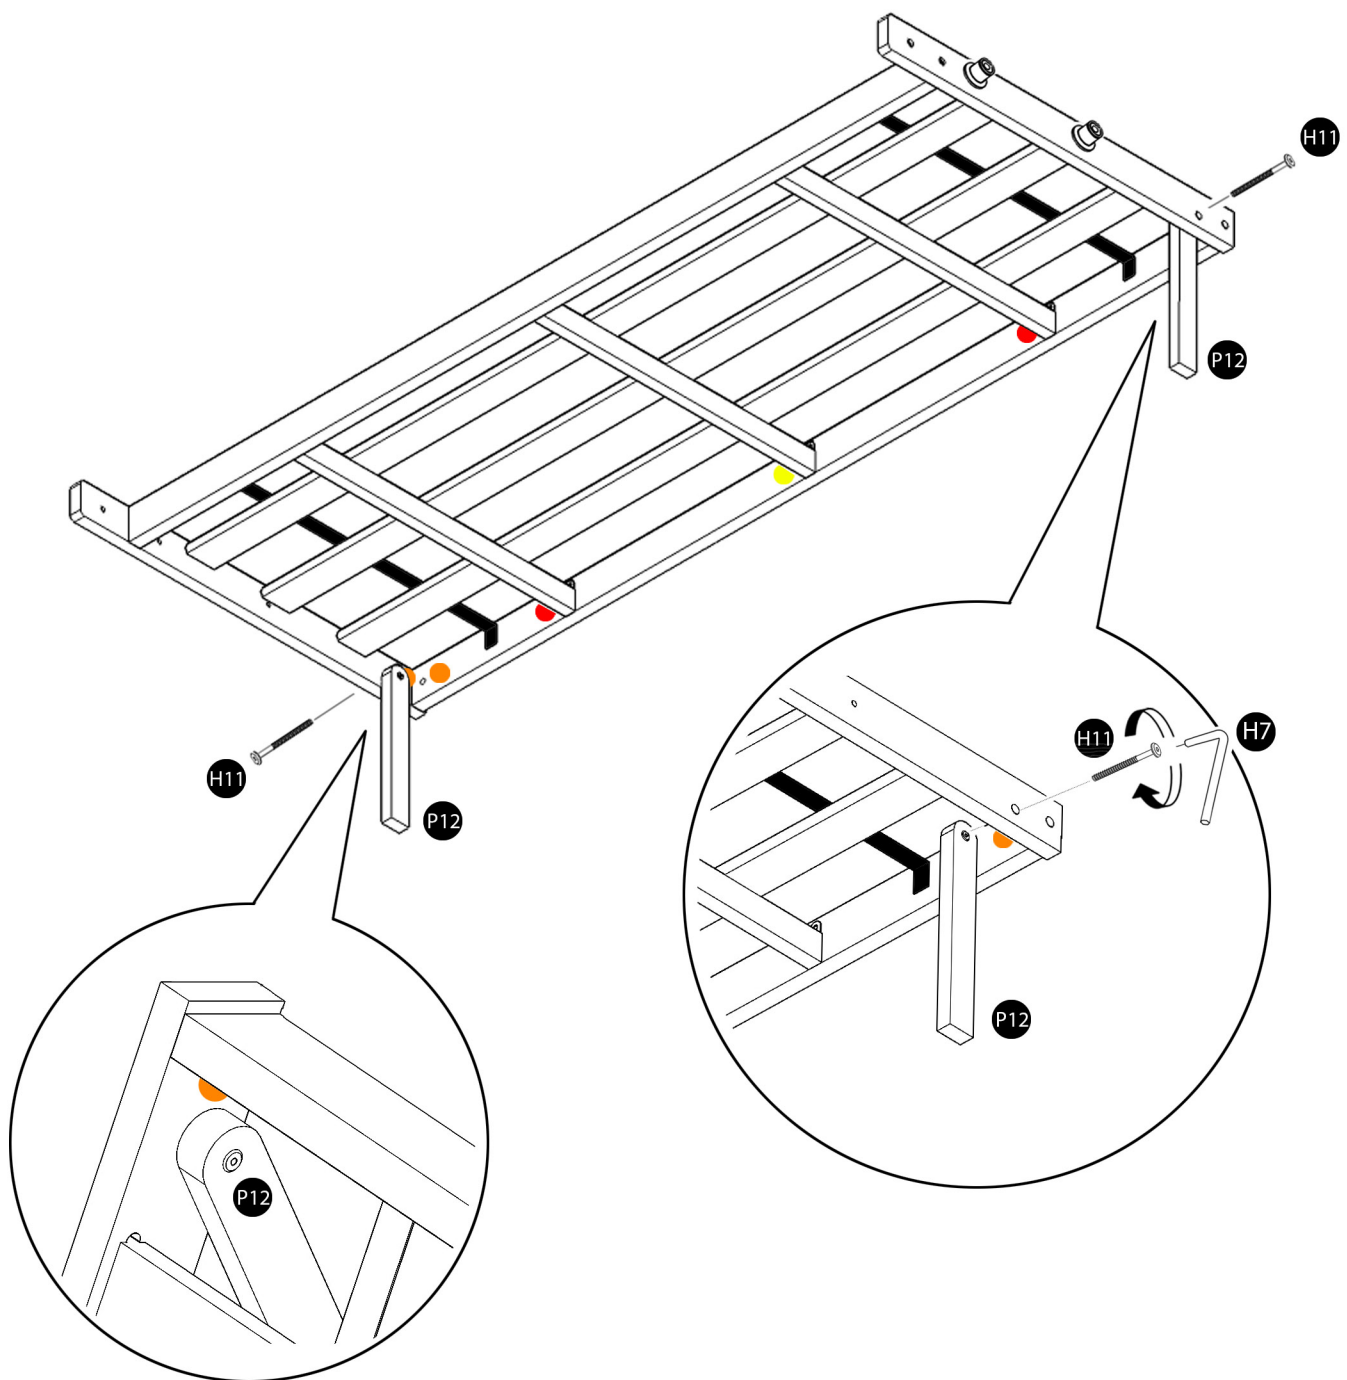


These parts are for a QUEEN SIZE FRAME ONLY

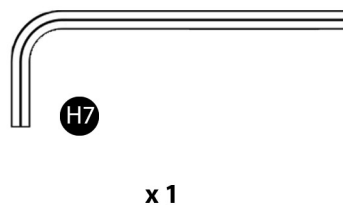


**Step 5:** Locate parts P5, P8(2), & P7


Use colored dots to align parts for connection.

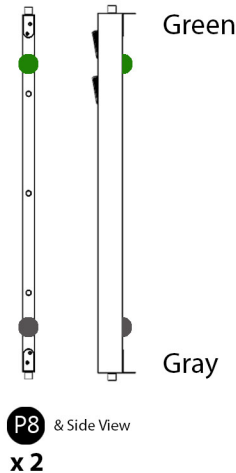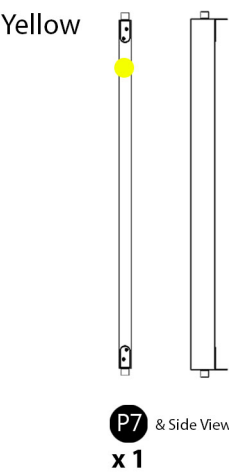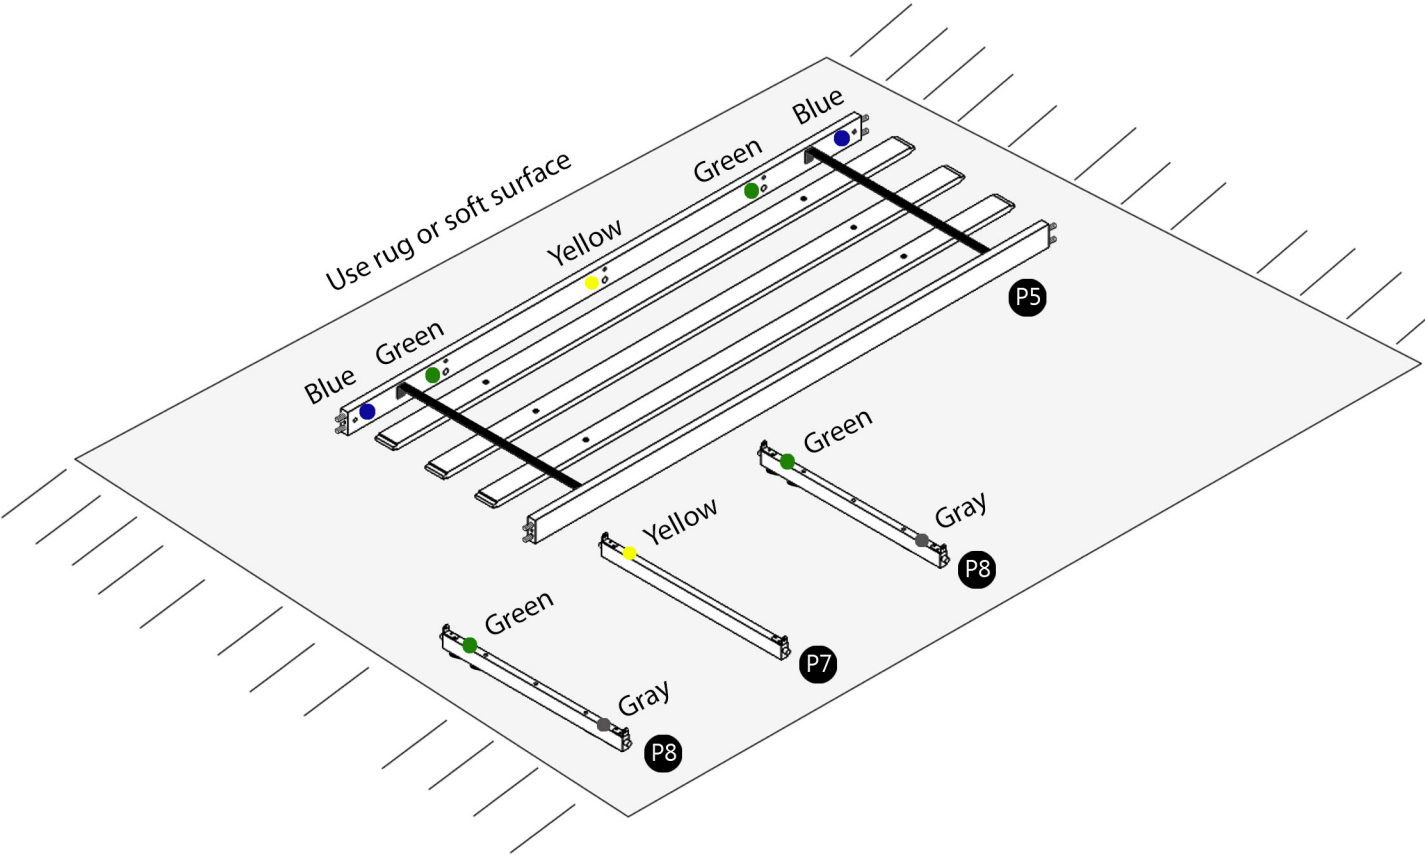

**Step 6:** Attach P7 and P8(2) to P5 with hardware as shown

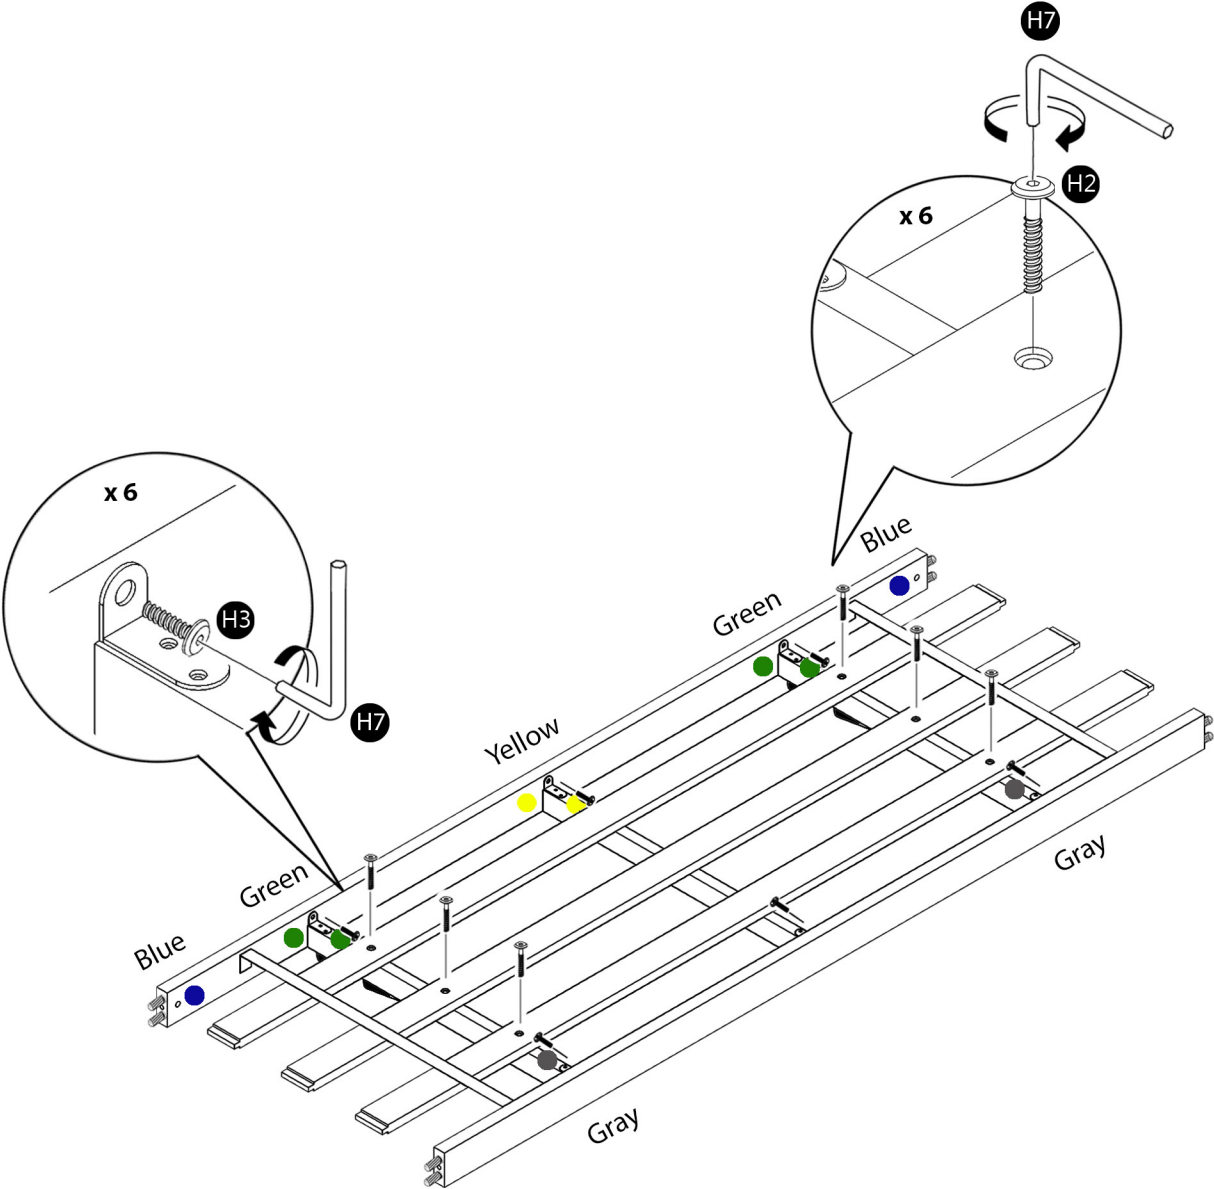


Loosely attach H2 and H3 bolts.

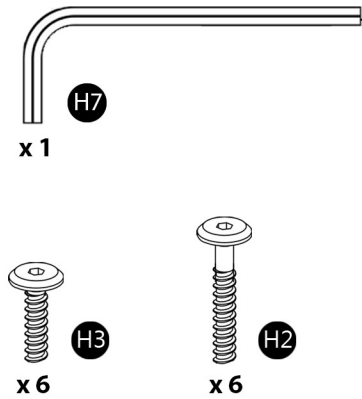


# Step 7: Attach P4 & P6 to seat deck P5



Use colored dots to align parts for connection.

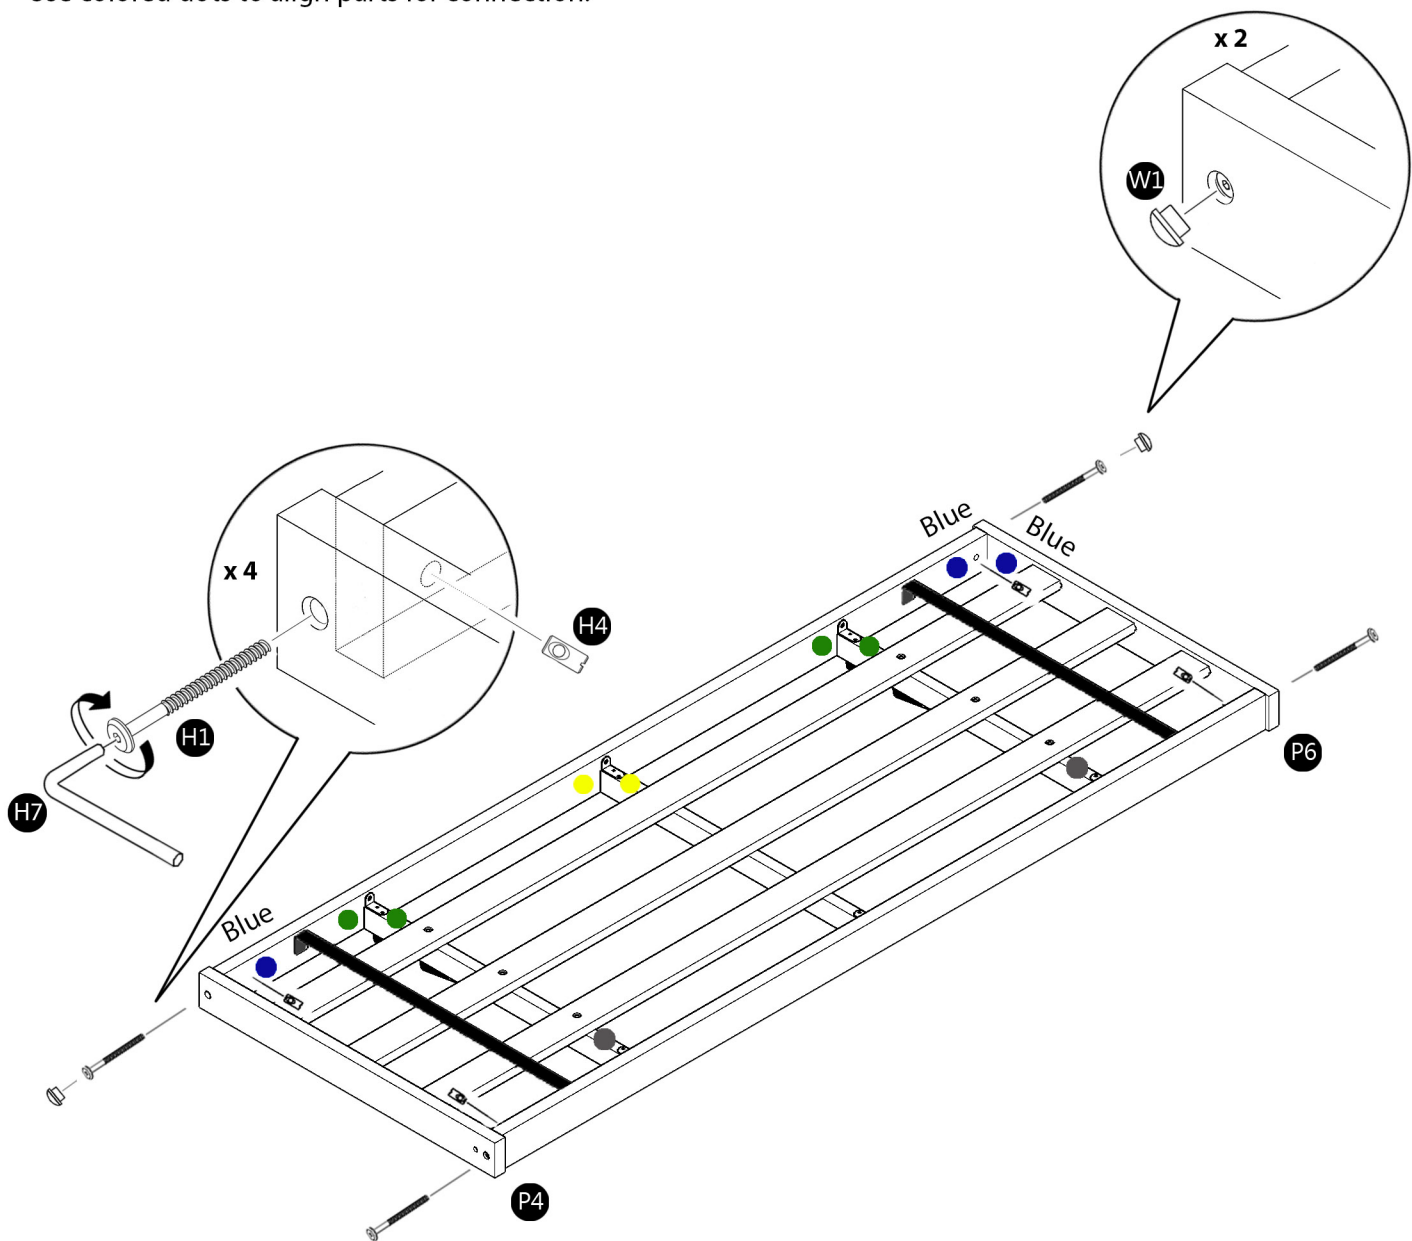

All bolts can be tightened at this point.

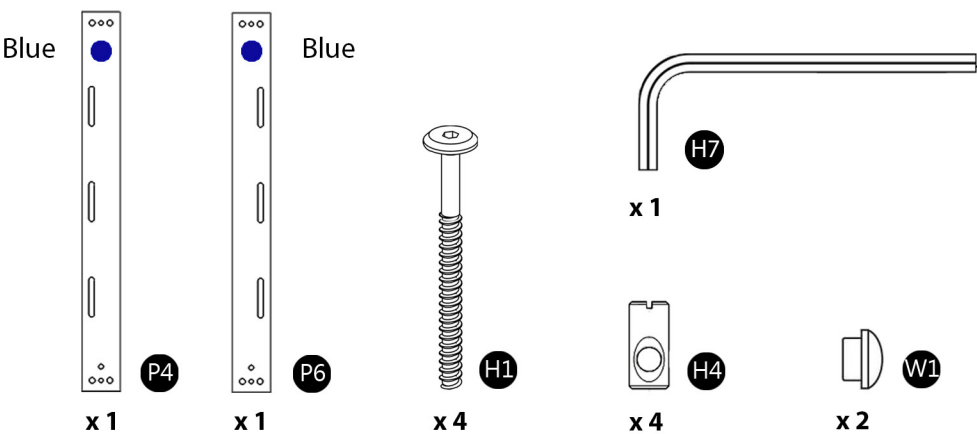

**Step 8:** Connect the fully assembled seat and back decks using hardware H5 (x2) as shown below

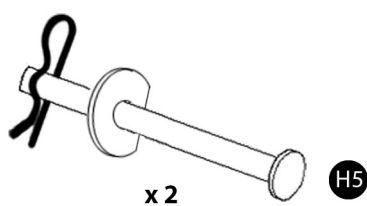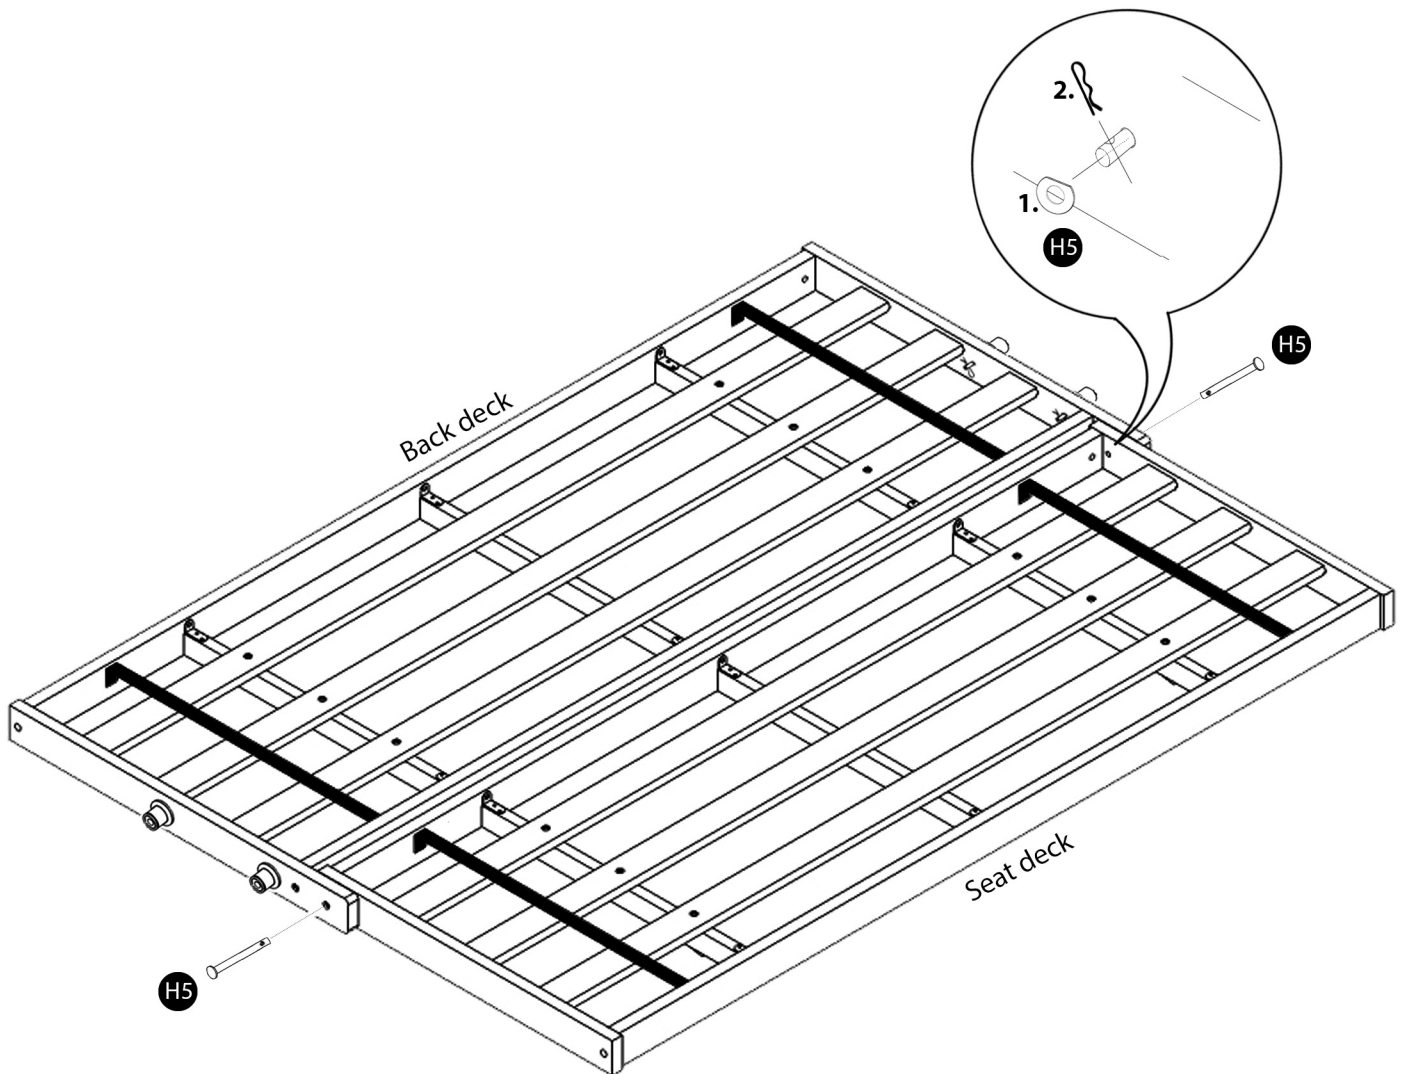


# Assembly Checklist


Please make sure that you have all of the below items before you start. If any are missing, please contact us for a replacement.



## Monterey arms

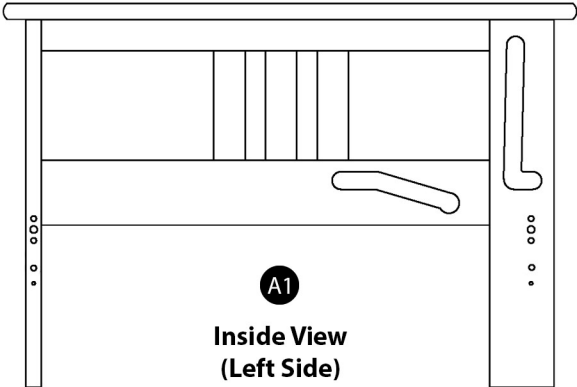


**A1**  
Inside View  
(Left Side)

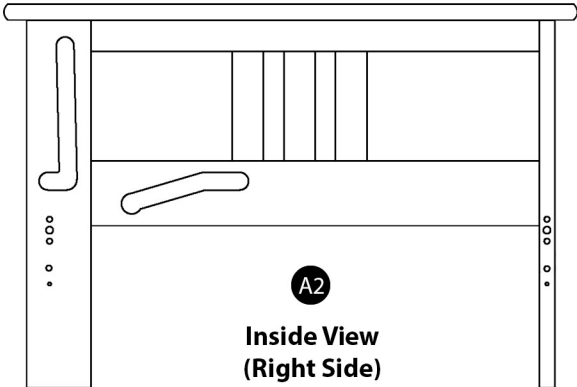

**A2**  
Inside View  
(Right Side)

## Hardware supplied for arm assembly



x 4



x 4



x 4




x 4



x 1




x 8

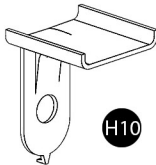


x 4



## Step 9: Locate 4 legs, parts A1 & A2

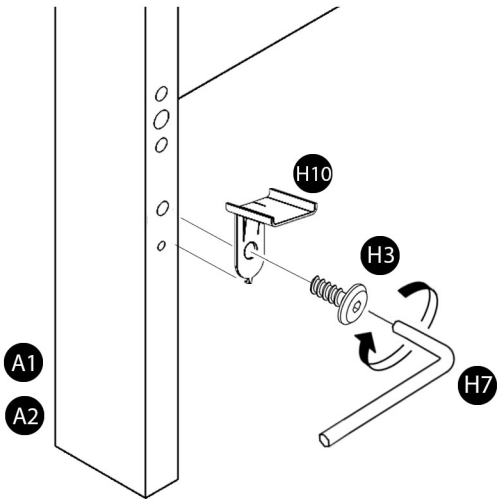

Do not tighten the bolts before finishing all steps.

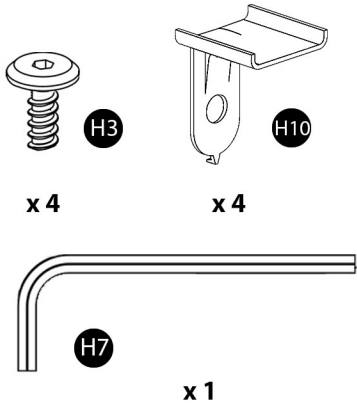


**Step 10:** Insert wood dowels (W2) into stretchers (P10) and (P11) as shown

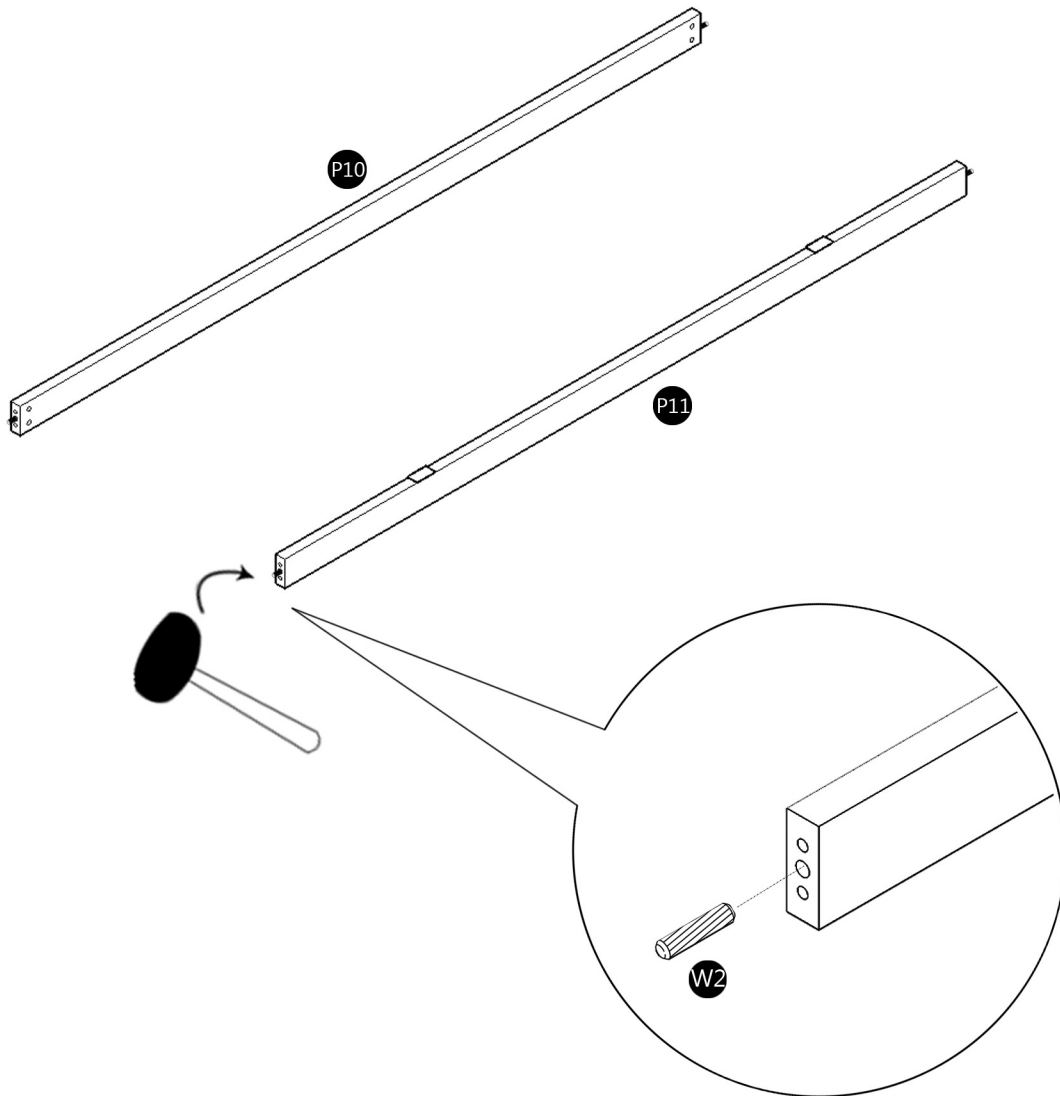

**x 4**

## Step 11: Attach P10 & P11 to A1 & A2 with hardware as shown

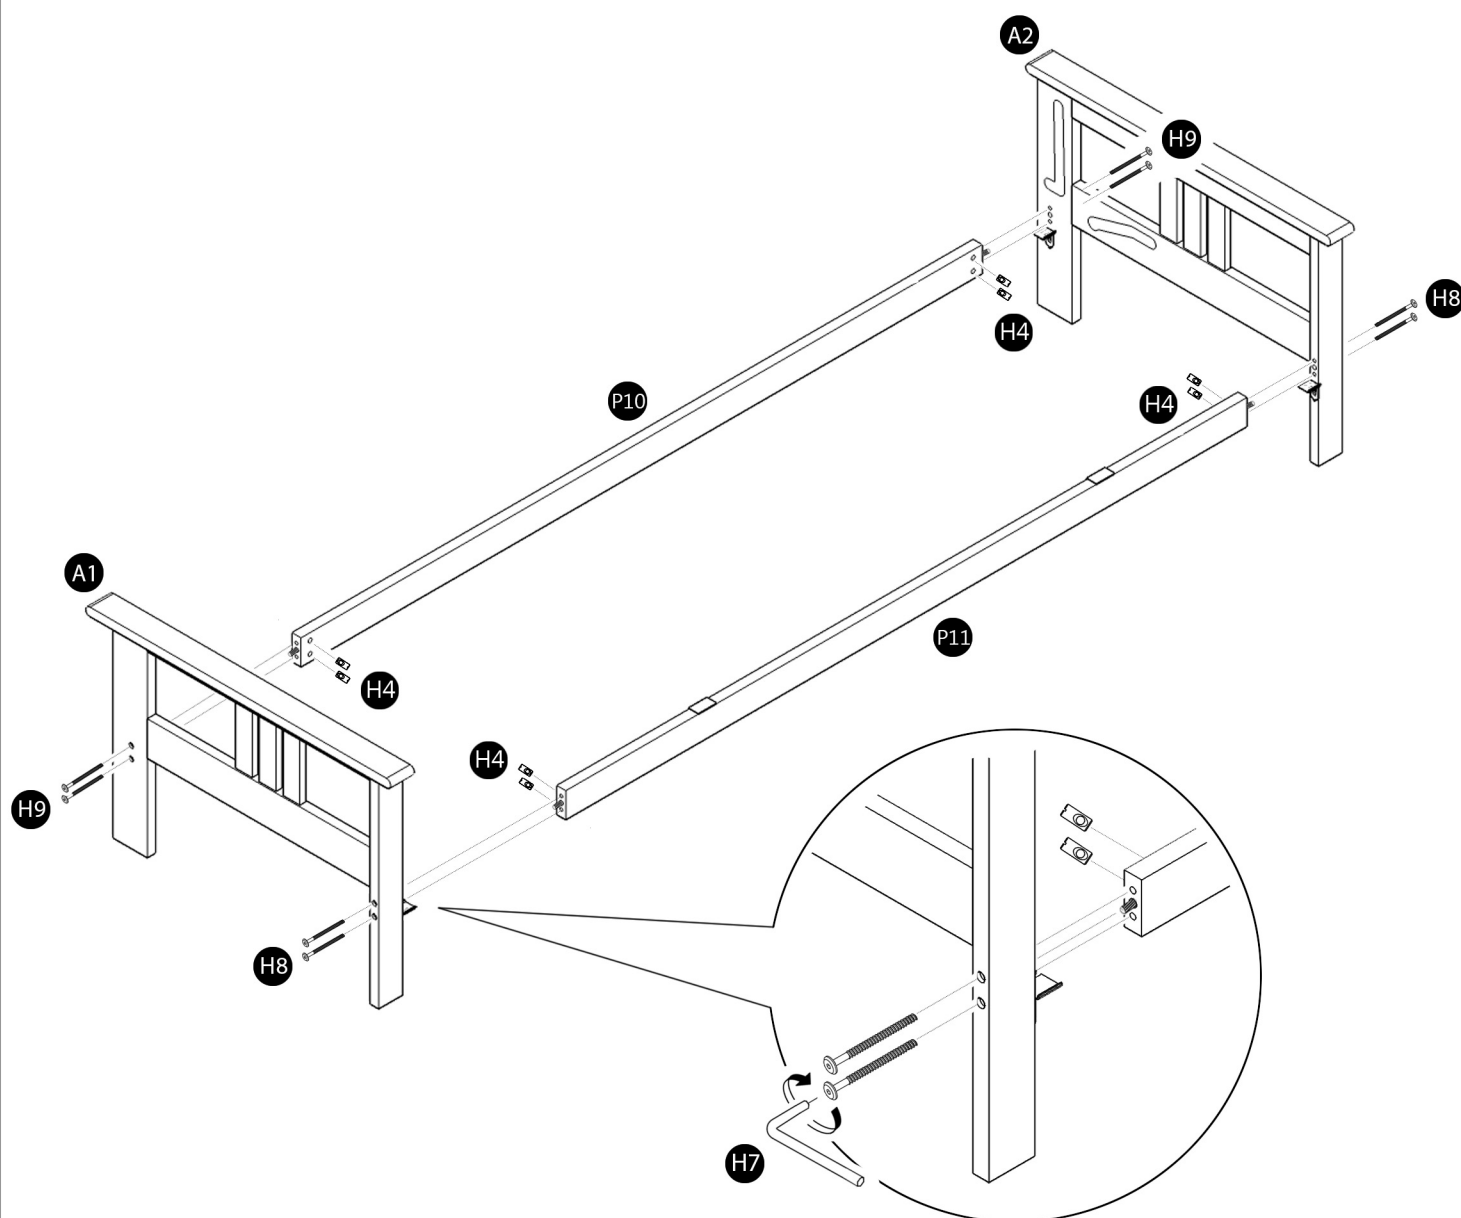


The bolts need to be very loosely attached at this point. Your arm may vary.



H8

x 4




H9

x 4



H4


x 8

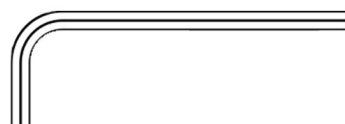


H7

x 1

**Step 12:** Align H6(4) into grooved out slots on A1 & A2.

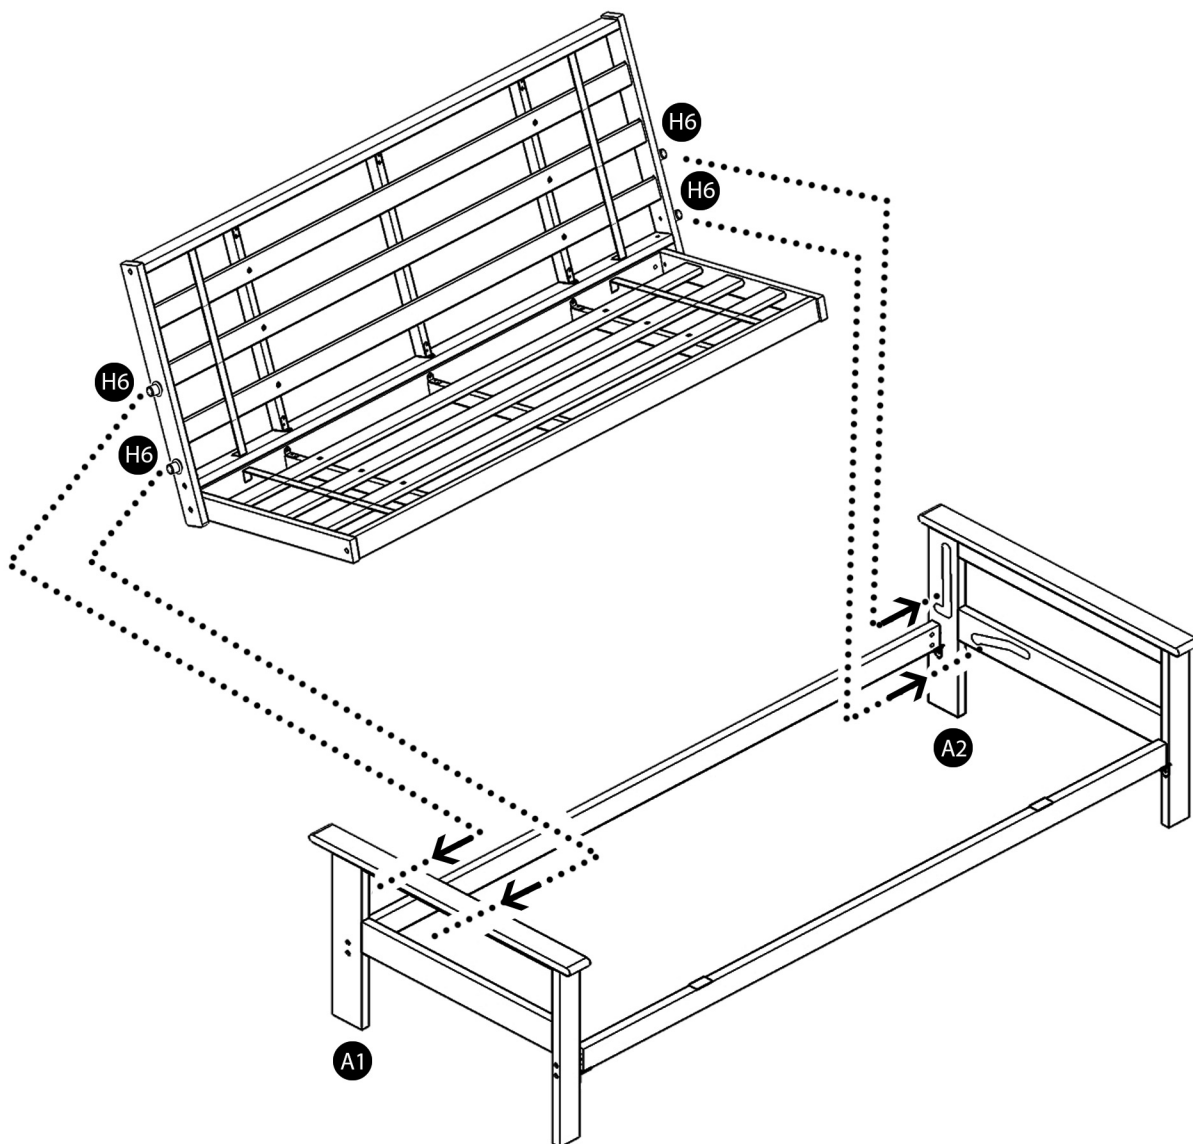


The bolts need to be very loosely attached at this point. Tighten all bolts after everything is in place.

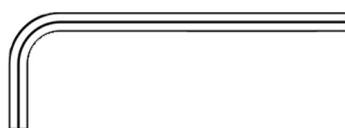


H7  
x 1

## Assembled views


Your arm may vary.

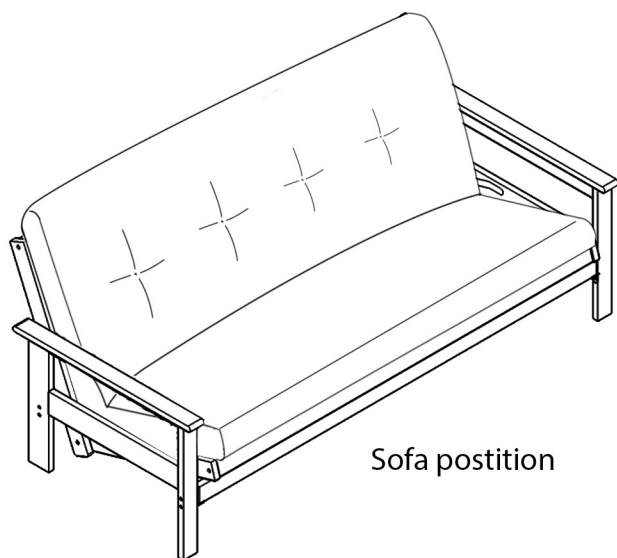


Sofa position

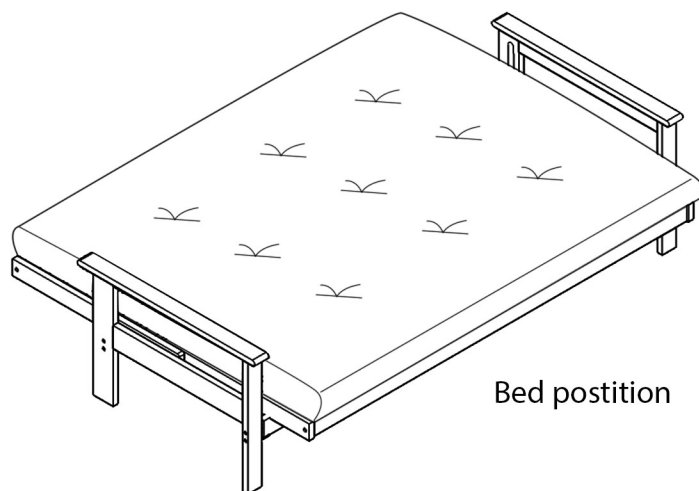

Bed position

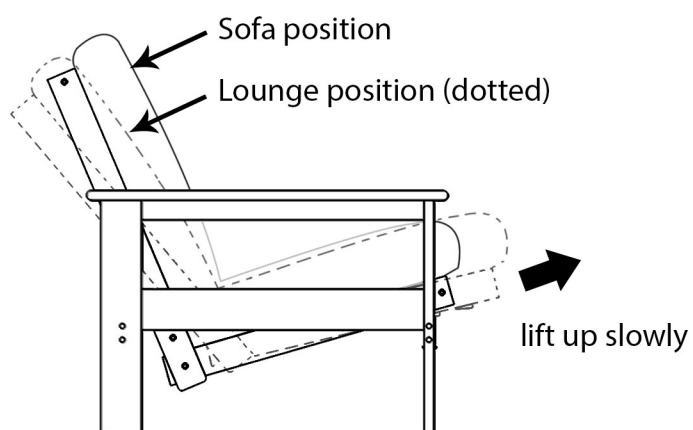

Sofa position to Lounge position.

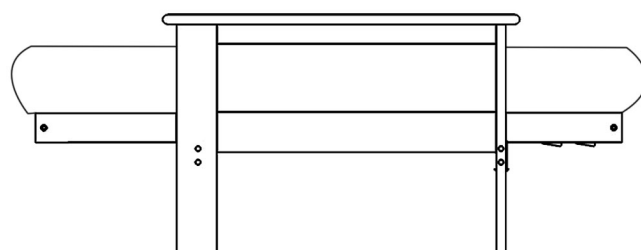

Bed position