



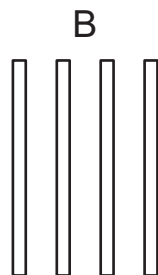

Side Table Forest Green Wash


JFD005

WHAT IN THE BOX

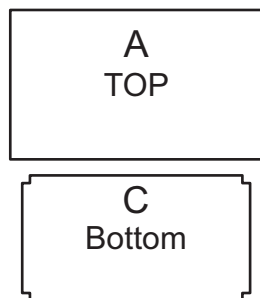

Allen Screws x8
Allen Key x1

ASSEMBLY PARTS

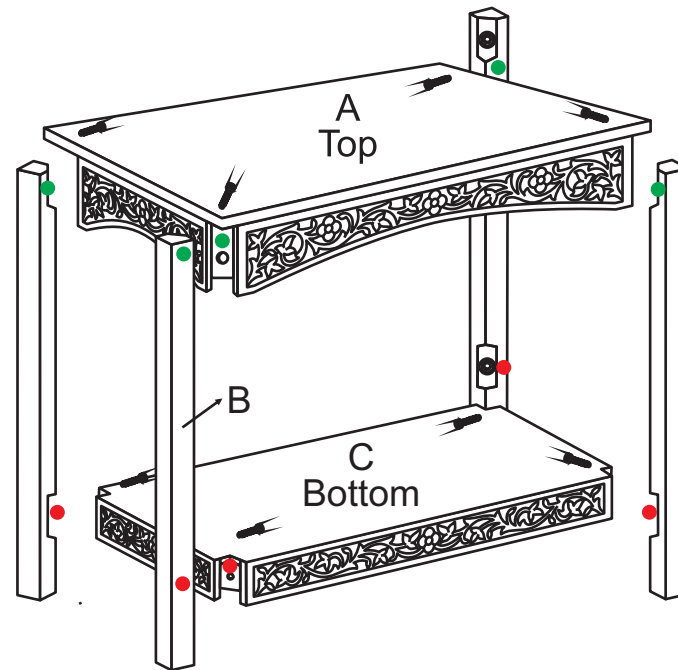

Step 1: Prepare the Top

Place Top (A) upside down on a soft, flat surface to prevent scratches.

Step 2: Attach the Legs

Position each Leg (B) under the matching corner of the Top.

Match the color-coded markings on the Top and Legs.

Insert 4 Allen Bolts through Top (A) into the pre-threaded insert inside each leg.

Tighten using the provided Allen Key Tool.

Step 3: Install the Bottom Shelf

Position Bottom Shelf (C) between the legs, slightly above the bottom ends at the designated bolt location.

Match the color-coded markings and align the corner holes with the lower threaded holes in the legs.

Insert 4 Allen Bolts from the bottom side into the pre-threaded inserts inside each leg.

Tighten securely using the Allen Key Tool.

Step 4: Secure & Check

Ensure all 8 Allen Bolts are fully tightened.

Confirm the unit is level and stable before use.