
TV Stand

Assembly Instructions - Please keep for future reference | CTS012-1J8A1

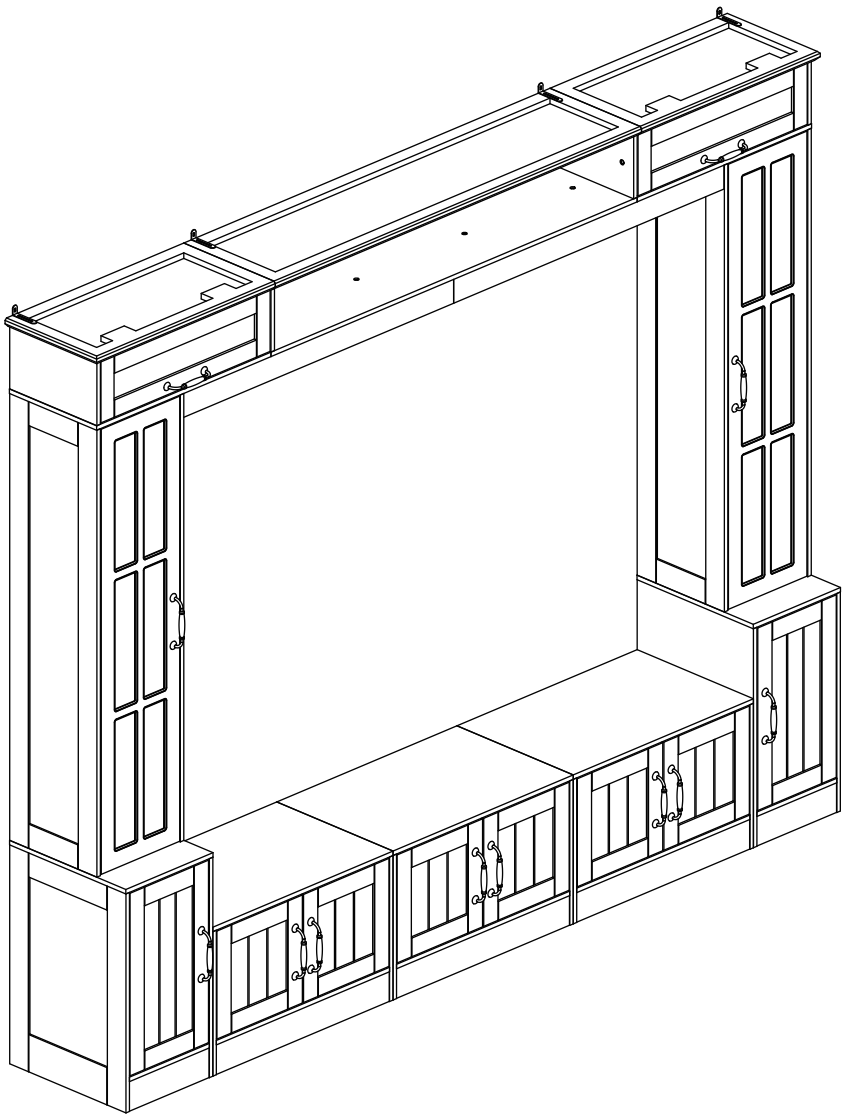


Dimensions

Width - 98 inch
Depth - 15.7 inch
Height - 79 inch

Any question please feel free to contact us:
support@amer-life.com TEL:(901) 347-2181
We will provide further assistance within 24 hours.

Important – Please read these instructions fully before starting assembly

Issue 3 - 06/11/2025

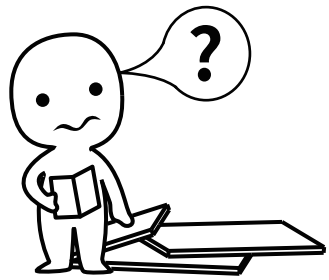


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.




AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

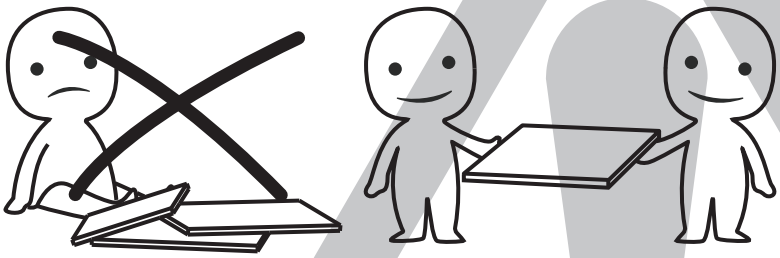

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

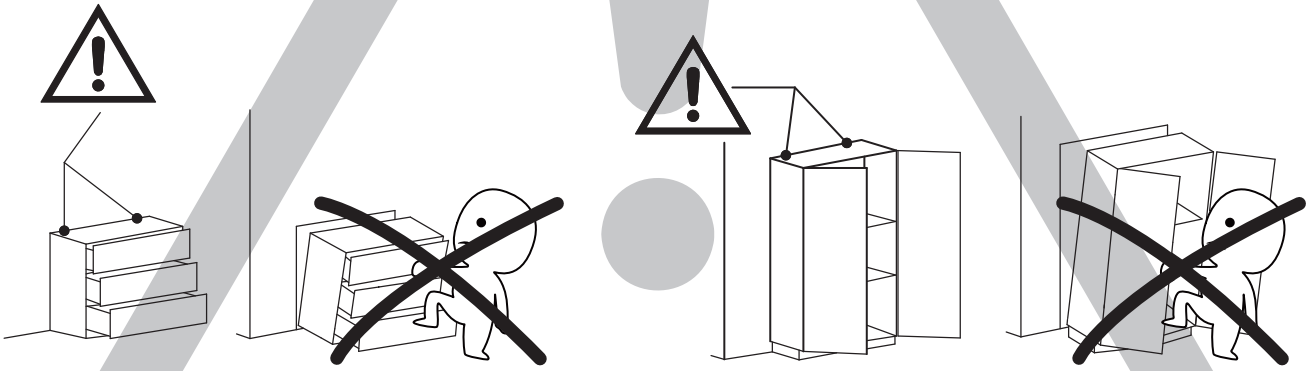

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is comKlete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly .

WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type
























Seller's Notice:

Our product is packed in separate boxes as shown below, and they might be shipped in different batches. Please wait until you received all the boxes then start the assembly.

















Noted：Assembly instruction is only provided in Box2.

The following is the list of components contained in Box1 & Box2.

The Box 1 Part List

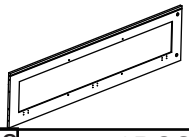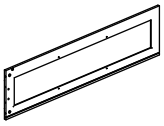
5 1PC 	6 1PC 	7 1PC 	8 1PC 	9 2PCS 	10 2PCS 
11 1PC 	12 1PC 	15 1PC 	16 1PC 	17 1PC 	18 1PC 
19 1PC 	20 1PC 	21 1PC 	22 1PC 	23 1PC 	25 2PCS 
26 2PCS 	30 2PCS 	32 2PCS 	39 3PCS 	40 4PCS 	41 3PCS 

The Box 2 Part List

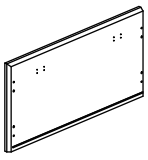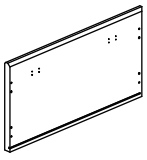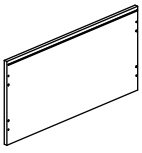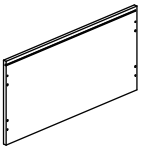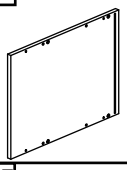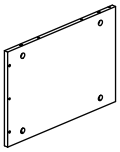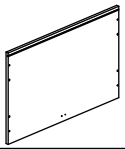
1 1PC 	2 1PC 	3 1PC 	4 1PC 	13 1PC 	14 1PC 
24 4PCS 	27 2PCS 	28 2PCS 	29 2PCS 	31 2PCS 	33 1PC 
34 1PC 	35 1PC 	36 1PC 	37 3PCS 	38 3PCS	40 2PCS
42 3PCS	43 3PCS	**Fittings Box**			

Componets - Panels


Please check you have all the panels listed below

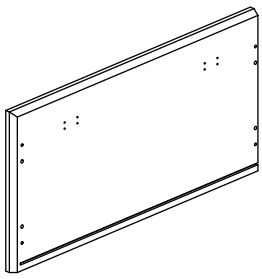


1 (615*315*24mm x1)

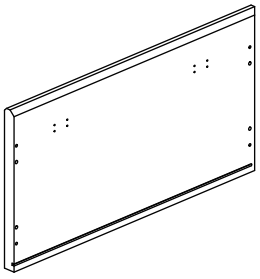


2 (615*315*24mm x1)

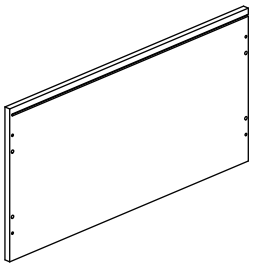


3 (600*300*12mm x1)

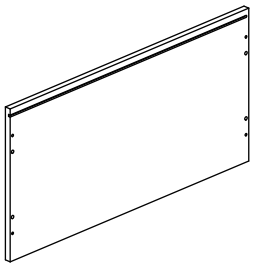


4 (600*300*12mm x1)

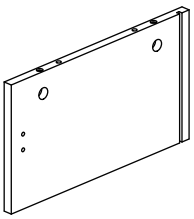


5 (300*170*12mm x1)

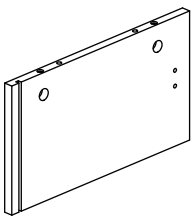


6 (300*170*12mm x1)

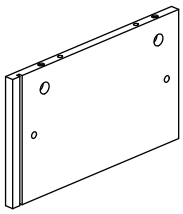


7 (280*170*12mm x1)

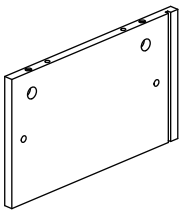


8 (280*170*12mm x1)

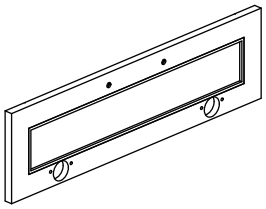


9 (582*164*15mm x2)

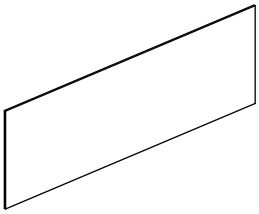


10 (582*178*3mm x2)

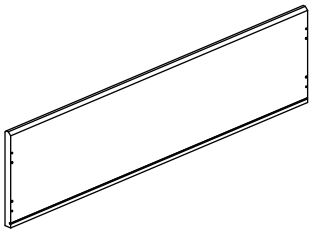


11 (1260*315*24mm x1)

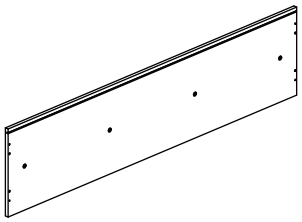


12 (1260*300*12mm x1)

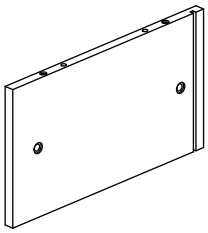


13 (300*170*12mm x1)

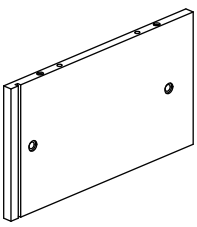


14 (300*170*12mm x1)

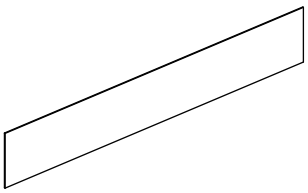


15 (1243*178*3mm x1)

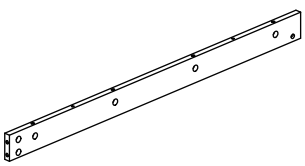


16 (930*65*15mm x1)

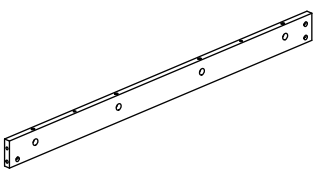


17 (930*65*15mm x1)

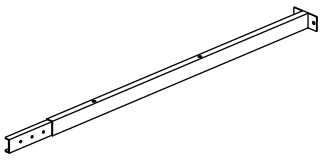

18 (1050*80*40mm x1)

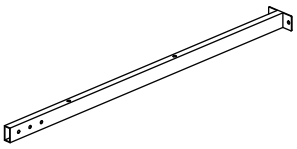


19 (960*80*40mm x1)

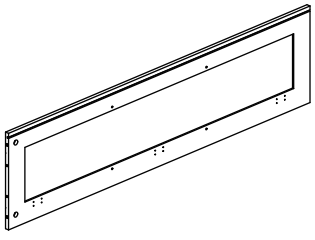


20 (1200*300*12mm x1)

Componets - Panels


Please check you have all the panels listed below

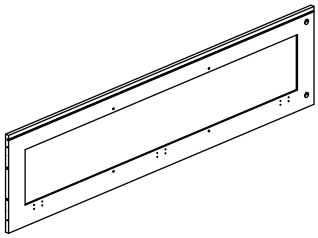


21 (1200*300*12mm x1)

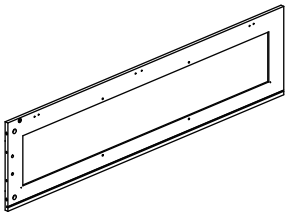


22 (1200*300*12mm x1)

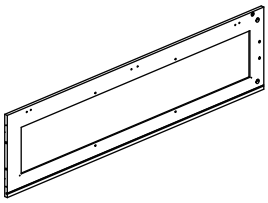


23 (1200*300*12mm x1)

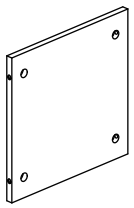


24 (275*268*12mm x4)

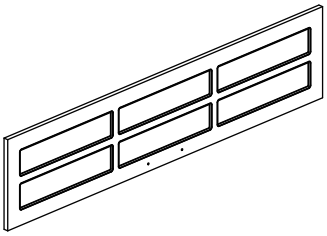


25 (1195*270*14mm x2)

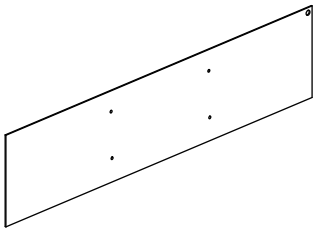


26 (1208*282*3mm x2)

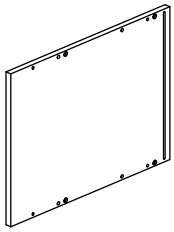


27 (400*300*12mm x2)

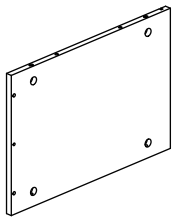


28 (400*275*12mm x2)

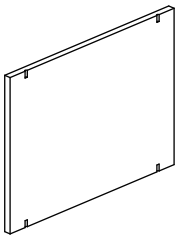


29 (367*273*12mm x2)




30 (275*80*12mm x2)

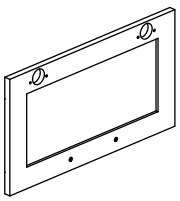


31 (490*270*15mm x2)

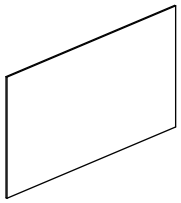


32 (503*282*3mm x2)

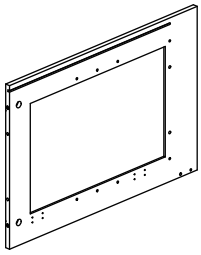


33 (588*400*12mm x1)

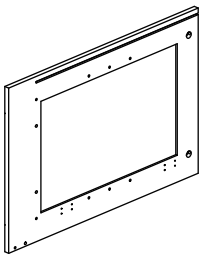


34 (588*400*12mm x1)

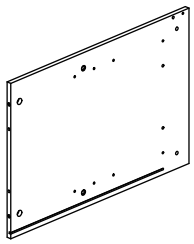


35 (588*400*12mm x1)

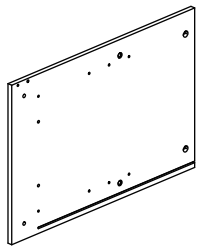


36 (588*400*12mm x1)

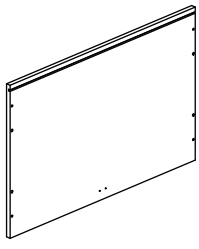


37 (620*400*12mm x3)

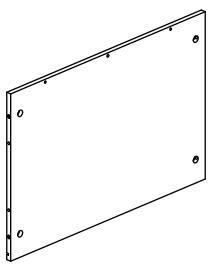

38 (596*400*12mm x3)

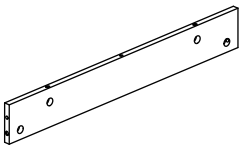


39 (596*80*12mm x3)

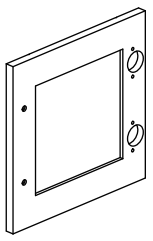


40 (294*290*15mm x6)

Componets - Panels


Please check you have all the panels listed below

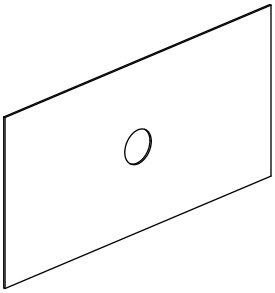

41 (602*302*3mm x3)

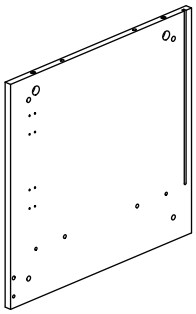

42 (388*400*12mm x3)











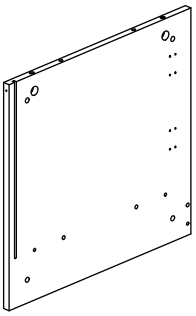


43 (388*400*12mm x3)


Componets - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.


A  6*30mm Wooden Dowel x 103	B  6*35mm Cam Bolt x 102	C  Cam Lock x 104
D  6.5*60mm Cam Bolt x 2	E  3.5*12mm Screw x 156	F  2.5*10mm Screw x 16
G  4*40mm Screw x 20	H  4*16mm bolt x 24	I  x 12
J  x 4	K  x 32	L  x 1
M  x 1	N  x 26	O  x 8
P  x 9	Q  x 8	R  x 8
S  6*45mm Bolt x 6	T  6*12 mm Bolt x 20	U  Nut x 4
V  7.8*18mm Bolt x 24	W  7.8*12mm Bolt x 4	X  6*10 mm Bolt x 7
Y  x 2	Z  x 2	a  3*12mm Screw x 4
		b  x 1

Tools required



Phllips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws






The screws length is measured from the head to the point (30mm screw shown).

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

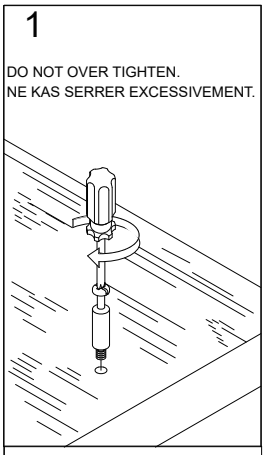

Step 2


Push the male camlock into the entry hole.

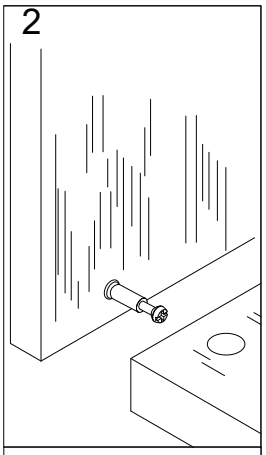

Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

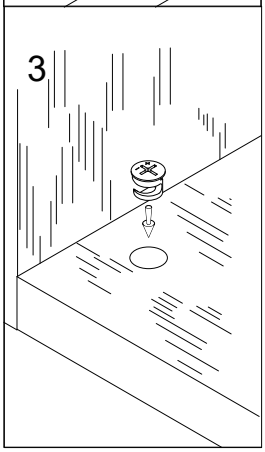


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

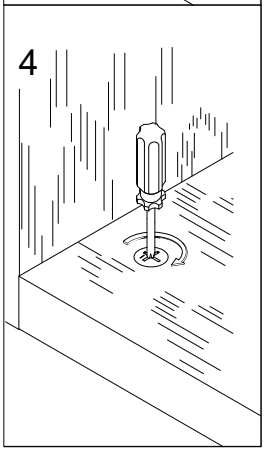


Assembly Instructions

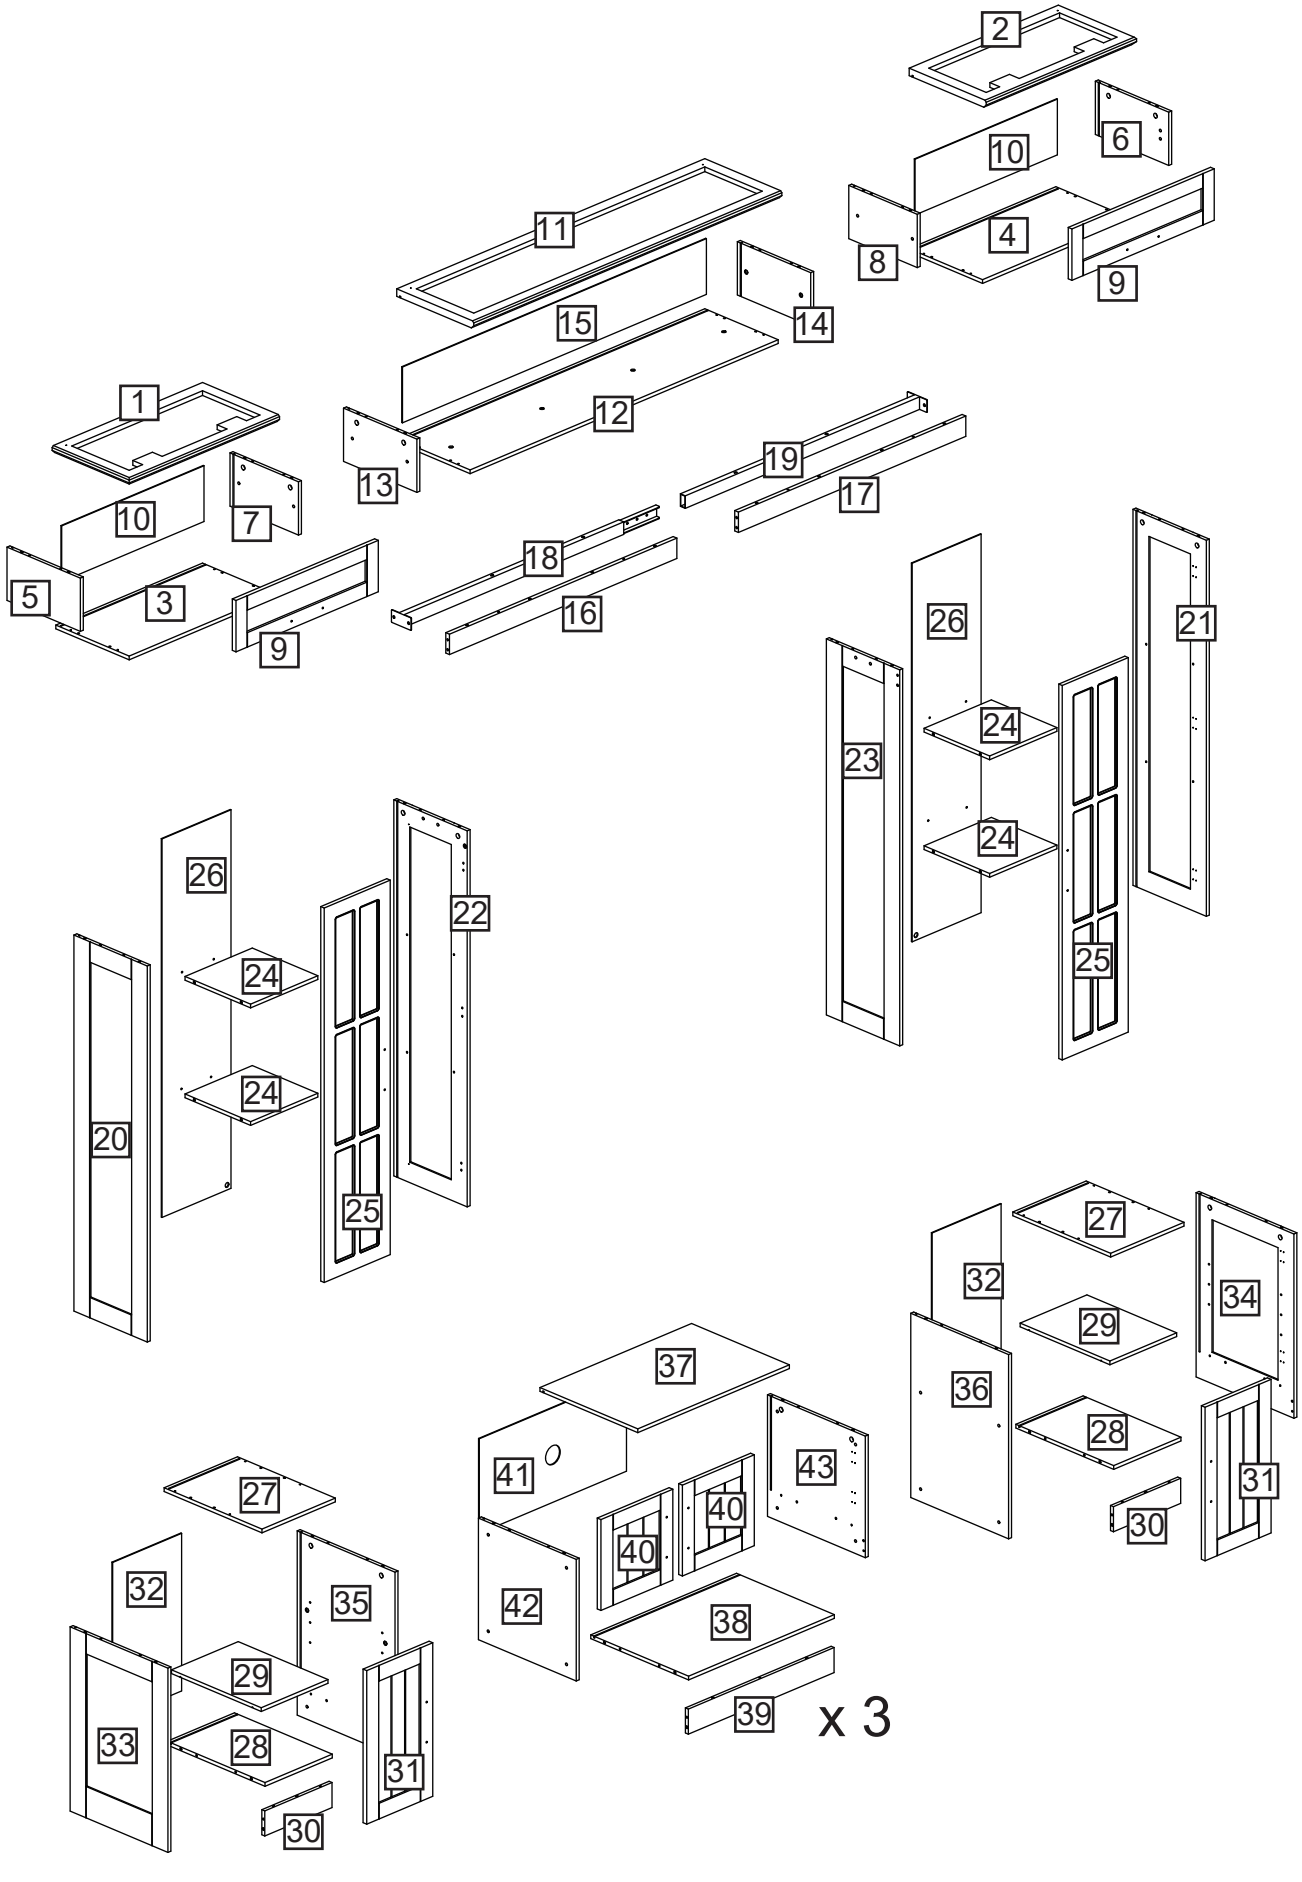


Assembly Instructions

Step 1

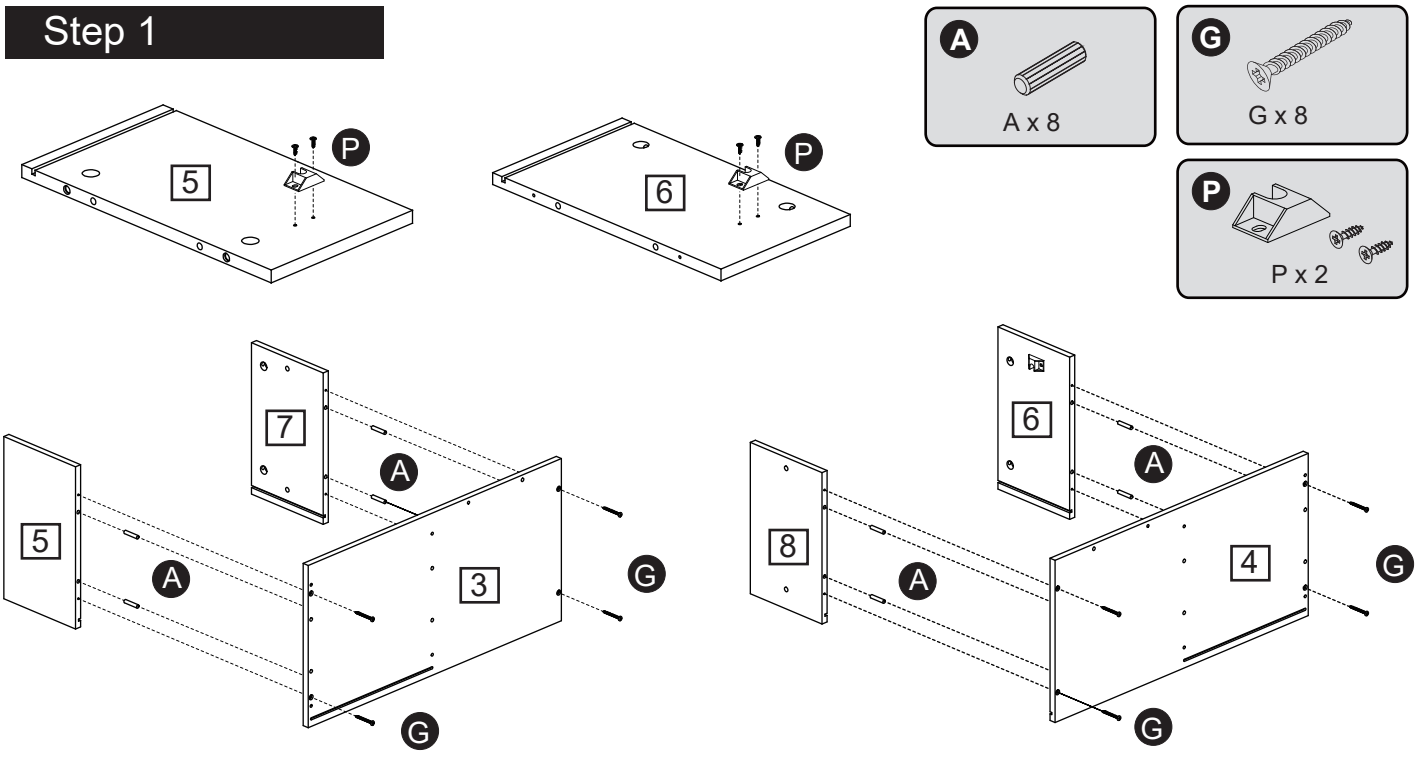


Step 2

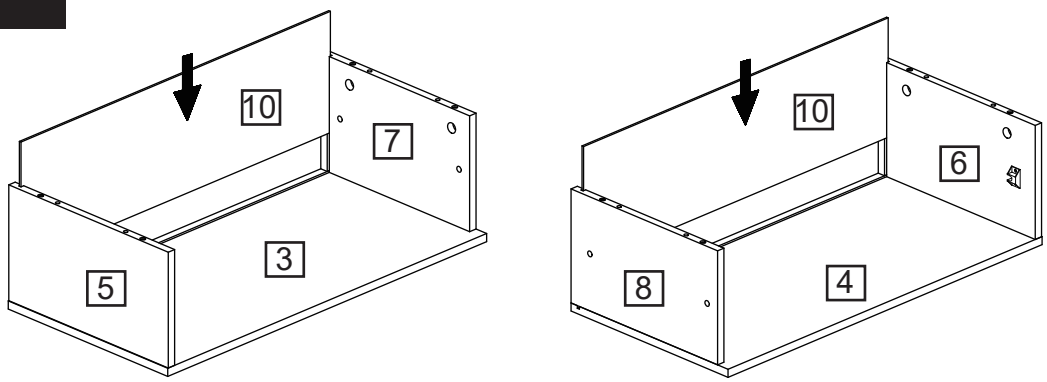


Step 3


CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

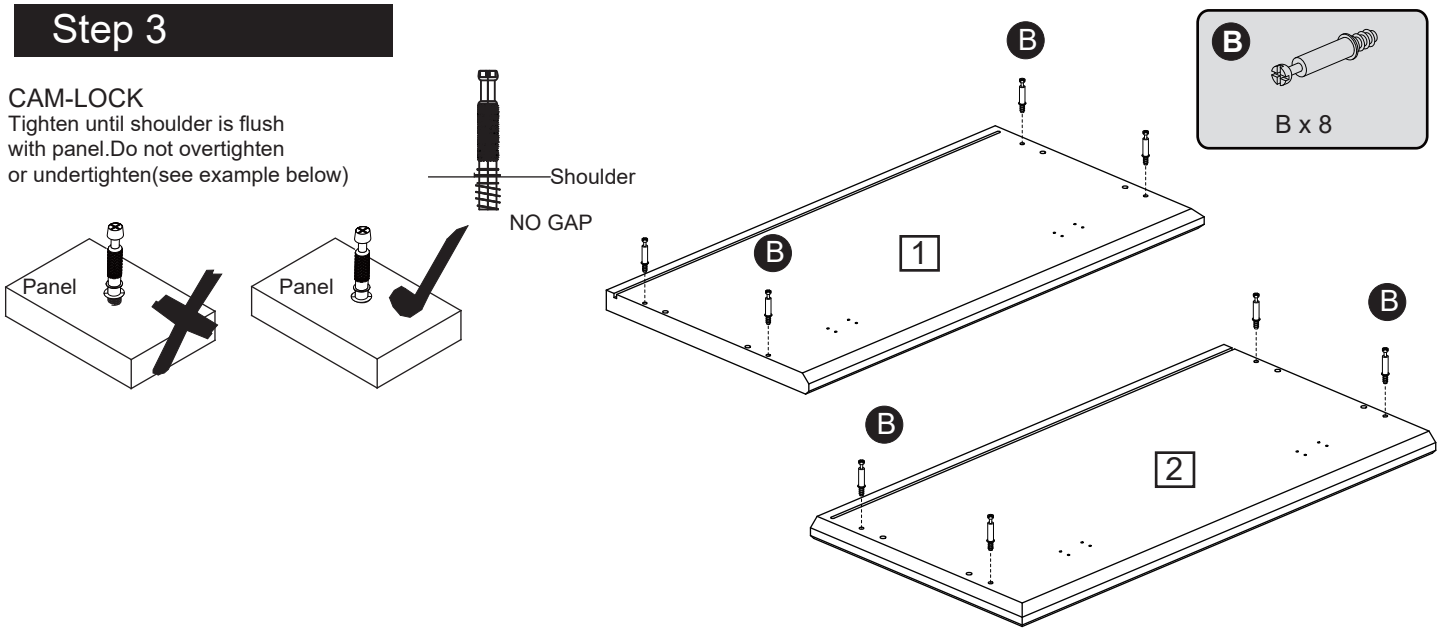



Assembly Instructions


Step 4

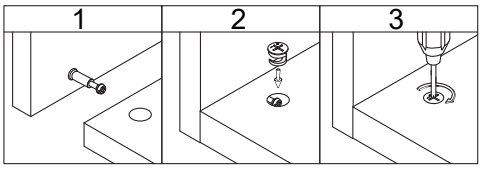

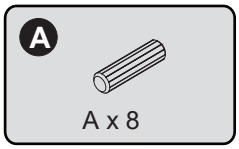


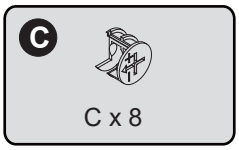

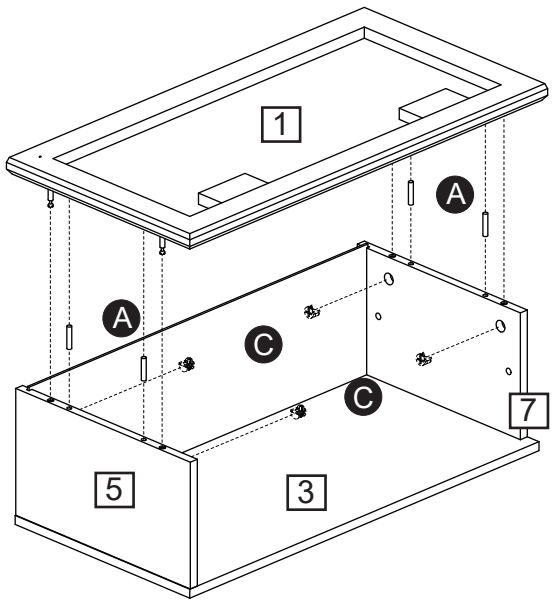


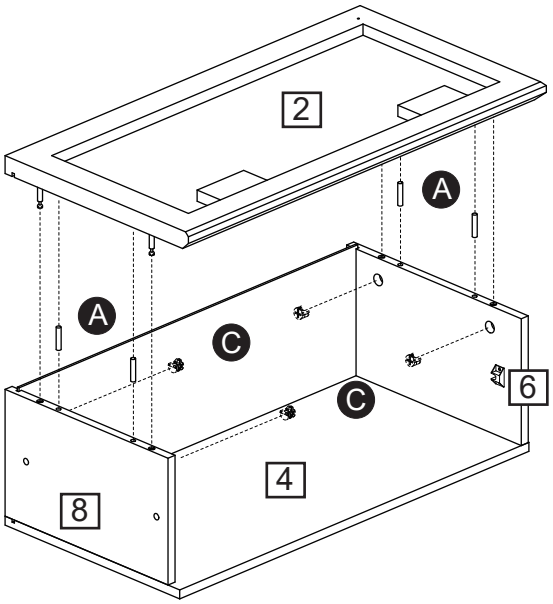



Step 5

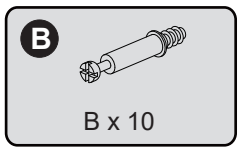


CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

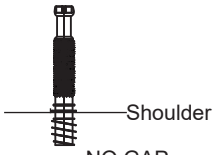

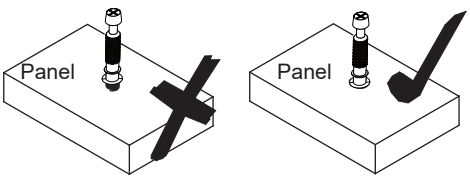

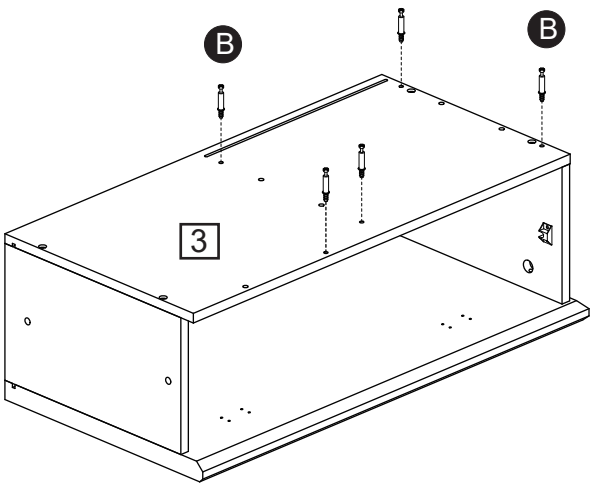


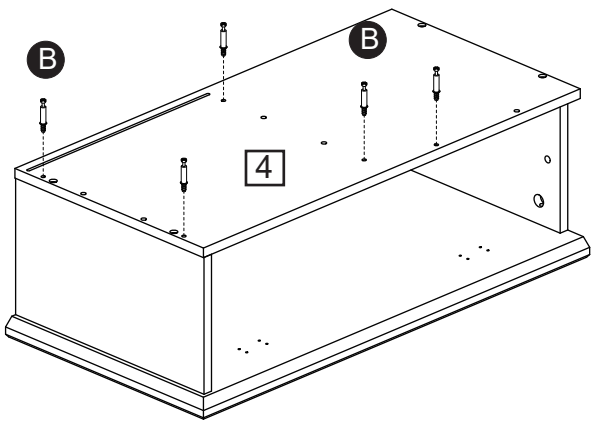


Assembly Instructions


Step 6


Do not fully tighten wall fixing brackets until it's ready to be fixed to the wall.

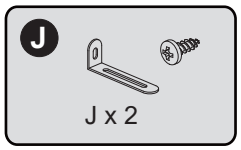


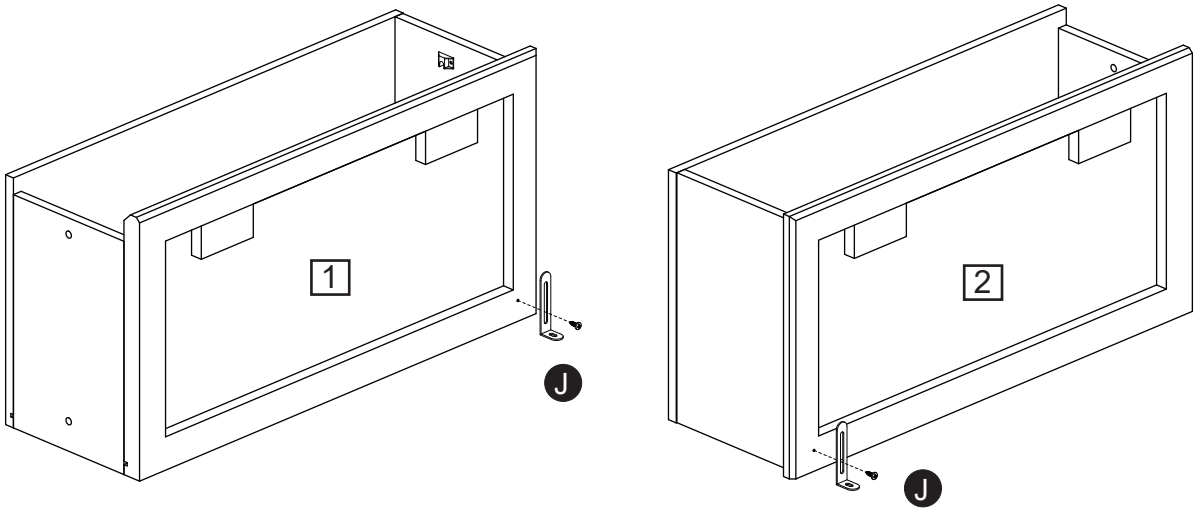


Step 7

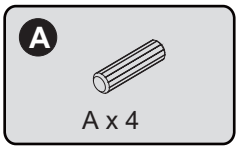

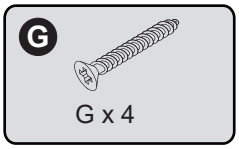

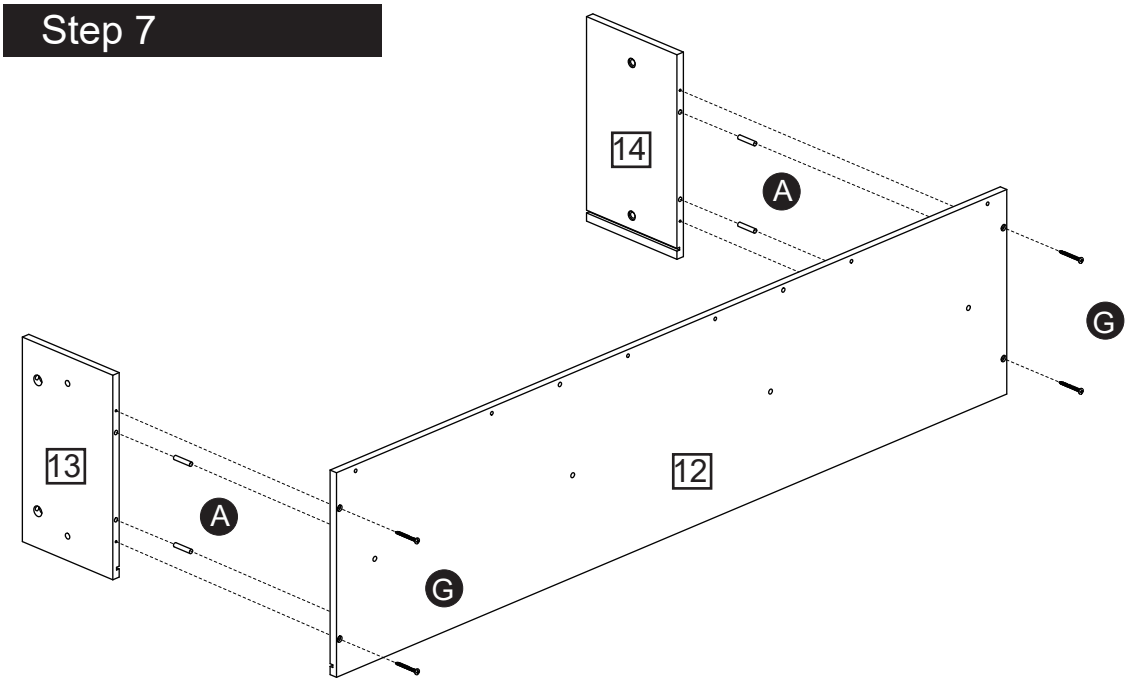


Step 8

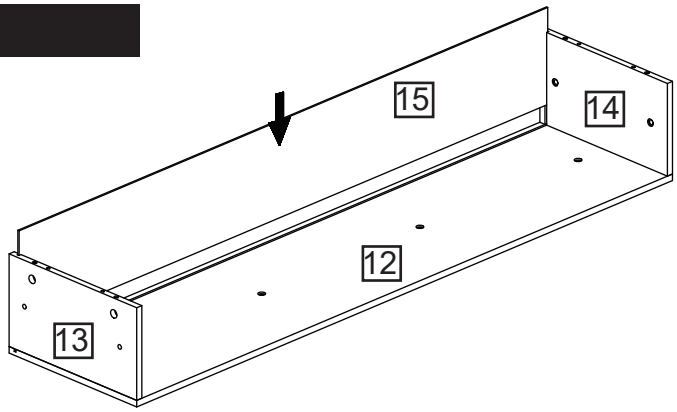


Assembly Instructions


Step 9


CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

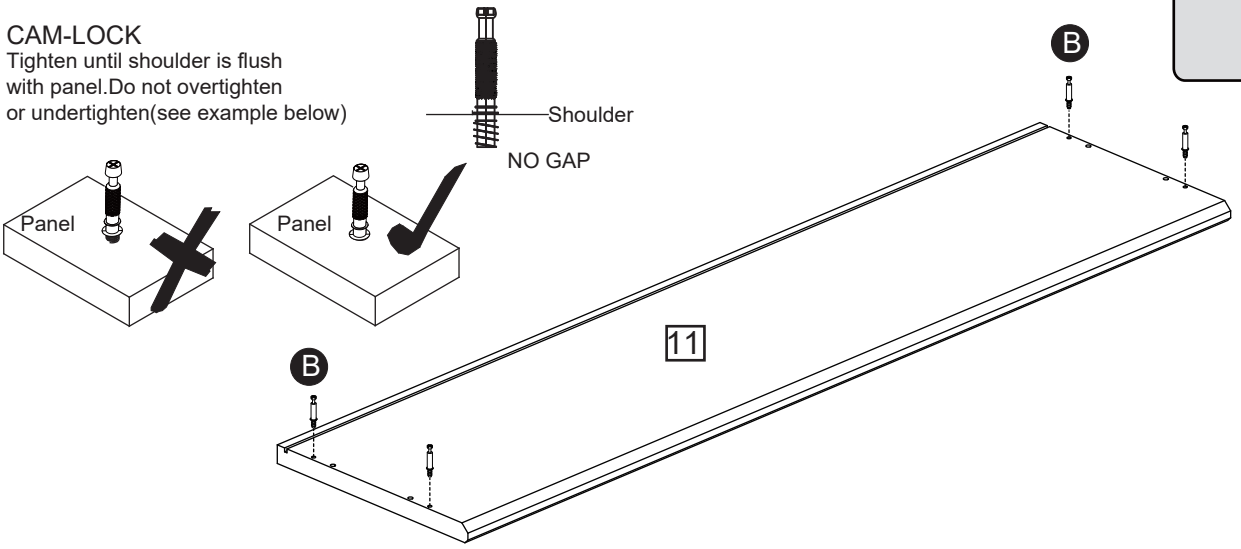


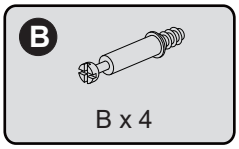

Step 10

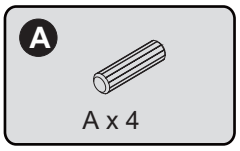

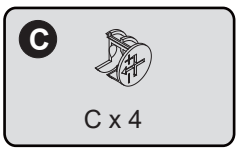


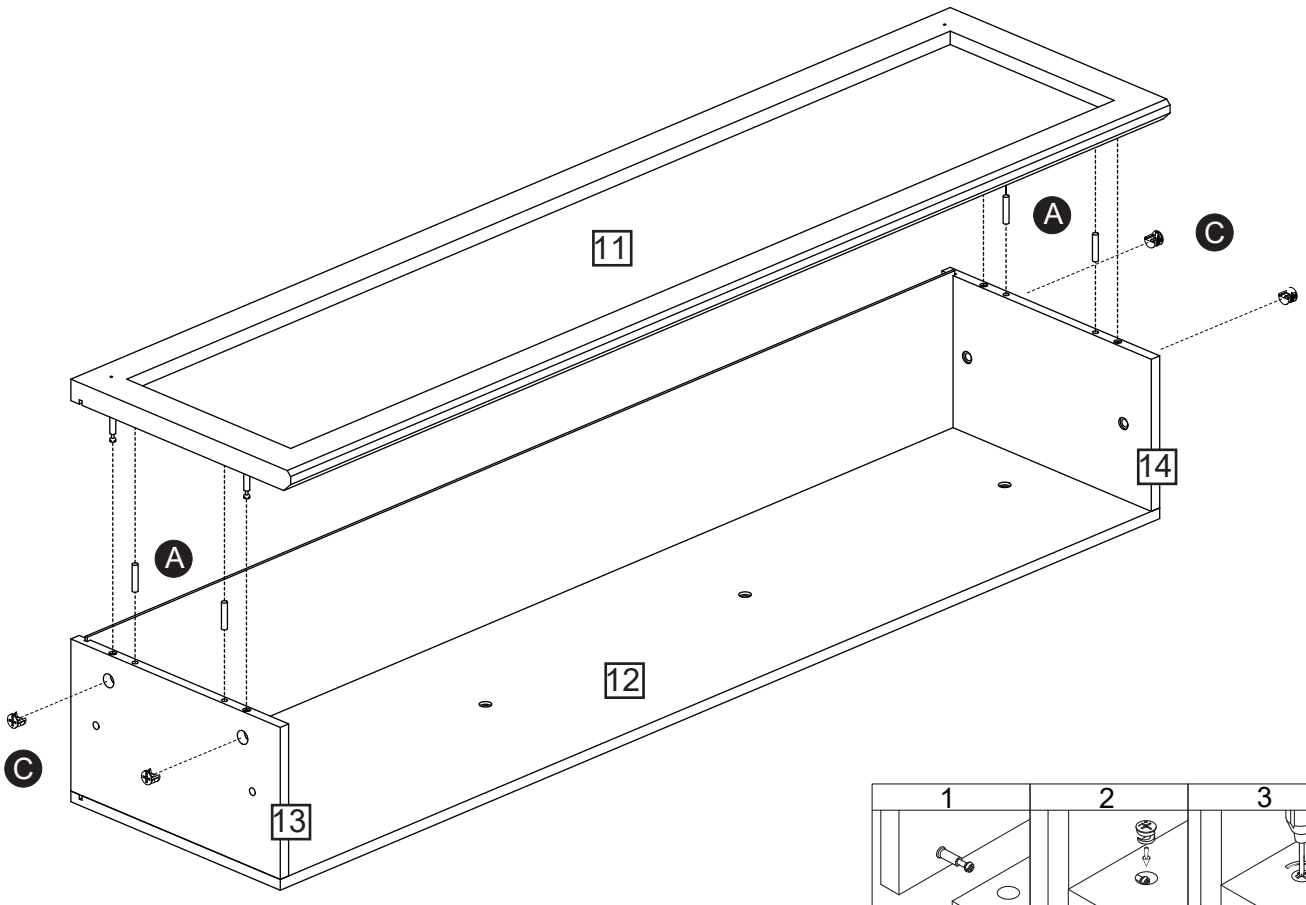



Assembly Instructions


Step 11

CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

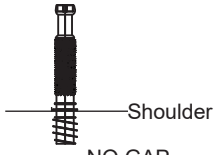

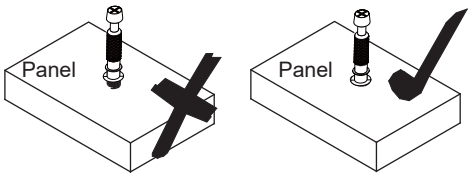


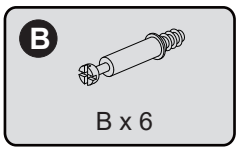


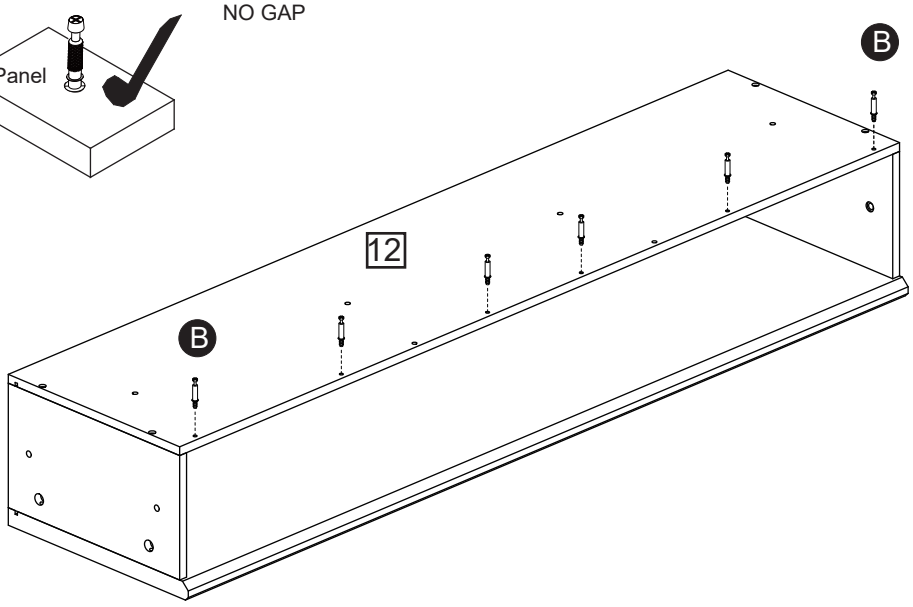

Step 12


Do not fully tighten wall fixing brackets until it's ready to be fixed to the wall.

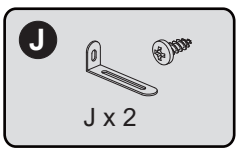

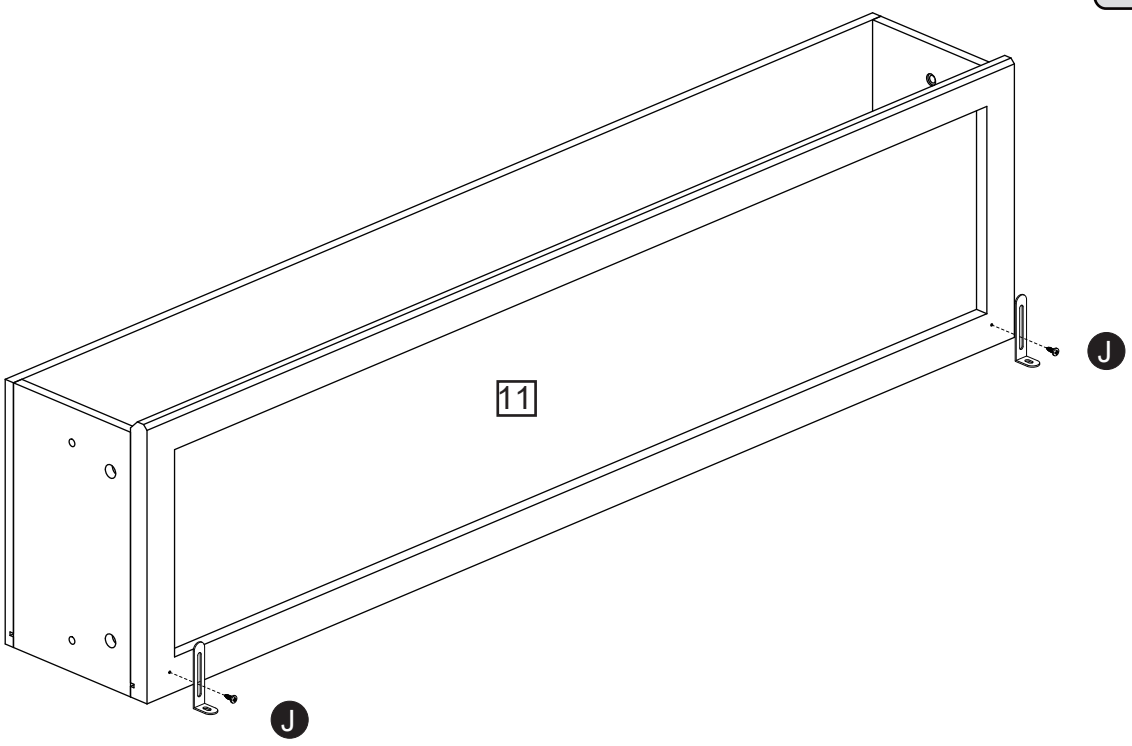



Assembly Instructions


Step 13

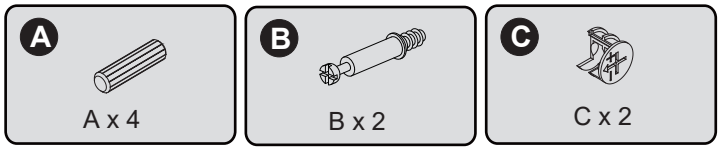


CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

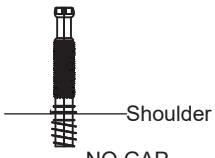


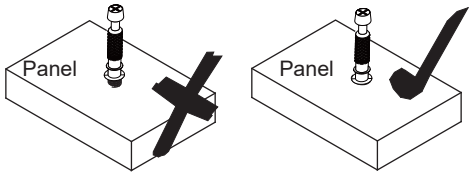

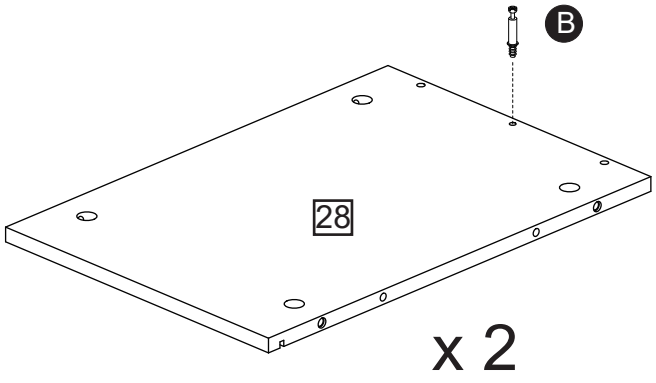


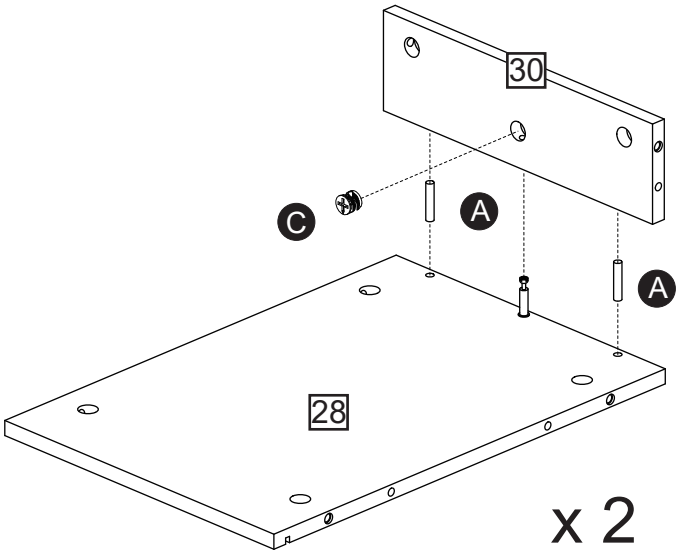



Step 14

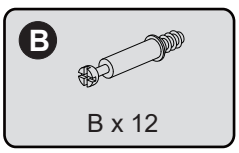



CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

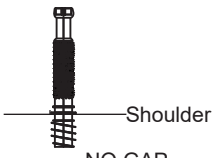


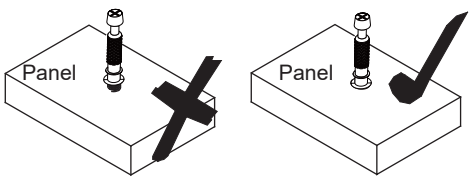

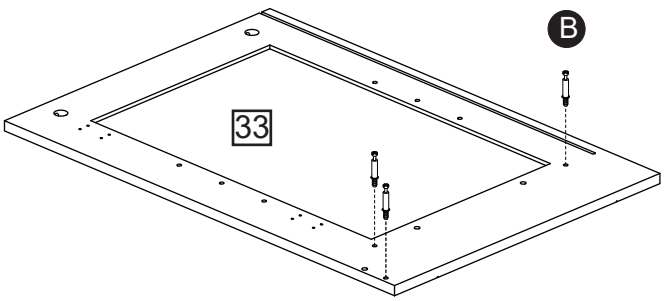

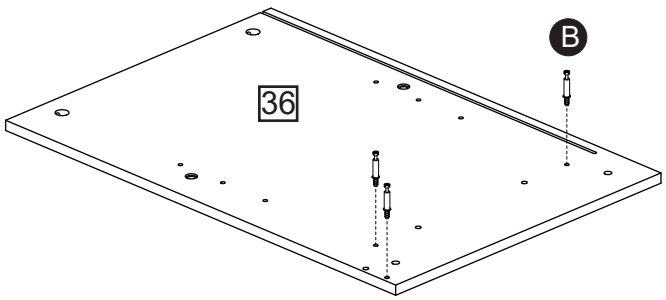


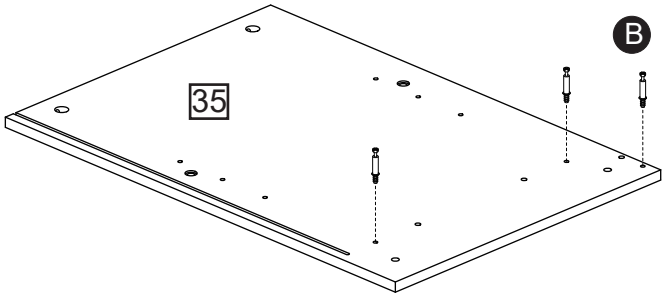


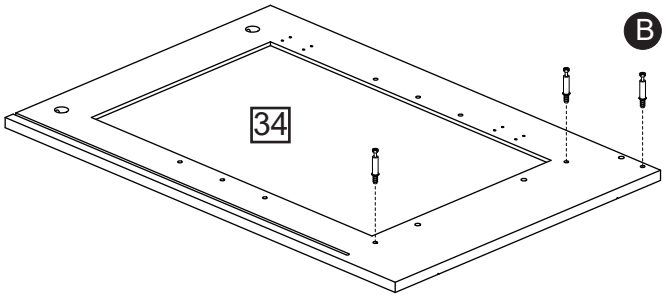



Assembly Instructions


Step 15

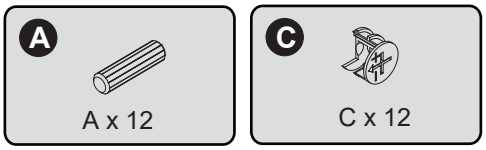

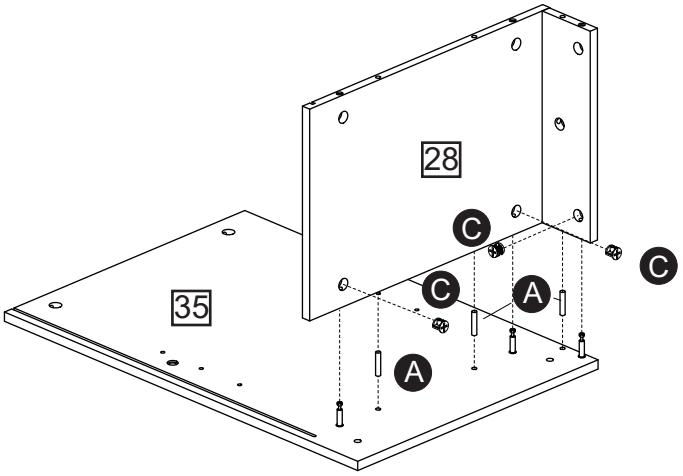


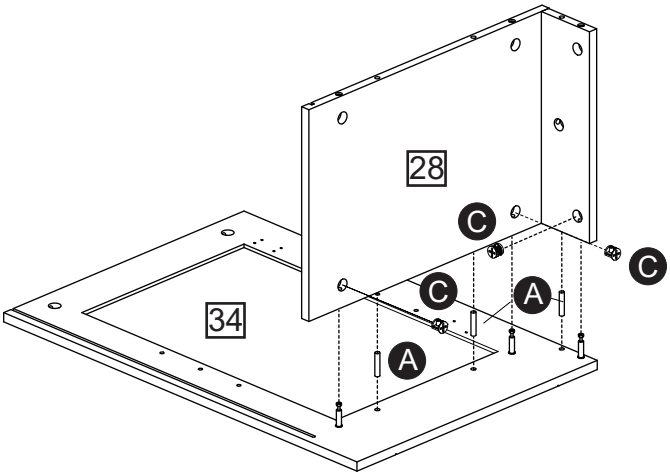


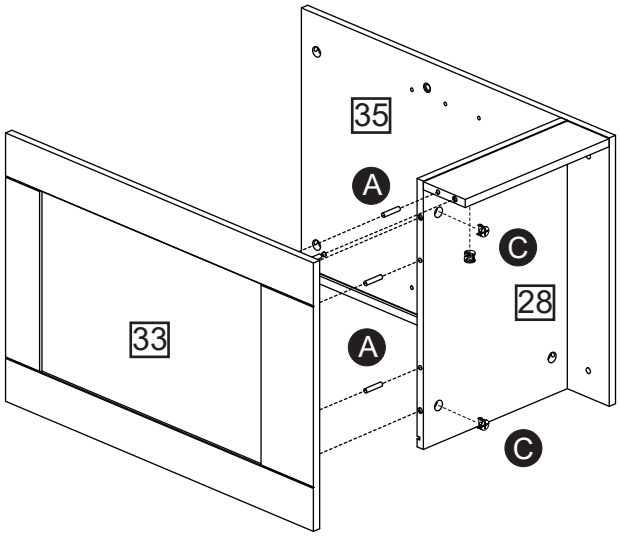

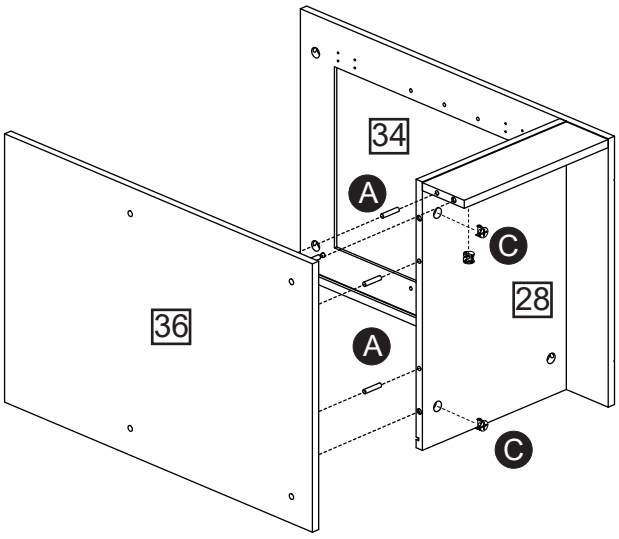


Step 16

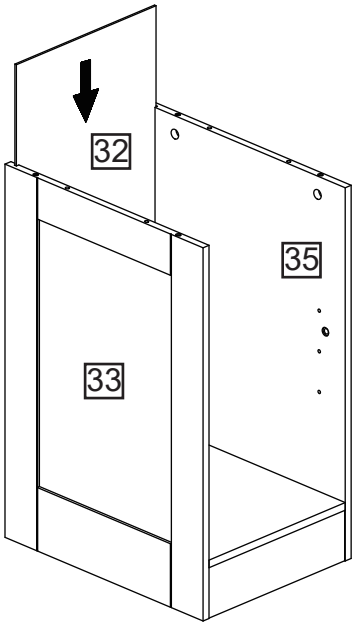

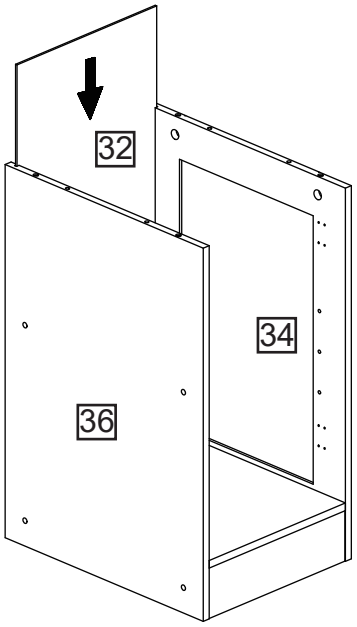



Assembly Instructions


Step 17

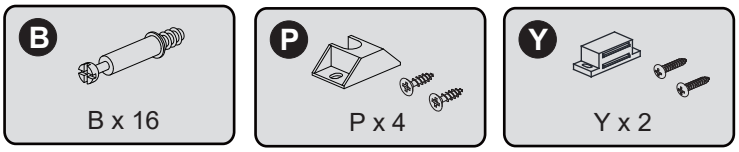



CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

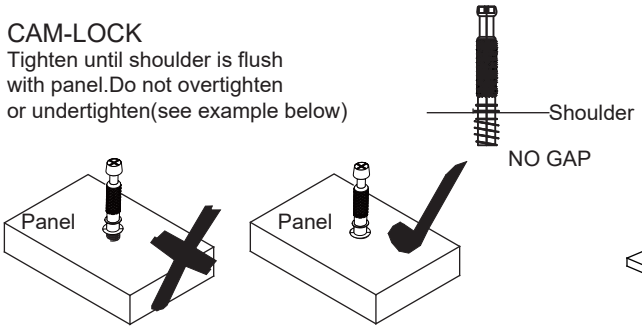

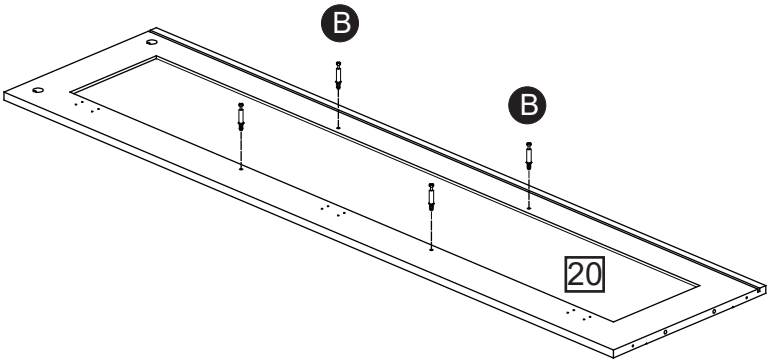

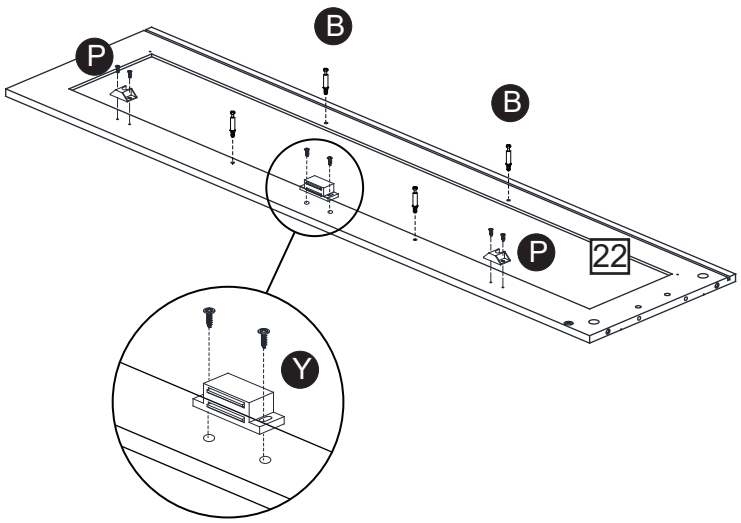

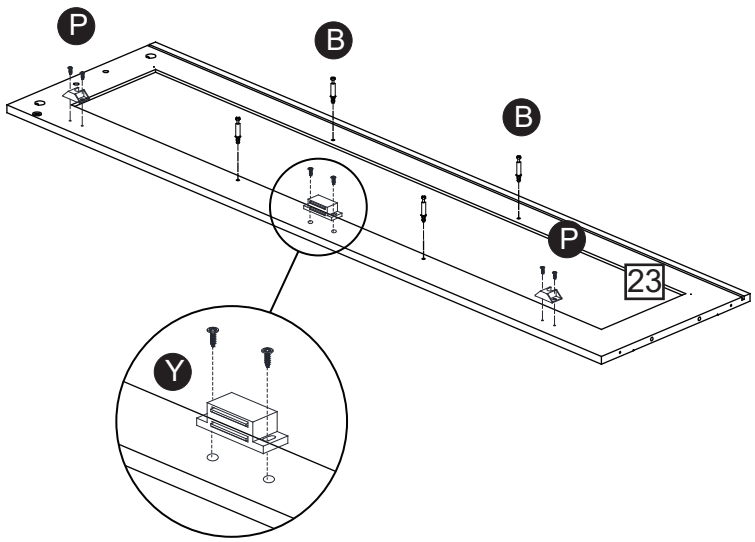


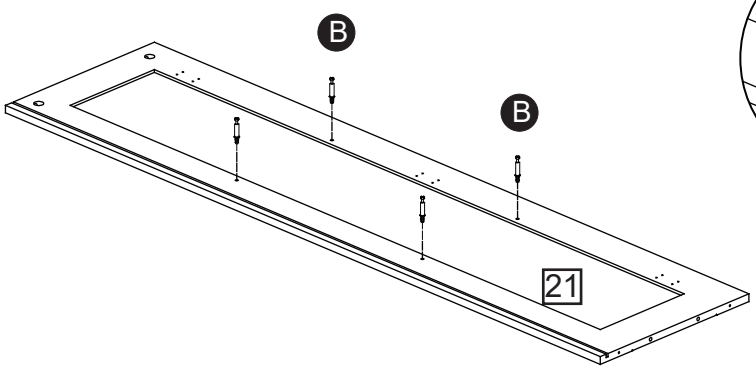



Assembly Instructions


Step 18



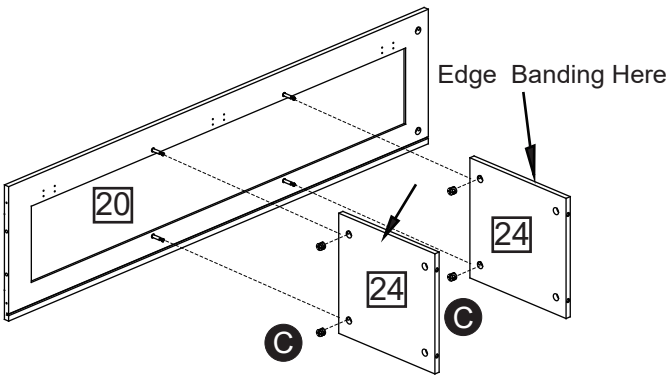


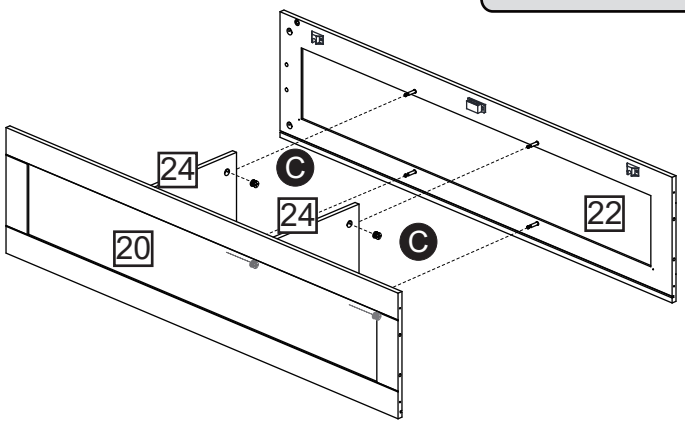


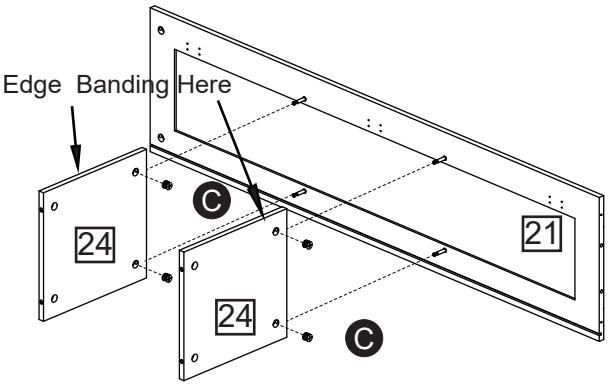

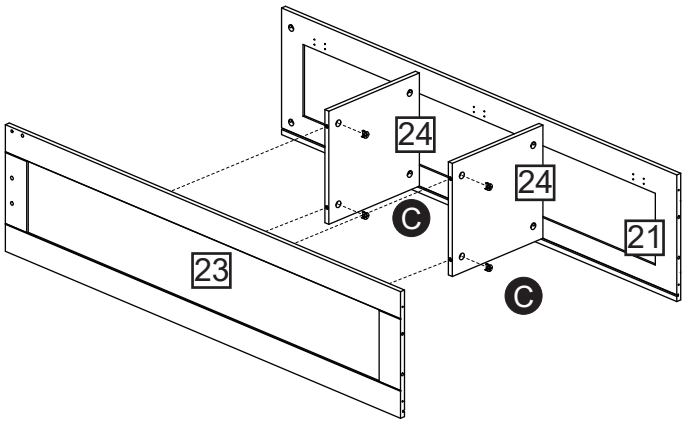


Step 19

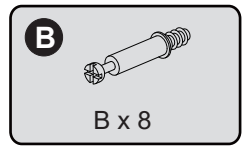

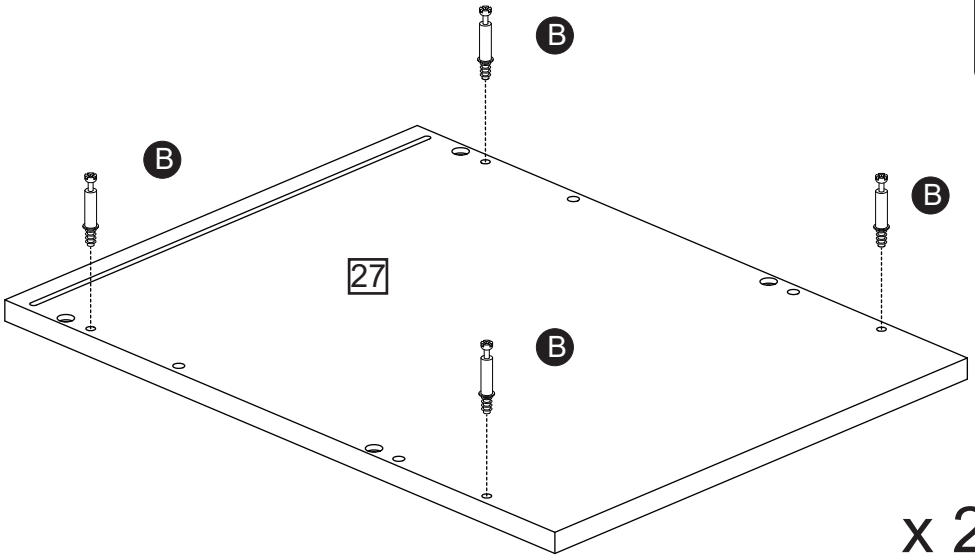


Assembly Instructions

Step 20

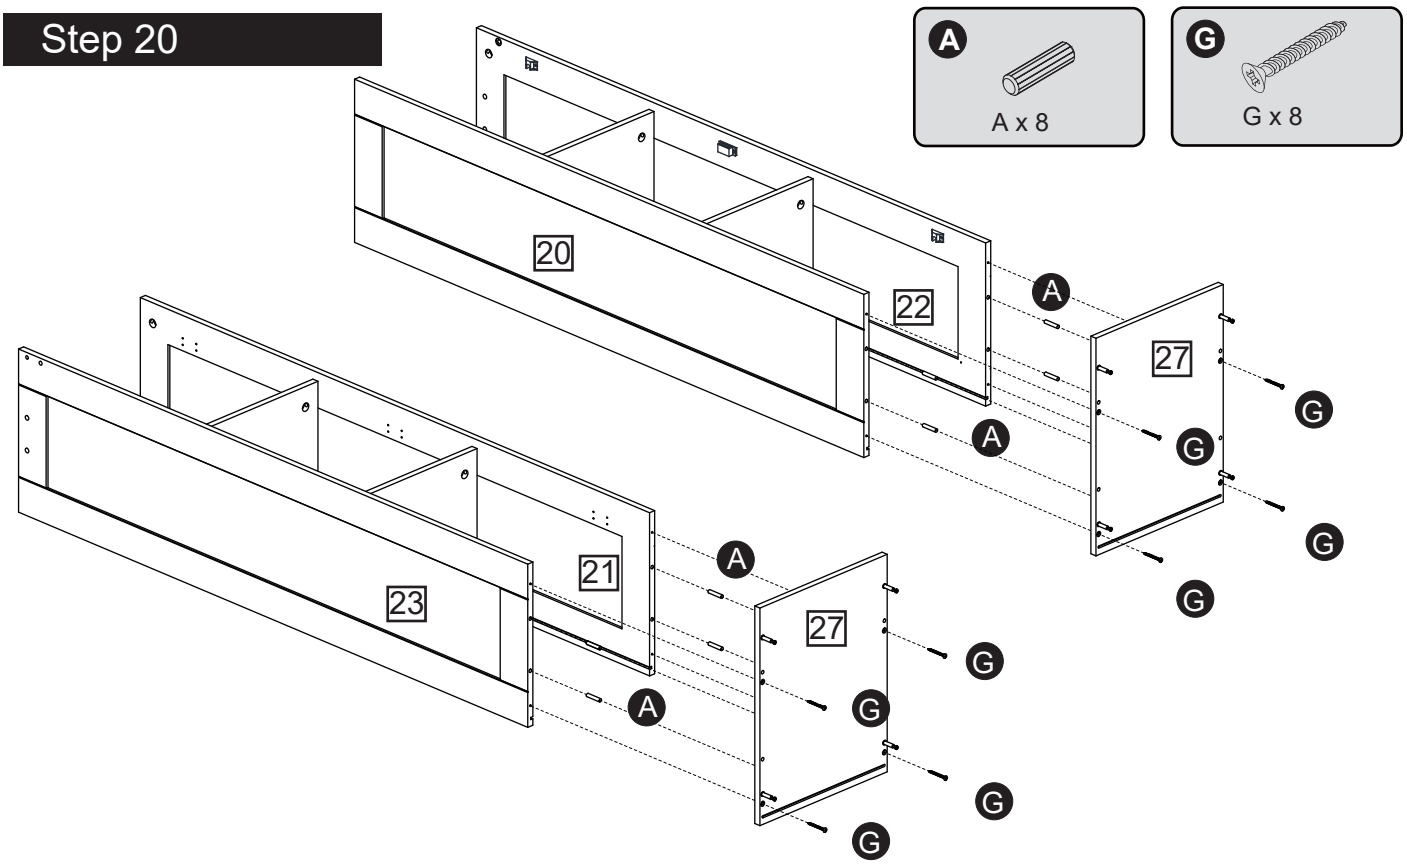



Step 21

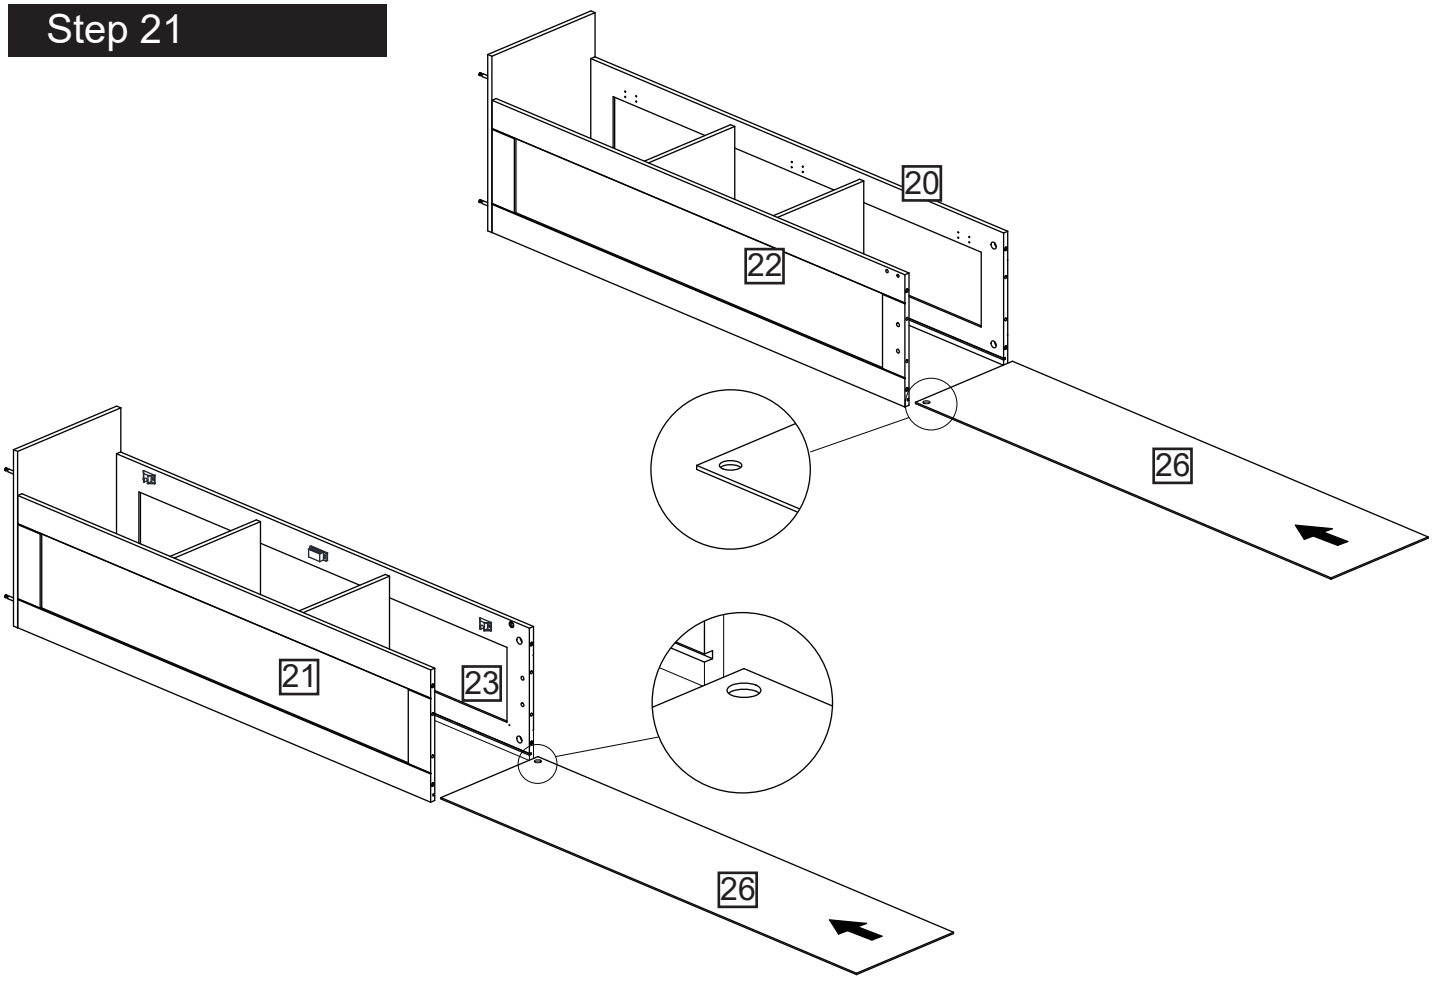


Assembly Instructions


Step 22

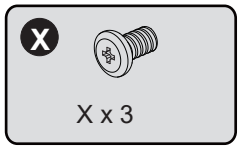


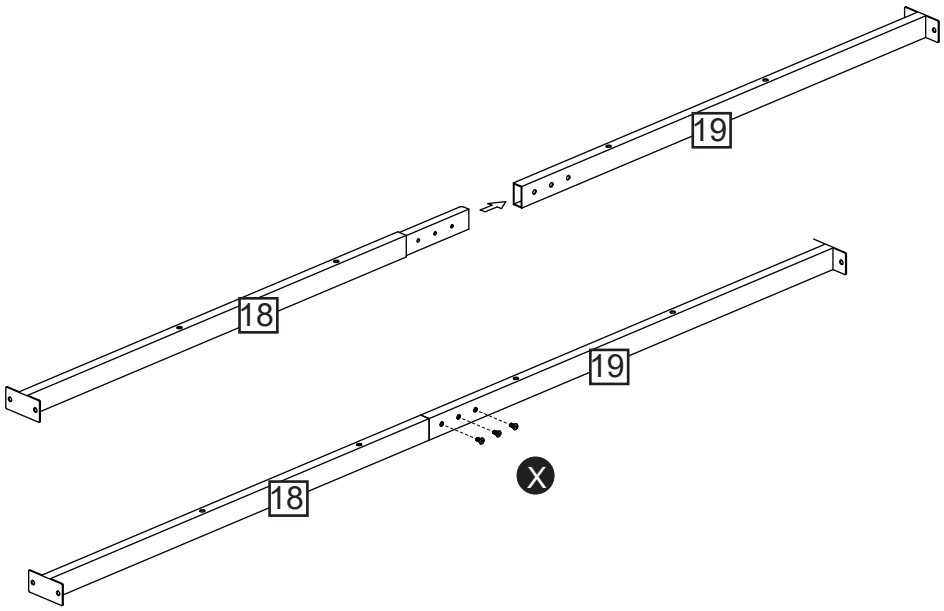


Step 23

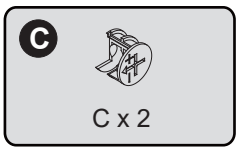

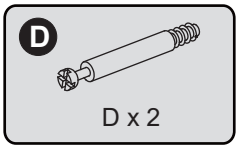

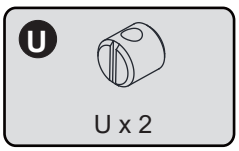


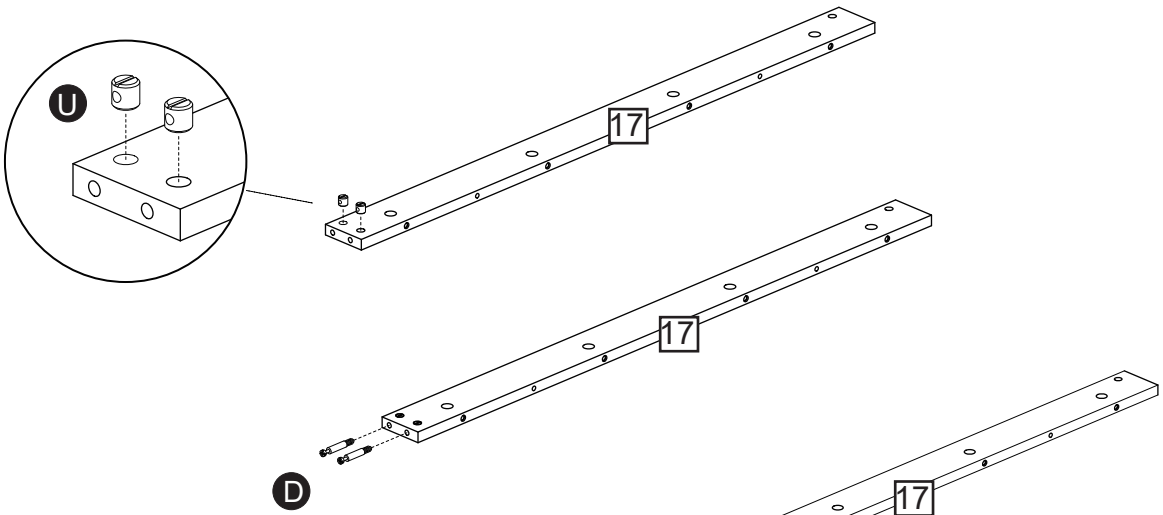


Please fashen the two iron pipes with screws.

Assembly Instructions

Step 24

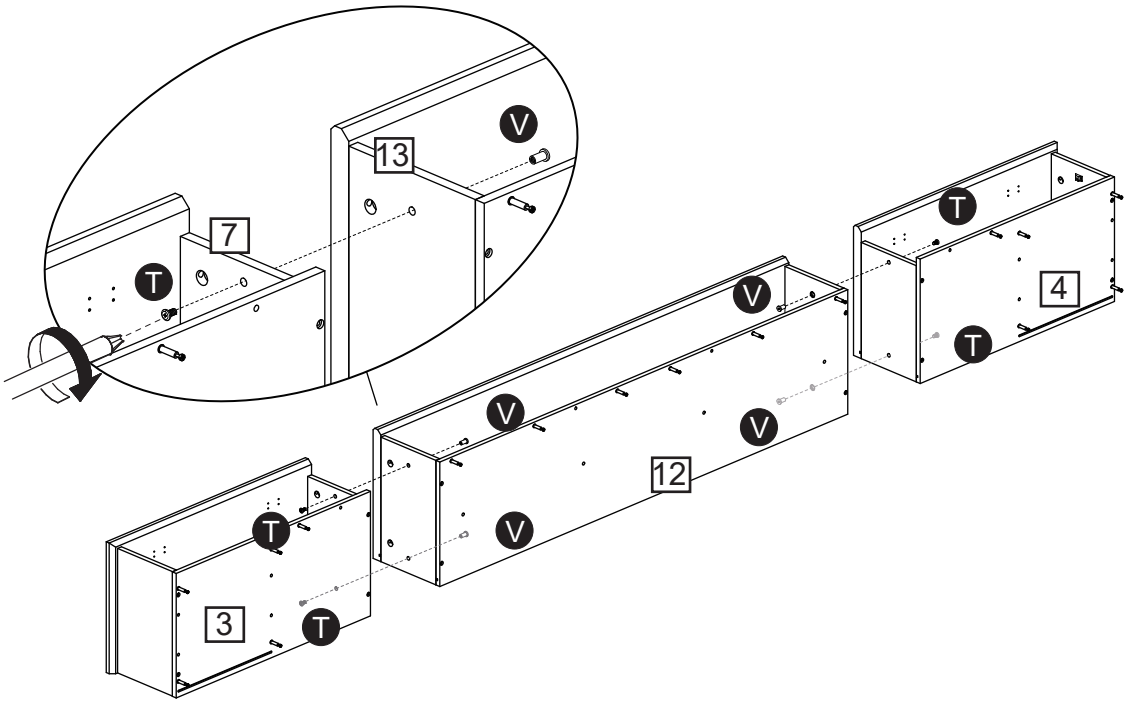



Step 25

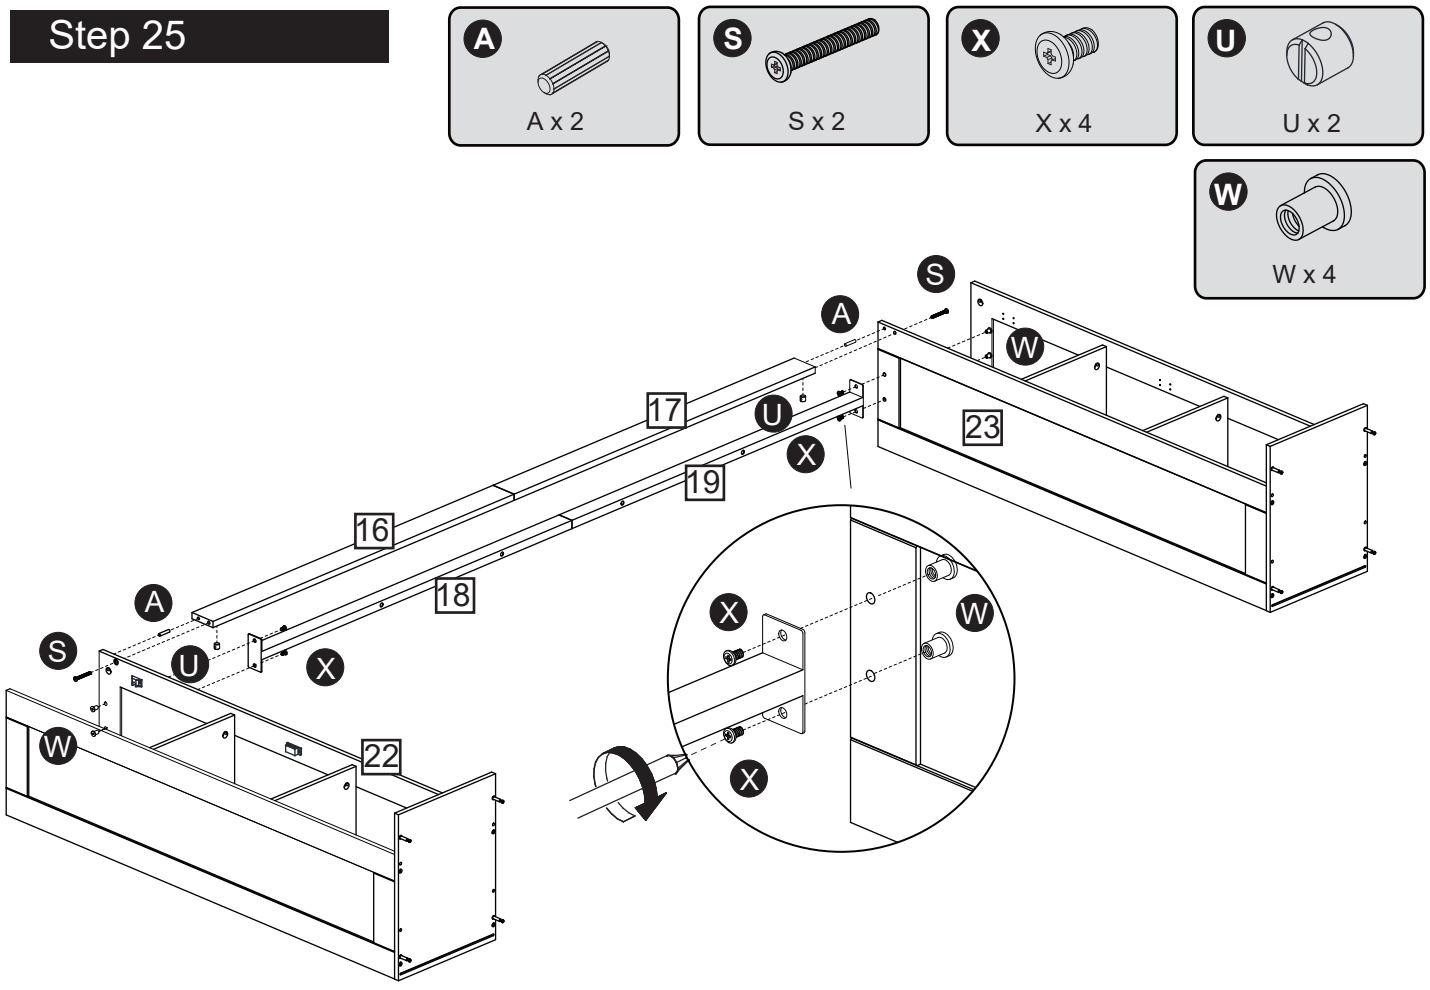


Assembly Instructions


Step 26

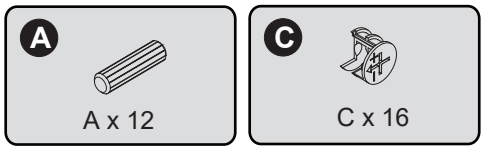

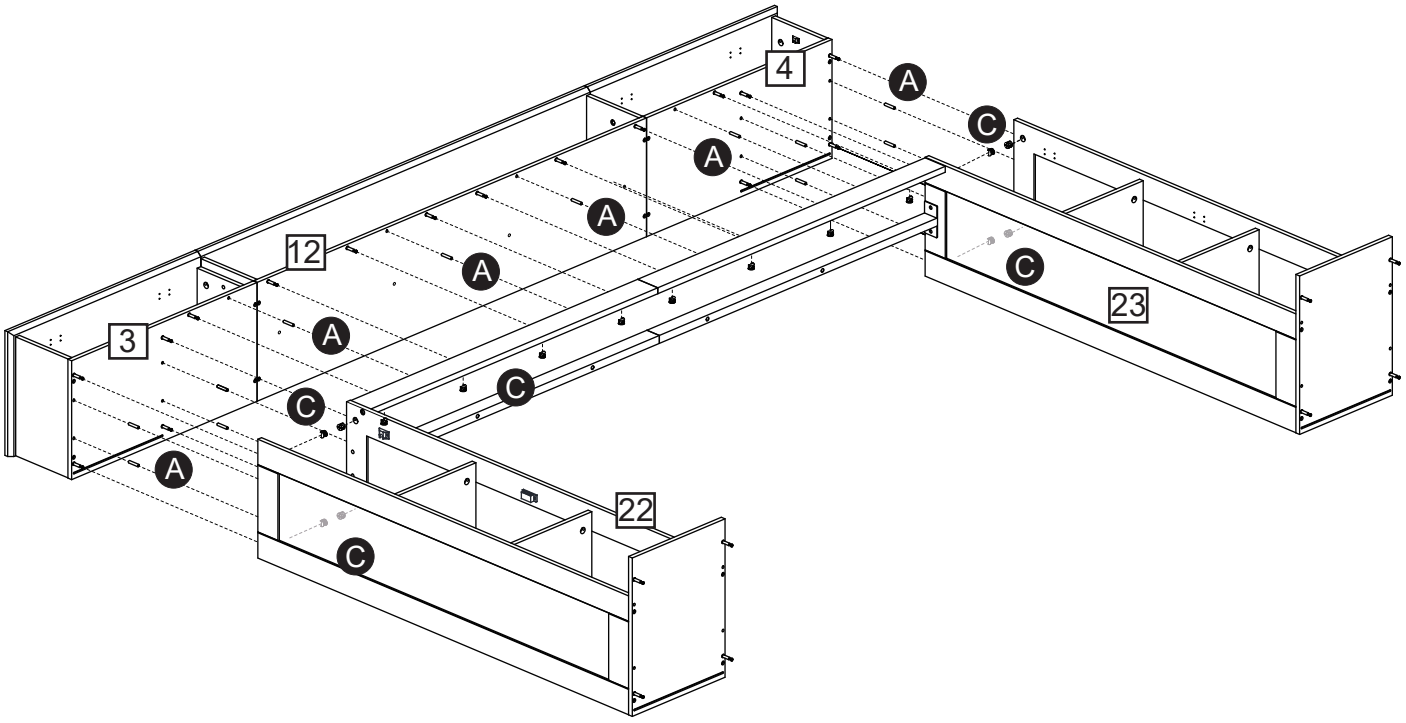


Step 27

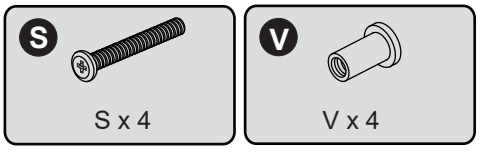


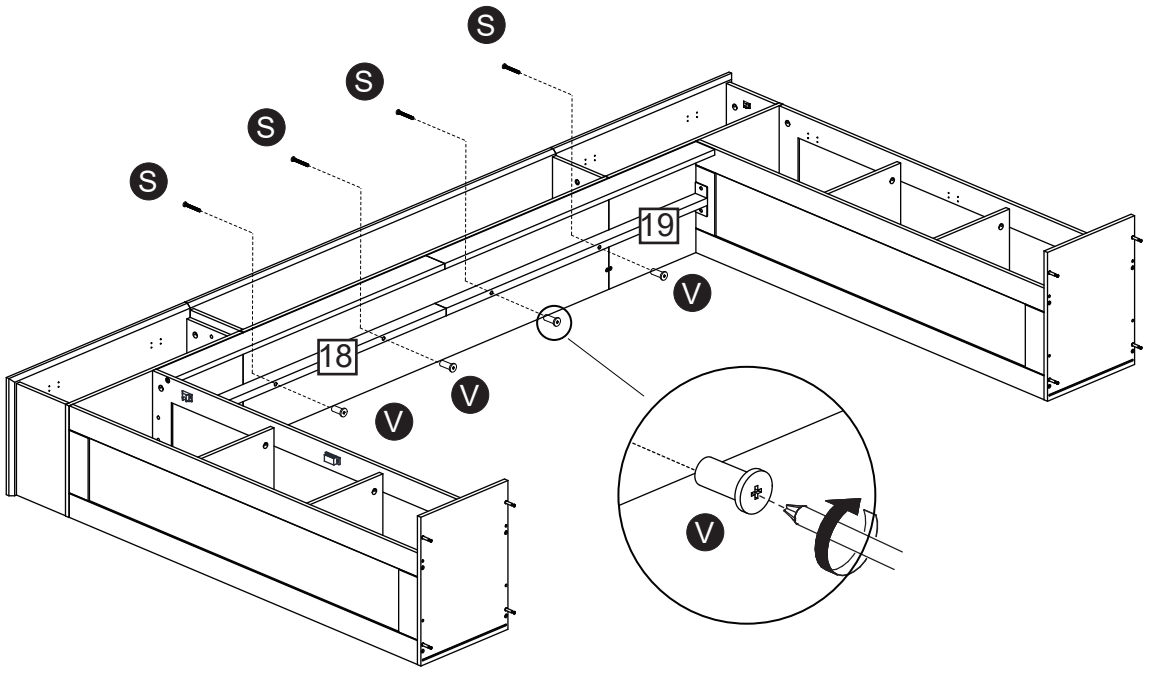

Assembly Instructions

Step 28

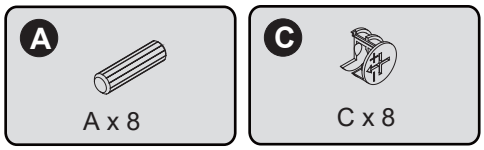


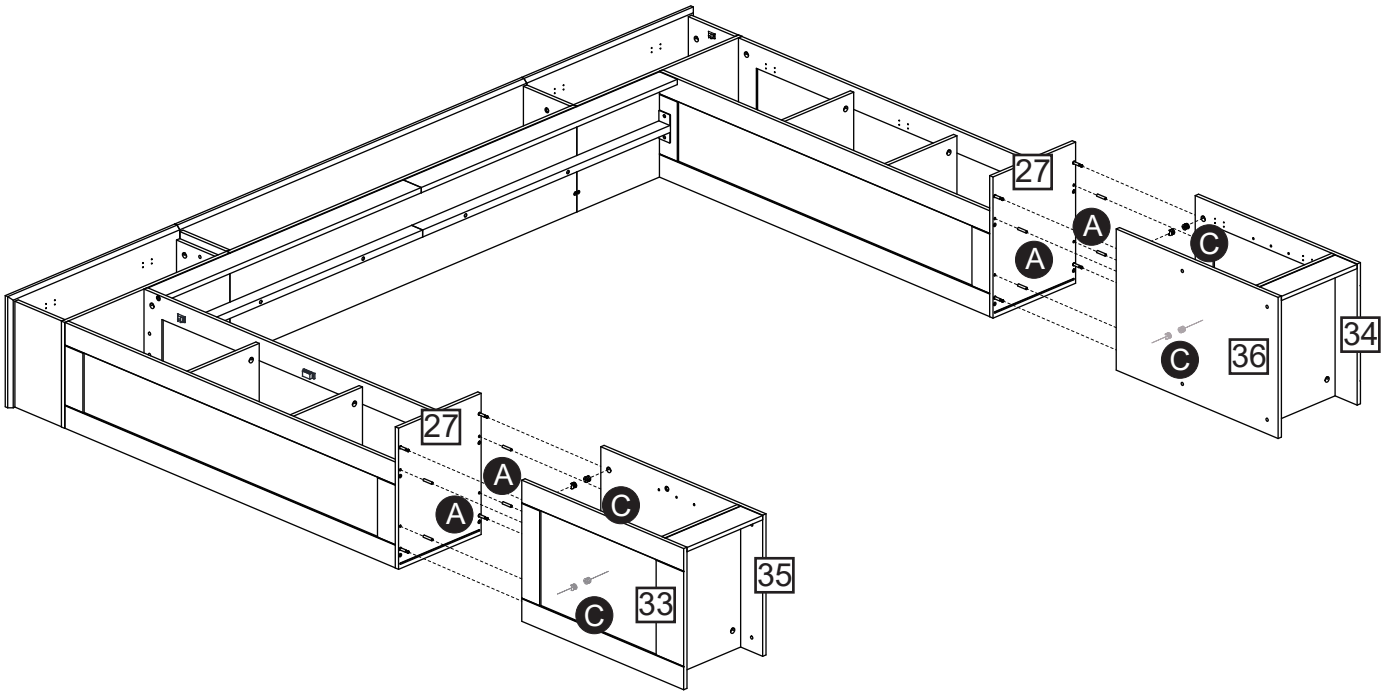



Assembly Instructions

Step 29


CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

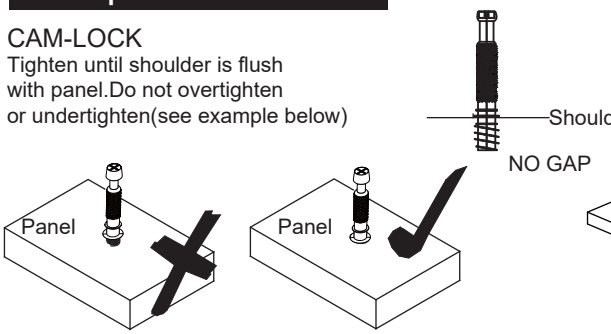

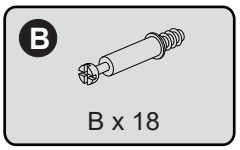

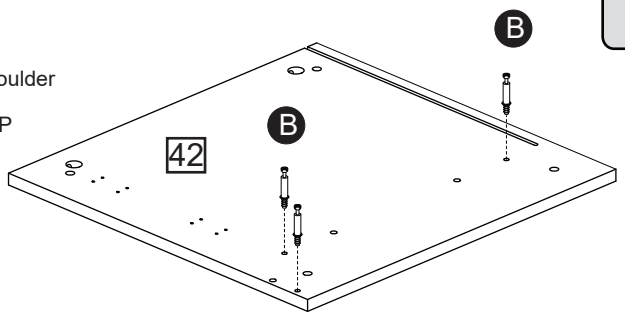


x 3

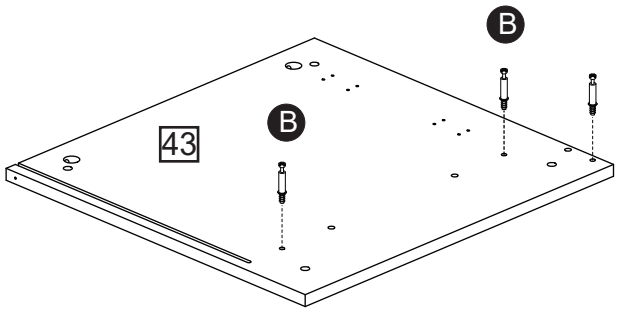



x 3

Step 30


CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

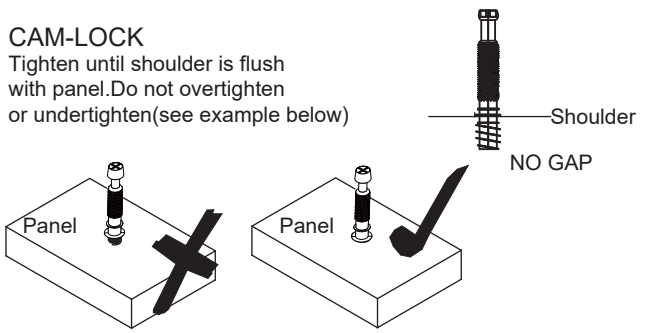

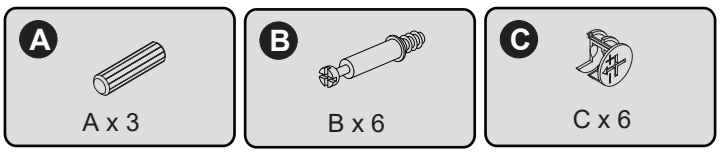

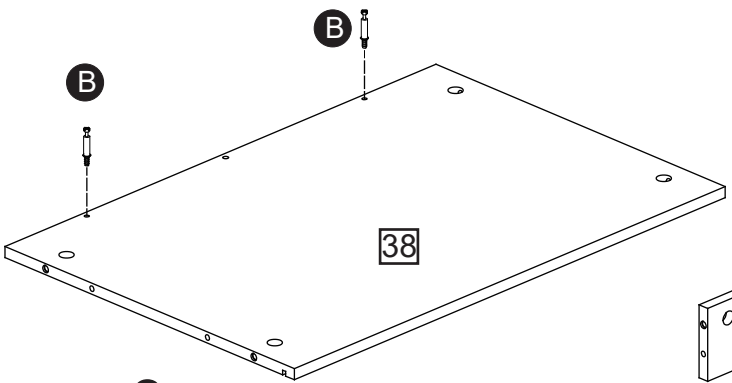


x 3

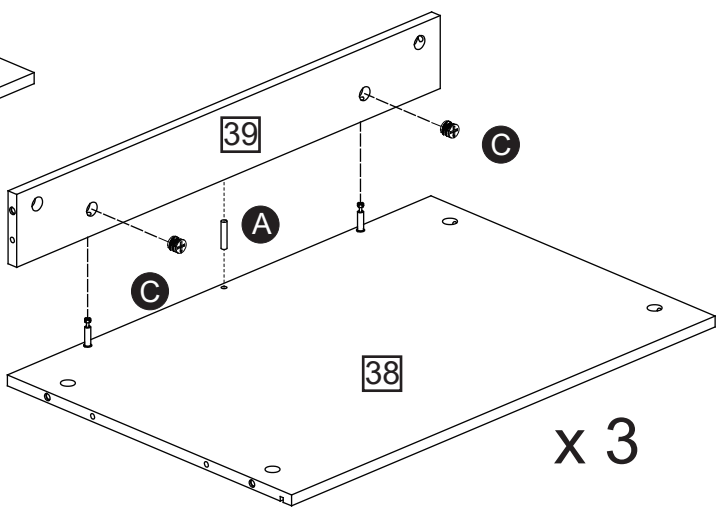



x 3

Assembly Instructions

Step 31

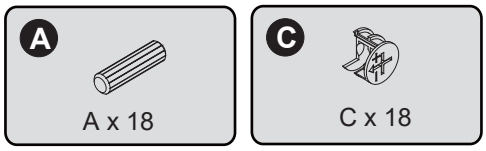


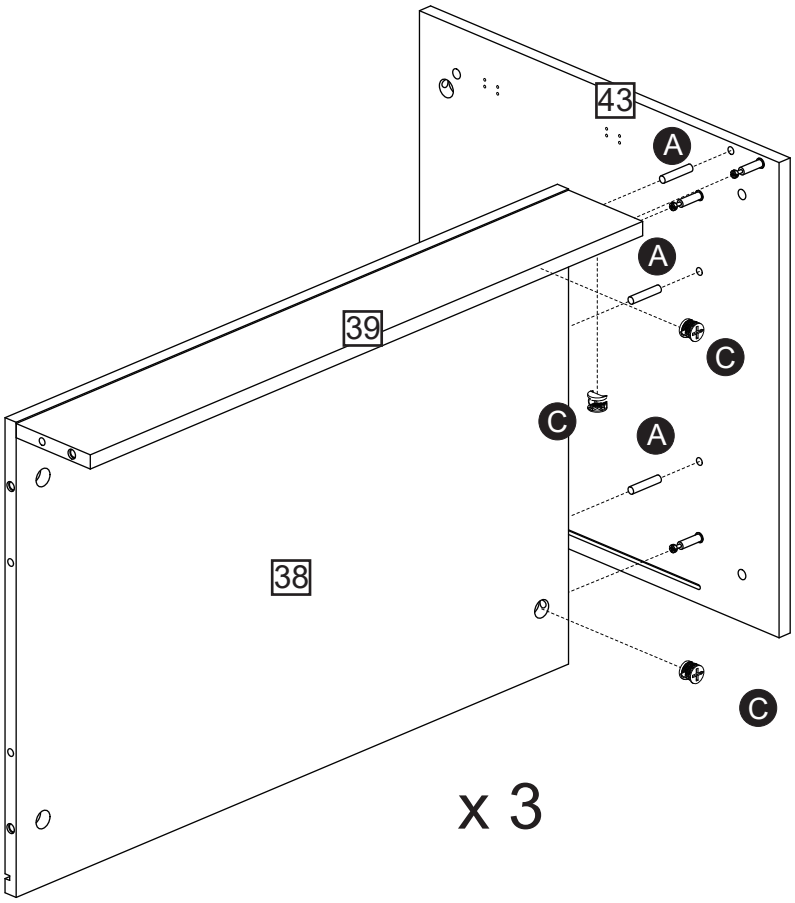

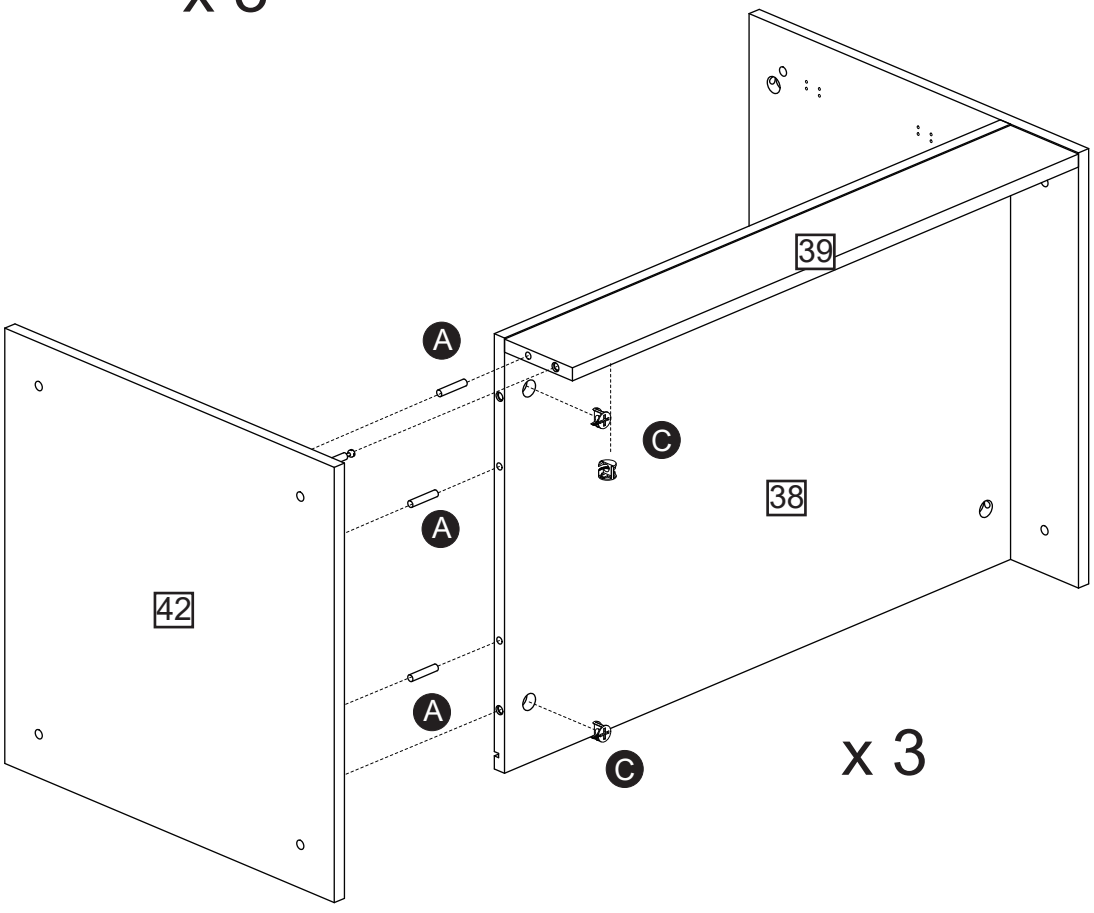

Assembly Instructions


Step 32

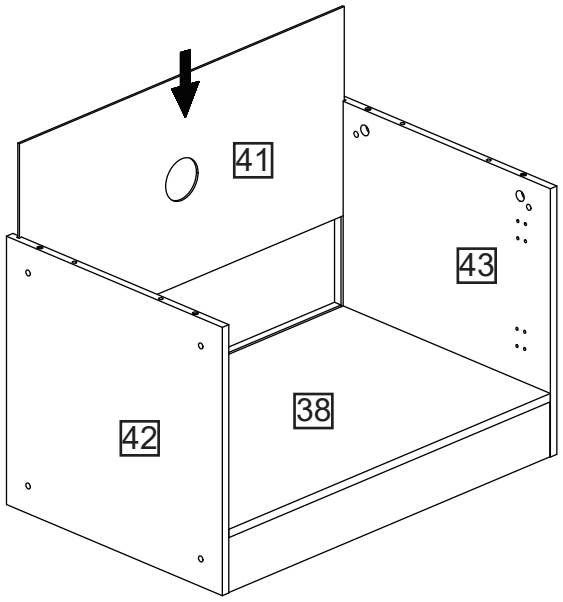



x 3


Step 33

CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

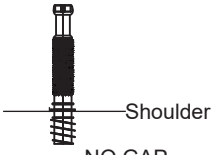


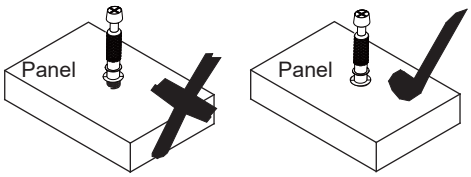

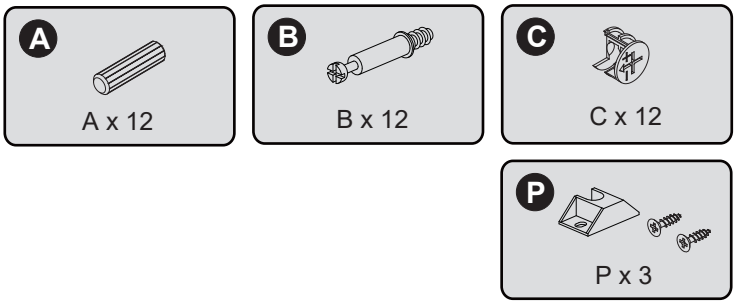

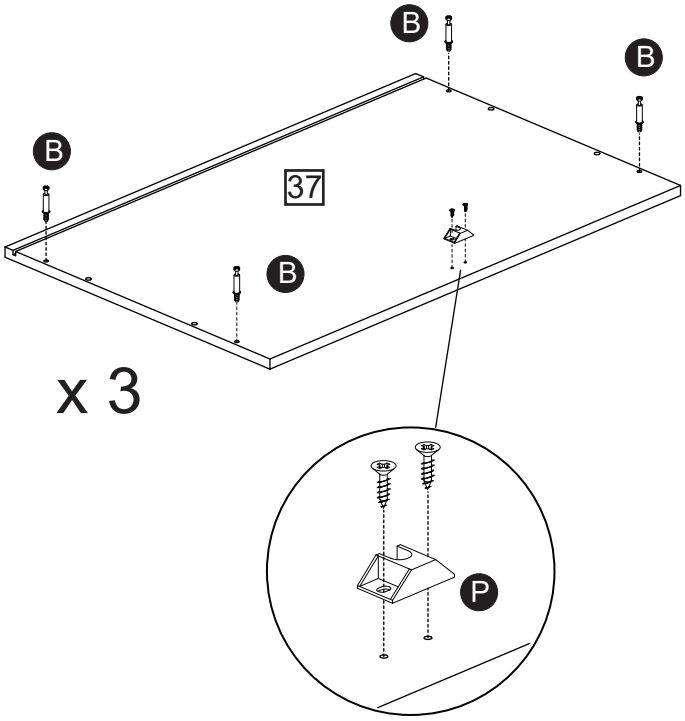


x 3

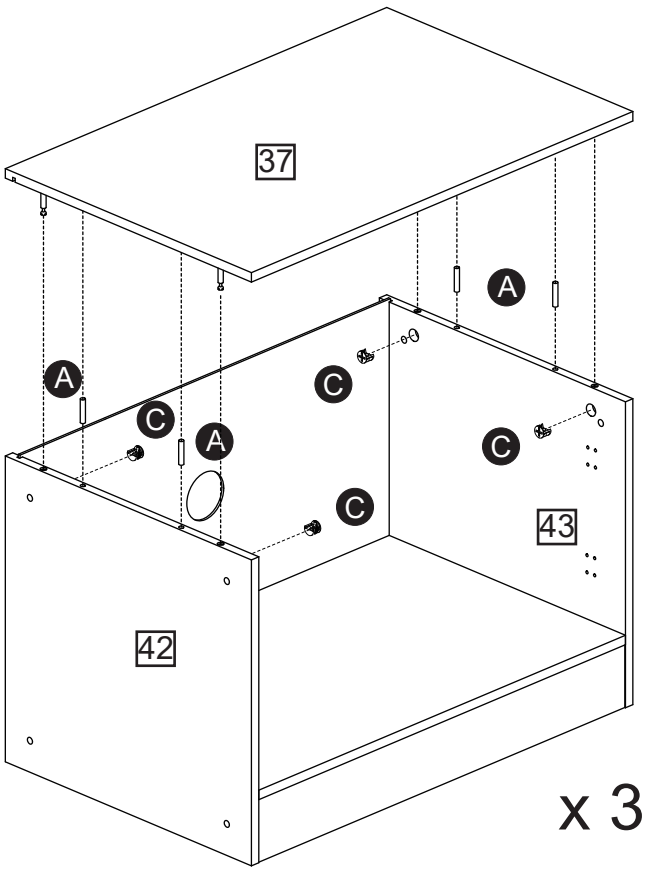


x 3

Assembly Instructions

Step 34

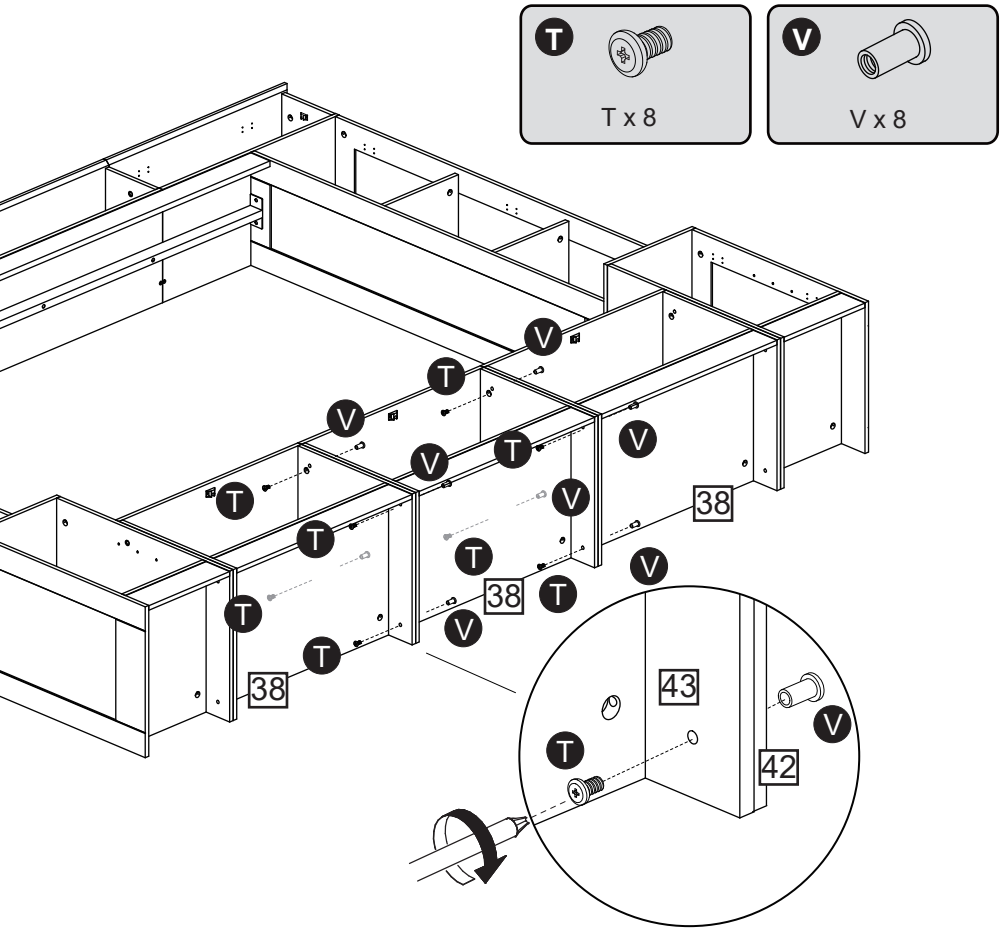



Step 35

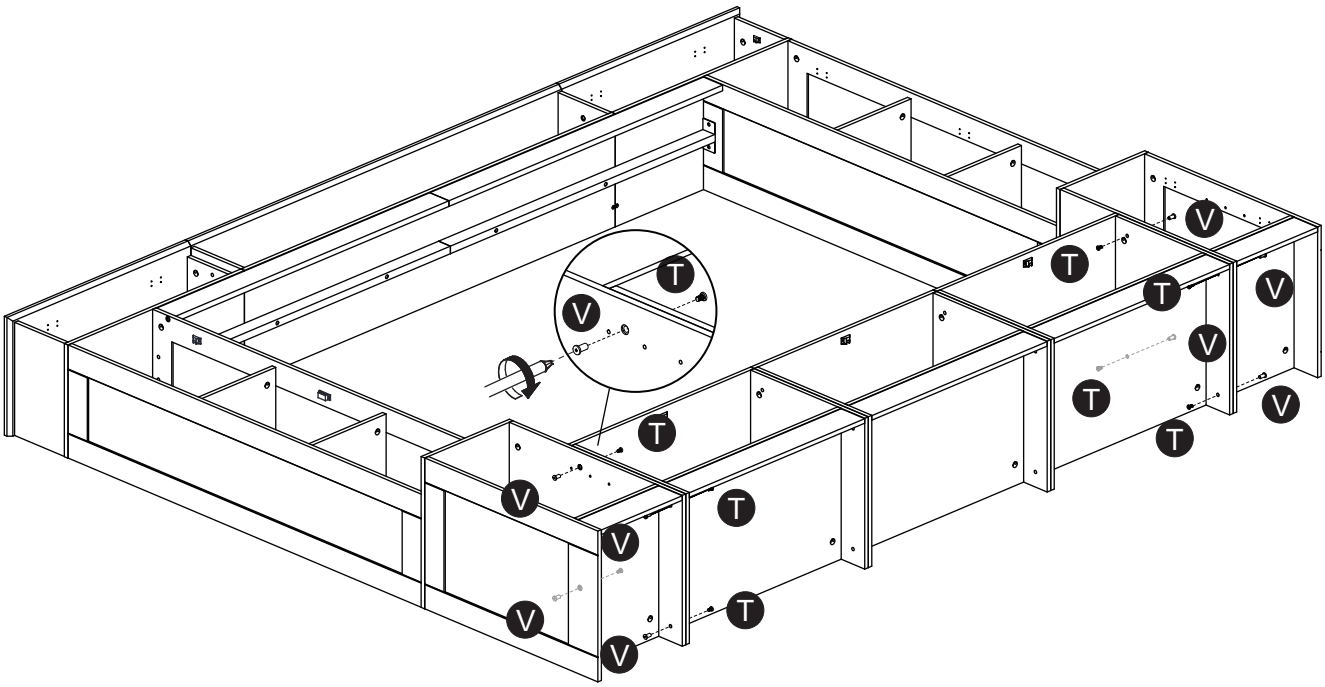



Assembly Instructions


Ste p 36

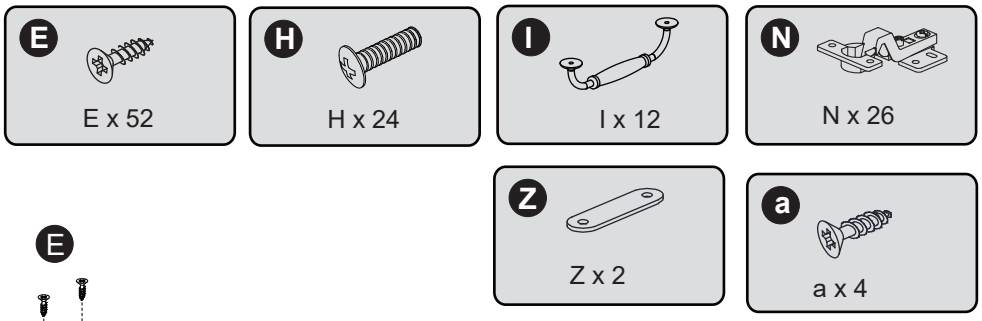


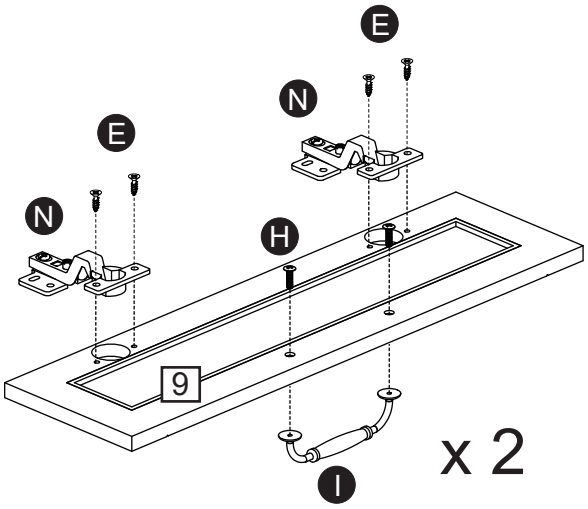


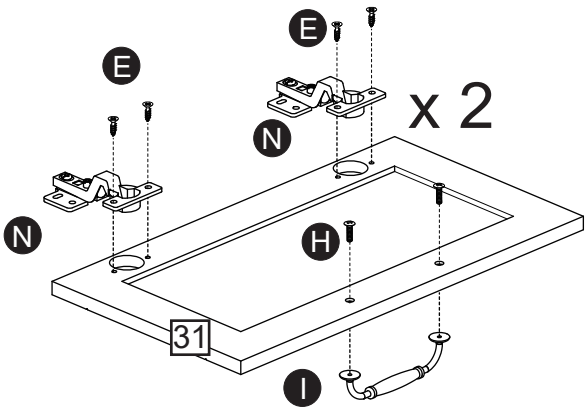

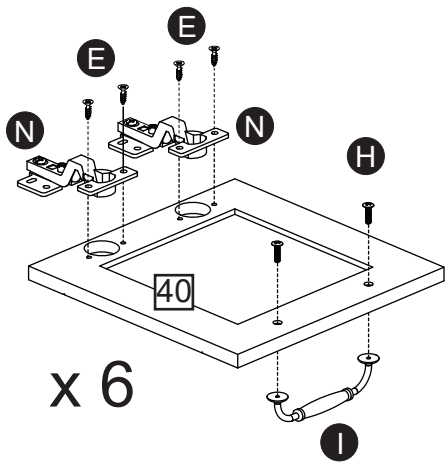


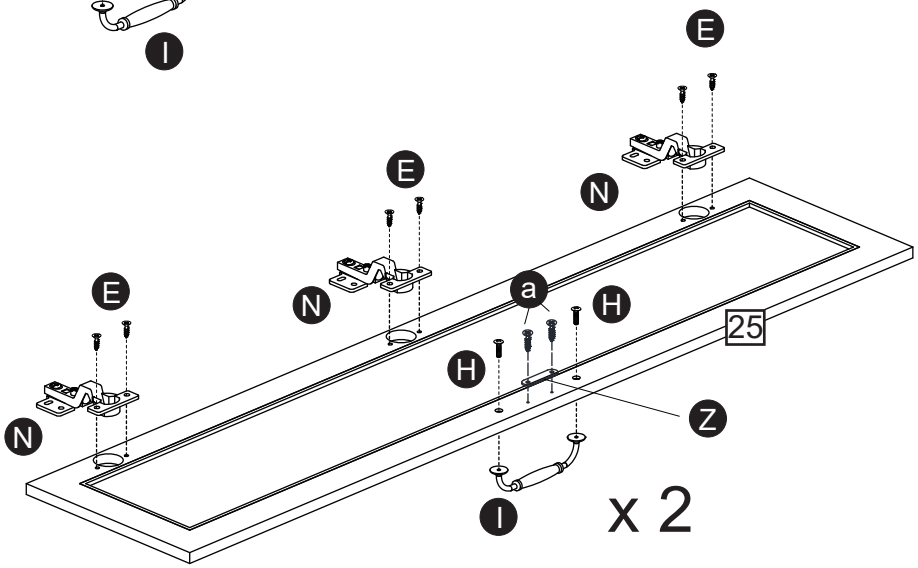

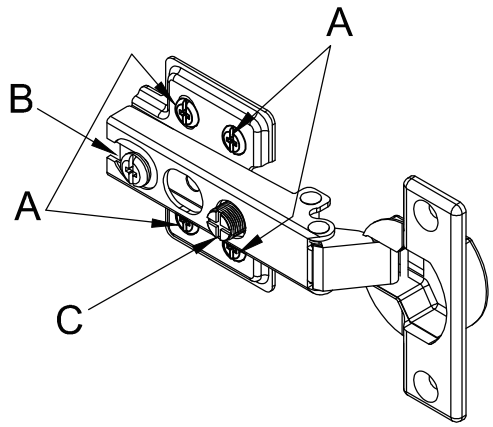


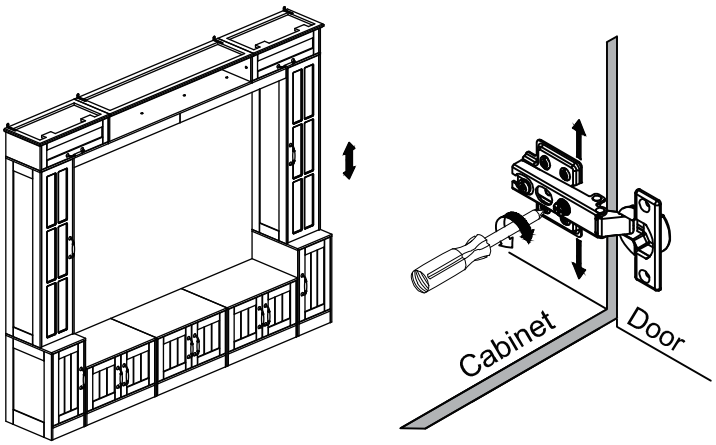

To adjust the vertical height.
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

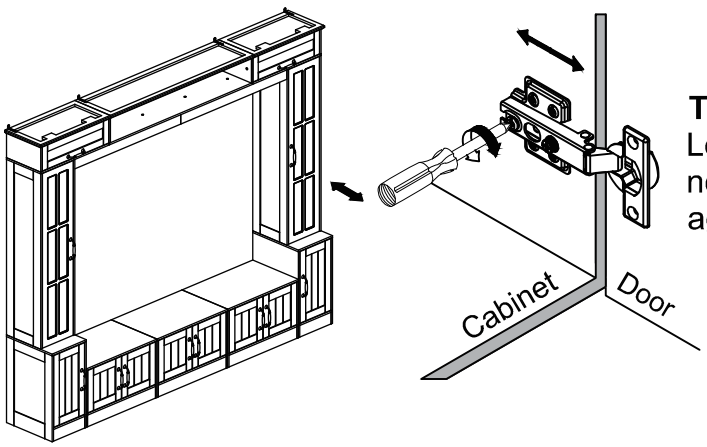


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

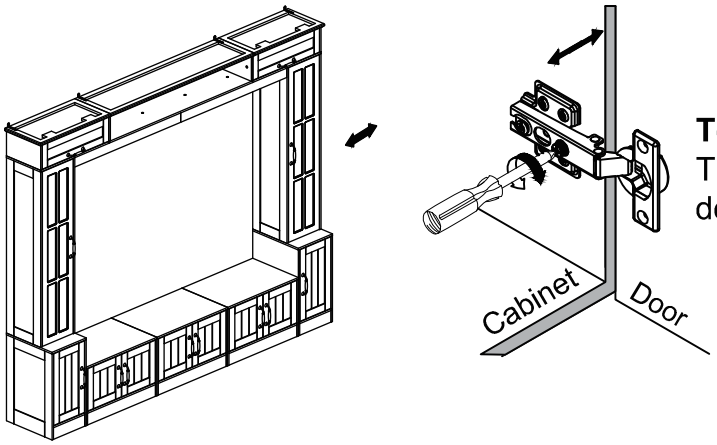

To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

Assembly Instructions

Step 37

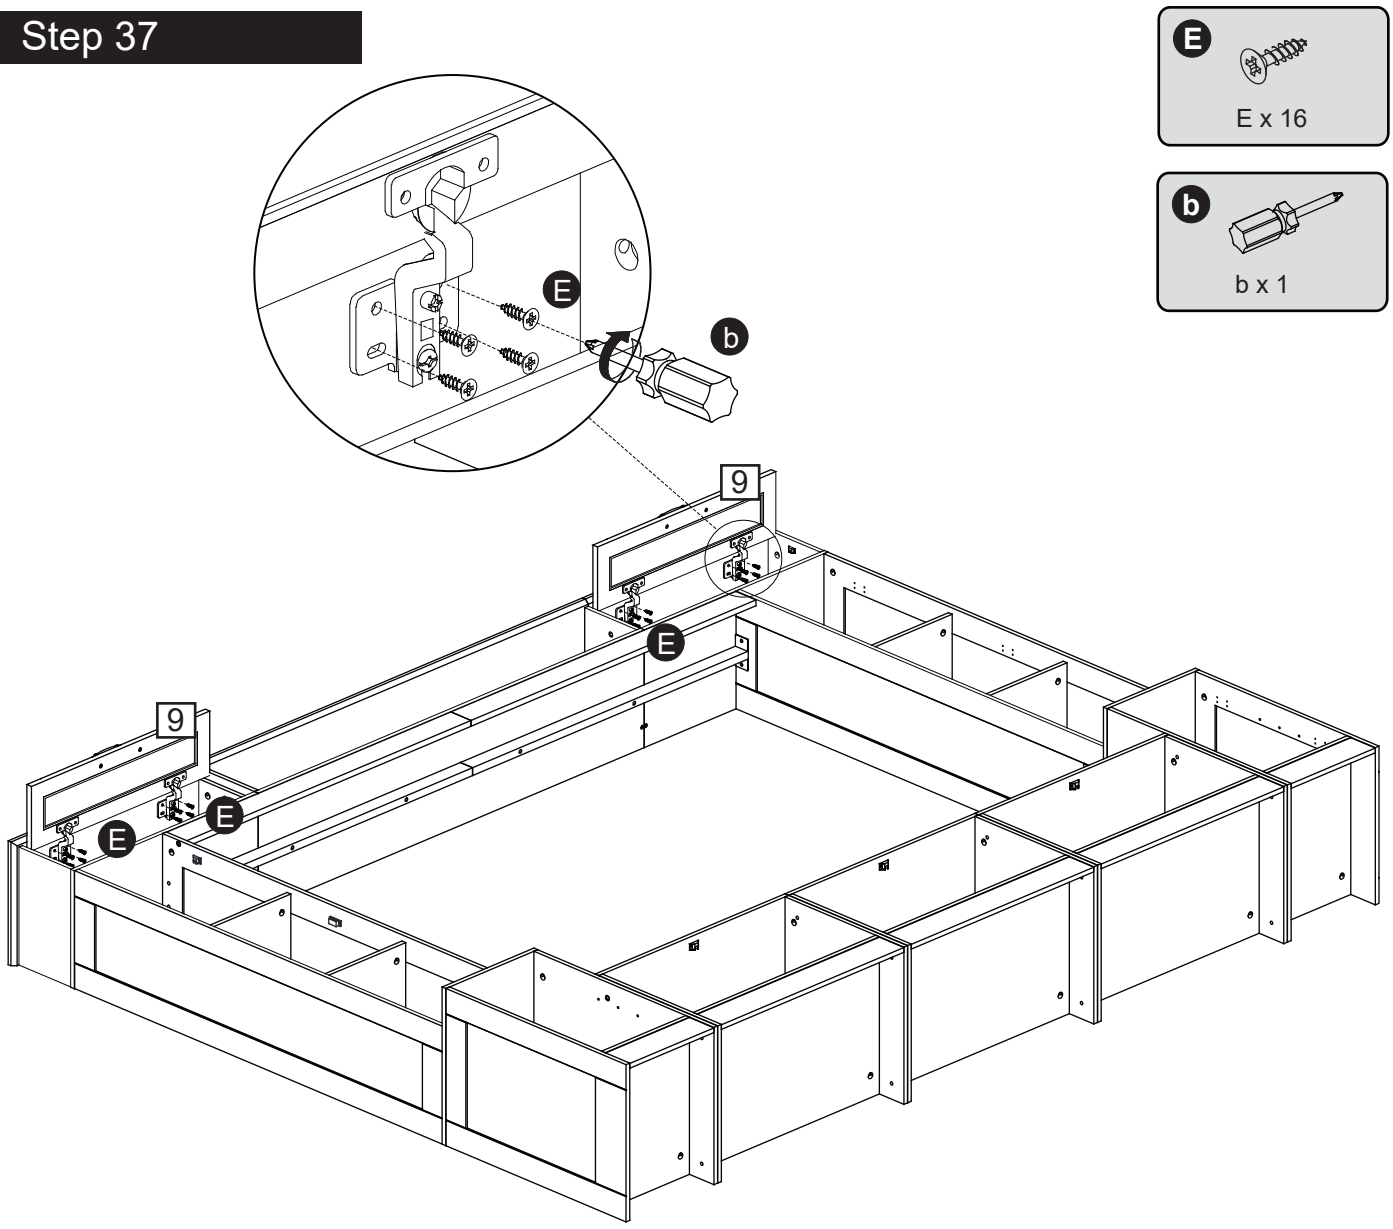


E x 16

b x 1

Assembly Instructions

Step 38


E x 24

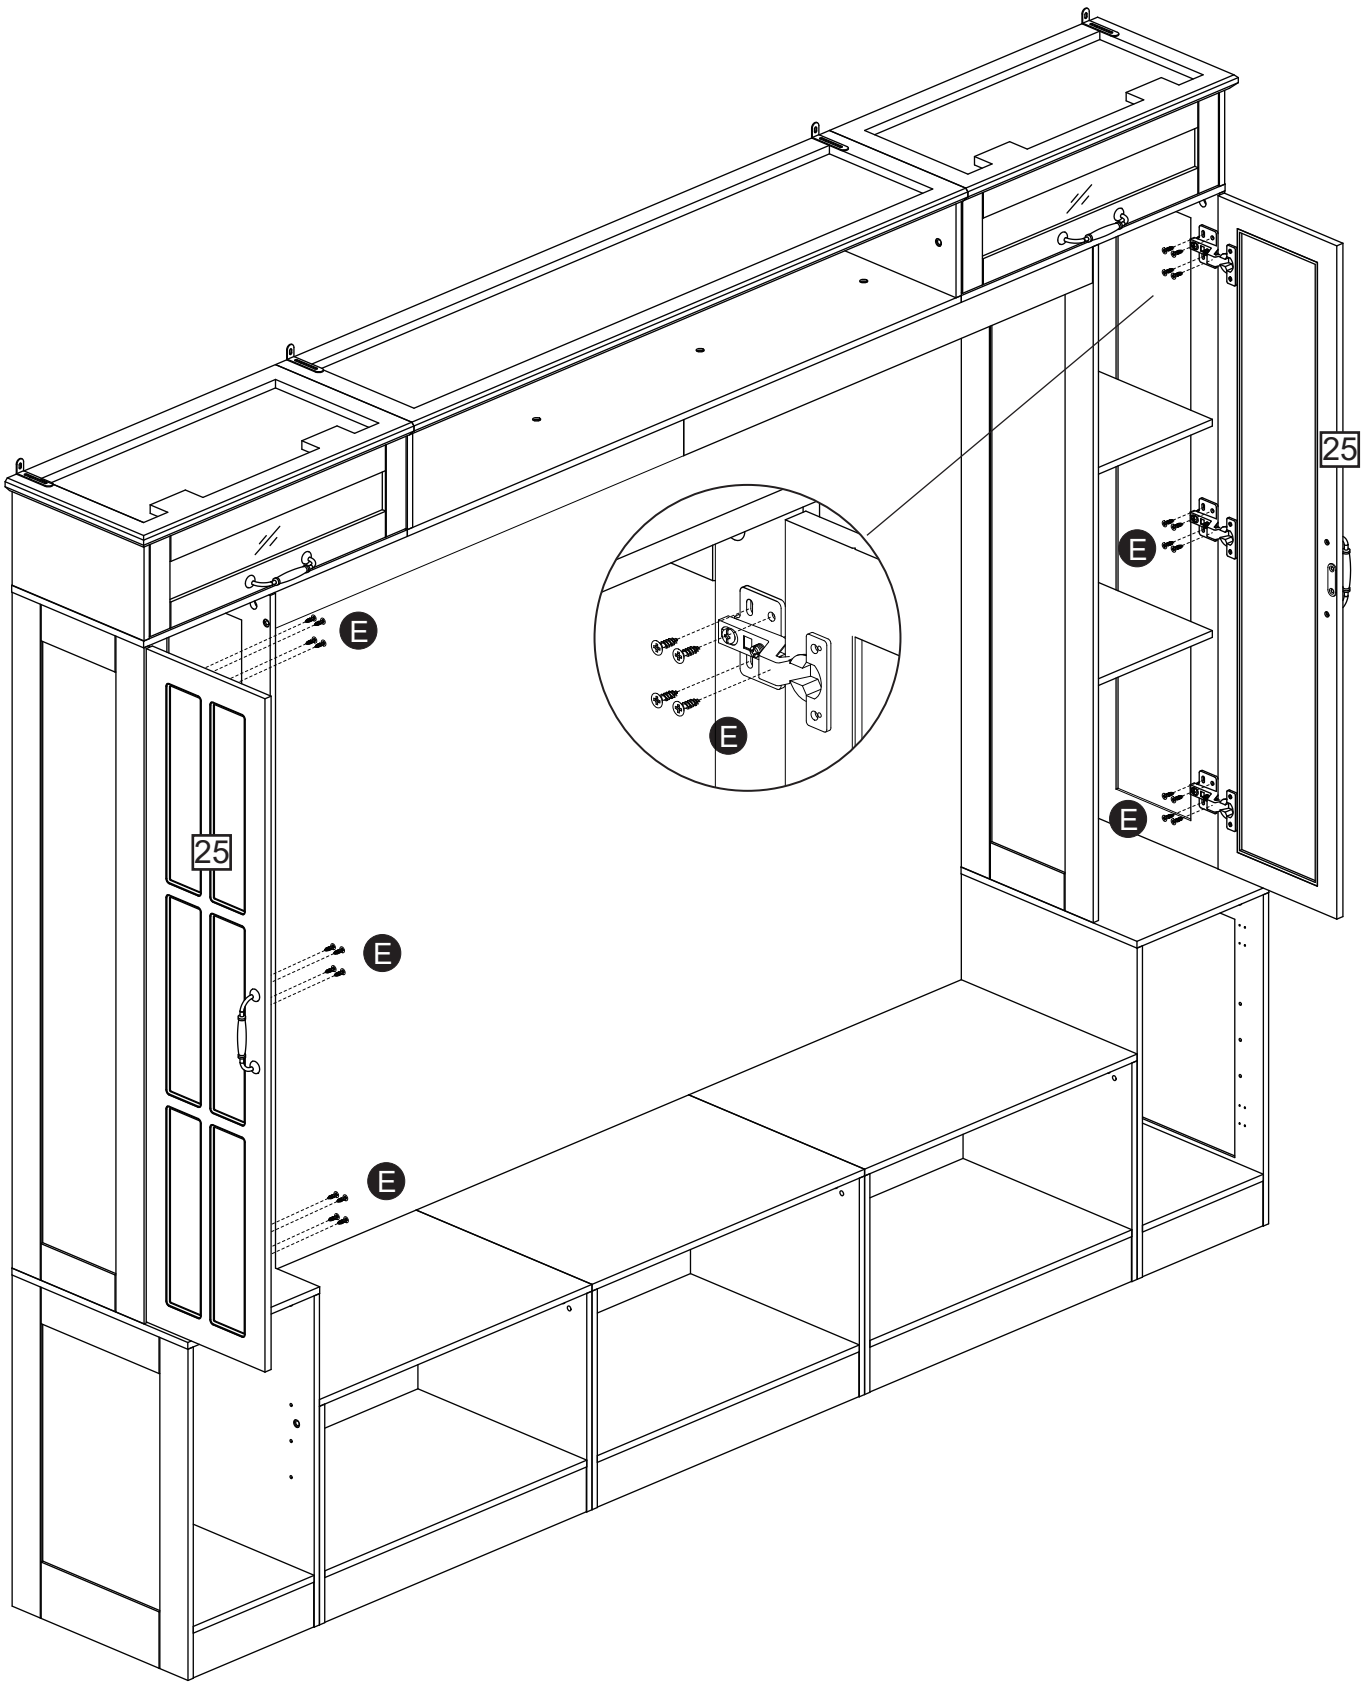

Assembly Instructions

Step 39


E x 48

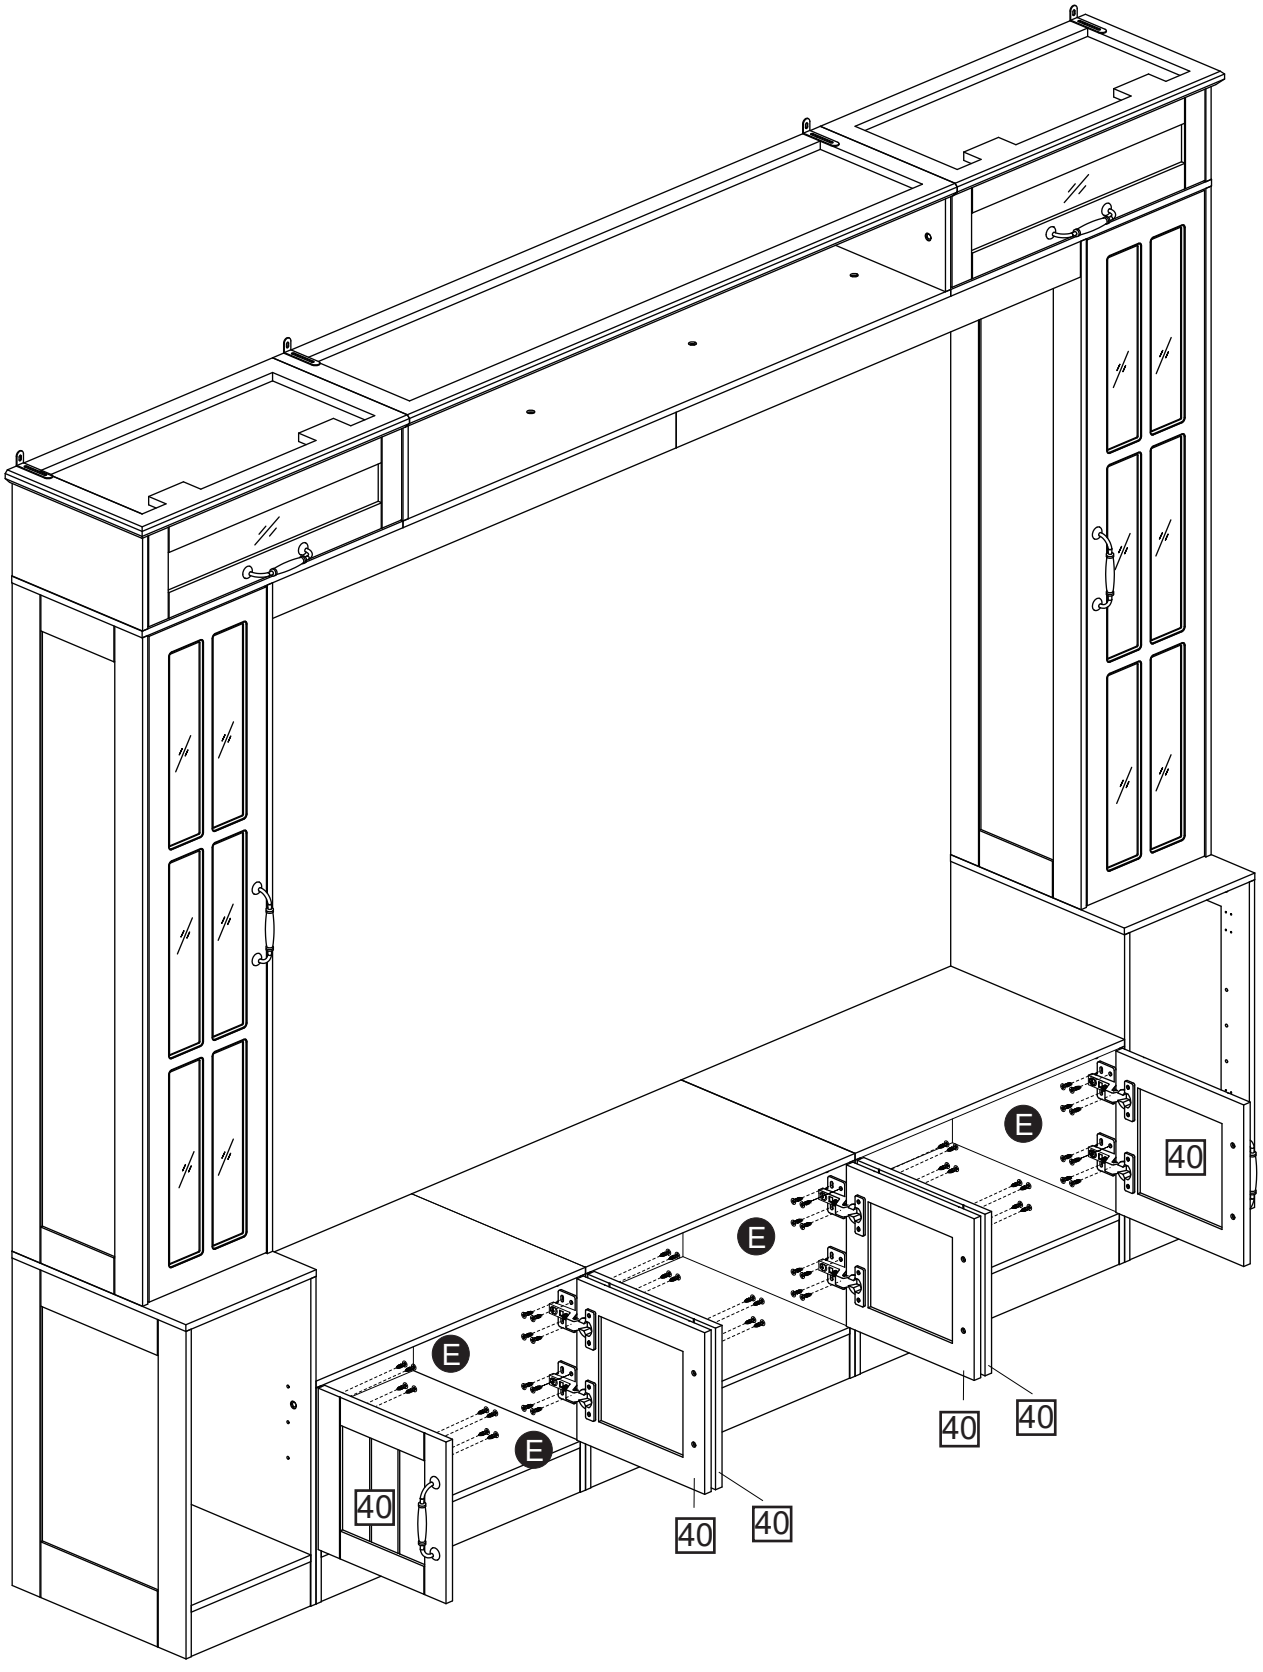

Assembly Instructions


Step 40


Q x 8

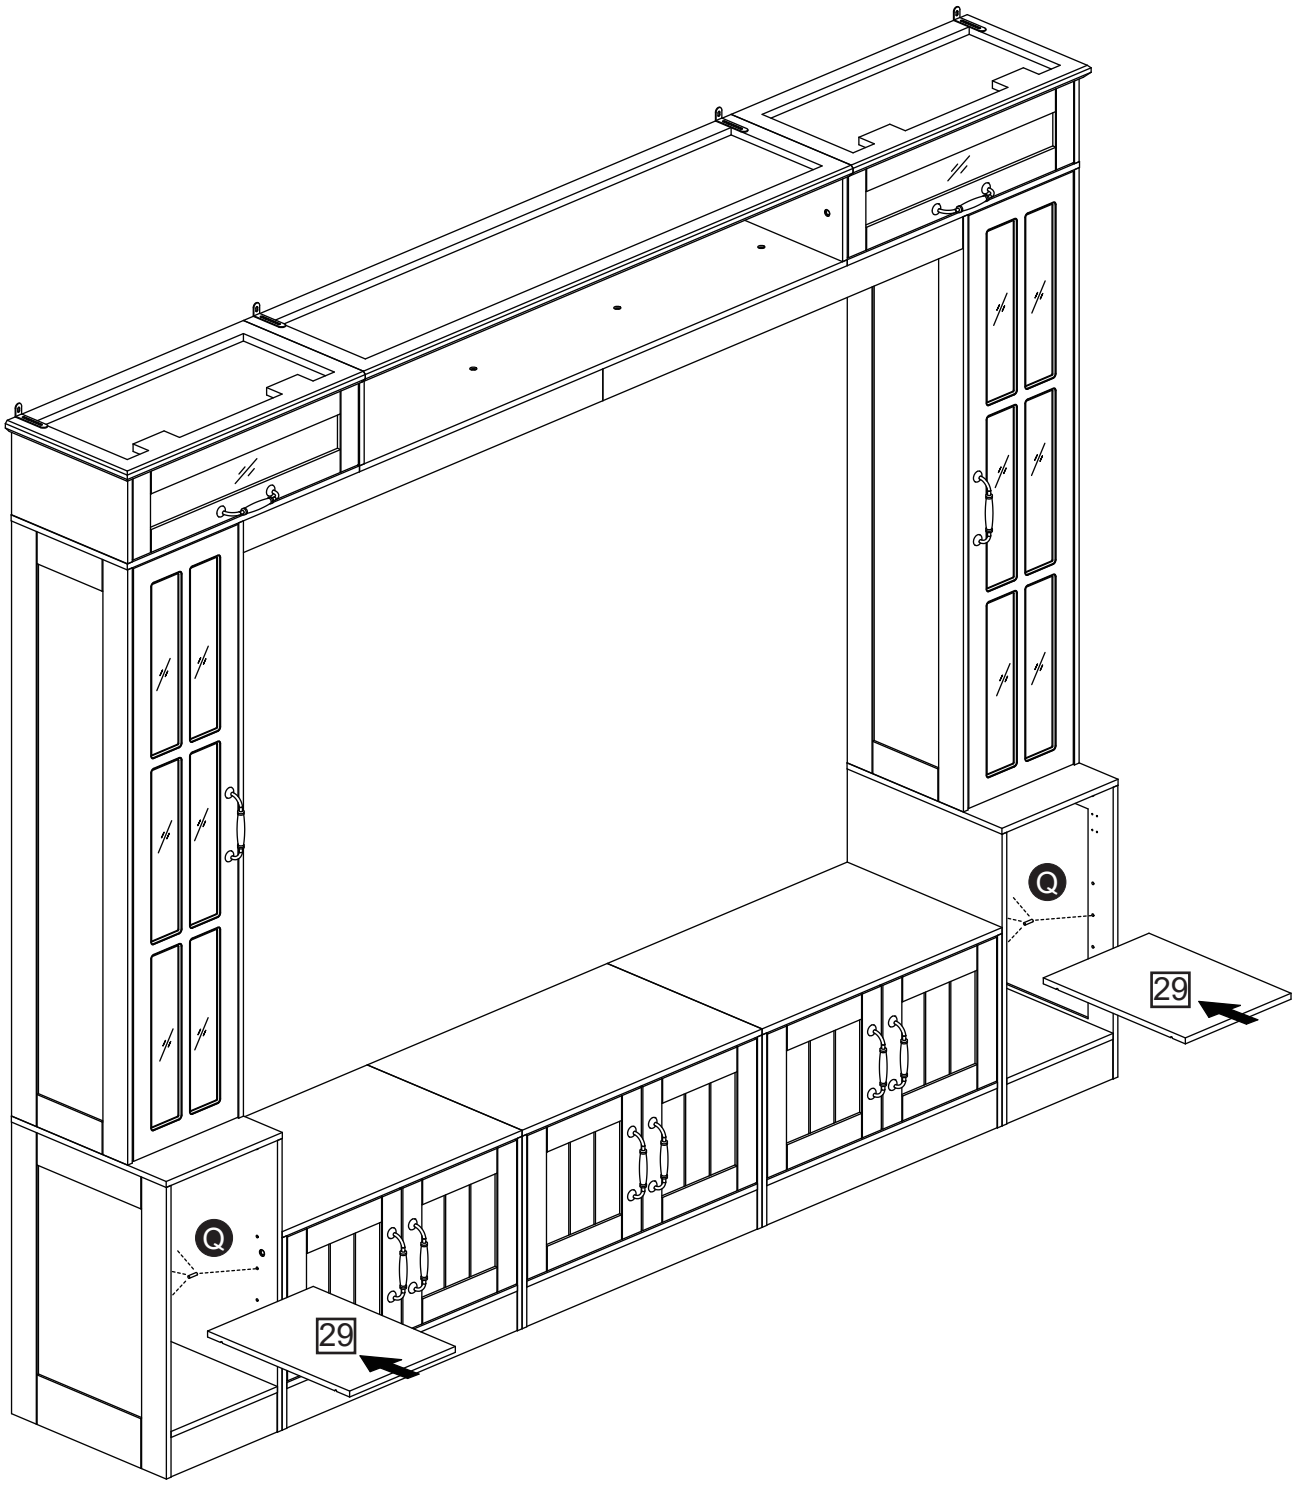

Assembly Instructions


Step 41

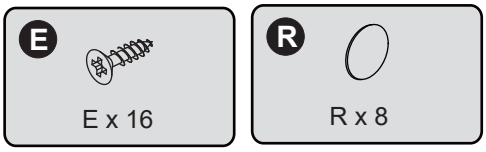


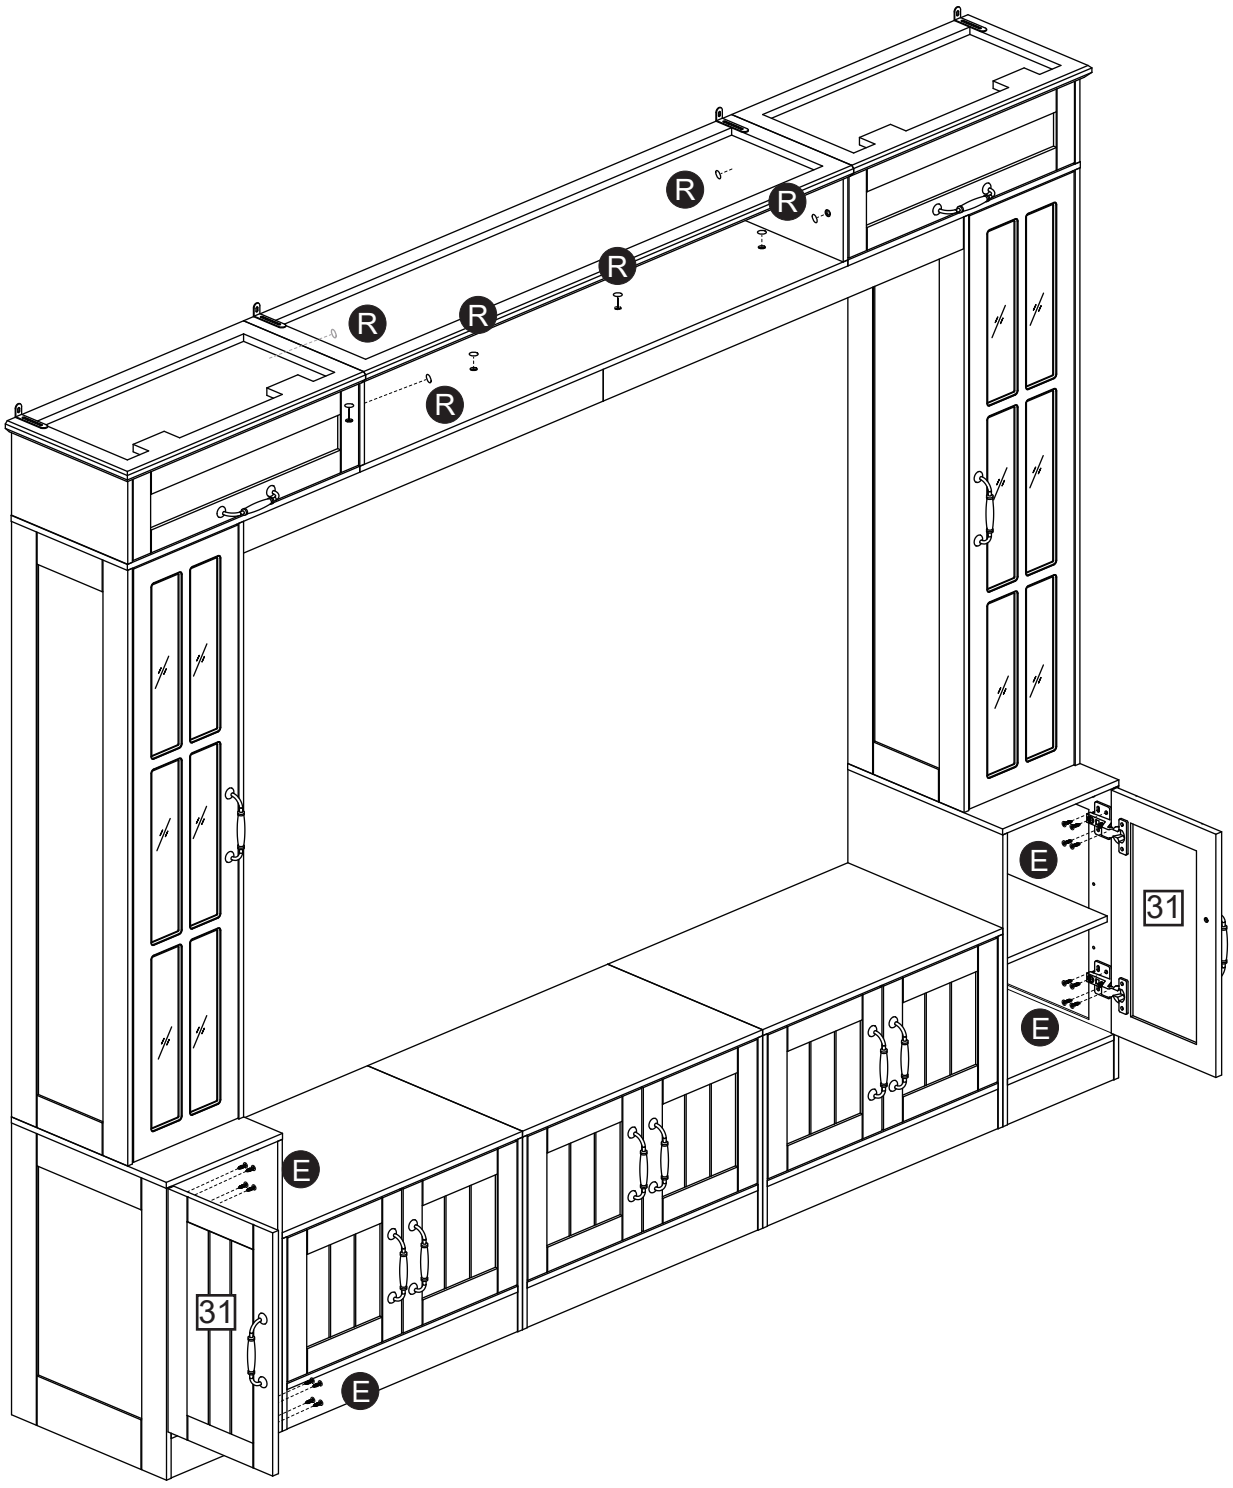

Assembly Instructions


Step 42

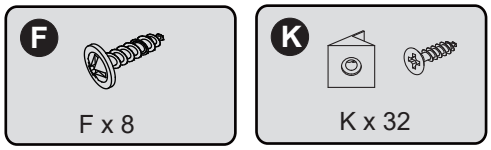


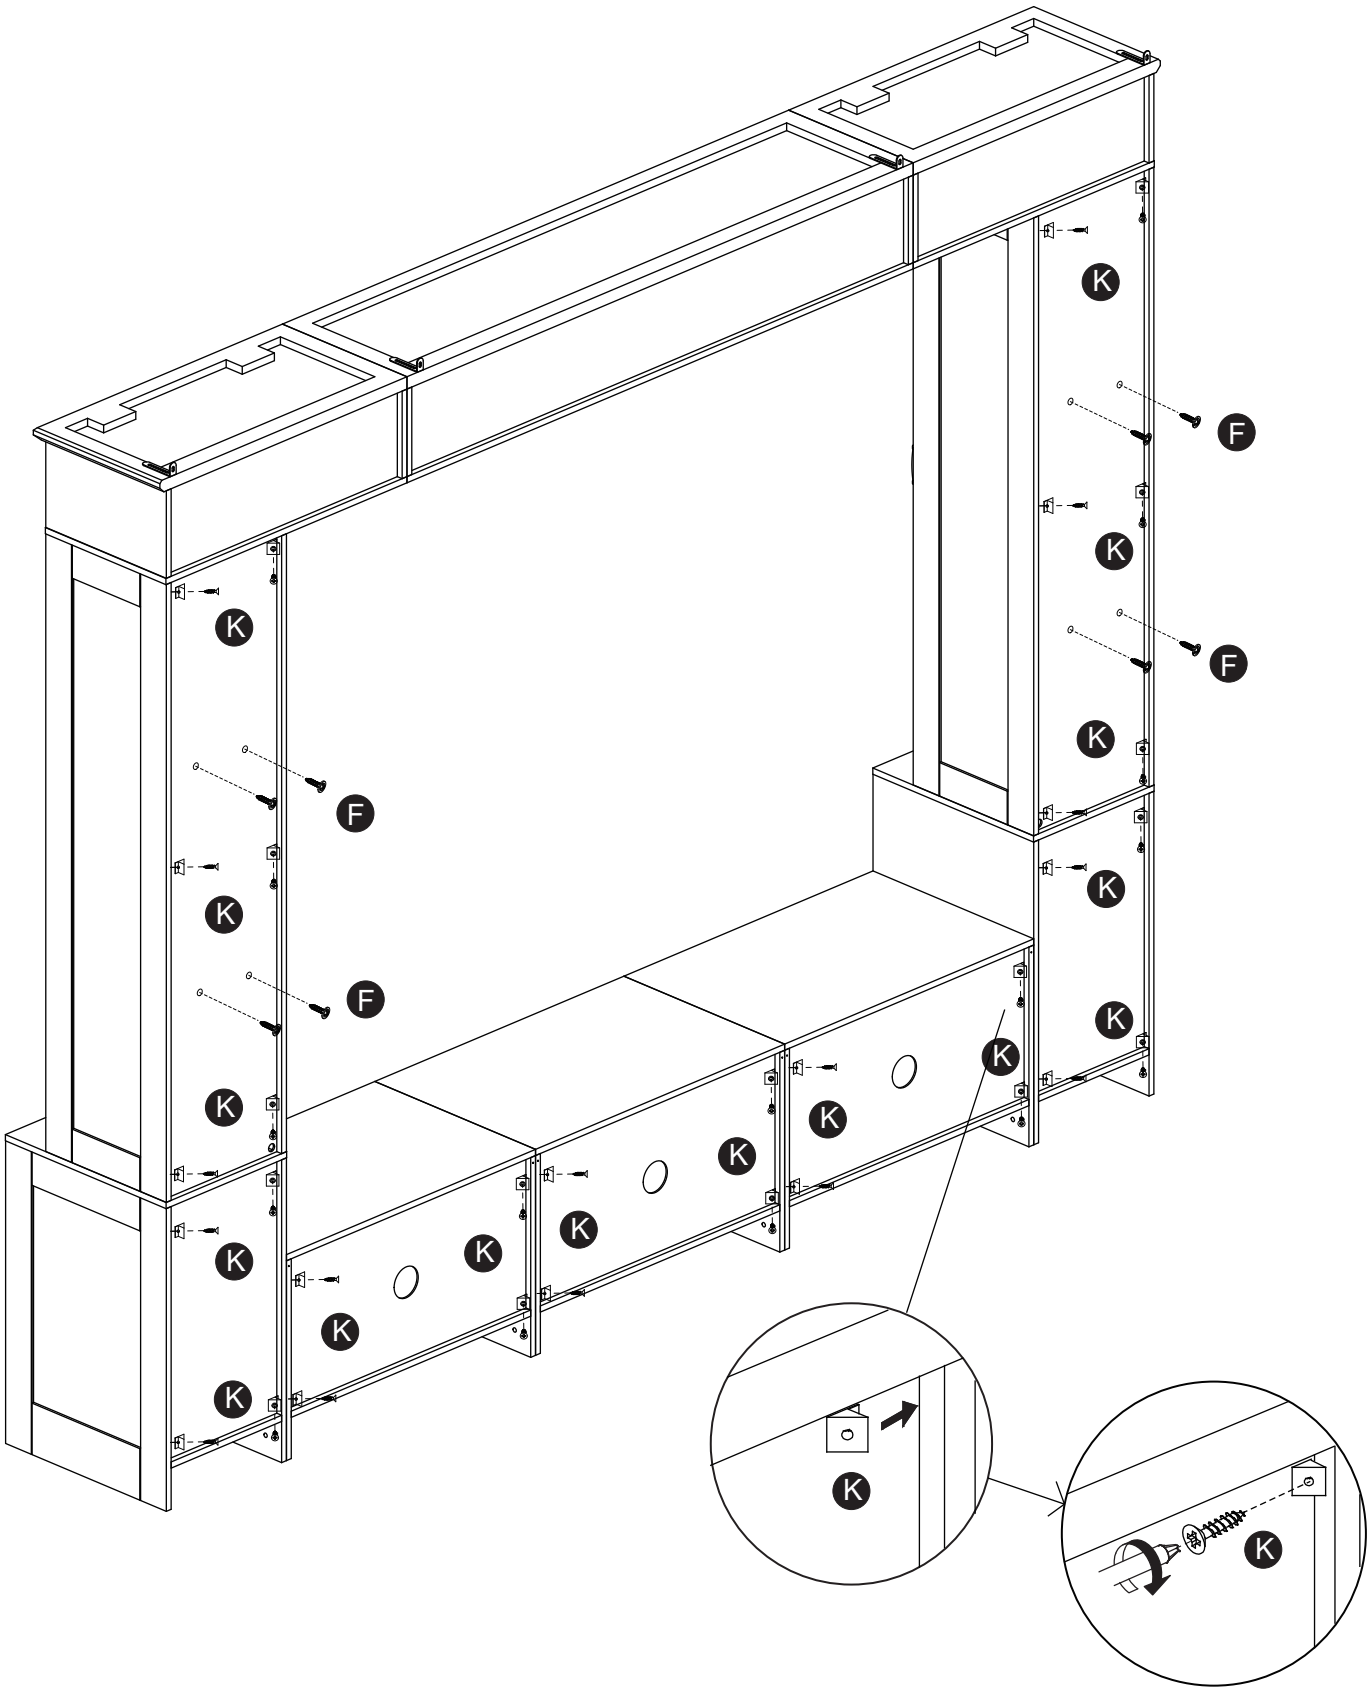

Assembly Instructions


Step 43

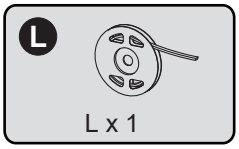


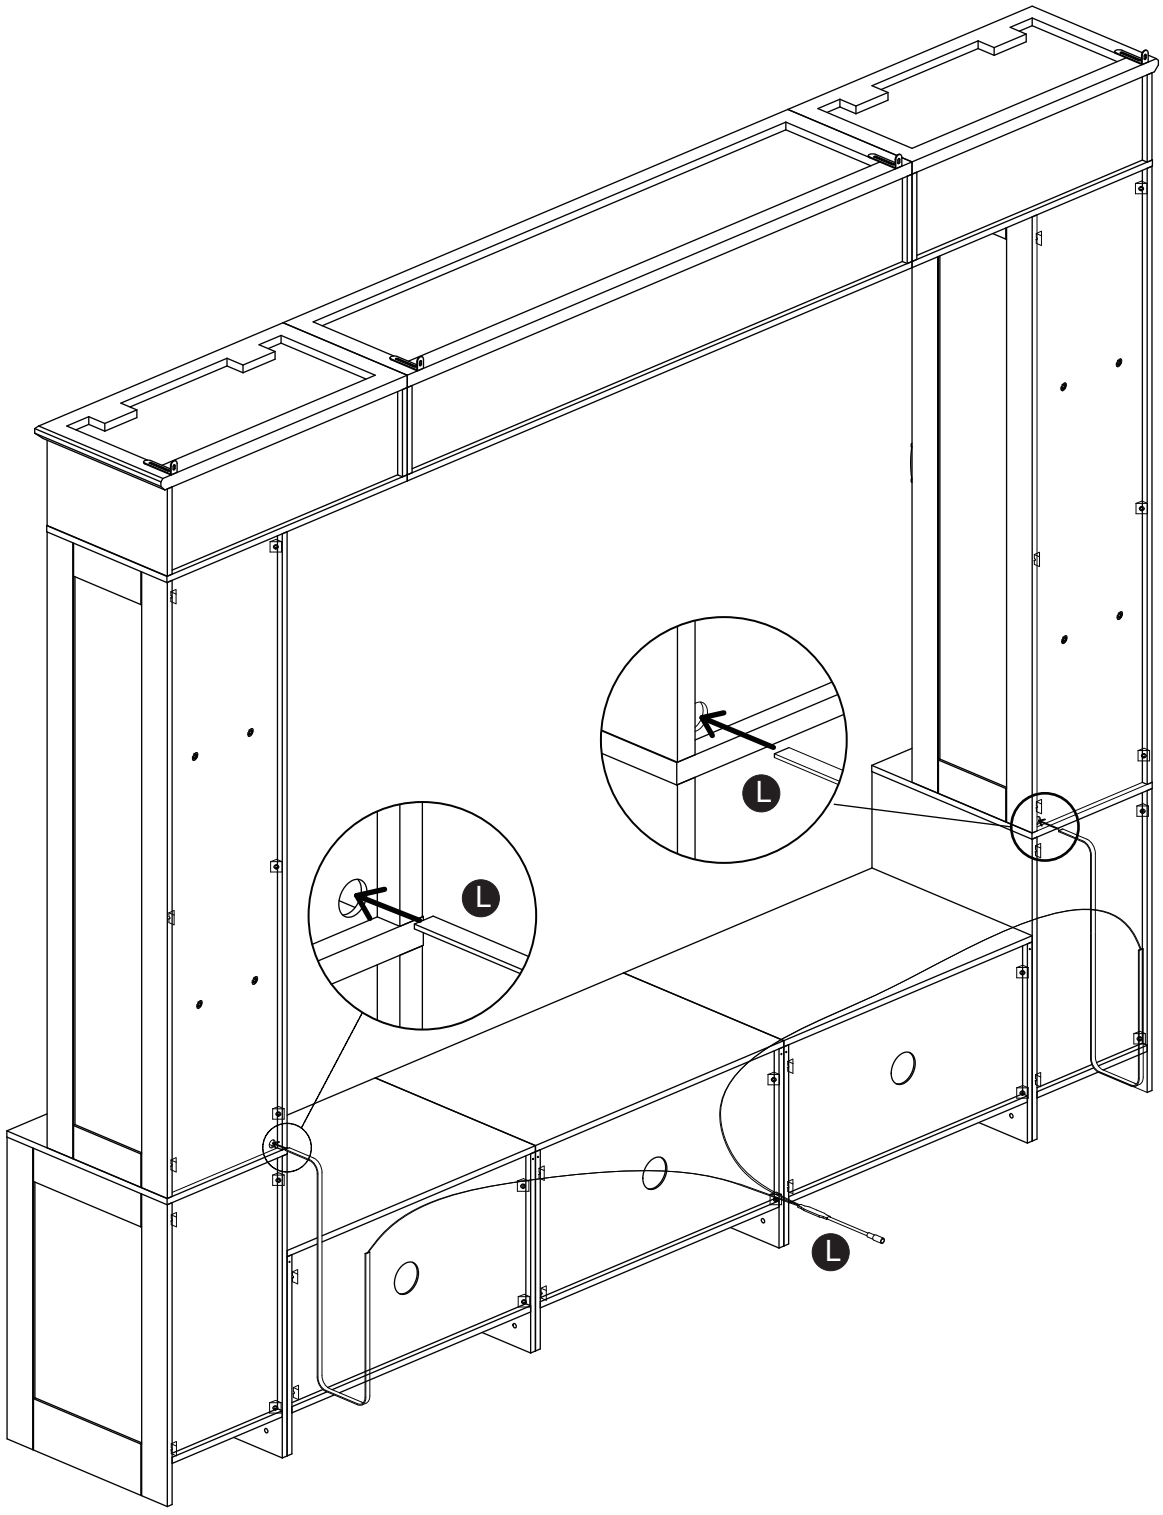

Assembly Instructions


Step 44

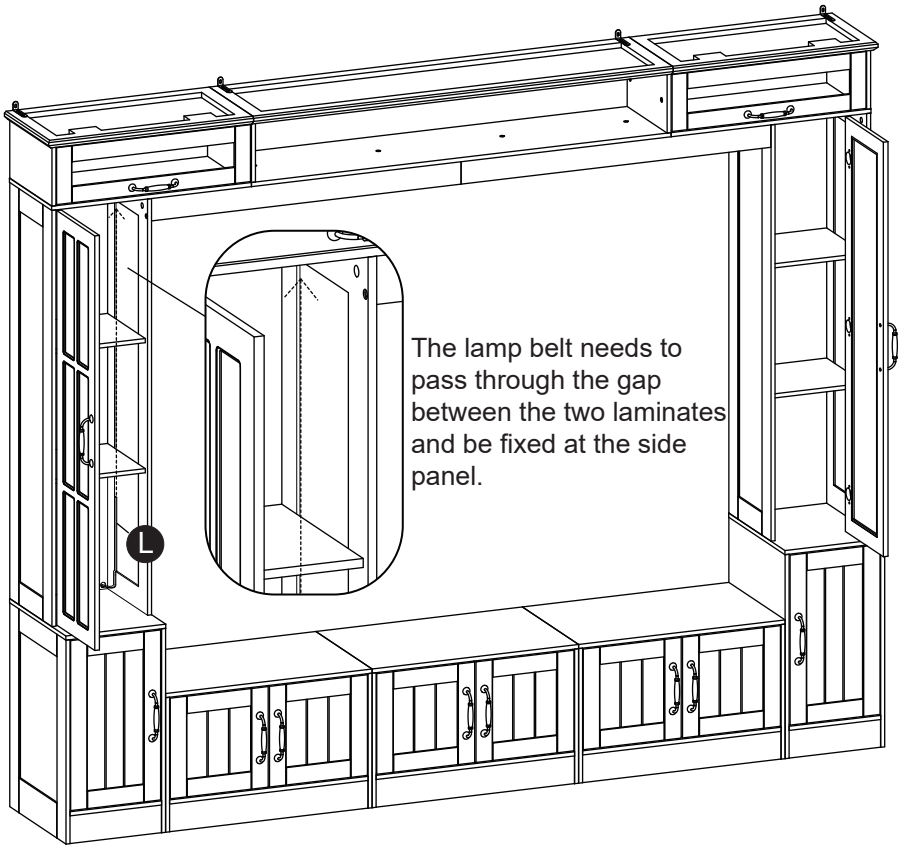

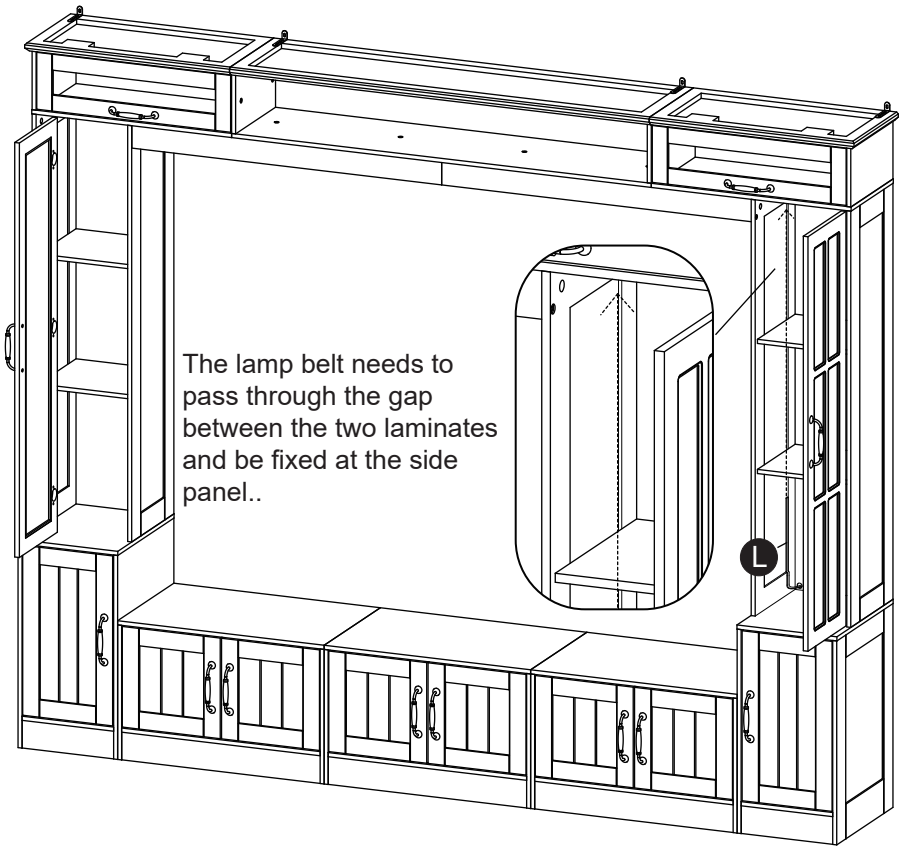


Assembly Instructions

Step 45

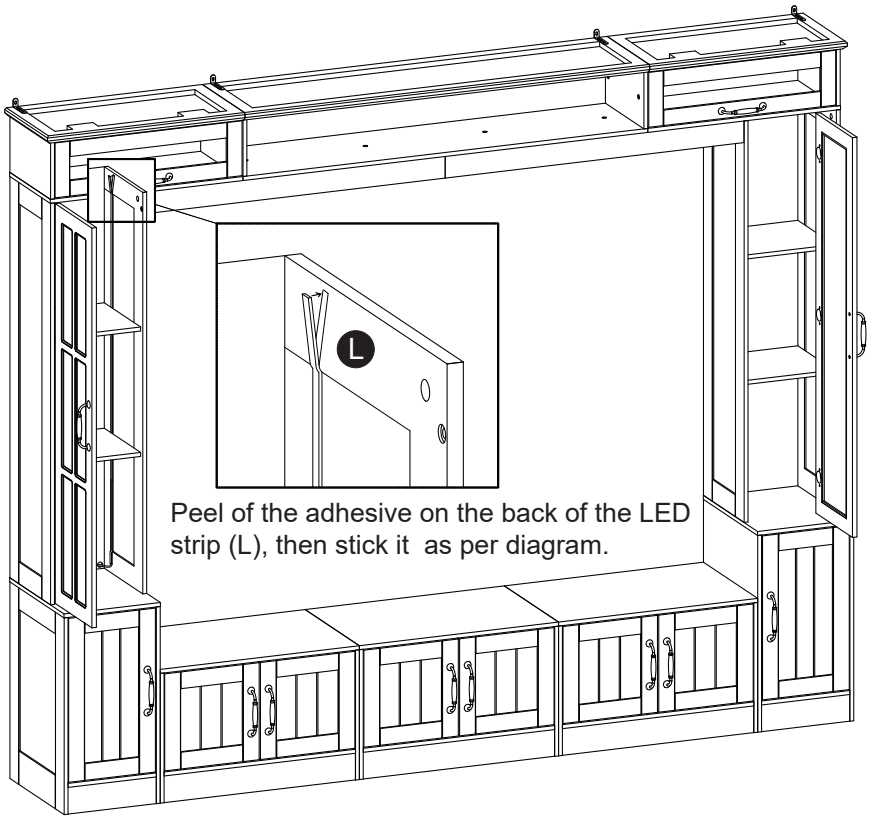


Peel of the adhesive on the back of the LED strip (L), then stick it as per diagram.

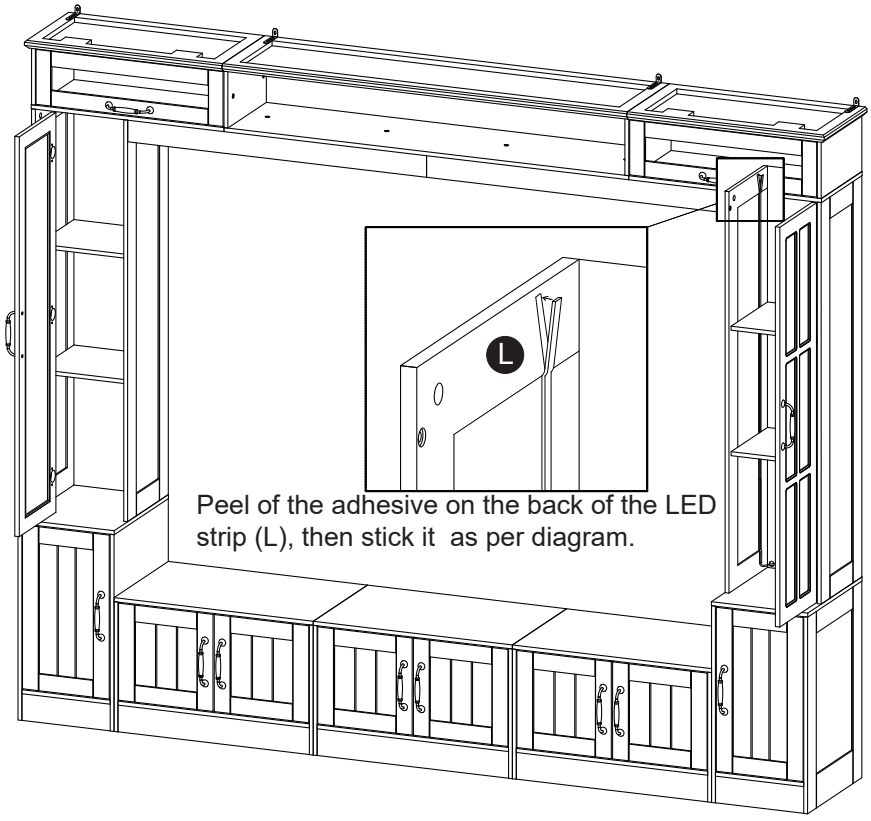


Peel of the adhesive on the back of the LED strip (L), then stick it as per diagram.

Assembly Instructions


Step 46

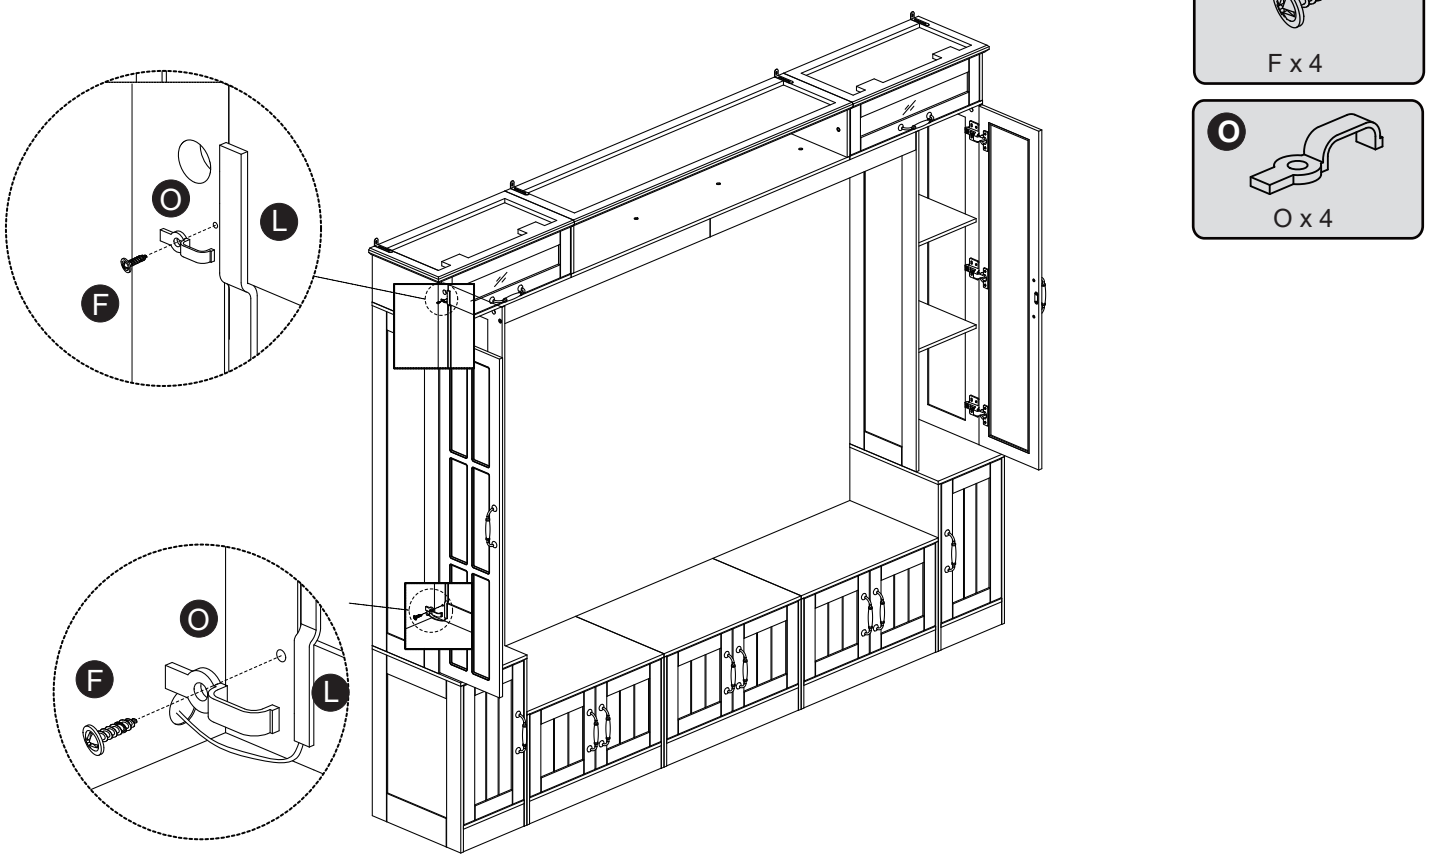


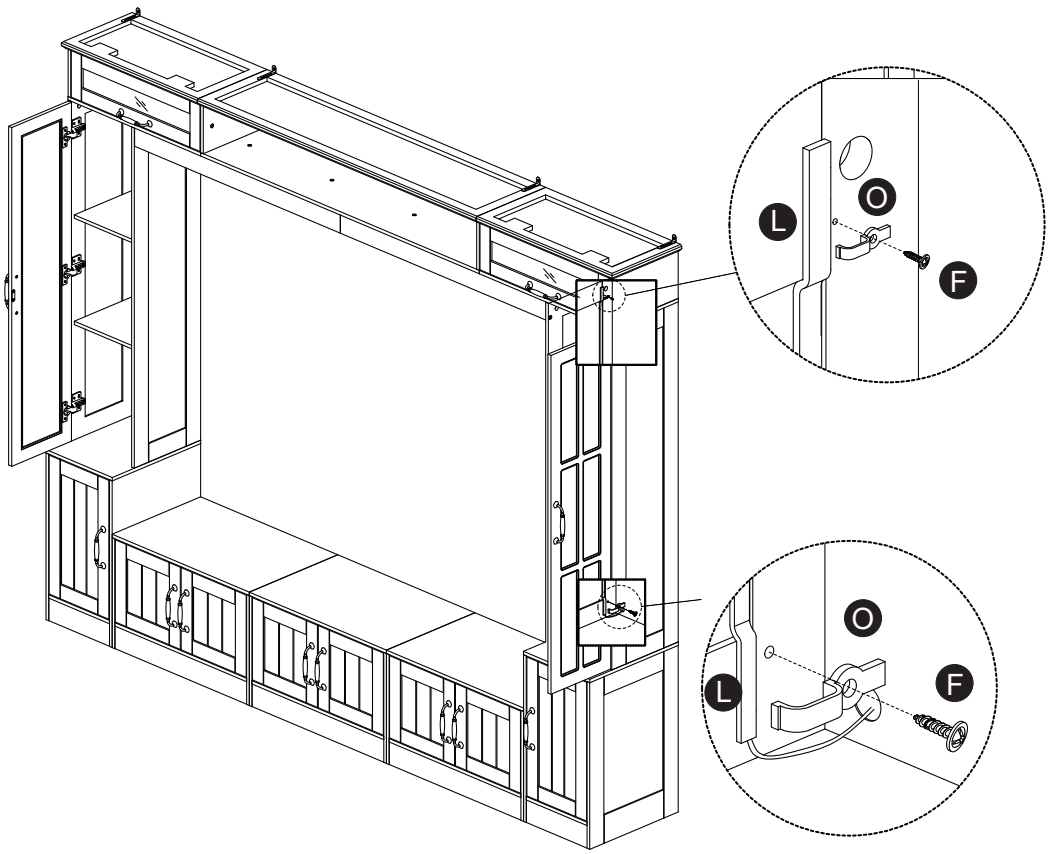


Assembly Instructions

Step 47

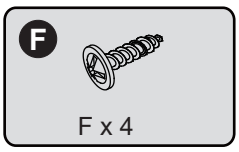


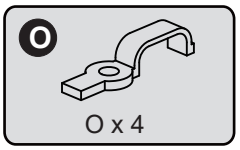


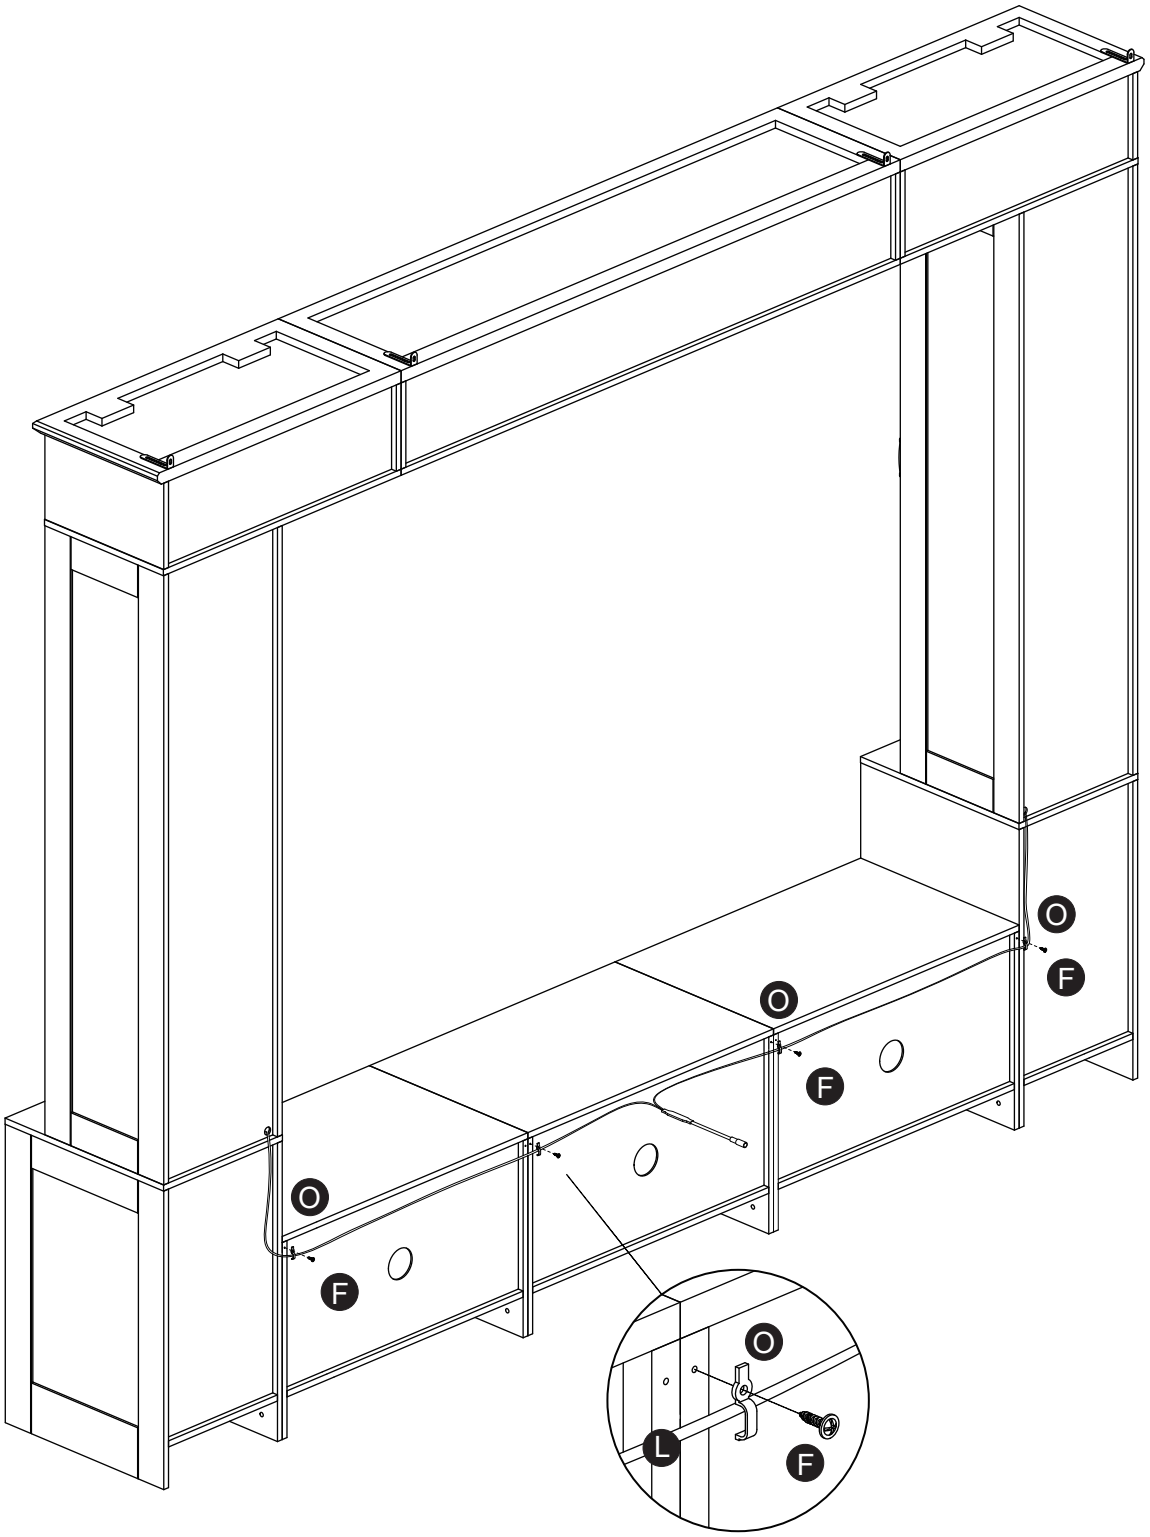


Assembly Instructions

Step 48

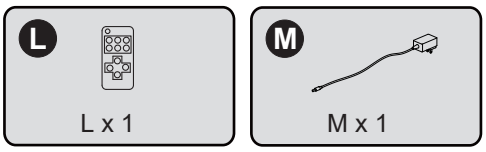

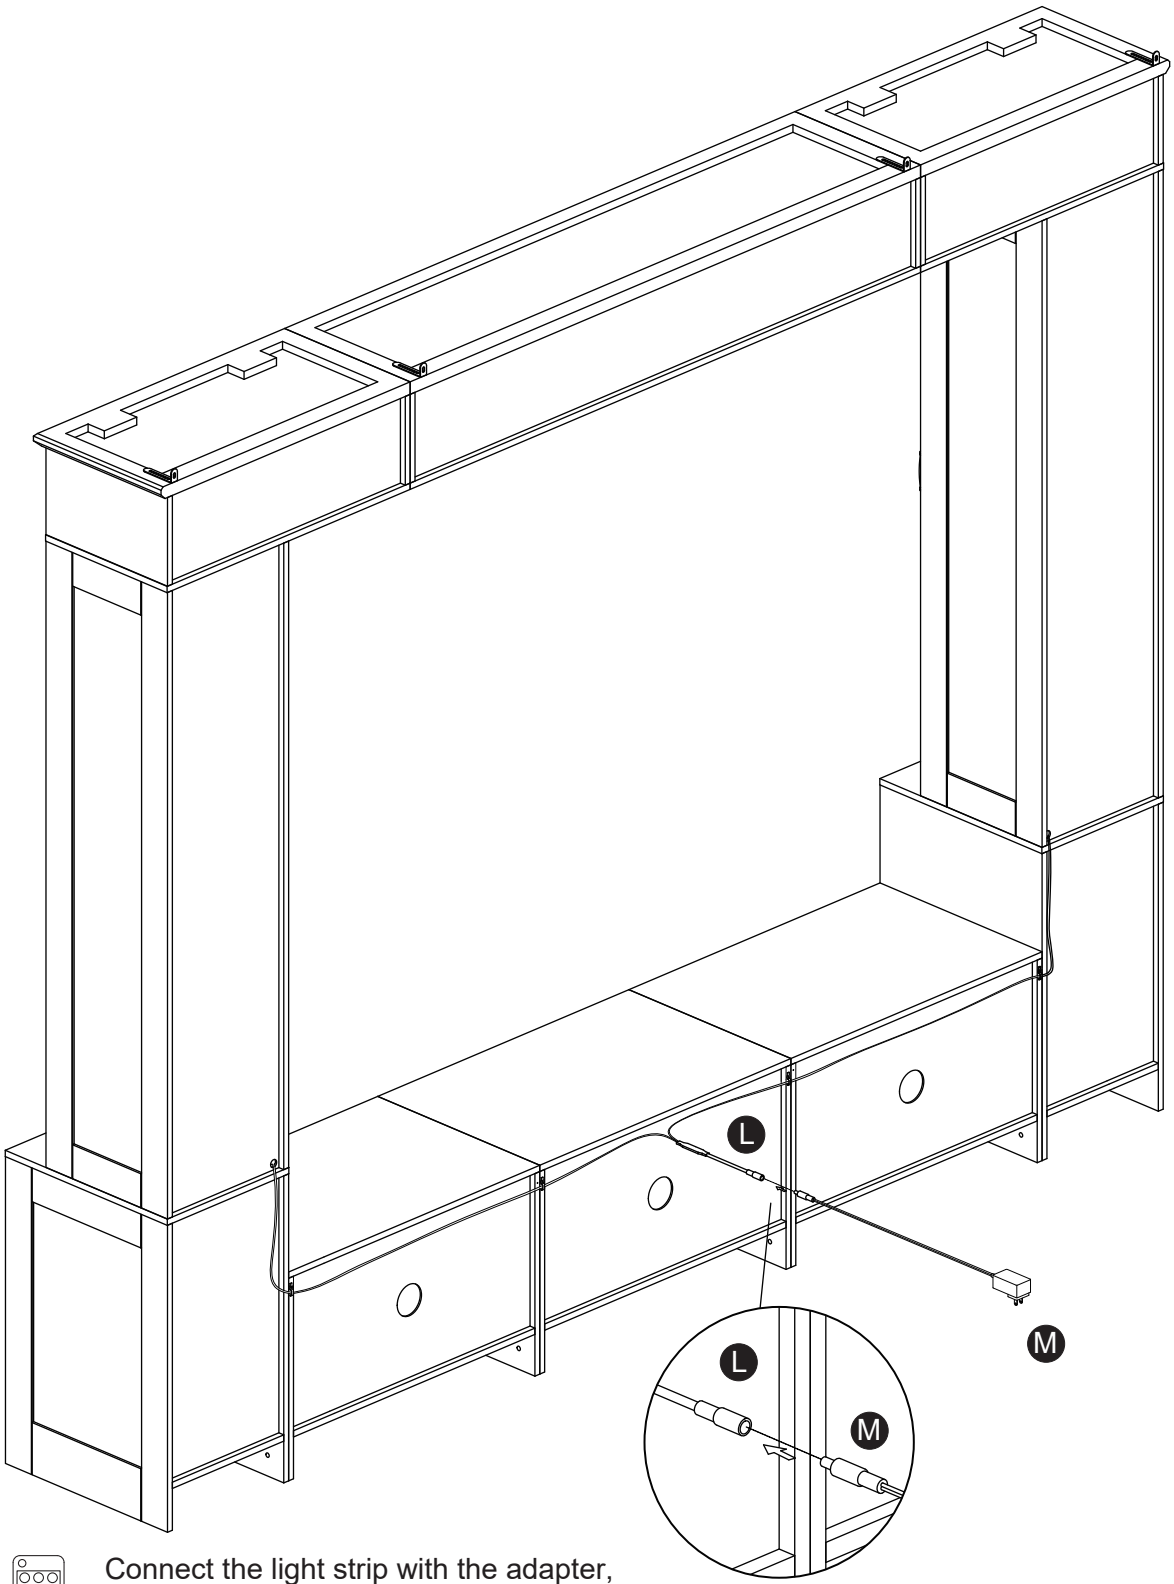



Connect the light strip with the adapter, then control the light with the remote control provided.