






INSTALLATION GUIDE


STOP, please make sure the cabinet is level before installing the countertop

INCLUDED	NEEDED	HARDWARE	
<ul style="list-style-type: none">• Base cabinet• Countertop• Sink basin• Backsplash• Hardware	<ul style="list-style-type: none">• Permanent marker• Caulking gun• Power Drill• Drywall Screws	<p data-bbox="684 245 706 277">A</p>  <p data-bbox="703 331 777 352">Bolts (4)</p> <p data-bbox="684 389 706 421">C</p>  <p data-bbox="698 427 799 448">Washers (4)</p>	<p data-bbox="874 277 897 309">B</p>  <p data-bbox="897 309 1012 330">Wing nuts (4)</p> <p data-bbox="874 389 897 421">D</p>  <p data-bbox="866 427 1046 448">Undermount clips (4)</p>

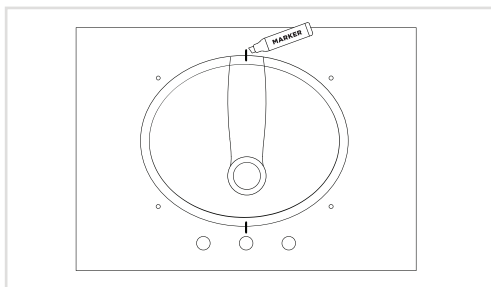


STEP 1 - PLACE & TRACE

Place the sink basin on the bottom of the countertop, making sure to center over the opening. Draw guide lines on the countertop and the basin in two locations.

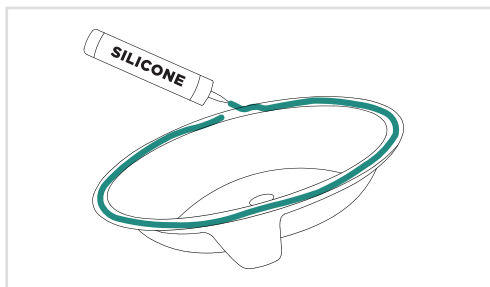


STEP 2 - PREPARE SINK BASIN

Using a caulking gun, apply a heavy amount of silicone of your choice on the top side of the sink basin edge.

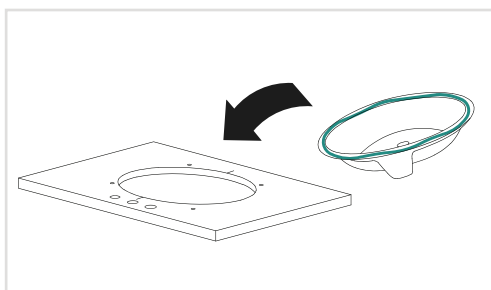

STEP 3 - FLIP & SET IN PLACE


Carefully flip the sink basin over and place it so the guide lines match up in both locations.

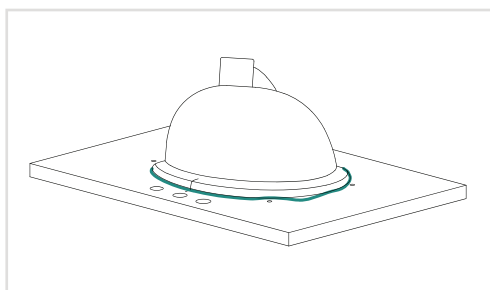

STEP 4 - DRY & SET

Press down on the sink basin to seal the silicone. Remove any excess. Follow dry time recommendation found on your product, typically 12 to 24 hours.

INSTALLATION GUIDE

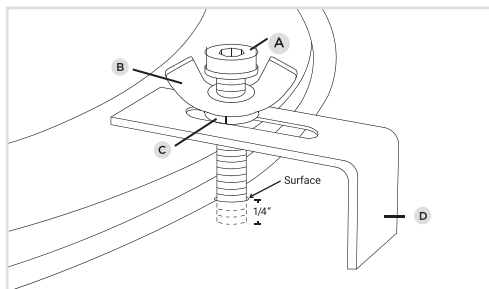

STEP 5 - ATTACH UNDERMOUNT CLIPS

Please tighten Bolt (A) into wing nut (B) slide on washer (C) and guide through Under-mount clip (D) opening into threaded bolt hole in the countertop. ONLY-Hand Tighten Bolt (A) to a depth of about 1/4" below countertop surface. Then secure the Sink with the under-mount clip (D) by Tightening wing nut (B) only




STEP 6 - ATTACH BASE CABINET TO WALL

Place cabinet in desired location and determine where the wall studs are.



STEP 7 - PREPARE BASE CABINET

Using a caulking gun, apply silicone around the top of the base cabinet.

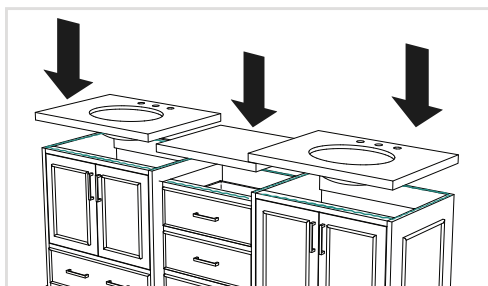

STEP 8 - SET COUNTERTOP IN PLACE

Carefully place the countertop, with the sink attached, onto the cabinet and press down firmly. Wipe away any excess silicone immediately.



STEP 9 - SET MEDICINE CABINET

Place the medicine cabinet onto the middle countertop. Using drywall screws, attach the medicine cabinet to the wall by screwing it into the wall studs.



STEP 10 - SET BACKSPLASH AND MIRRORS

Apply silicone in the back and bottom of these backsplashes, and press firmly down. Determine the location of 2 wall mirrors and easily set them in place.