


12 x 12 FT

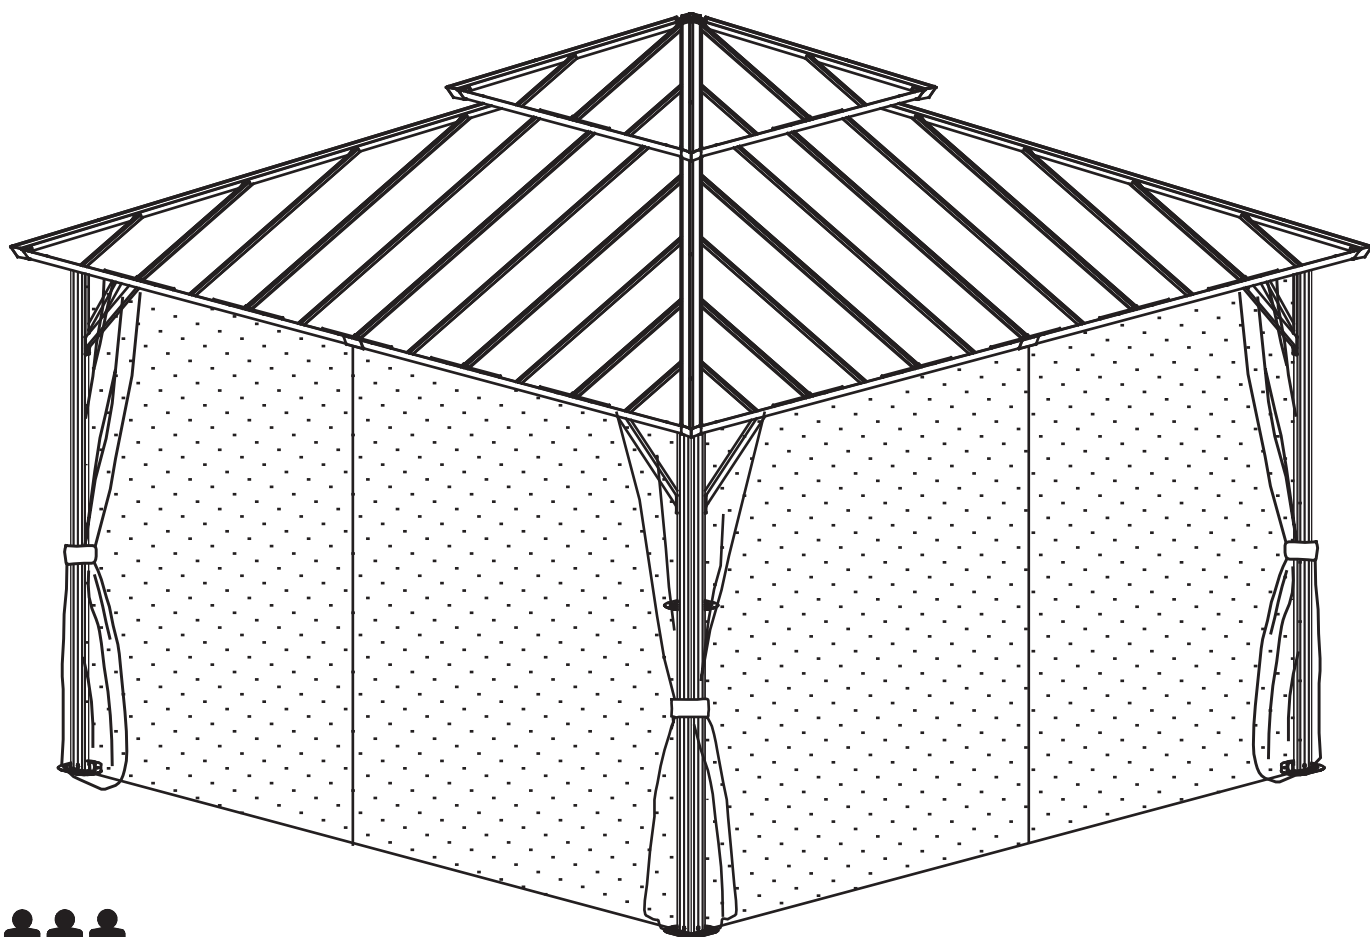

WQG-029-4




Need at least three people to work together

REQUIRED TOOLS







(A2) 4x

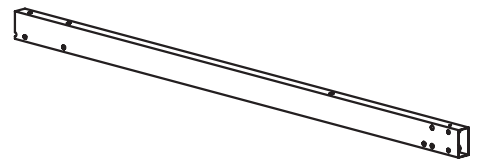


(B7) 4x

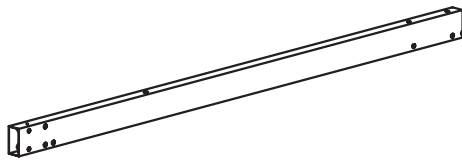


(B8) 4x

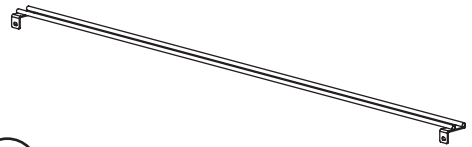


(C4) 8x

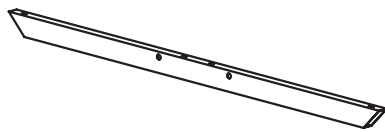


(D3) 4x

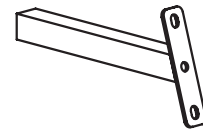


(D7) 4x

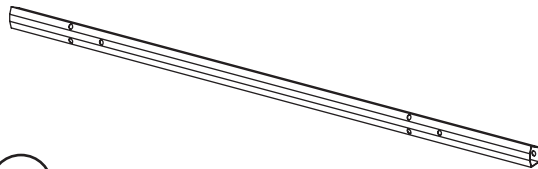

(E4) 4x

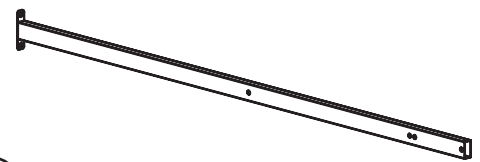


(E5) 4x

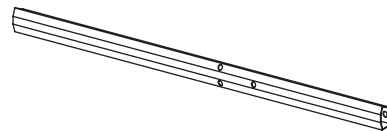


(E6) 4x




(F5) 4x

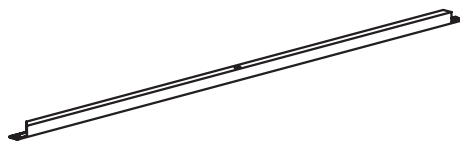


(F6) 4x




(G3) 4x




(H2) 8x

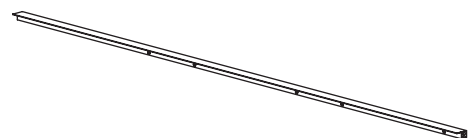

(I5) 4x

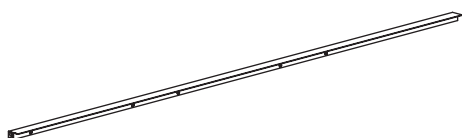

(I6) 4x

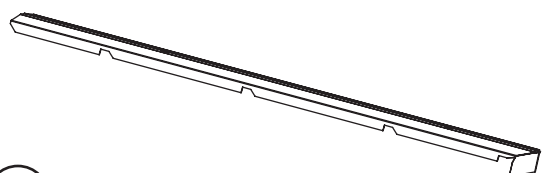

(R3) 4x




(R7) 4x



(J) 4x




(K1) 4x



(K2) 4x




(L3) 1x

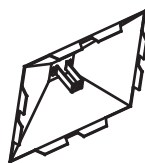


(L4) 1x




(N1) 24x



(P) 4x




(Q2) 4x




(Q3) 8x



(W2) 4x

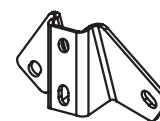


(W3) 4x



(W4) 4x



(W5) 8x



(Y) 12x




(Y1) 112x




(Y2) 72x



(M1) 4x

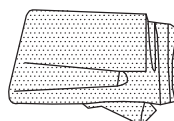

(M2) 4x

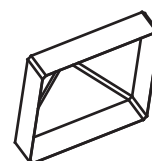

(M3) 1x



(O6) 8x



(O7) 8x



(O8) 4x



(O9) 4x



(O10) 4x



(O11) 4x



M6x15

① 292x



M5x15

② 16x



M6x12

③ 4x



ST4.8x12

④ 8x



M6x25

⑥ 4x



⑦ 1x



⑧ 16x



M6x40

⑨ 20x



⑩ 12x



⑫ 8x




4mm

⑬ 1x






4mm

⑮ 1x



⑯ 1x

<1>

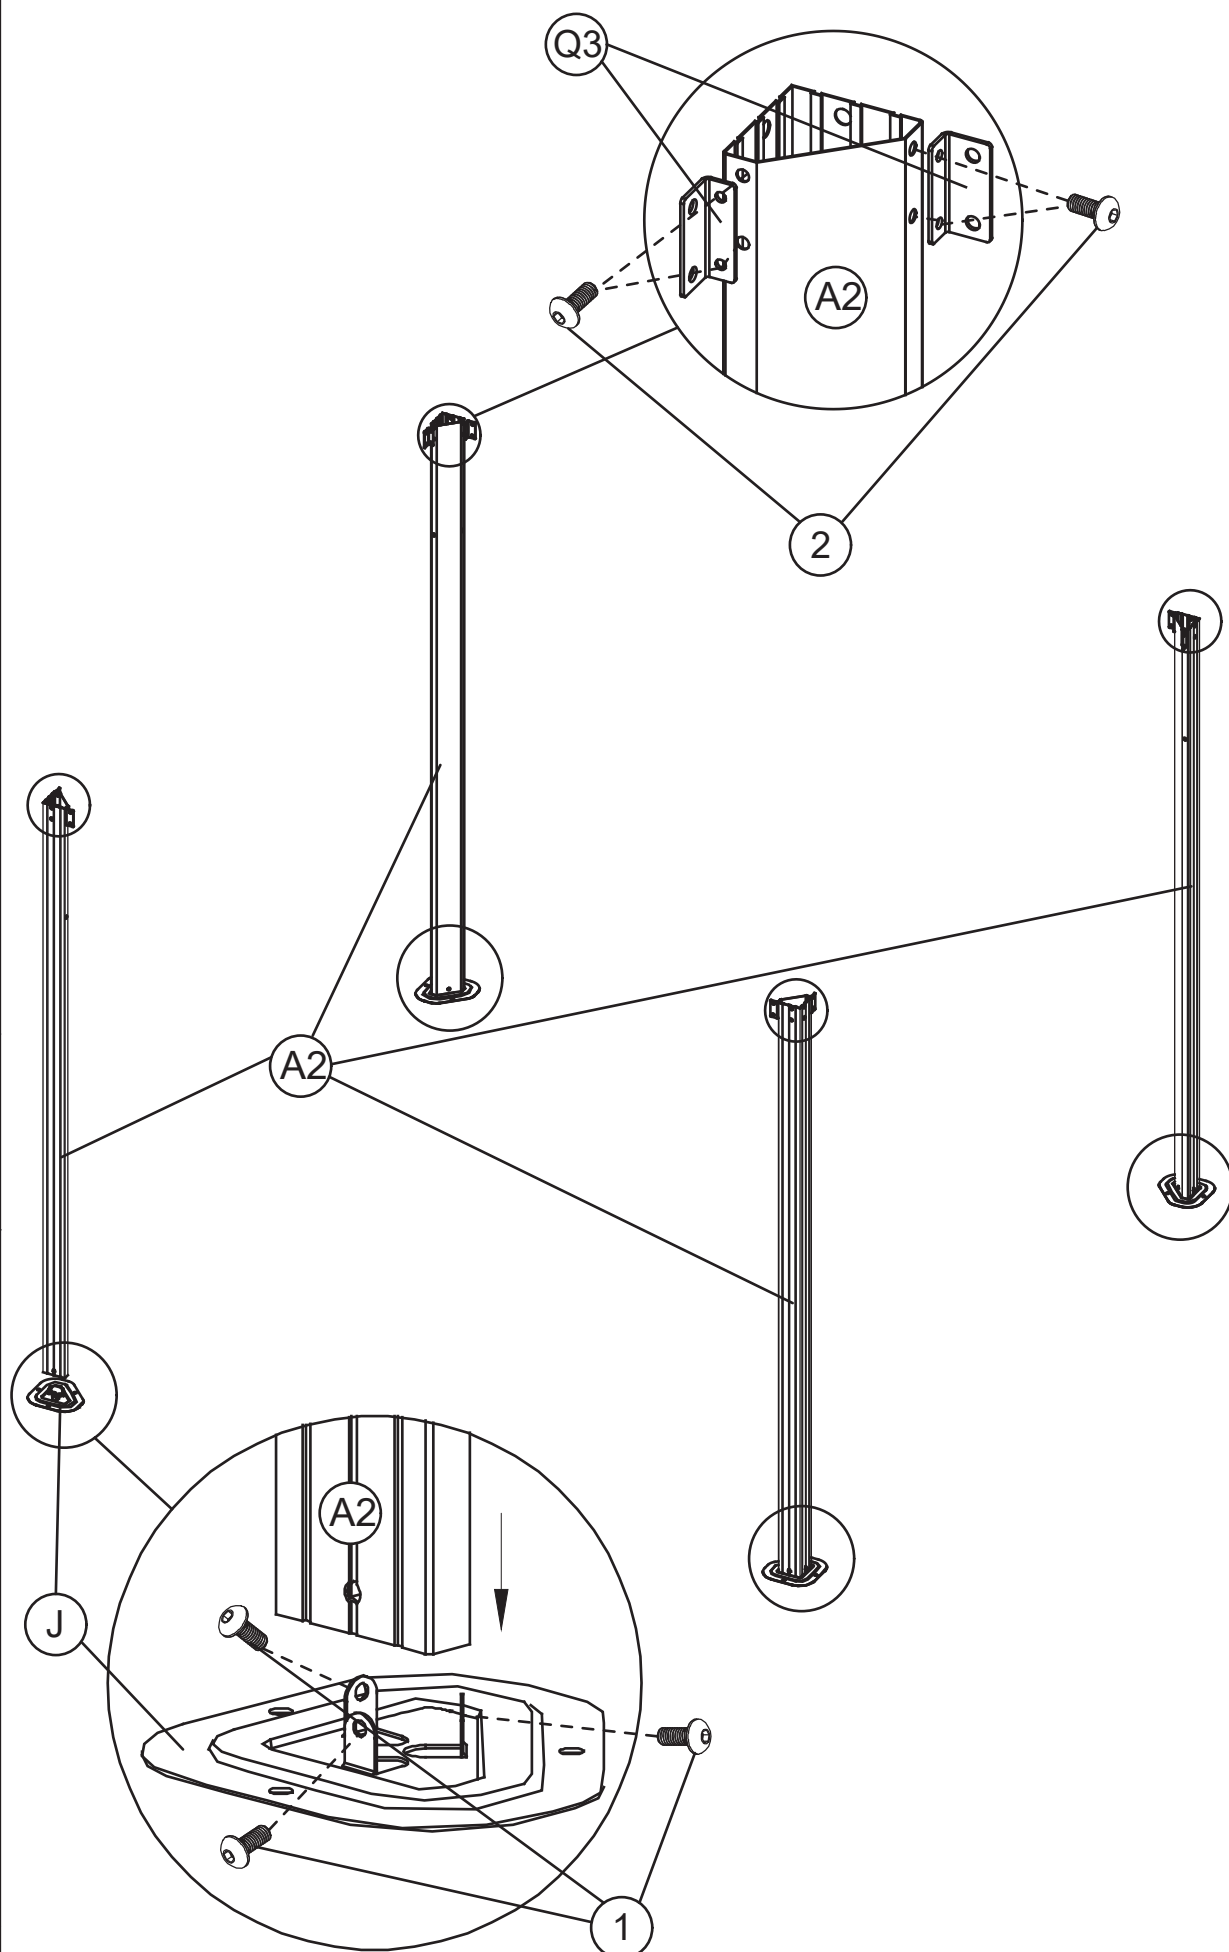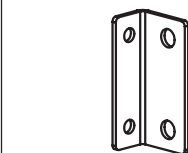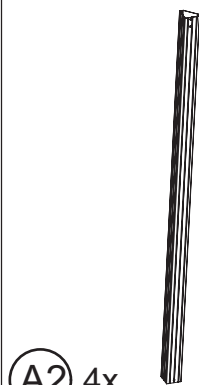




(B7) 4x



(B8) 4x




(P) 4x



M6x15

(1) 16x

<2>

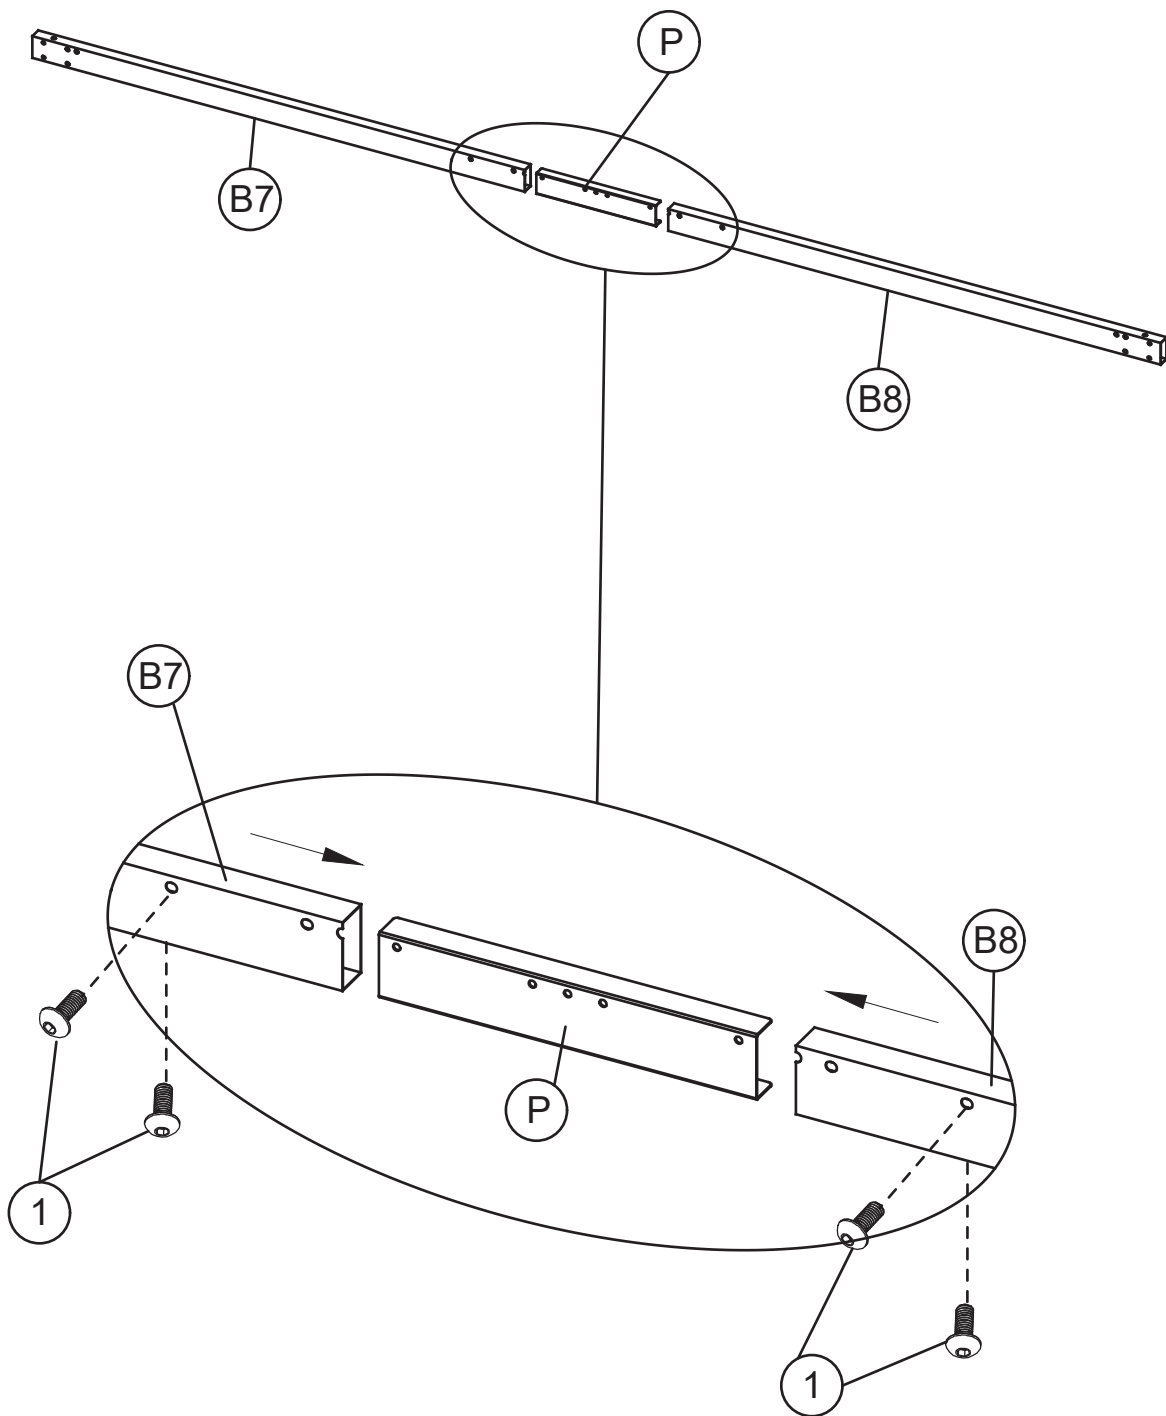




M6x15

1 16x



8 16x

<3>

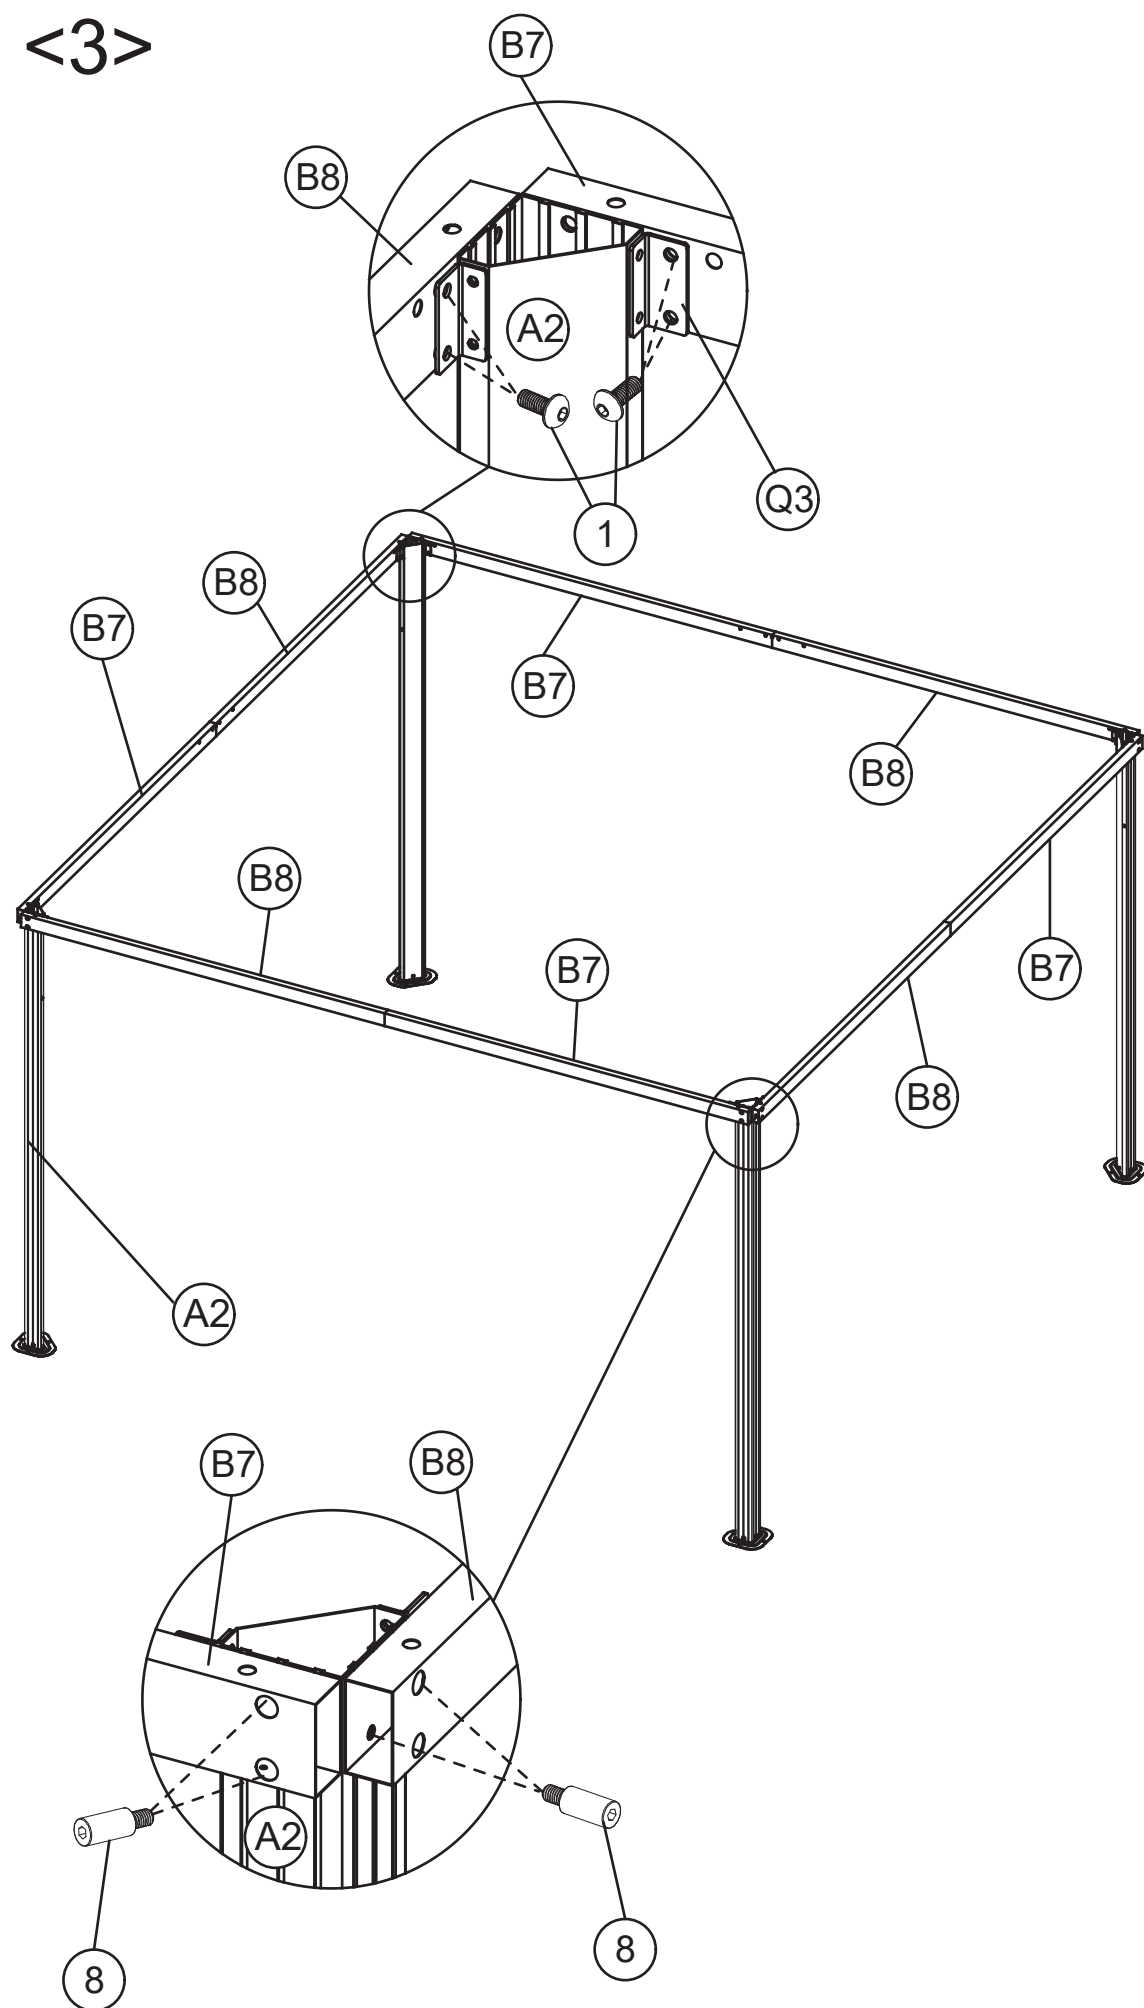



(H2) 8x




M6x15

(1) 16x



(10) 12x

<4>

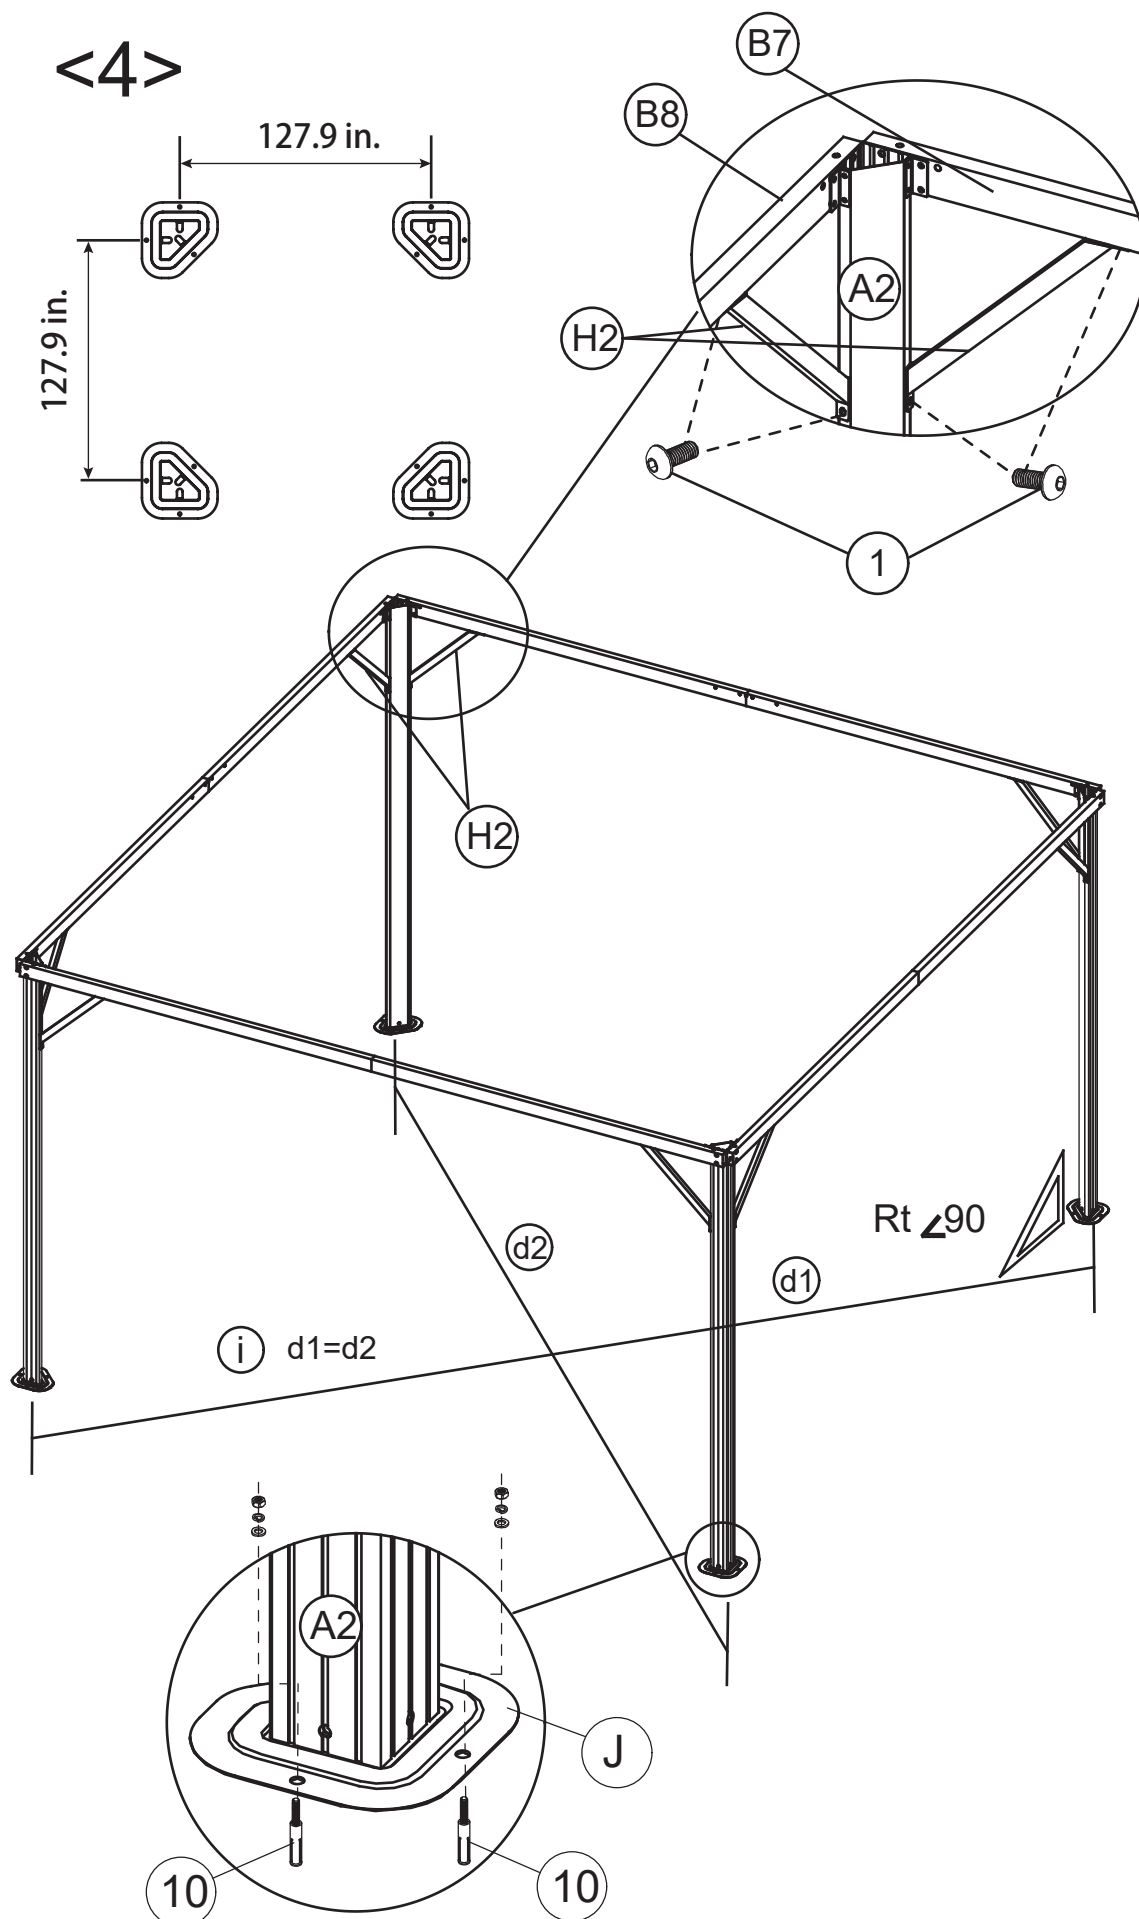

Tips: Please measure to make sure the length of d1 is equal to d2 before moving to next step to ensure a square frame and best results. Otherwise, please loosen the "H2" screws and adjust them. Keep the beam at right angles to the post, the post at right angles to the ground, and keep the beam horizontal.



D3 4x




W2 4x



M6x15


1 16x

<5>

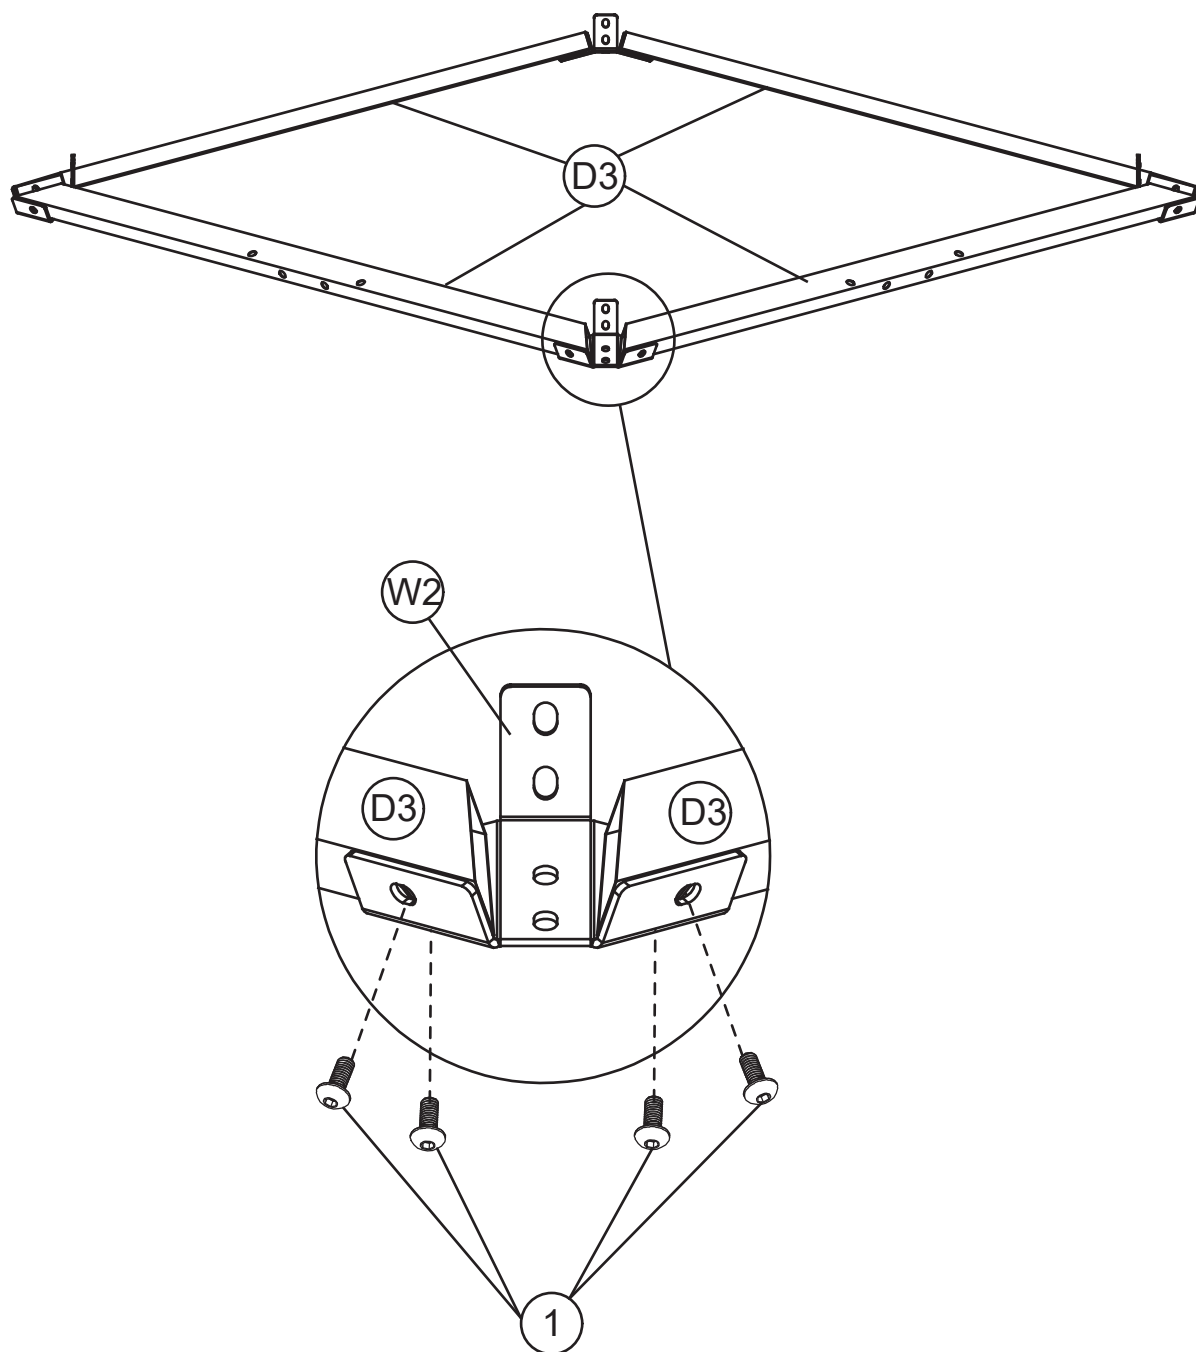




(E5) 4x



(Q2) 4x




(W4) 4x



M6x15

(1) 20x

<6>


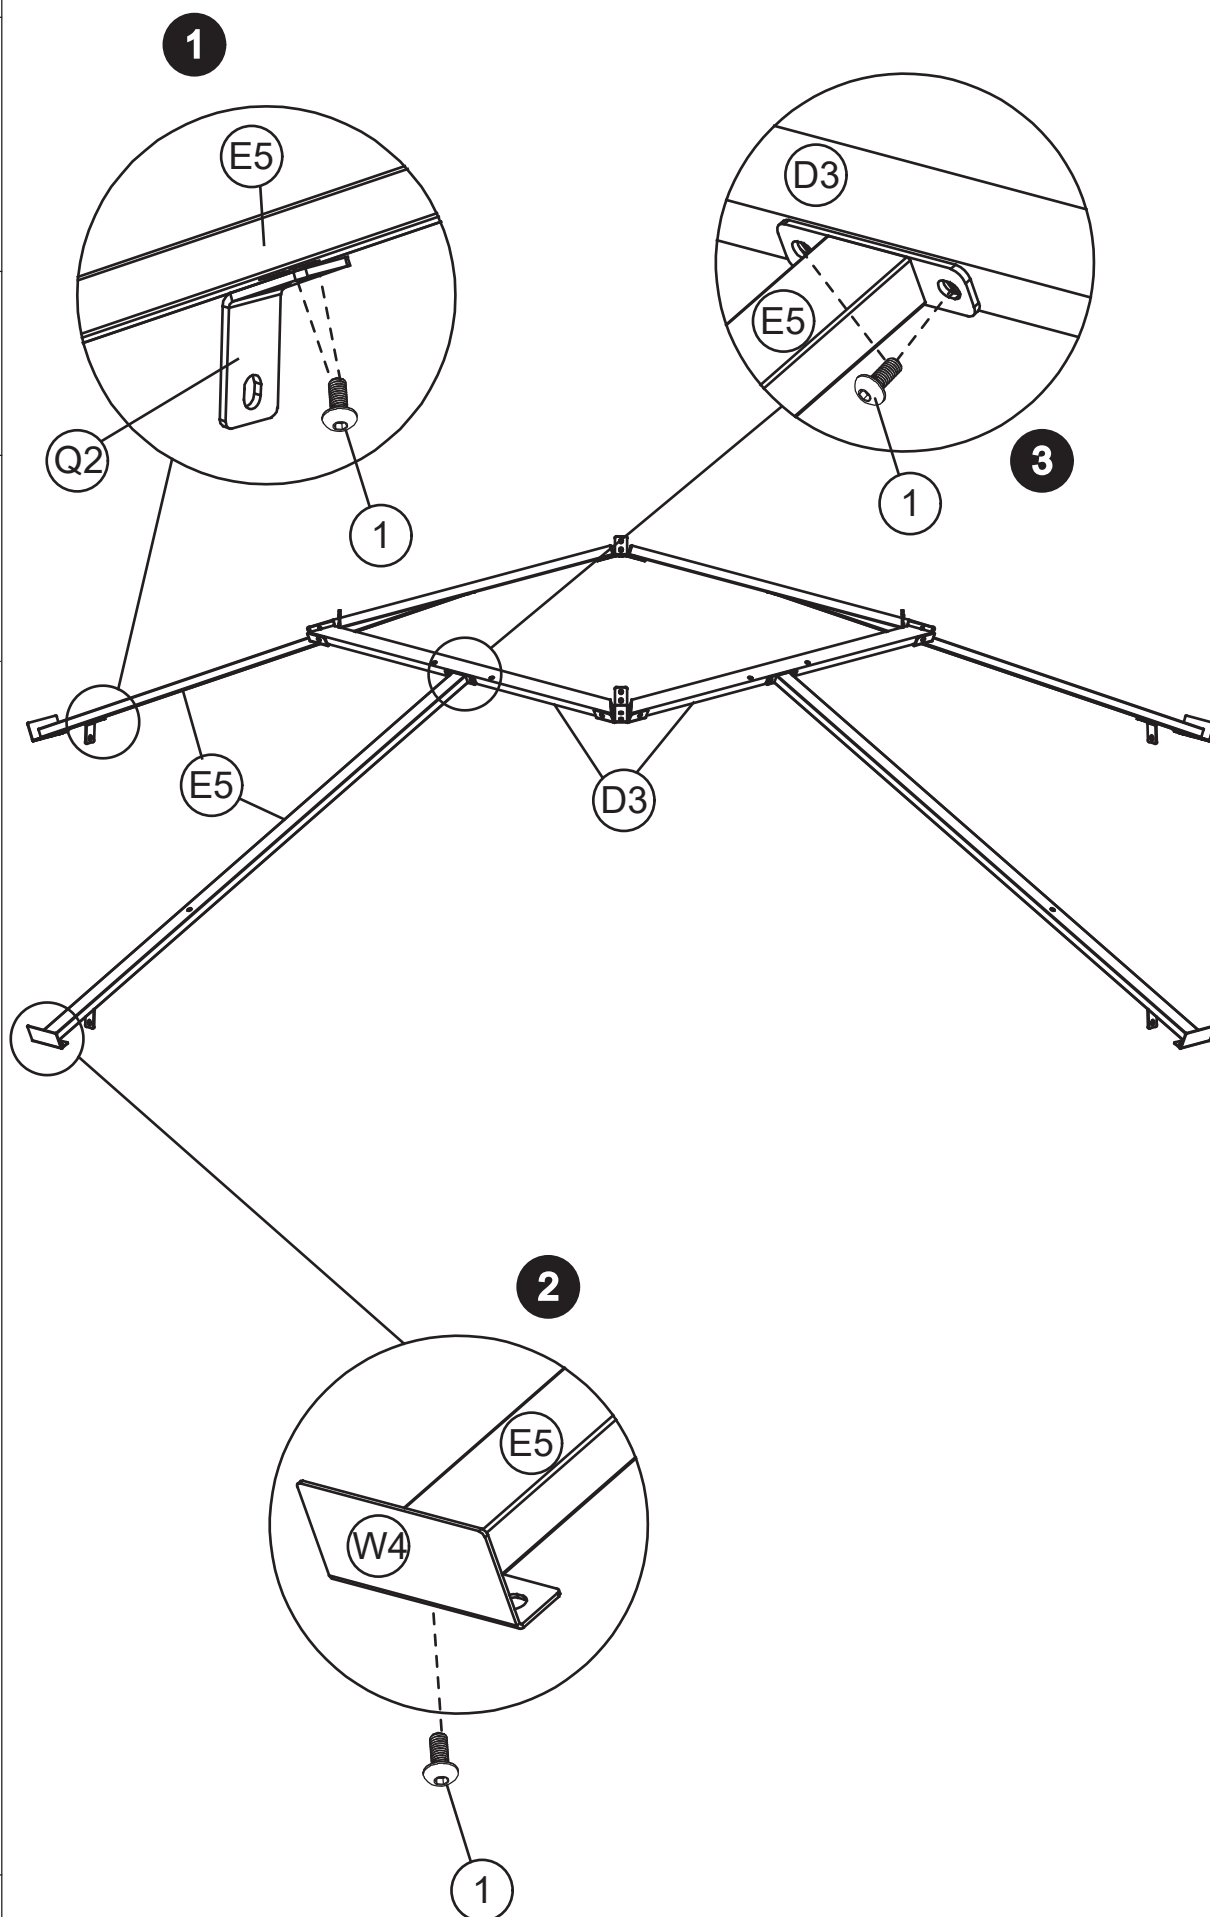




M6x15

1 4x

<7>

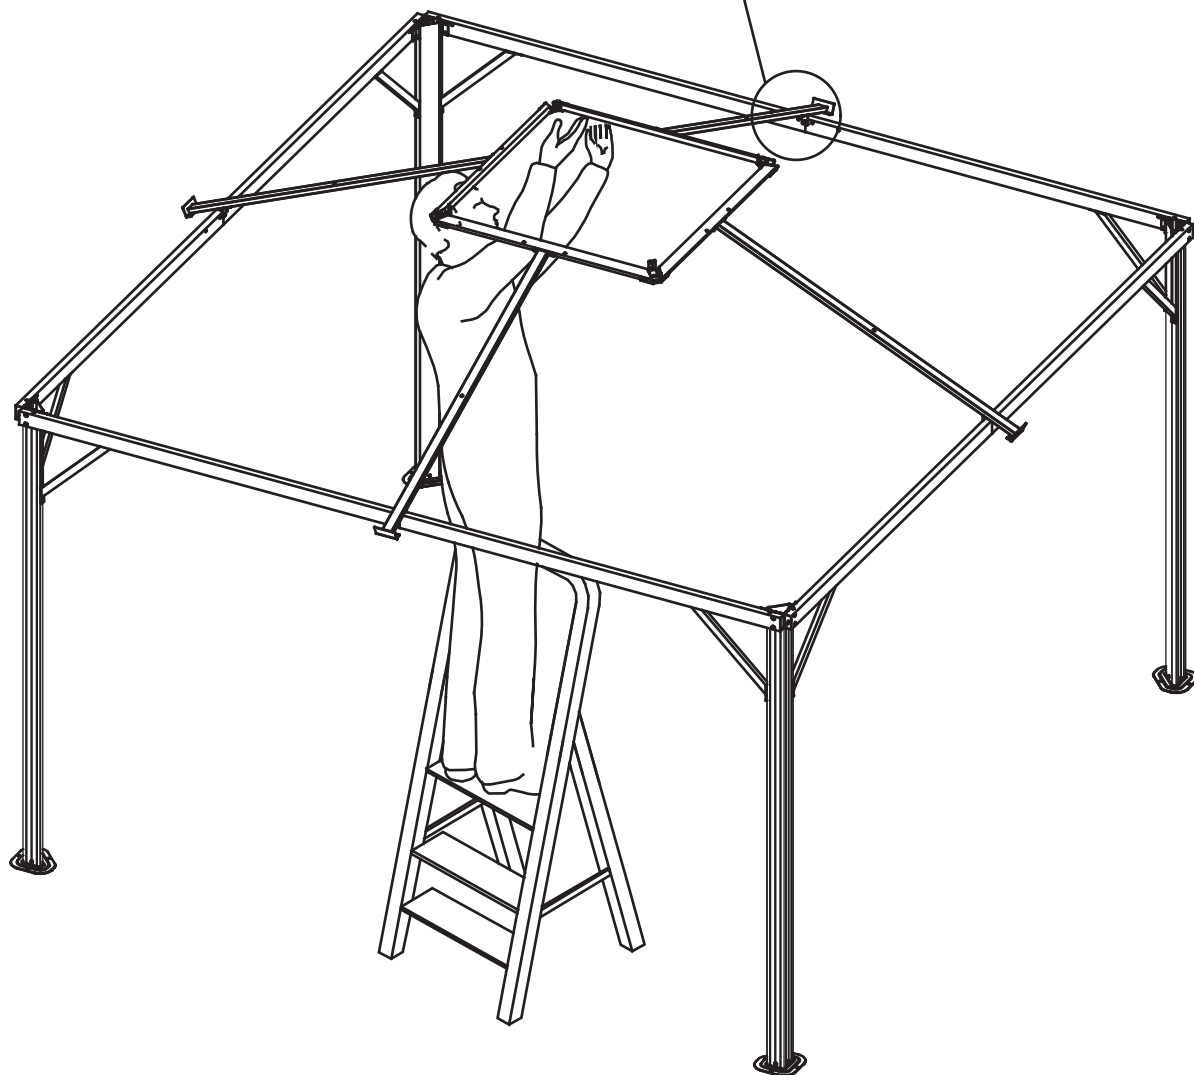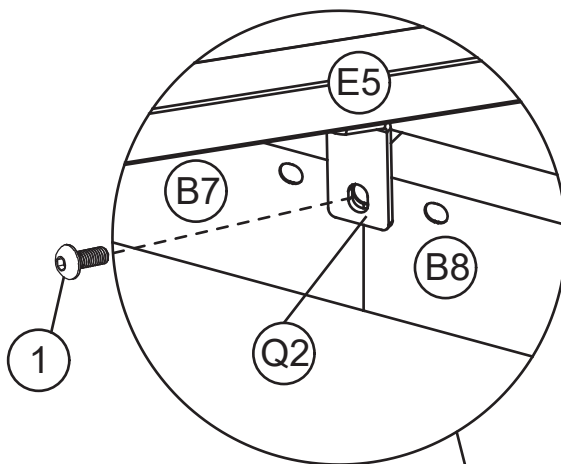

Note:

1. Have one person stand on the ladder to lift and hold D3, while others fasten the screws of E5.
2. Do not release D3 until all the "E5" screws are fully installed.






(C4) 8x



M6x15


(1) 16x

<8>

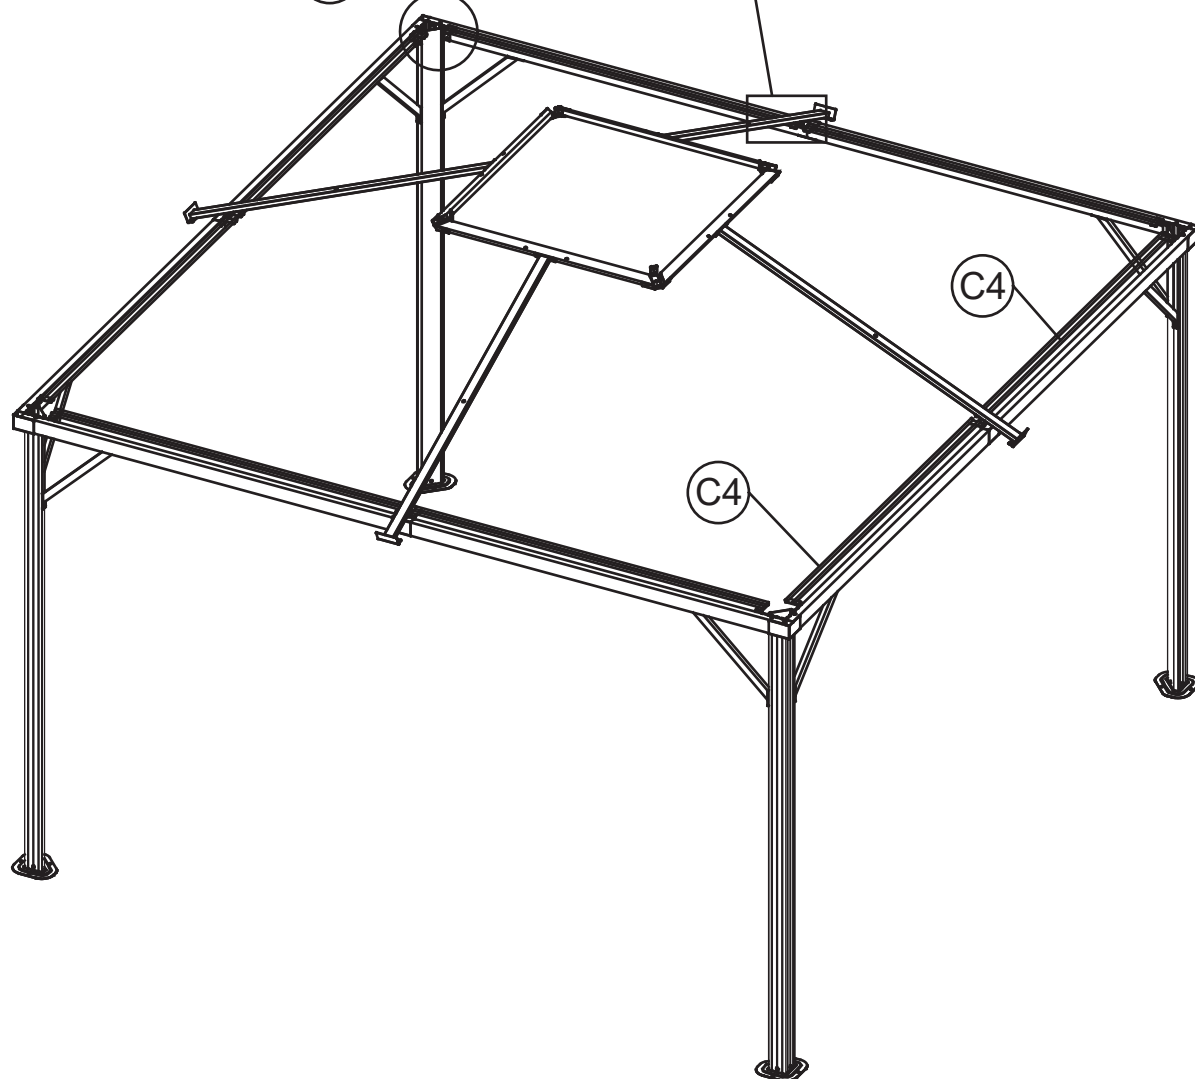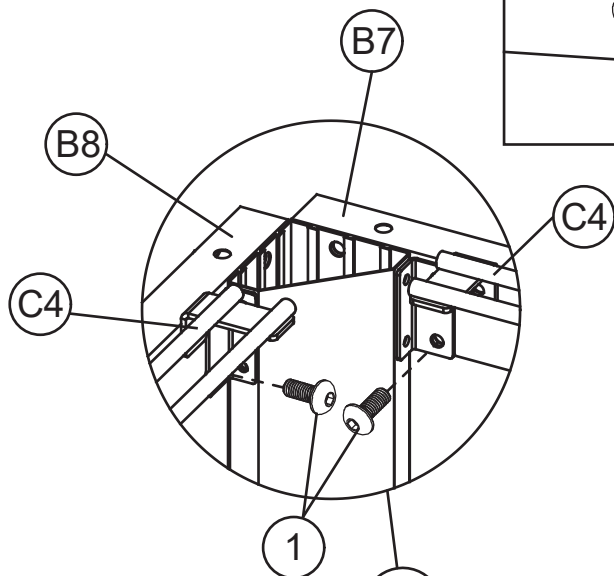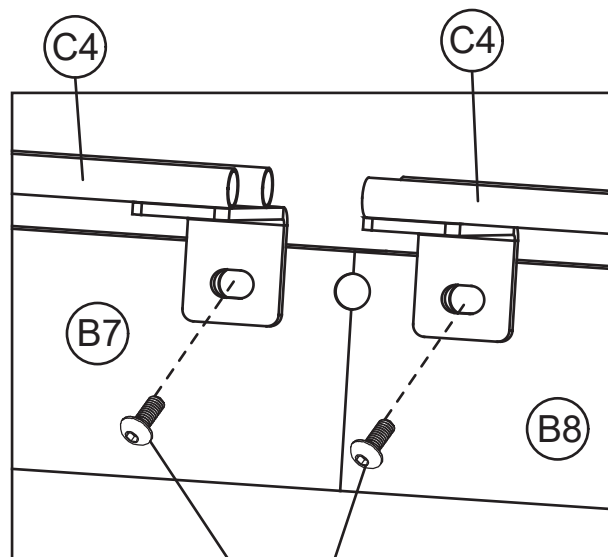



(K1) 4x



(K2) 4x



M6x15



(1) 8x




ST4.8x12

(4) 8x

<9>

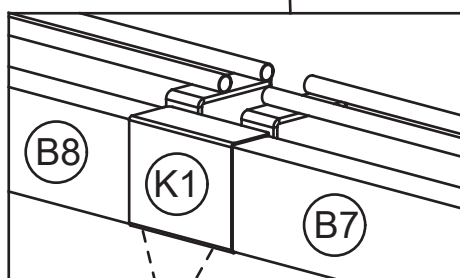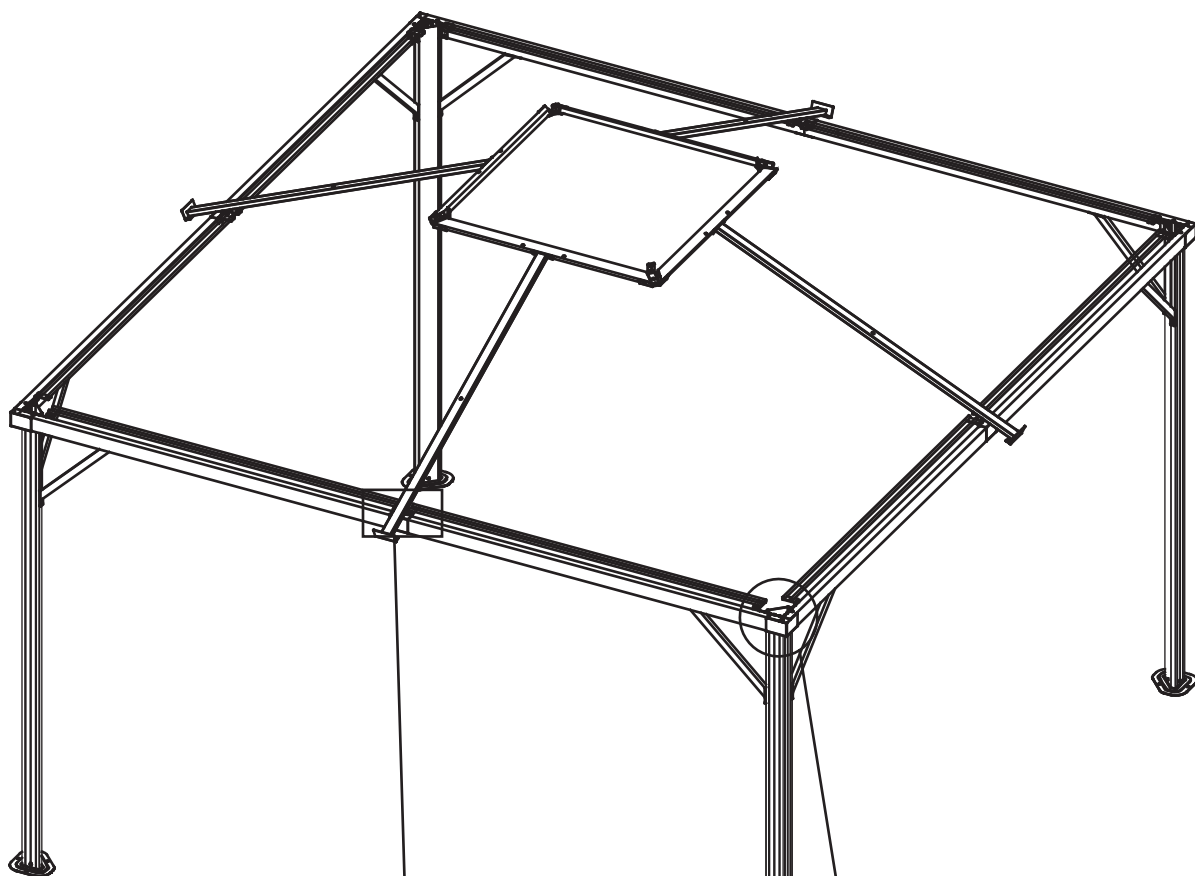

(1)

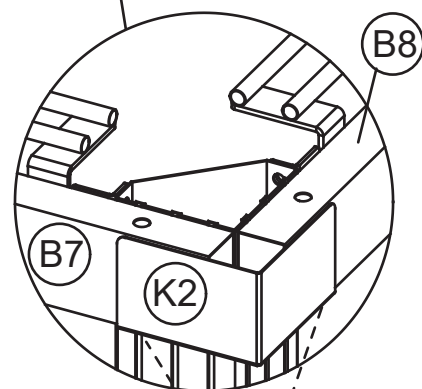

(4)



(E4) 4x



(W3) 4x




(W5) 4x



M6x15

(1) 32x

<10>

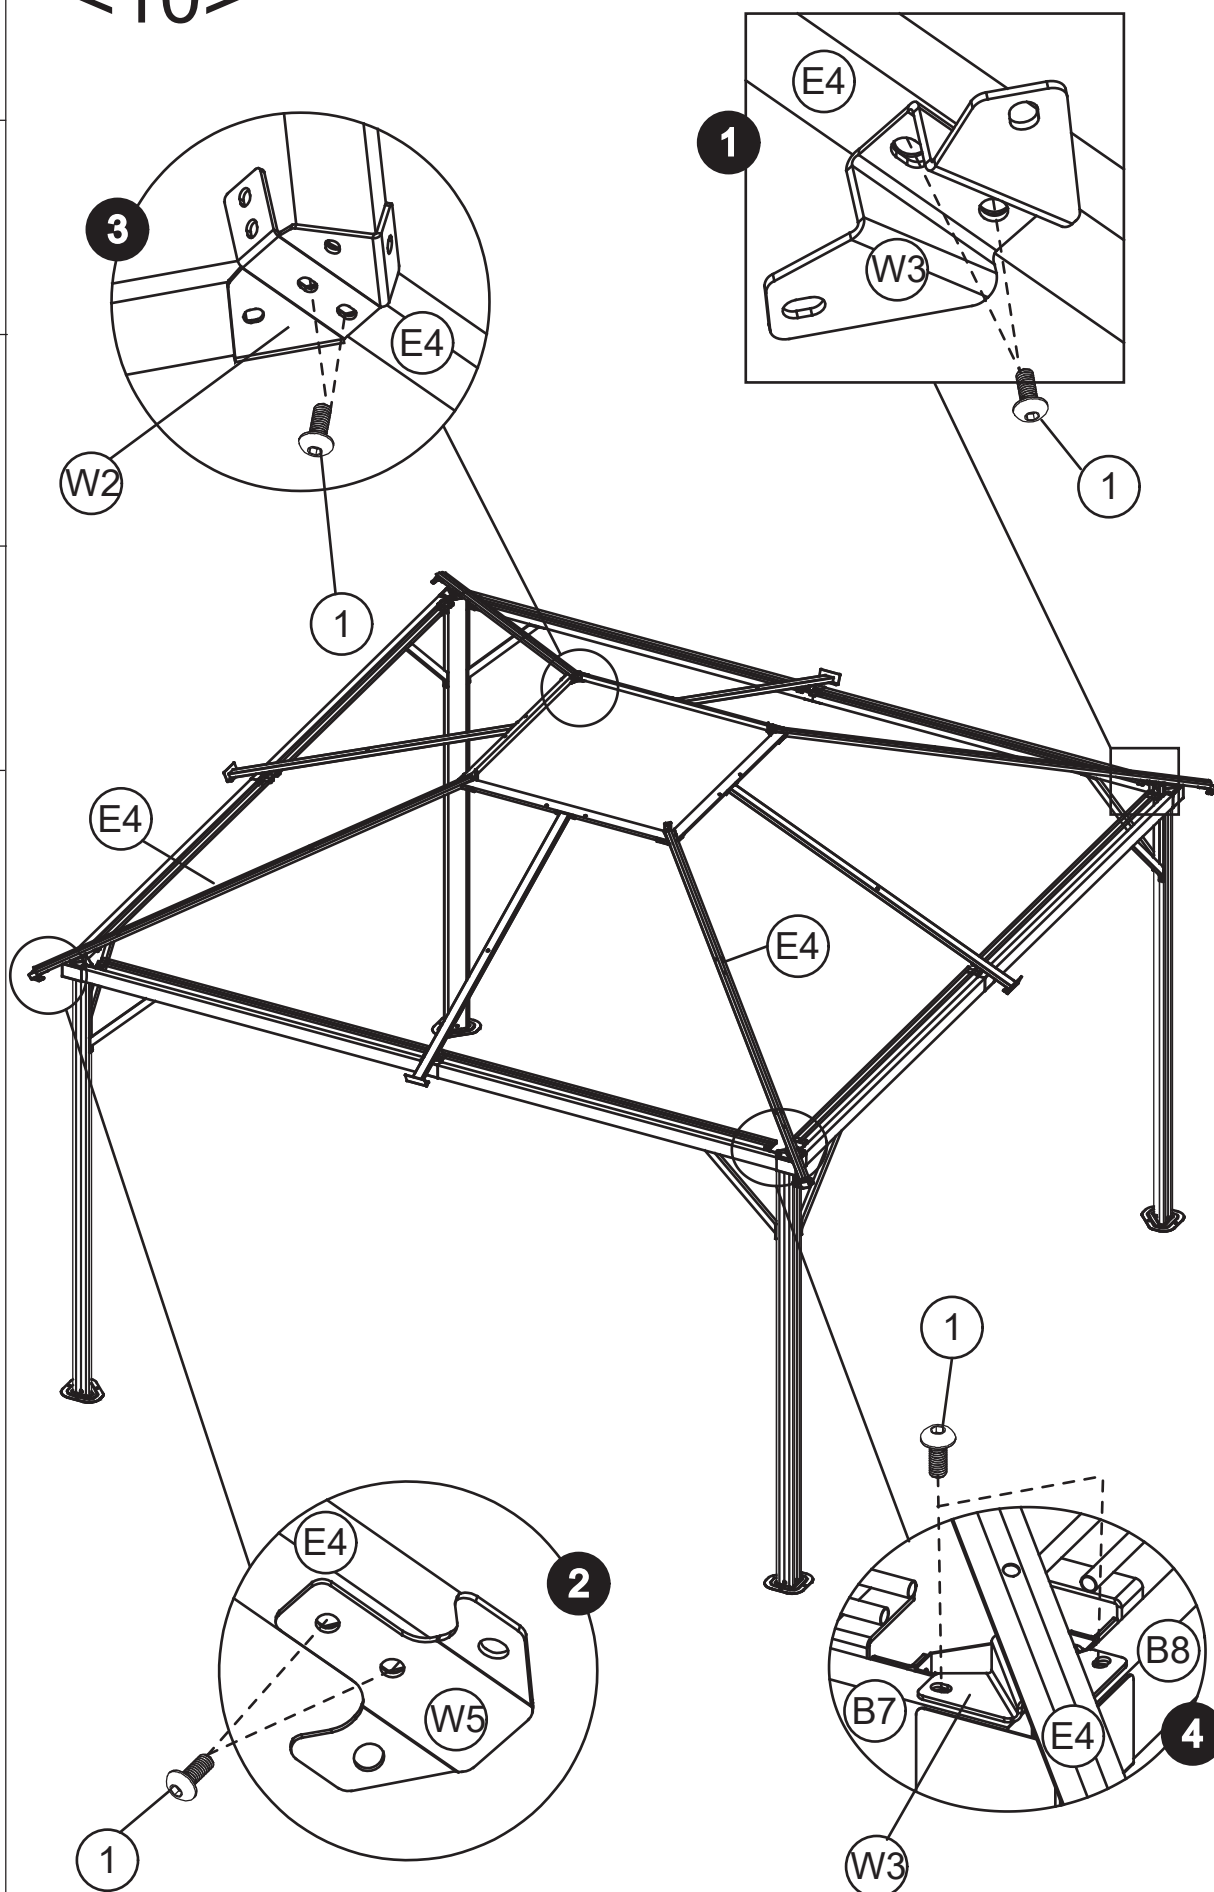

<11>



F5 4x



F6 4x





M6x15

1 4x



M6x12

3 4x

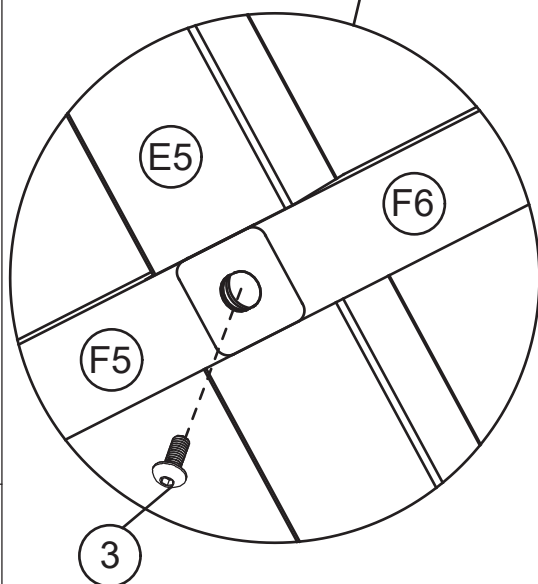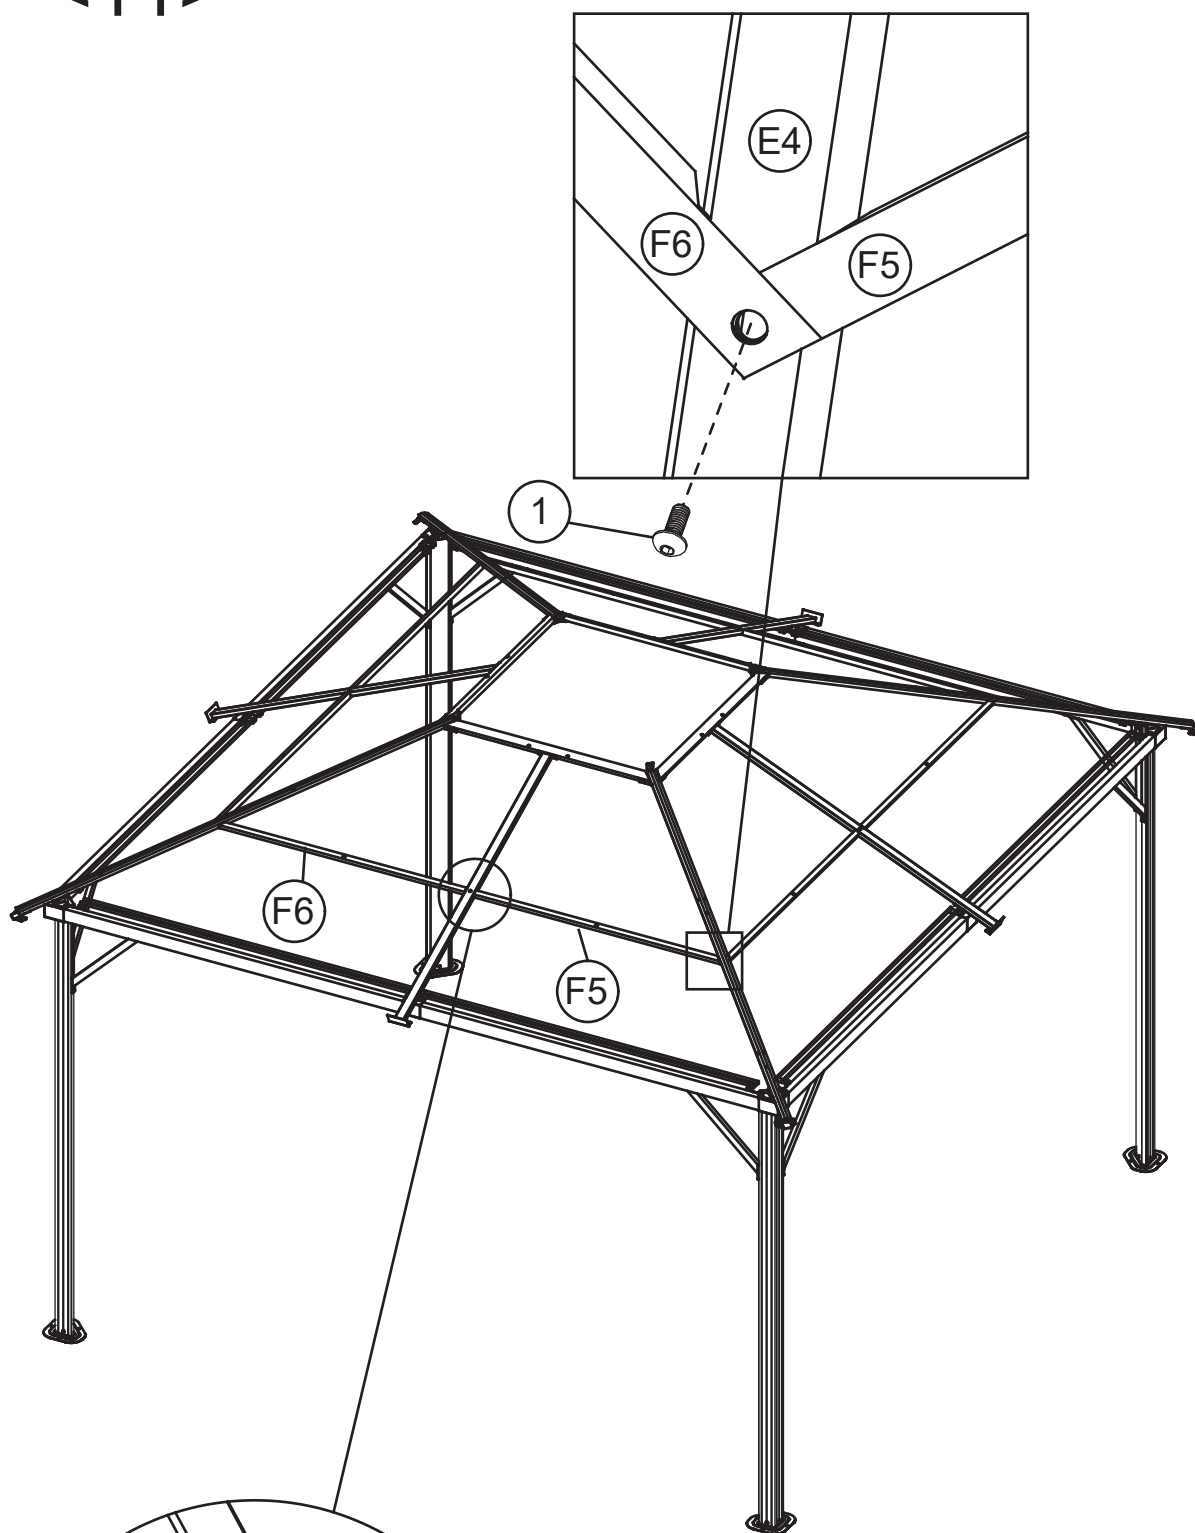

<12>



I5 4x






I6 4x



M6x15

1 16x

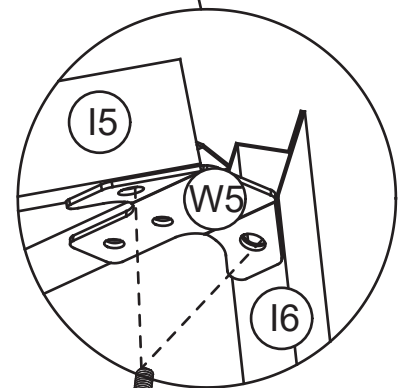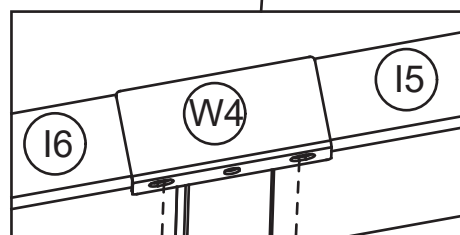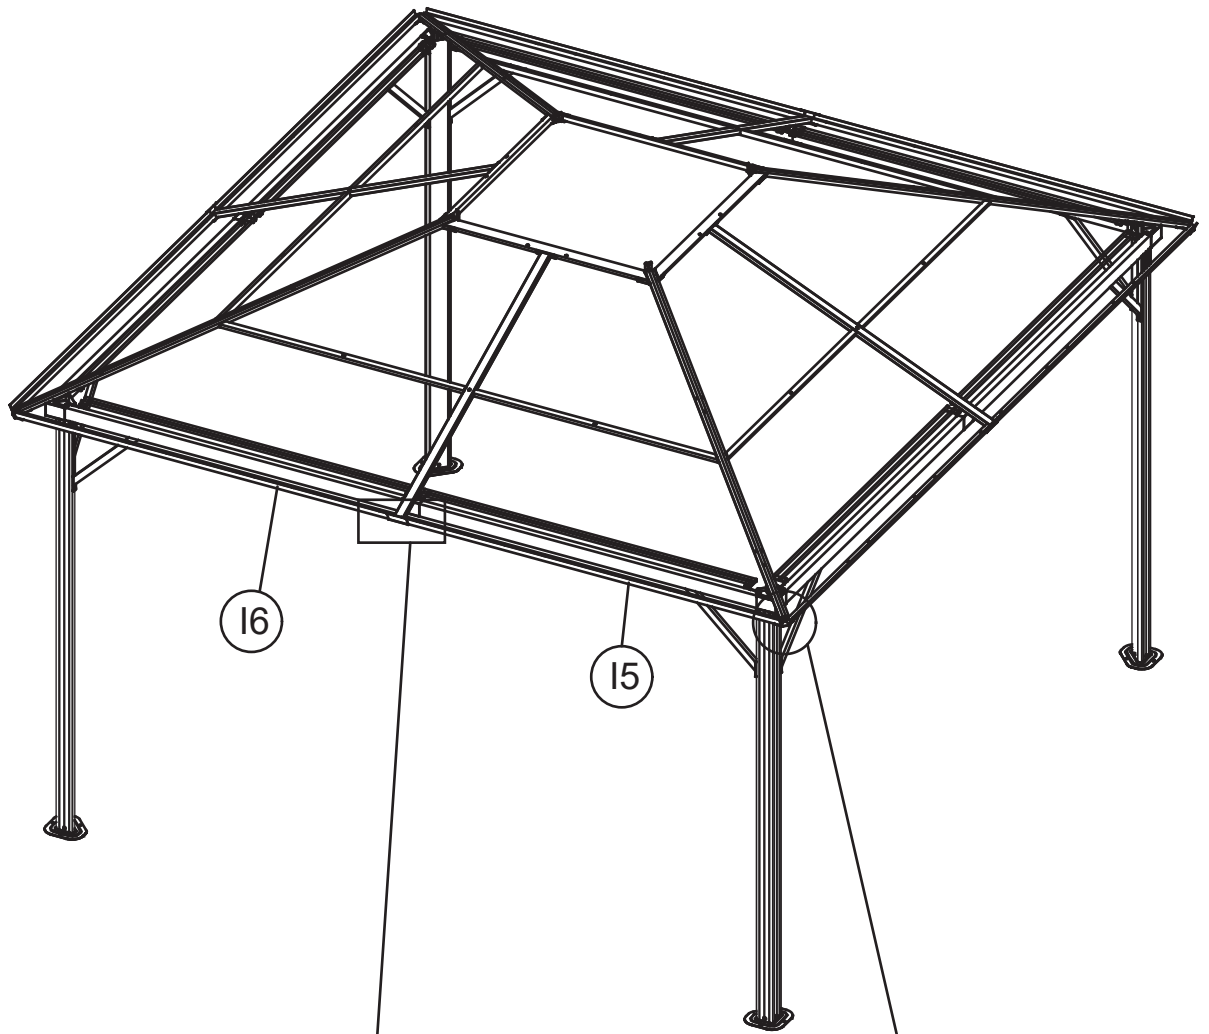



E6 4x




L3 1x



M6x15

1 4x

<13>

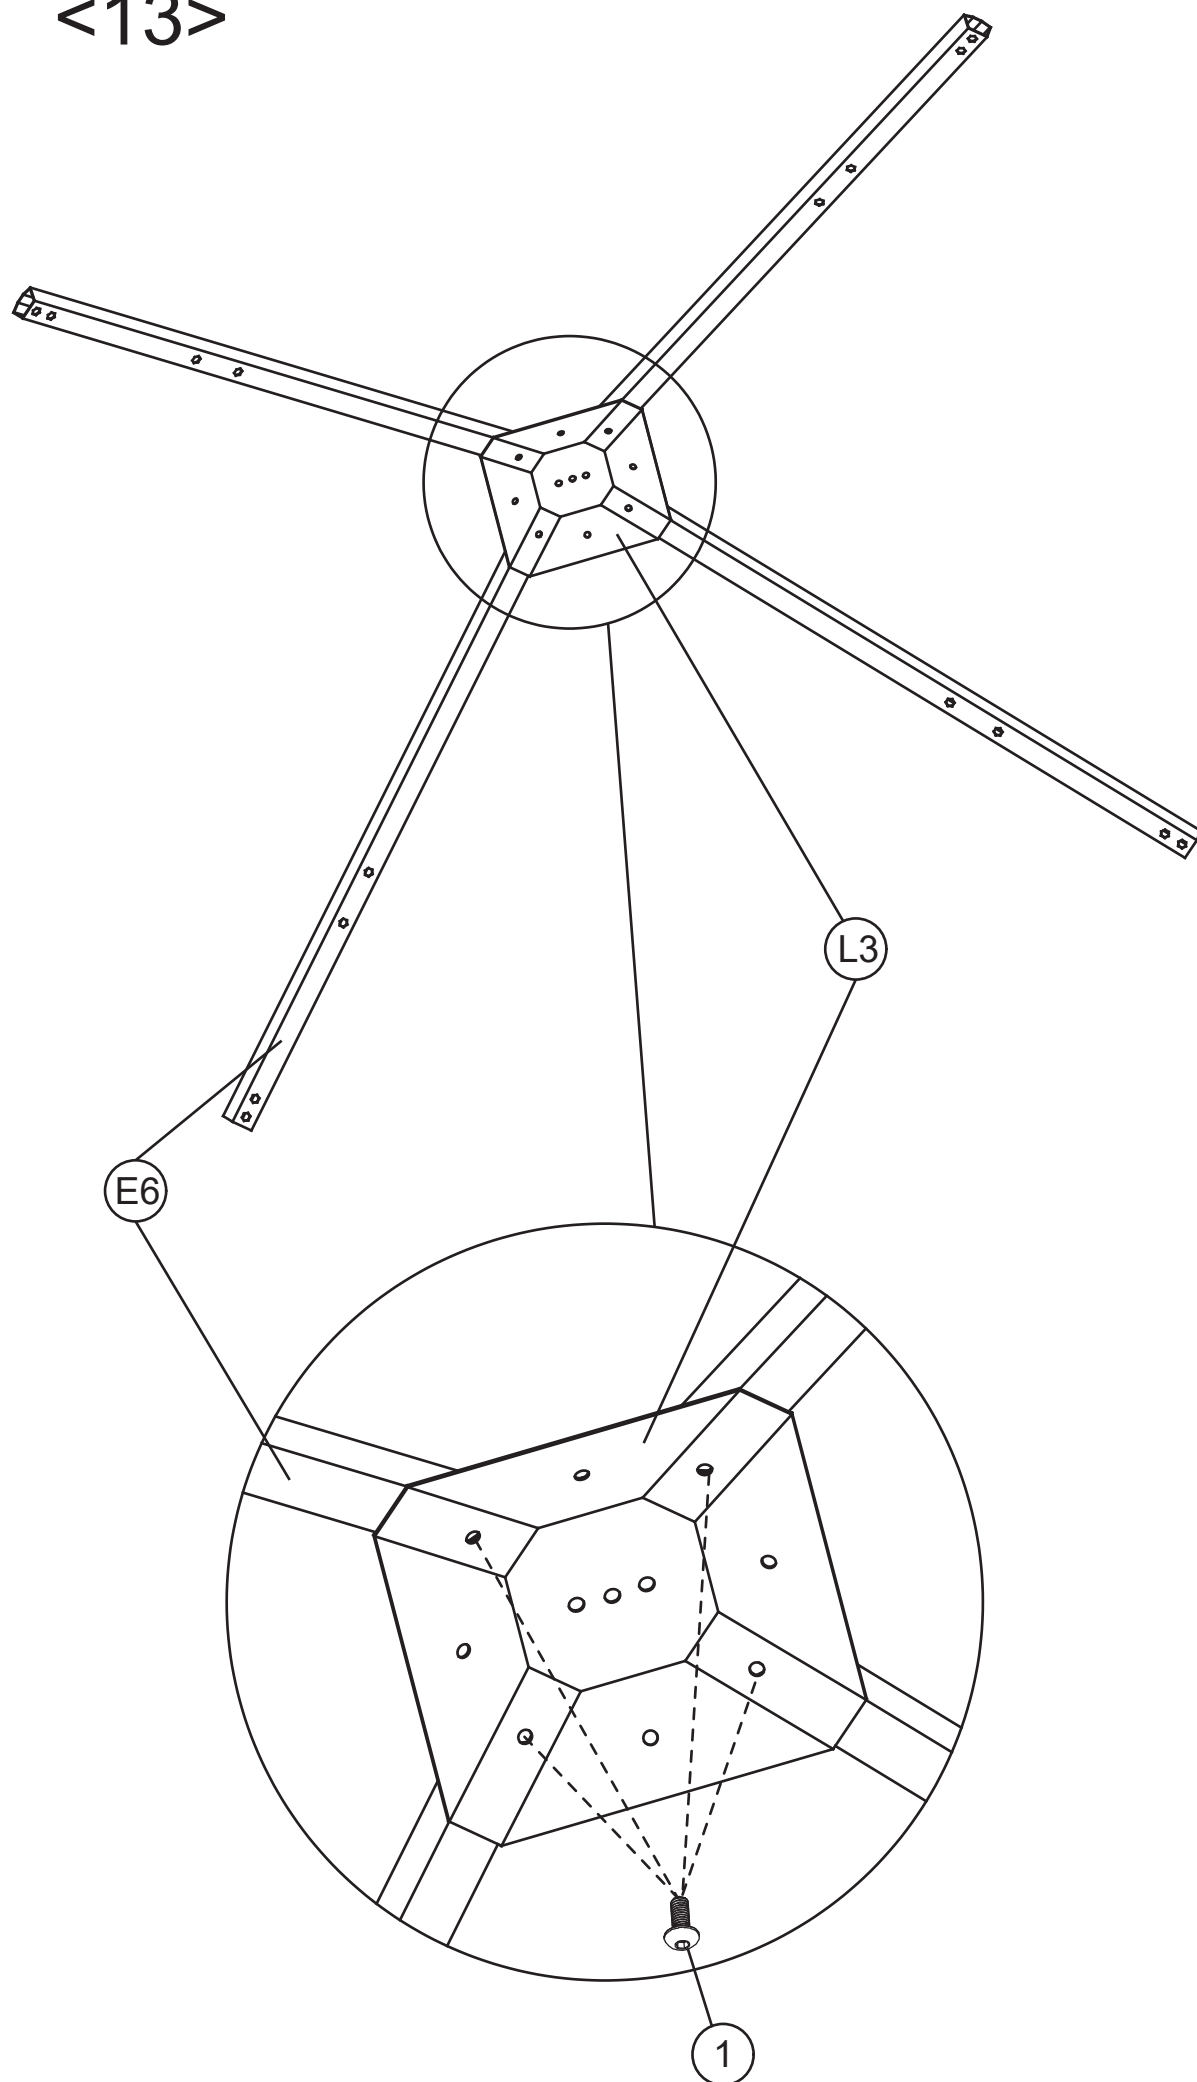




D7 4x



M6x15

1 8x


<14>

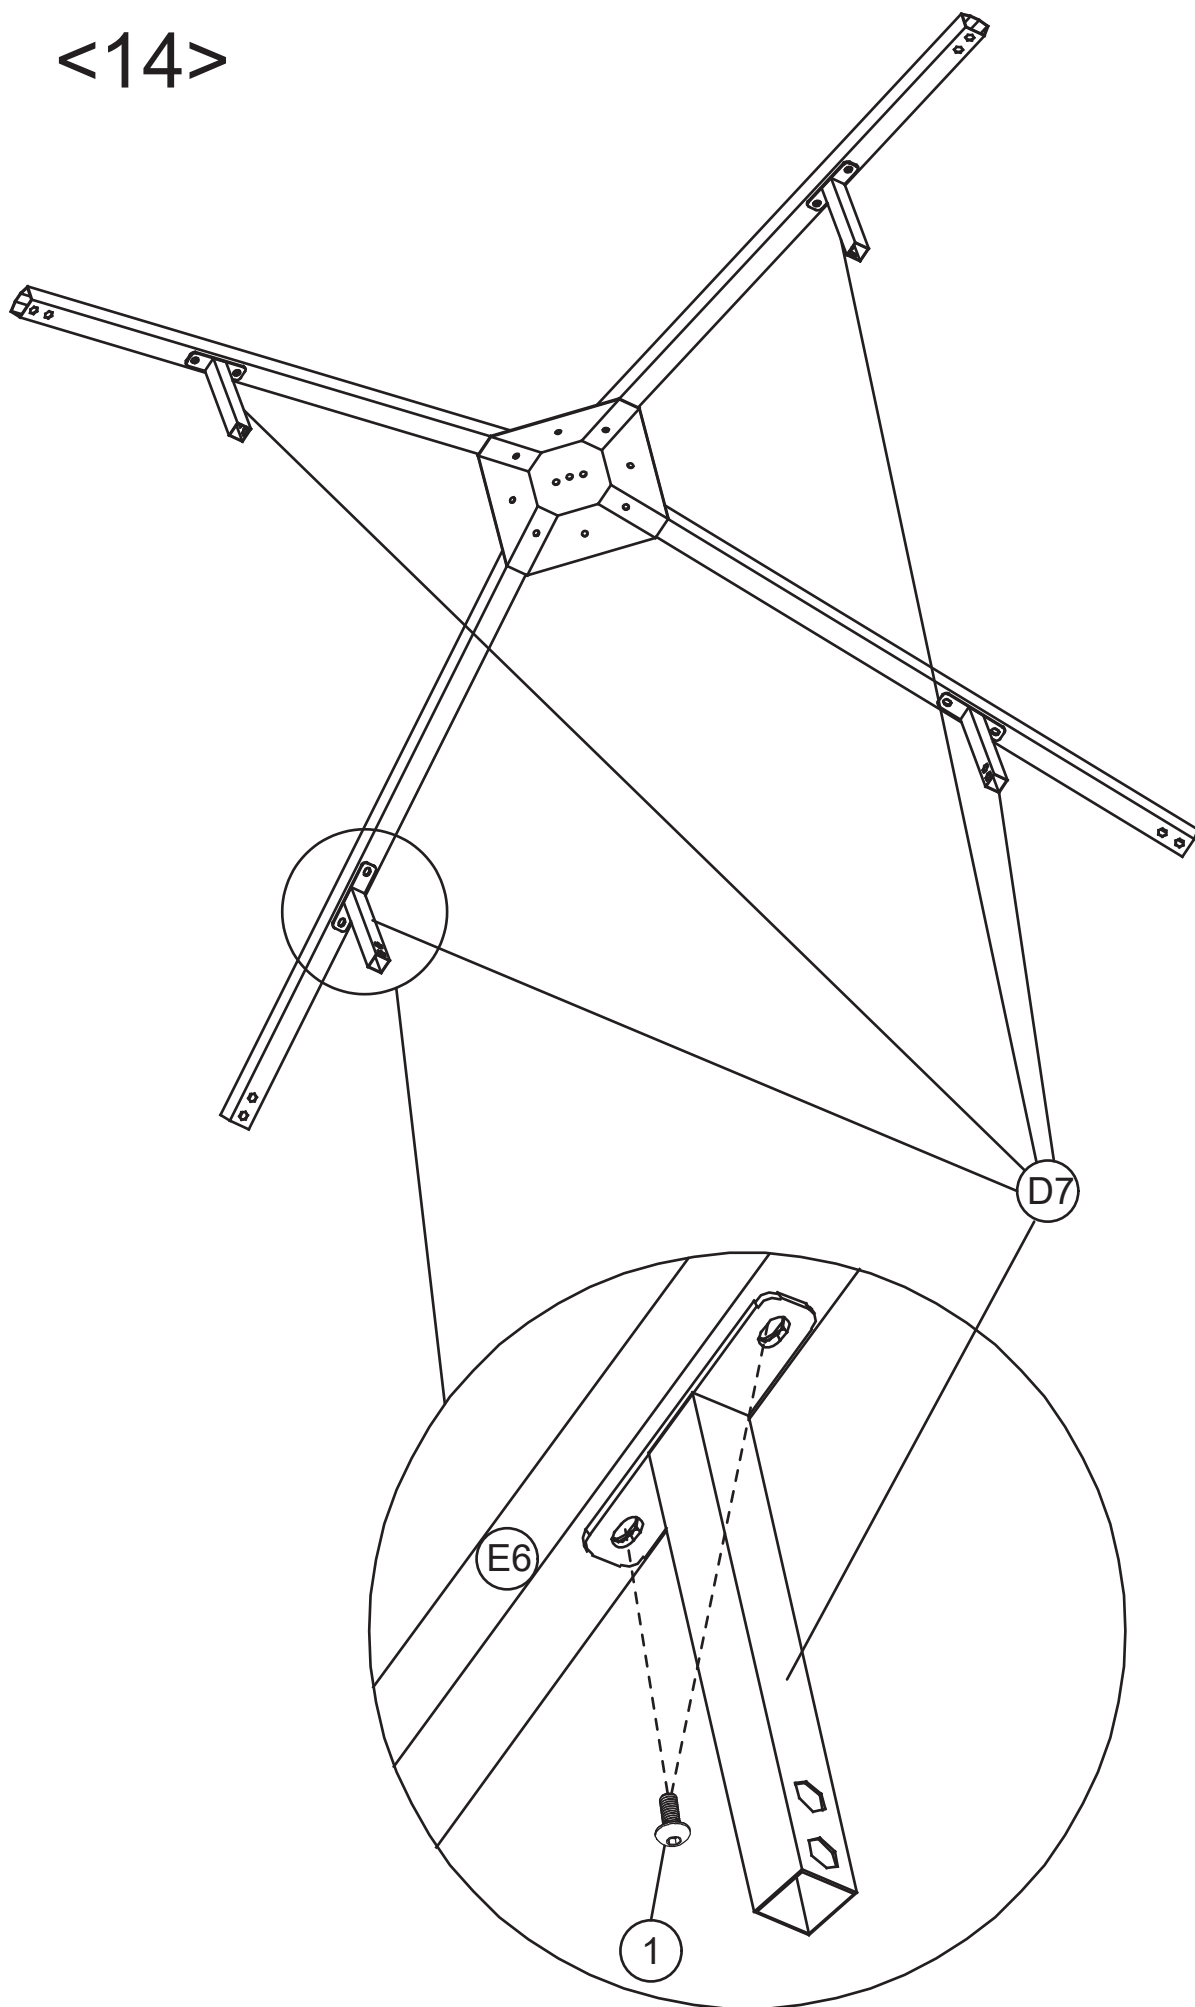

<15>



G3 4x





W5 4x



M6x15

1 16x

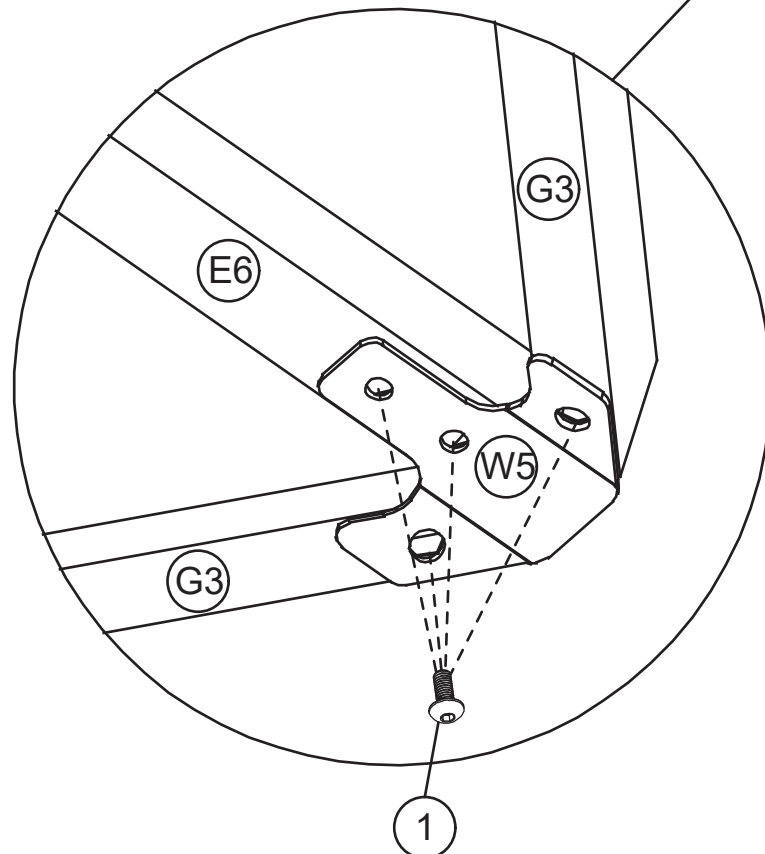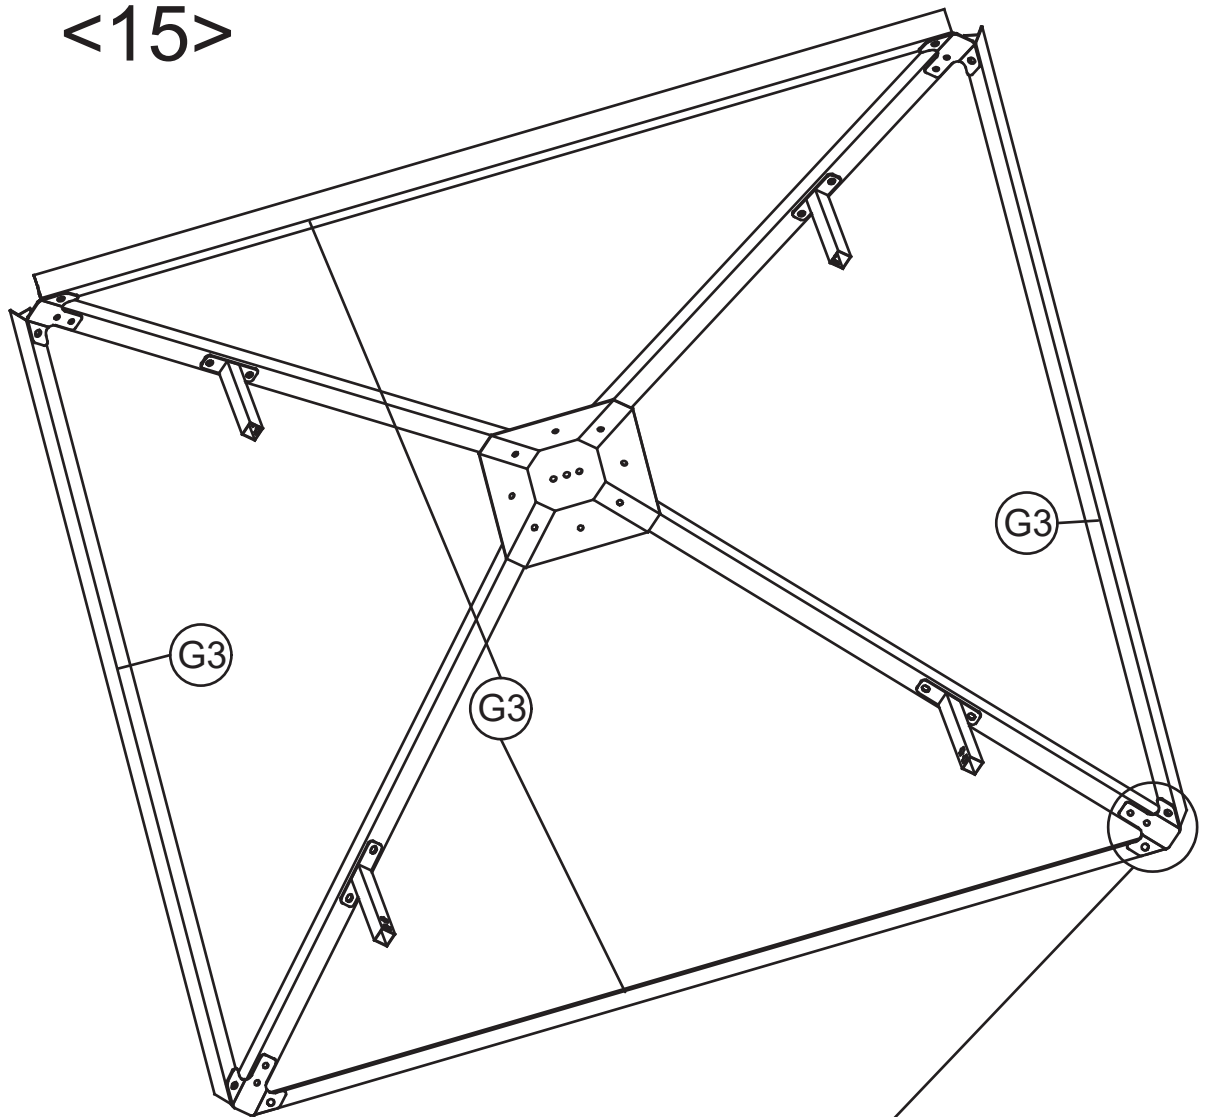




M6x15

1 8x

<16>

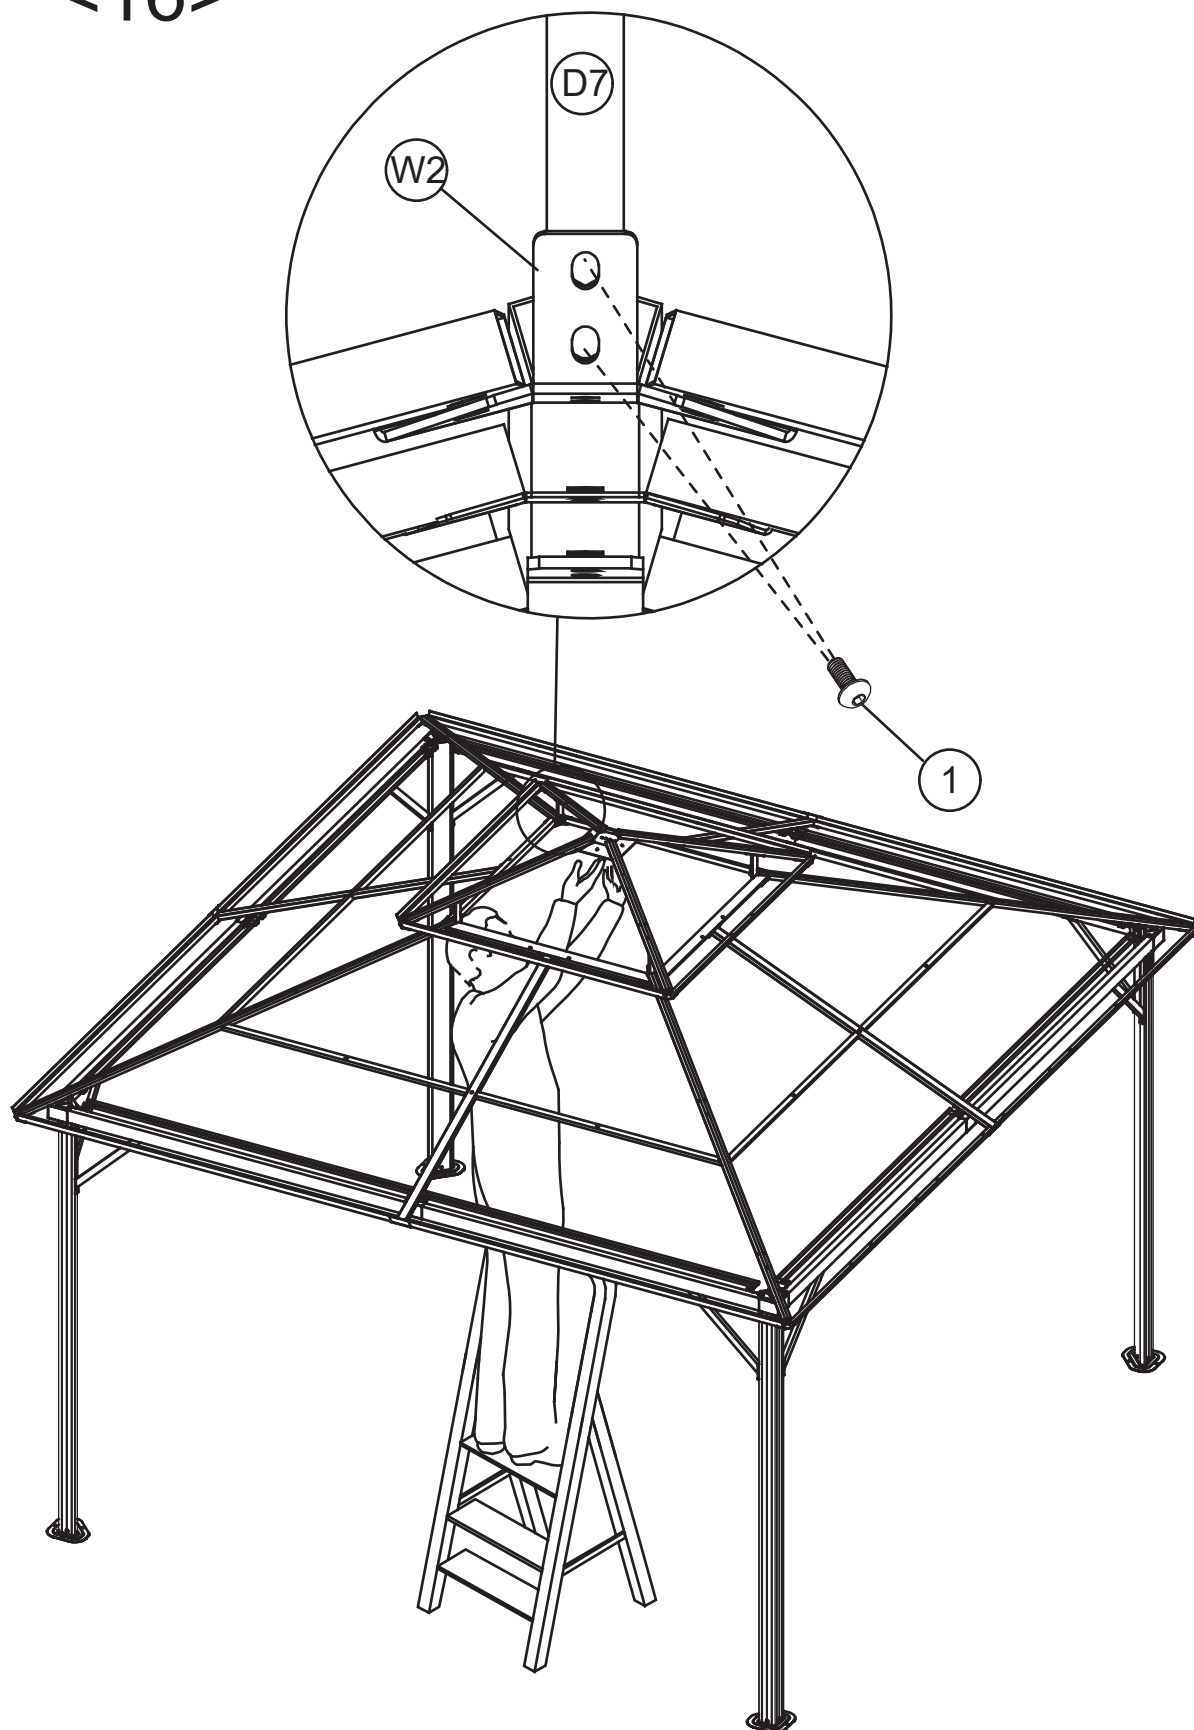

Note:

1. Have one person stand on the ladder to lift and hold L3, while others fasten the screws of D7.
2. Do not release L3 until all the "D7" screws are fully installed.



O6 4x



O7 4x



N1 4x



Y2 8x






M6x15

1 16x

<17>

Tips: When install the roof panel ,remove the protective film first.

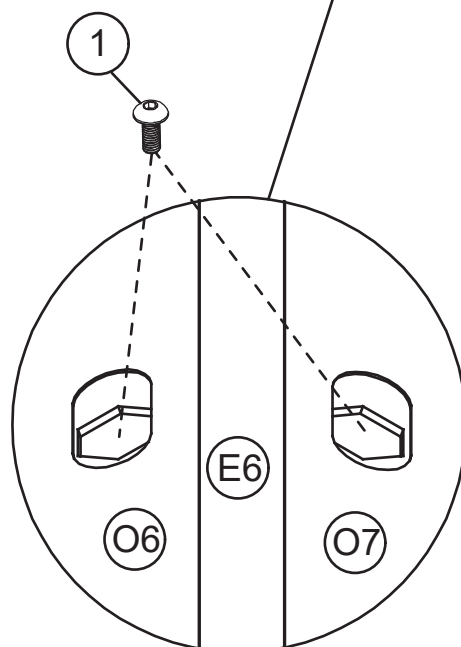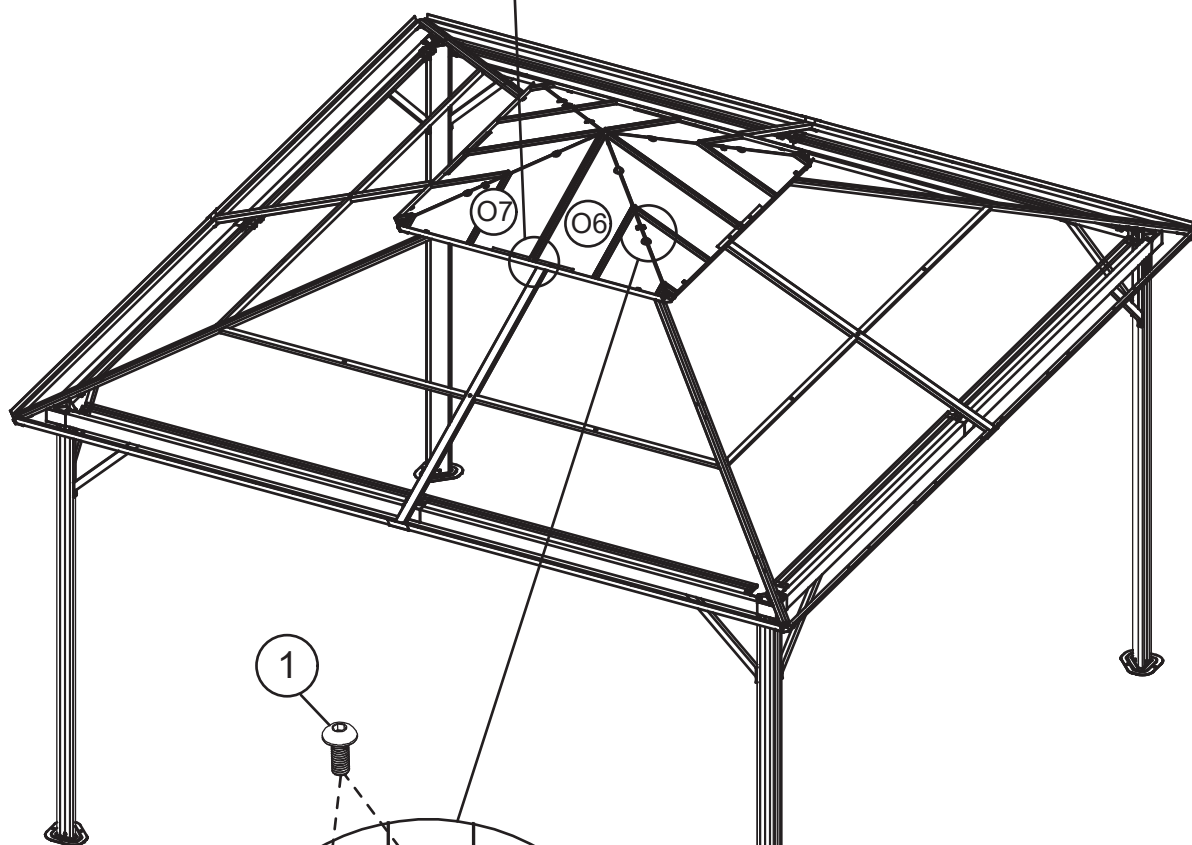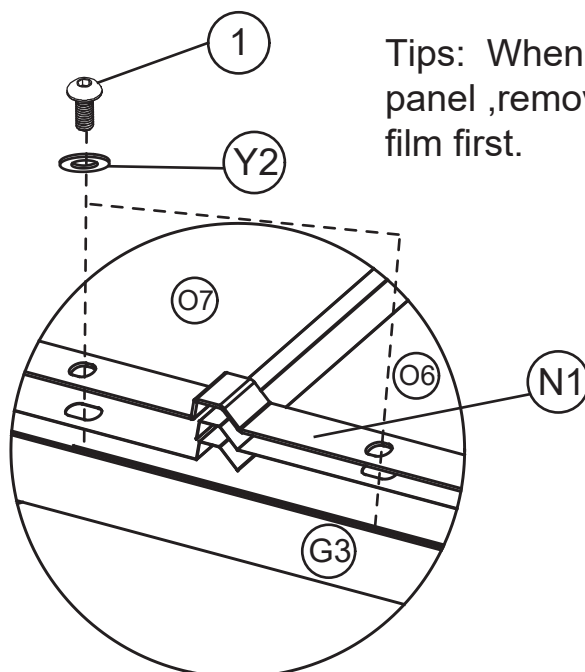



(R7) 4x




(Y2) 4x




M6x40


(9) 4x

<18>

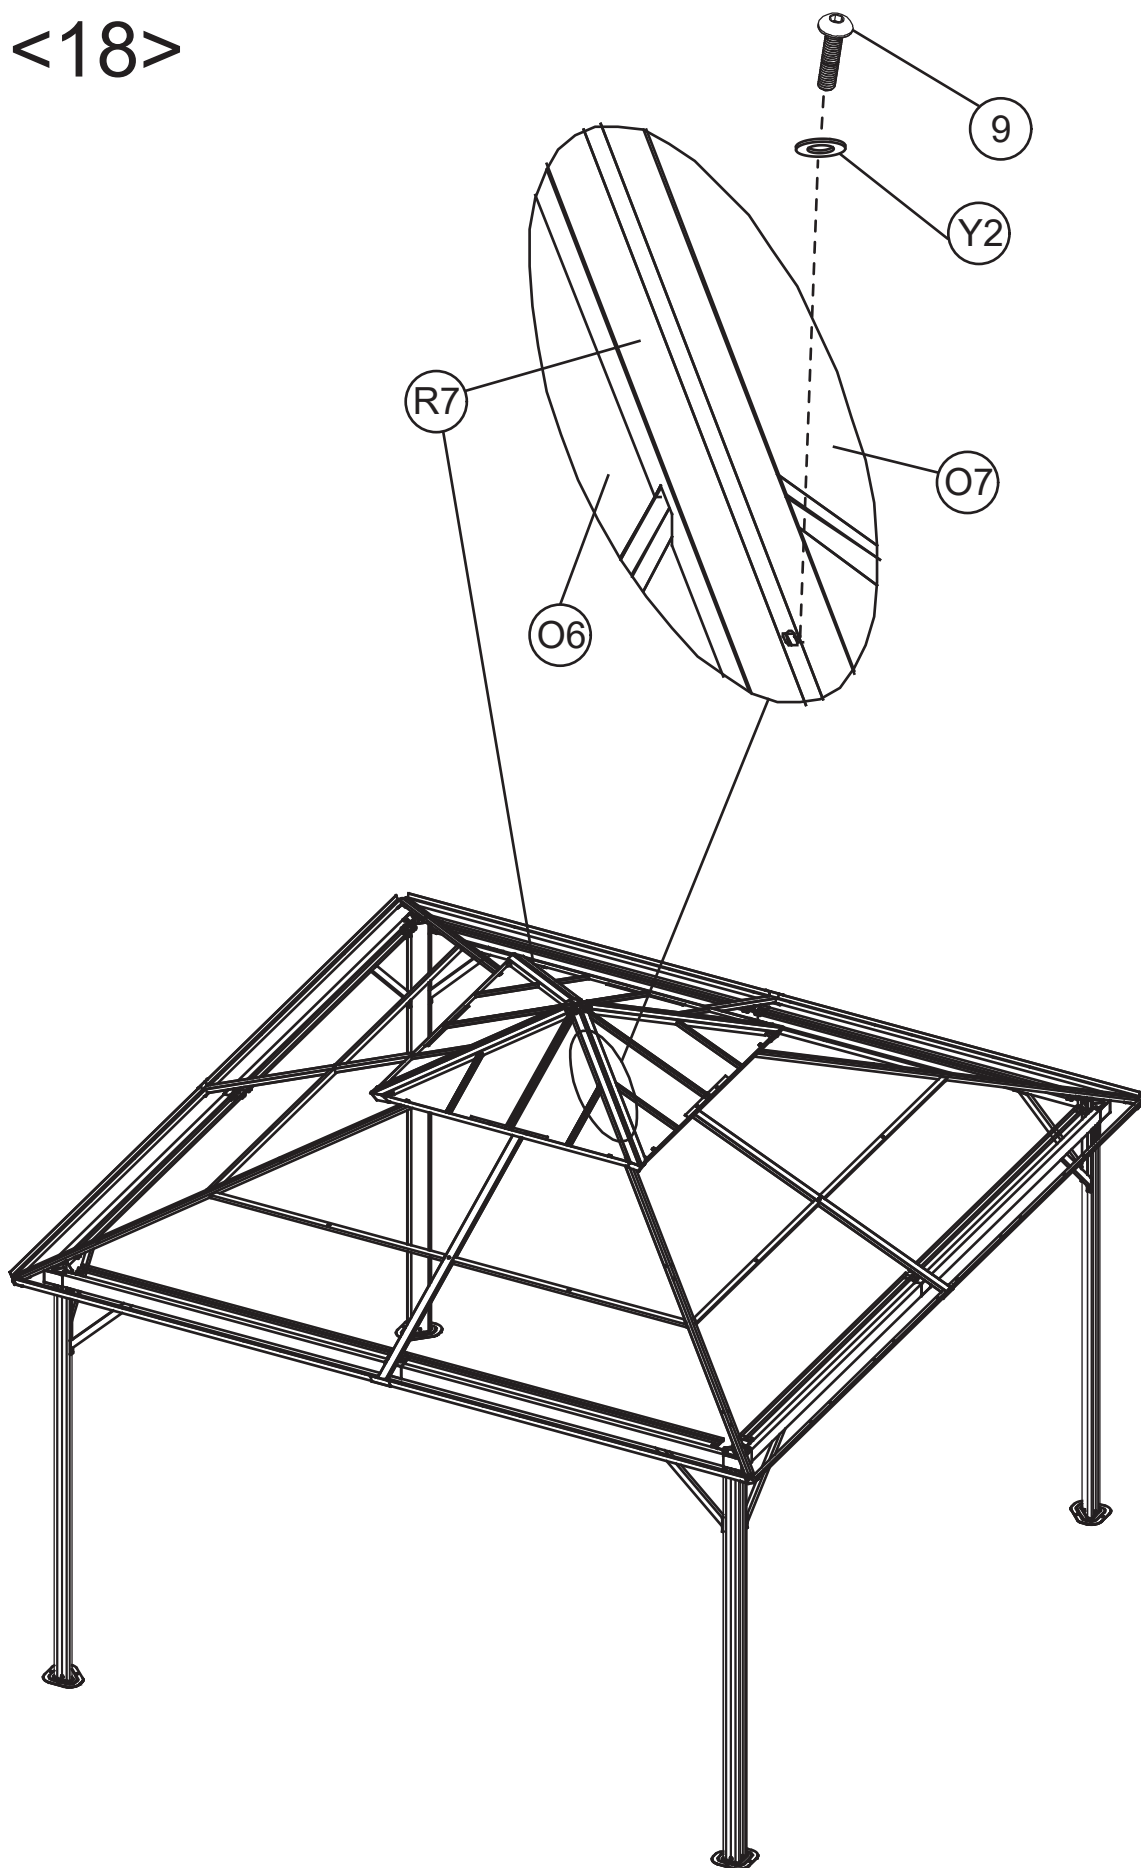

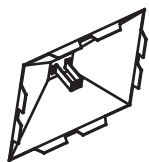

(L4) 1x

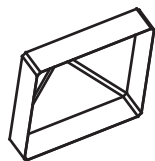













(M3) 1x



(7) 1x


<19>

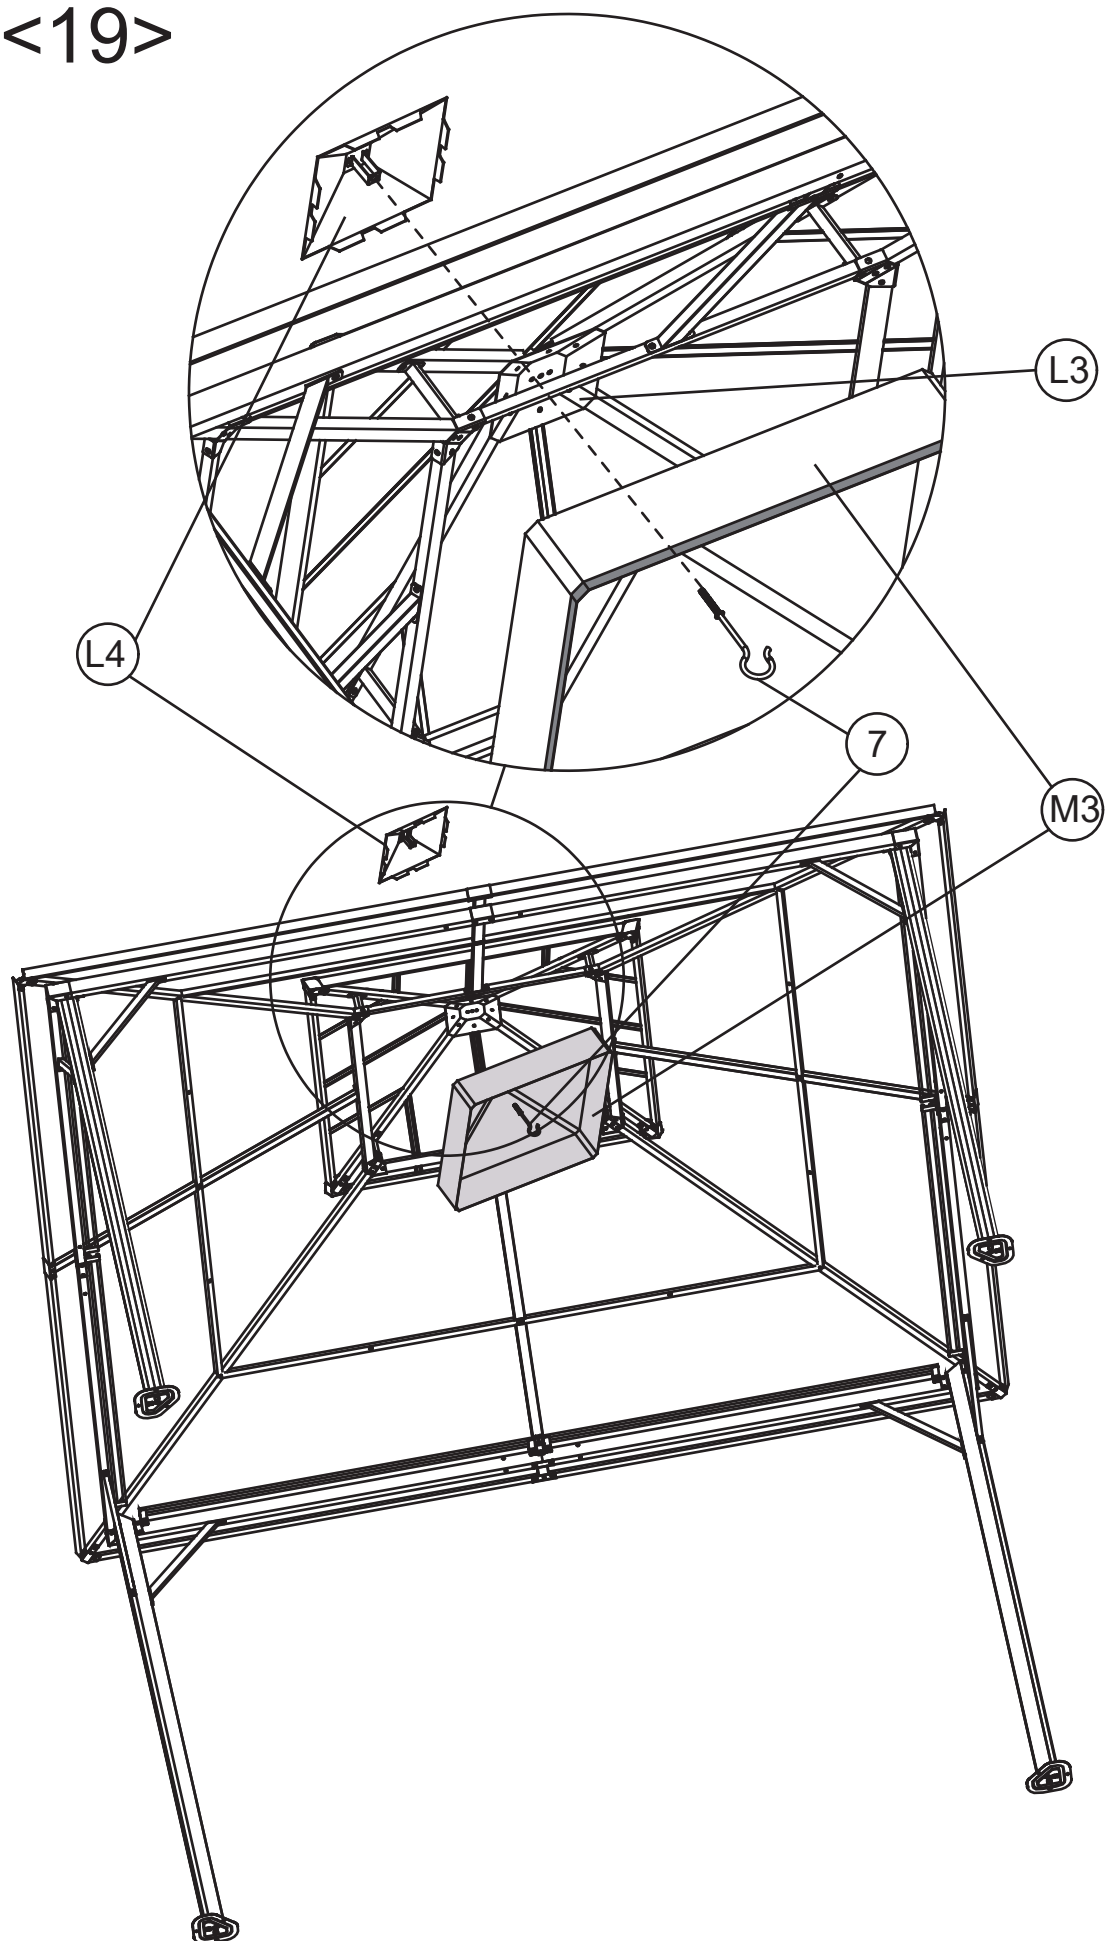

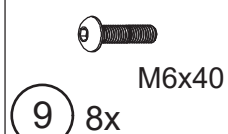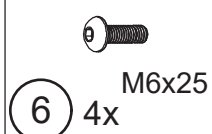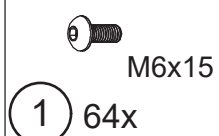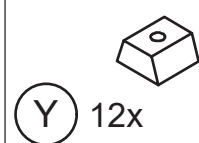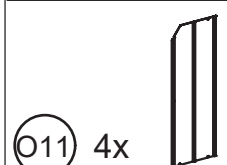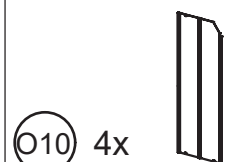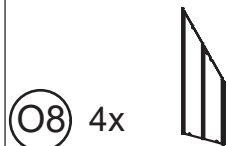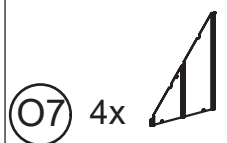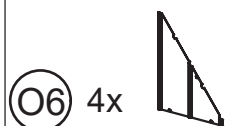

24

<20>

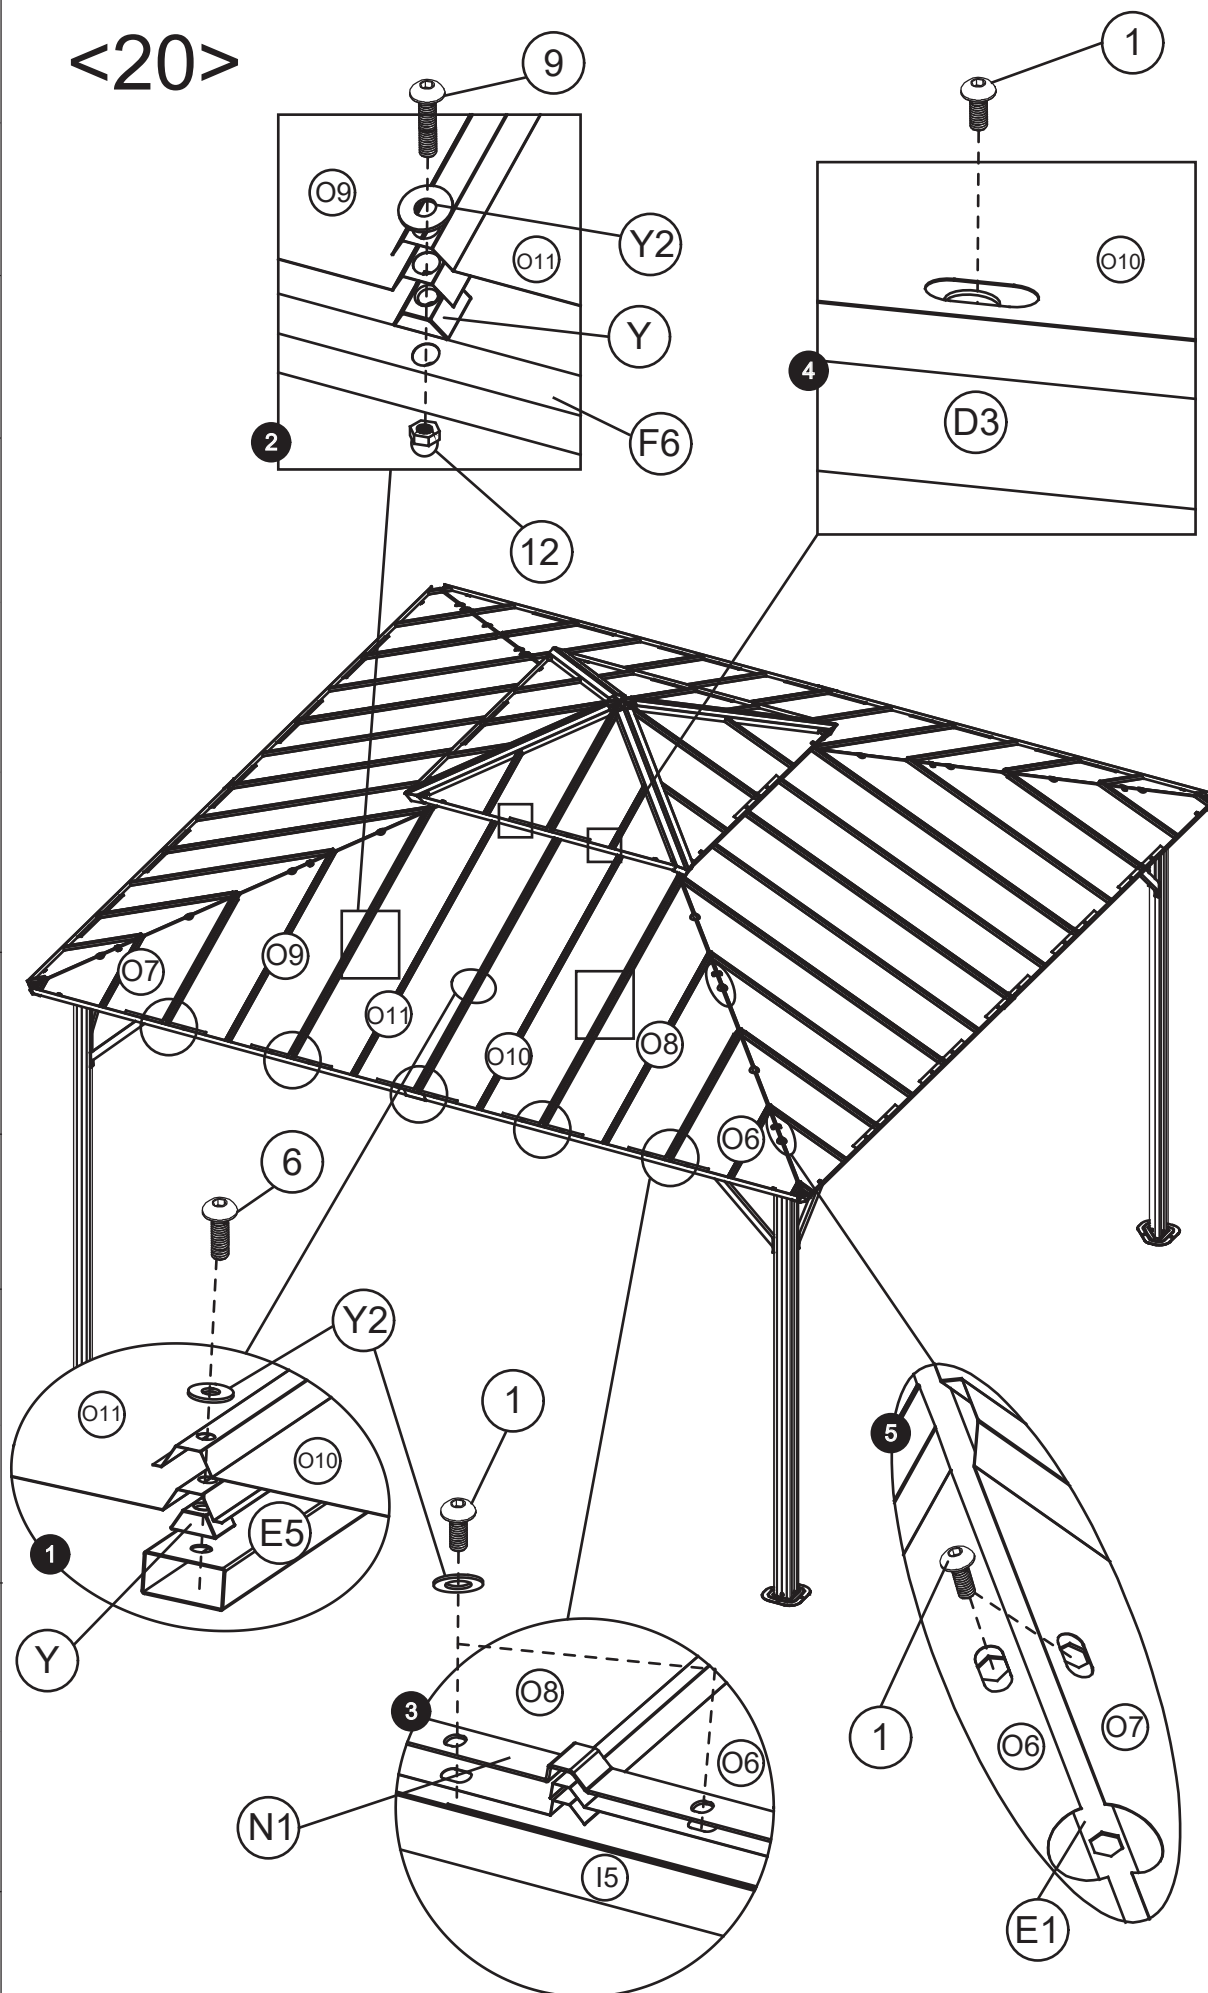

Tips:

1. When install the roof panel ,remove the protective film first.

2. After aligning all tiles(O6.O7.O8.O9.O10.O11),tighten the bolts



(R3) 4x



(Y2) 8x




M6x40

(9) 8x


<21>

1

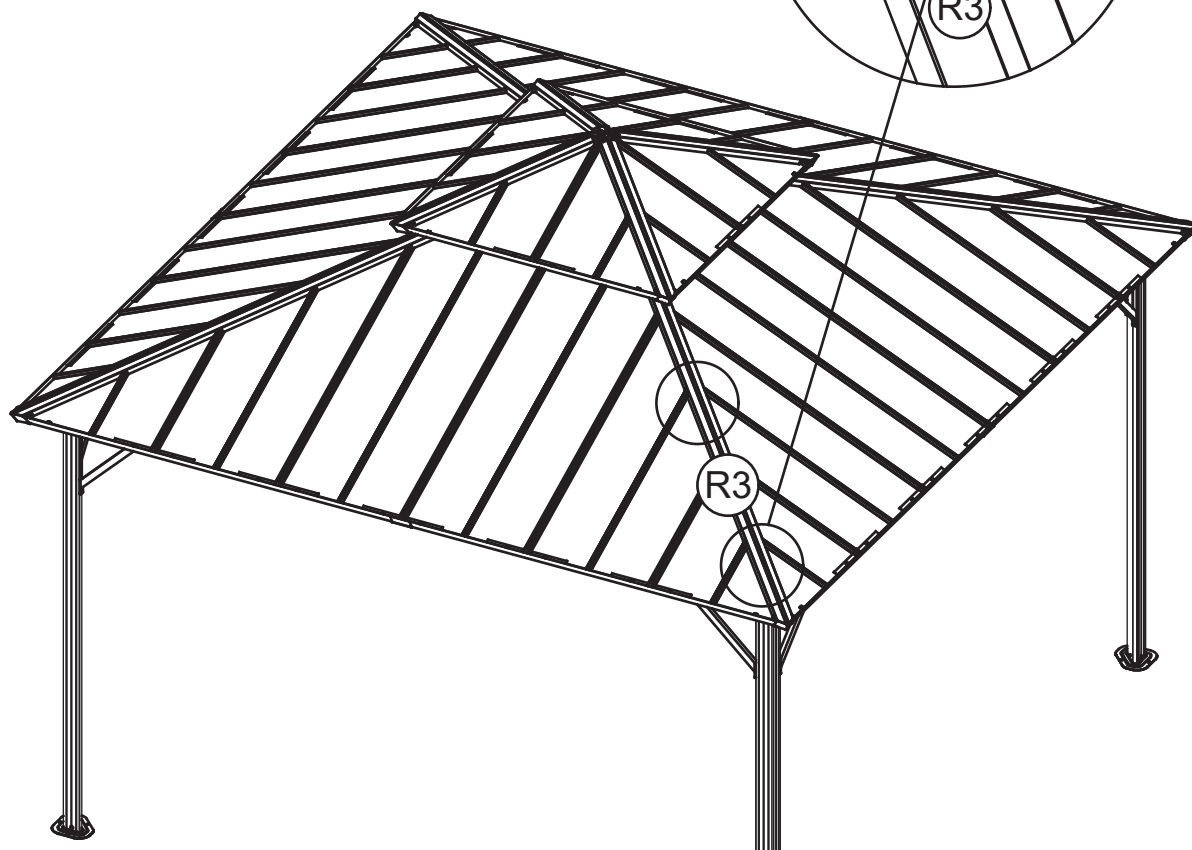

Attach the top net cover with Velcro.

2

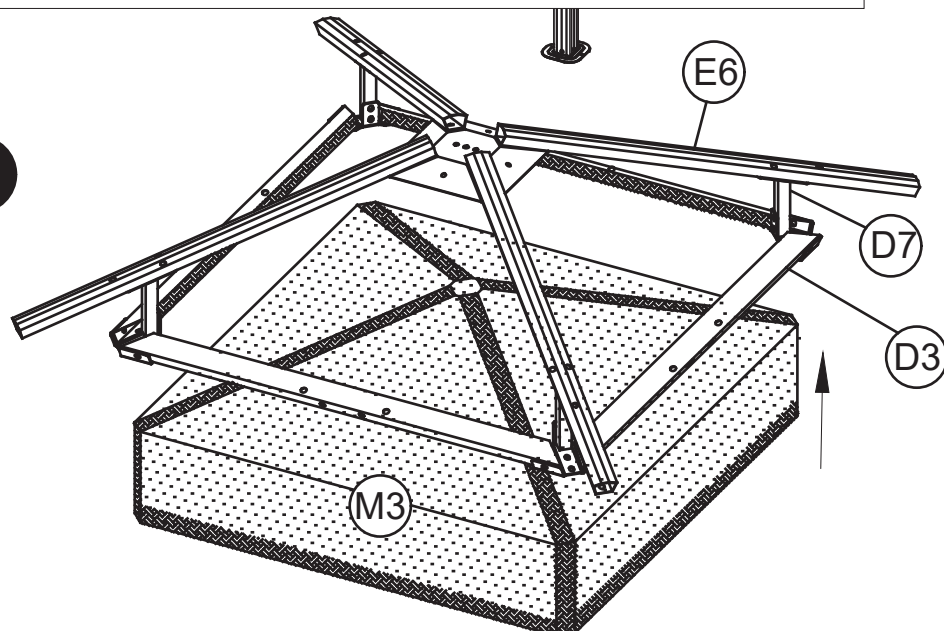




(M1) 4x





(Y1) 56x

<22>

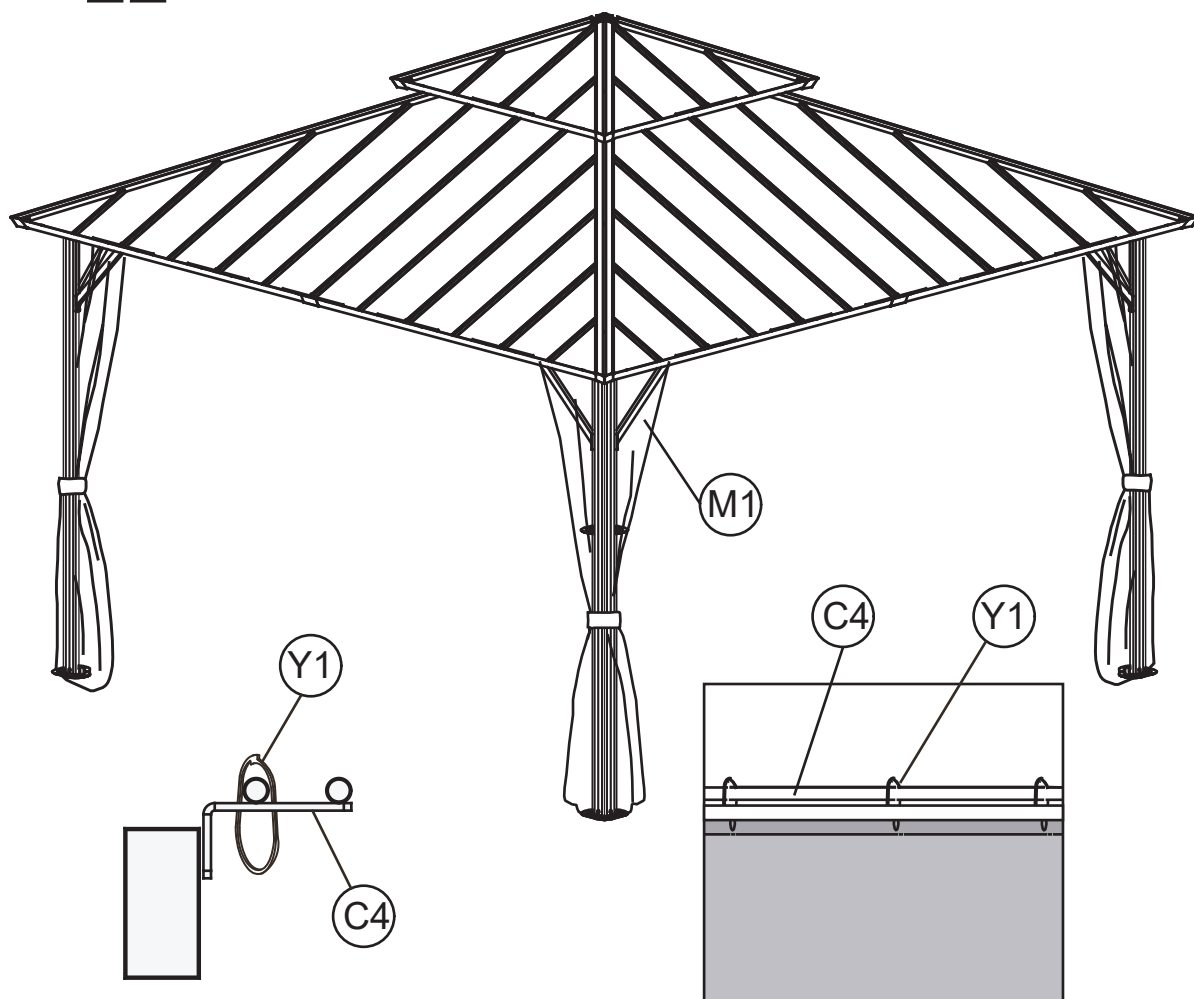

Curtain

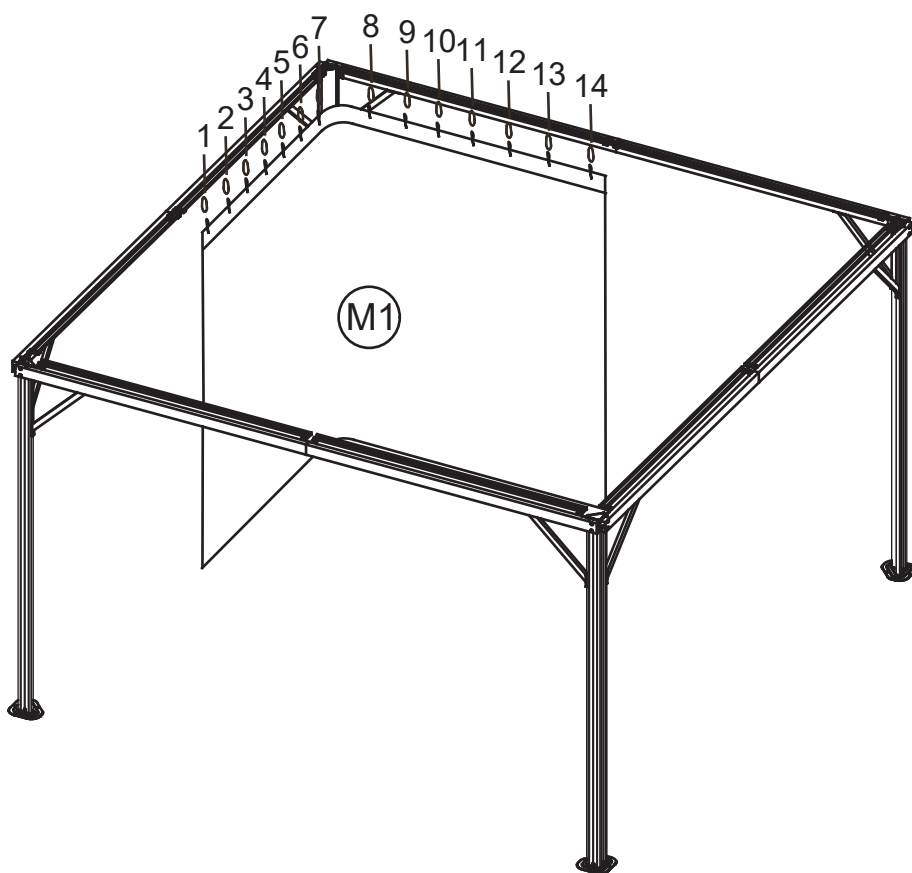





M2 4x





Y1 56x

<23>

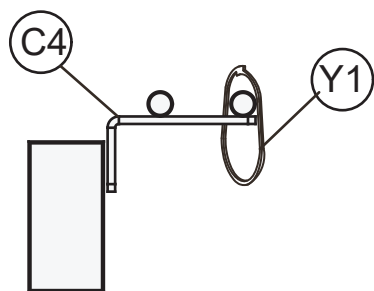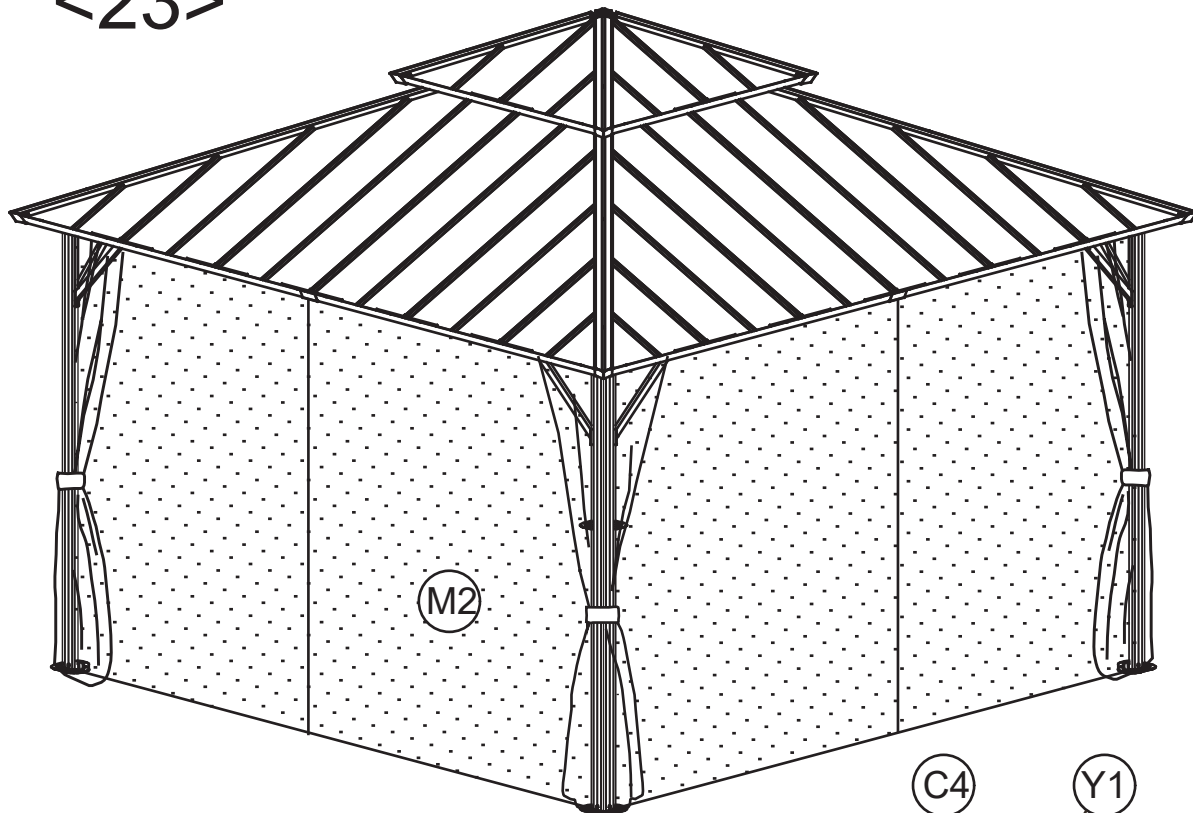

Net

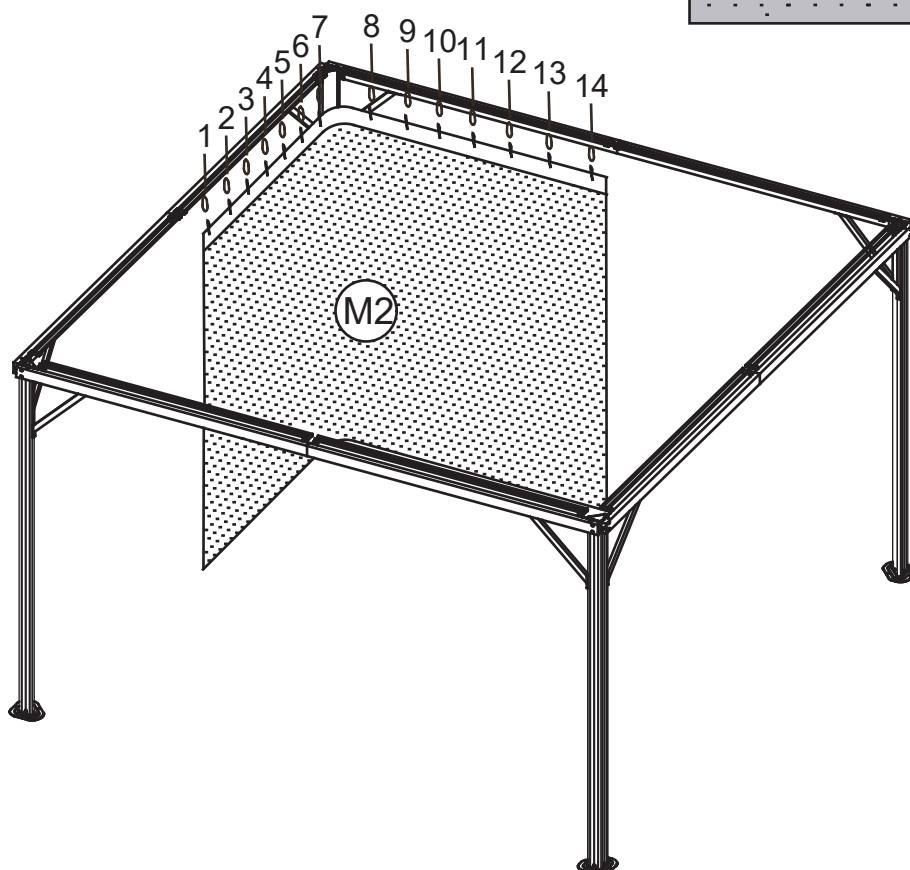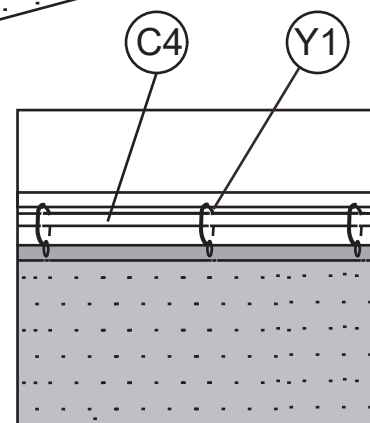

[illegible]