



ASSEMBLY INSTRUCTION


MAPLE - CREAM

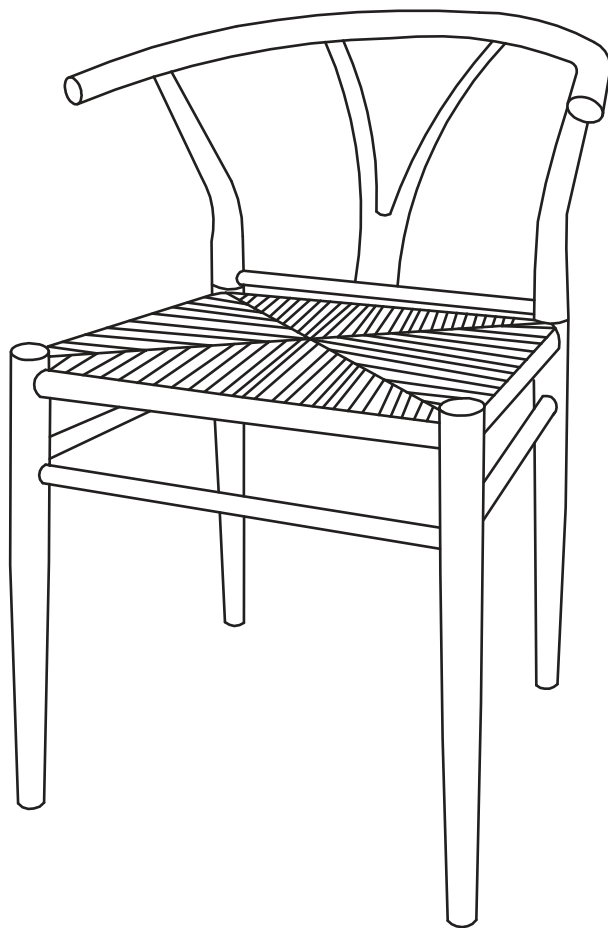

STEP 1

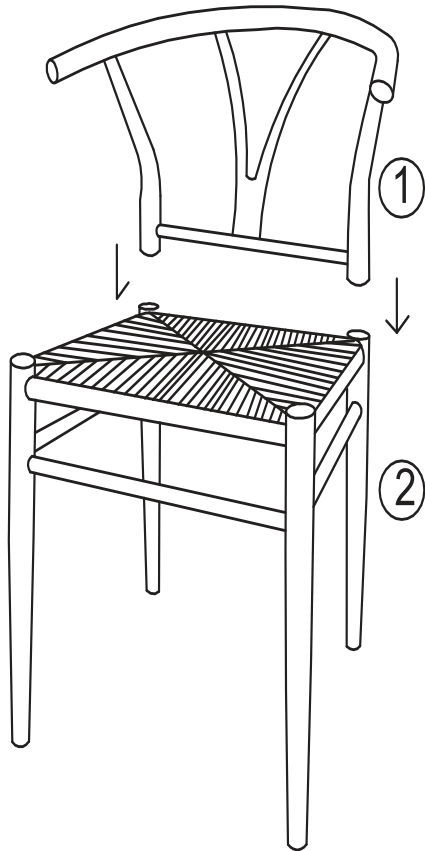


STEP 2

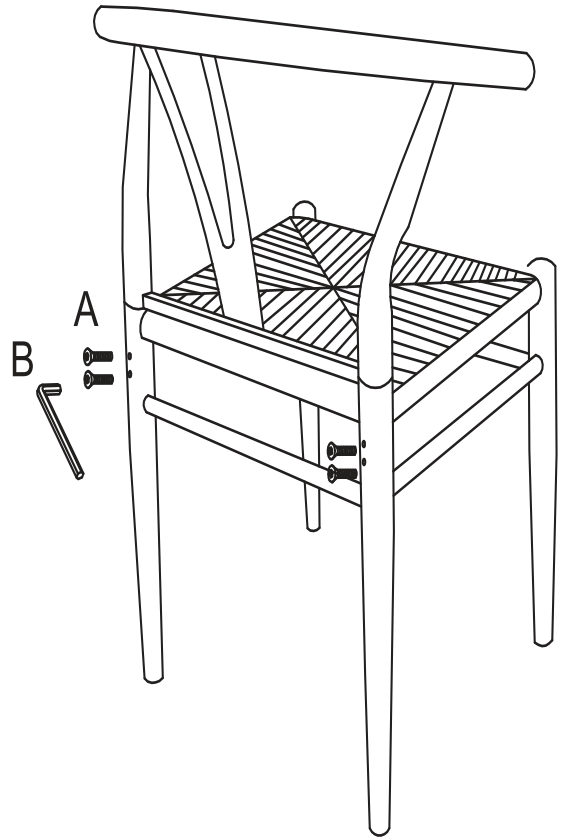









NO	A	B
TYPE	 M6 X 13	 ALLEN KEY M4
QTY	4 PCS	1 PCS

ASSEMBLY INSTRUCTION

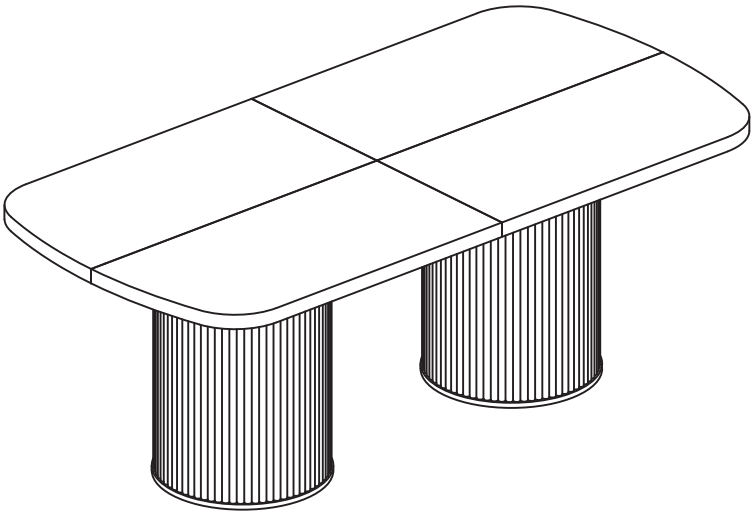


A 	B 	C 	D 	E 	F 	G 
6*13 32pcs	8*40 8pcs	Ø25 12pcs	8*18 40pcs	M5 1pcs	4pcs	8*25 24pcs

H 	I 	J 
8*16 12pcs	8*30 8pcs	83*83 1pcs

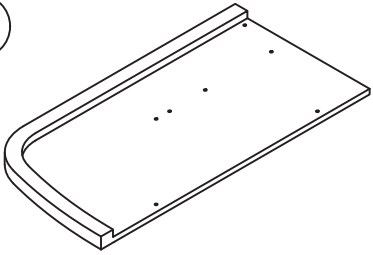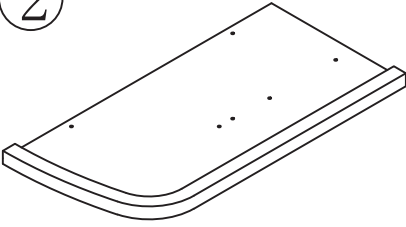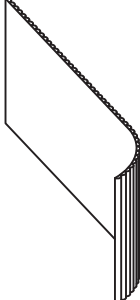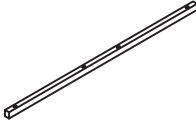① 	② 	③ 
2pcs	2pcs	2pcs
④ 	⑤ 	⑥ 
2pcs	2pcs	2pcs
⑦ 	⑧ 	⑨ 
2pcs	8pcs	2pcs


ASSEMBLY INSTRUCTION

STEP1

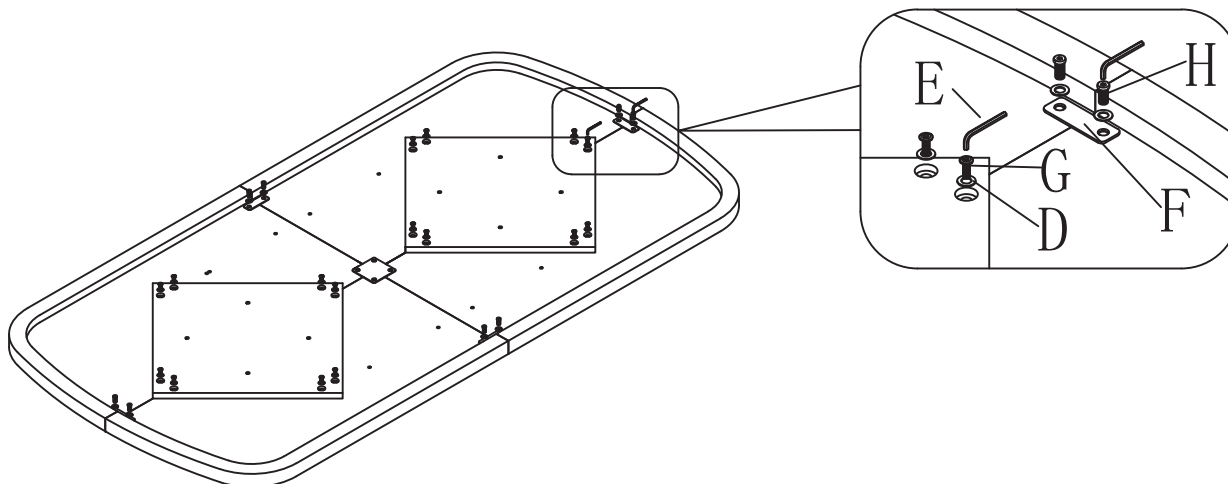


STEP2

Pay attention to the direction of the link bar, the distance between the two sides is different, the installation direction is wrong, please rotate the direction

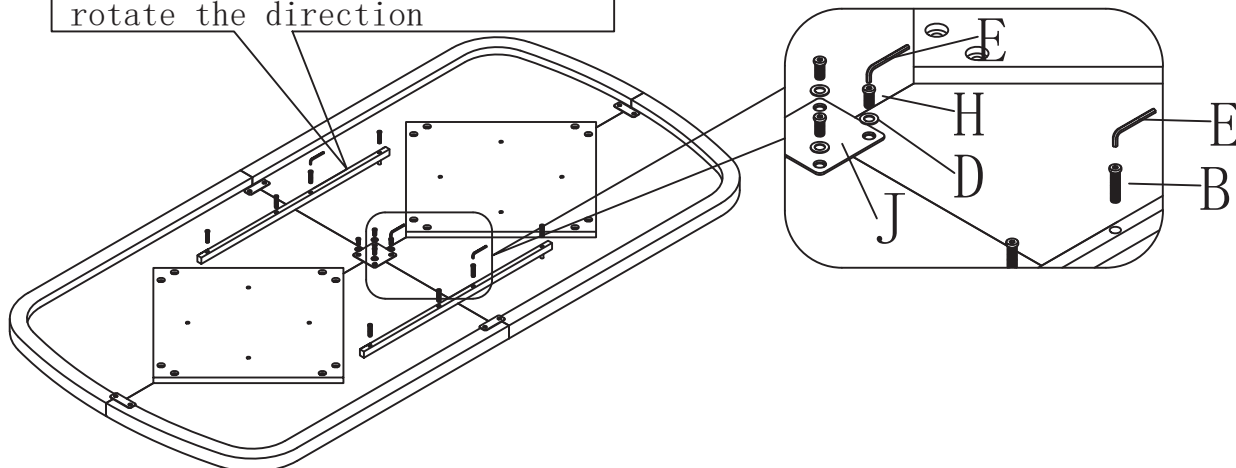


STEP3

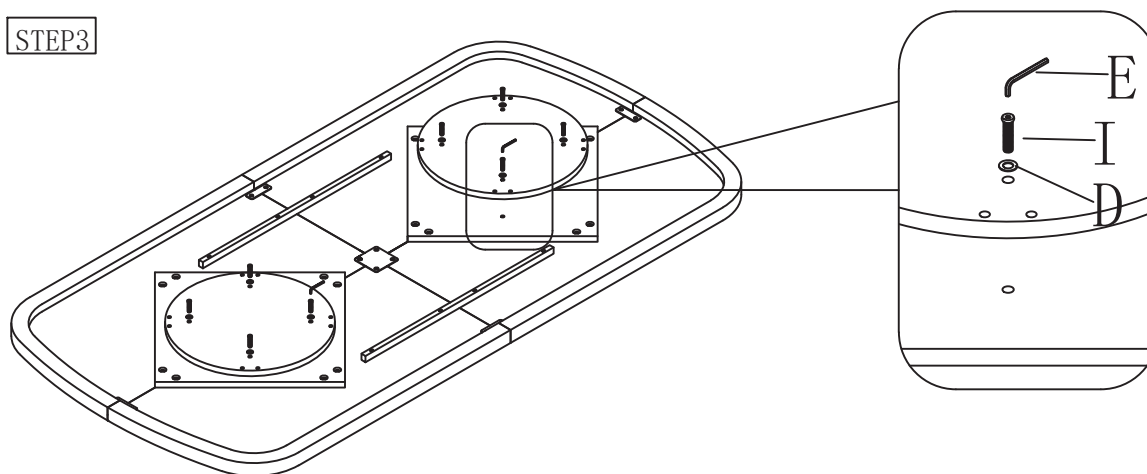


ASSEMBLY INSTRUCTION

STEP4

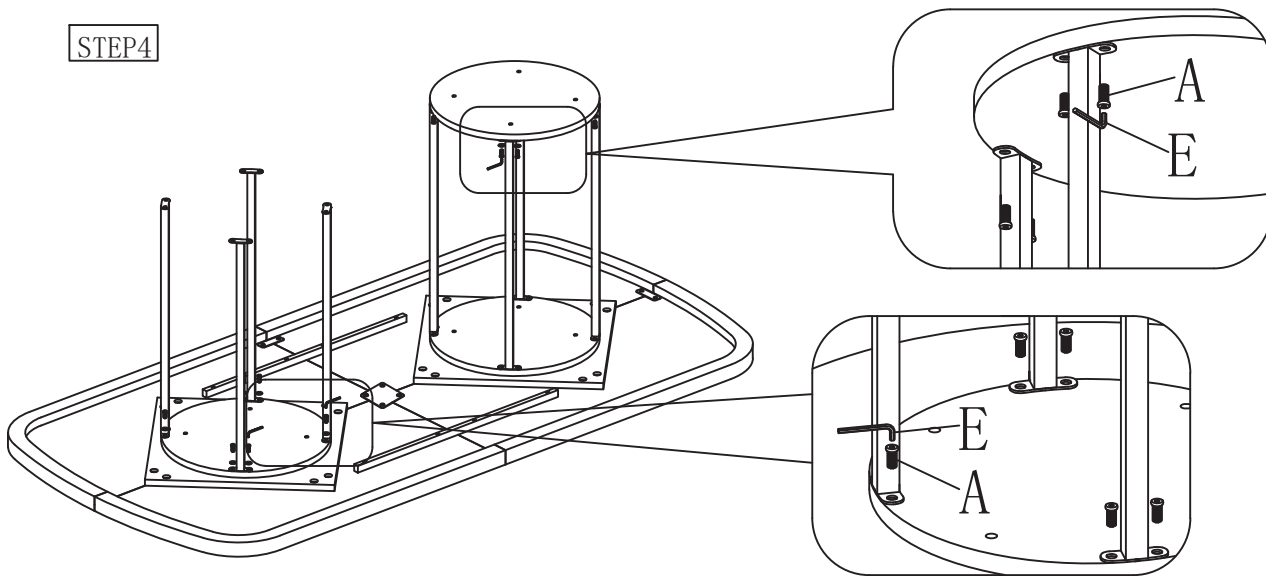

STEP5

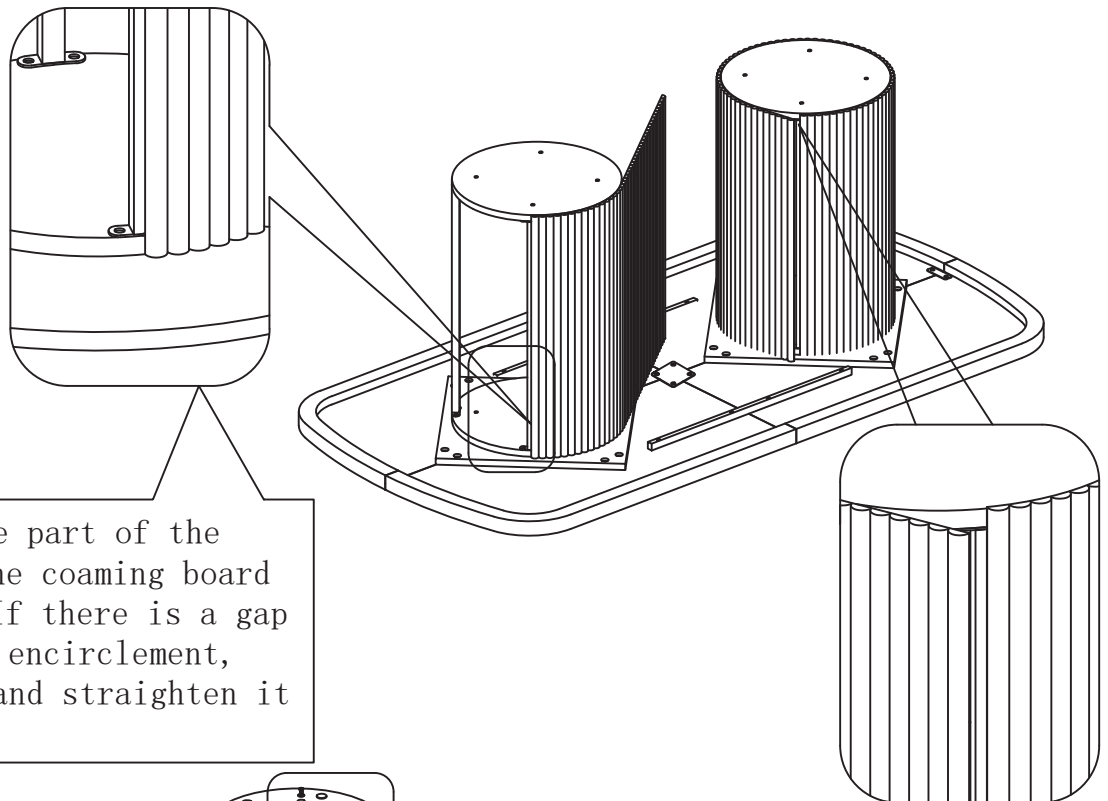

STEP6

