

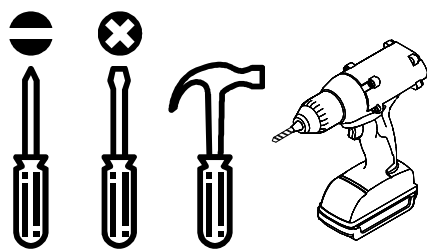


1870100354A1

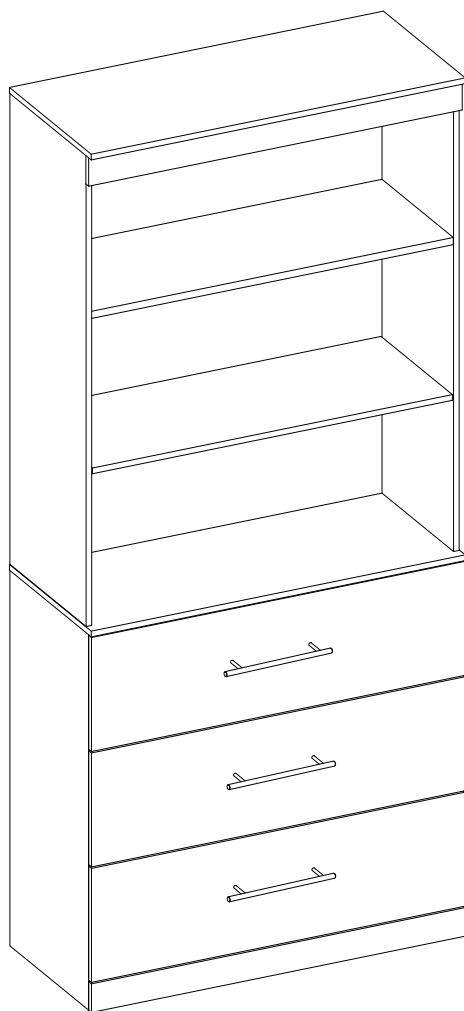


Tools required
(not included)


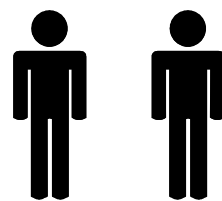


2 people for assembly

PRODUCT ASSEMBLY

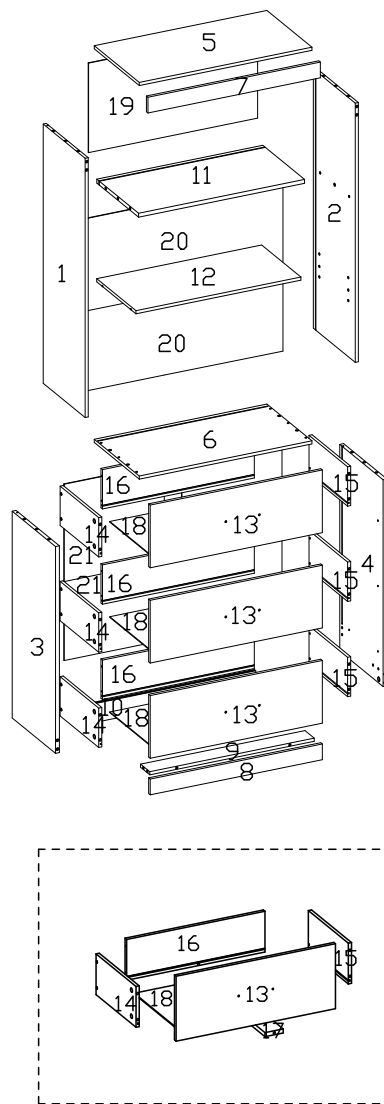


Hardware List


A x43	B x43	C x14	D x47	E x13	F x9	G x6
 Ø7*40mm	 Ø15*9.2mm	 Ø8*30mm	 Ø3.5*14mm	 Ø3.5*30mm	 Ø3.5*30mm	 Ø3.5*30mm
H x3	I x3	J x1	K x1	L x4	M x4	N x22
	 L=300mm					
O x44						
						

PRODUCT ASSEMBLY

STEP 1




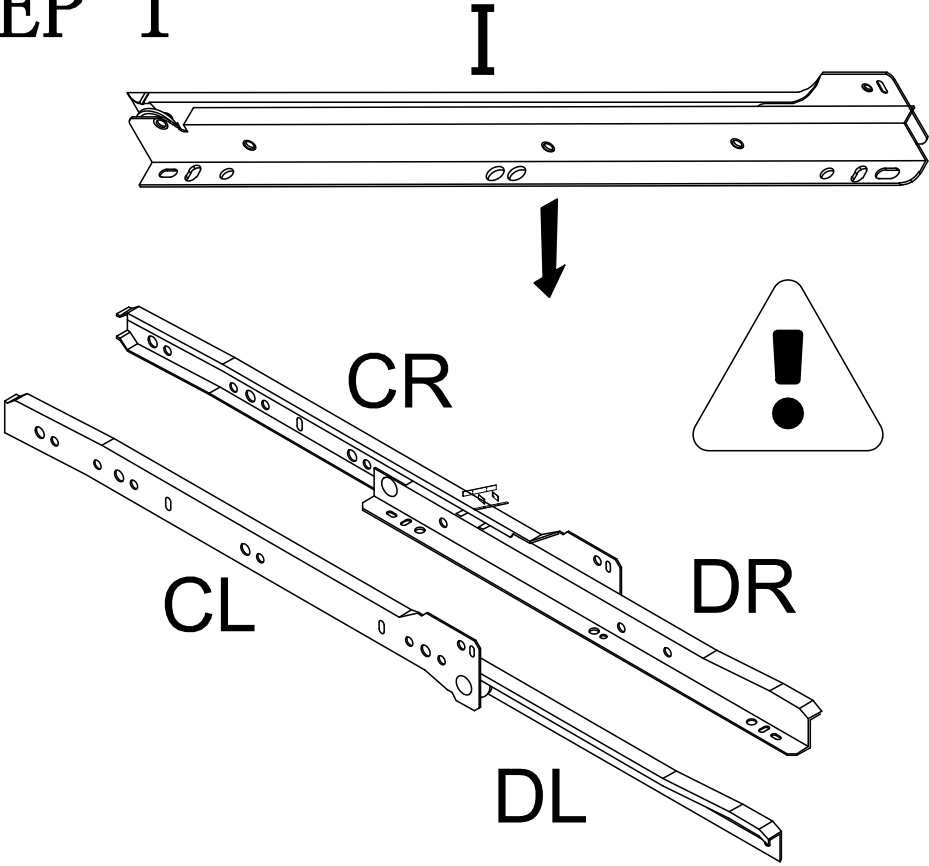


STEP 2




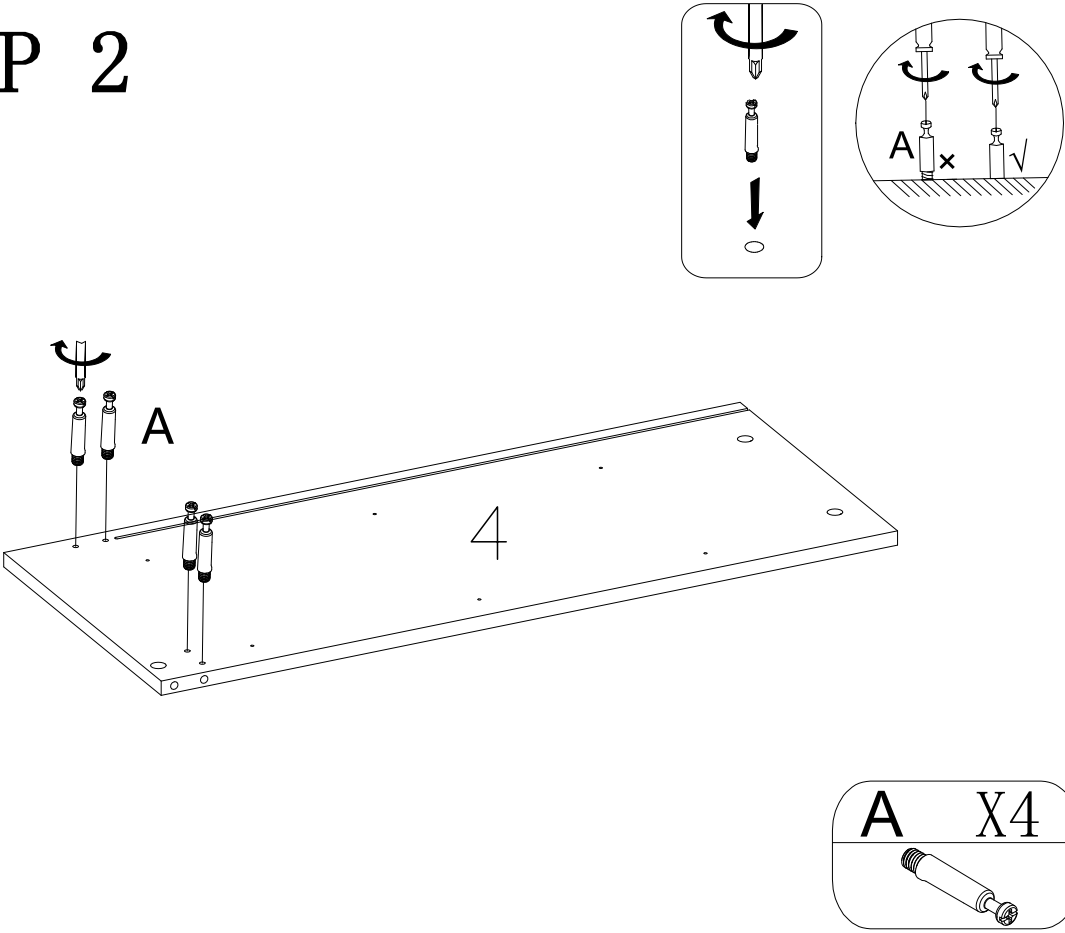


PRODUCT ASSEMBLY

STEP 3

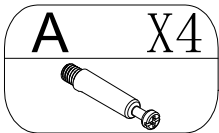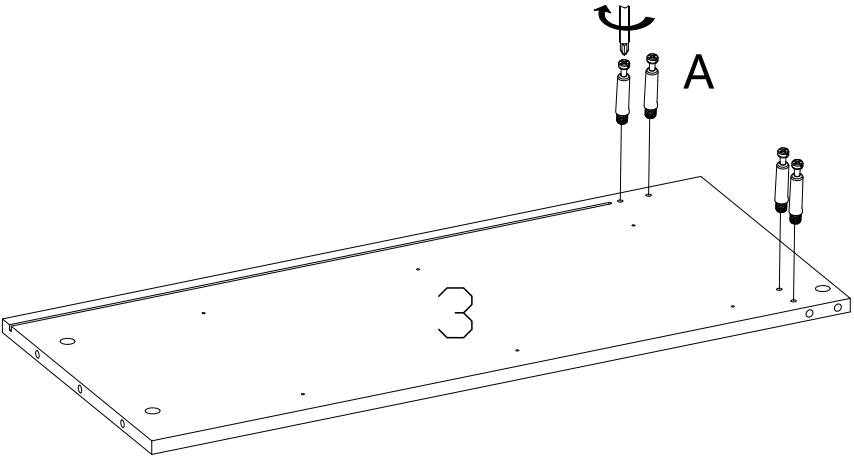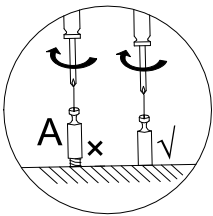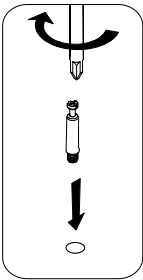


STEP 4

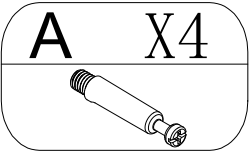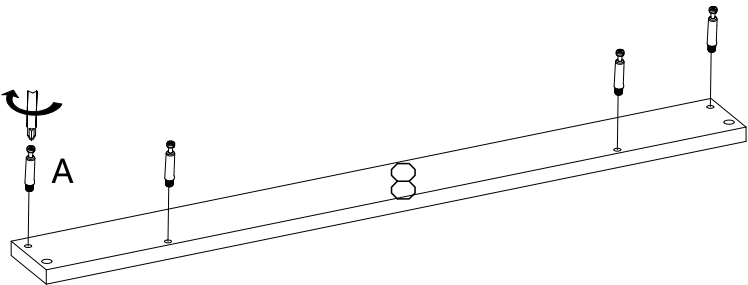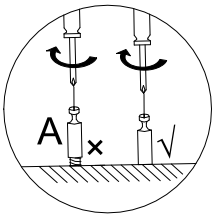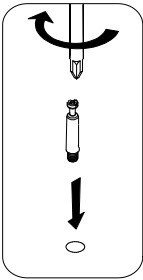


PRODUCT ASSEMBLY


STEP 5

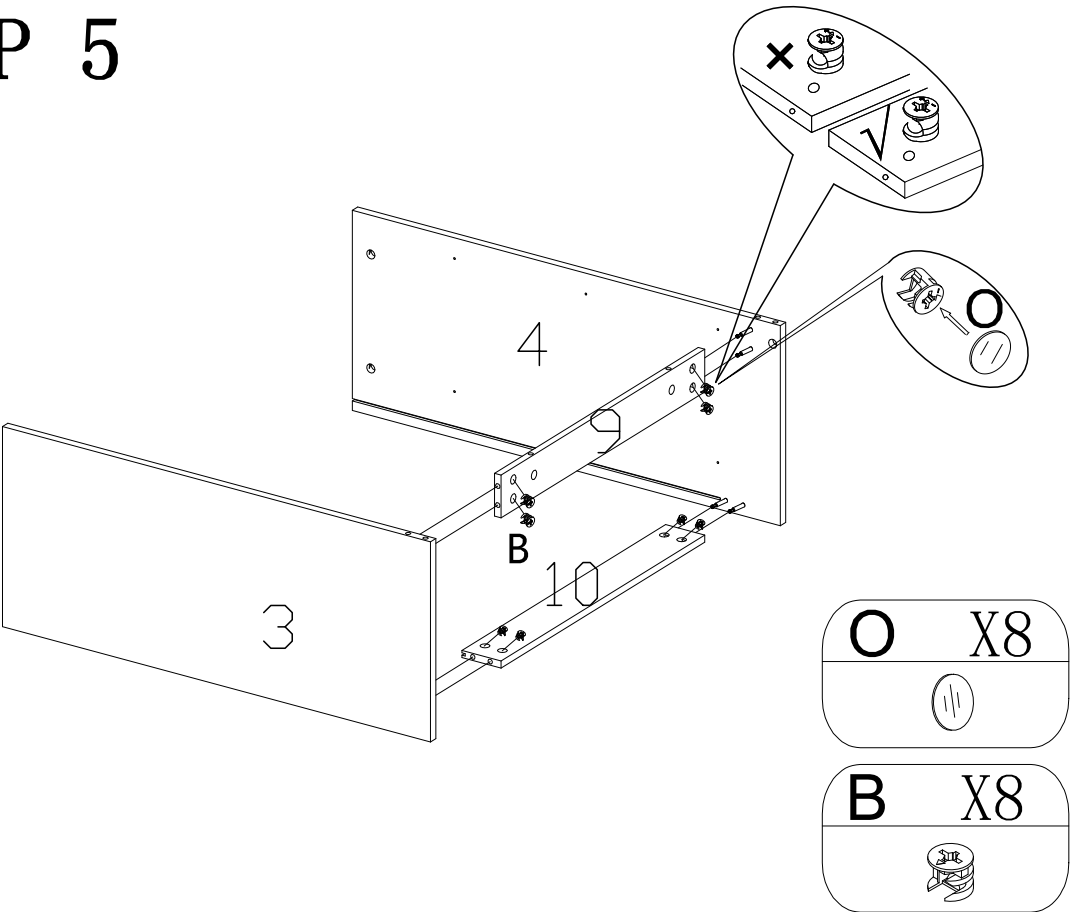





STEP 6

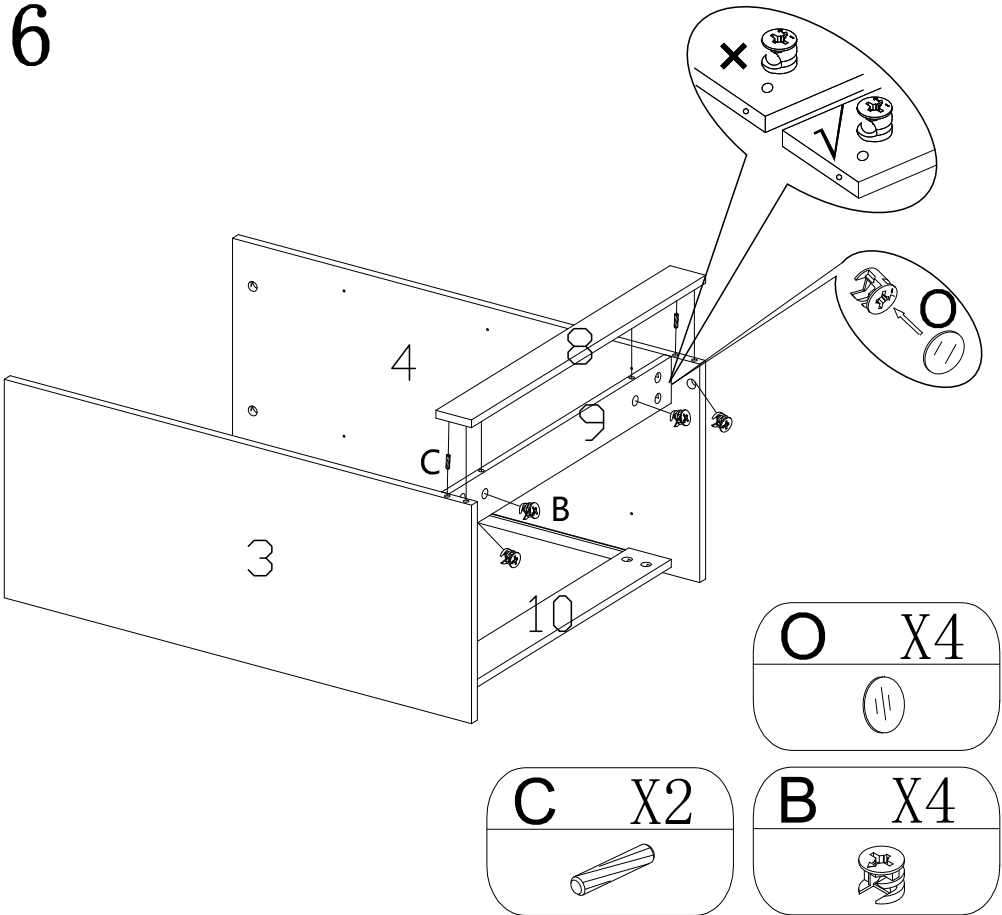

STEP 7




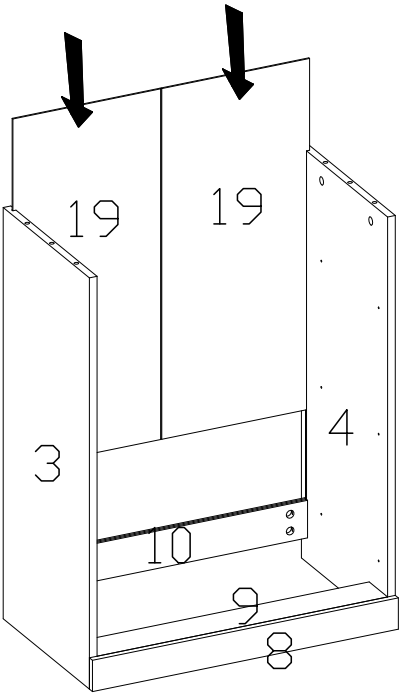


STEP 8

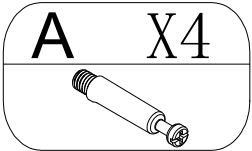
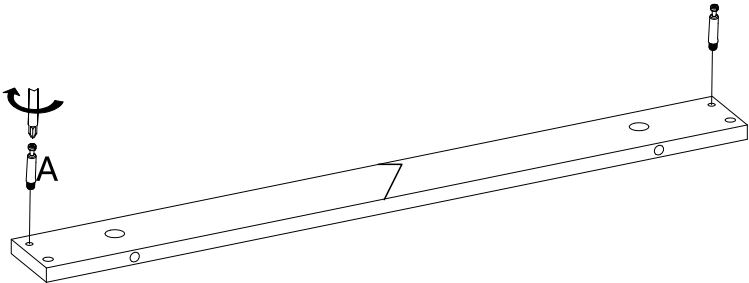
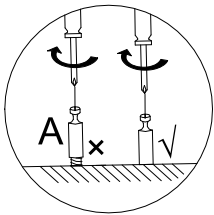
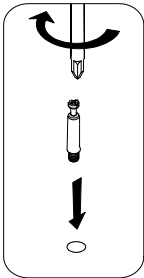


PRODUCT ASSEMBLY

STEP 9

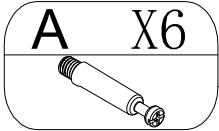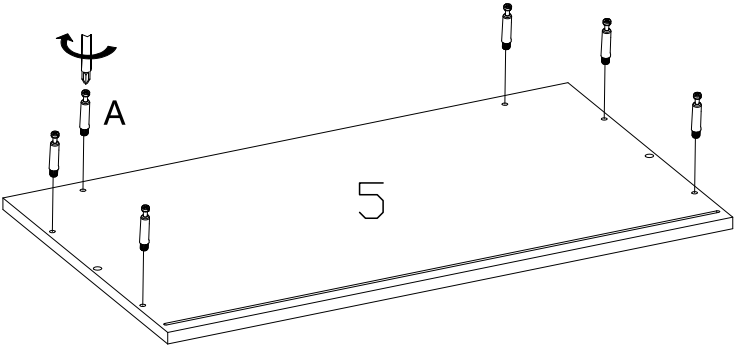
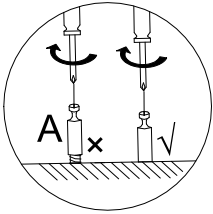
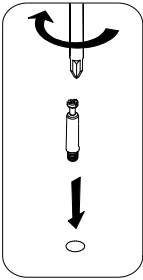


STEP 10

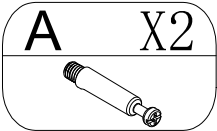
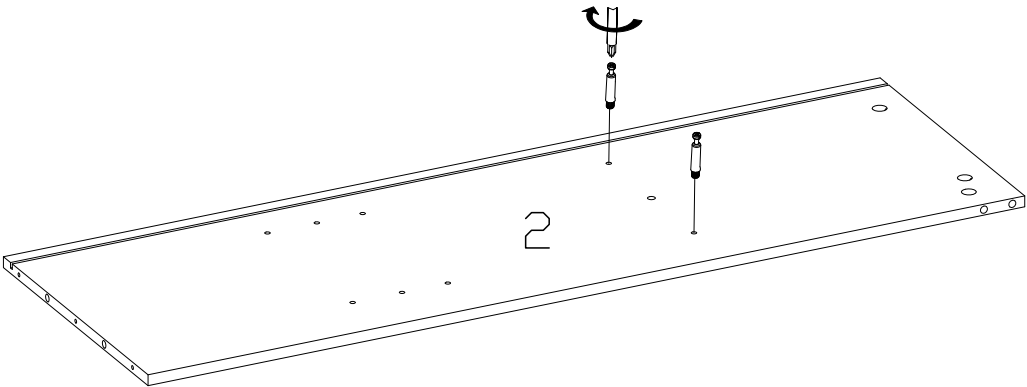
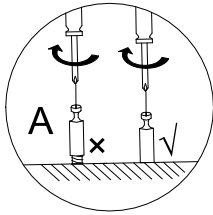
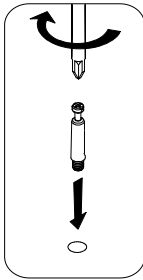


PRODUCT ASSEMBLY

STEP 11


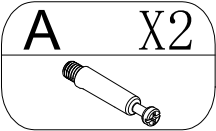
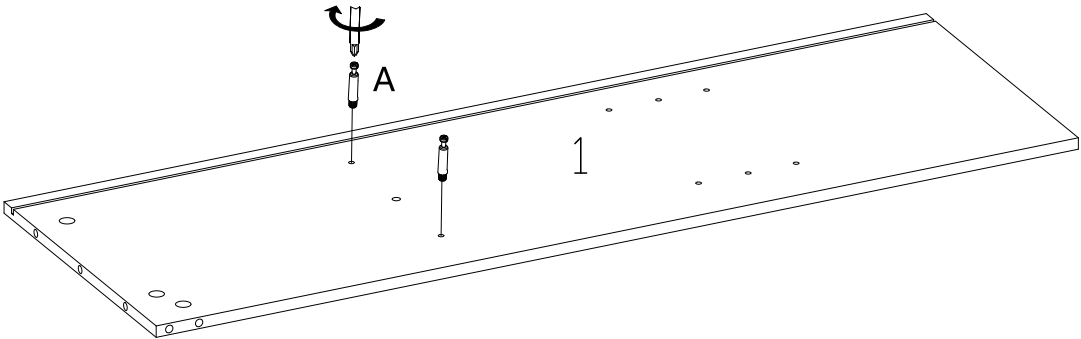
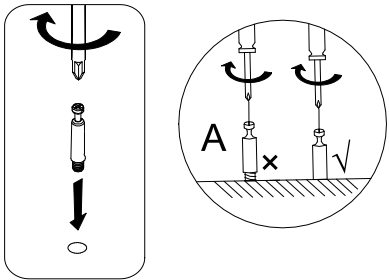


STEP 12

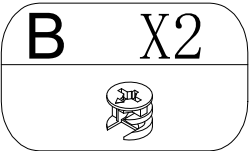
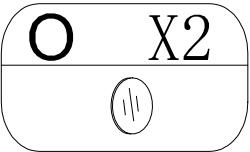
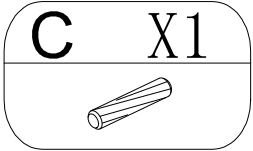
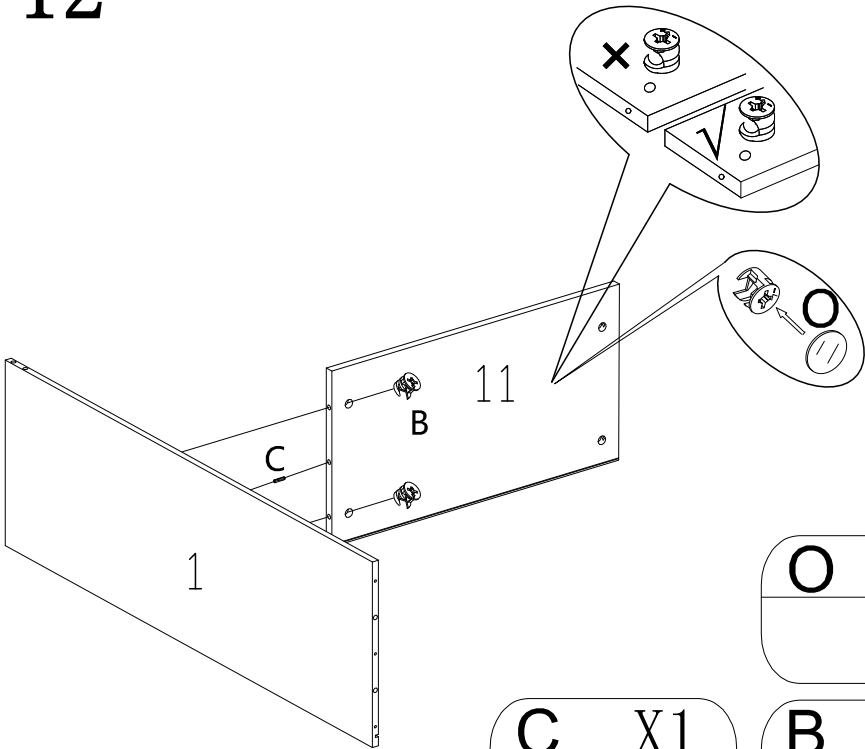


PRODUCT ASSEMBLY


STEP 13

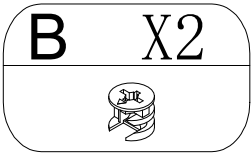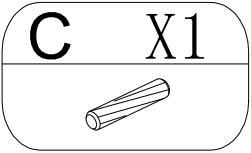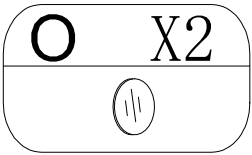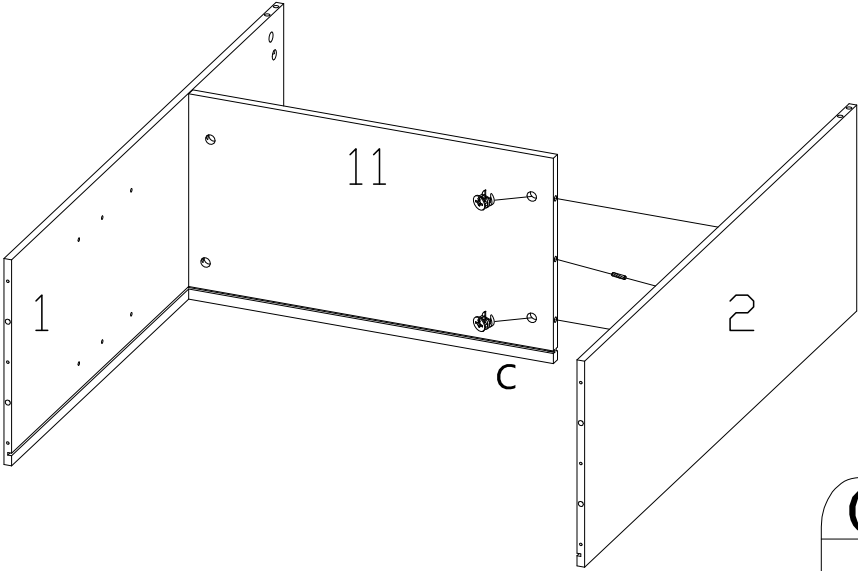


STEP 14

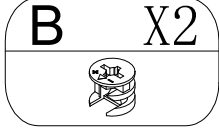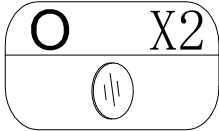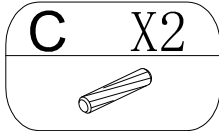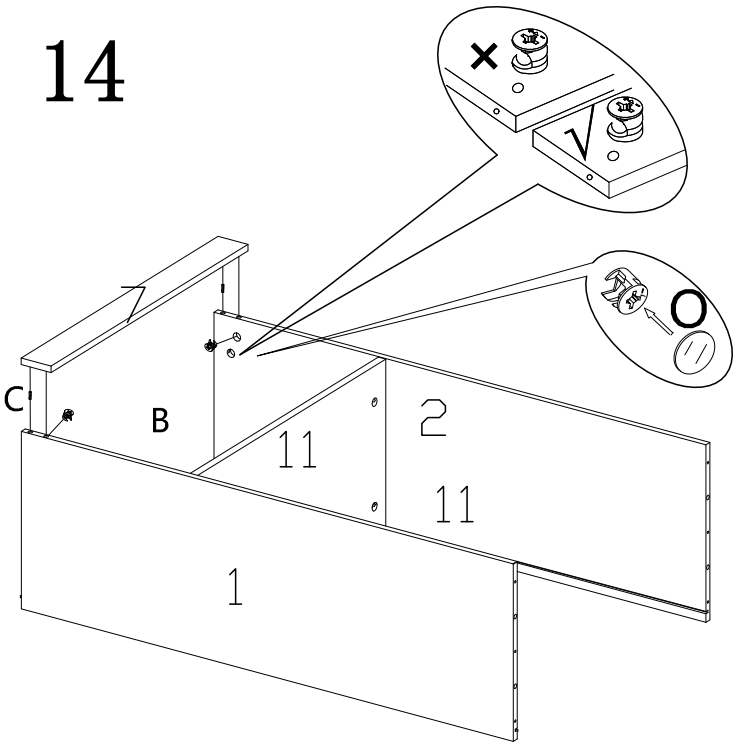

STEP 15

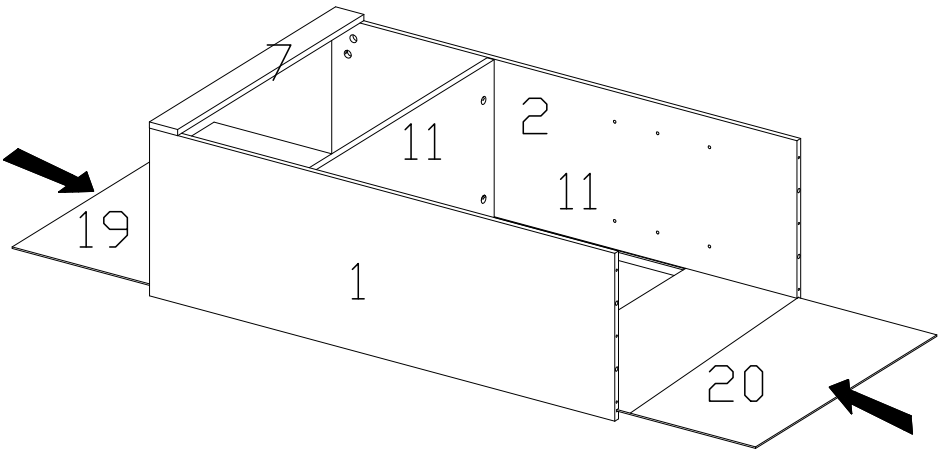


STEP 16

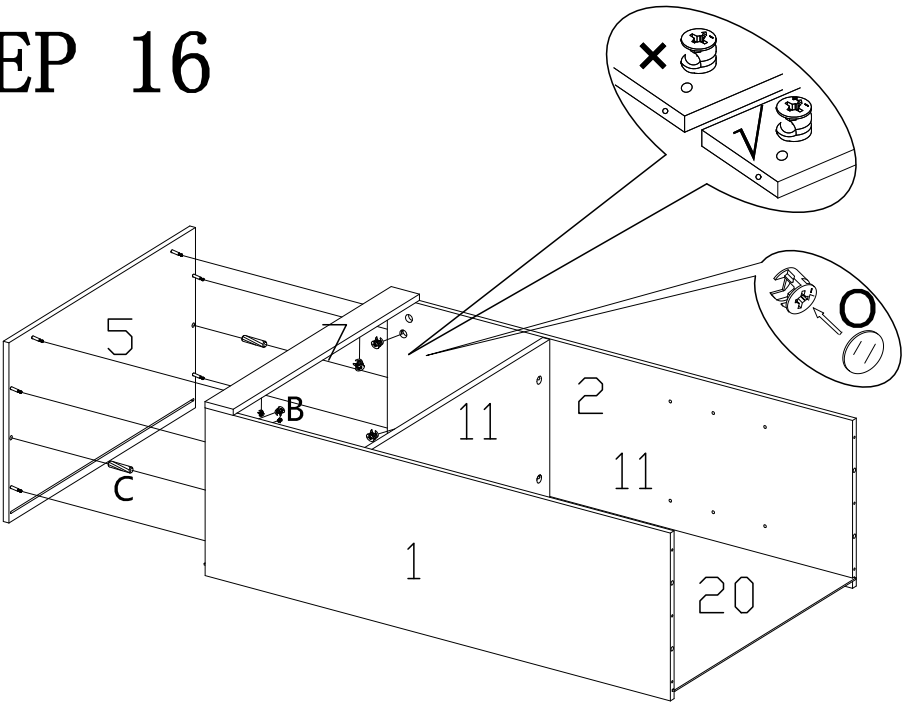


C	X2
	
O	X6
	
B	X6
	



STEP 17

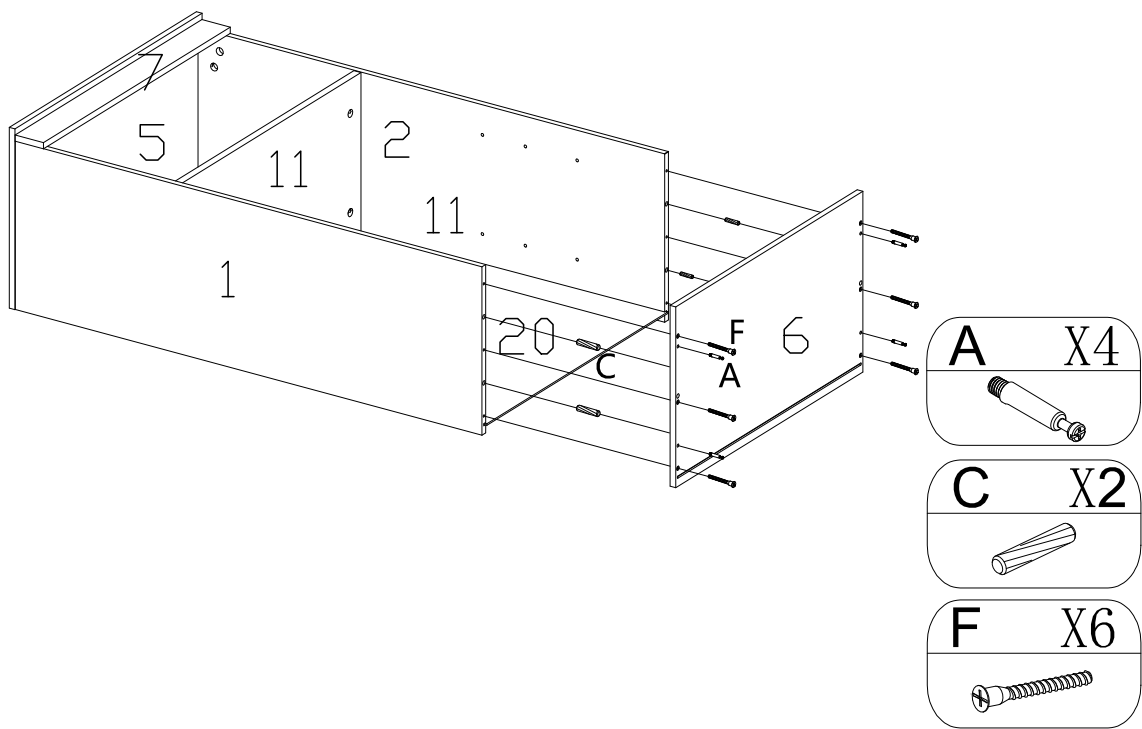






STEP 18

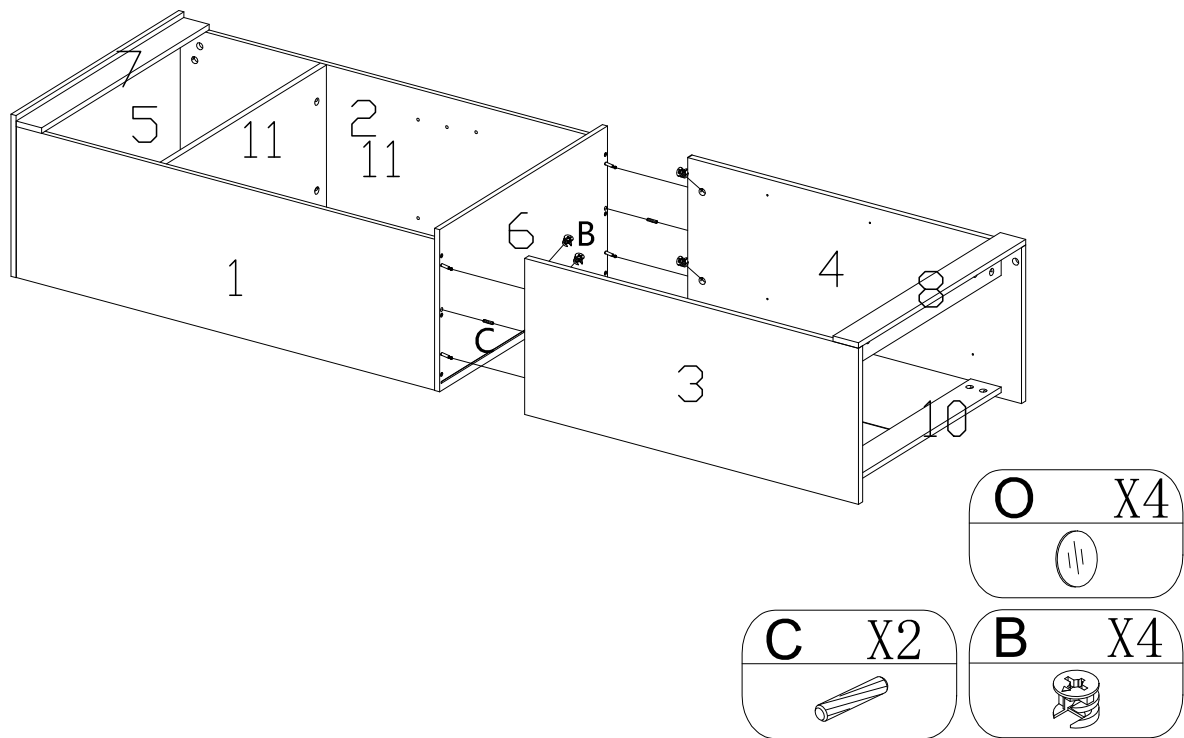


STEP 19

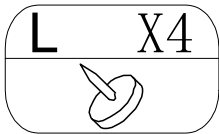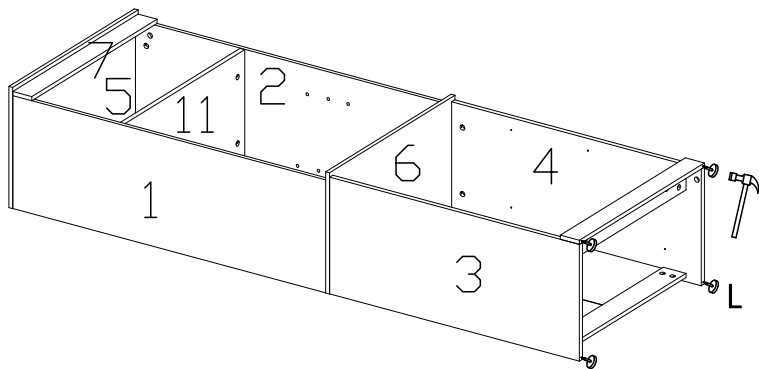


STEP 20

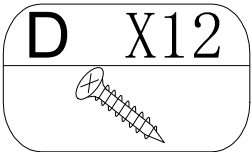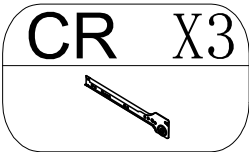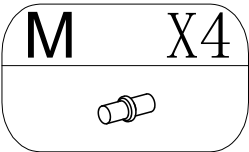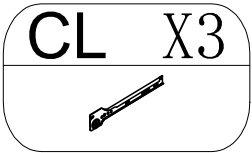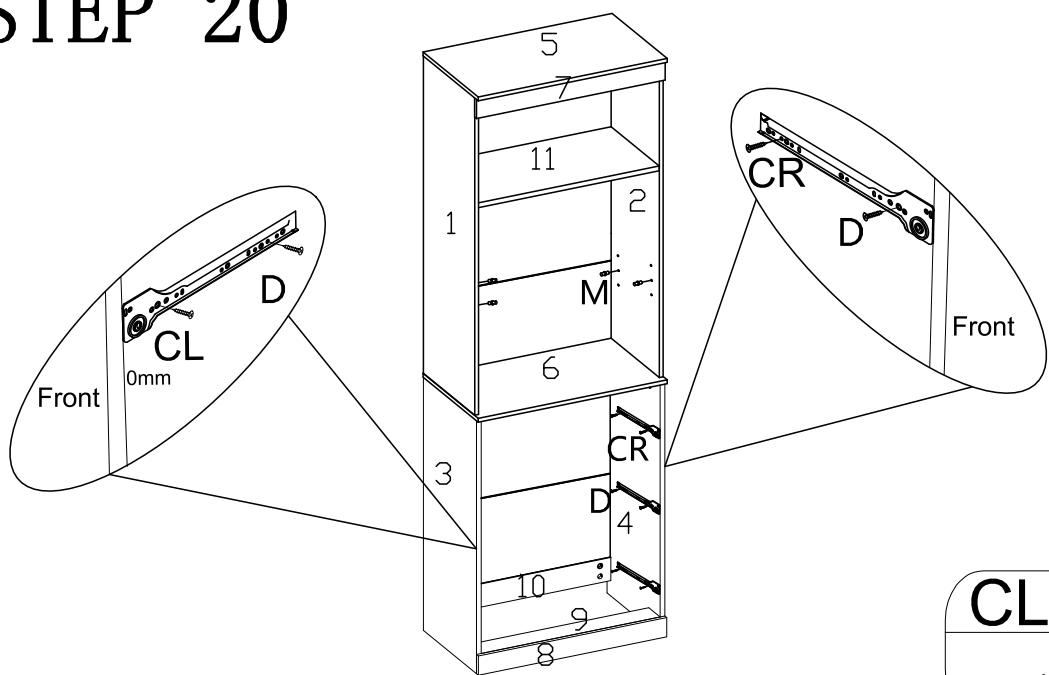


STEP 21

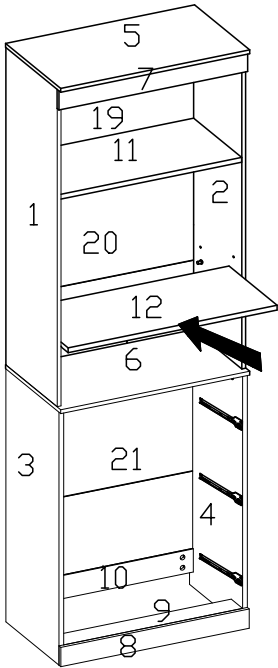



STEP 22

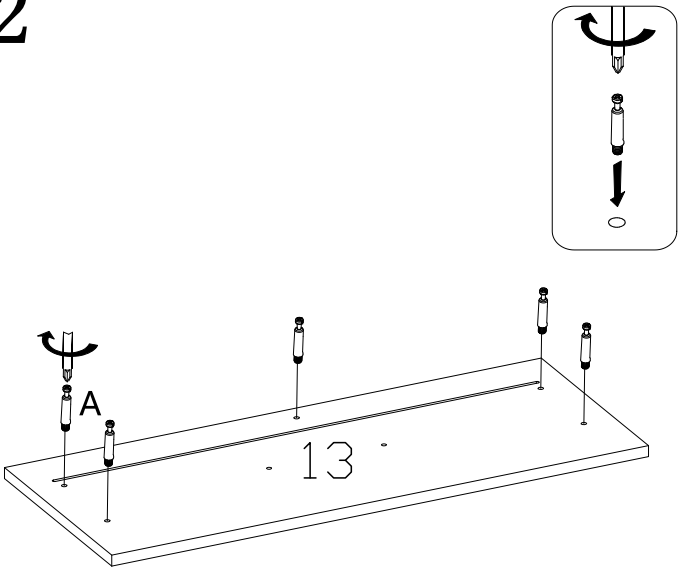



X 3

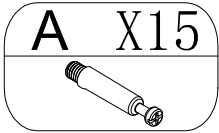


STEP 23

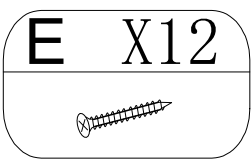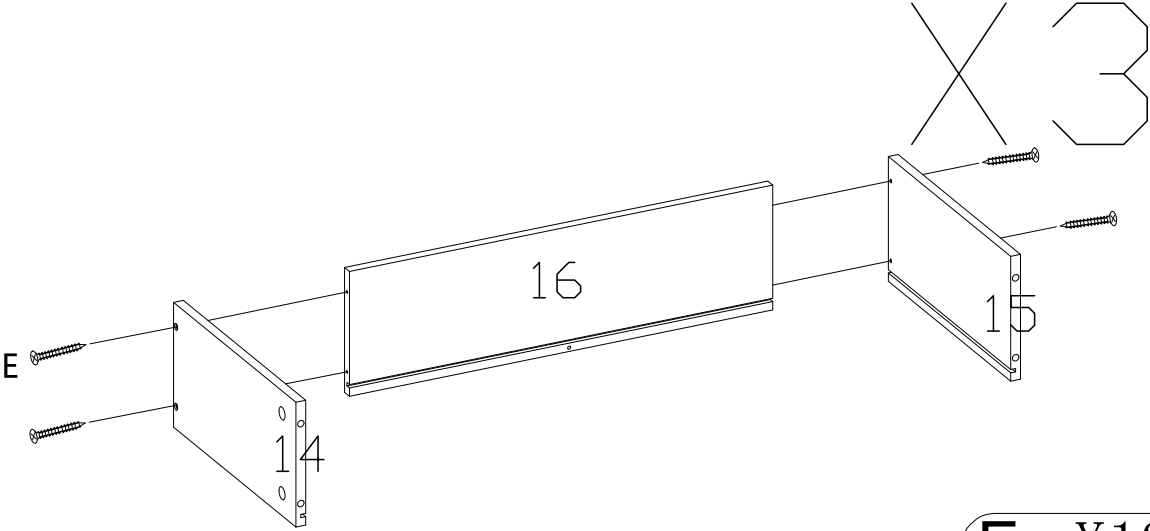


STEP 24

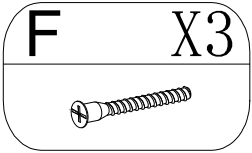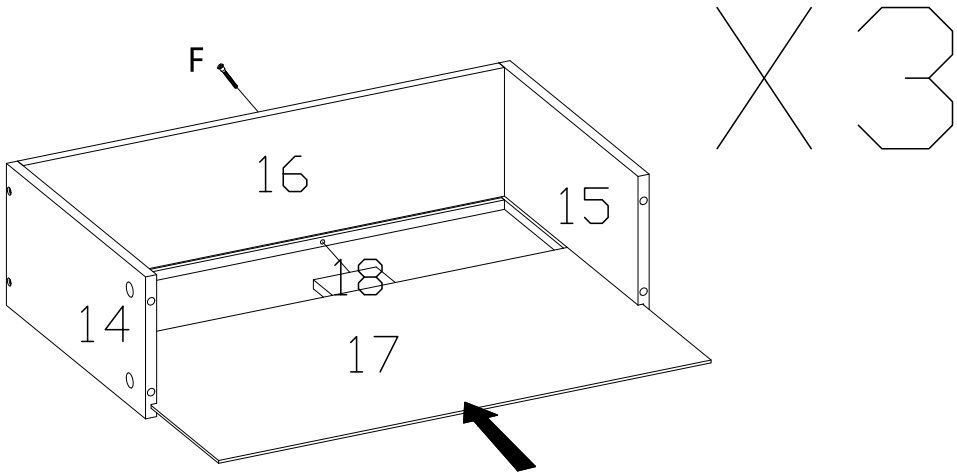


STEP 25

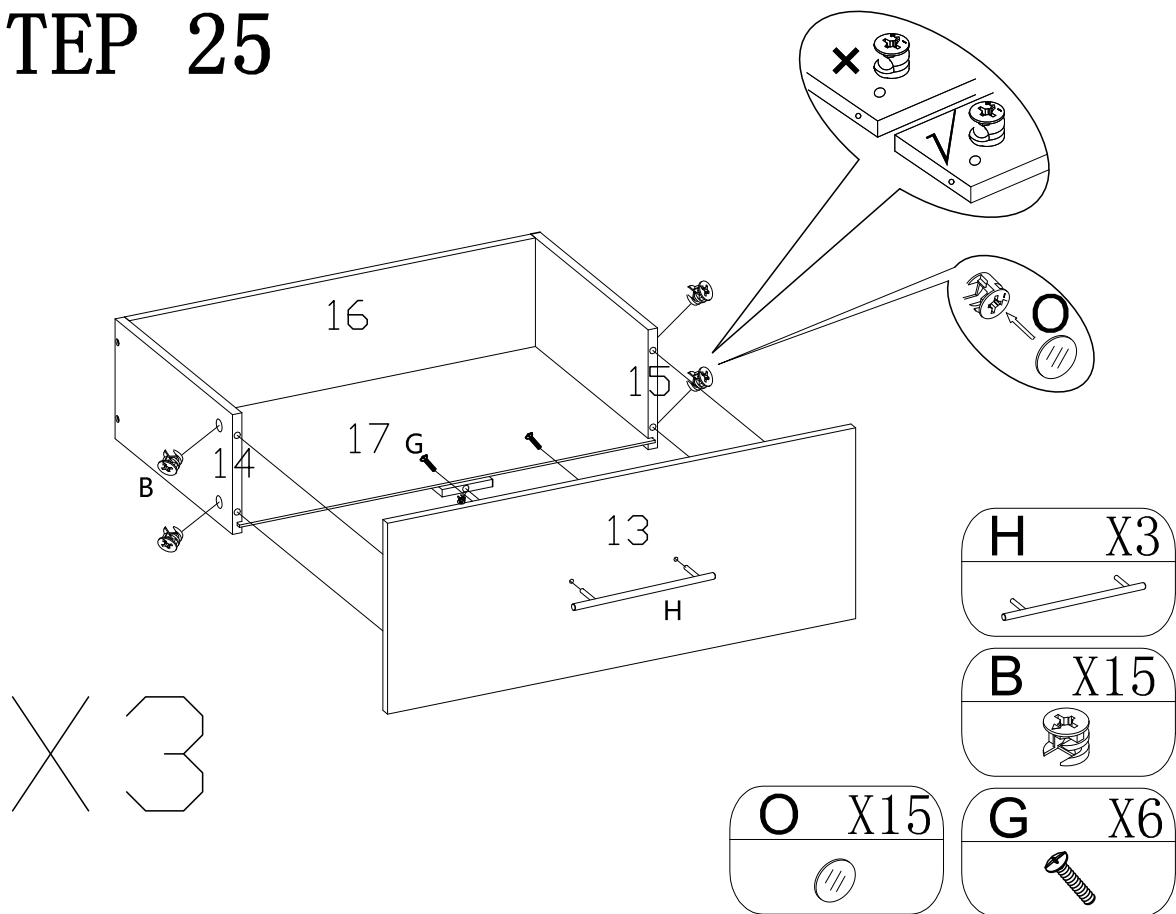



STEP 26

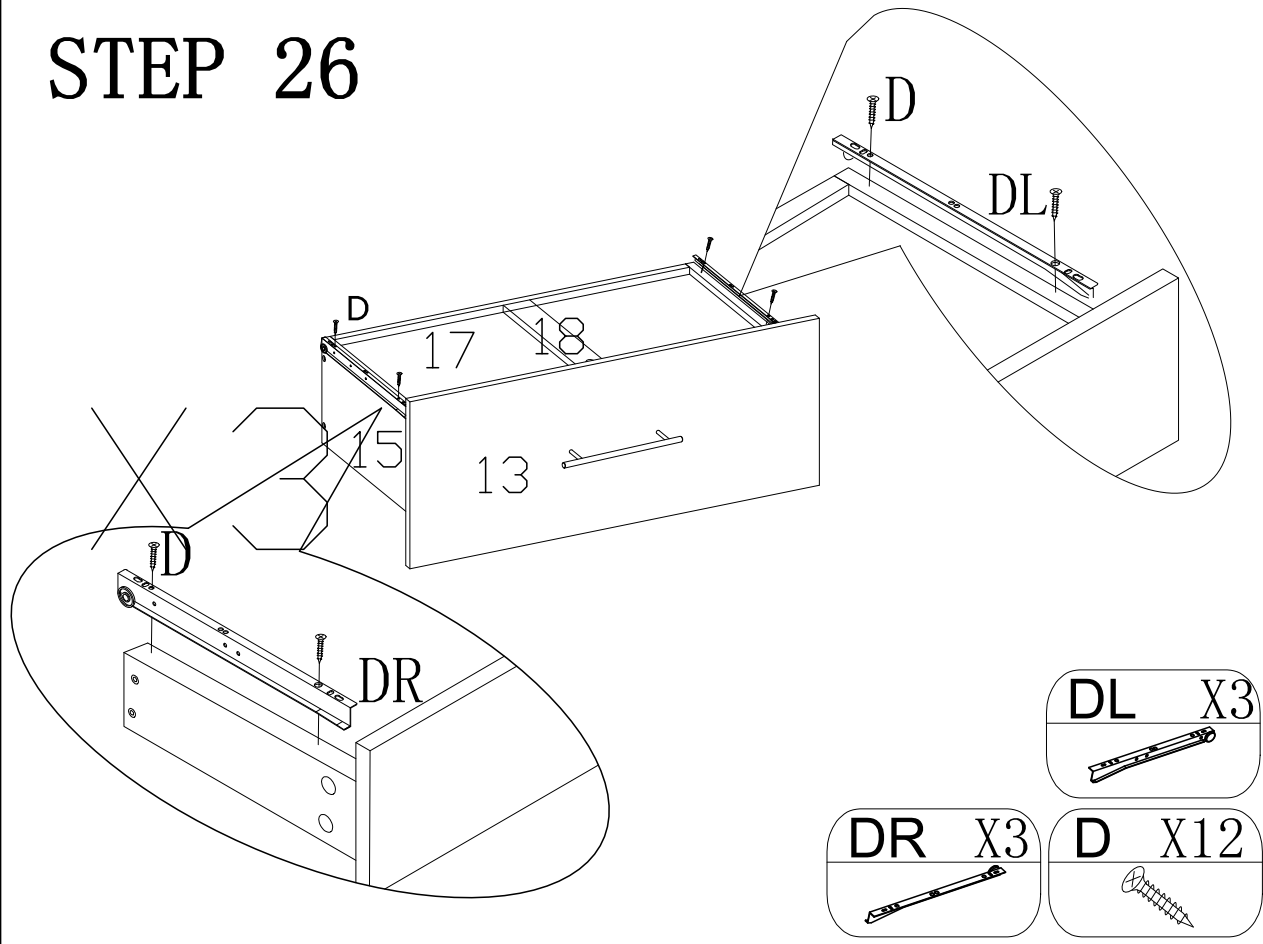



STEP 27

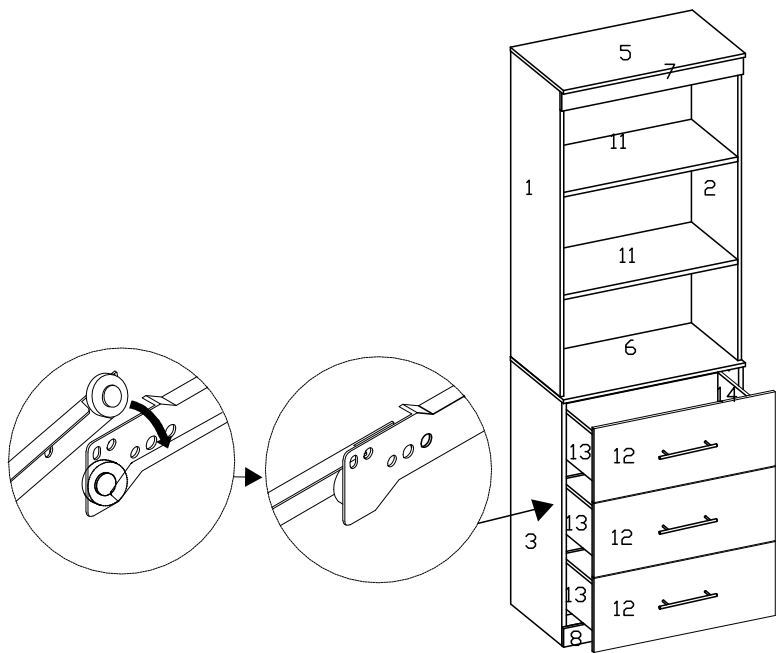

STEP 28

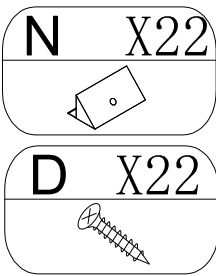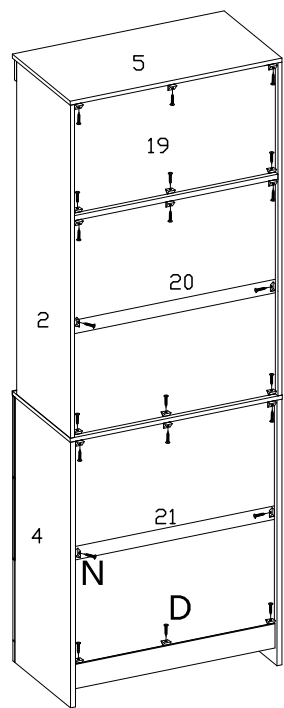

STEP 29

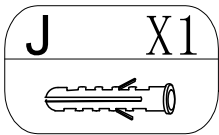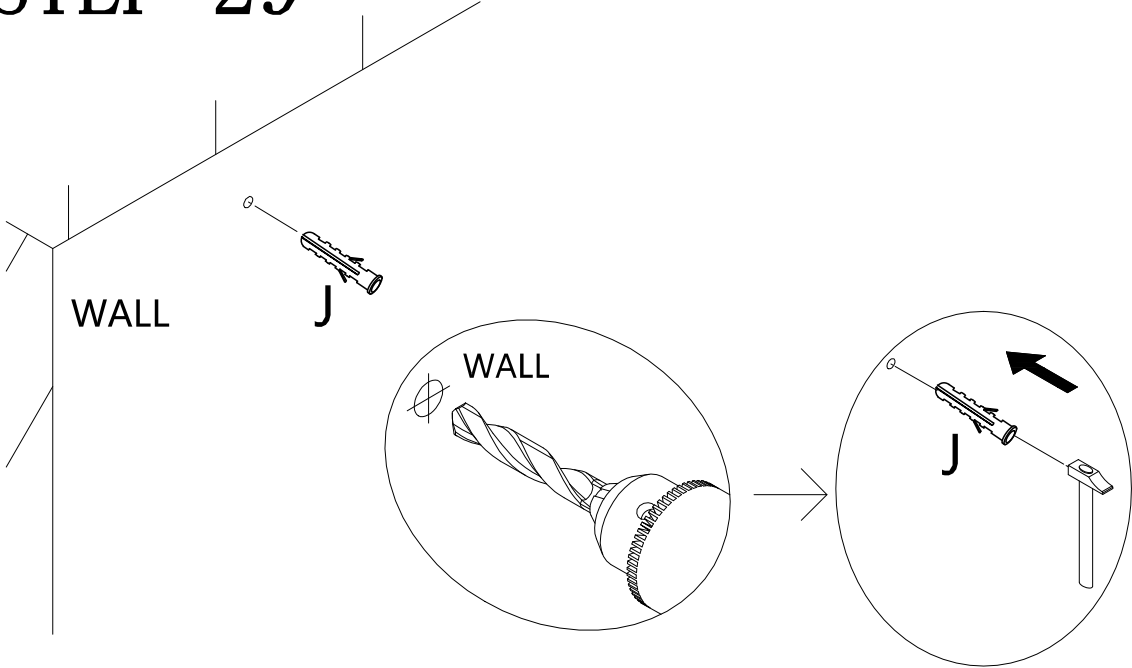

STEP 30

