

CHIC HOUSE

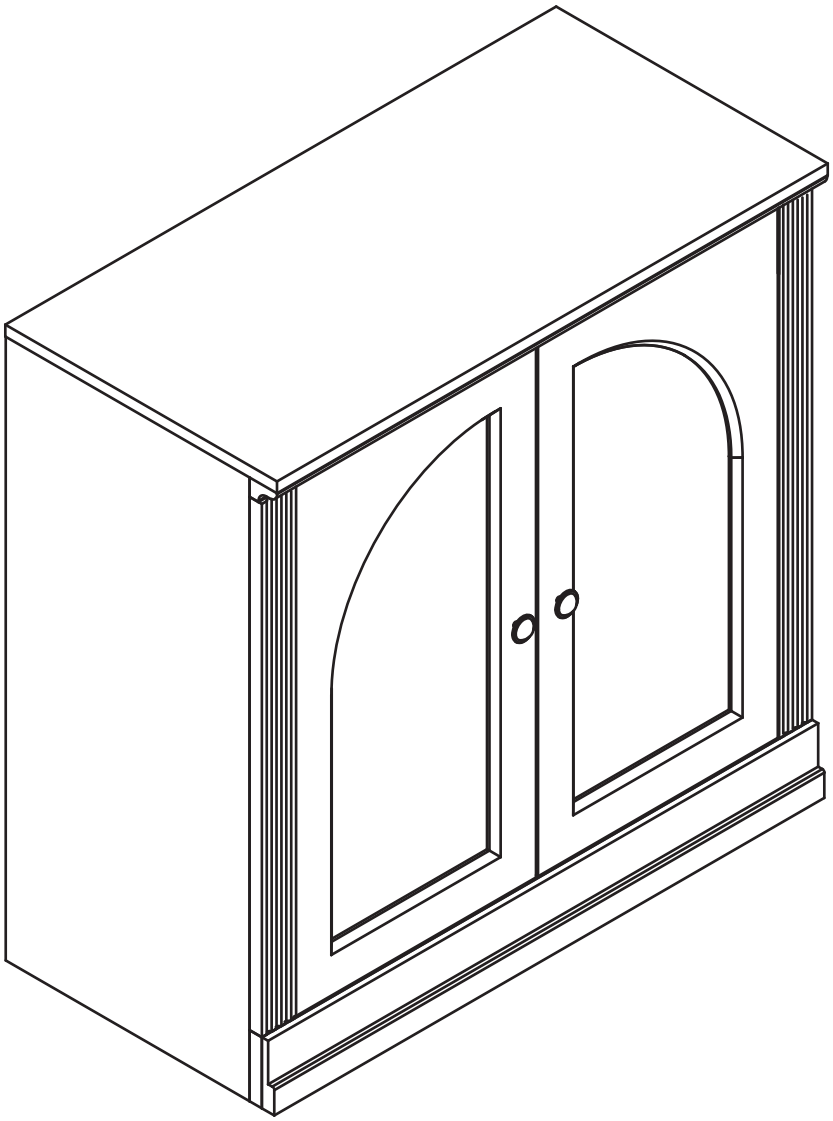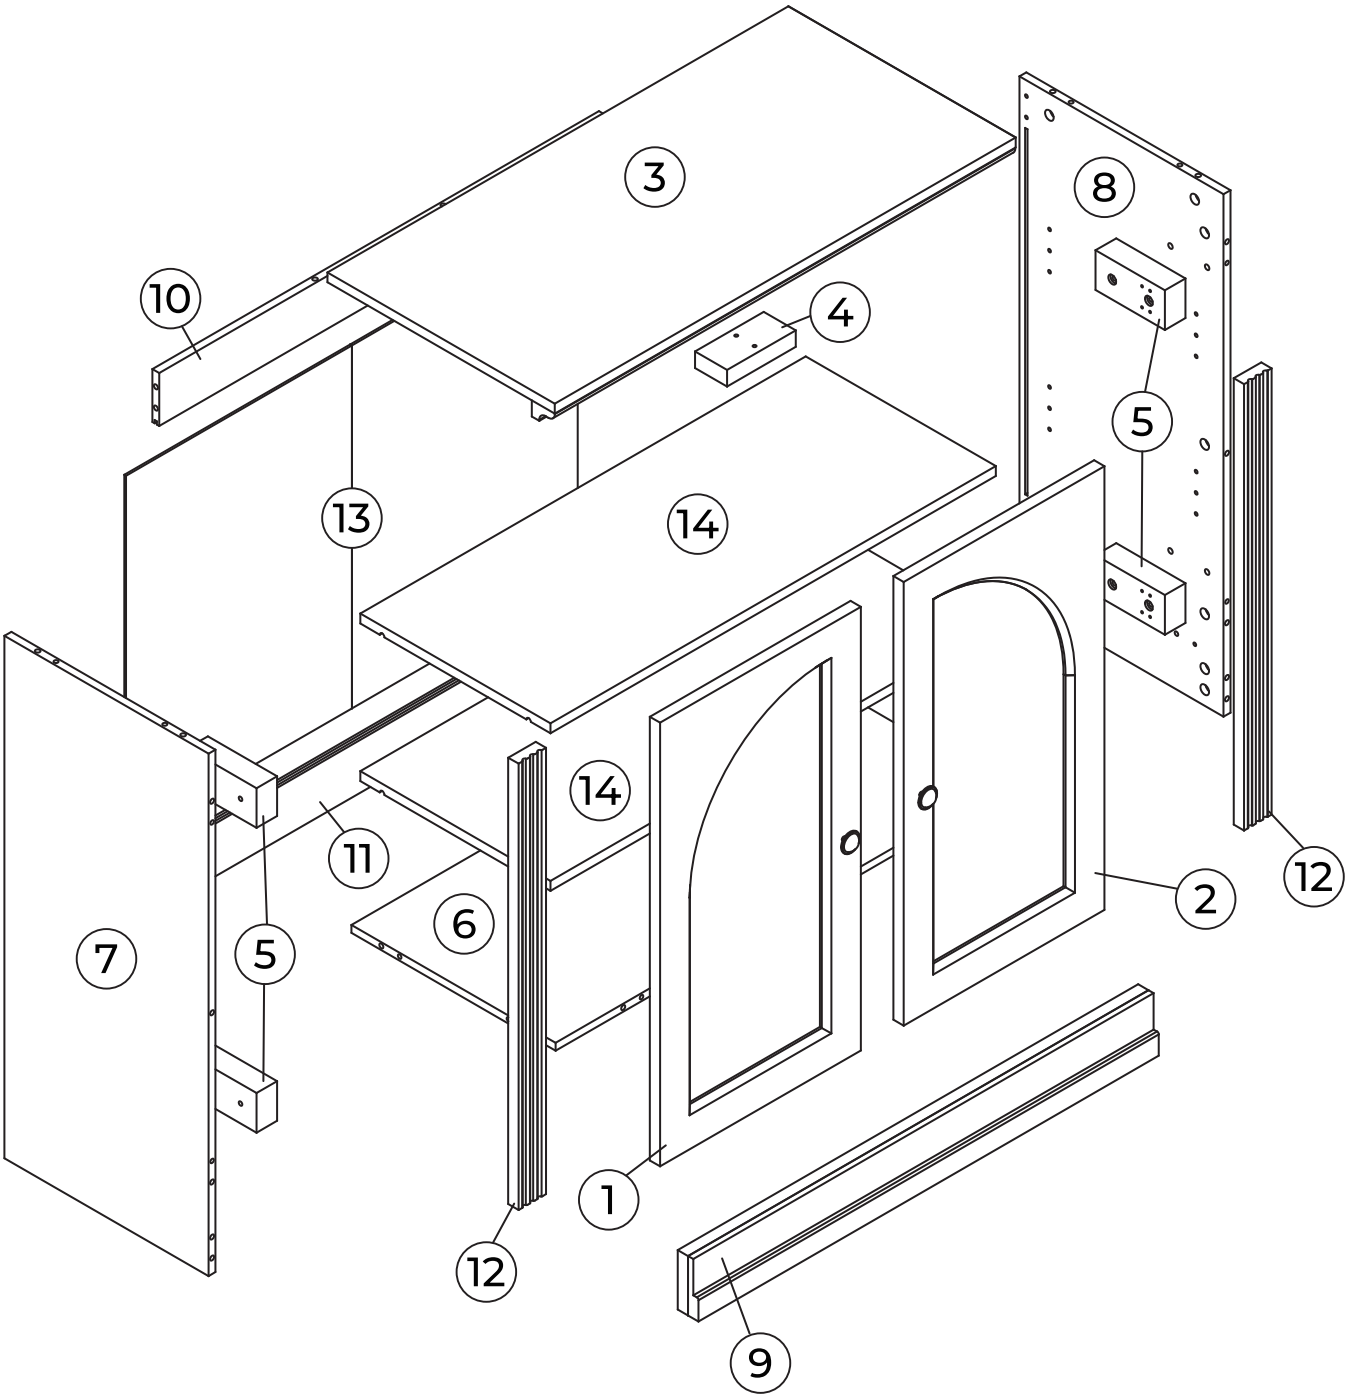

Monos















Storage Cabinet

Assembly Instructions - Please keep for future reference
Important - Please read these instructions before assembly
Customer Support - support@chichouse.cn


3
8
10
4
5
13
14
14
11
12
2
6
7
5
1
12
9














Components

Please check if all the pieces listed below are received.

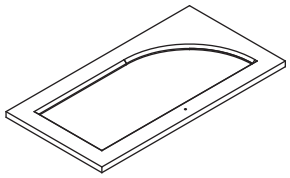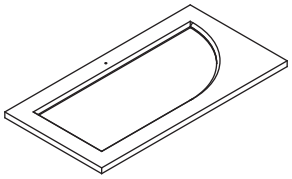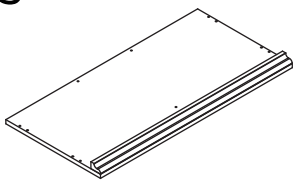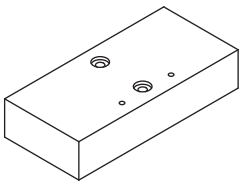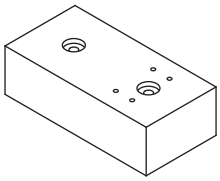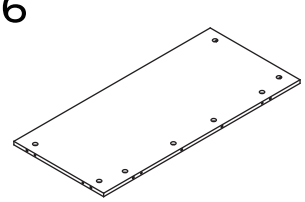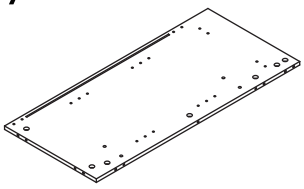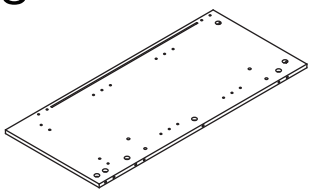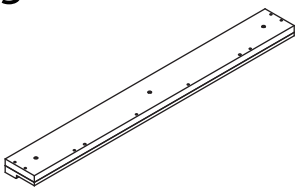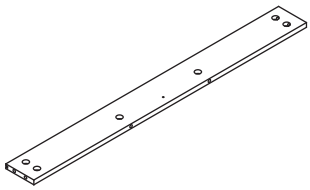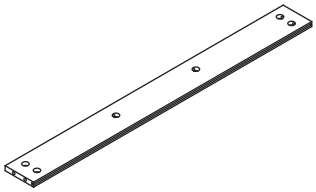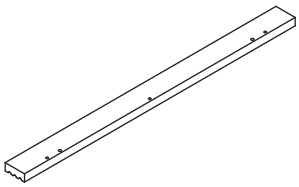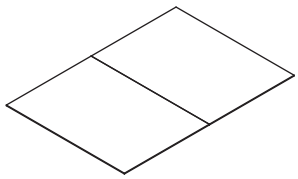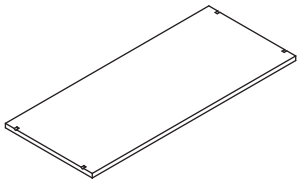
1  x1	2  x1	3  x1	4  x1
5  x4	6  x1	7  x1	8  x1
9  x1	10  x1	11  x1	12  x2
13  x1	14  x2		


Components


Please check if all the pieces listed below are received.

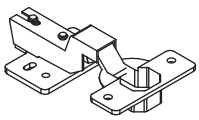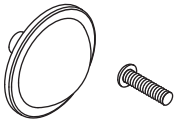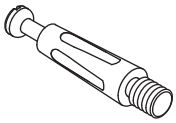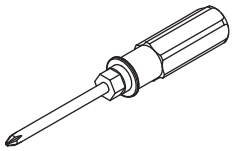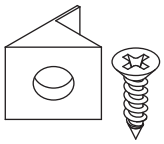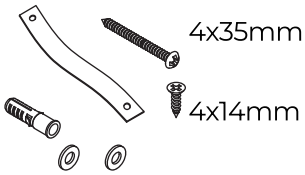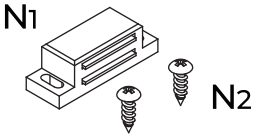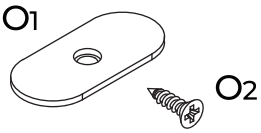A 4PCS 	B 2PCS  4x25mm	C 8PCS 	D 34+2PCS  40mm
E 34+2PCS  ϕ 15x9mm	F 14+2PCS  6x30mm	G 1PCS 	H 4PCS  3.5x14mm
I 1PCS 	J 8+1PCS  M6x40mm	K 6+2PCS  ϕ 10mm	L 2+1PCS  4x35mm
M 24+2PCS  4x16mm	N N1 1PCS N2 2+1PCS  3x15mm	O O1 2PCS O2 2+1PCS  3x12mm	P 42+2PCS  ϕ 20mm

Step 1

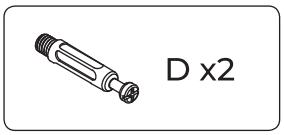


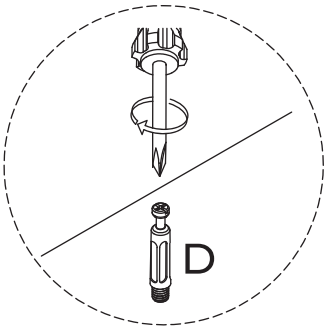


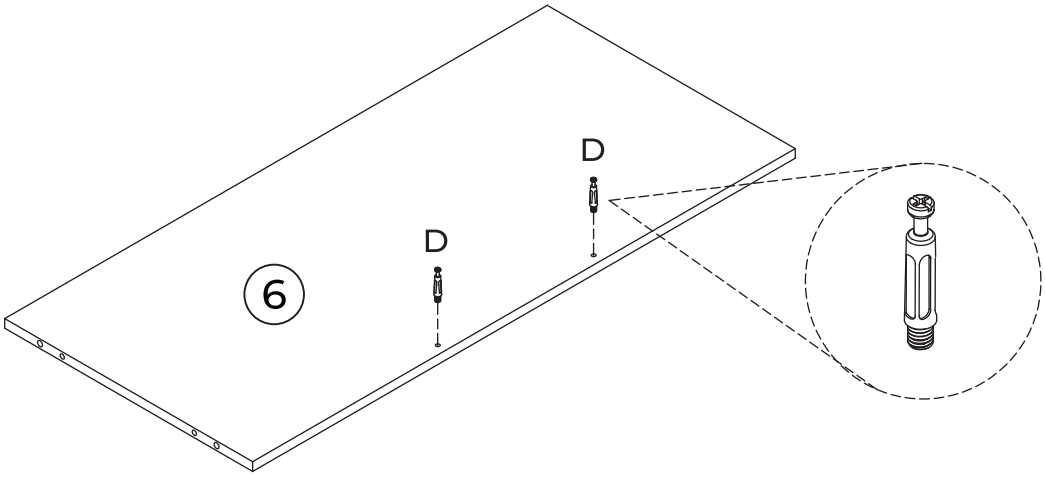


Step 2



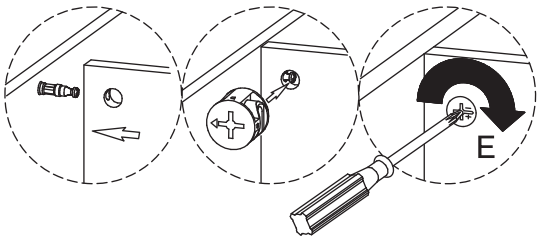


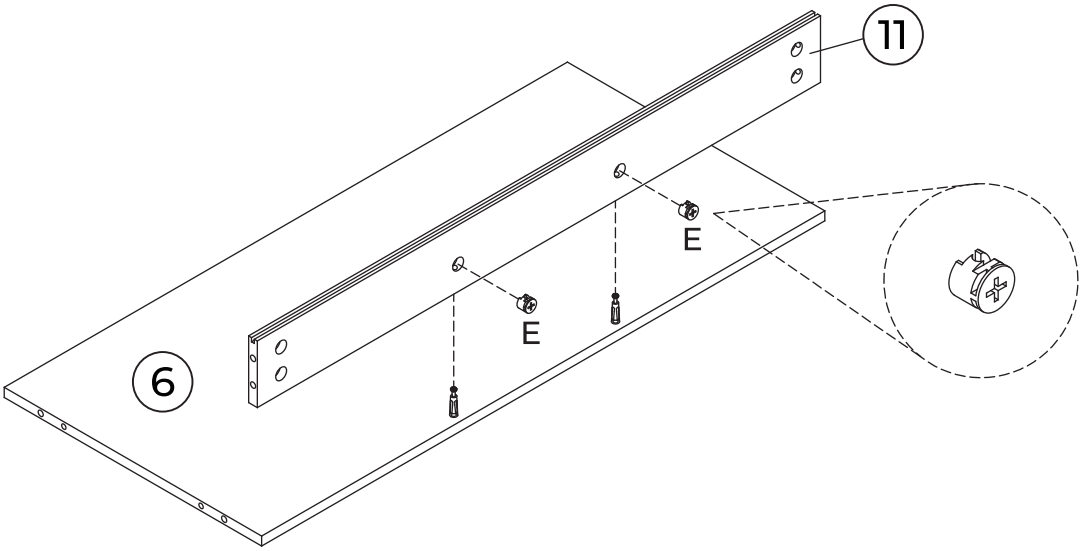


Step 3

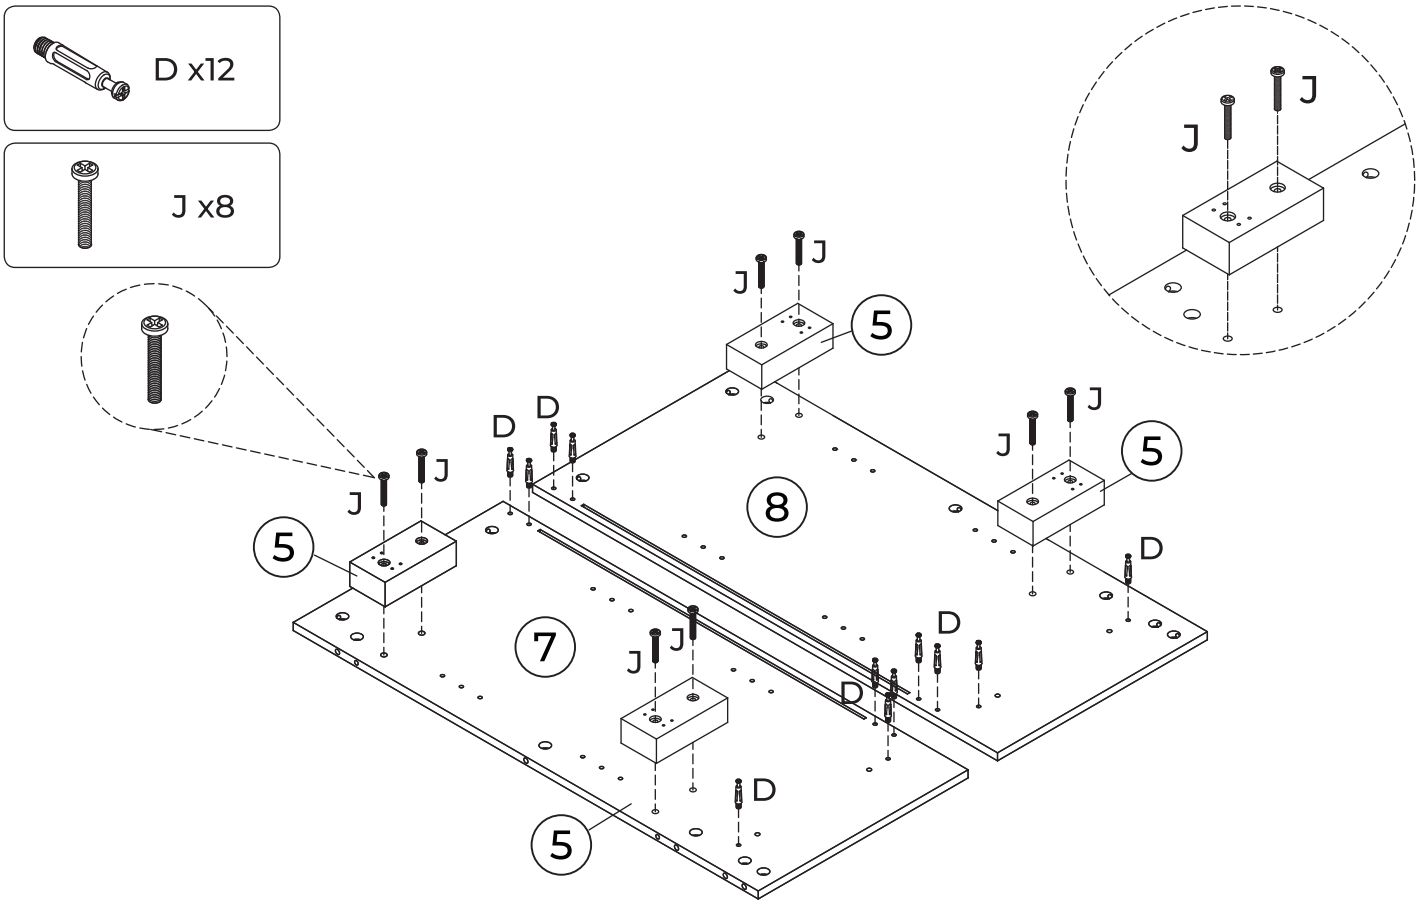
D x12
J x8
J
J
J
J
5
D
D
J
J
J
J
5
5
8
D
7
J
J
D
D
5
D


Step 4

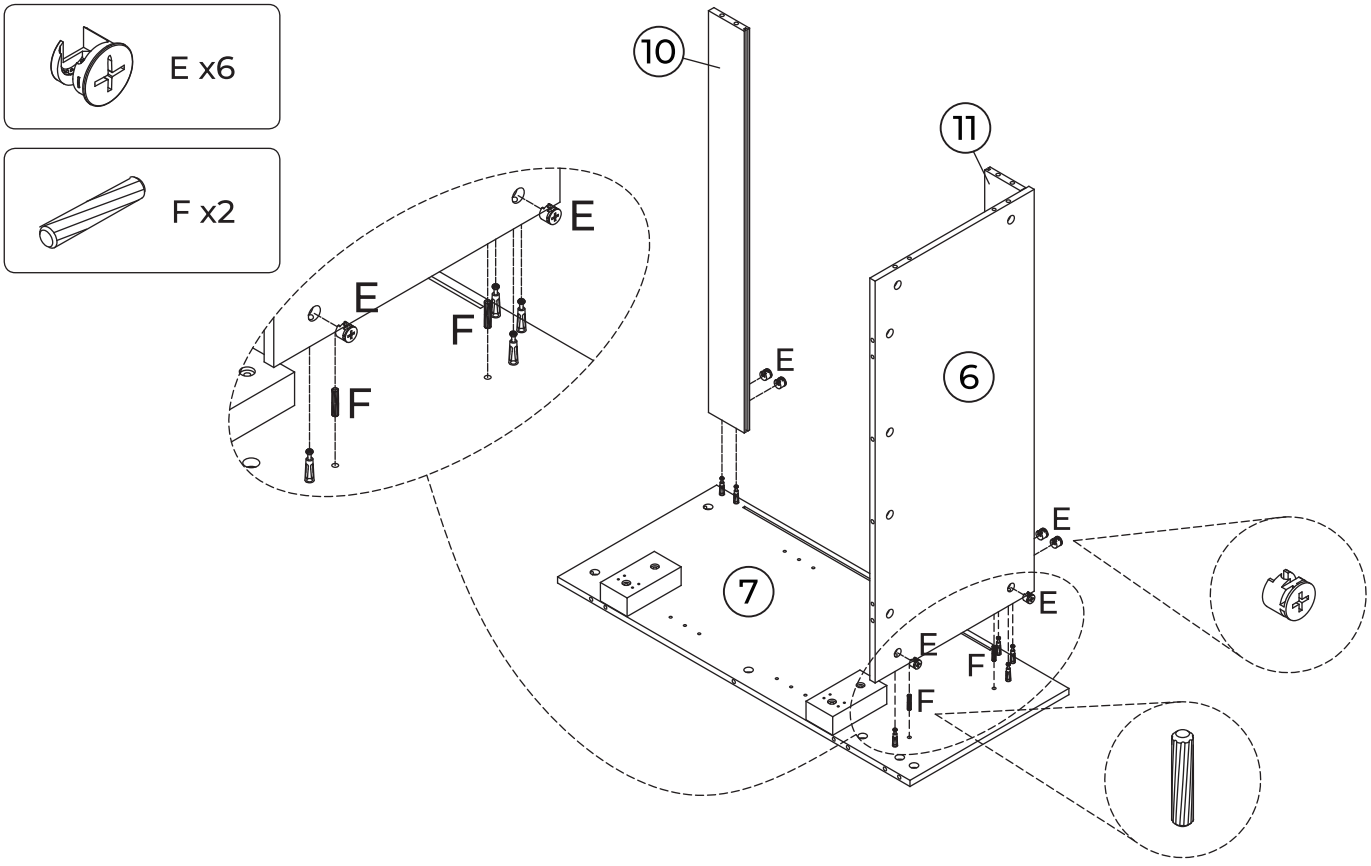

E x6
F x2
10
11
E
E
F
F
E
6
7
E
E
E
F
F


Step 5

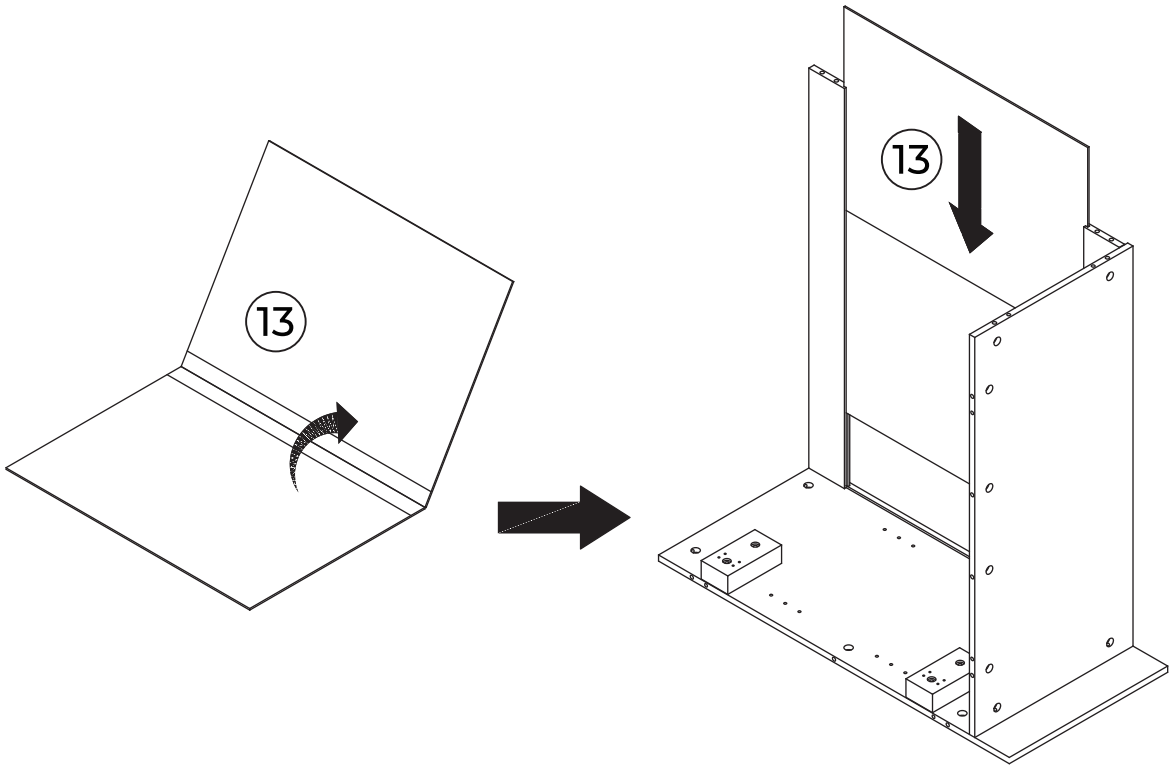

Step 6

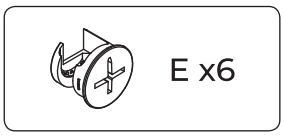
E x6

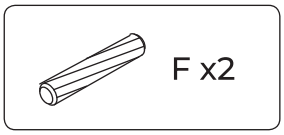

F x2

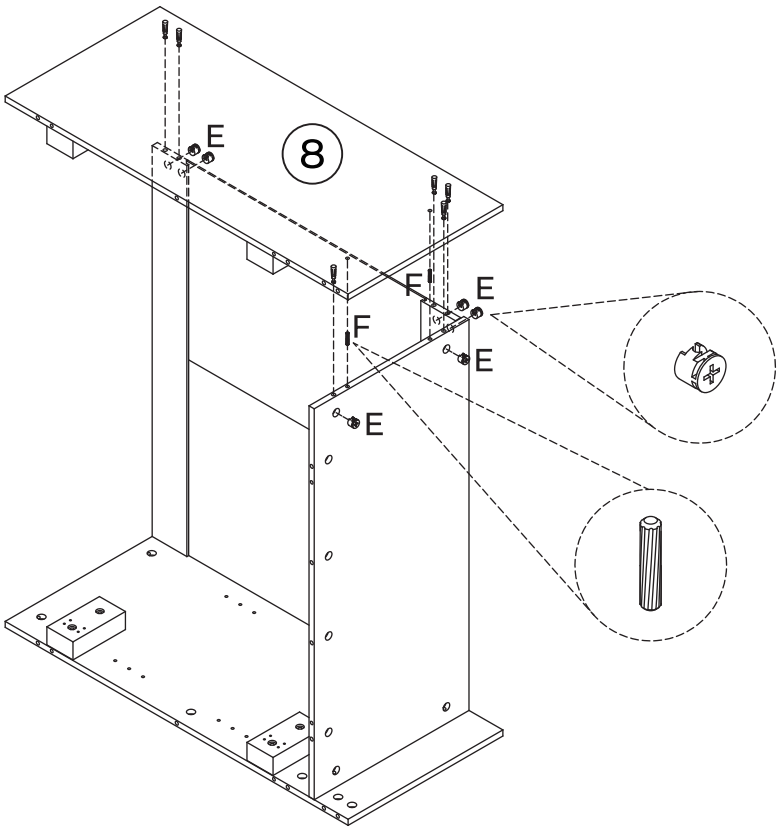


Step 7




D x8

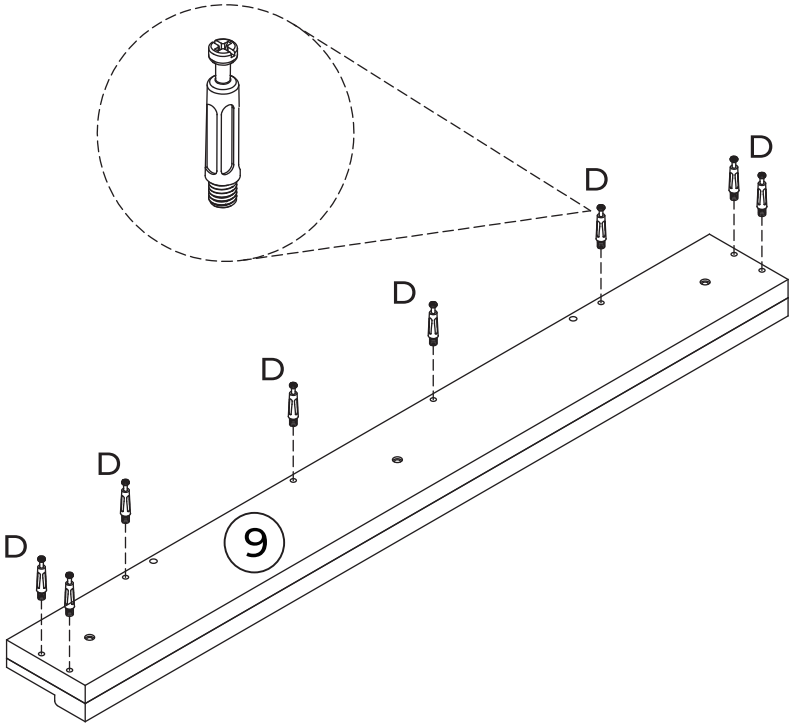


Step 8




E x8




F x2




K x6

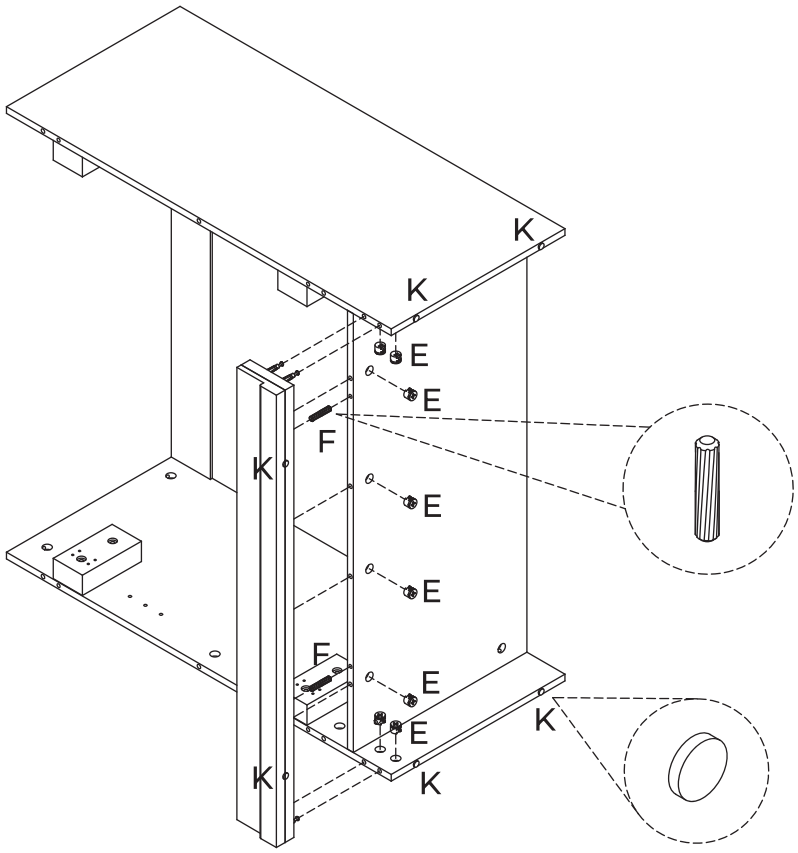


Step 9

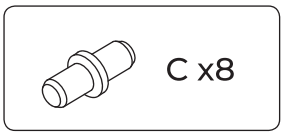


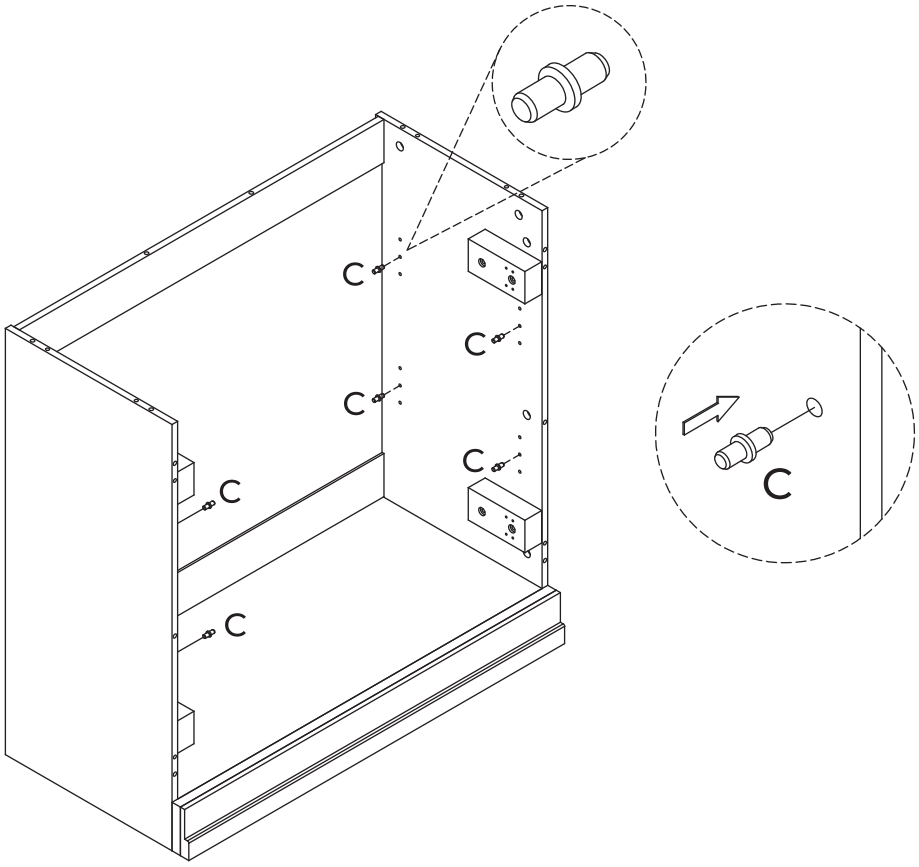


Step 10

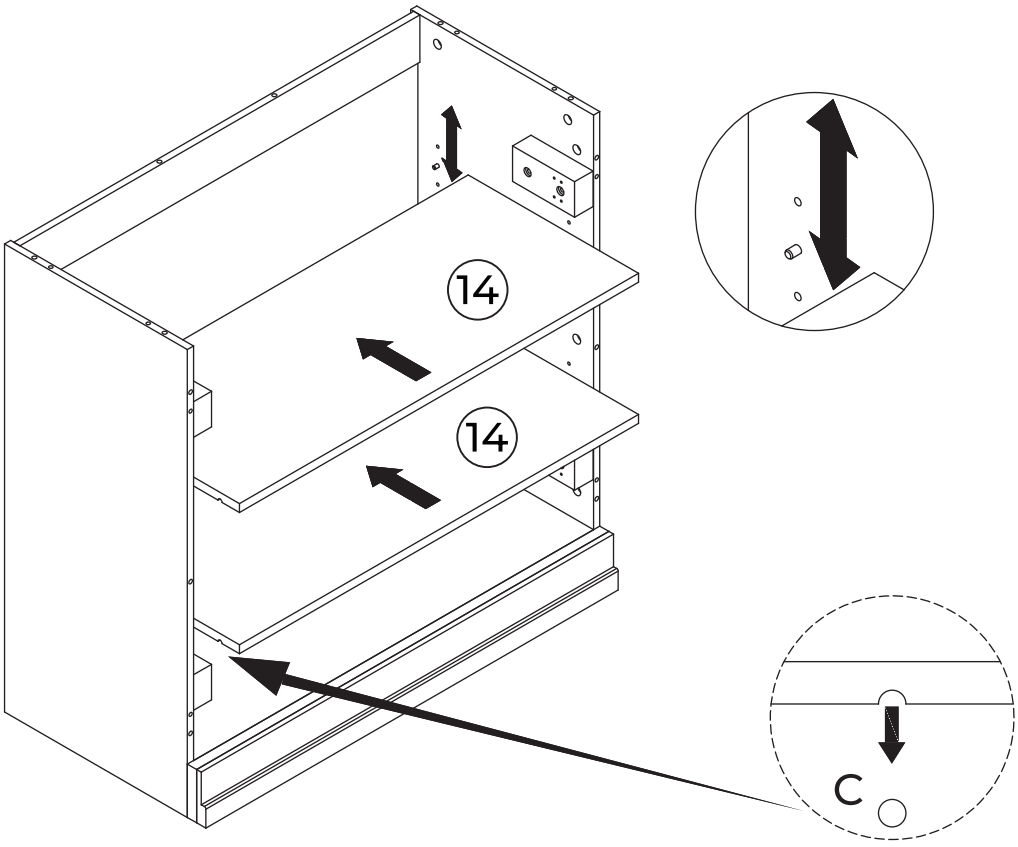


Step 11




D x6

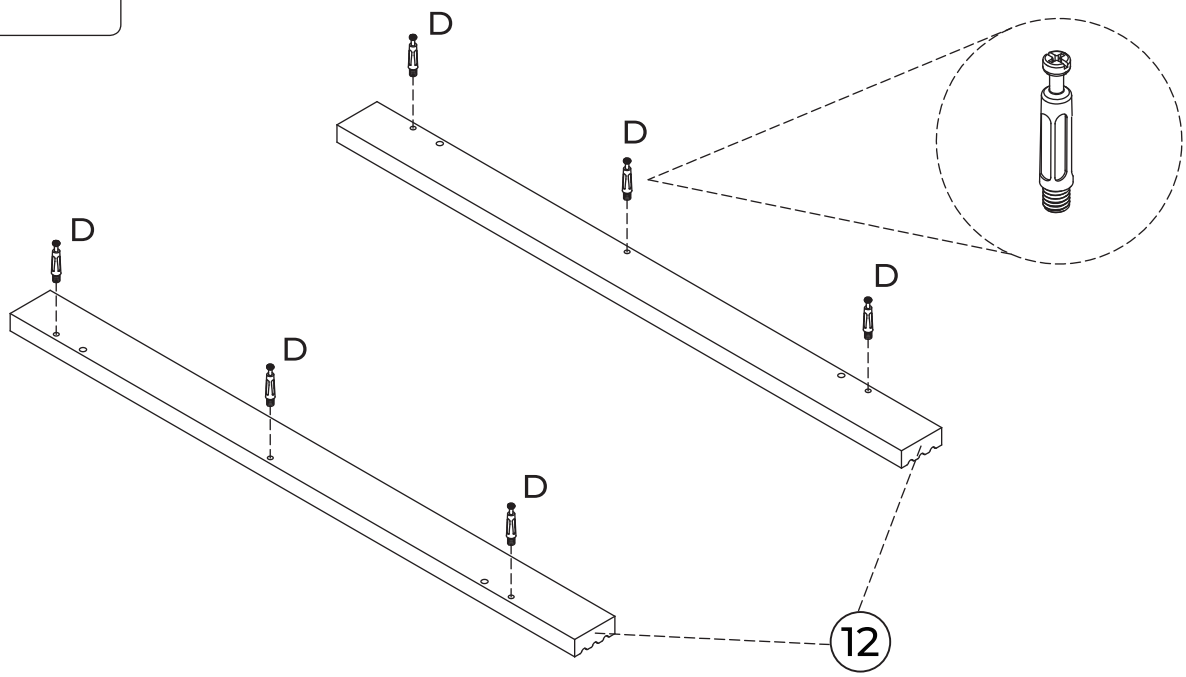


Step 12




E x6





F x4

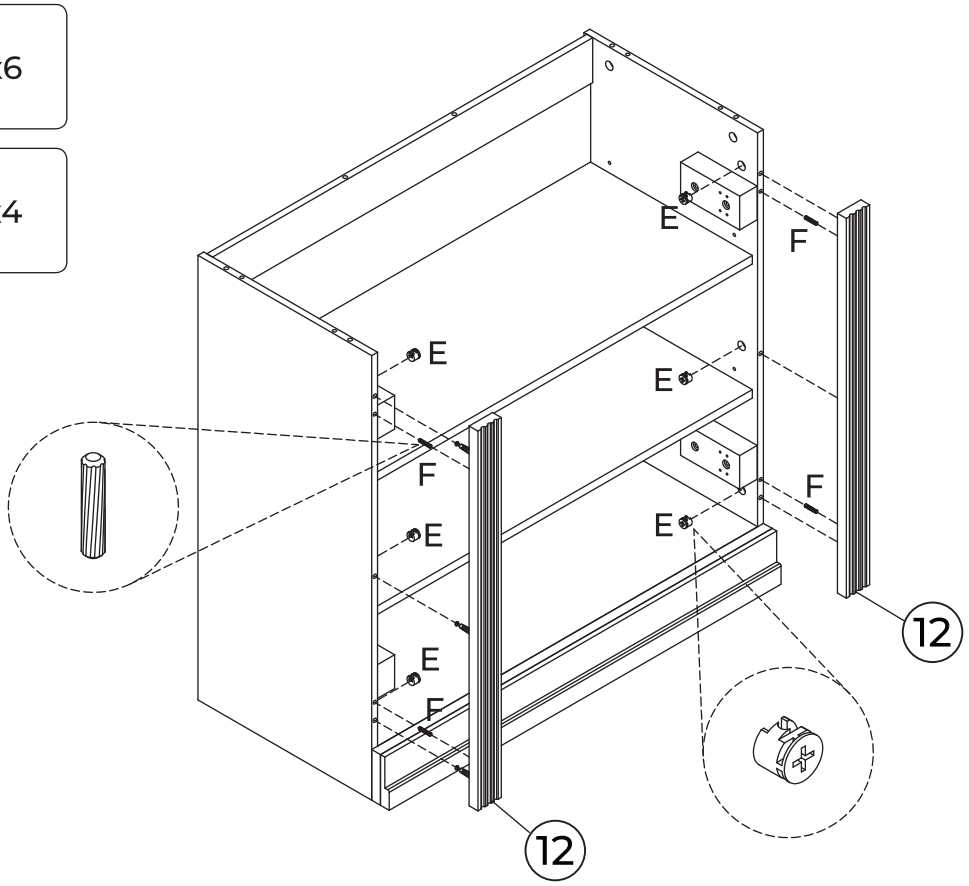


Step 13

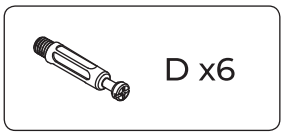

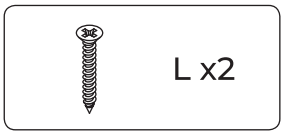


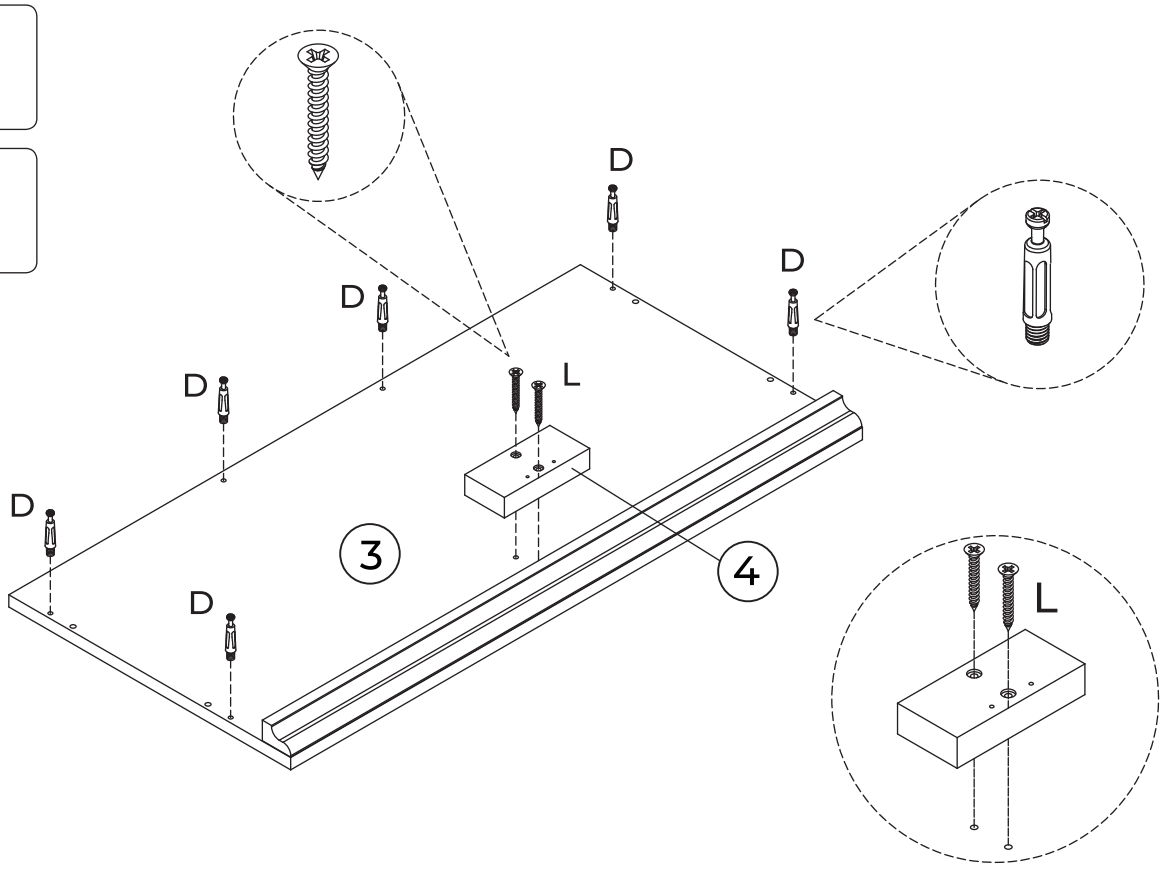

Step 14

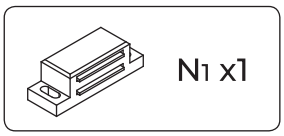





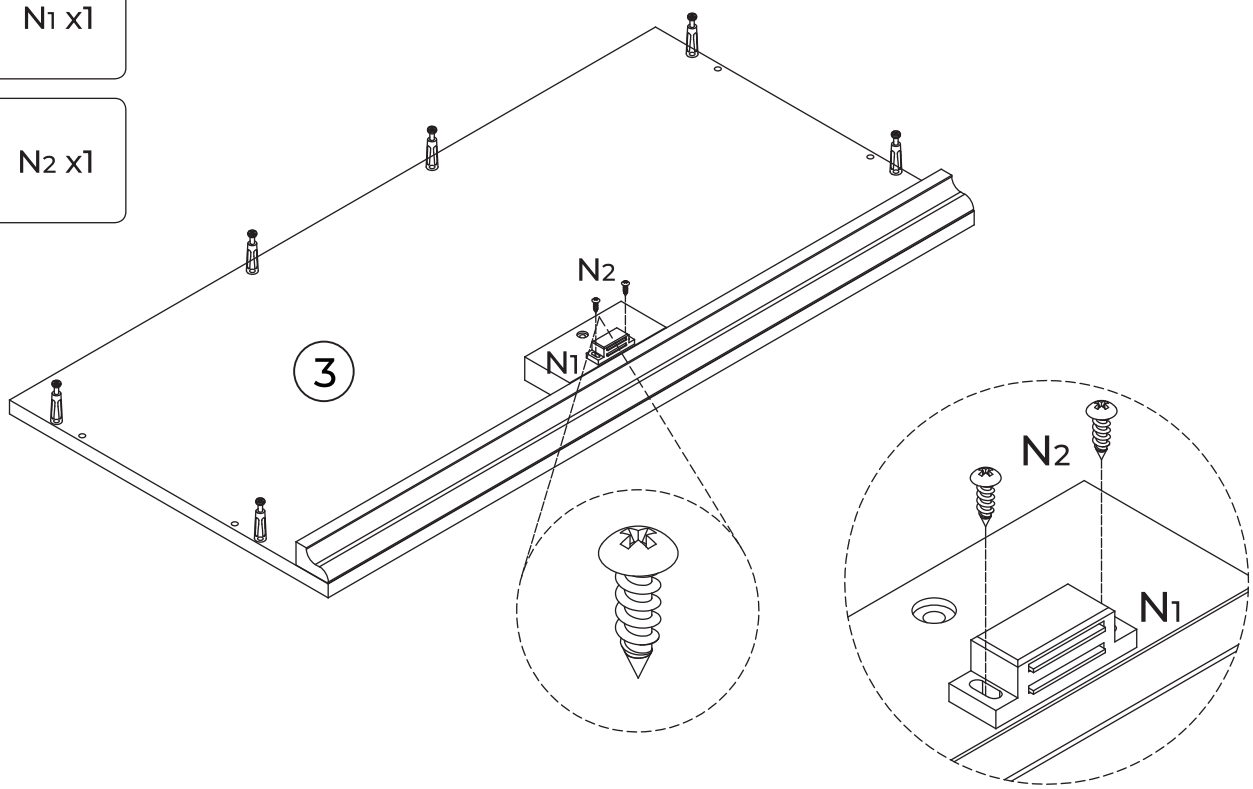


Step 15


E x6

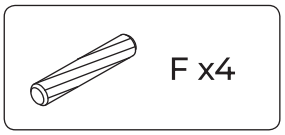
F x4

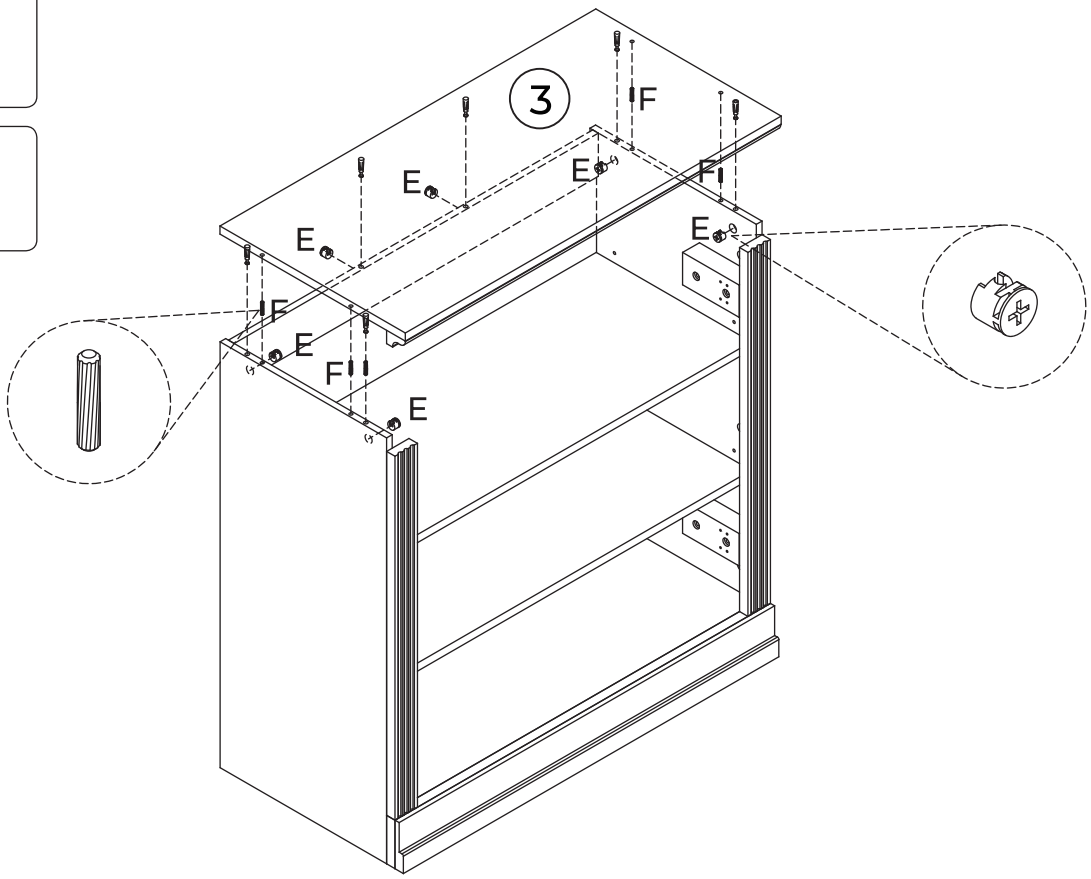


Step 16

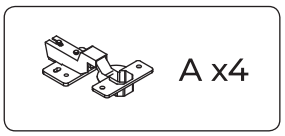
A x4



M x8


O1 x2



O2 x2

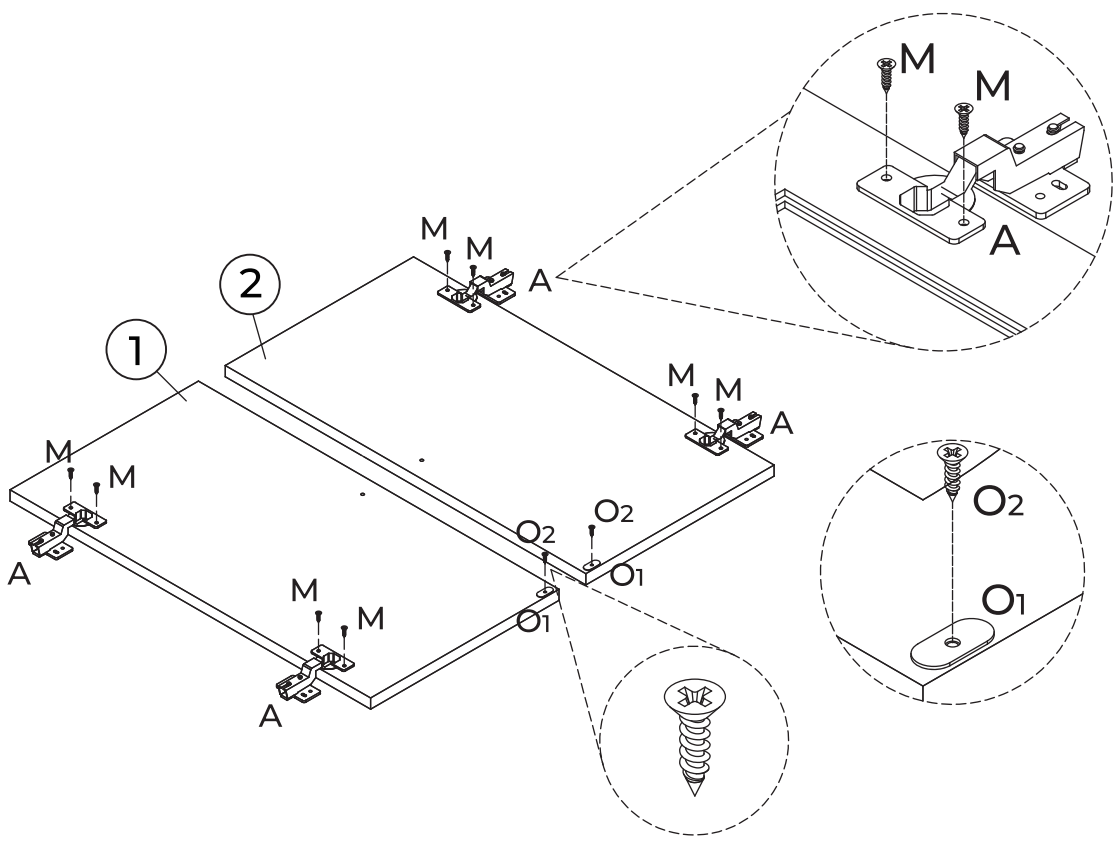


Step 17

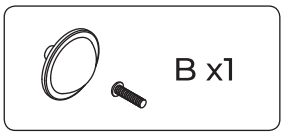



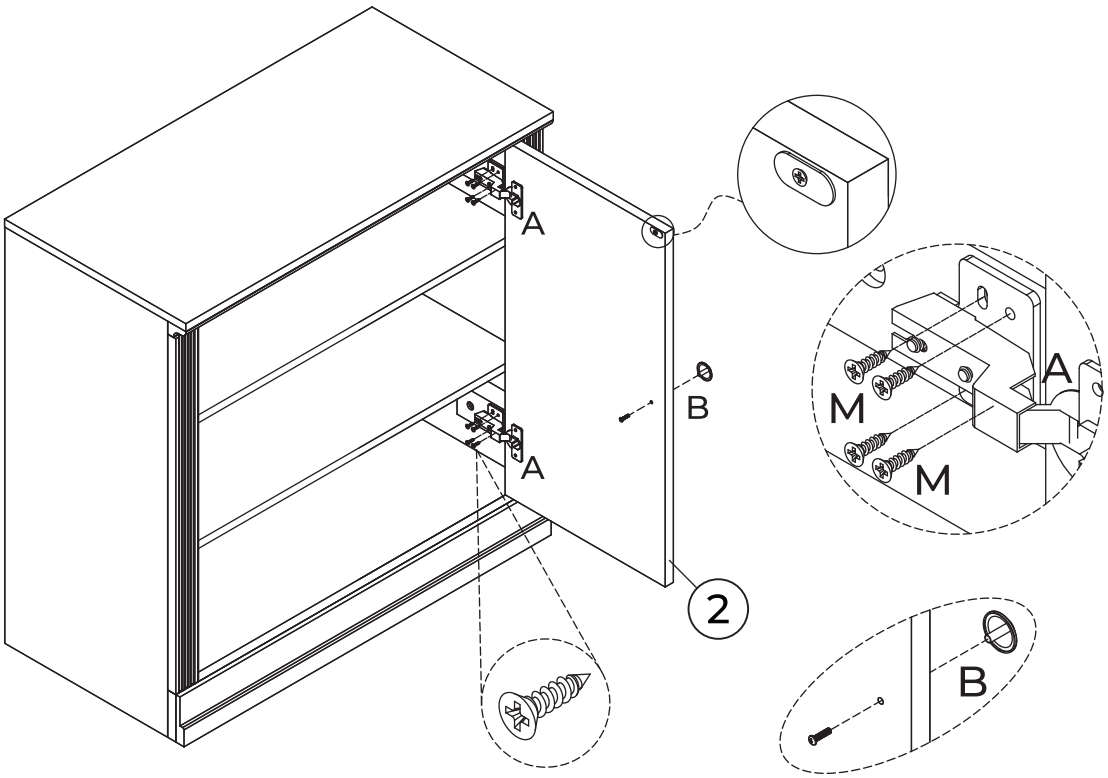


Step 18

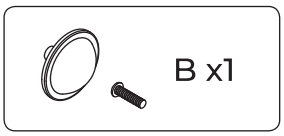




Step 19

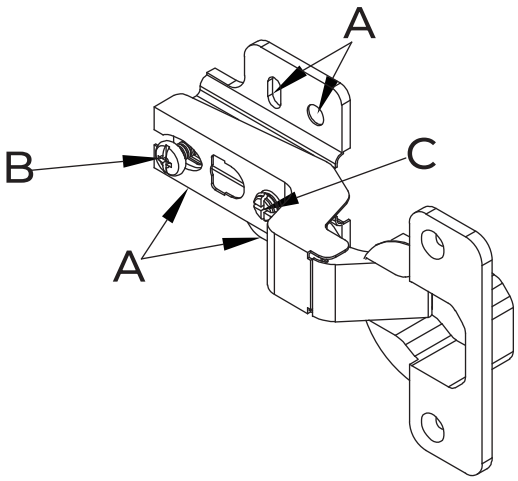


YOU WILL USE HINGE ADJUSTMENT
INSTRUCTION ON THIS PAGE FOR THE NEXT STEP.

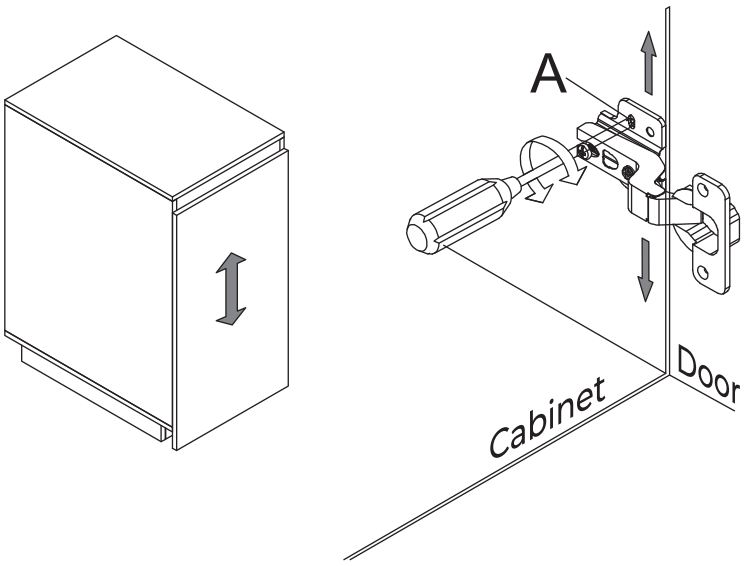


If you find a large gap above or below the door.

To adjust the vertical height. Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

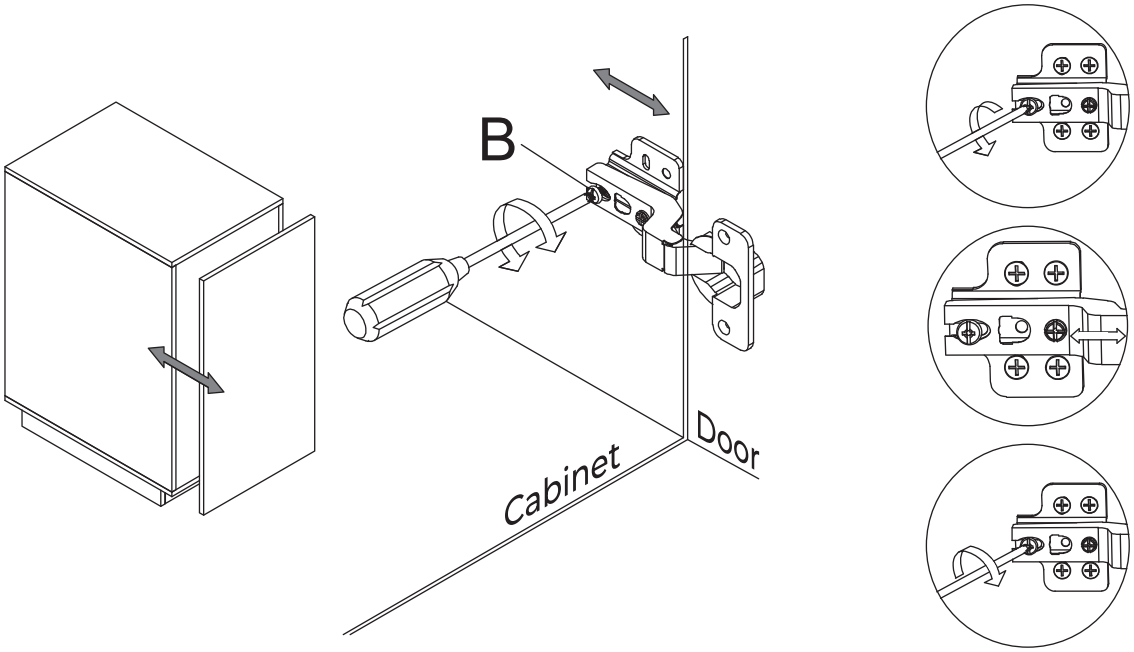

If you find the door is too protruding or too inside.


To adjust depth. Loosen screw "B" on both hinges and move the door to suit.
If the door doesn't move, turn screw"C"on both
hinges 1-2 turns and try again.
Finally, tighten both screw "B" and reset both screw "C".

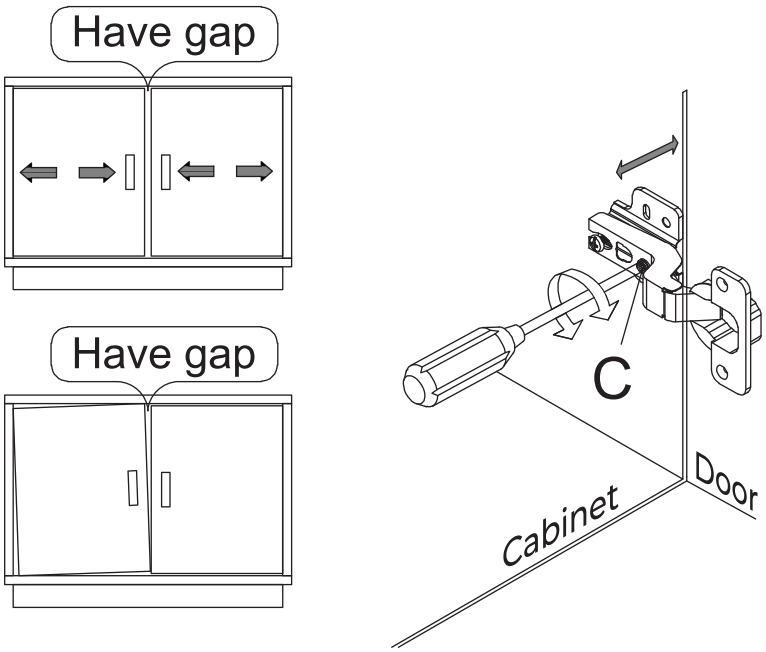


If you find a large gap between or beside the doors. Don't worry, It's not the problem with product.

To adjust side ways. Turn screw"C"clockwise or
counterclockwise on both hinges until the door is in the desired position.


Step 20

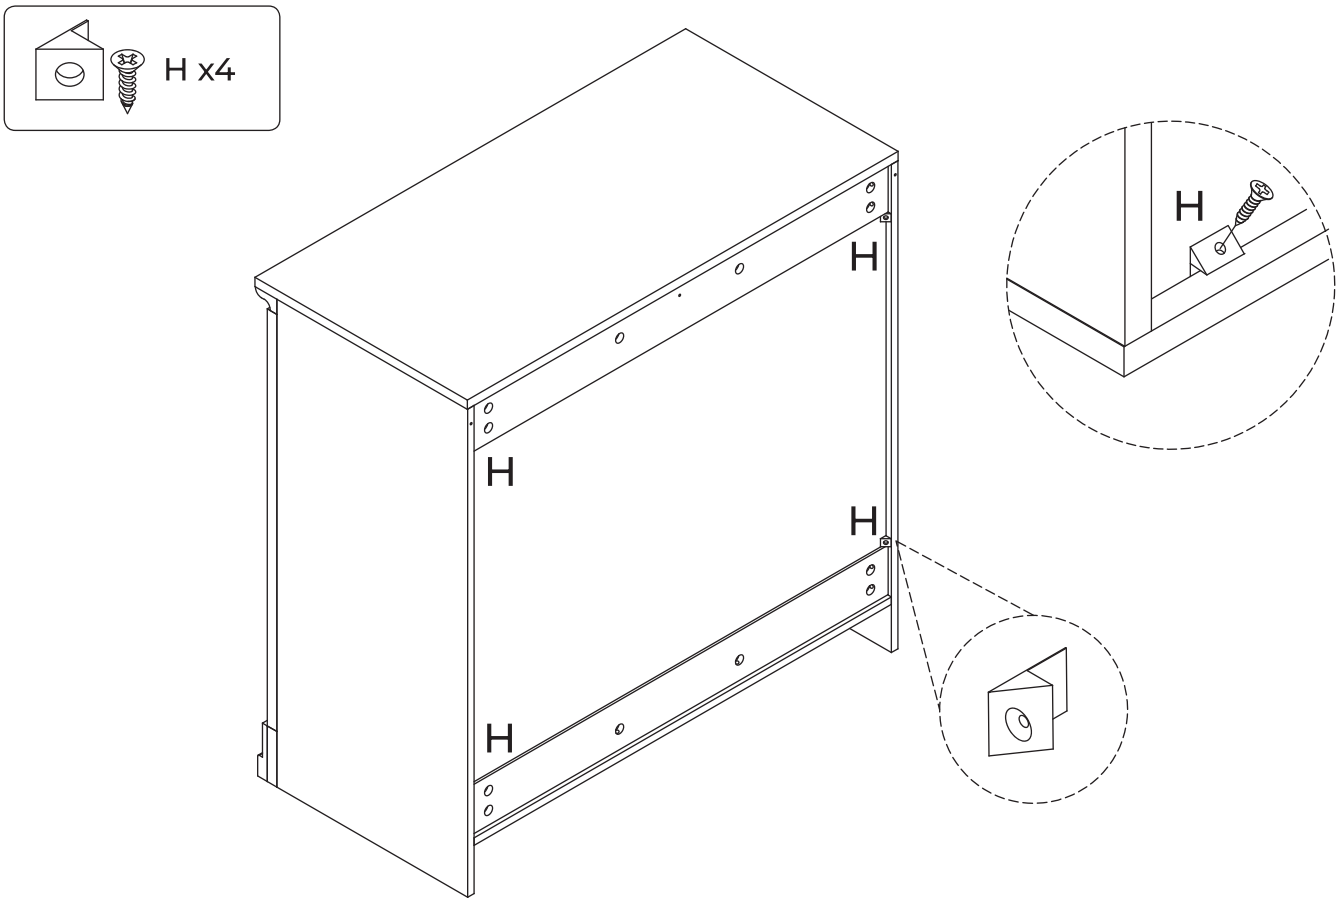



Step 21

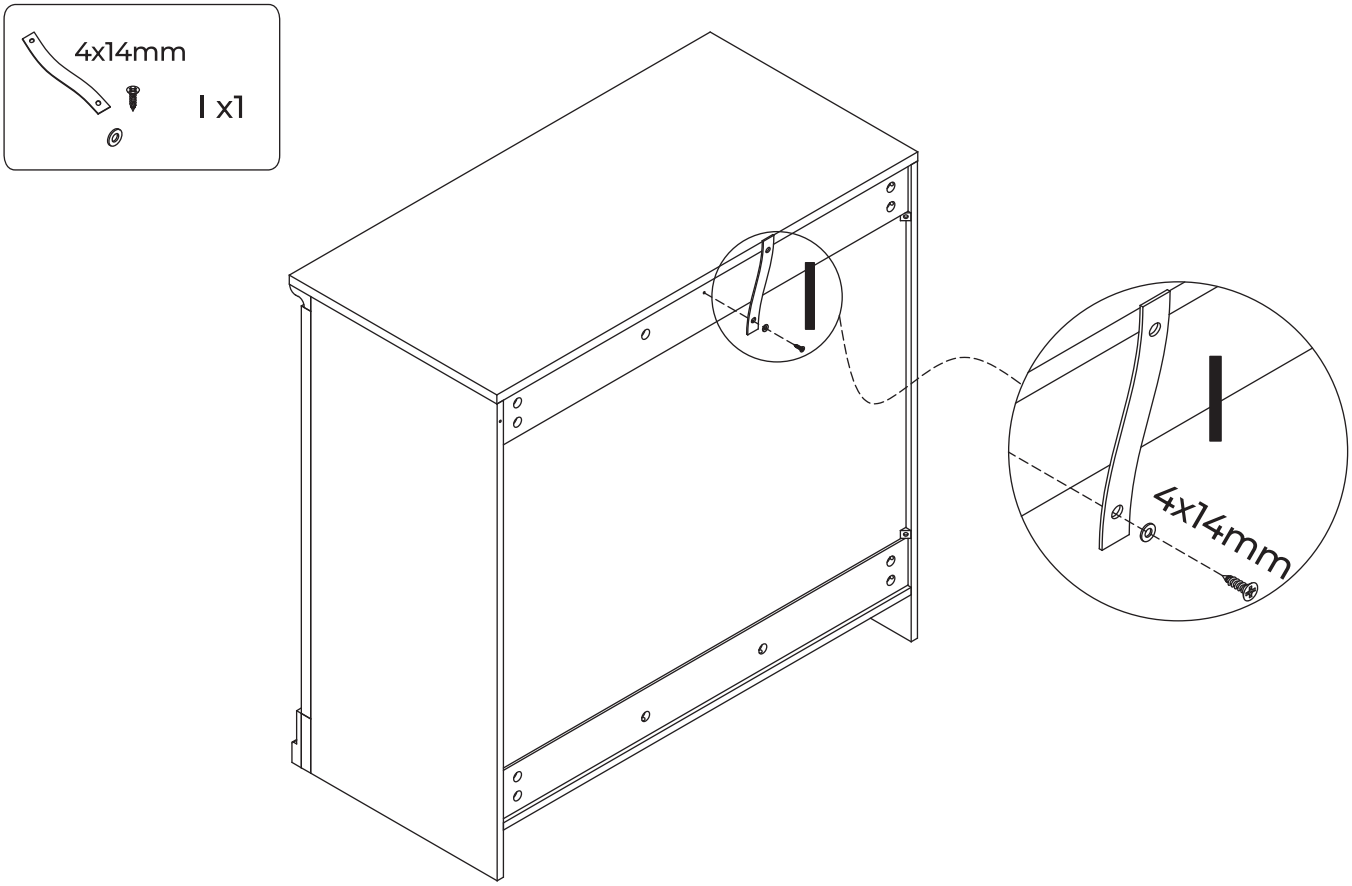



Step 22

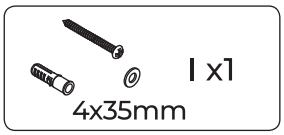


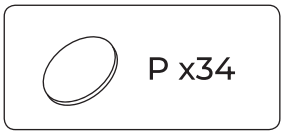

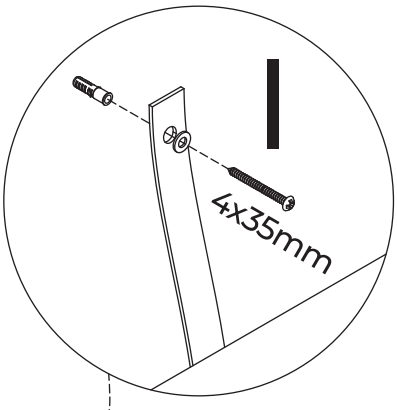

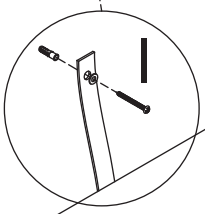

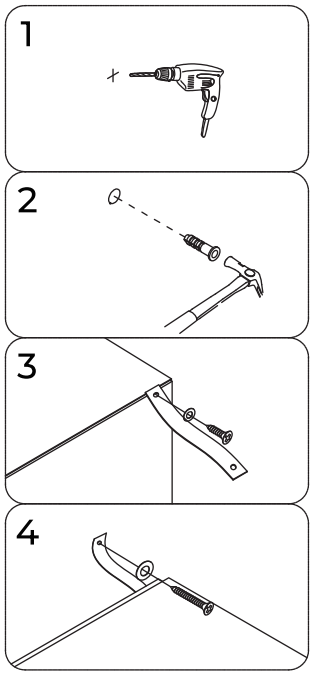

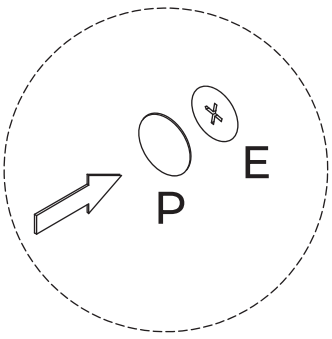

Use screw hole stickers in a color that matches the cabinet.