


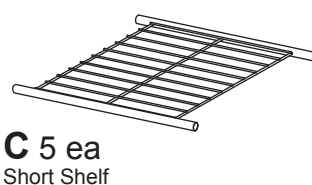
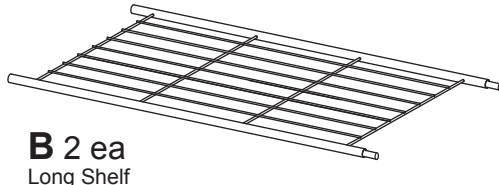


# Double Rod Standing Closet

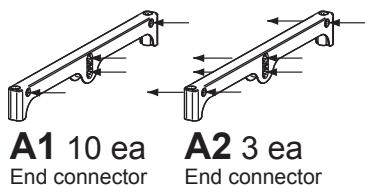


**Assembly  
Time:**  
Less than  
30 minutes.

This product's intended use is for  
hanging garments and storage.

**Tools Needed:** No tools required.


**STEP 1.** Start by assembling the top and bottom sections. Insert parts (B) and (C) into parts (A1) and (A2) as shown below. Insert one hanging rod (F) into top section.

## Top Section:

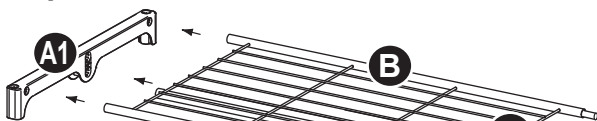


**Note:** Short shelf (C) should be inserted into the stickered side of (A2).

## Bottom Section:

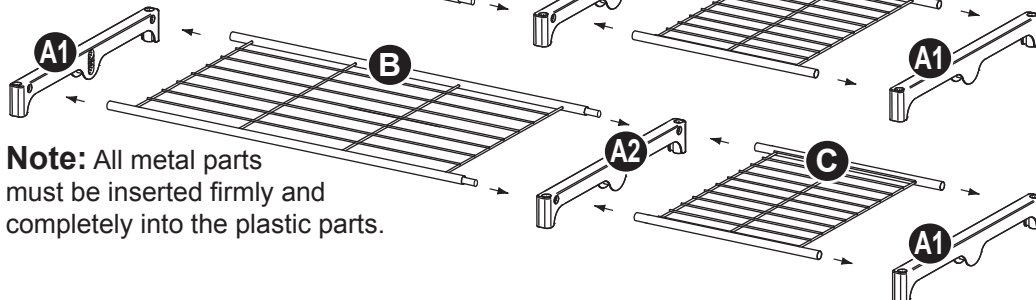

**Note:** All metal parts must be inserted firmly and completely into the plastic parts.

**STEP 2.** Building up from the assembled bottom section insert poles (D) and (E) and end connectors (A1) and (A2) as the diagram shows. Place other hanging rod (F) between middle end connectors (A1) and (A2).

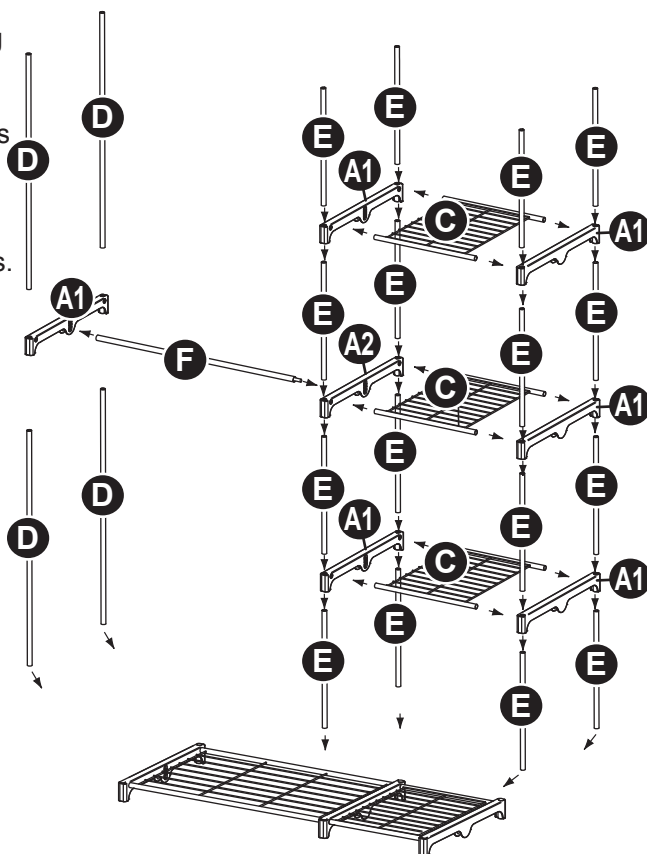

**STEP 3.** Place the assembled top section onto the top of the vertical poles. Assembly is now complete. Enjoy your new Whitmor Double Rod Closet.

