

Barber Chair Instruction



warning notice



Open your item in the area where you plan to keep it to reduce heavy lifting.



Identify, sort, and count the parts before assembling.



Lay all parts on smooth flat surface.



Make sure to always face the point on the top of the Cam Lock towards the outer edge.




Do NOT use harsh chemicals or abrasive cleaners on this item.



Never push, pull, or drag your furniture.

Teamwork

Not having two people involved in the assembly can potentially result in damage to the unit and pose a risk of personal injury.

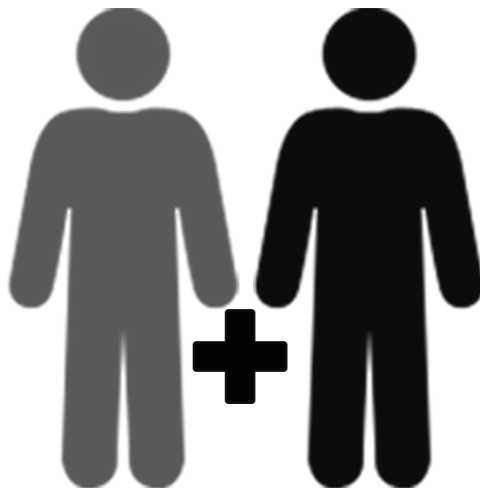

Components

Step 1

Check all parts you received.

Carton A

				
Ax1	Bx1	Cx1	Dx1	Ex4
				
Fx4	Gx2	Hx1	Ix4	

Carton B

				
Jx1	Kx1	Lx1	Mx1	Nx2
				
Ox1	Px2			

Assembly Instructions



Step 2

Insert threaded bolts on bottom of pump "B" into holes on top of base "A" .Tighten and locking 4 nuts "I" onto threaded bolts.



Step 3


Insert foot bar "O" into the assembled hydraulic pump "B" ,tighten the black set screws to firmly hold the foot bar in place.(pay attention to the direction of foot bar)

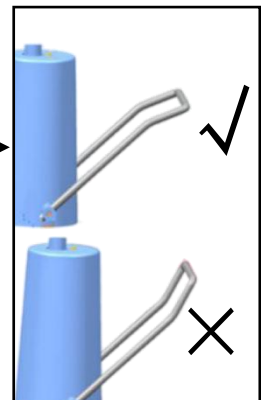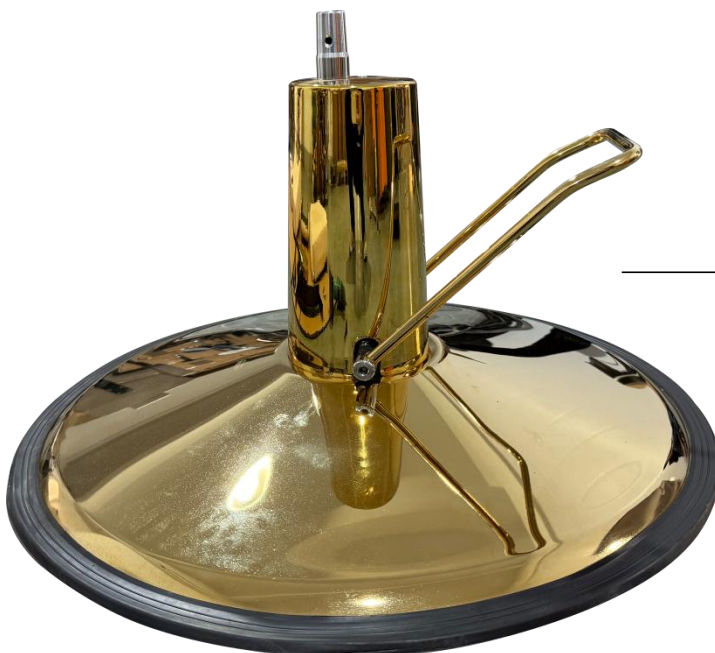

Assembly Instructions

Step 4

remove the preinstalled screw and nut on the reclining lever .install the reclining lever as to seat plate "L" , as picture shown.

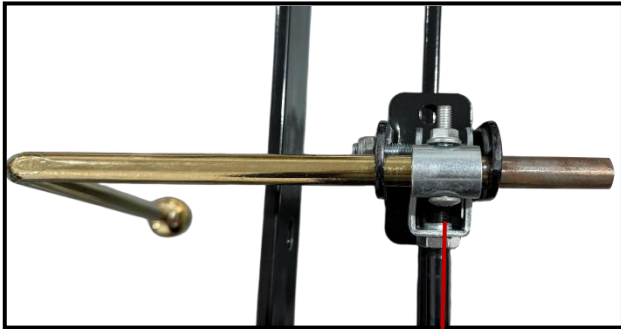

If the screws cannot be inserted, it indicates that no holes are not aligned, rotate the handle again.



Step 5

Set seat plate "L" onto assembled hydraulic pump and base,fix the pump by the fixing bolt "H" of pump.



Noted:the tray on the set plate must be aligned with the black pin of hvdraulic pump .



Assembly Instructions

Step 6


Remove 4 screws in the armrests "N". Attach the left and right armrest to the set plate "L". (Noted: pay attention to the direction of armrests)



Step 7

First: Remove 2 screws in the seat plate "L", assemble black metal "M" to the seat plate.

Second: loosen bolt on the black metal "M", link another side of gas mechanism to the black metal "M"

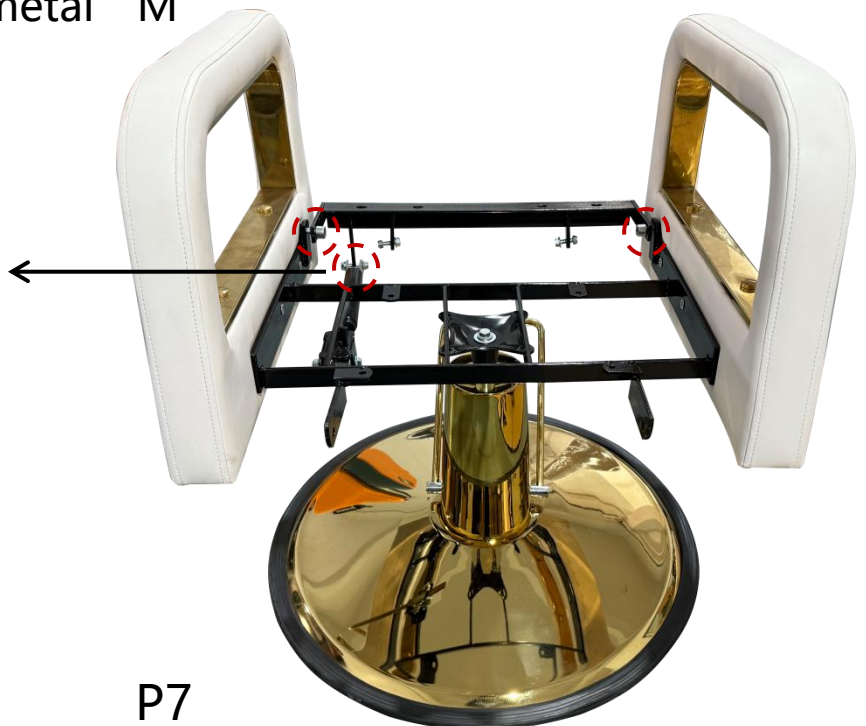

Assembly Instructions


Step 8

Assemble backrest "J" to the seat by 4 long bolts "E" as picture.



Step 9


Attach 2 stabilizer bar "P" to leg-rest "C" .

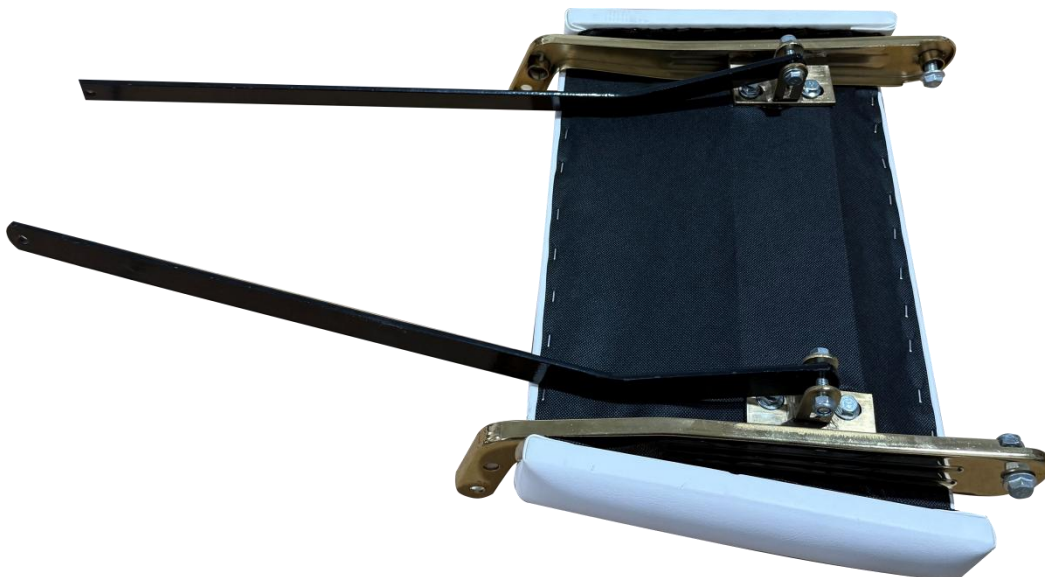

Assembly Instructions

Step 10

Loose screws in the legrest "C" attach footrest "C" to the chair by those screws,tighten.

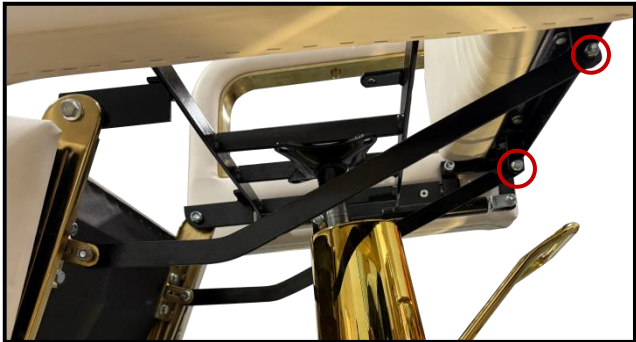

Loosen screws on the metal of backrest,link the holes of the 2 stabilizer bar to the holes of black backrest iron by those screws.Tighten.



Step 11


Put the seat cushion "K" on the seat plate "L" ,fix the seat cushion by the screws "F" .



Assembly Instructions

Step 12

Attach footrest supports "G" to footrest "D" .

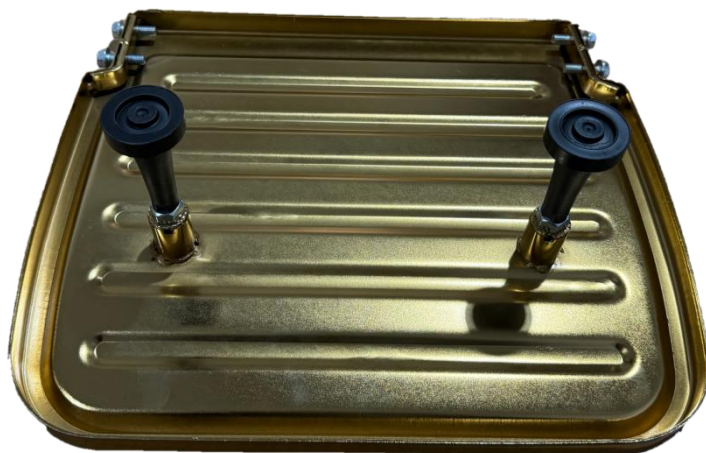

Step 13

Remove 4 pre-fitted bolts of footrest "D" ,attach footrest "D" to leg-rest, tighten.

