


















ASSEMBLY INSTRUCTIONS

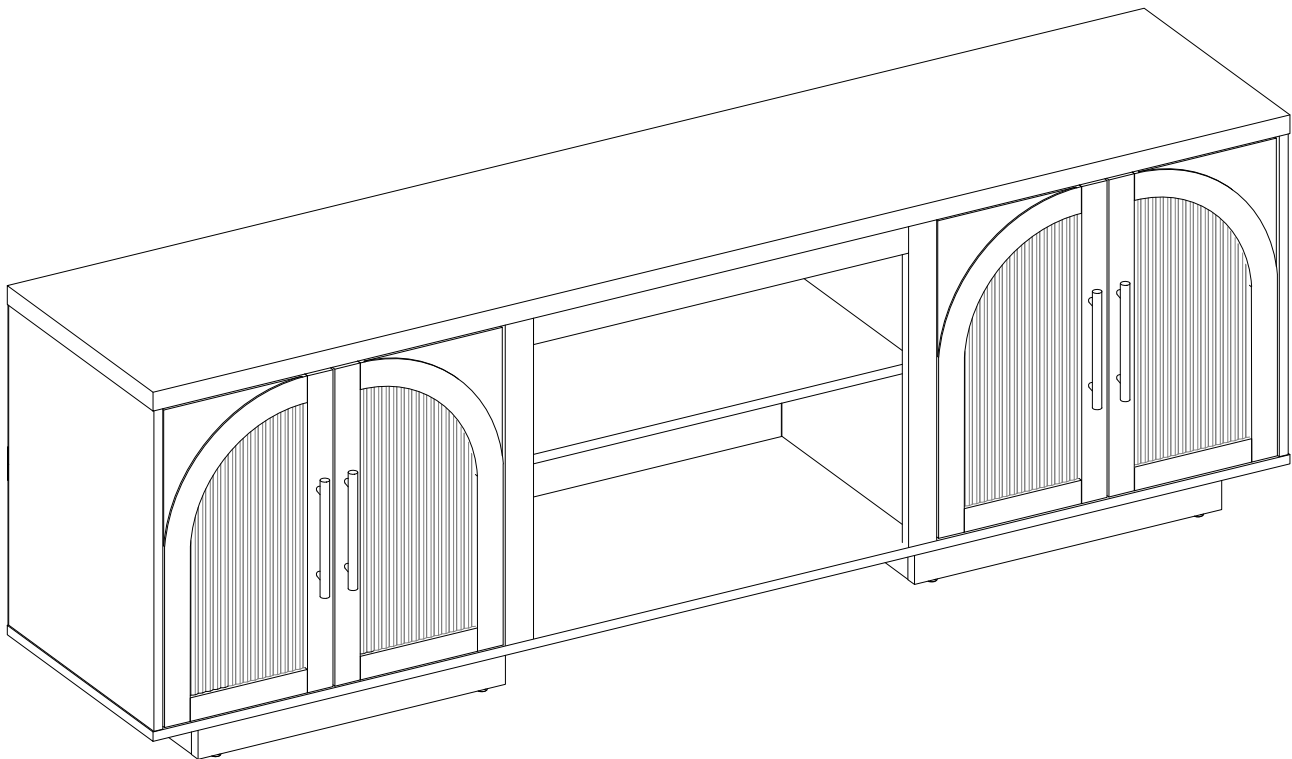


PARTS INCLUDED

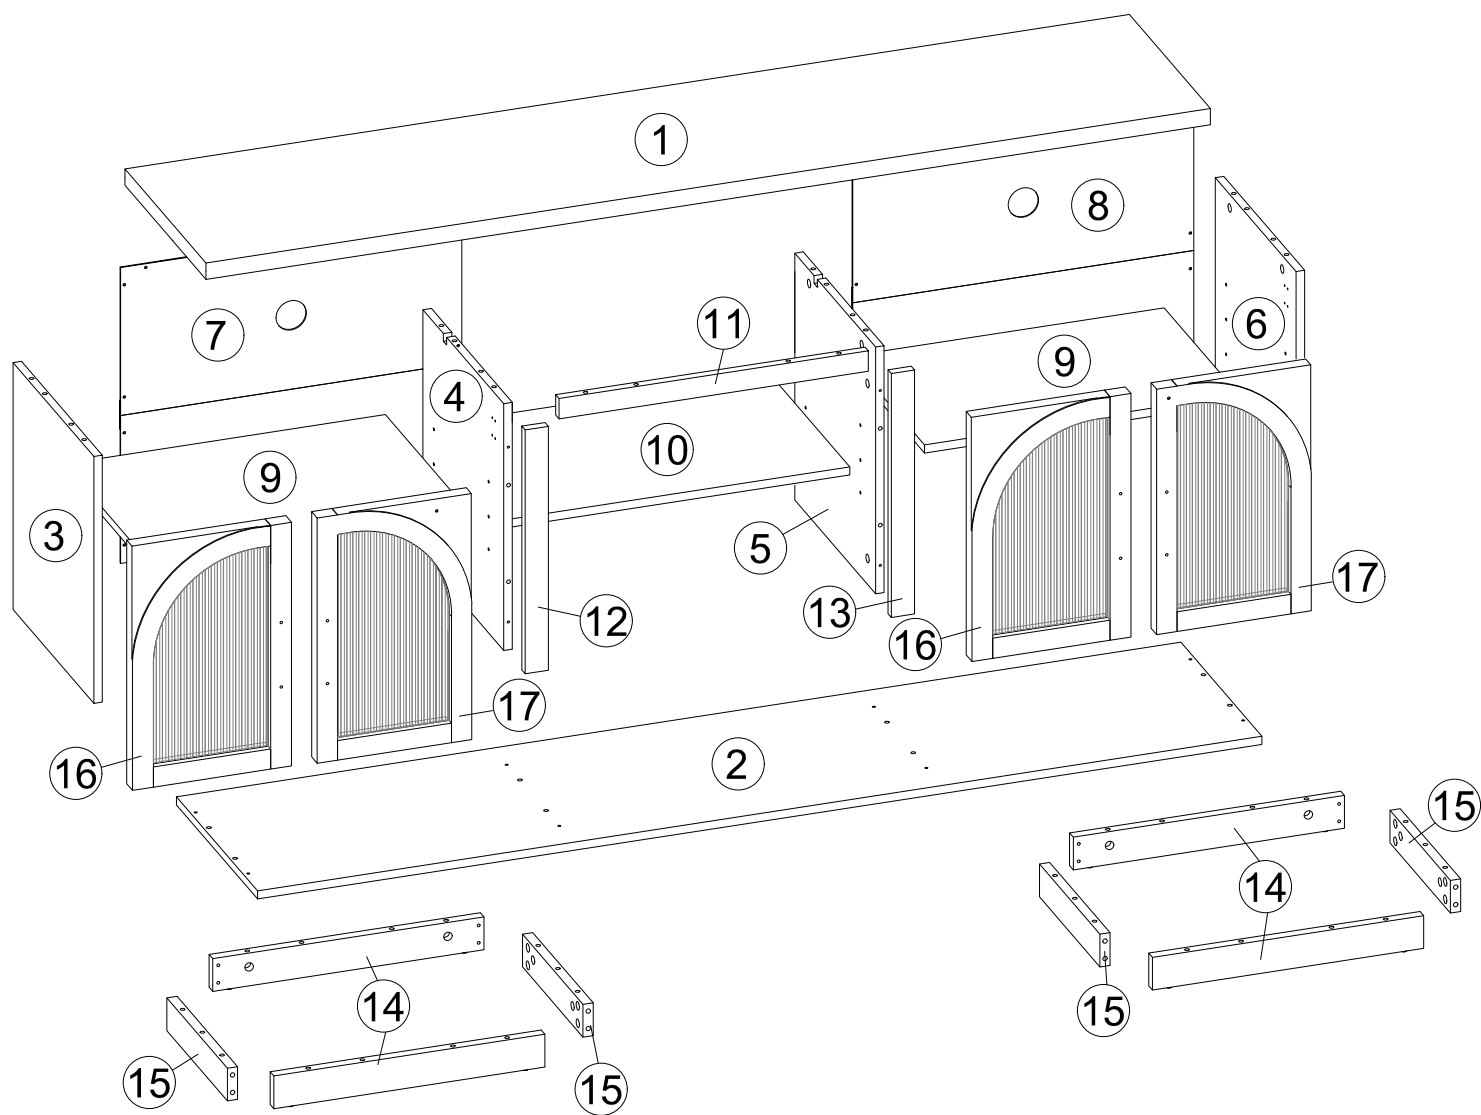


HARDWARE INCLUDED
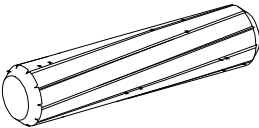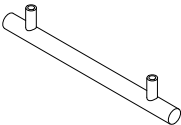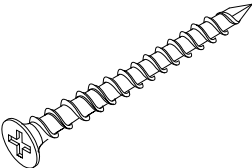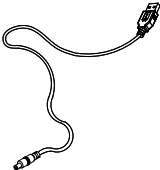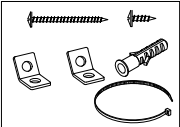
<div><div>ø7.8X30MM</div><div></div><div><div>A</div><div>34X+1</div></div></div>	<div><div></div><div></div><div><div>B</div><div>8X+1</div></div></div>	<div><div>ø6X34MM</div><div></div><div><div>C</div><div>46X+2</div></div></div>	<div><div>ø15X12MM</div><div></div><div><div>D</div><div>46X+2</div></div></div>
<div><div>ø5/32"X22MM</div><div></div><div><div>E</div><div>8X</div></div></div>	<div><div></div><div></div><div><div>F</div><div>4X</div></div></div>	<div><div>ø4X50MM</div><div></div><div><div>G</div><div>8X+1</div></div></div>	<div><div></div><div></div><div><div>H</div><div>12X</div></div></div>
<div><div>ø3.5X15MM</div><div></div><div><div>I</div><div>32X+1</div></div></div>	<div><div></div><div></div><div><div>J</div><div>1X</div></div></div>	<div><div></div><div></div><div><div>K</div><div>5X+1</div></div></div>	<div><div>ø3X10MM</div><div>Included In Insert Screws</div><div></div><div><div>L</div><div>5X+1</div></div></div>
<div><div></div><div></div><div><div>M</div><div>1X</div></div></div>	<div><div></div><div></div><div><div>N</div><div>1X</div></div></div>	<div><div>Remote Control</div><div></div><div><div>O</div><div>1X</div></div></div>	<div><div></div><div></div><div><div>P</div><div>2X</div></div></div>
<div><div>ø3X15MM</div><div></div><div><div>Q</div><div>4X+1</div></div></div>	<div><div></div><div></div><div><div>R</div><div>8X</div></div></div>	<div><div>ø4X14MM</div><div></div><div><div>S</div><div>48X+2</div></div></div>	<div><div></div><div></div><div><div>T</div><div>2X</div></div></div>


HOW TO USE THE CAM LOCK SYSTEM

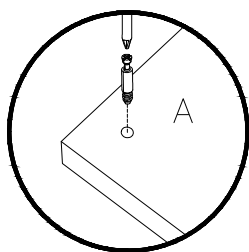


1. Screw the cam bolt into the panel.

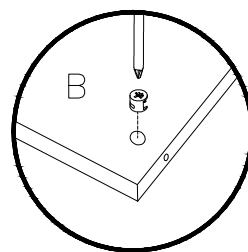


2. Insert the cam lock with the arrow pointing toward the panel edge.

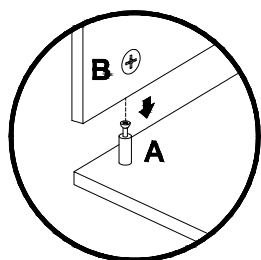

3. Align the cam bolt with the cam lock and fully insert it into the cross-bored hole.




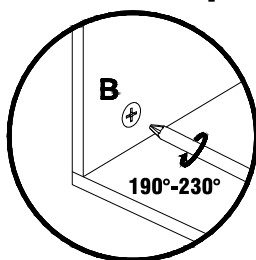


4. Turn the cam lock clockwise 190-230 degrees to secure the panels.

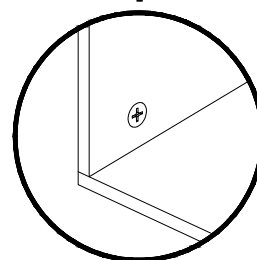

5. Confirm the panels are tight and the joint is rigid.


Insert wood dowel (A) at least halfway. Tap lightly with a rubber mallet only if necessary.

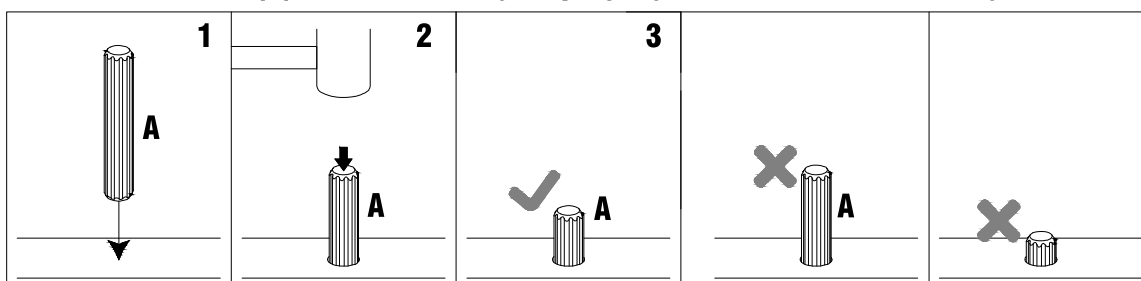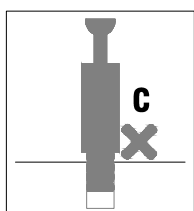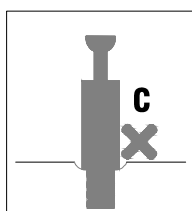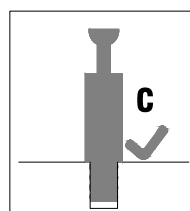

⚠ WARNING

- Place the unit on a level surface; use the included levelers when applicable.
- Do not sit or stand on the unit, and do not allow children to climb on it.
- Install the anti-tip restraint and secure the unit to the wall before use.
- A tipping unit can cause serious injury or death.
- Do not exceed the stated weight limits.
- Distribute weight evenly and place heavier items on lower shelves.
- Before drilling, verify the locations of electrical wiring, plumbing, and gas lines.

ASSEMBLY OVERVIEW

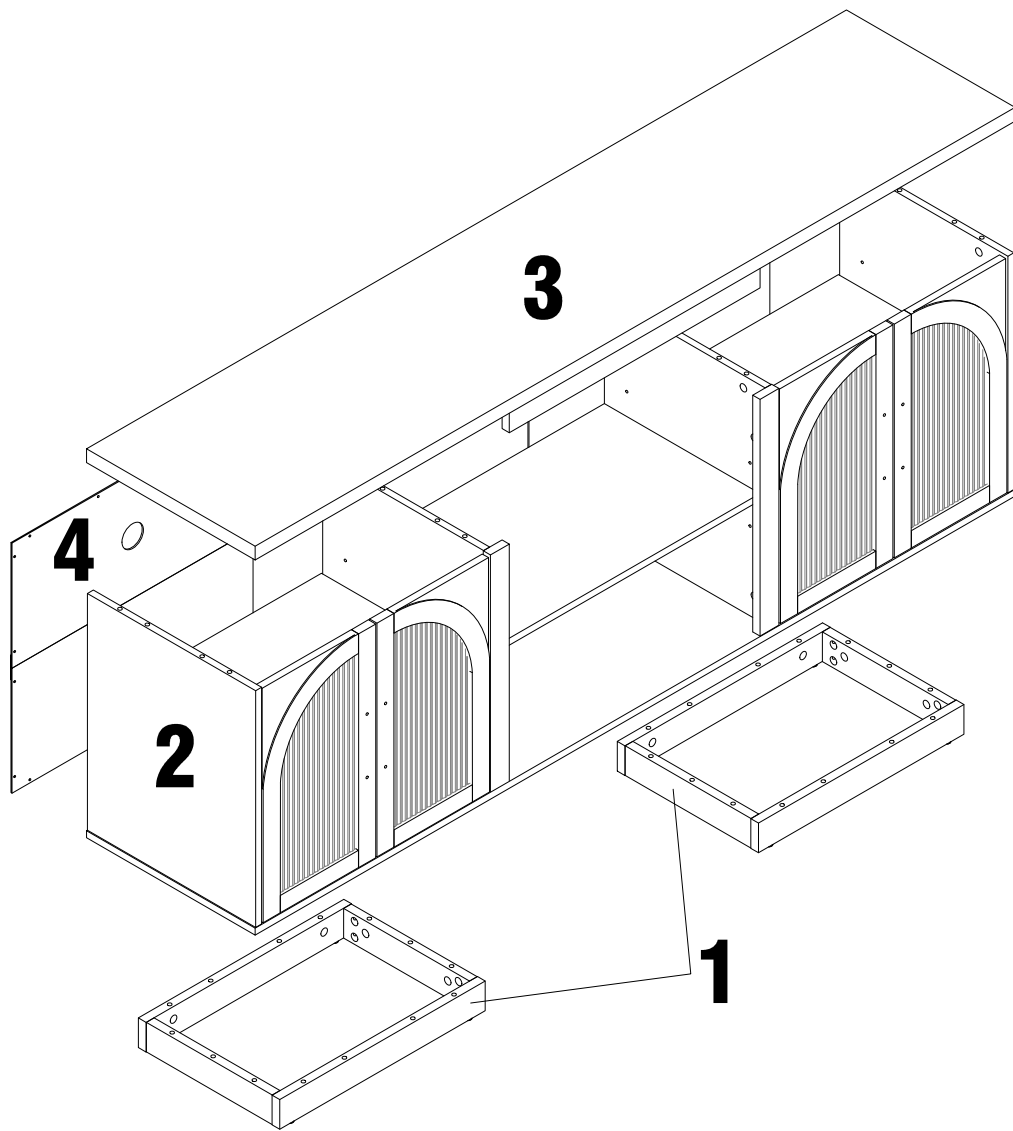


ASSEMBLY SEQUENCE

1. Assemble the base frames.
2. Assemble the cabinet body.
3. Attach the top panel.
4. Attach the back panel.

BEFORE YOU BEGIN



- Two adults are required for safe assembly.
- Use a Phillips screwdriver.
A low-torque electric screwdriver is optional.
- Assemble on a clean, soft surface.
- Check all parts and hardware before starting.
- Secure the completed unit to the wall before use.

STEP 1 Start with the installation of the two bases.


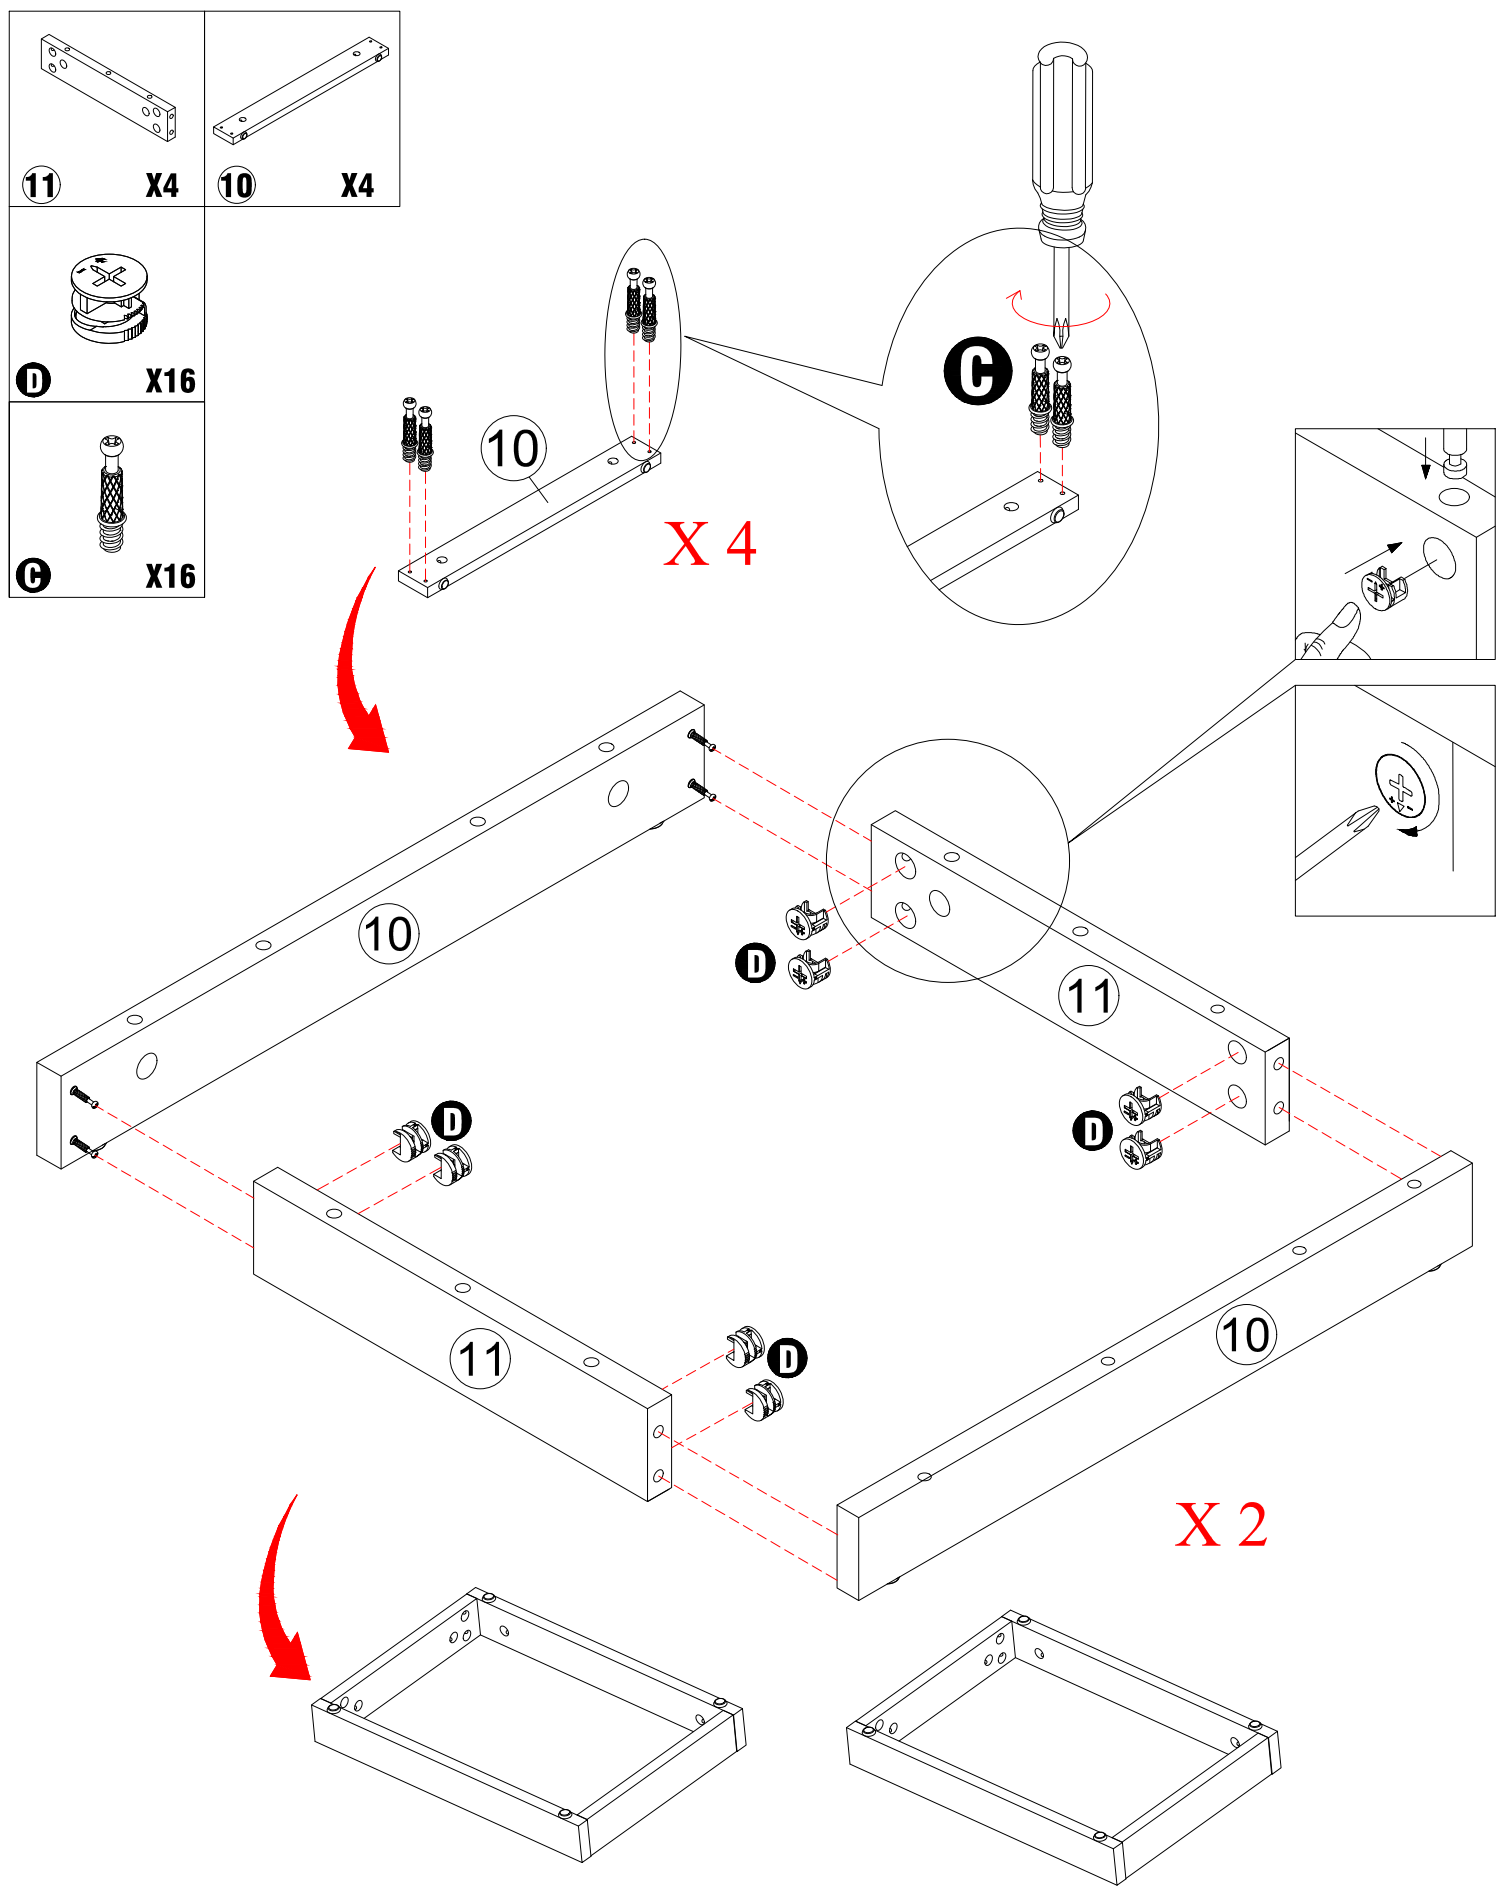


Component Drawing After Safety Completion




STEP 2 Install the combiner screw into Bottom Panel #2 .

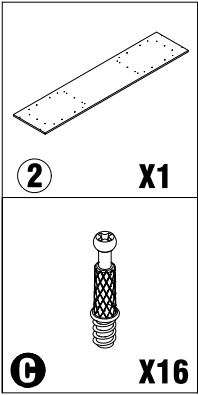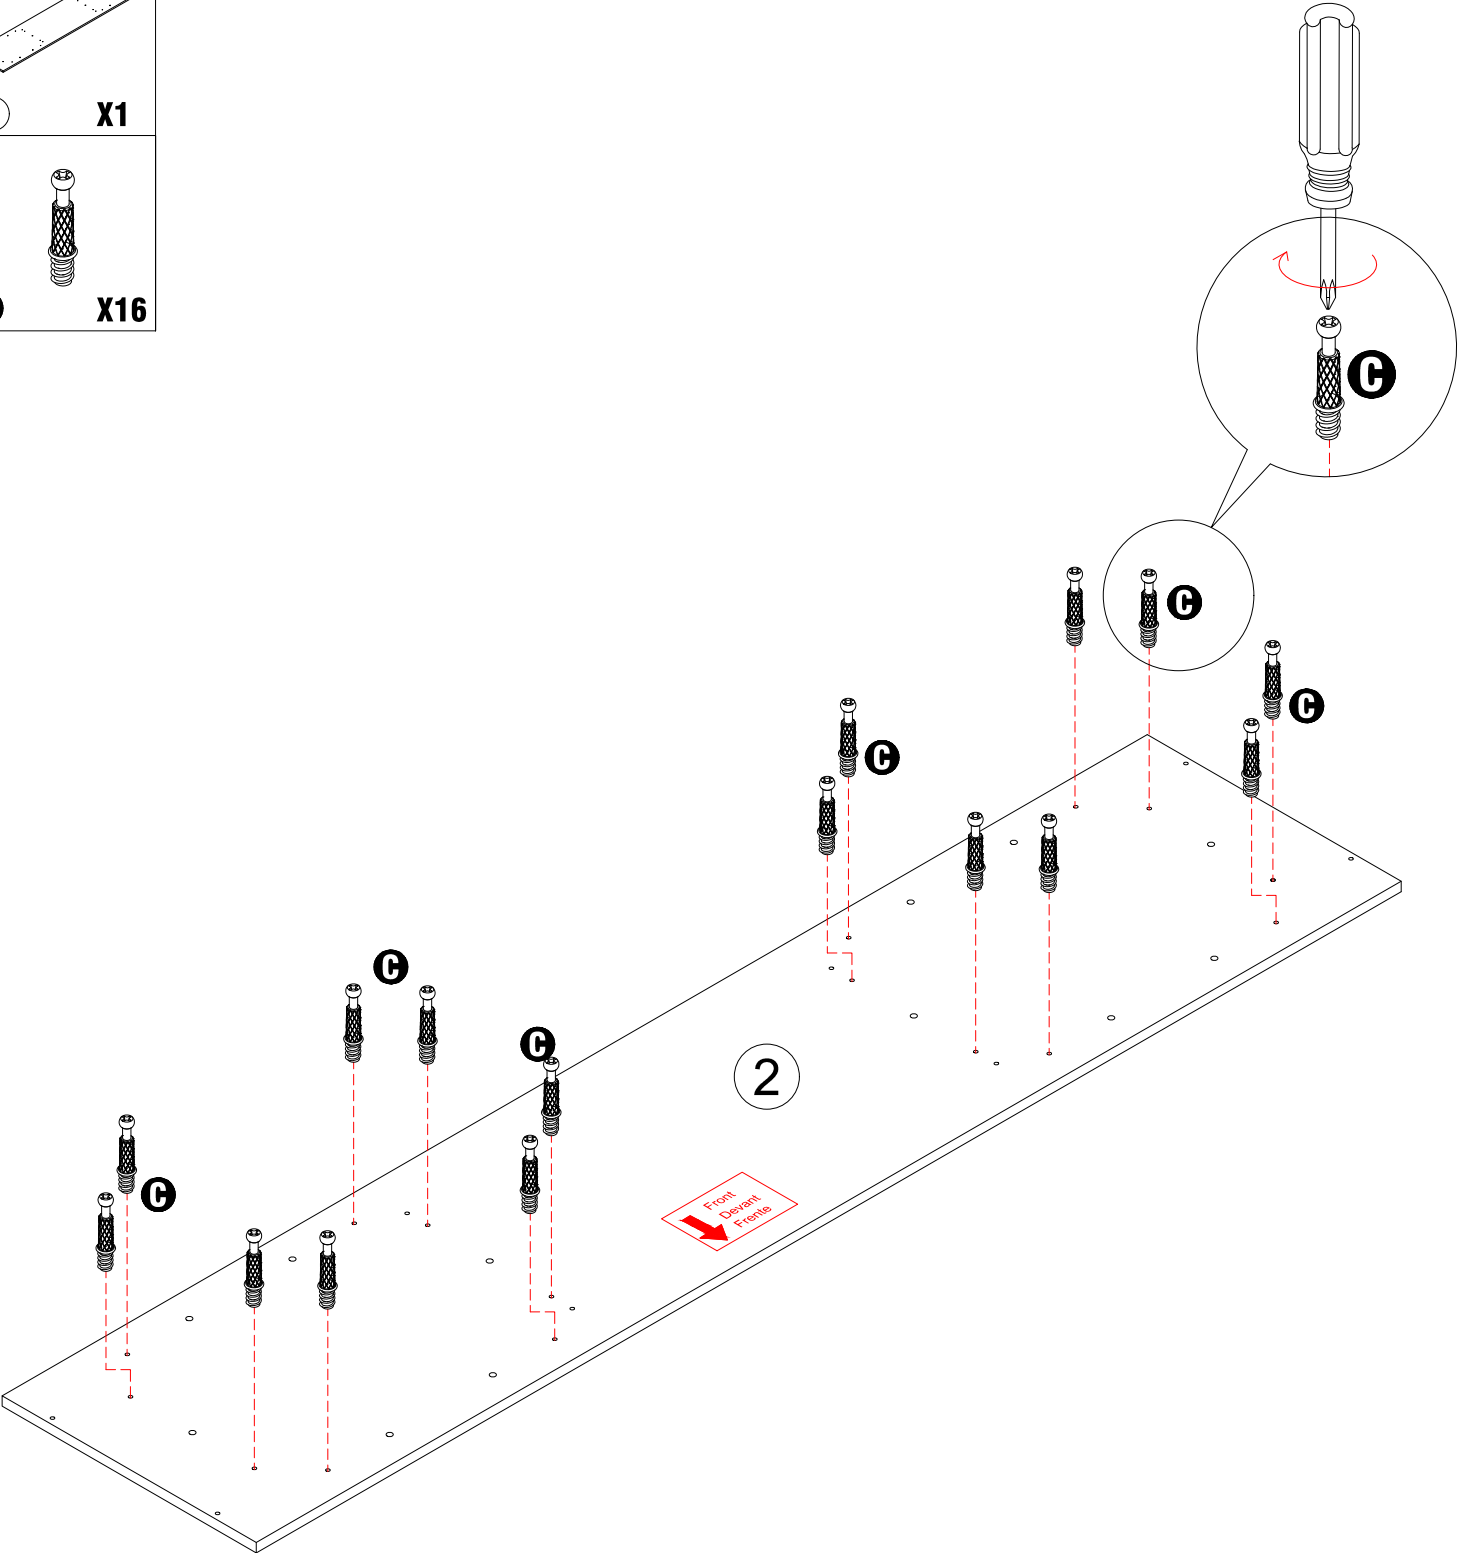

STEP 3 Insert the wooden dowel into the hole on Bottom Panel #2 .

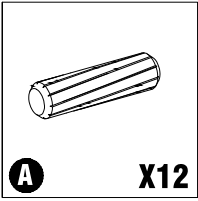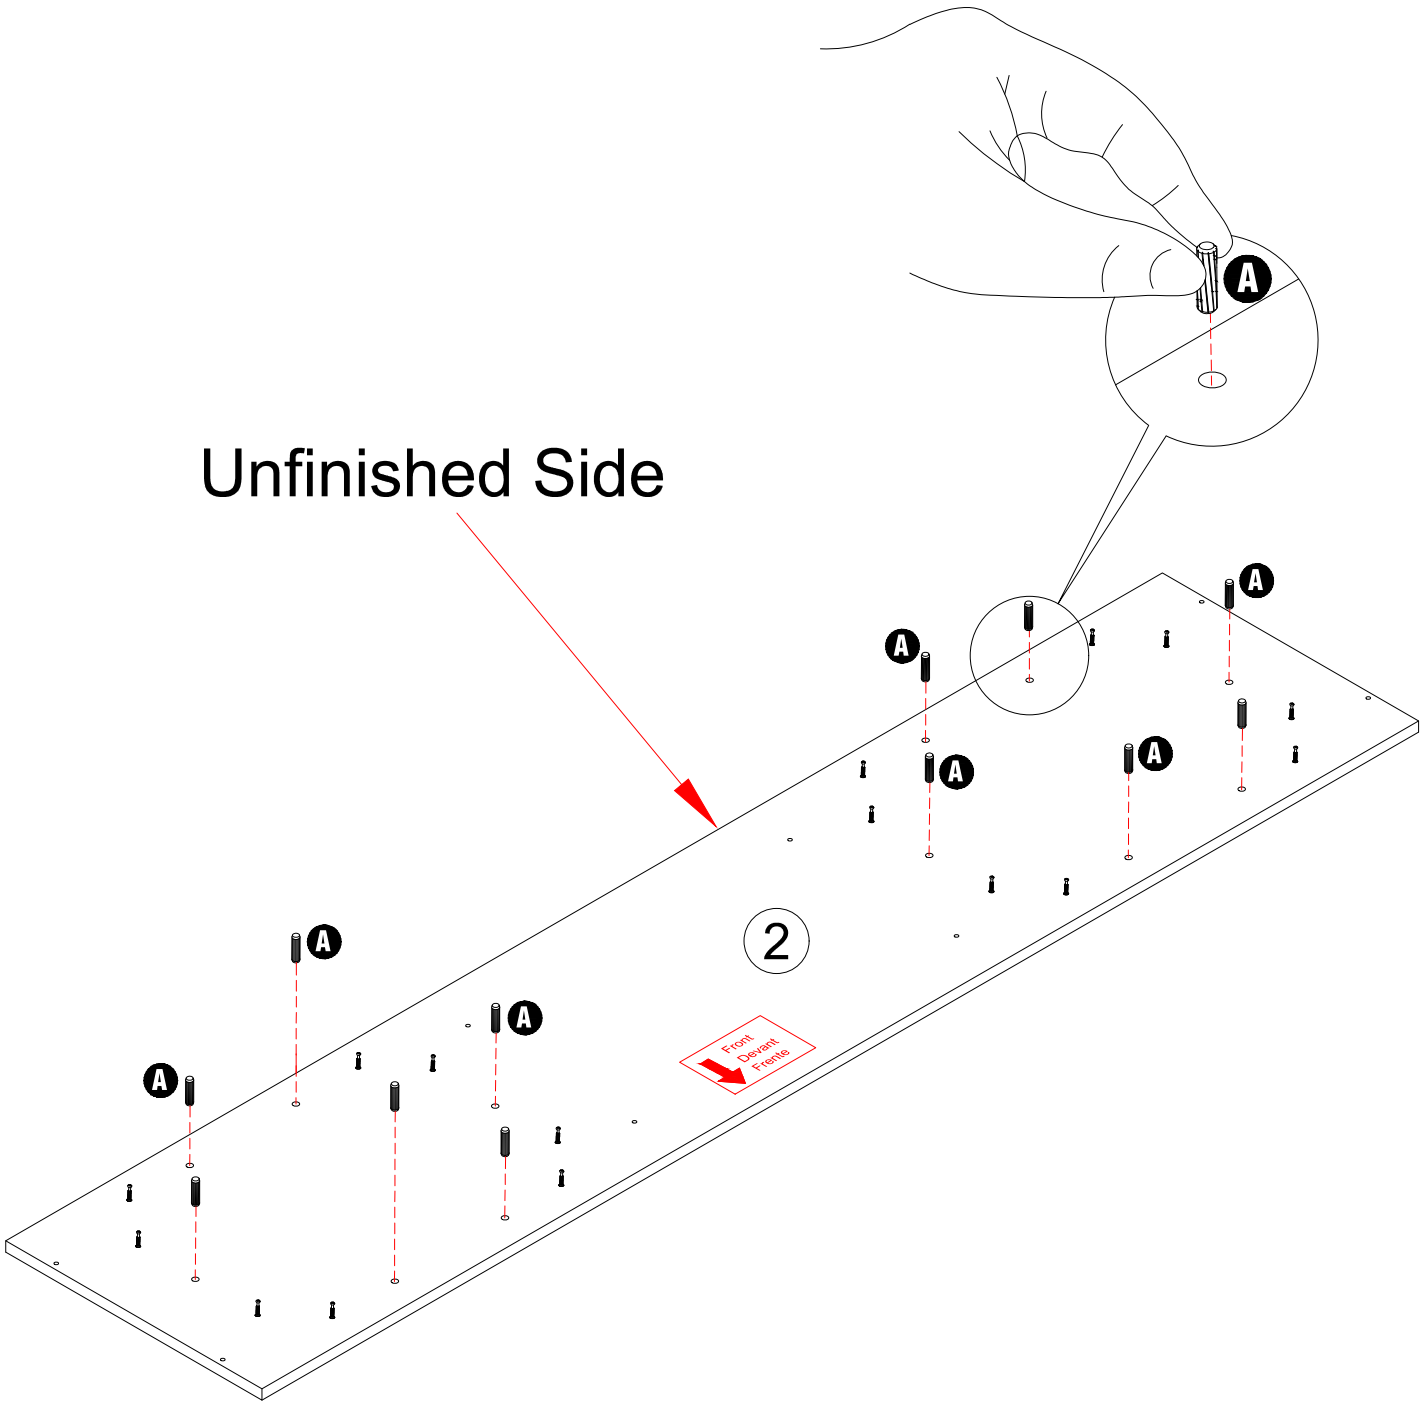


STEP 4 Secure the base to Part #2 with the combiner cap.


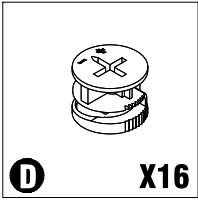
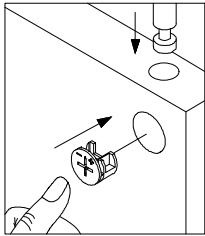
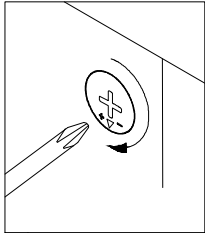



Back side

Unfinished Side

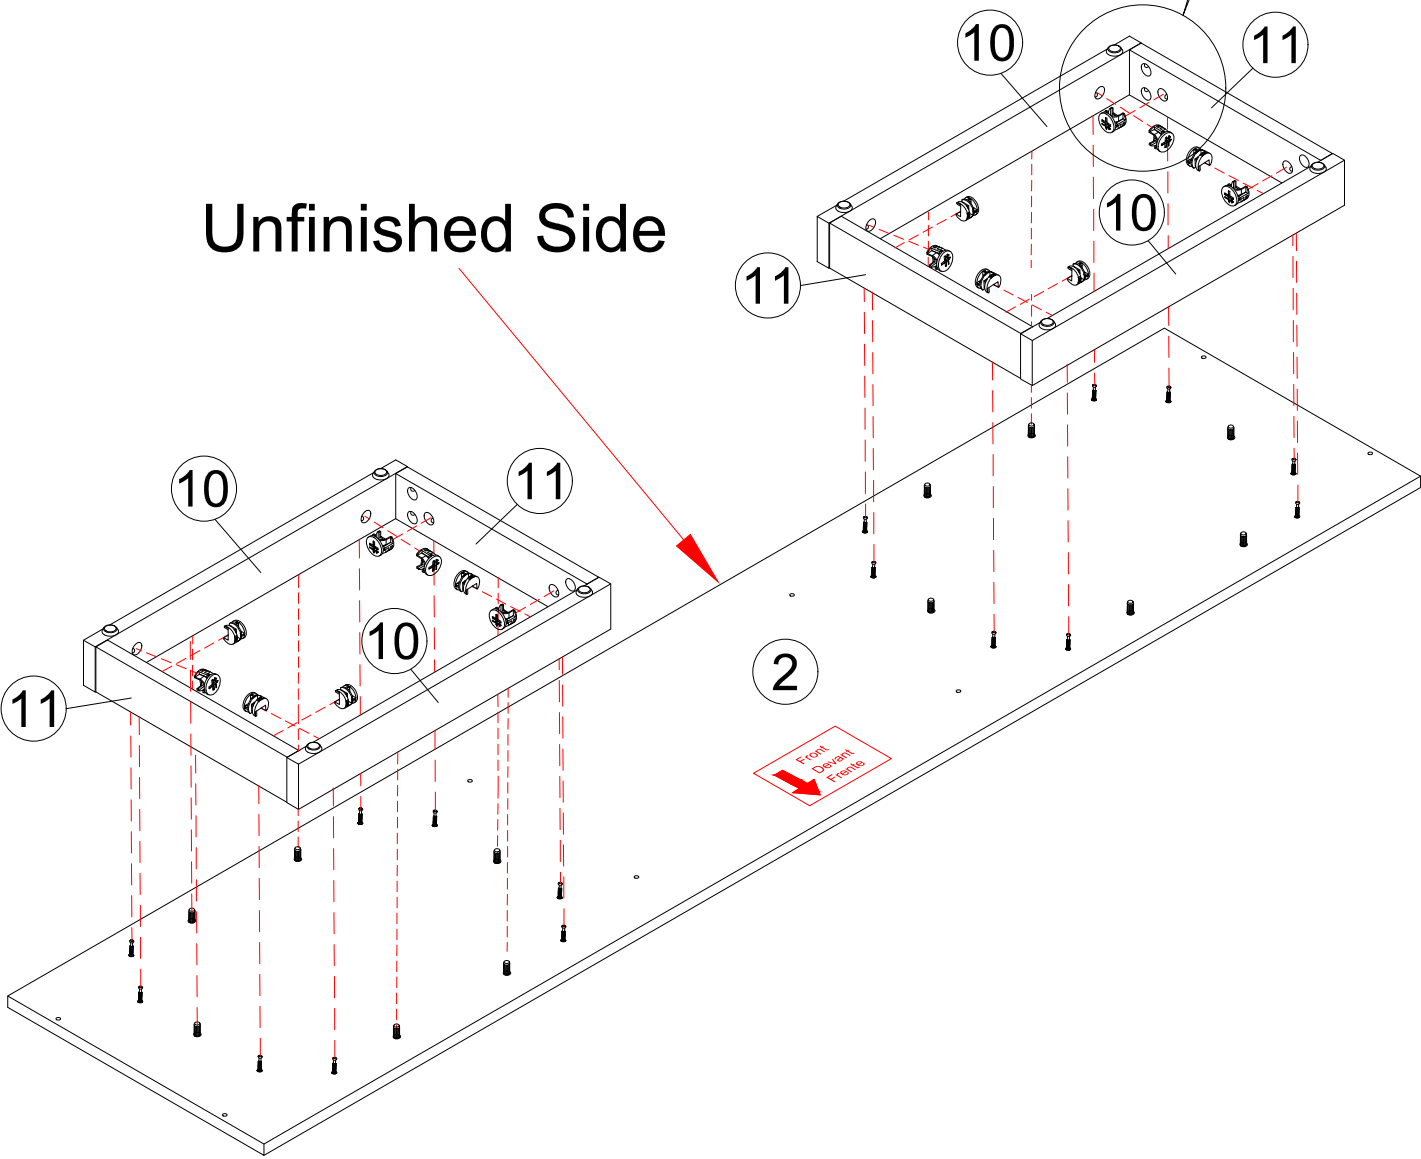


STEP 5 Assemble the vertical center panels (Part #4 & #5) with the support rails (Part #12 & #13).


 4 X1	 5 X1
 12 X1	 13 X1
 D X4	 A X4
 G X4	

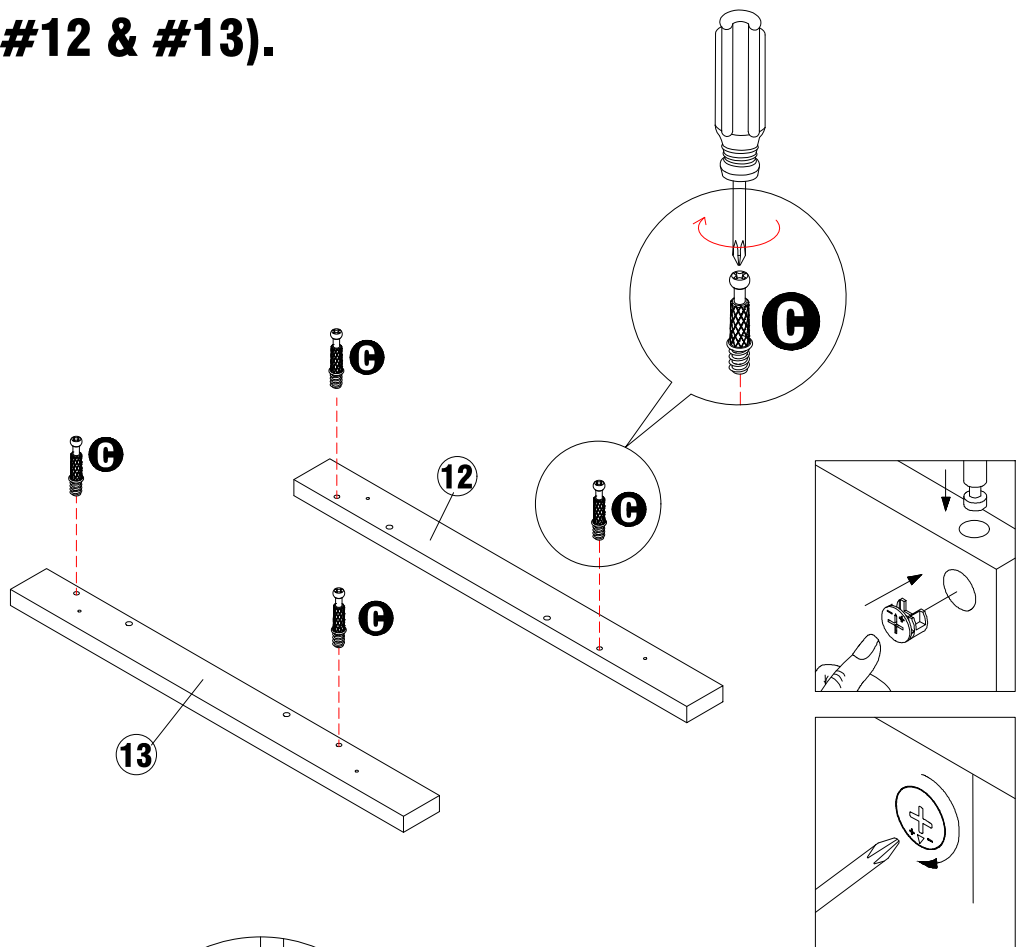

Pay attention to the notch and polarity markings when installing the component.







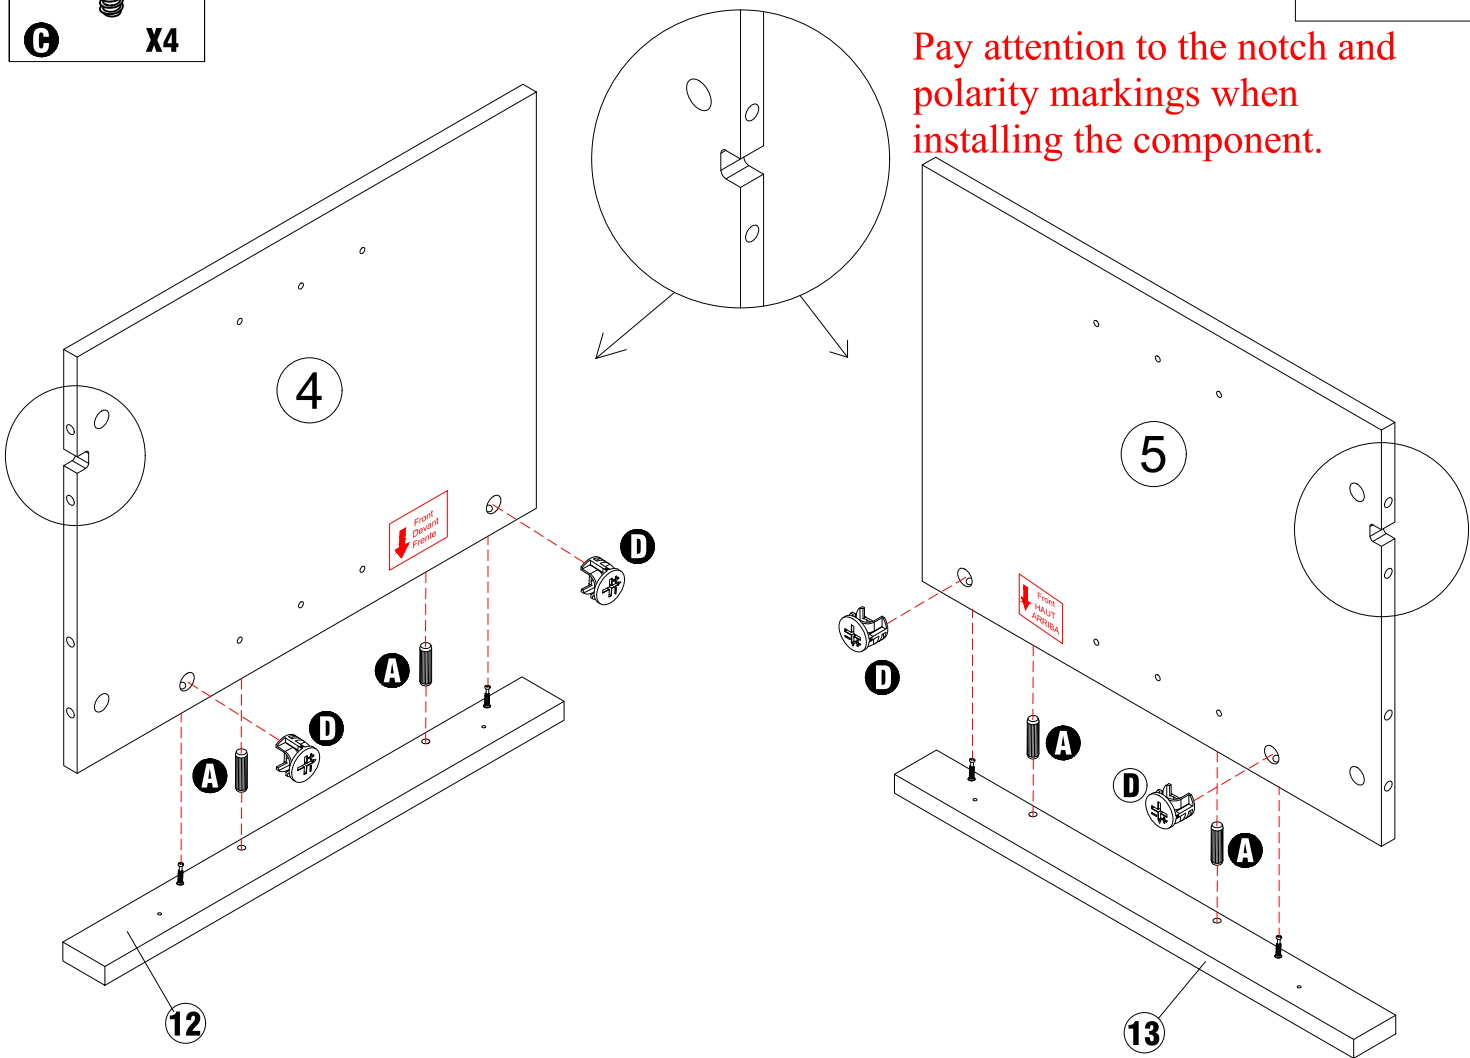



STEP 6 Assemble Parts #3–#6 to the bottom component.

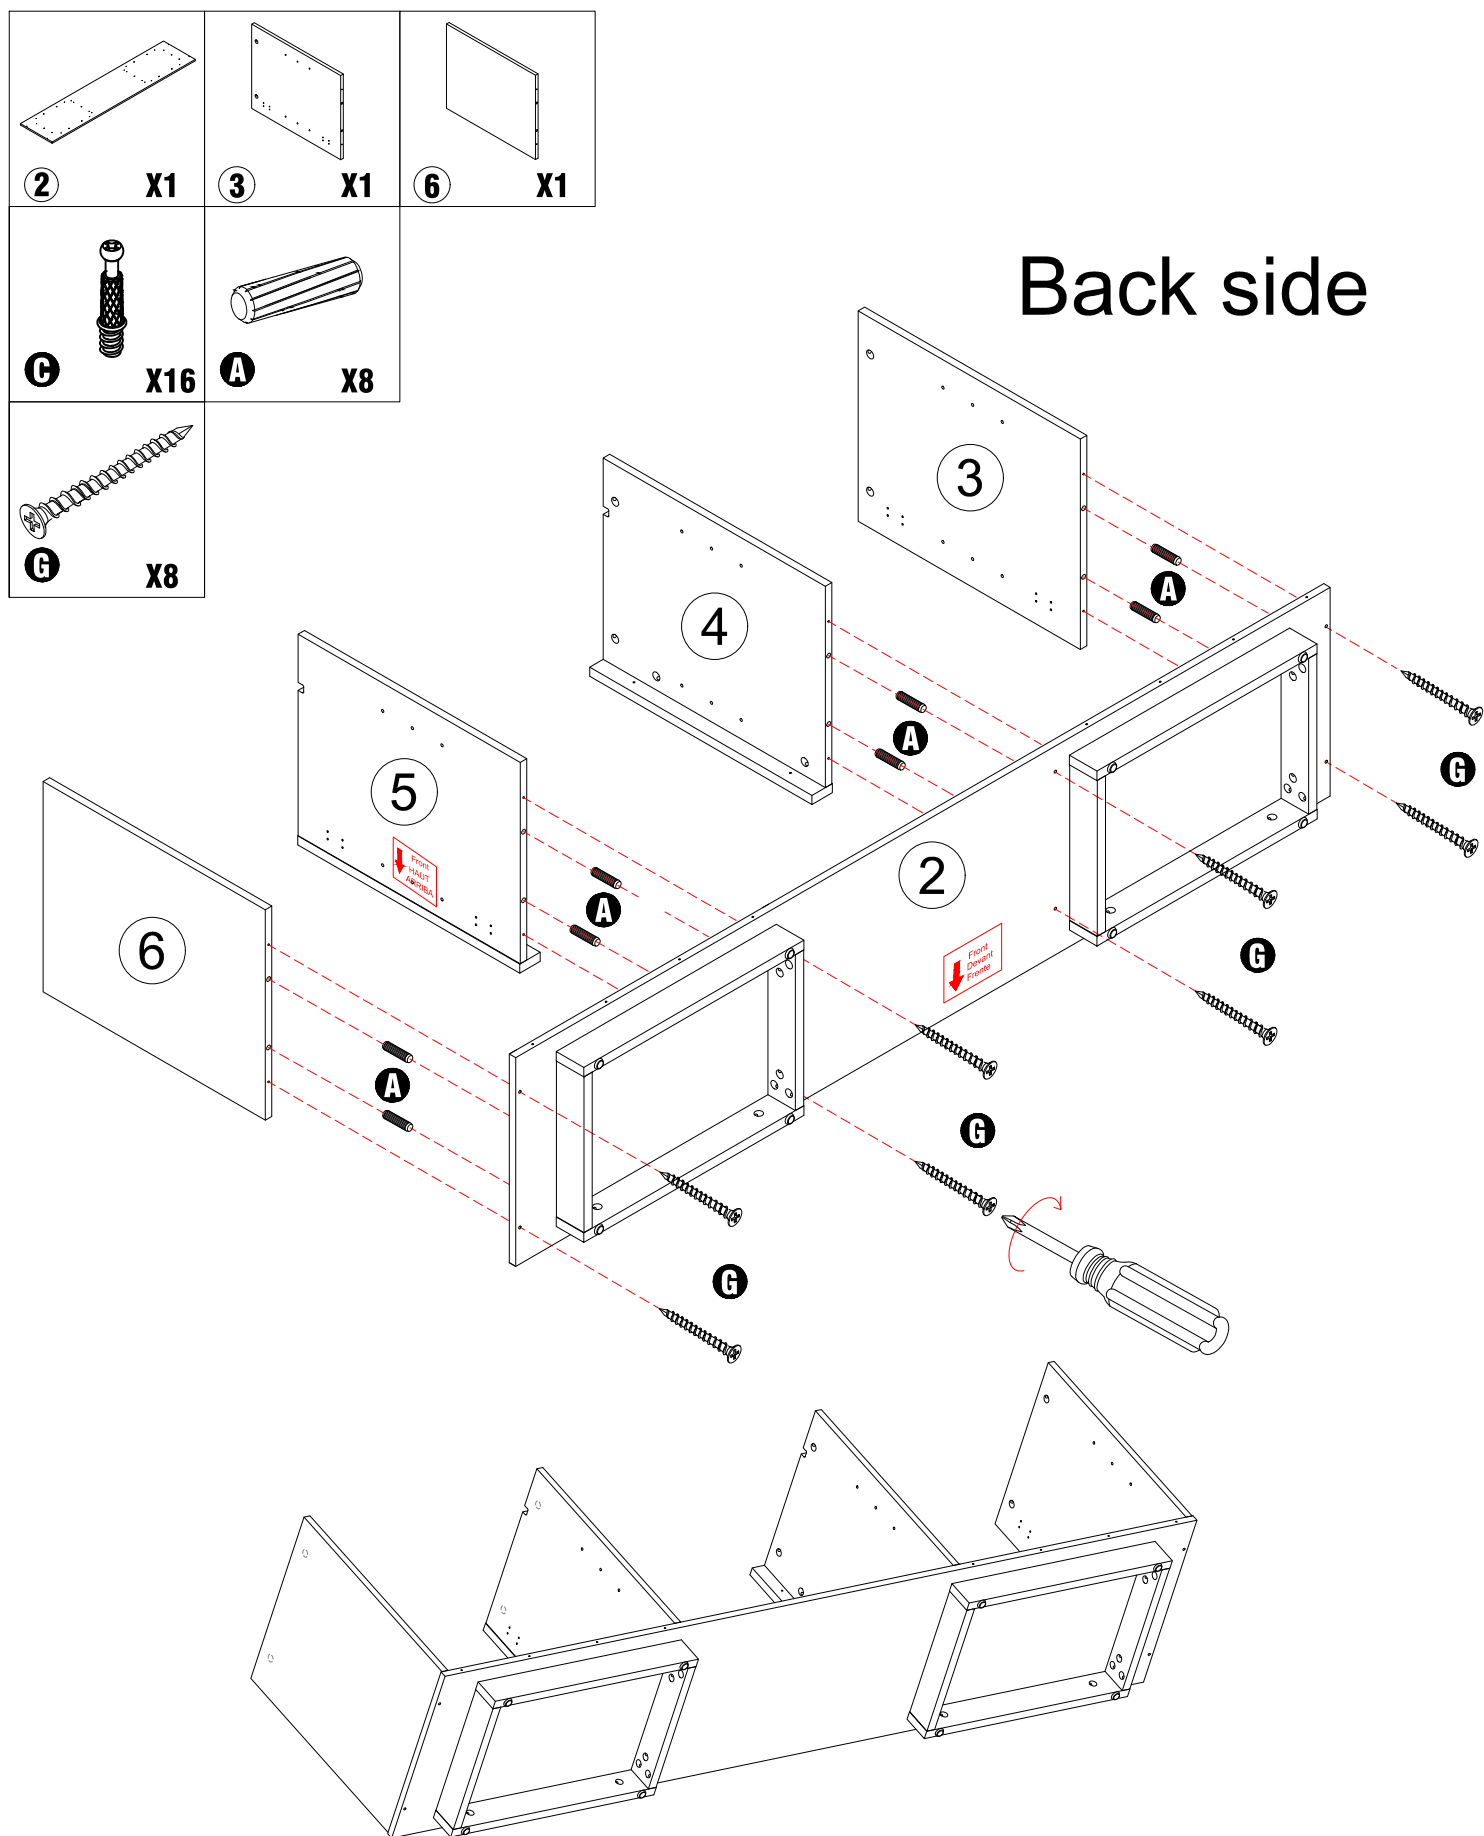



Component Drawing After Safety Completion

STEP 7 Assemble the LED light strip (#J), plastic door stop (#P), and combiner screw (#C) with the top panel (#1).

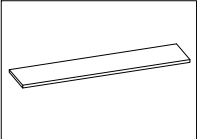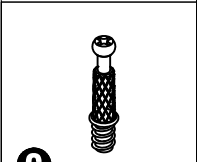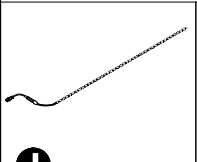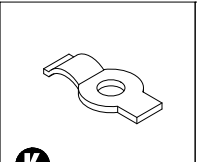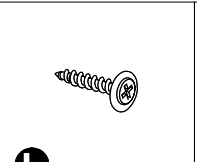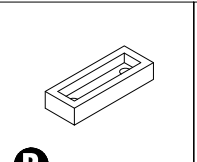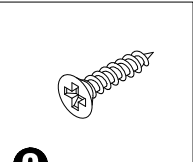
					
①	X1				
					
C	J	K	L	P	Q
X10	X1	X5	X5	X2	X4

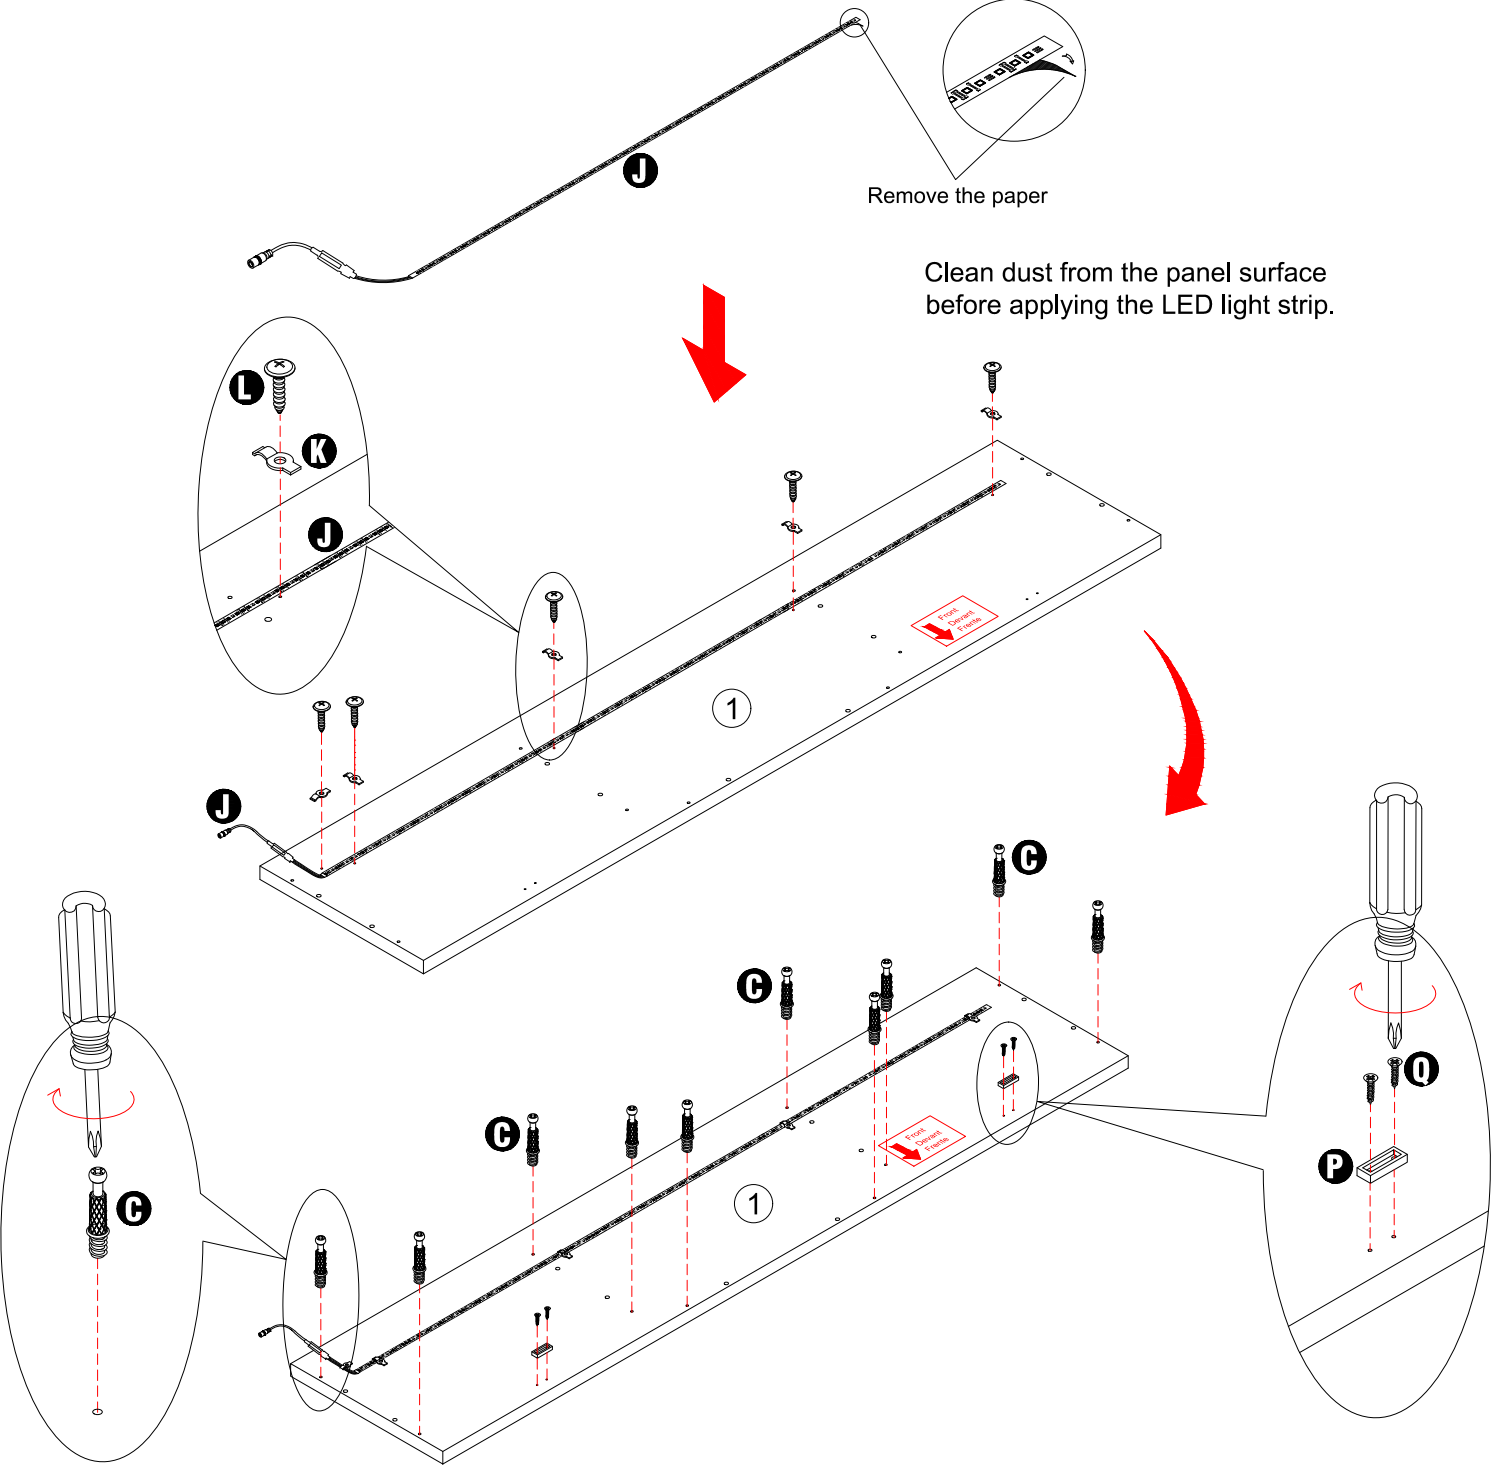





STEP 8 Assemble Part #11 to Part #1.

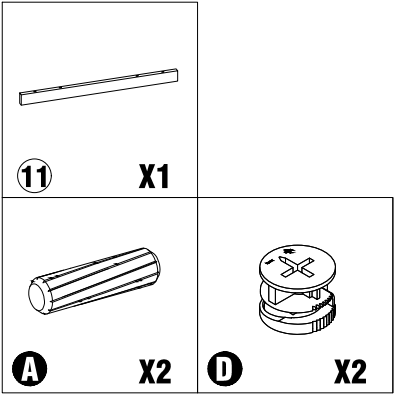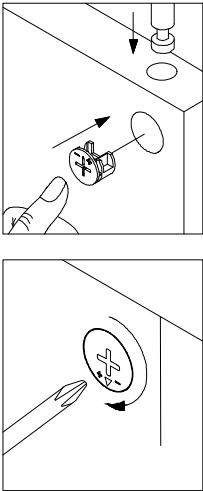

Ensure correct orientation of Part #11 before installation.

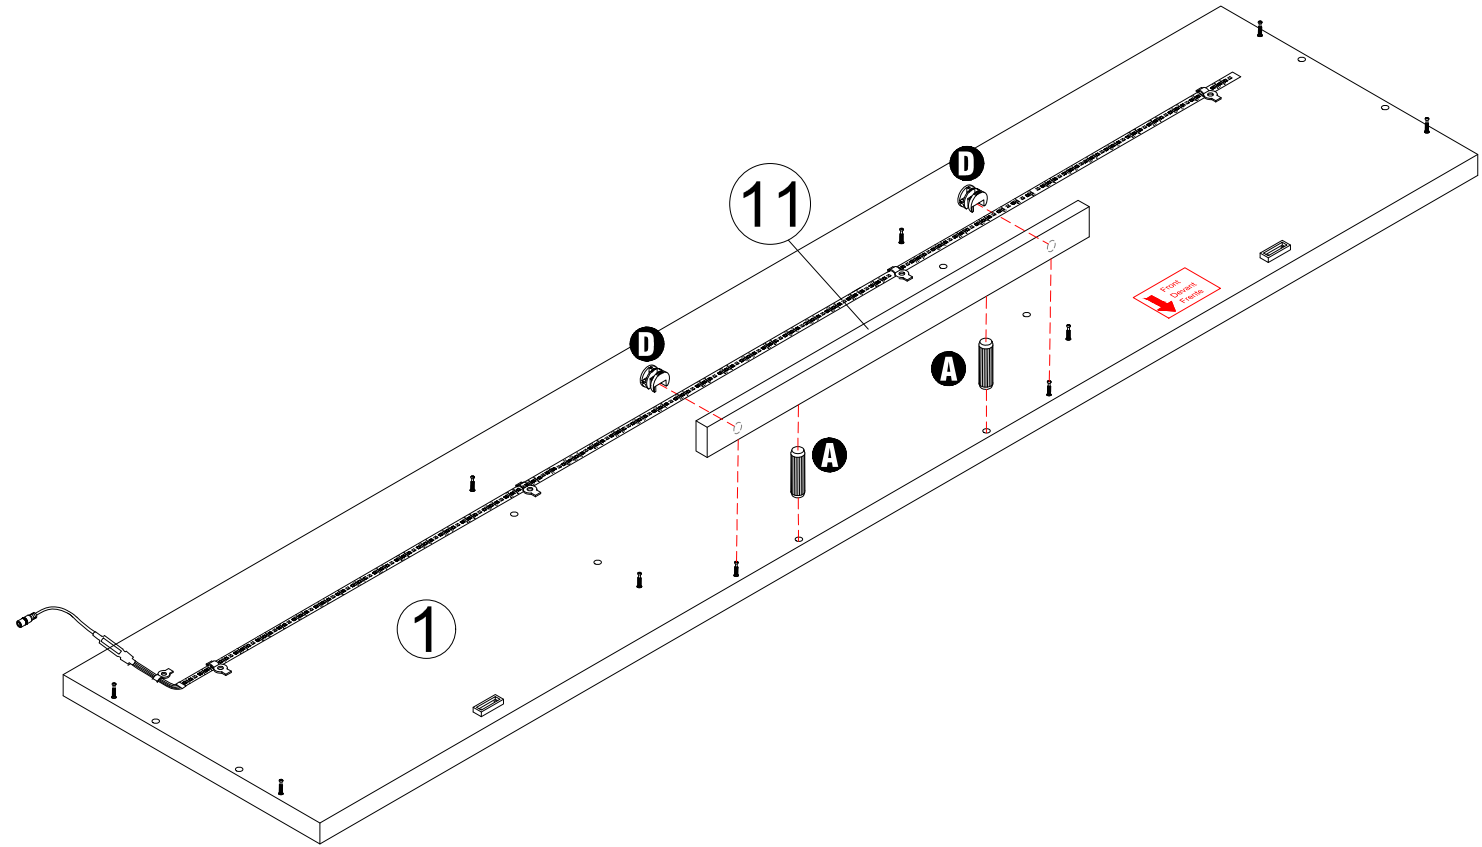


STEP 9 Assemble the top panel (#1) with the cabinet unit.

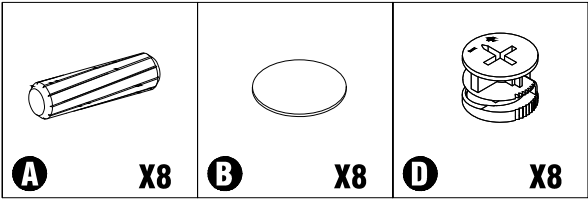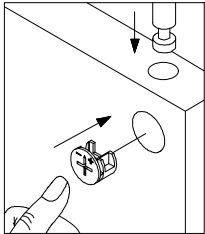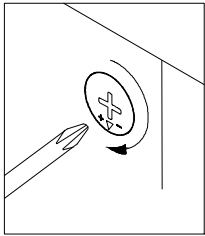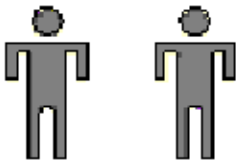



2 people for assembly

BACK SIDE


Pilot holes must face upward and in the same direction.

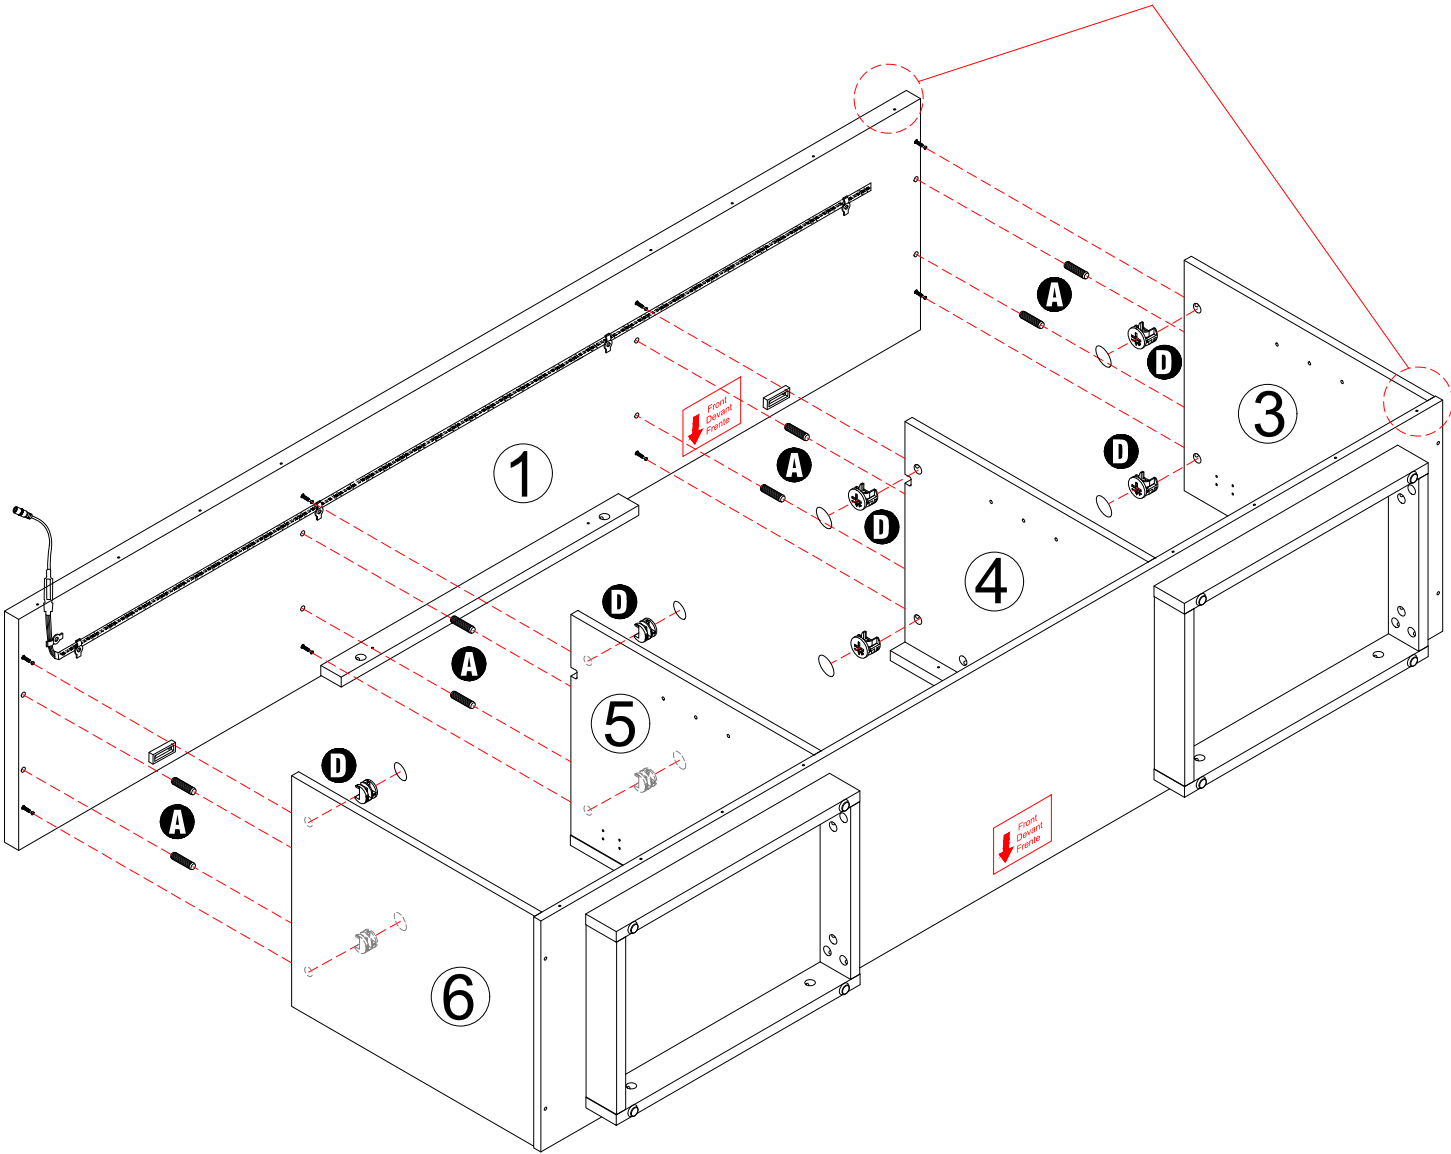


STEP 10 Assemble the back panel (#7)\(#8) with the cabinet unit.

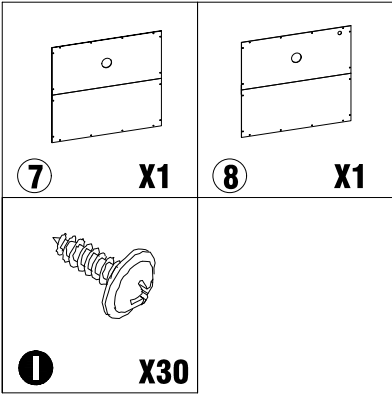
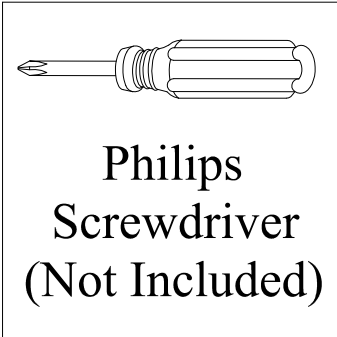


BACK SIDE





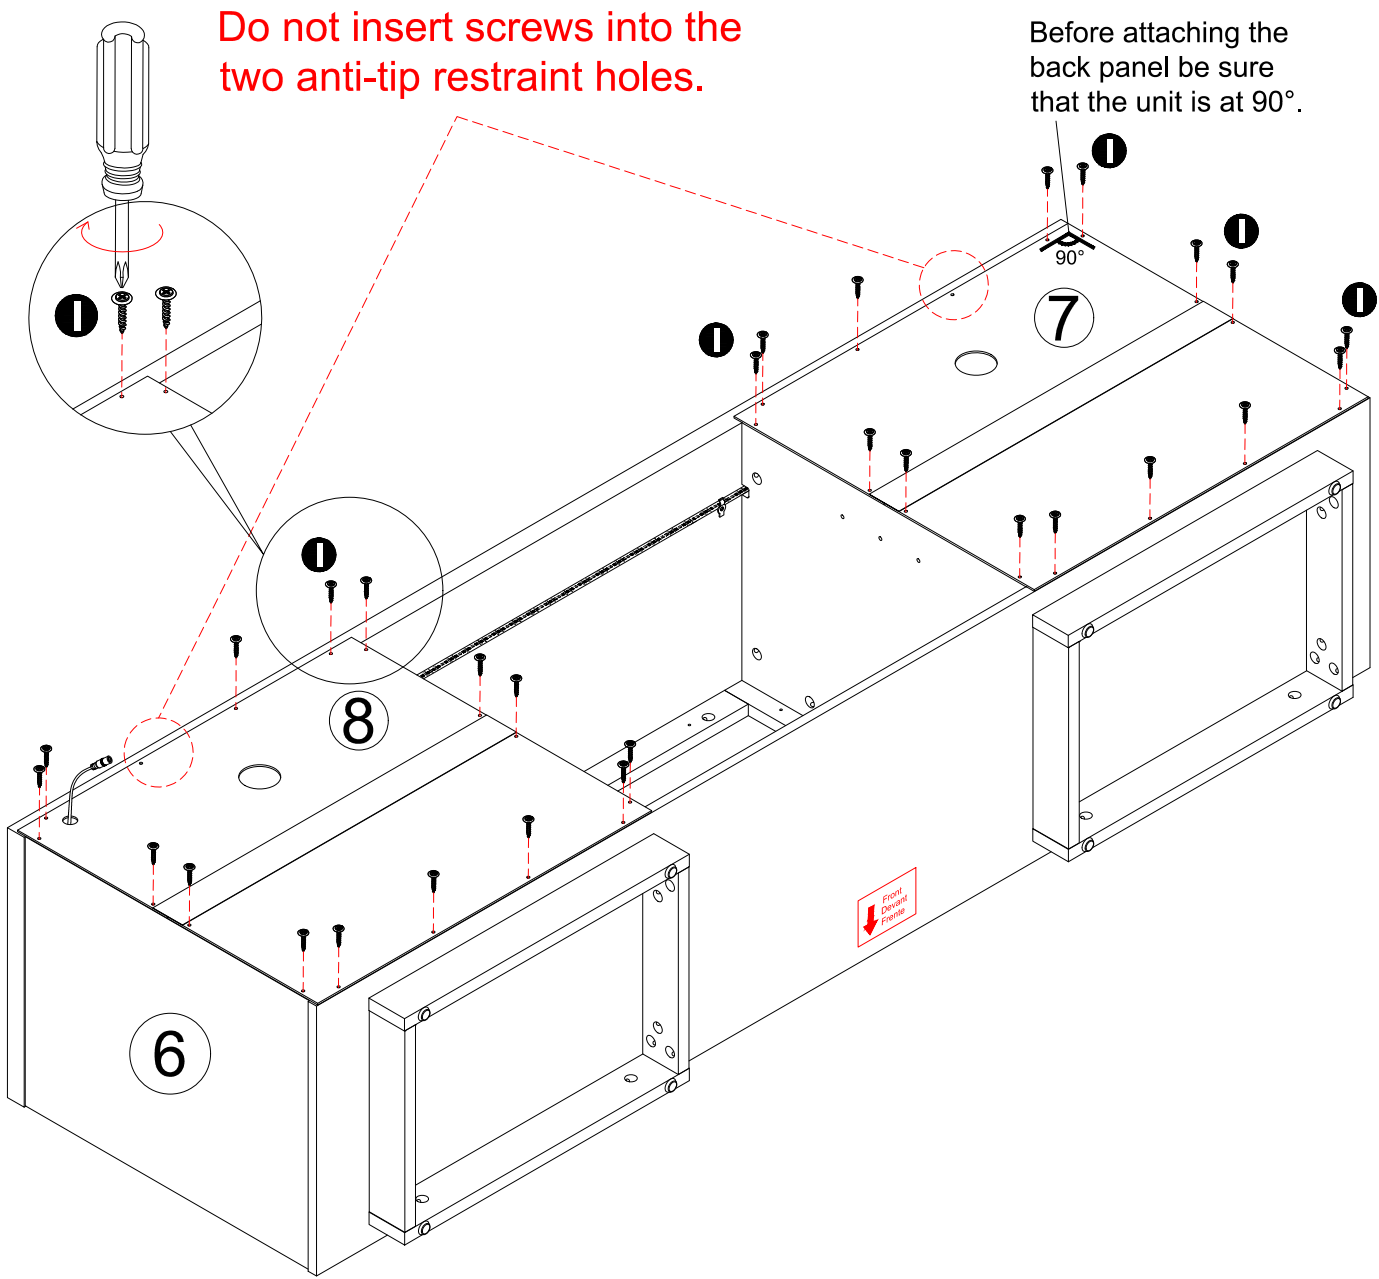



STEP 11 Insert the metal shelf support (#H) into the holes on the cabinet.

	
9 X2	10 X1
	
H X12	

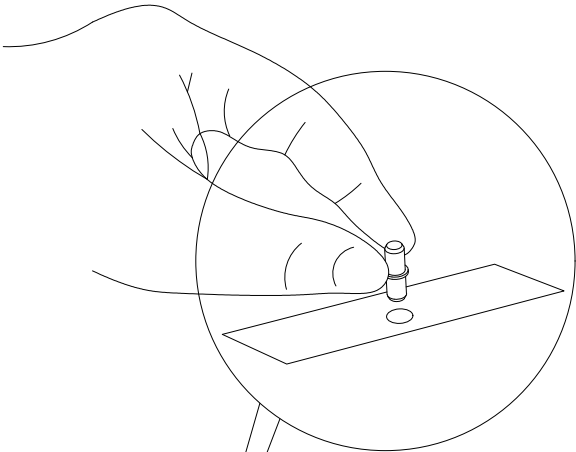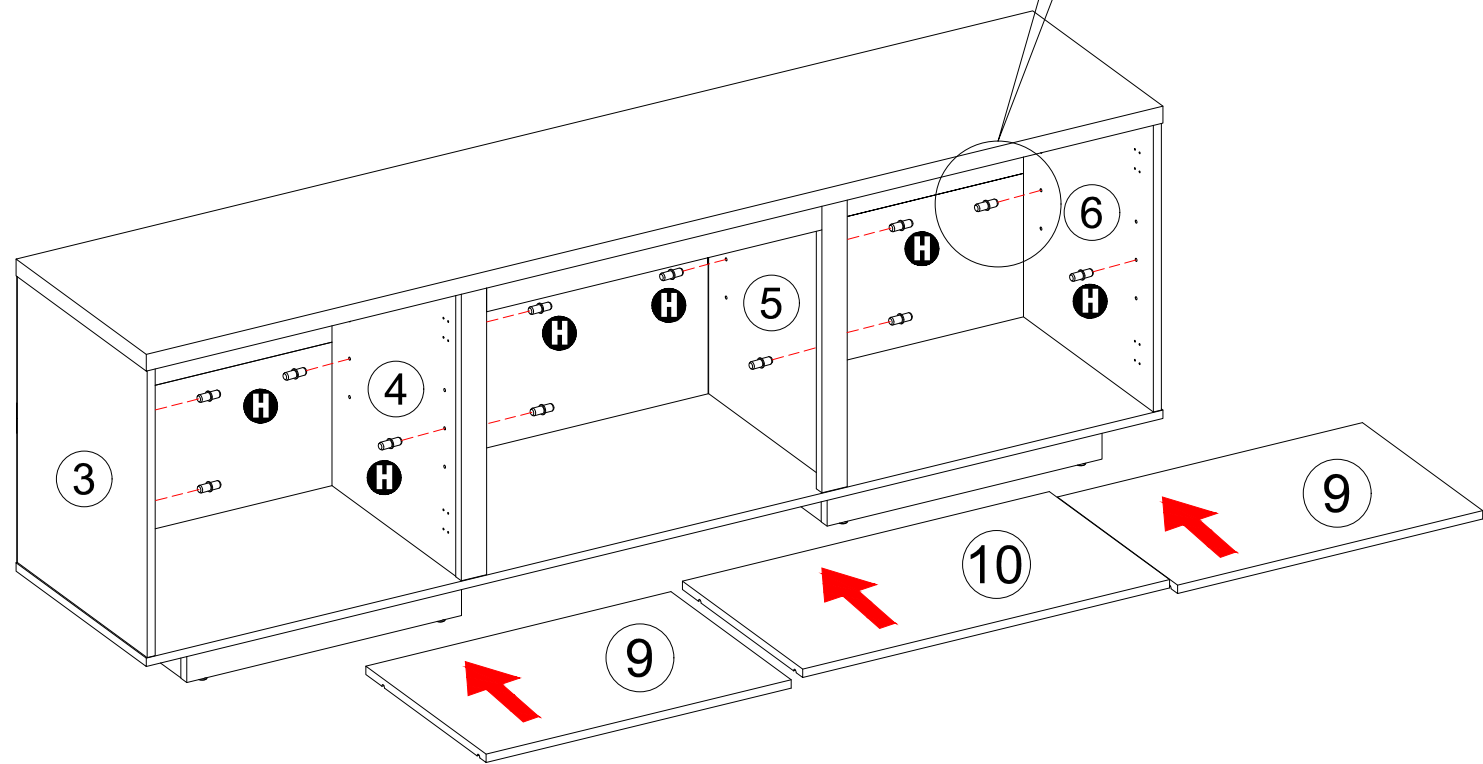


STEP 12 Install cabinet hinge (#R) and cabinet handle (#F).

	
16 X2	17 X2
	
E X8	F X4
	
R X8	S X16





Philips
Screwdriver
(Not Included)

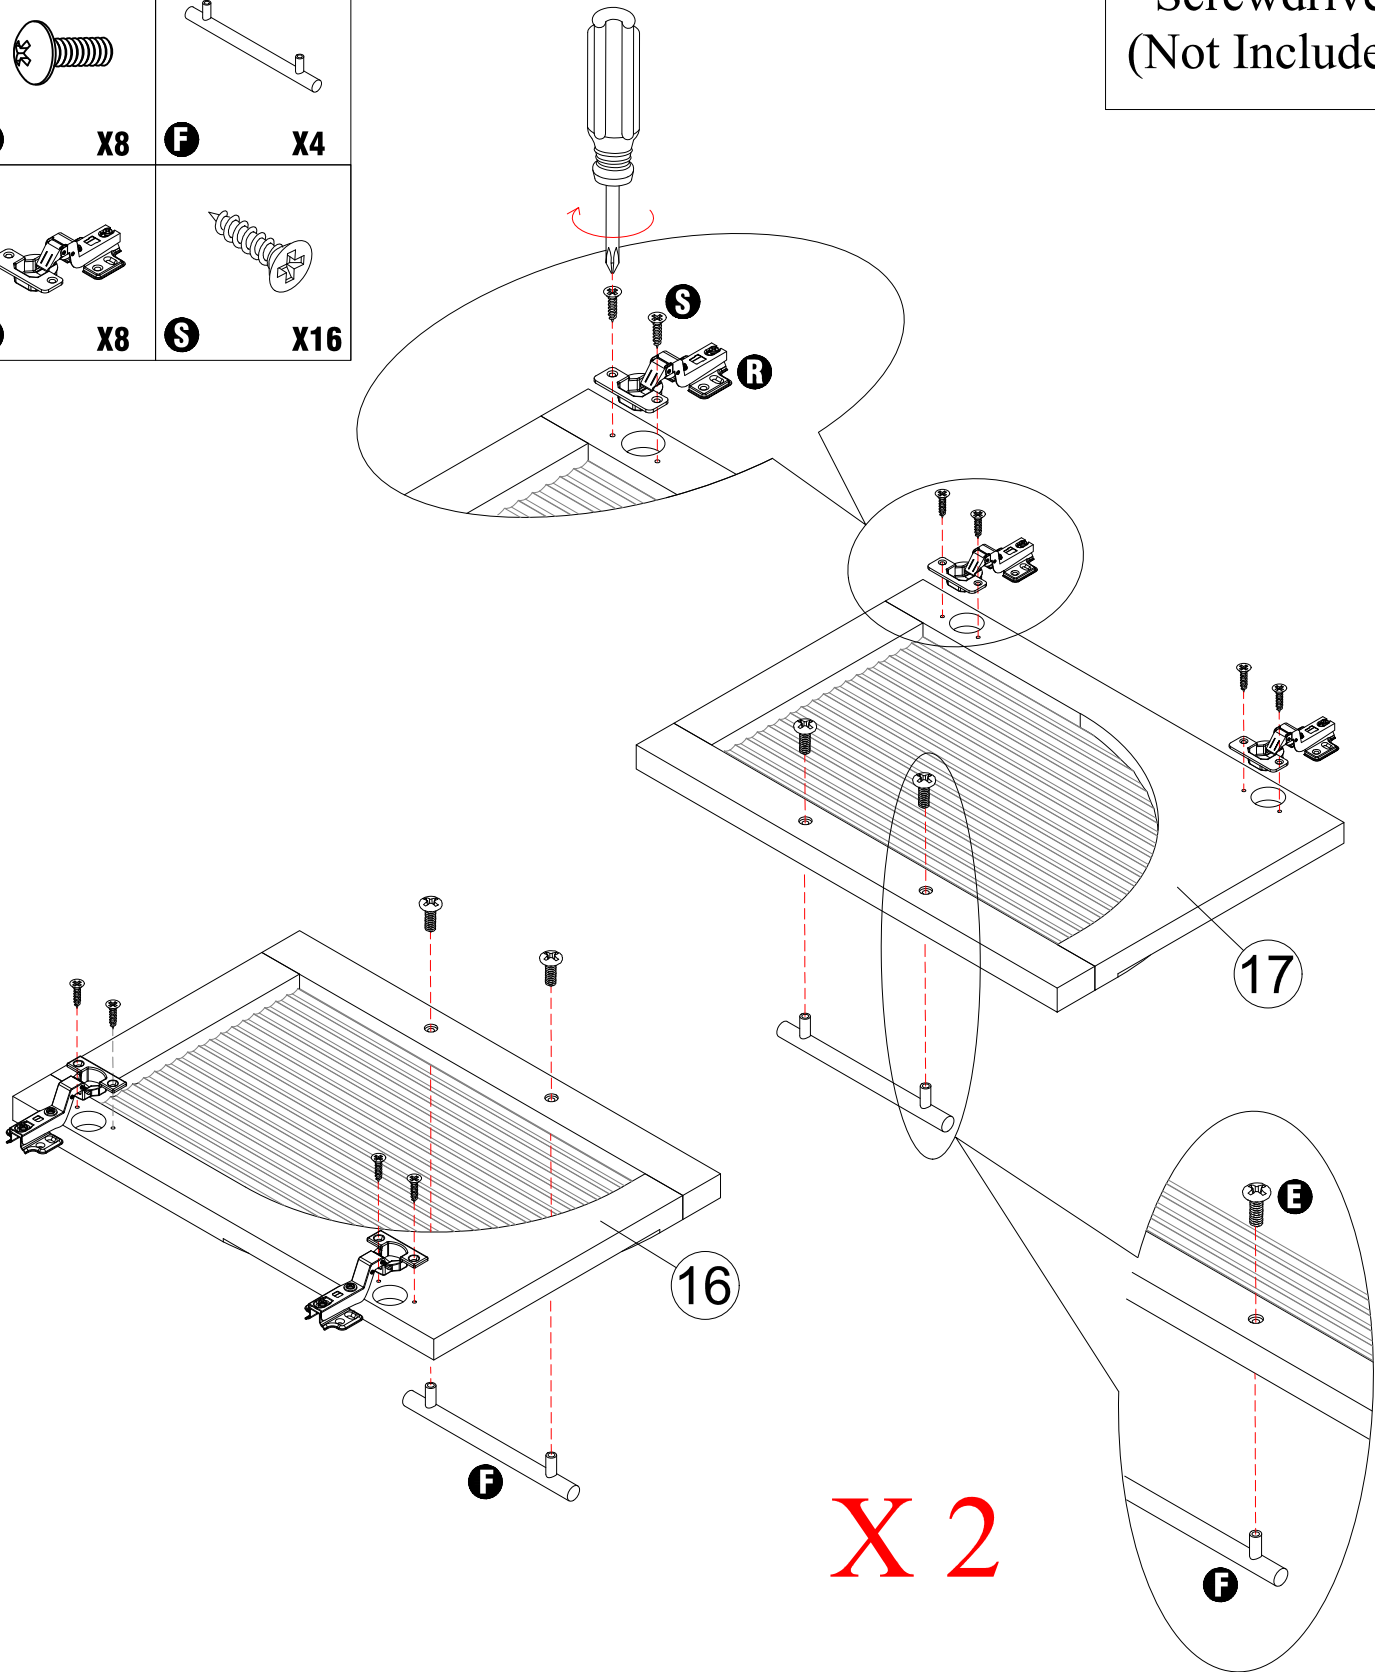

X 2


STEP 13 Install the door onto the cabinet.

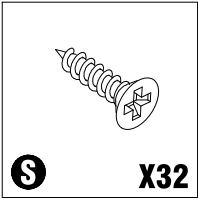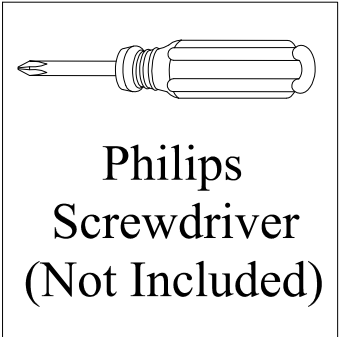

HOW TO ADJUST THE CONCEALED DOOR HINGES


Shipping can cause minor door misalignment. Use the screws shown to make small adjustments:





- 1. Move the door forward or backward.
- 2. Move the door left or right.
- 3. Move the door up or down.

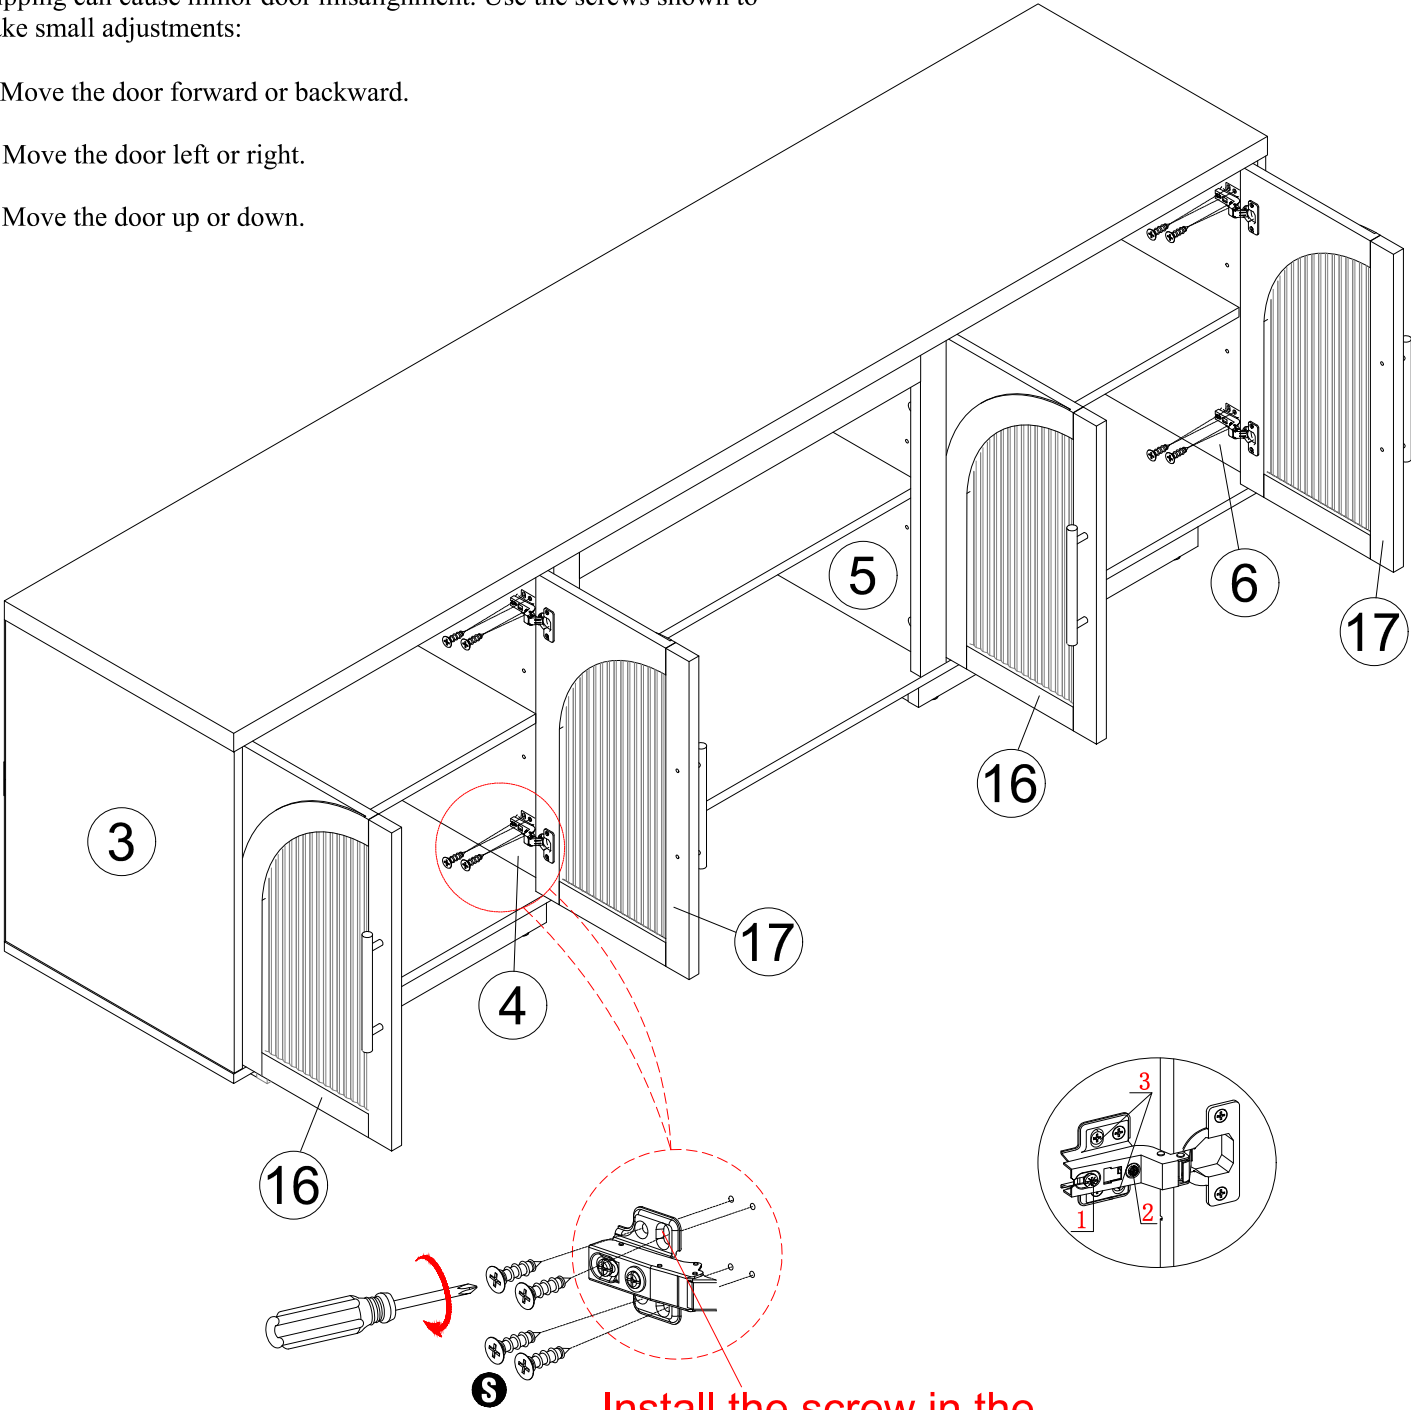



Install the screw in the elongated slot first to set the door height.

STEP 14 Install the accompanying accessories for the LED light strip.


		
M X1	N X1	O Remote Control X1

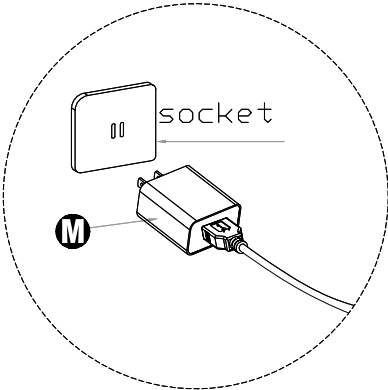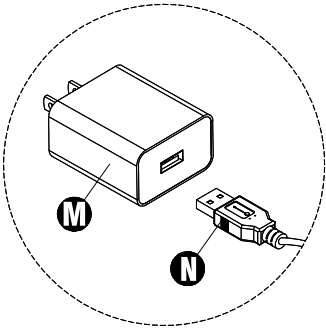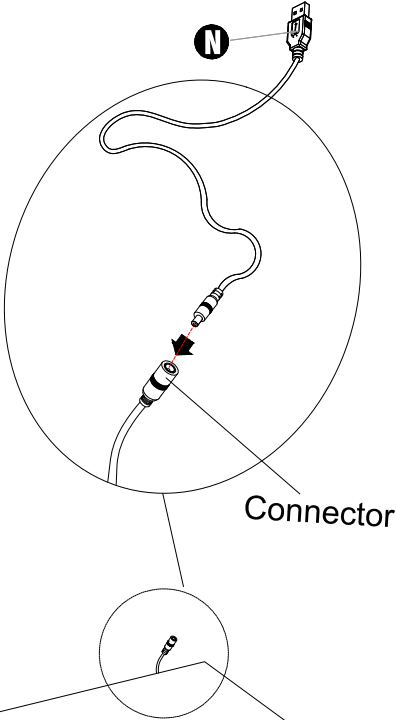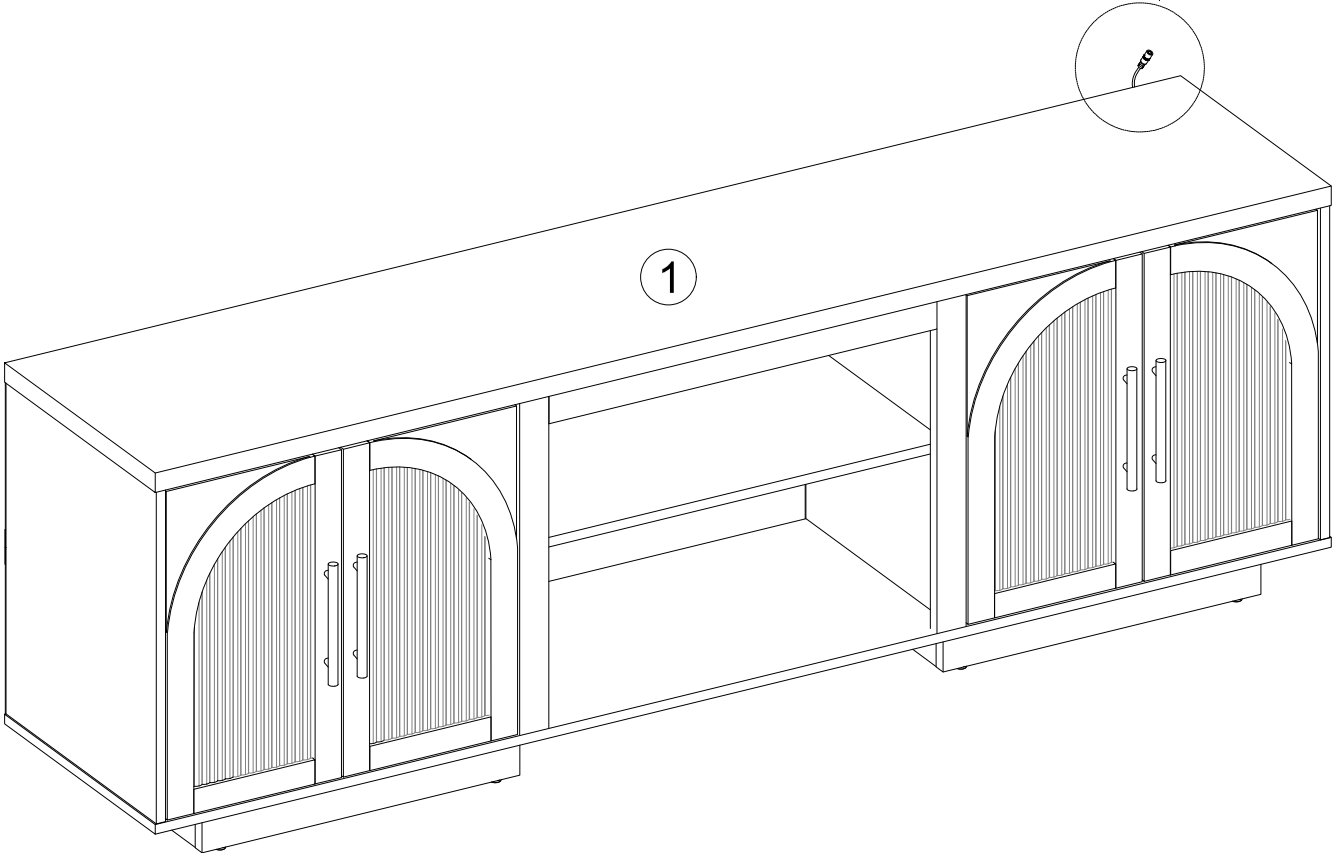


STEP 15 Install the anti-tip hardware for the cabinet.

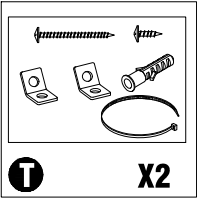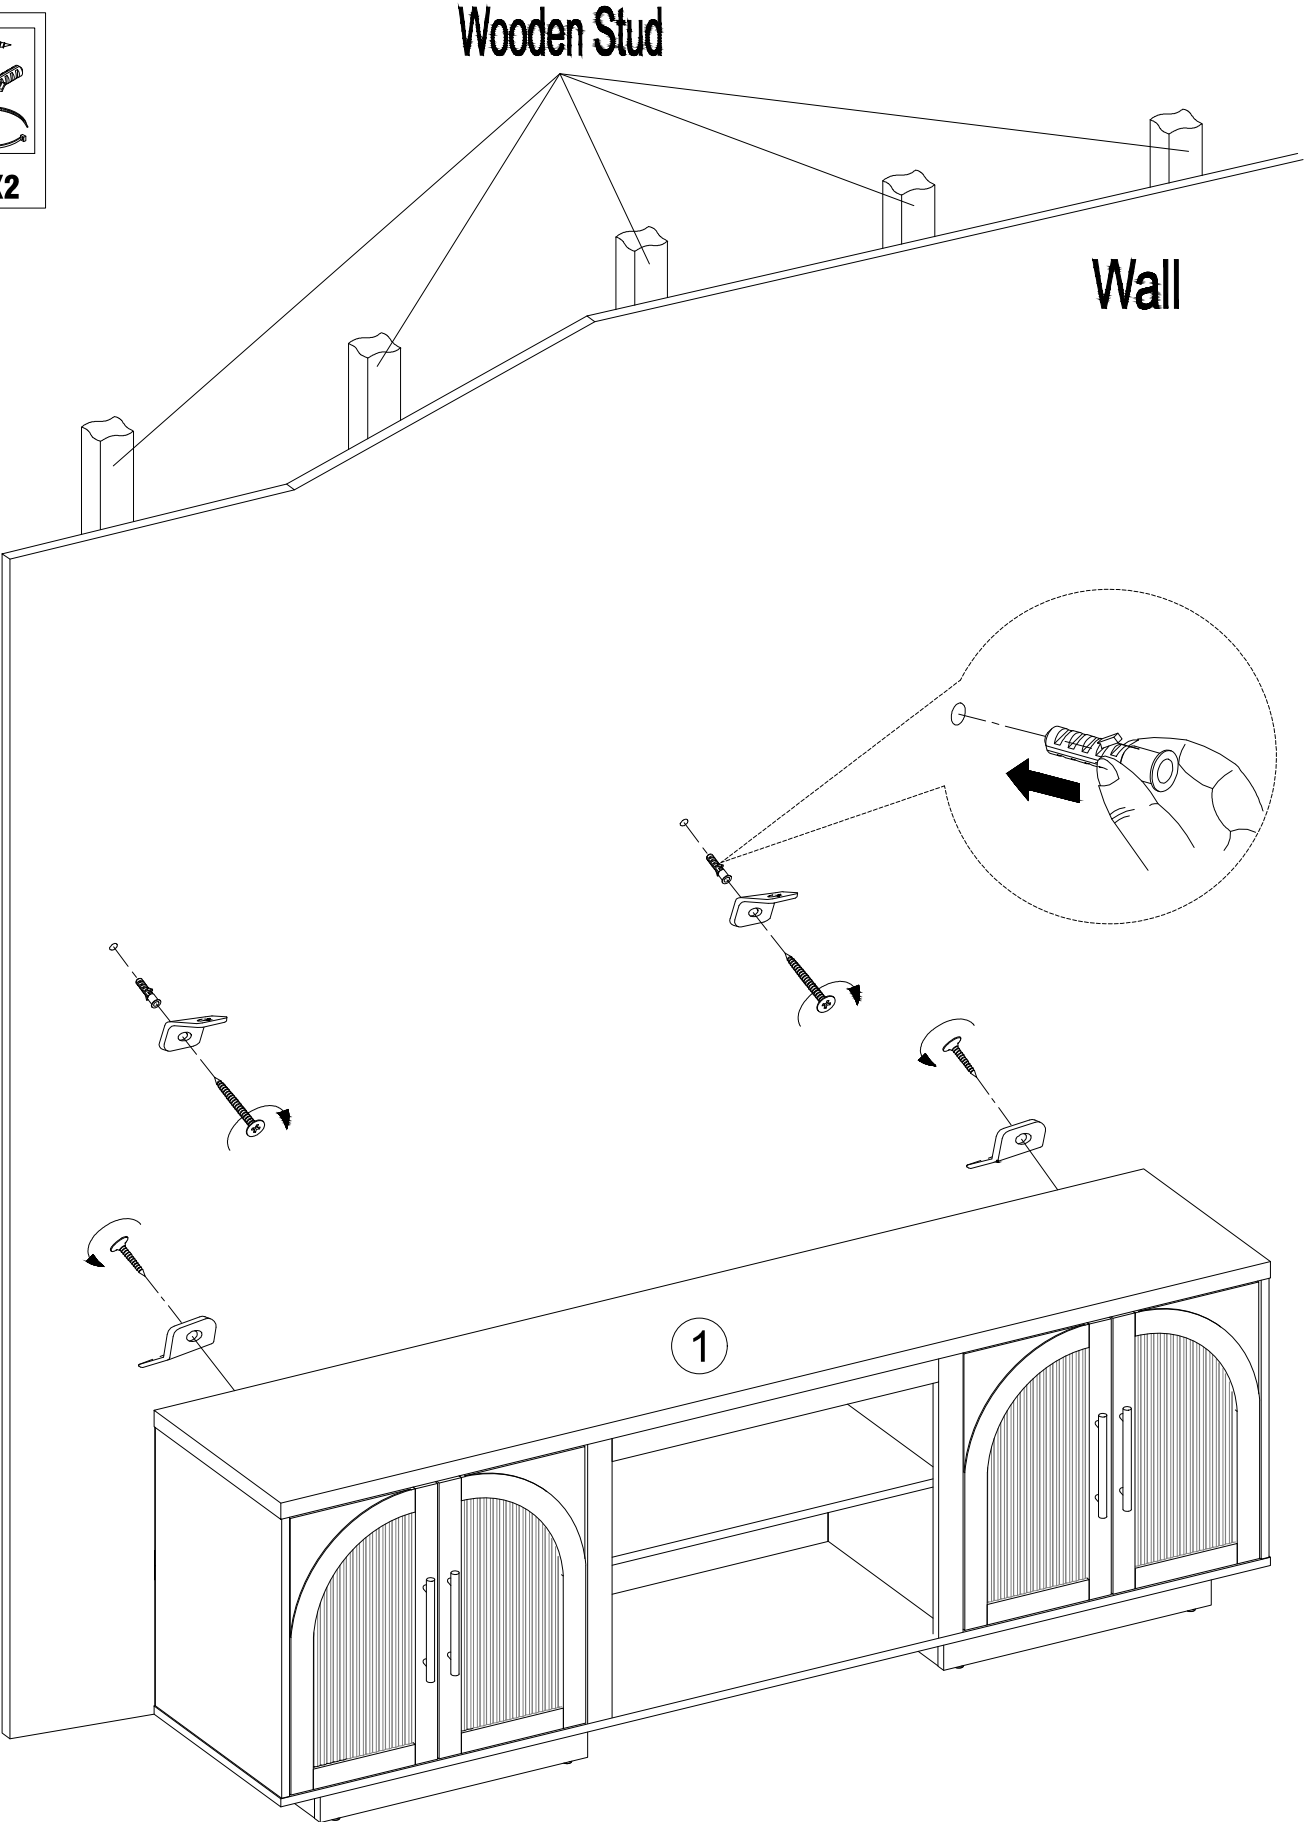

STEP 16 Adjust the cabinet's levelness using the leveling feet.

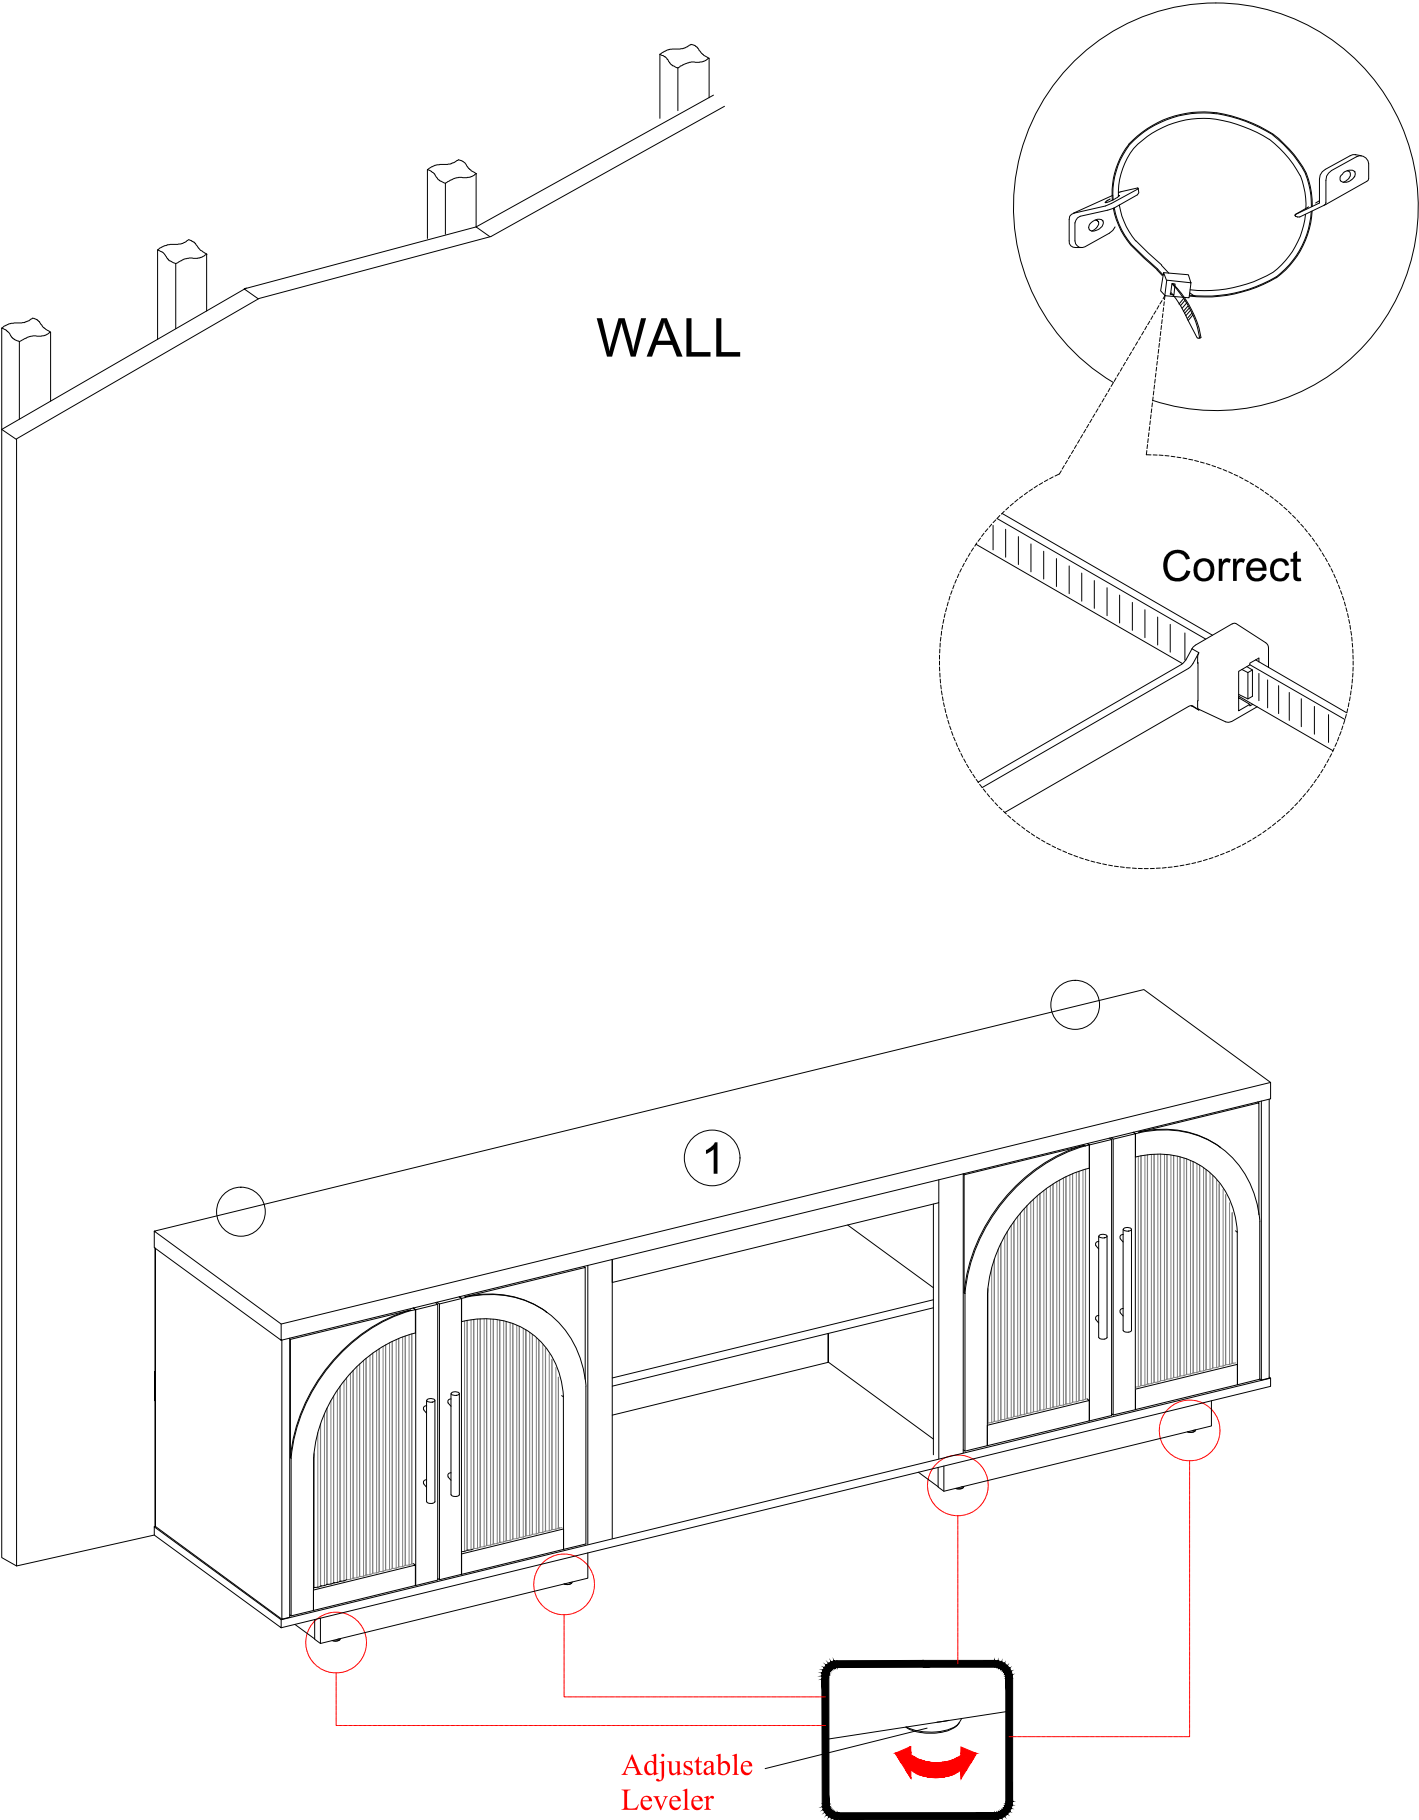

STEP 17 Cabinet Dimensions

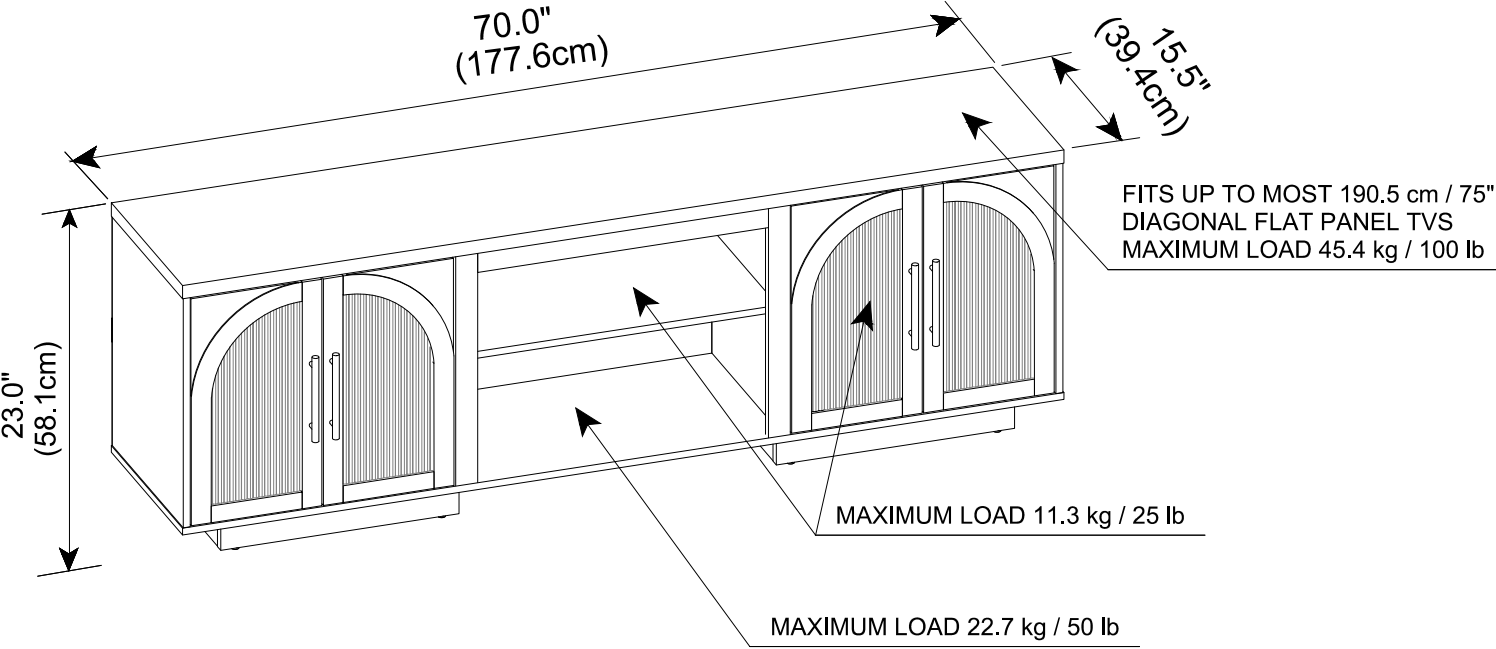



Note: The installation of the TV cabinet is now complete; if you also need to install a built-in fireplace, please continue reading below.


SPECIFICATIONS

ASSEMBLED DIMENSIONS(W x D x H)	70.0 x 15.5 x 23.0 in 177.6 x 39.4 x 58.1 cm
MAXIMUM TOP LOAD	100 lb (45.4 kg)


STEP 18

OPTION 2: ELECTRIC FIREPLACE INSERT

 X1	 X1	 X1
 X6		




Philips
Screwdriver
(Not Included)

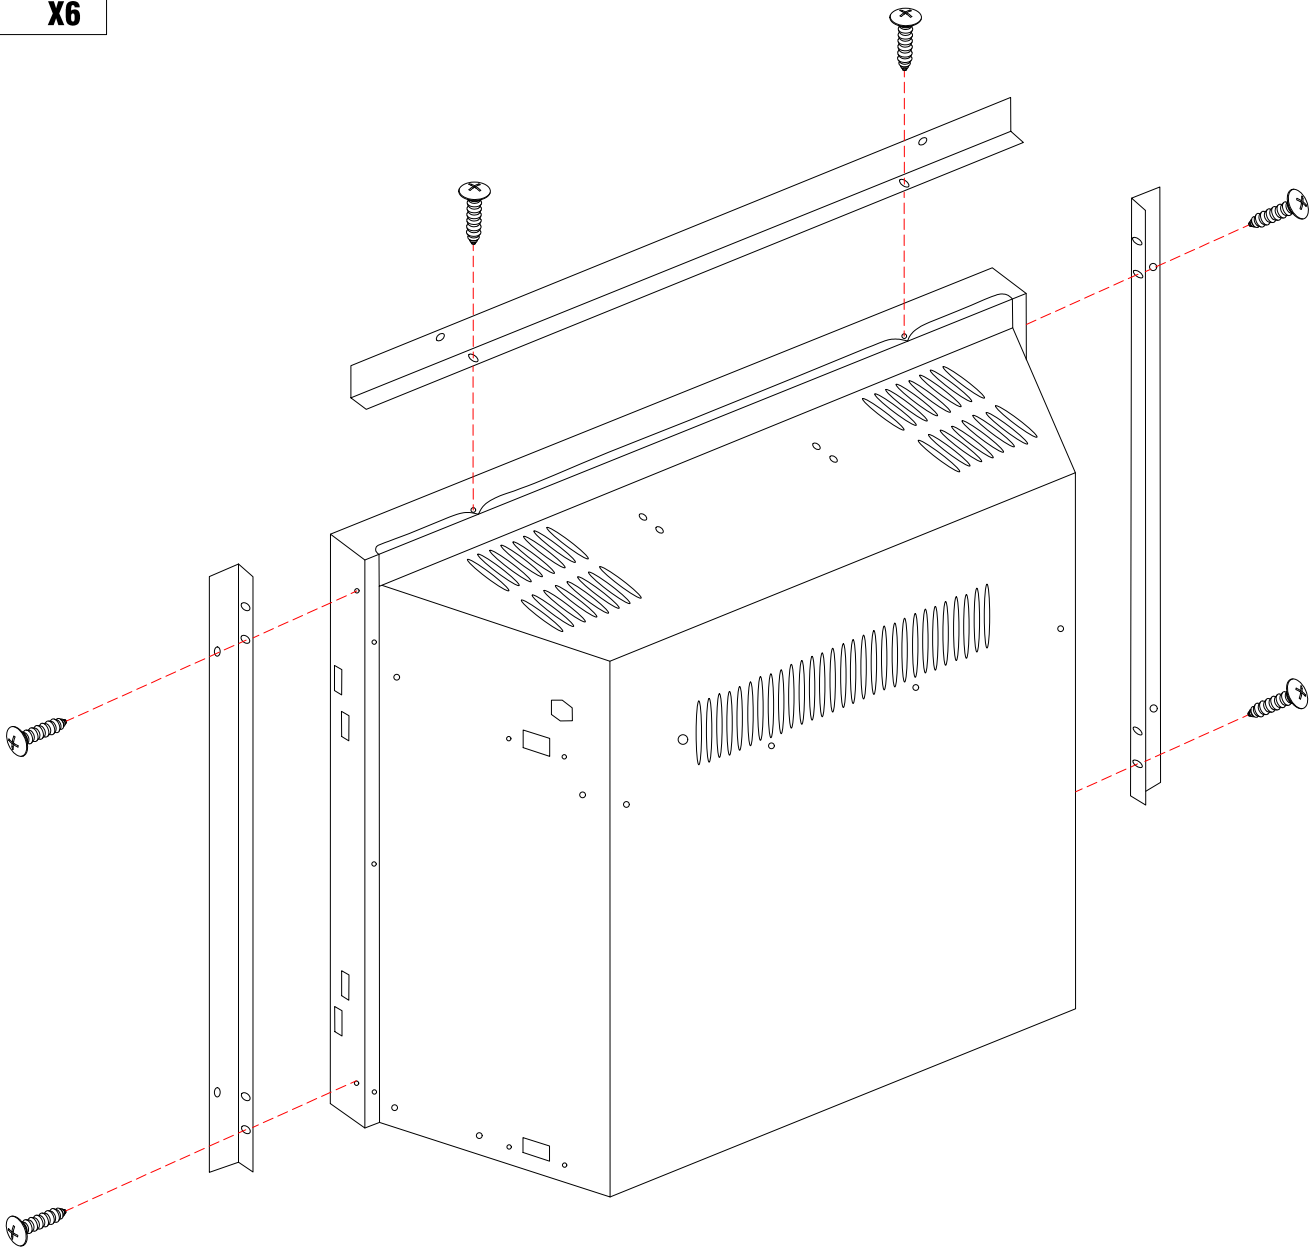

STEP 19



OPTION 2: ELECTRIC FIREPLACE INSERT

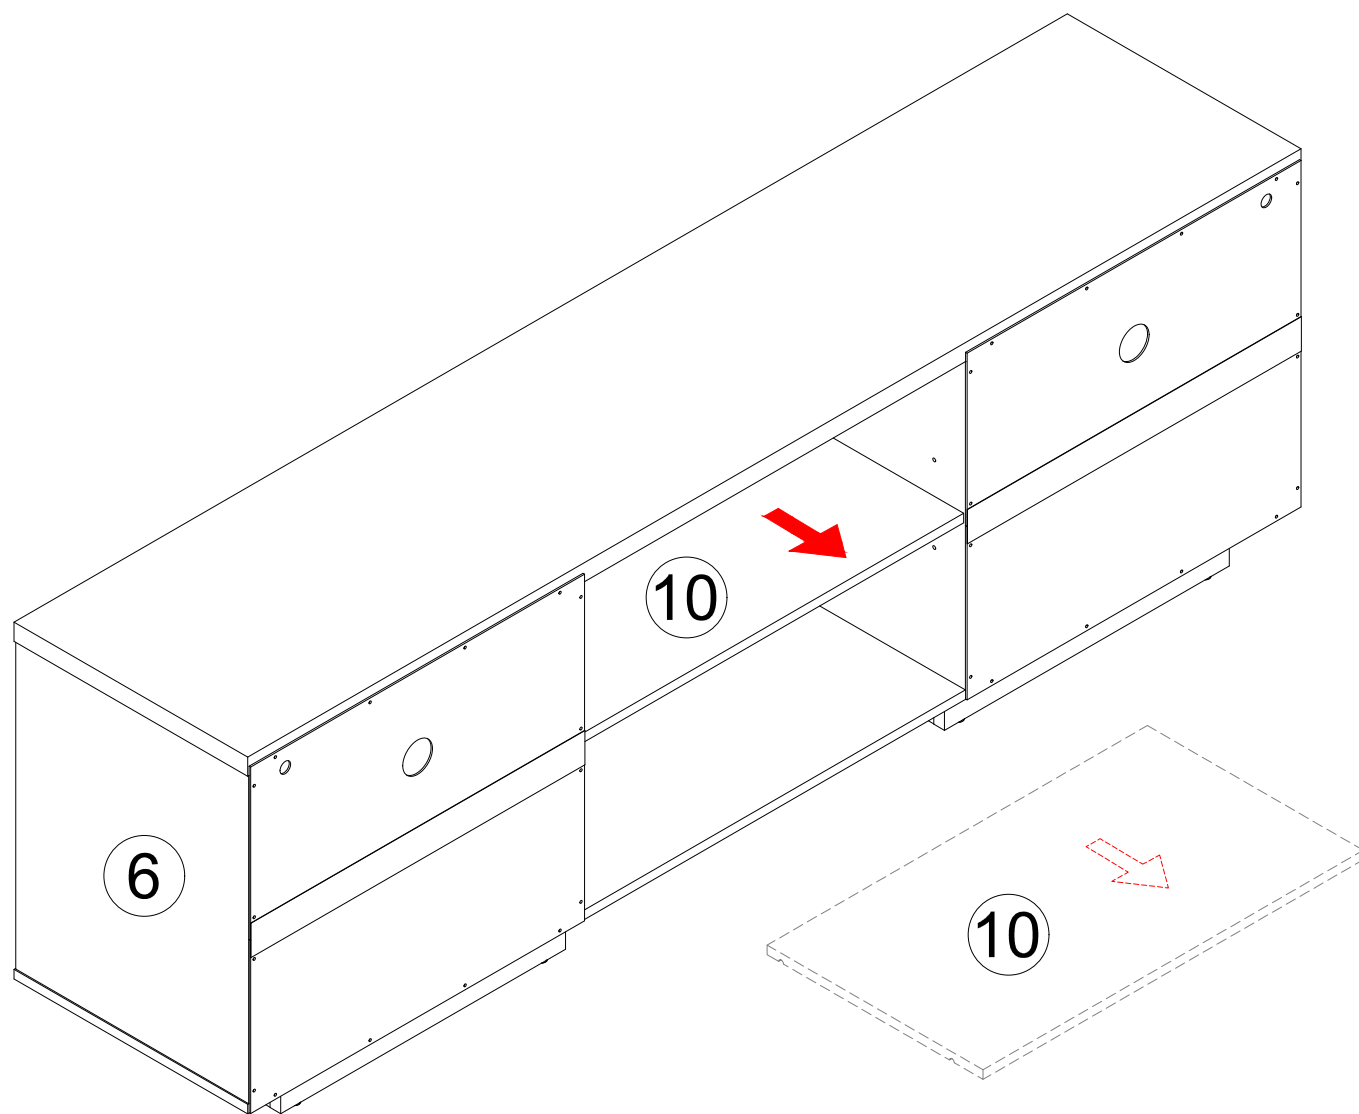

Remove the middle adjustable shelf (10).

STEP 20

OPTION 2: ELECTRIC FIREPLACE INSERT

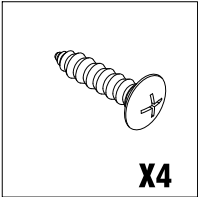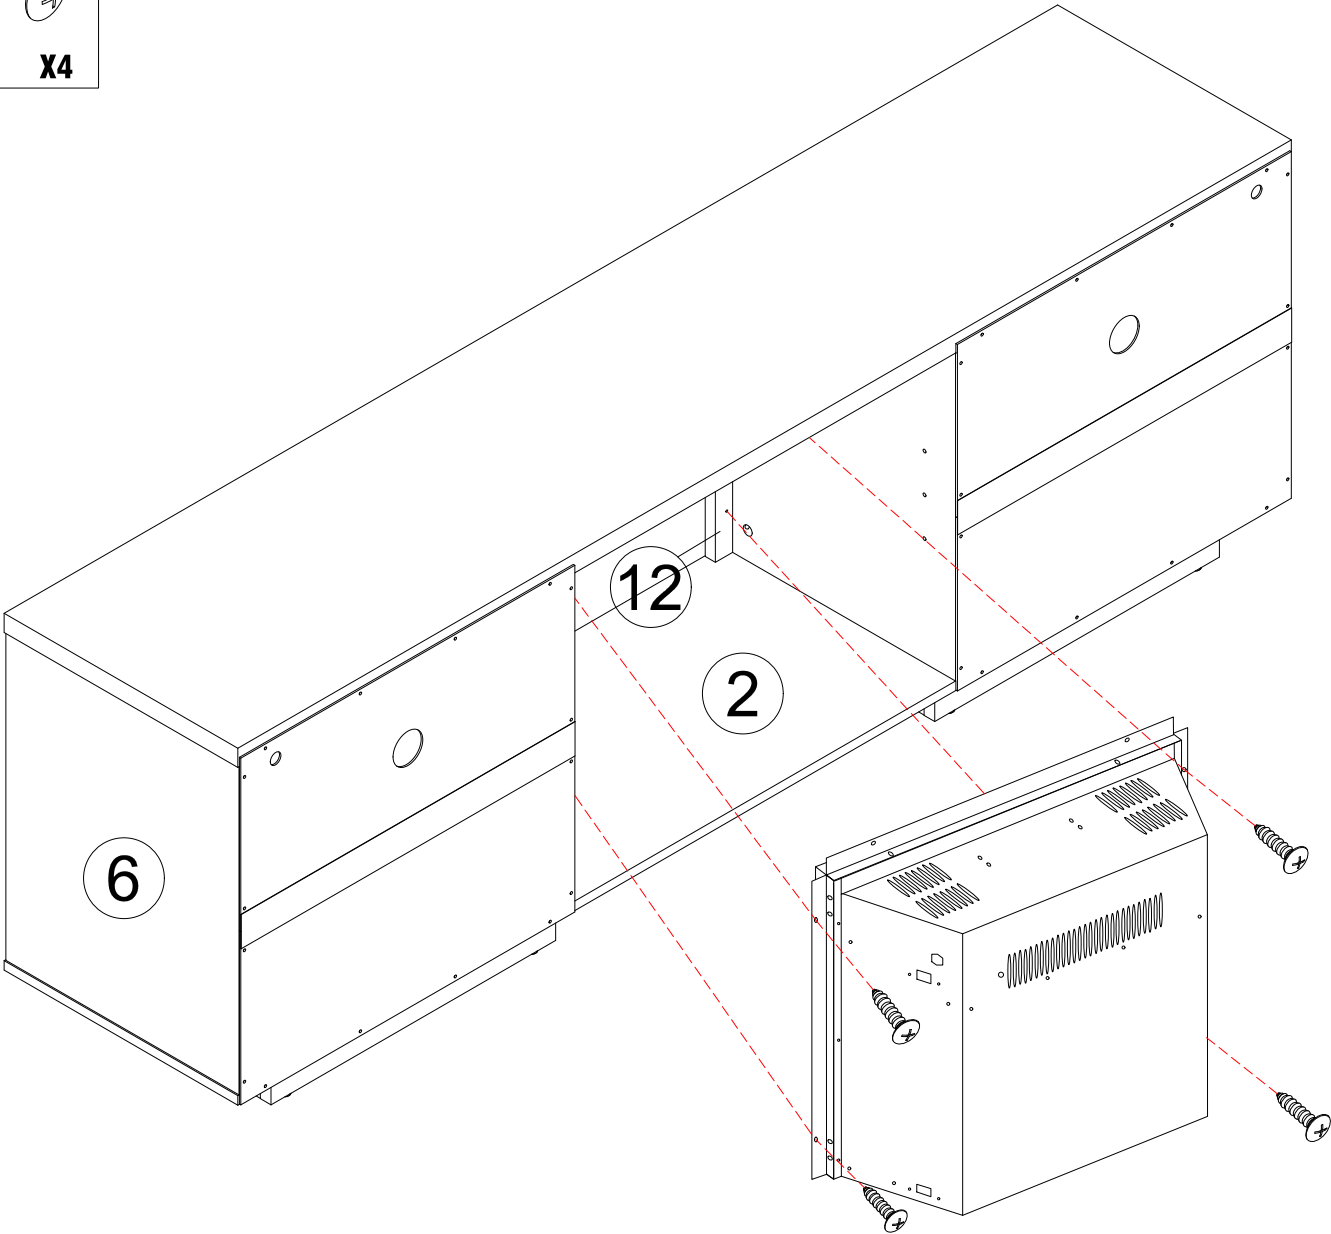

Tilt the heater insert and rest it on Bottom Panel (2). Gently push it into position, then secure it with the four wood screws shown.