

# *Oil Painting Cat House Installation Instructions*

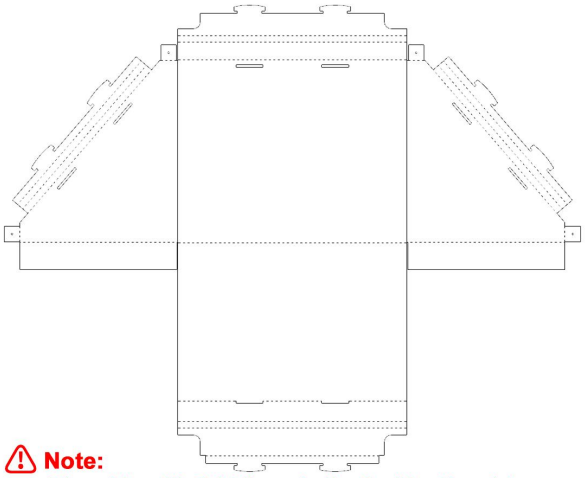

⚠ **Note:**
The side with fold lines is the inside; the side without fold lines is the outside.


## Step 1

Take out the cardboard and fold all the joint edges inward as shown in the diagram.

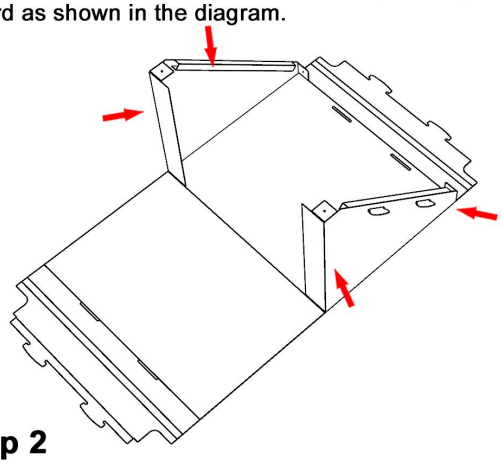


## Step 2

As shown, fold the left and right sides of the cardboard inward and insert the tabs into the slots to secure them.

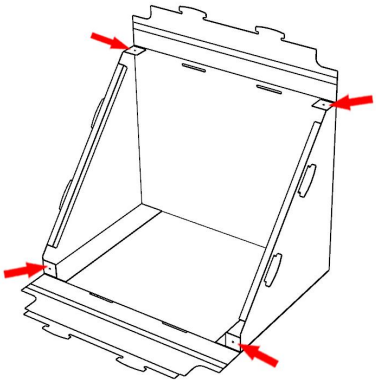


## Step 3

Fold the upper part of the cardboard inward again as shown. Then, apply double-sided adhesive to the four square areas on the inside.

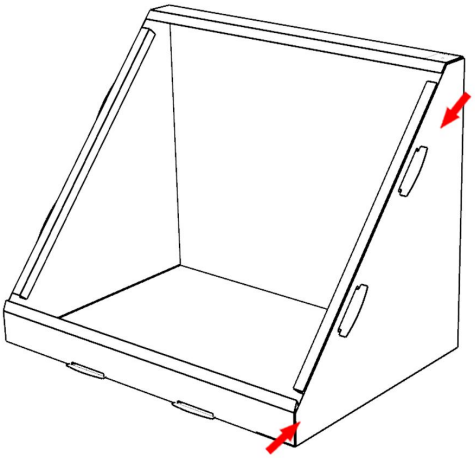


## Step 4


Fold the lower part of the cardboard upward and secure it with double-sided adhesive. Then, insert the tabs of the upper and lower flaps into the inner slots to complete the assembly.

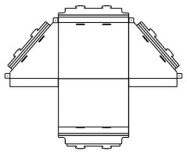


Cardboard Box × 1 PC

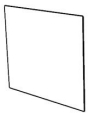


Background Panel × 1 PC

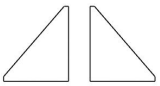

Background Side Panels (Pair) × 1 SET



Corrugated Pad × 1 PC

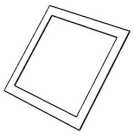

Picture Frame × 1 PC



Double-Sided Adhesive × 12 PCS



Transparent Tape × 4 PCS

**Parts List**