



SKU:KHD-BTJ-MBF02
KHD-BTJ-MBQ02

Lot No.: YJX-No.2

Tips!



Check all the components & screws before assembly.**Do not install in case part is missing,contact us to get.**Send email with your question to support@vecelo.com.We will resend within 24 hours.

Return Policy


We believe you will absolutely love your new item. But if for some reason you want to return, please contact us directly before you decide to return your product. Our customer service organization can answer most concerns and assist you with any questions you may have about your new item, please email us first at: support@vecelo.com.

The item must be returned within 30 days of delivery for a full refund. The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories.

Trouble shooting:

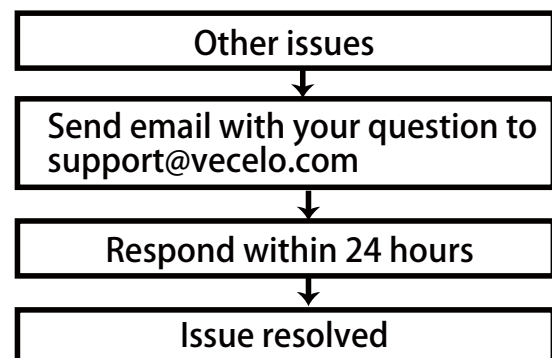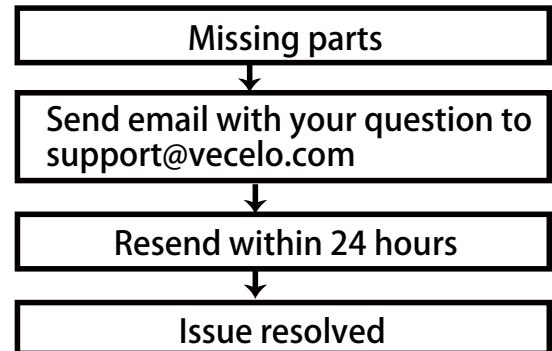


We control manufacturing and distribution ourselves, ensure the quality

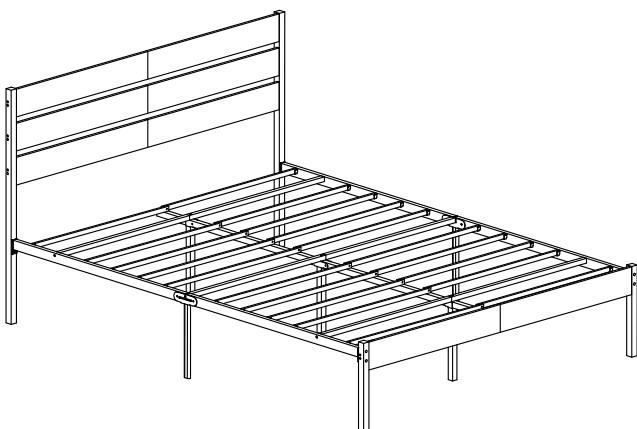











Item Description: Bed Frame

Model NO: YJX-No.2






Easy assembly by following step 1、step 2、step 3...

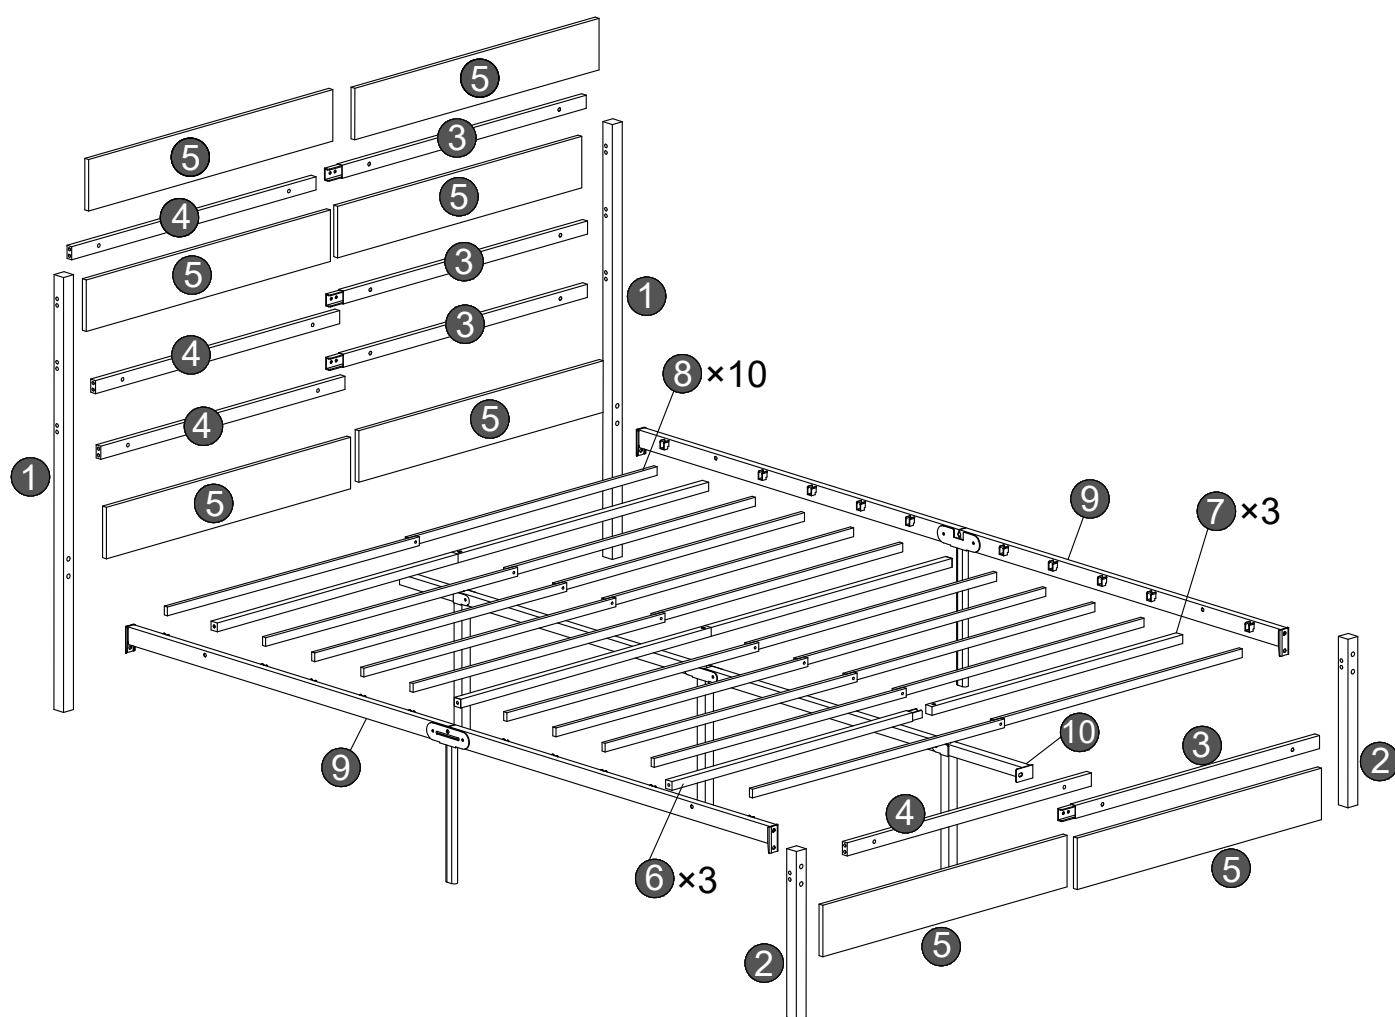

Components

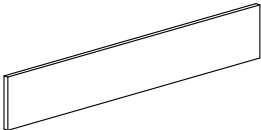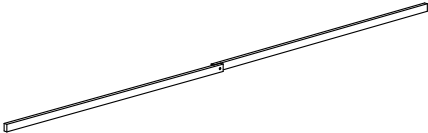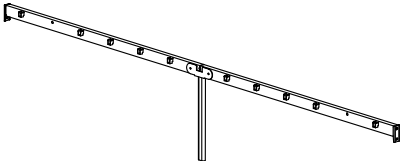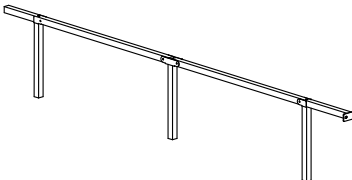1		2PCS
2		2PCS
3		4PCS
4		4PCS
5		8PCS
6		3PCS
7		3PCS
8		10PCS
9		2PCS
10		1PC

Components

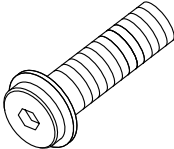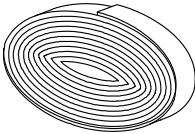A		M6×55mm	19PCS + 1PC
B		M6×45mm	6PCS + 1PC
C		M6×23mm	16PCS + 1PC
D		M6×12mm	7PCS + 1PC
E		M8×45mm	8PCS + 1PC
F		4×4mm	1PC
N			1PC

step 1

C



M6×23mm

12PCS

D



M6×12mm


6PCS

F




4×4mm

1PC

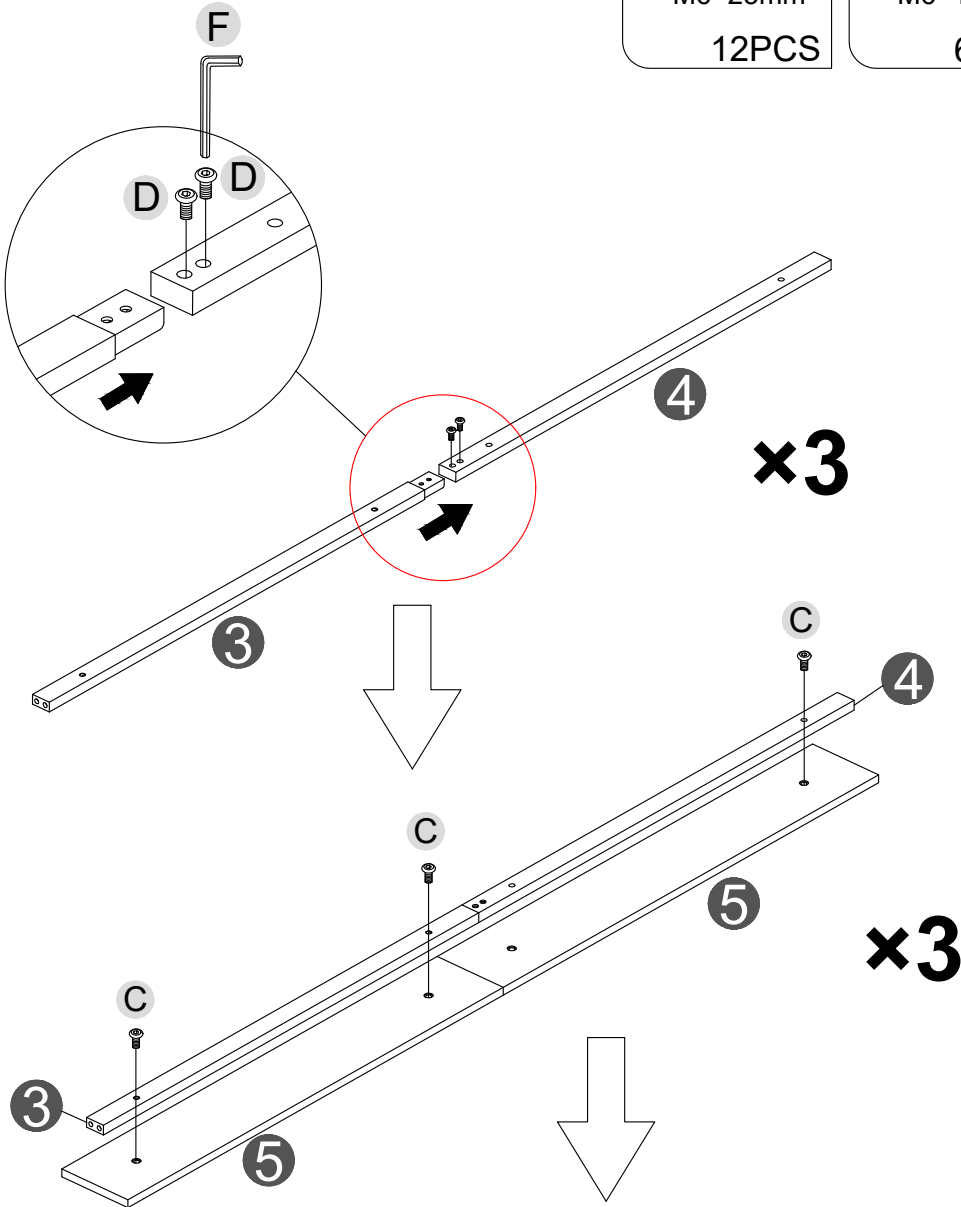


Two No. 5 boards are pressed flat without gaps, and then tightened with C screws.

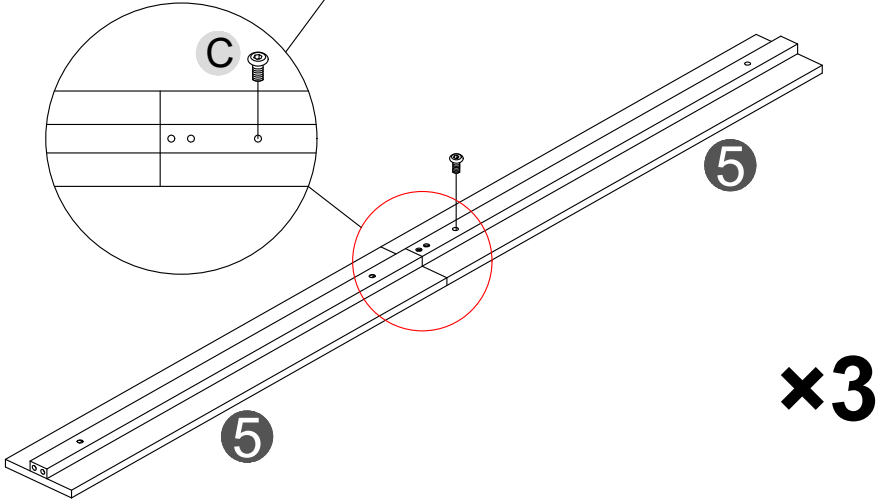

step 2


A



M6×55mm

12PCS

C



M6×23mm



4PCS

F



4×4mm

1PC

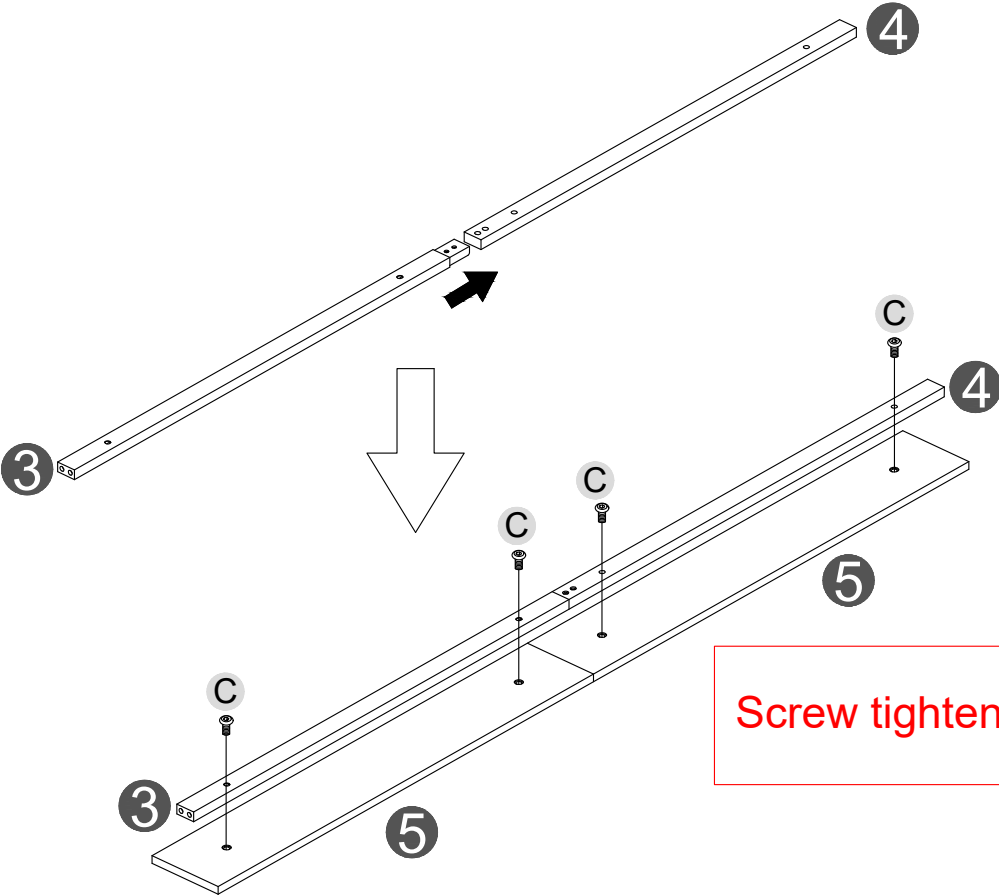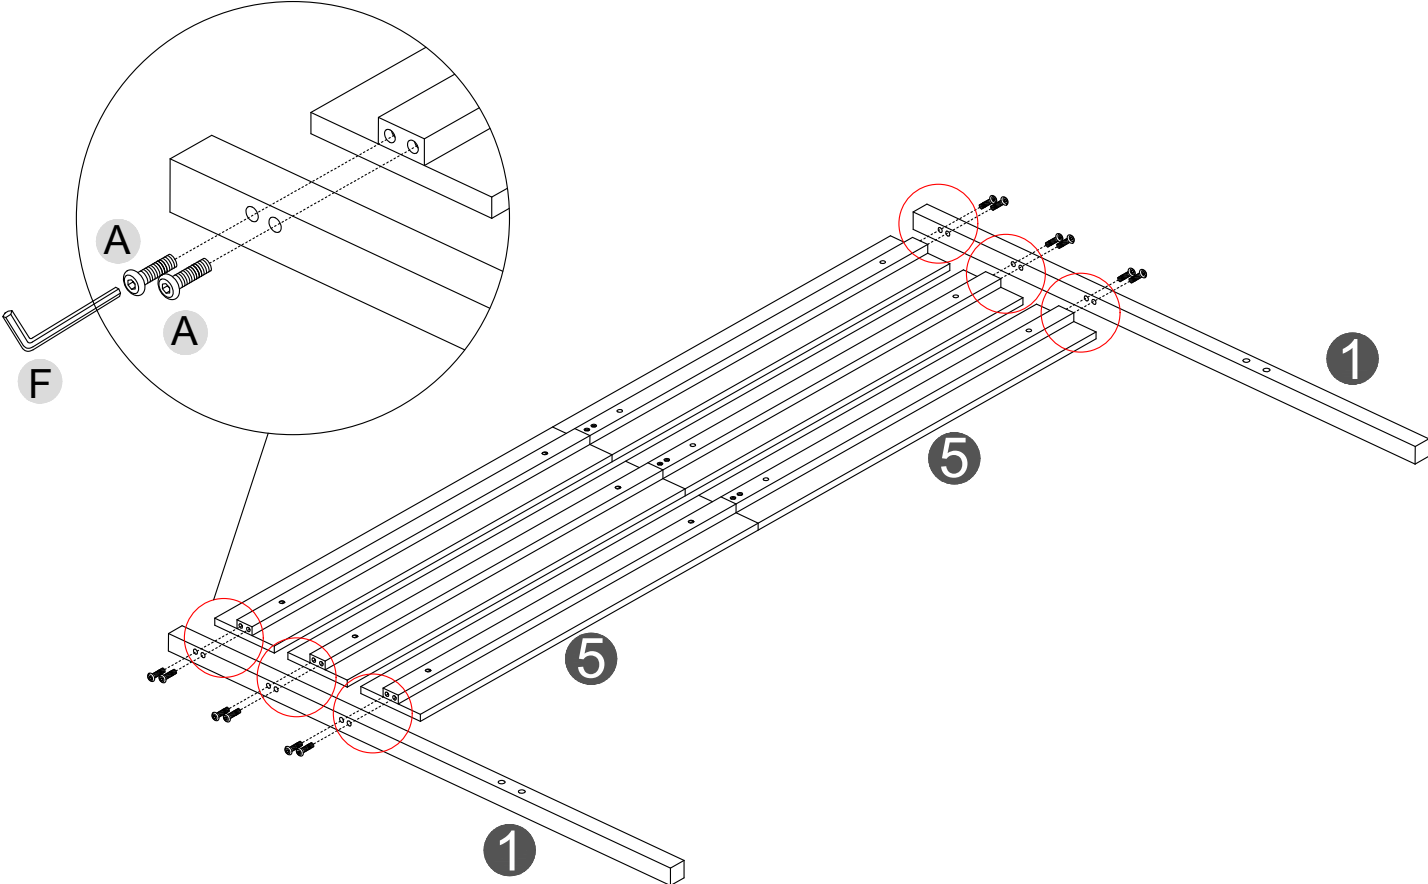

step 3

A



M6×55mm



4PCS

F



4×4mm

1PC

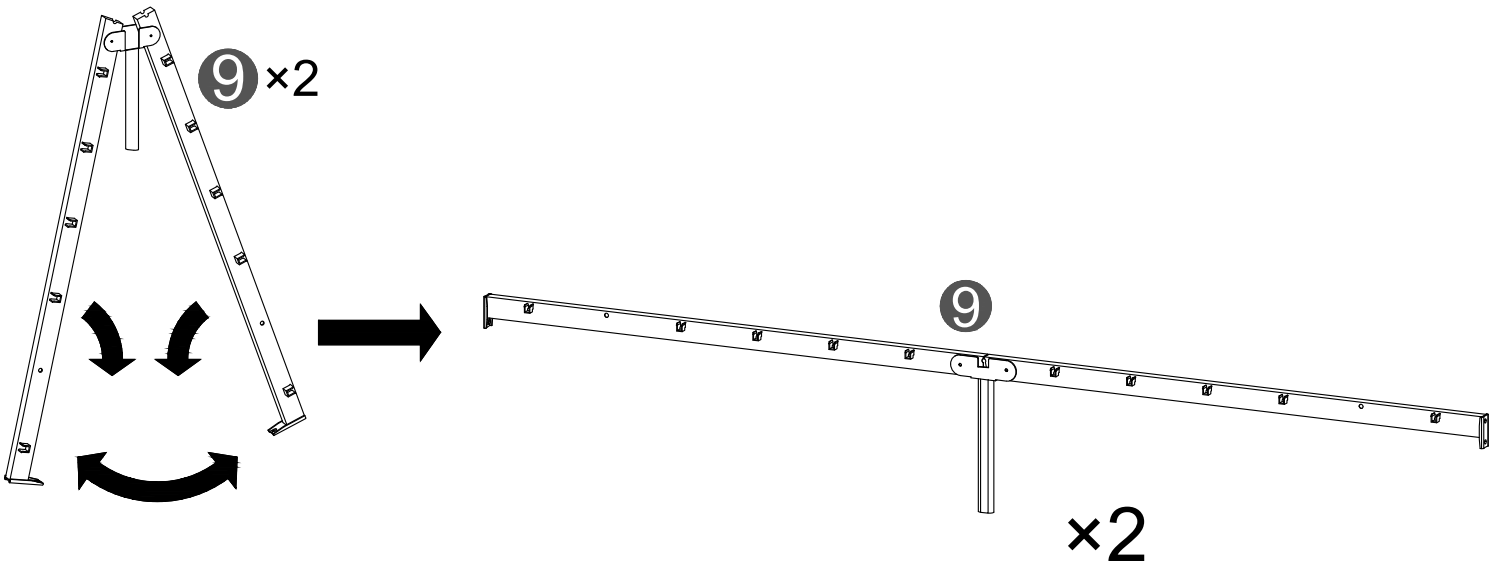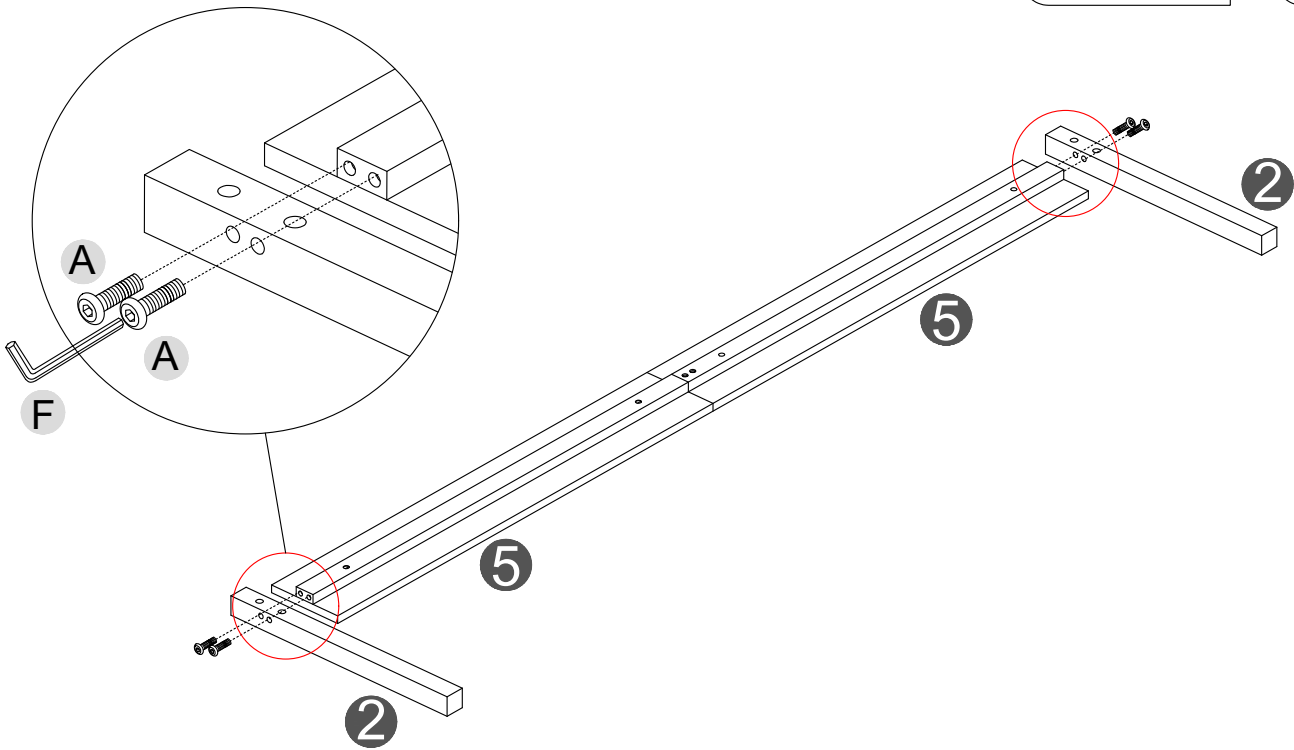

step 4


E



M6×45mm


8PCS

F



4×4mm

1PC

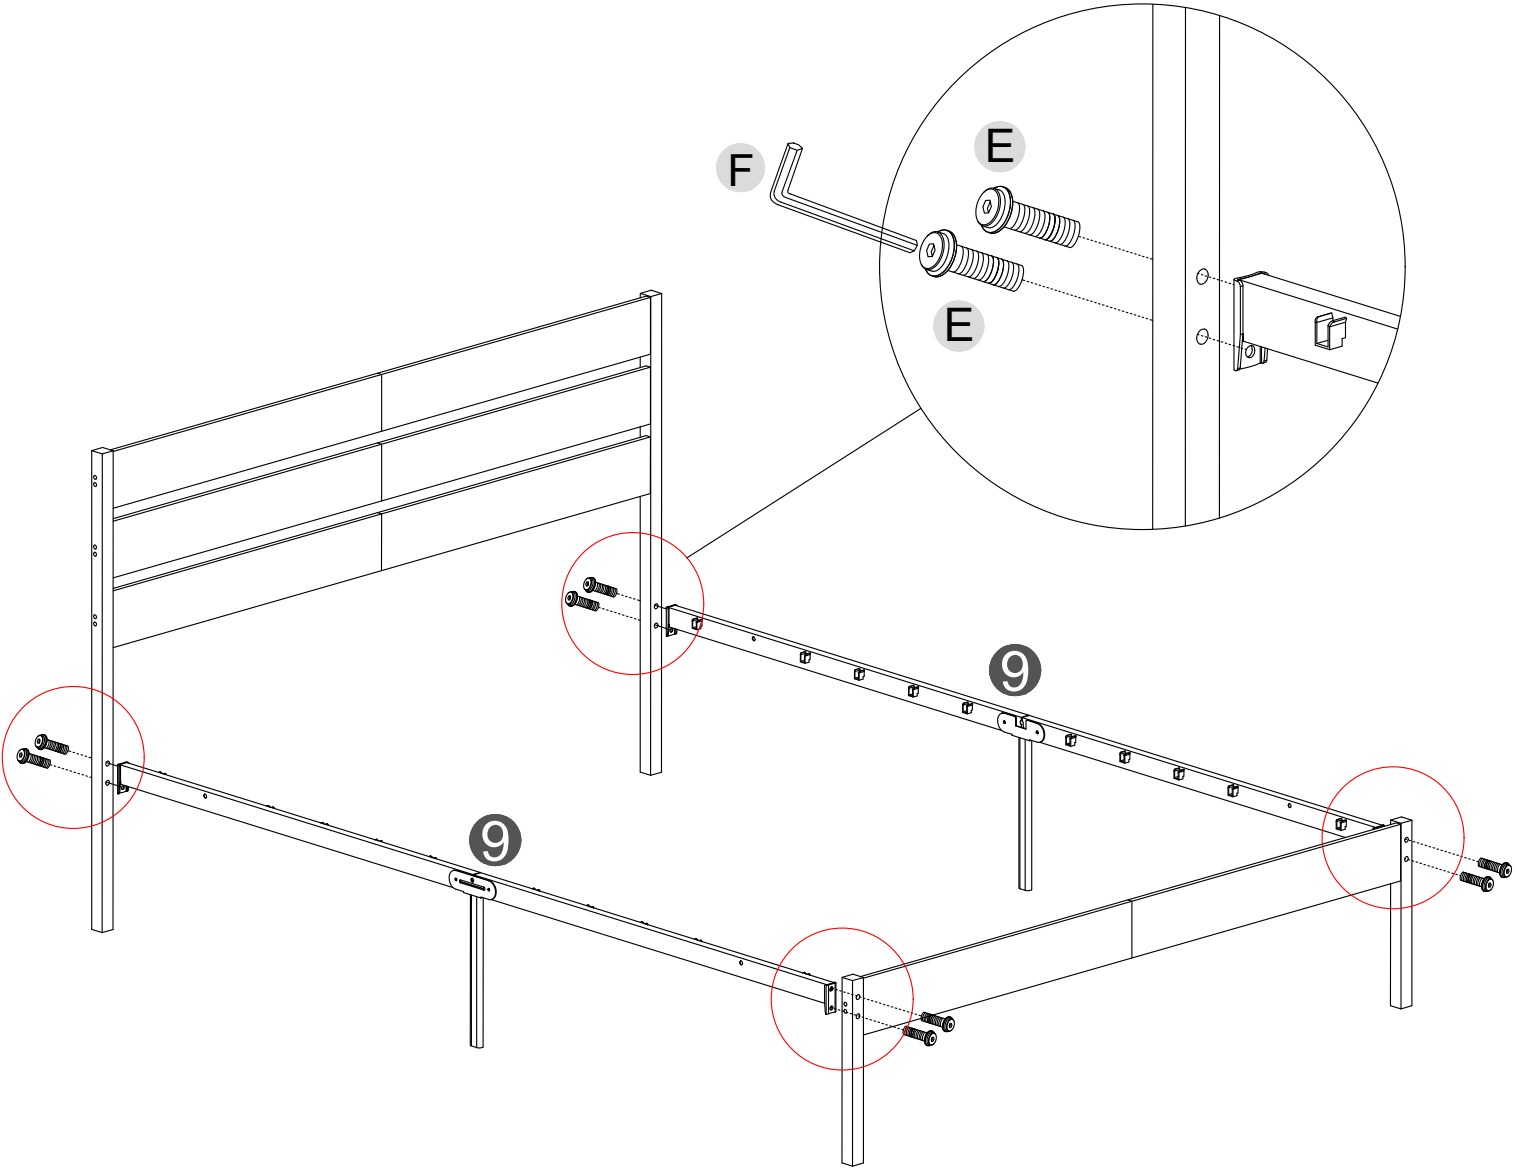

step 5

B



M6×45mm




6PCS

F



4×4mm

1PC

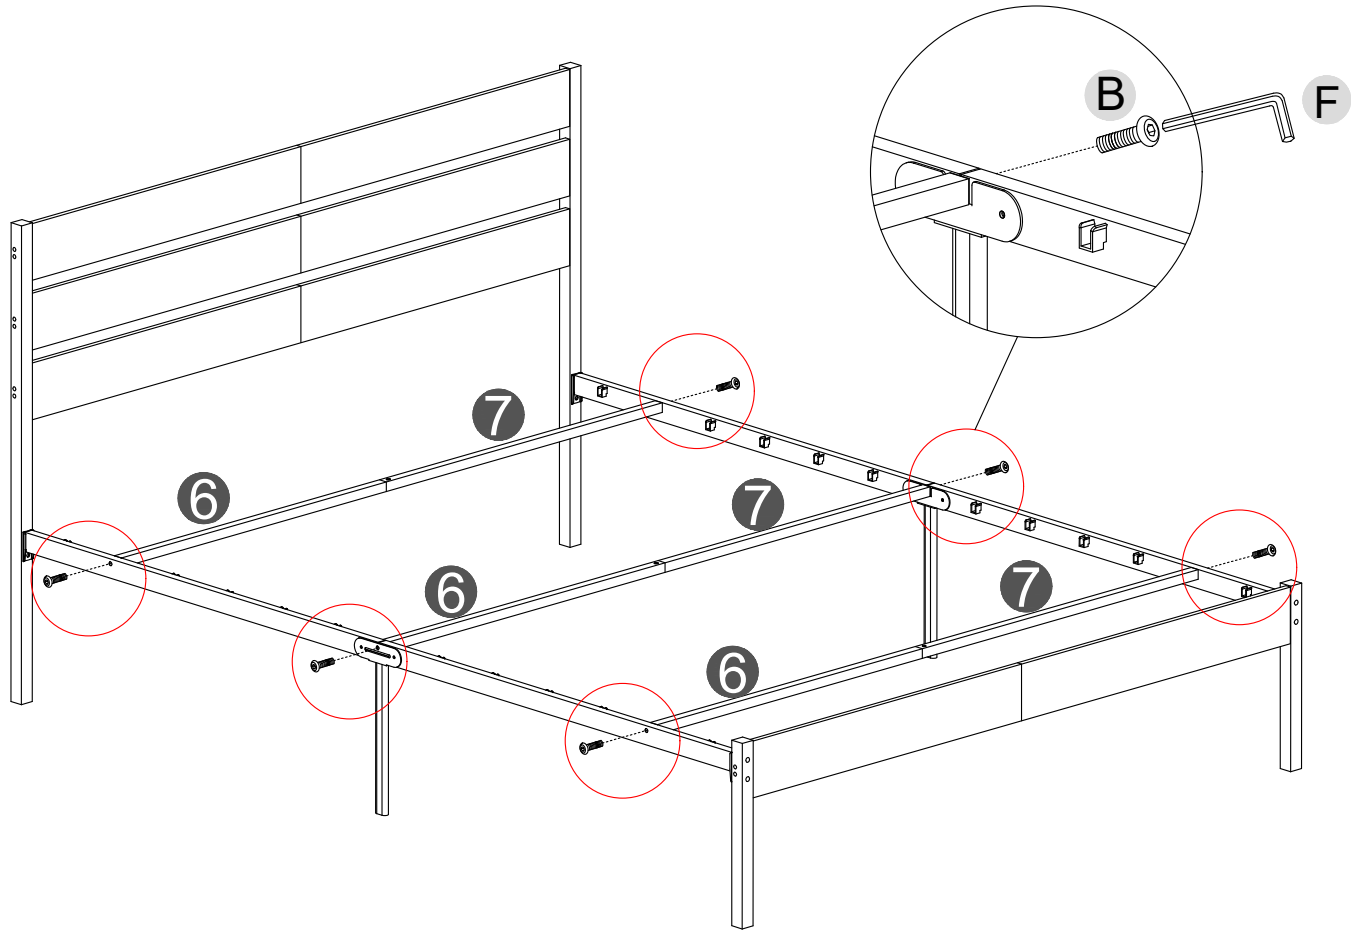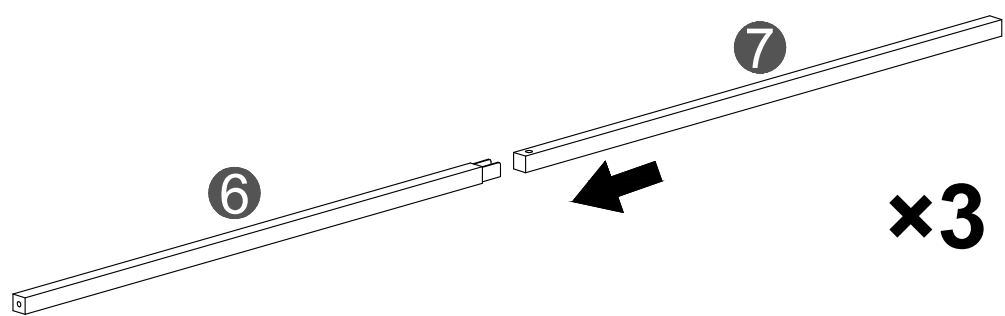

step 6

A



M6×55mm


3PCS

F



4×4mm

1PC

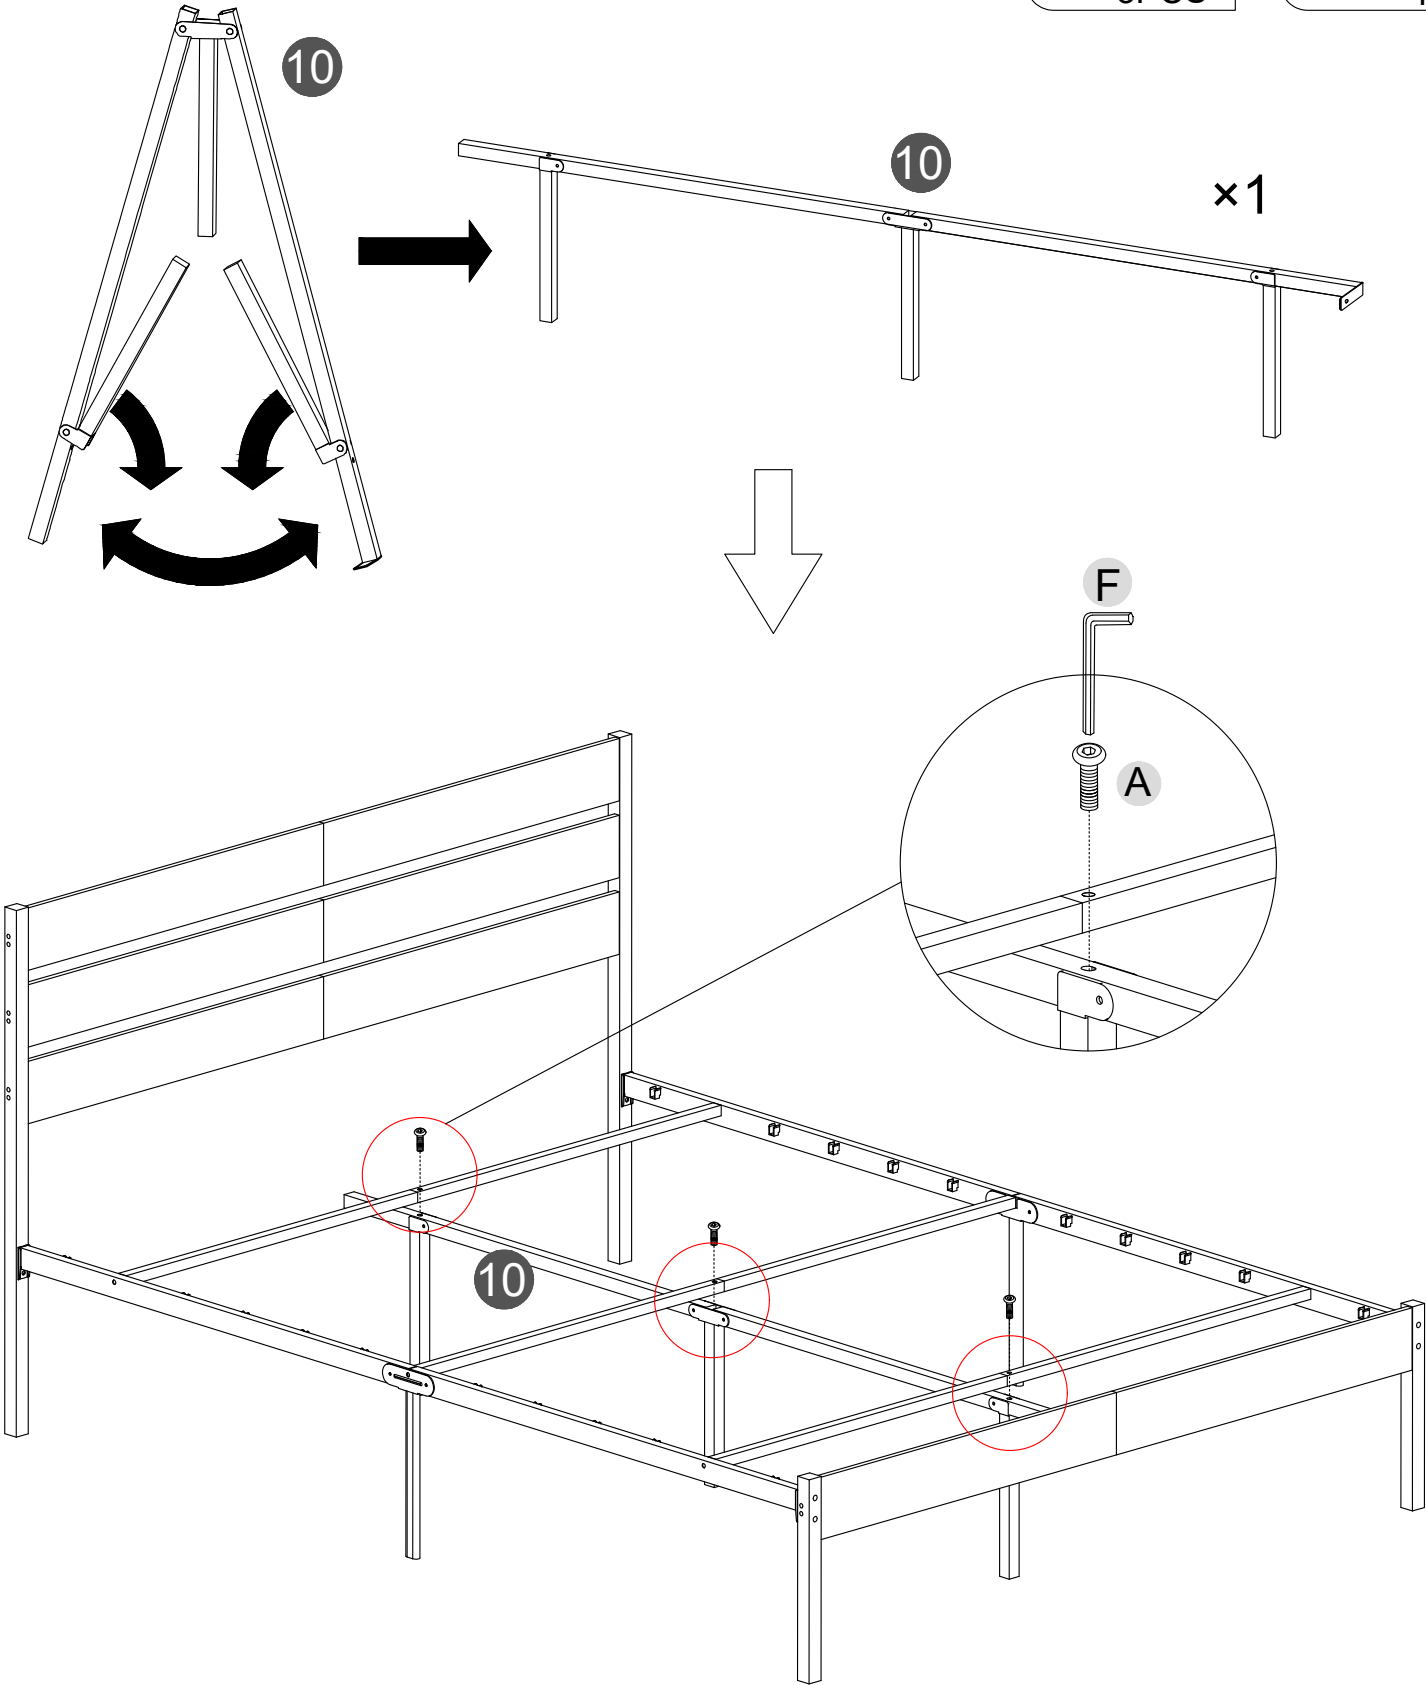

step 7

D



M6×12mm

1PC


F




4×4mm

1PC


The two pieces of board numbered 5 were flattened.
No gaps should be left, and then tighten everything up.
Secure with D-type screws to a level of 100%.

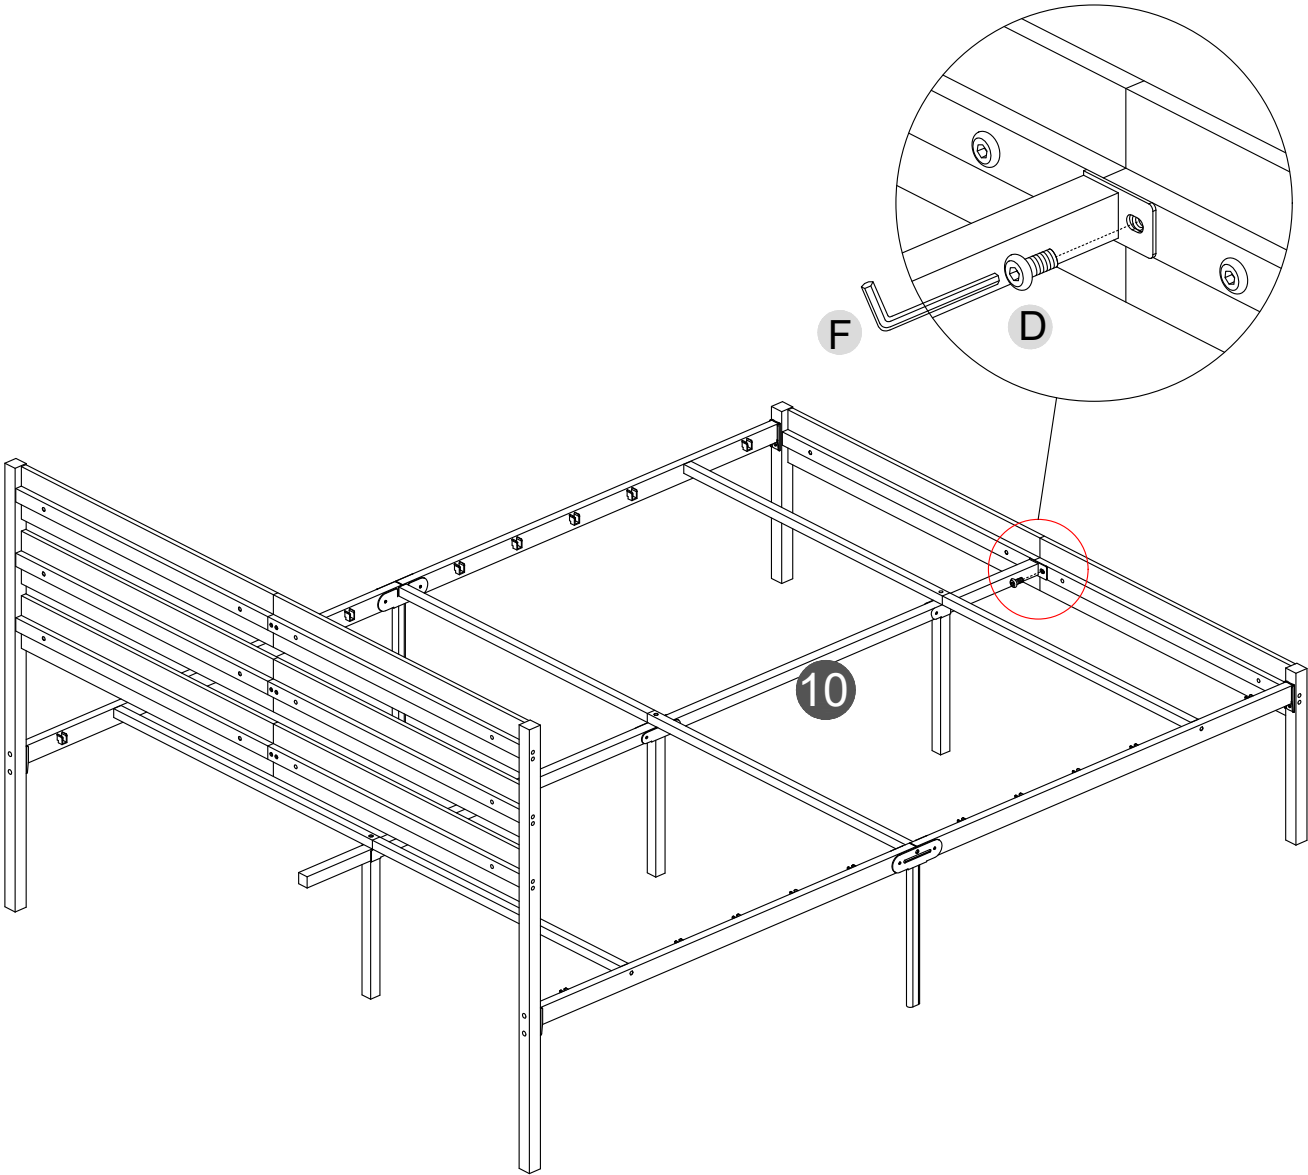


step 8

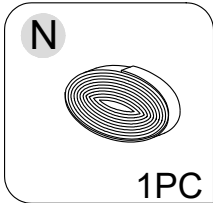


To prevent frictionnoise, unroll part N and fitit on part 10 ,the lenght of part N can cut as you will.

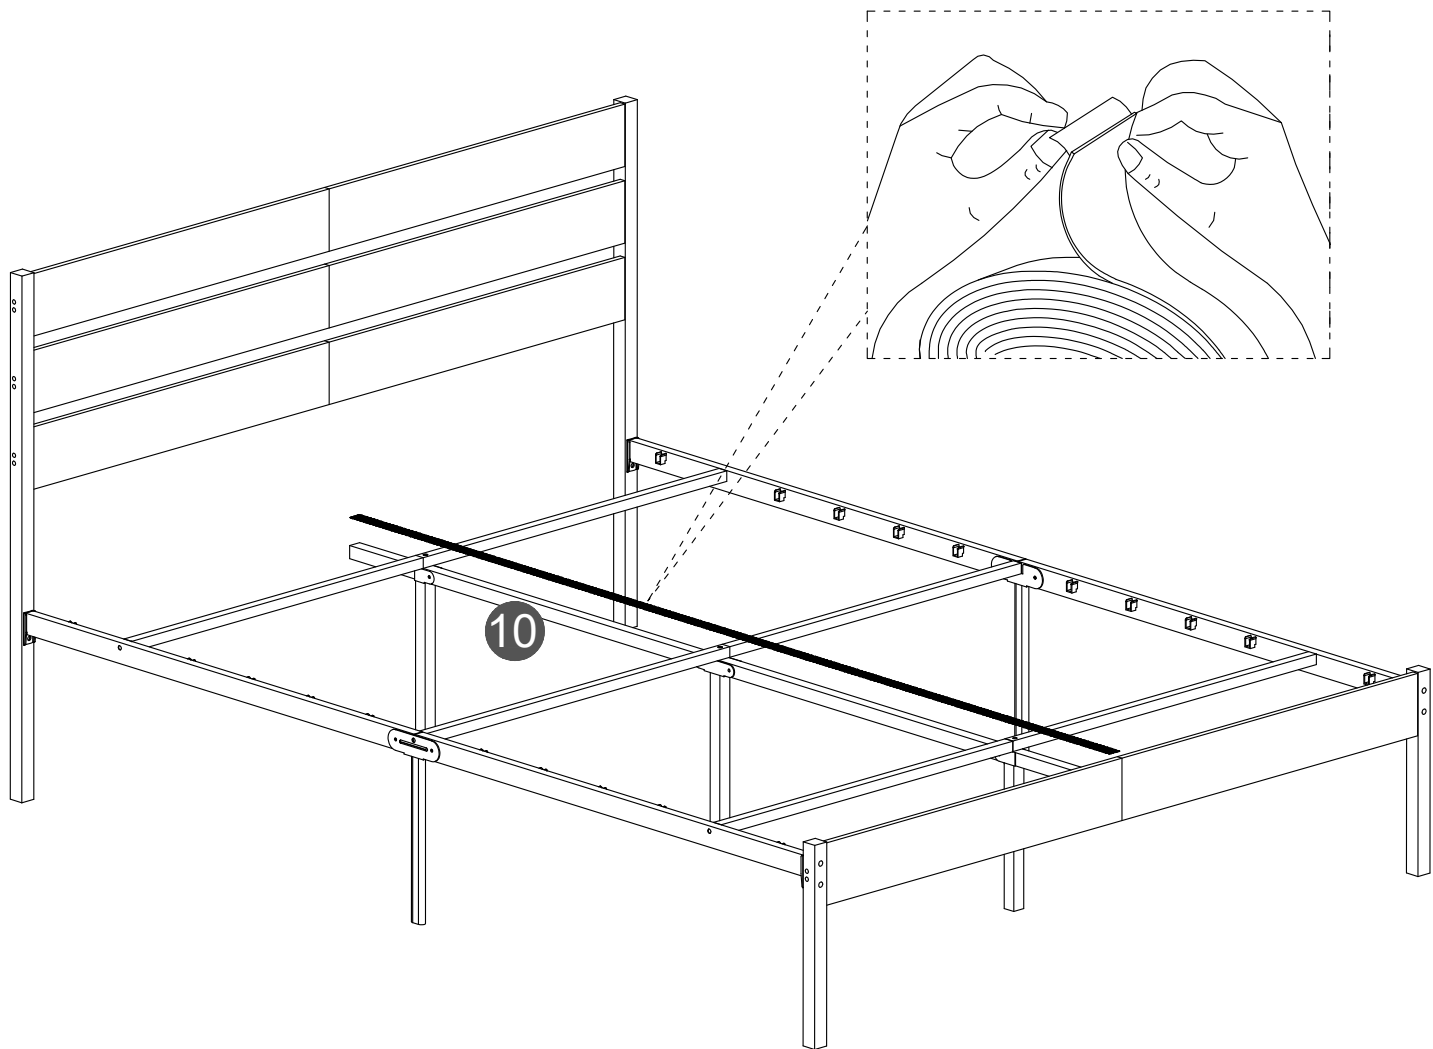

step 9

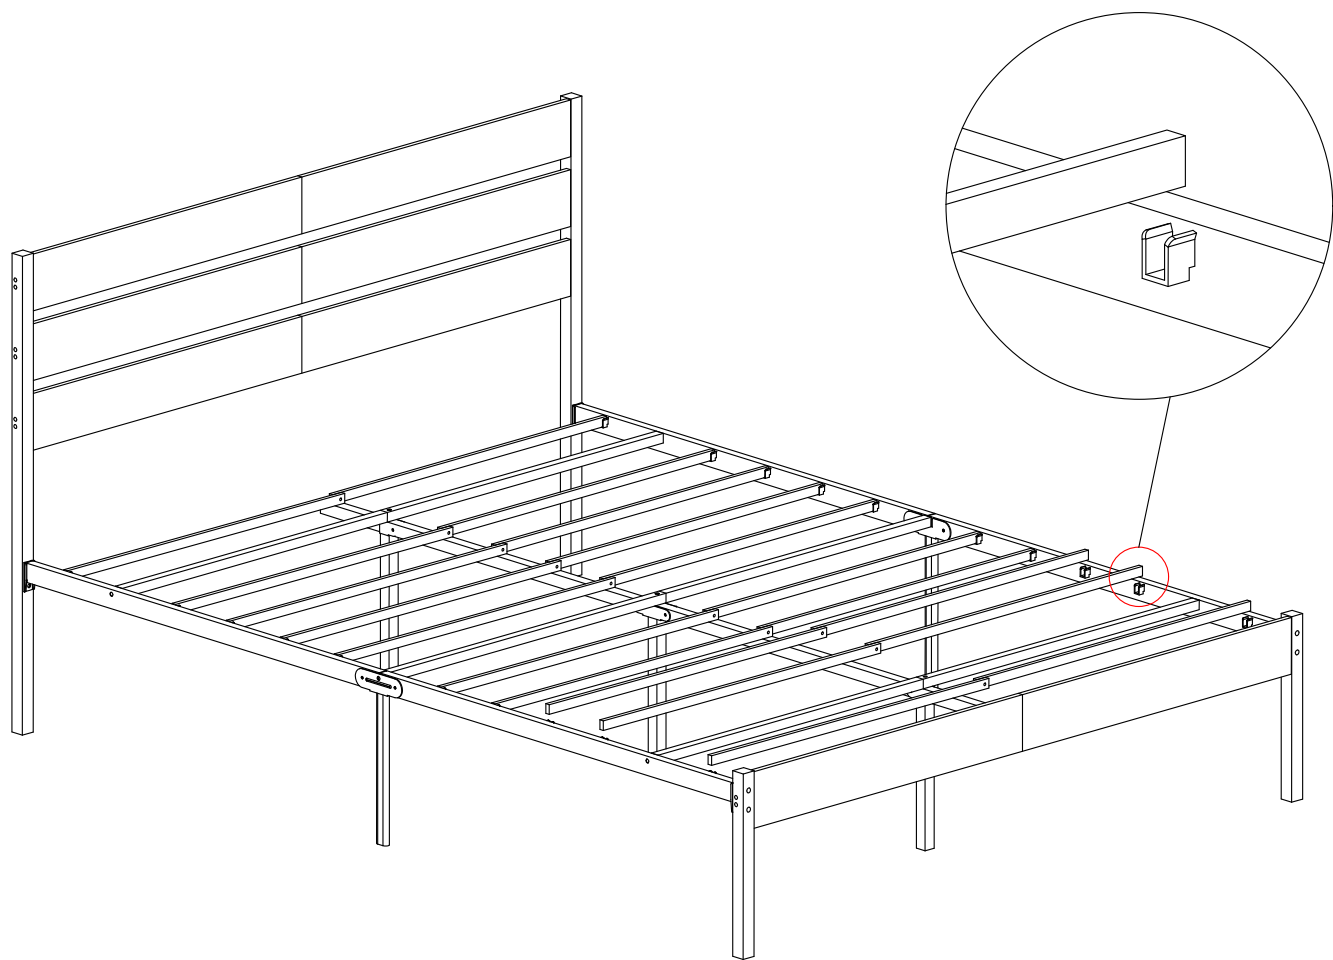

All screws should be securely tightened to 100%.

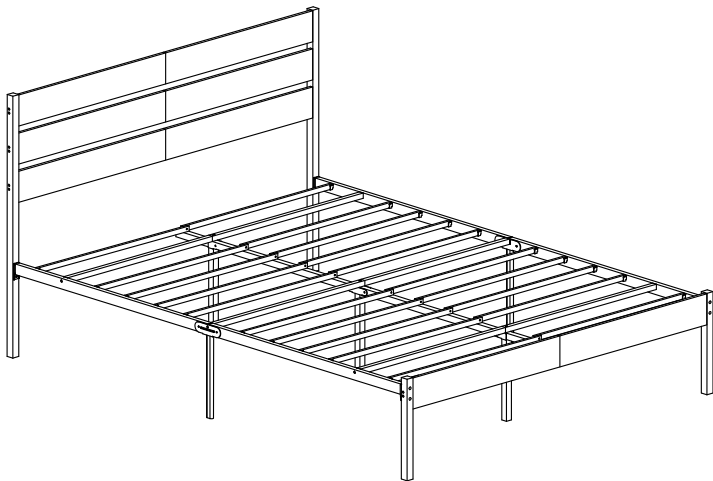

Bed Frame

How to find us?

Email: support@vecelo.com

Website: www.vecelo.com