
American Standard

BERWICK™ ON/OFF VALVE TRIM

Installation Instructions

T430.700 T430.702

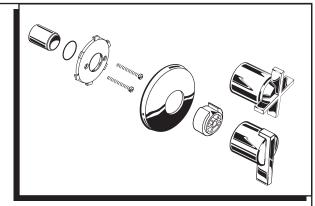

Certified to comply with ANSI A112.18.1M ASSE 1016

1016


M965001


Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

ROUGHING-IN DIMENSIONS R701 R711 1/2" NPT 3/4" NPT 3-1/8" 1-3/8" - 2-3/8"-2-3/8" ± 1/2" (79mm) (35mm-59mm) (60mm±13mm) 3/4" (19mm) NPT 2-3/4" 2-3/4" MALE THREADED (70mm) (70mm) 2-1/8" 2-1/8" 1/2" (13mm) NPT -OUTLET (52mm) (52mm) FÉMALE DIA. HÓLE DIA. HOLÉ OUTLET 2-1/2" (64mm) 2" 2-1/8" (51mm) (55mm) 1-1/2" 3/4" NPT (38mm) UNION INLET FEMALE THREADED **I FVFR** 1/2" - 14 NPT INLET **CROSS** HANDLE OR **HANDLE** 5/8" O.D. **FINISHED** COPPER SWEAT WALL **FINISHED** WALL

Recommended Tools







Phillips Screwdriver

CARE INSTRUCTIONS:

- To keep your new faucet looking new, please follow these simple care instructions:
 - **DO:** Simply rinse the faucet clean with clear water.
 - Dry the faucet with a soft cotton cloth.

DO NOT:

- Do not use any abrasive cleaners, cloths, or paper towels.
- Do not use any cleaning agents containing acids, polish abrasives, or harsh cleaners or soaps.
- Regular and routine cleaning will reduce the need for heavy cleaning and polishing. If heavy cleaning is required, the following procedures are recommended:


- Remove as much surface dirt and film using clear water and soft cotton cloth (as described above).
 - Use any of the following to remove tough surface film and build-up:
 - Mild liquid detergents
 - Clear ammonia free liquid glass cleaners
 - Non-acidic, non-abrasive gentle liquid or fully dissolved powder cleansers mixed according to manufacturers directions.
 - Non-abrasive liquid polishers
- Once clean, rinse faucet again with clear water to thoroughly remove cleaner or polish and blot dry with a soft cotton cloth.

Failure to follow these care instructions may damage the Faucet's finish.

2-3/4" (70mm)


TRIM INSTALLATION

- Push VALVE COVER (1) over VALVE CARTRIDGE (2) until it is seated against the stop.
- Place ESCUTCHEON HOLDER (3) over VALVE COVER (1). Line up holes in ESCUTCHEON HOLDER (3) with THREADED TABS (4) on VALVE.
- Install MOUNTING SCREWS (5) through ESCUTCHEON HOLDER (3) and into THREADED TABS (4). Tighten SCREWS securely.
- Place ESCUTCHEON (6) over ESCUTCHEON HOLDER (3) and push evenly for a snap fit.

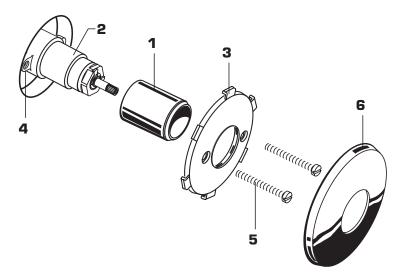

2 HANDLE INSTALLATION

- Install HANDLE ADAPTER (1) onto VALVE STEM (2).
- Install HANDLE SCREW (3) and tighten.
- Align HANDLE (4, 4a) and push onto HANDLE ADAPTER (1).
- Tighten SET SCREW (5) with HEX WRENCH (6) supplied with trim kit.

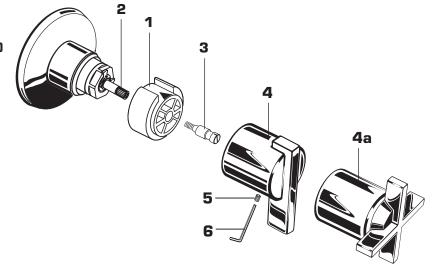

3 OPERATING THE VALVE

- Turn HANDLE into OFF position.
- Turn on water supplies, and check all connections for leaks.
- Operate HANDLE to flush water lines thoroughly.
- Turn handle OFF.

