

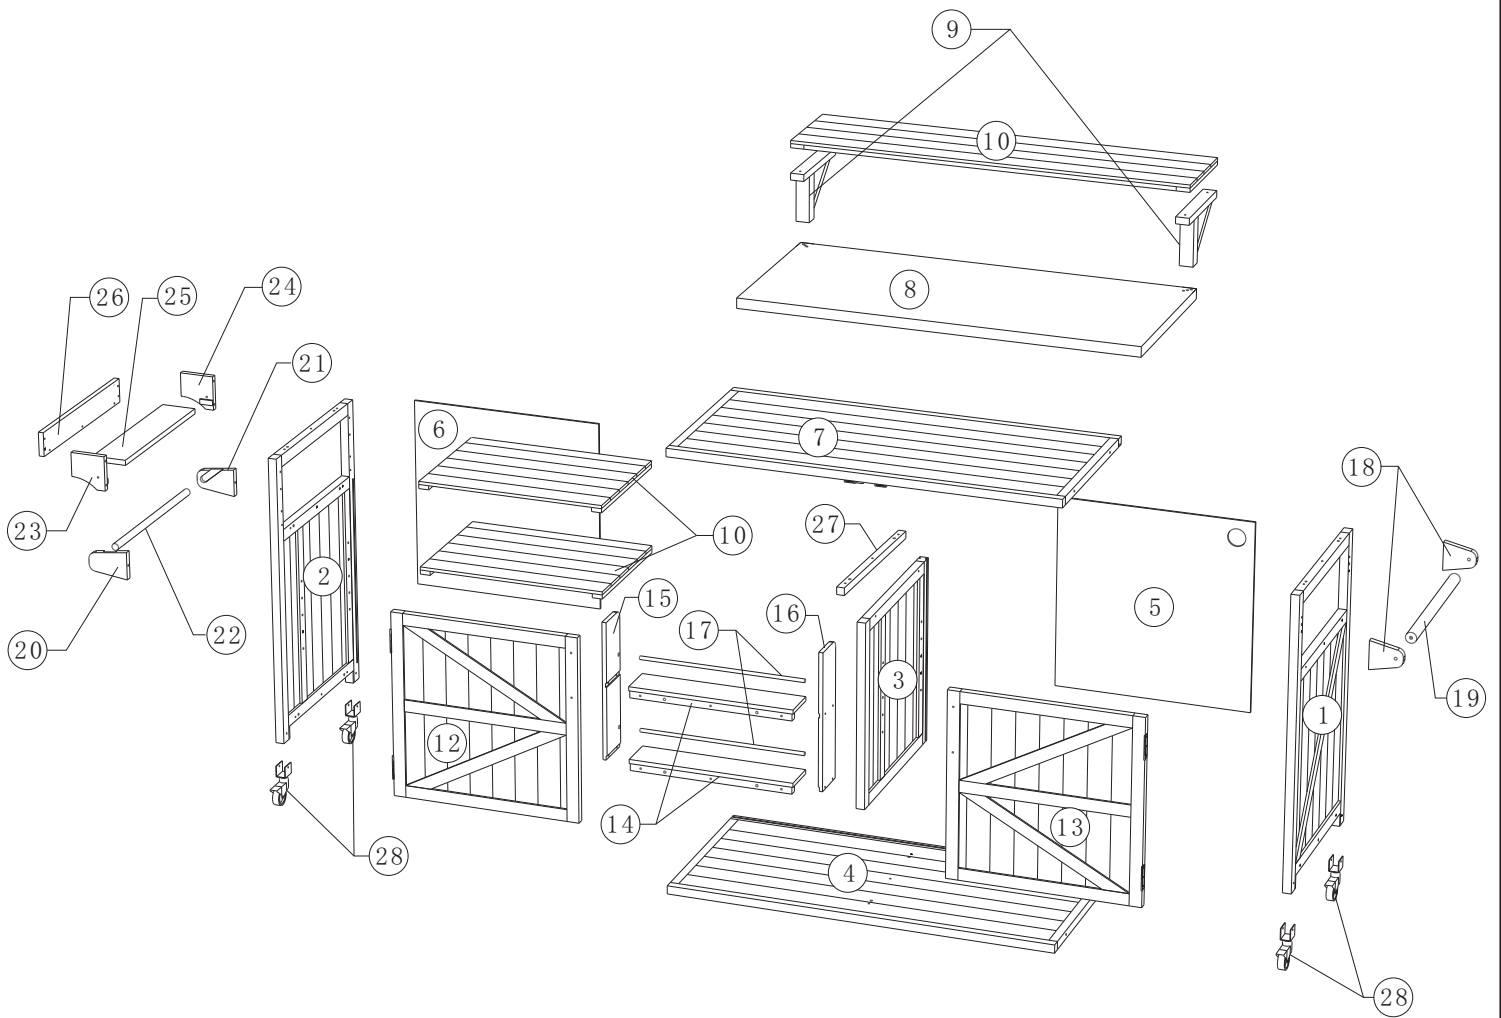
ASSEMBLY INSTRUCTION



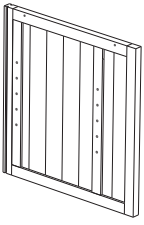
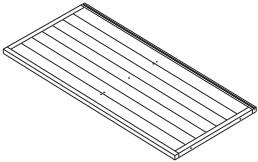
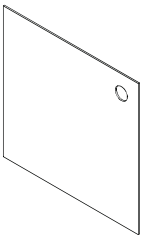
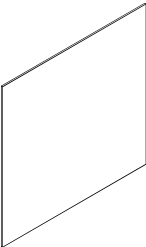
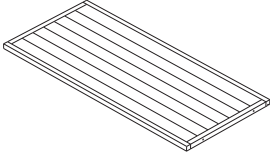
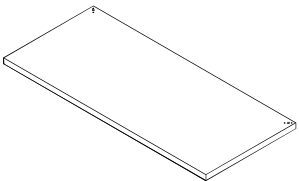
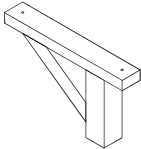
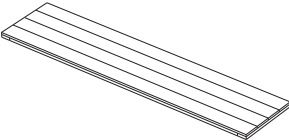
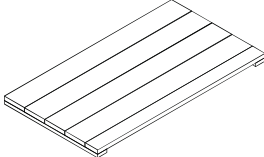
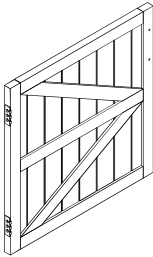
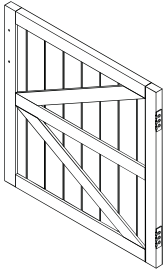



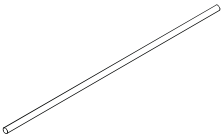

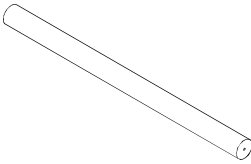


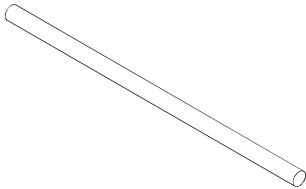
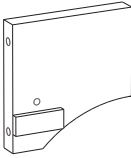
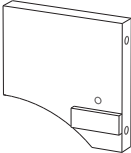
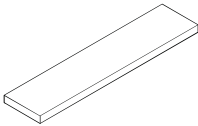


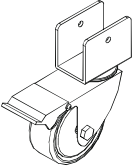


IMPORTANT NOTE:











- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THIS ITEM IS FULLY SET-UP.

DETAIL VIEW



<div>①</div>  <div>1PC</div>	<div>②</div>  <div>1PC</div>	<div>③</div>  <div>1PC</div>	<div>④</div>  <div>1PC</div>
<div>⑤</div>  <div>1PC</div>	<div>⑥</div>  <div>1PC</div>	<div>⑦</div>  <div>1PC</div>	<div>⑧</div>  <div>1PC</div>
<div>⑨</div>  <div>2PCS</div>	<div>⑩</div>  <div>1PC</div>	<div>⑪</div>  <div>2PCS</div>	<div>⑫</div>  <div>1PC</div>
<div>⑬</div>  <div>1PC</div>	<div>⑭</div>  <div>2PCS</div>	<div>⑮</div>  <div>1PC</div>	<div>⑯</div>  <div>1PC</div>
<div>⑰</div>  <div>2PCS</div>	<div>⑱</div>  <div>2PCS</div>	<div>⑲</div>  <div>1PC</div>	<div>⑳</div>  <div>1PC</div>
<div>㉑</div>  <div>1PC</div>	<div>㉒</div>  <div>1PC</div>	<div>㉓</div>  <div>1PC</div>	<div>㉔</div>  <div>1PC</div>
<div>㉕</div>  <div>1PC</div>	<div>㉖</div>  <div>1PC</div>	<div>㉗</div>  <div>1PC</div>	<div>㉘</div>  <div>4PCS</div>

HARDWARE LIST


 A M3.5*60(4PCS)	 B M3.5*50(33PCS)	 C M3.5*40(5PCS)
 D M3.5*35(4PCS)	 E M3.0*30(23PCS)	 F M3.0*16(16PCS)
 G M6*40(2PCS)	 H M4*35(4PCS)	 I M6*50(2PCS)
 J 28PCS	 K 2PCS	 L 8PCS
 M 1PC	 N 5PCS	 O 2PCS
 P 1PCS		

ASSEMBLY TOOS REQUIRED(NOT INCLUDED)







PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWERTOOLS

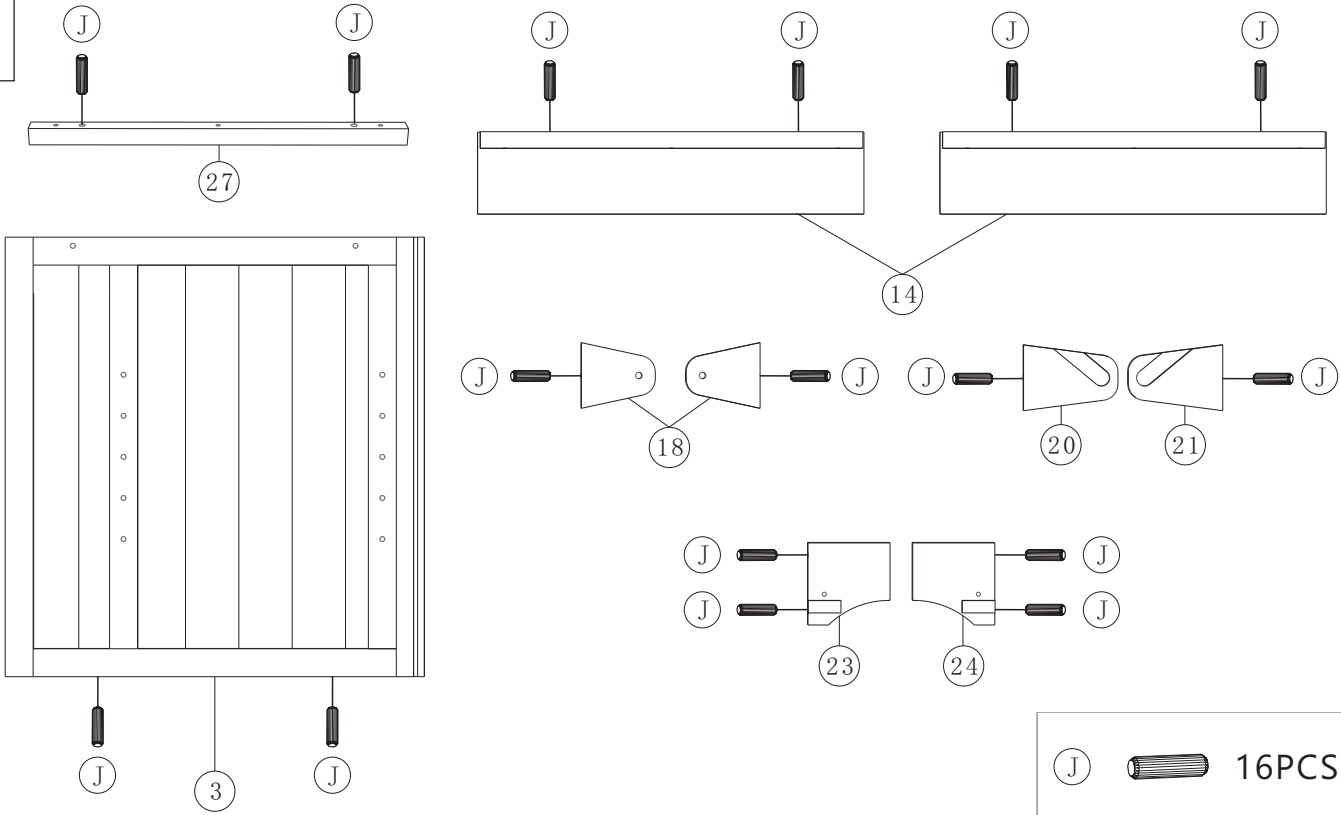1





2

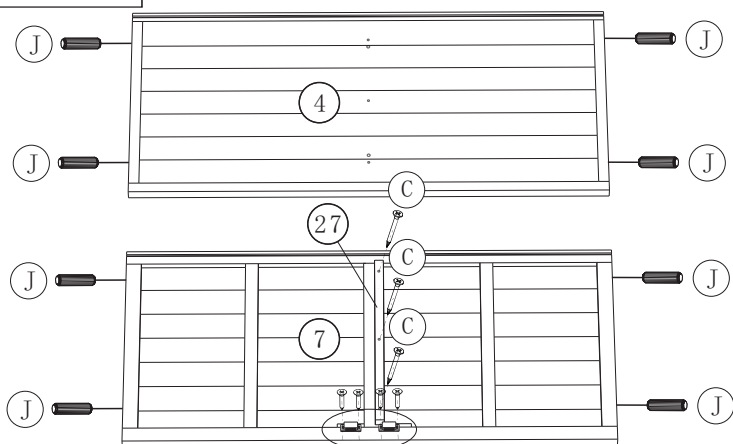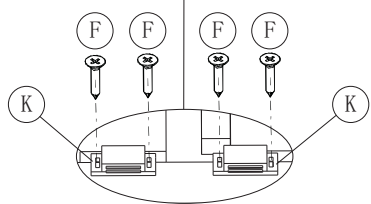


 C M3.5*40(3PCS)	 F M3.0*16(4PCS)
 J 8PCS	 K 2PCS

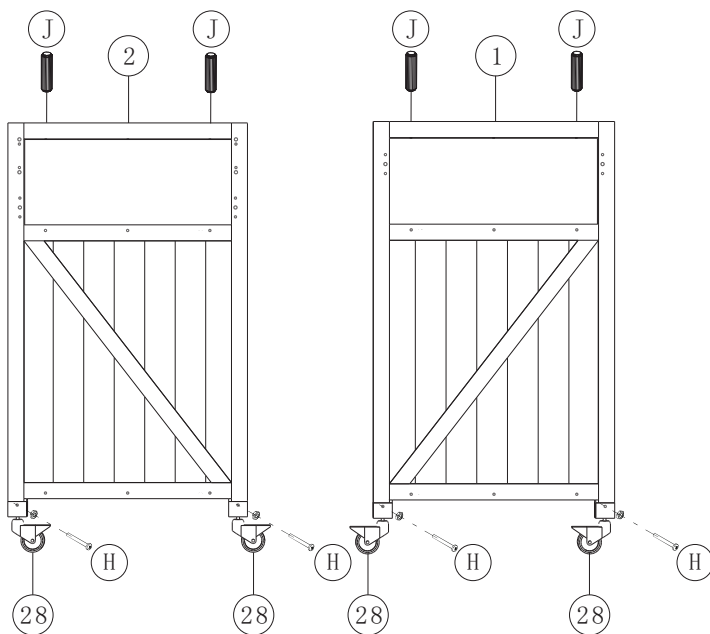
3




 H M4*35(4PCS)	
 J 4PCS	

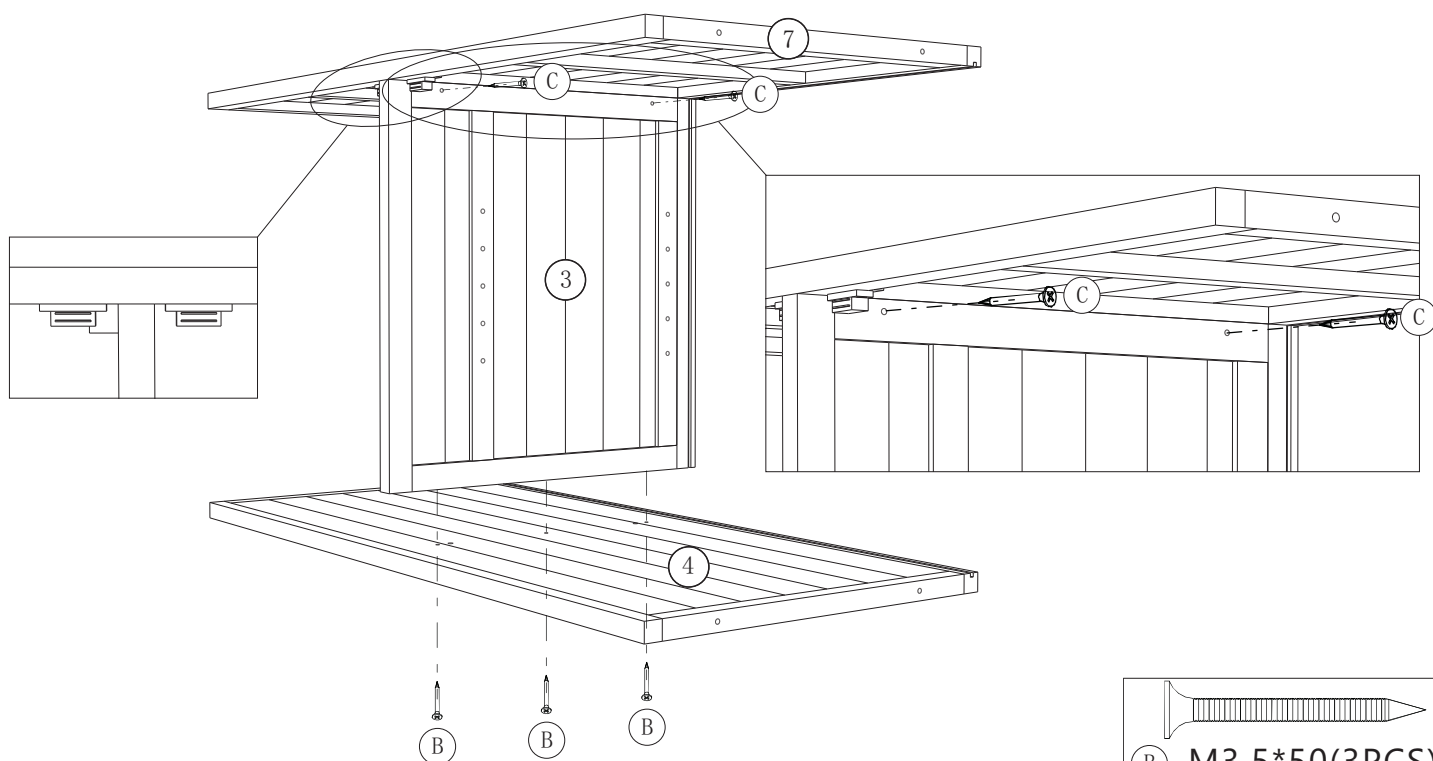4




 B M3.5*50(3PCS)	
 C M3.5*40(2PCS)	

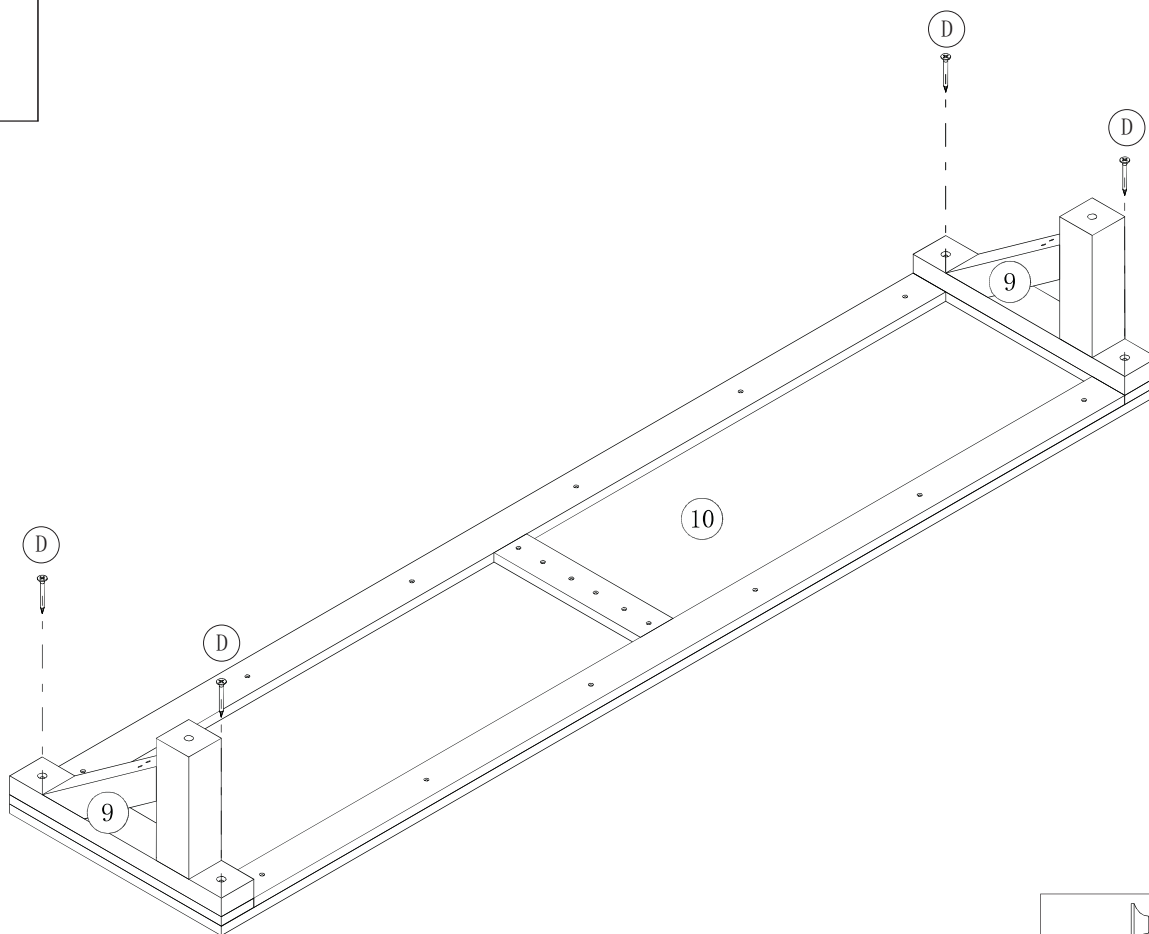5





 **D M3.5*35(4PCS)**

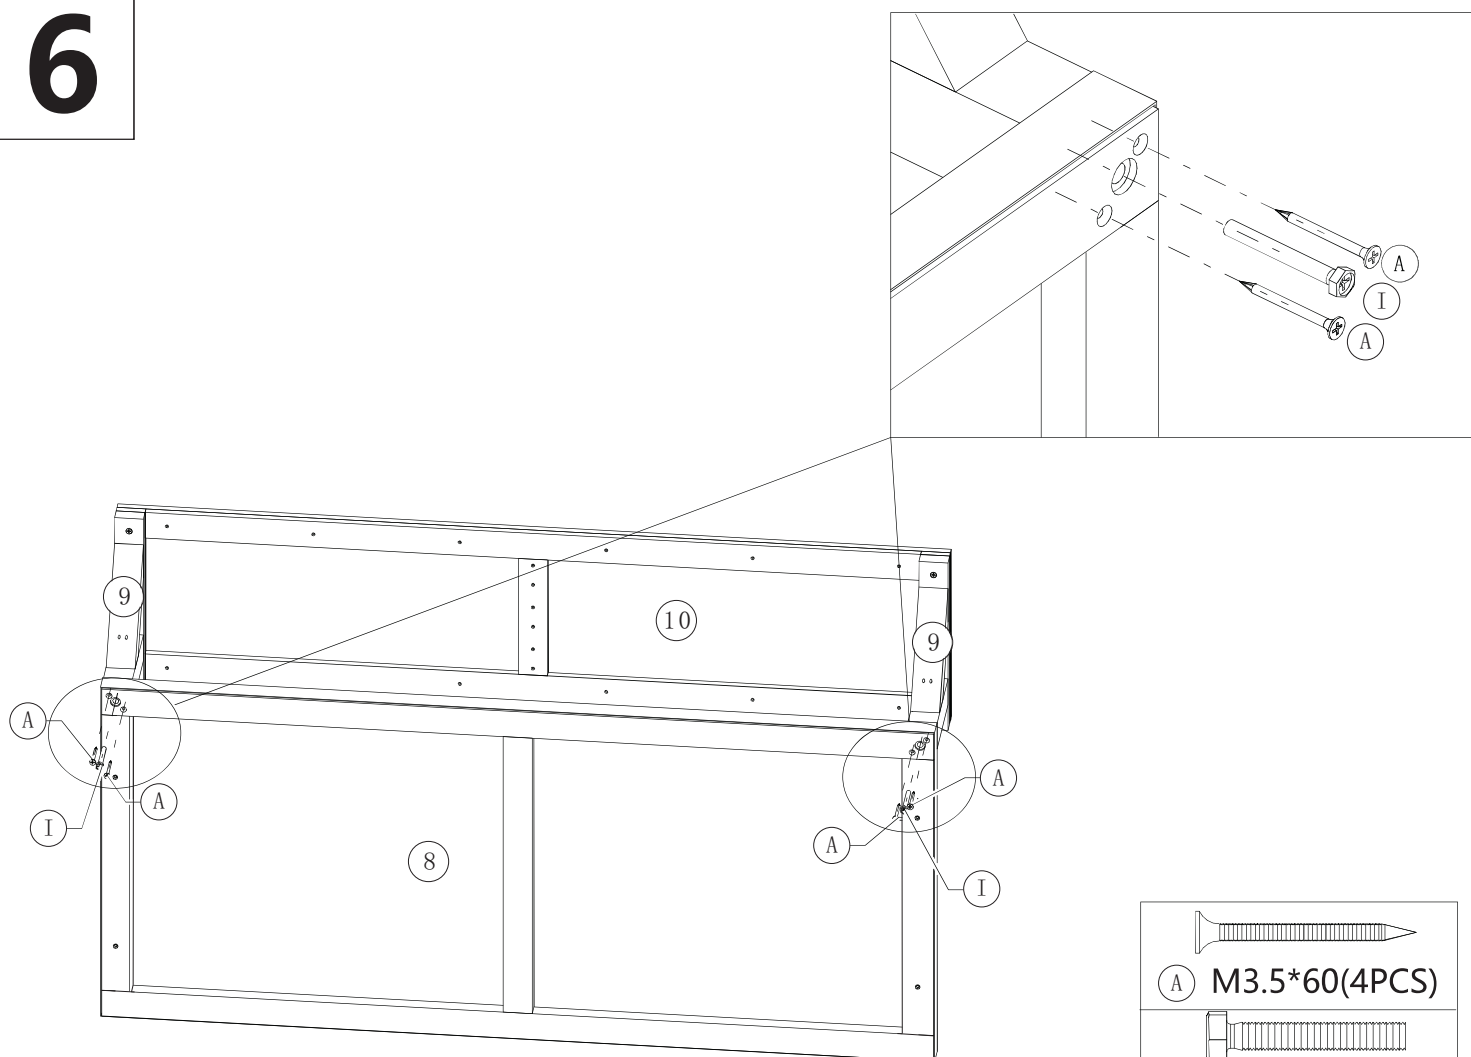6





 **A M3.5*60(4PCS)**
 **I M6*50(2PCS)**



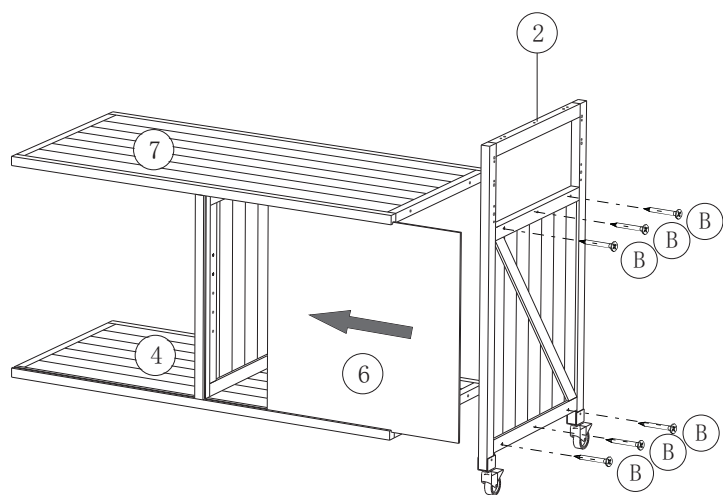

7





8

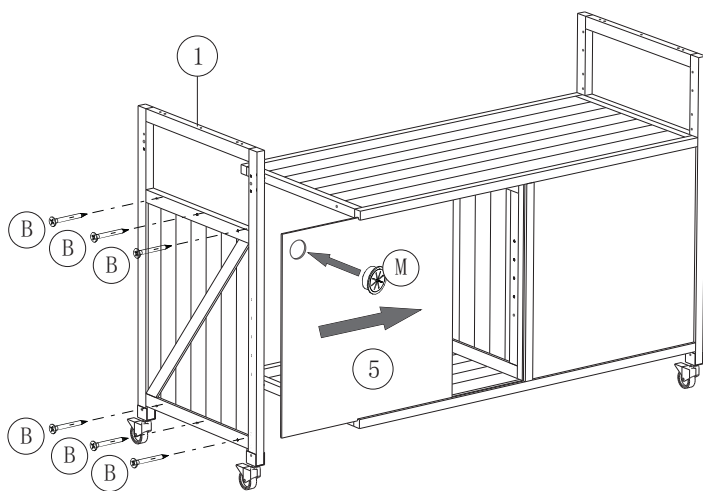

9

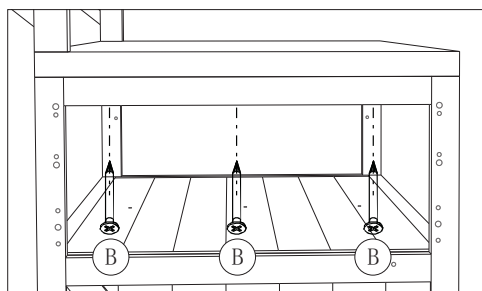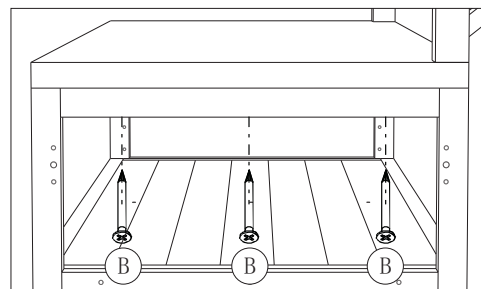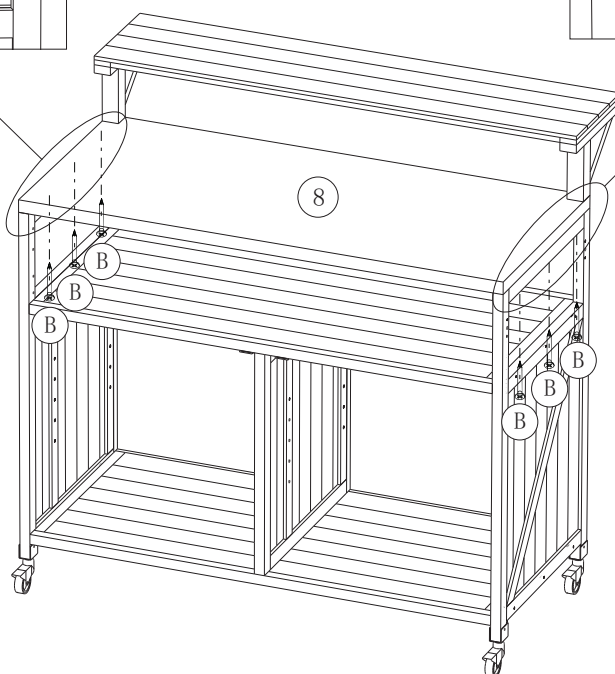



10

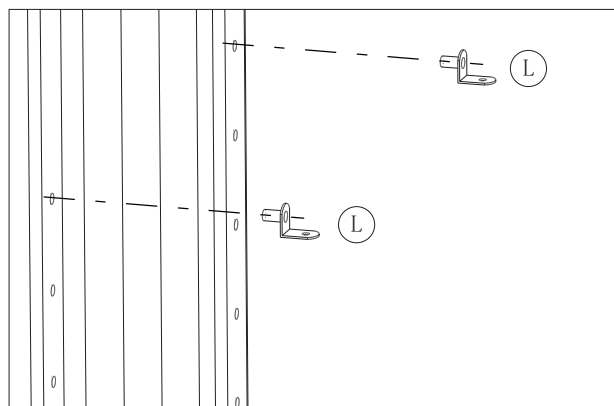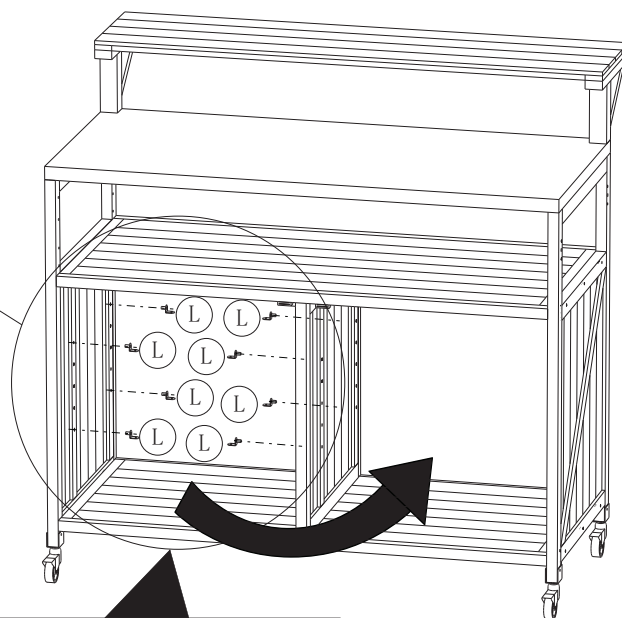

Part ① can be placed on the left or right side as desired. The height can be freely adjusted.



① 8PCS

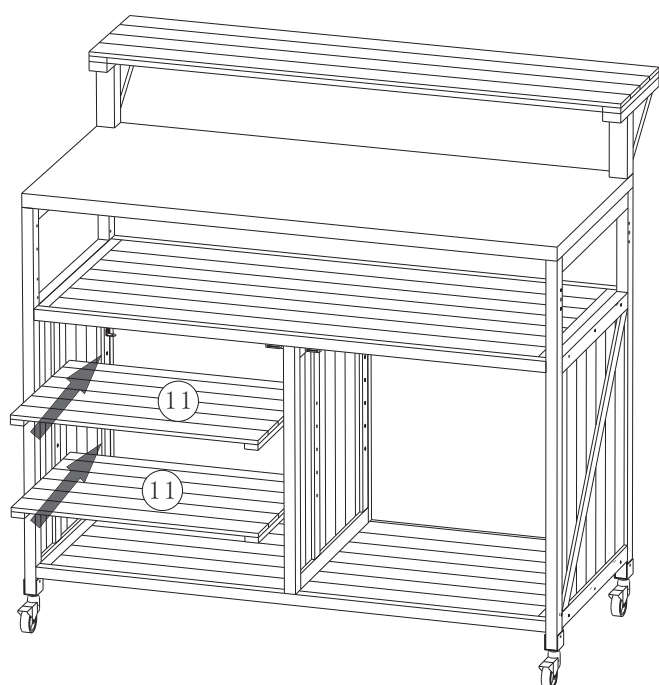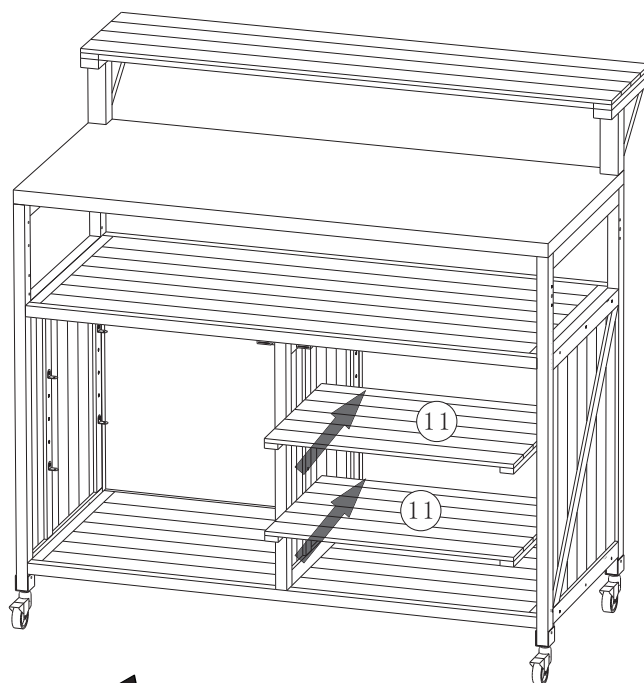11





The two shelves ⑪ can be put into any left or right side as desired. The height can be freely adjusted.


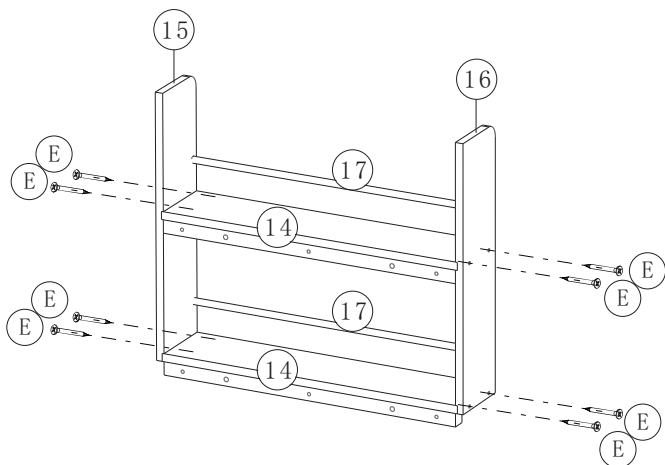

12





13

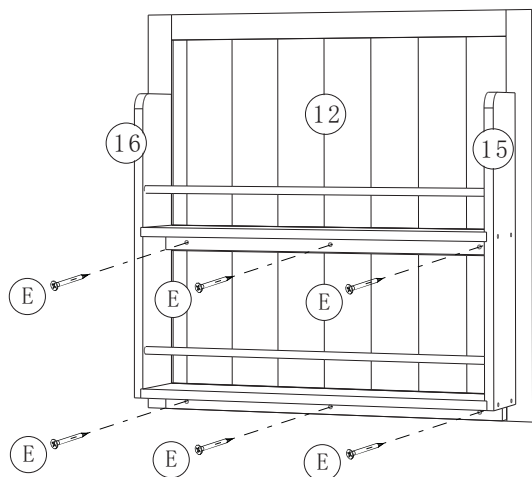



14

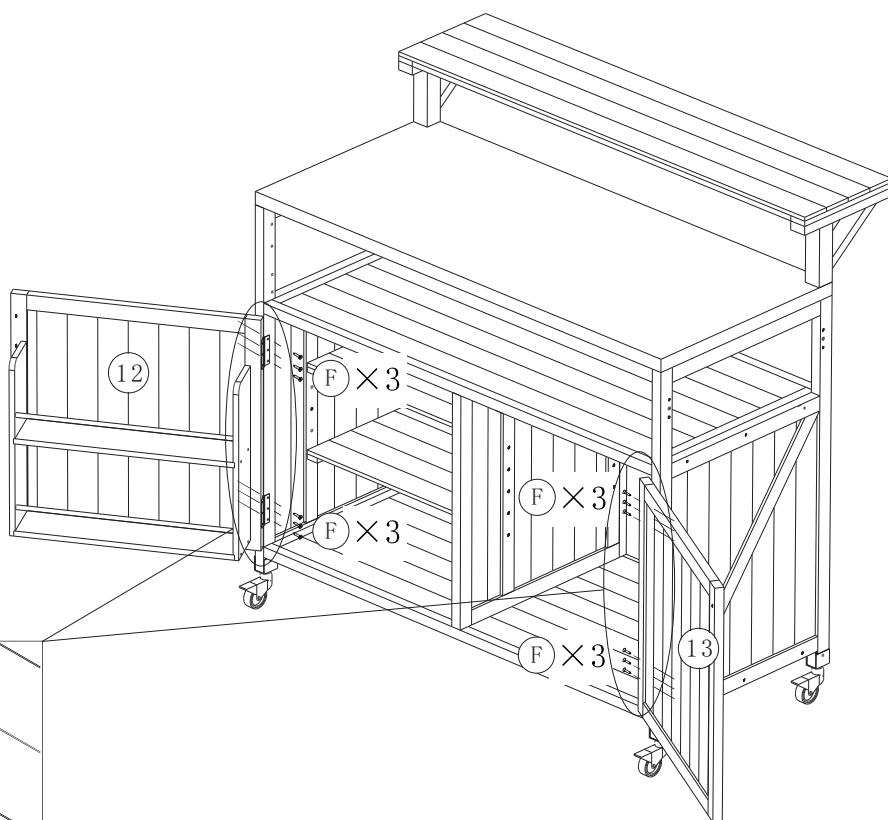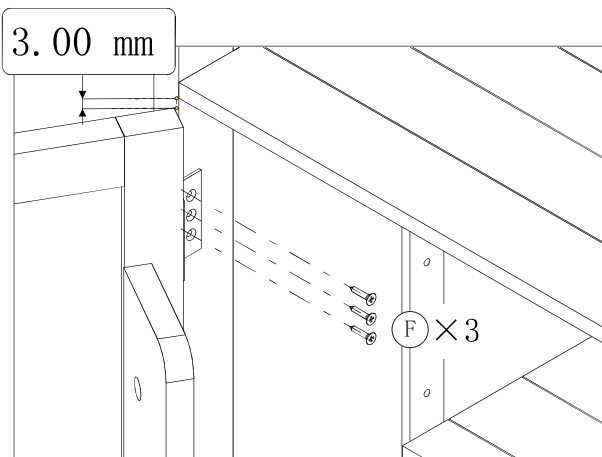


15

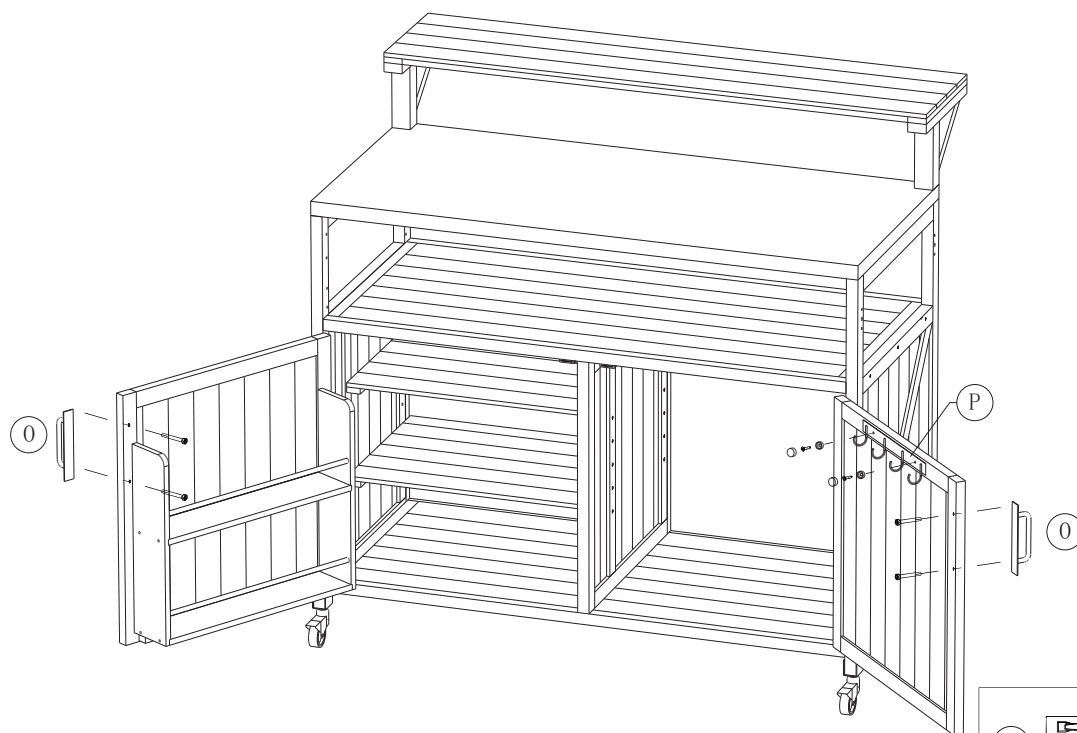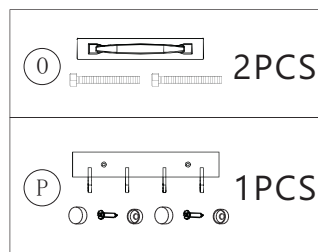

16

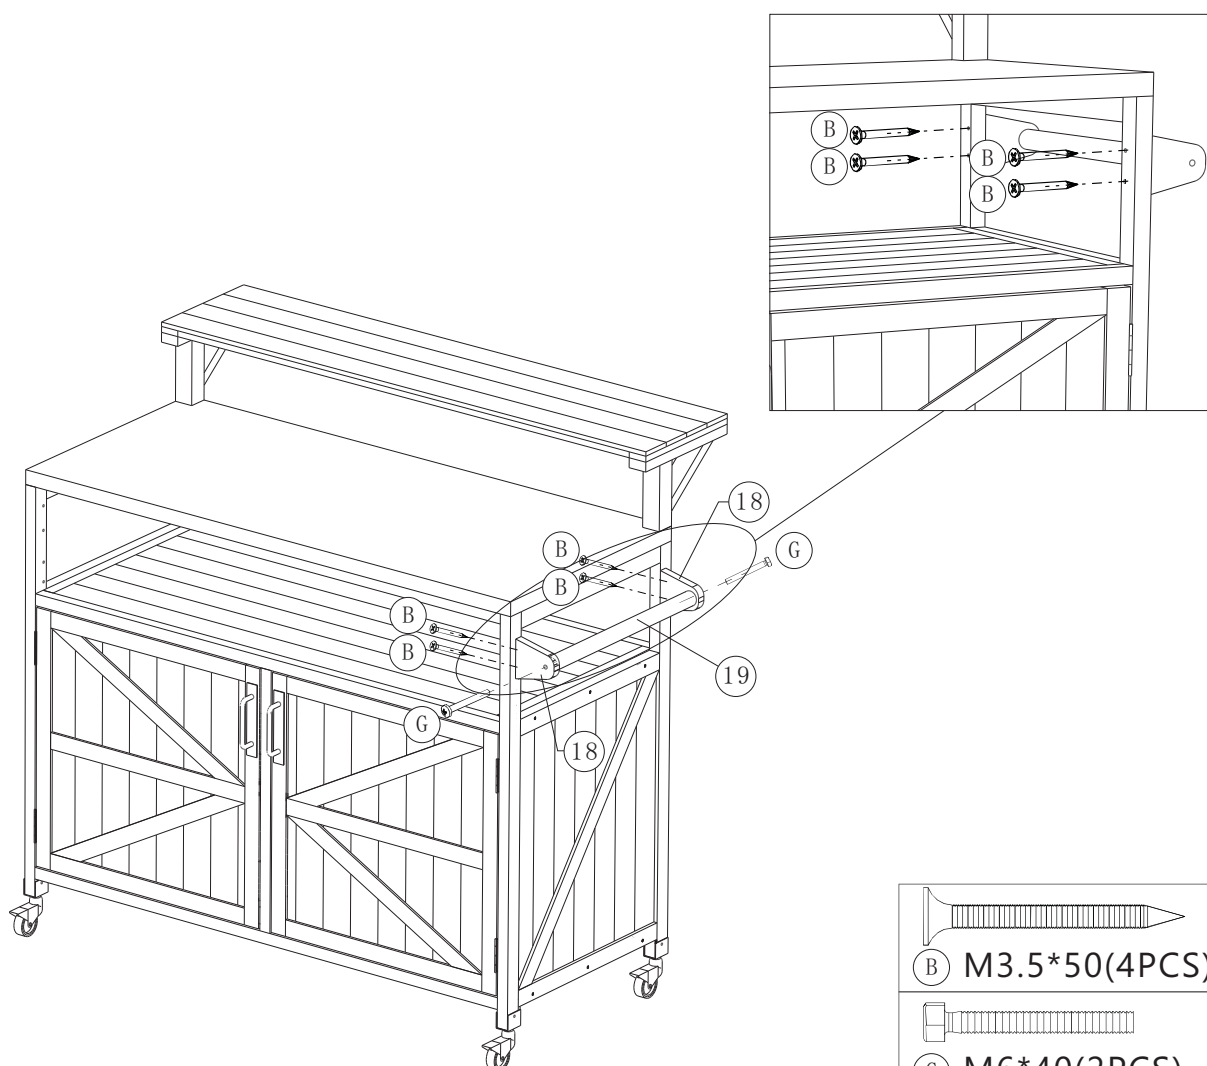
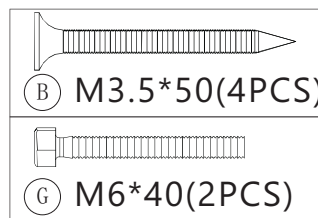


17

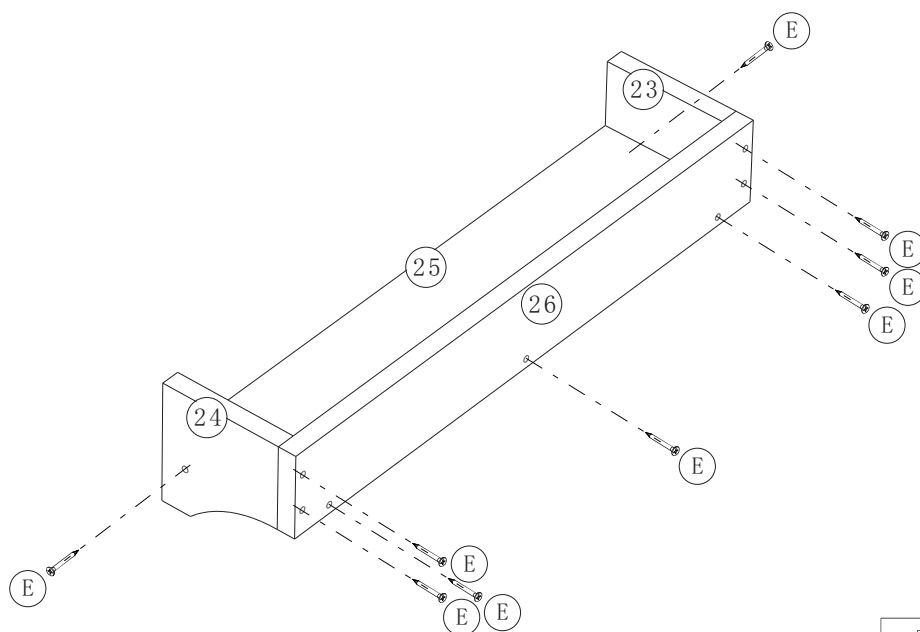




E M3.0*30(9PCS)

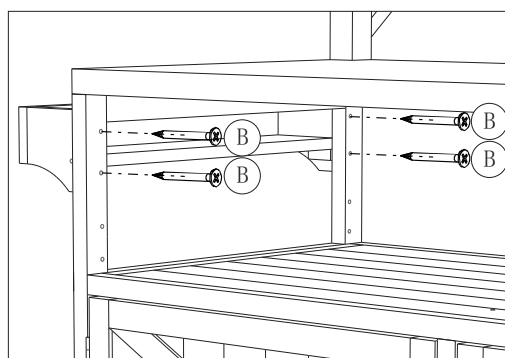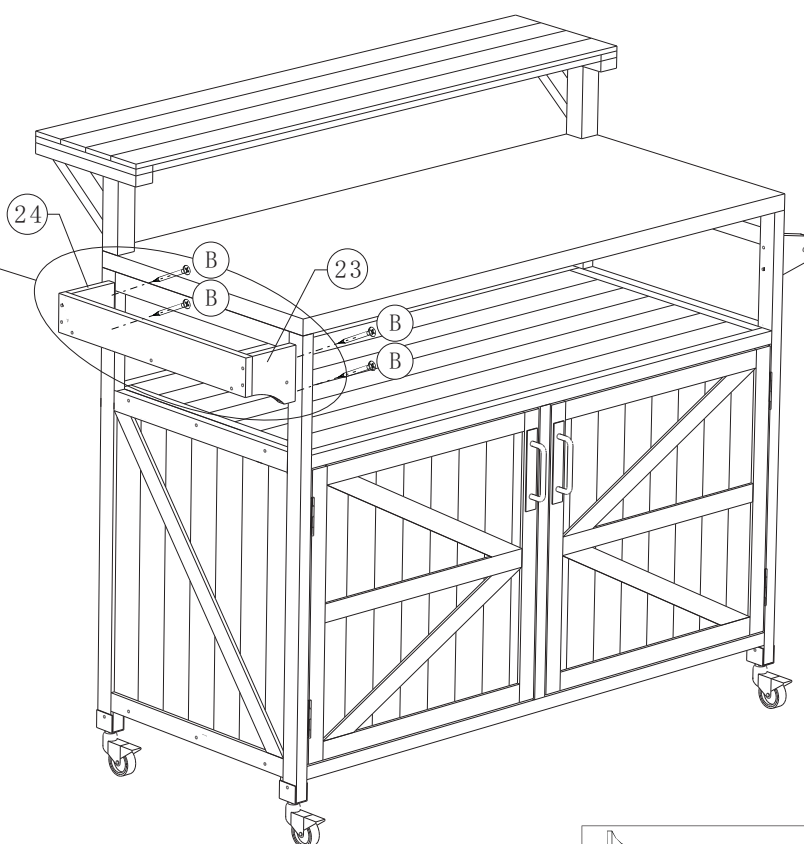18





B M3.5*50(4PCS)

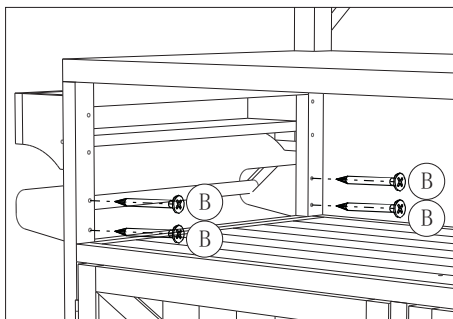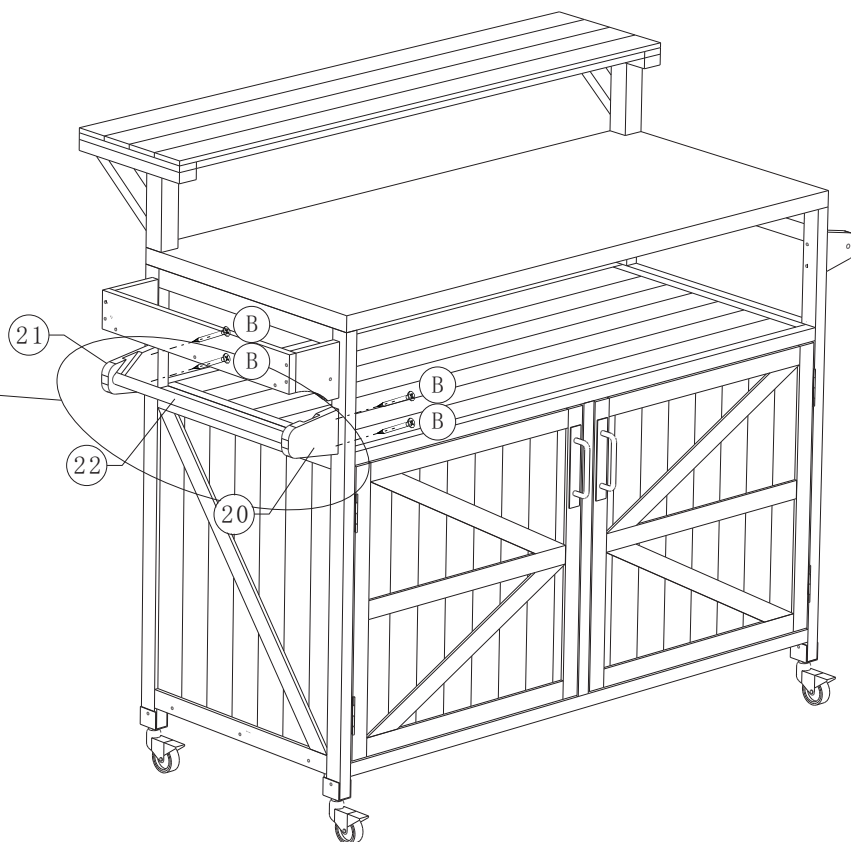19



20

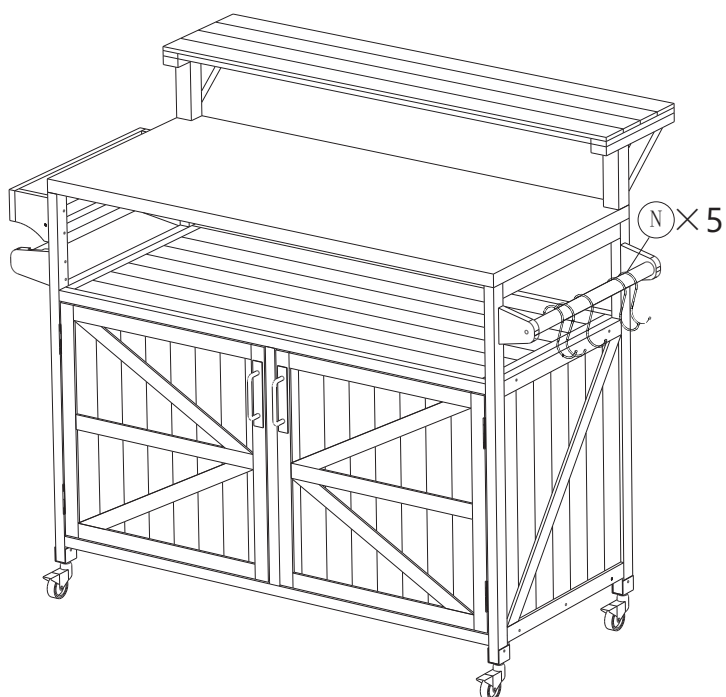

21

