
ASSEMBLY INSTRUCTIONS

Adirondack Chair



***THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.***

Important Safety Information

- *Please read all instructions carefully before assembling this furniture.*
- *For your safety, assembly by two or more adults is strongly recommended.*
- *Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.*
- *Hardware may loosen overtime. Periodically check that all connections are tight.*

Before Assembly


- *Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.*
- *The shipping box provides an ideal work surface.*
- *To avoid accidentally discarding small parts or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.*
- *Use the parts and hardware lists below to identify and separate each of the pieces included.*
- *The use of power tools for assembly is not recommended. Power tools can damage the hardware and/or split the material.*
- **Note:** *Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.*

Care and Cleaning

- *Routine cleaning of the furniture can be completed with only warm water and soap.*
- *You can use the sanding sponge for cleaning.*


Components

A1	Right leg	1
A2	Left leg	1
B1	Right armrest	1
B2	Left armrest	1
C	Seat	1
D	Front fixed plate	1
E	Backrest	1
F	Movable support	2

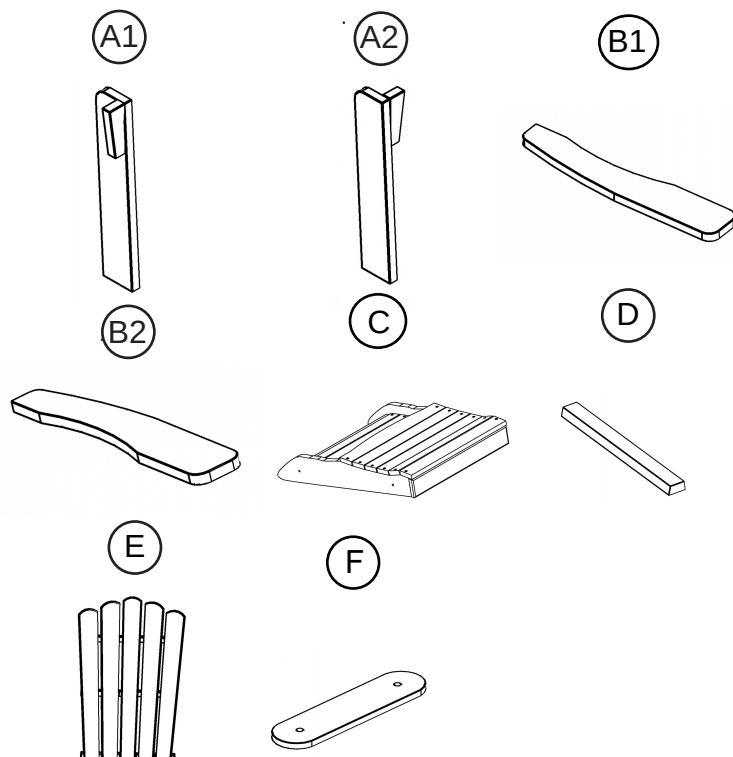

Hardware

(G)	(H)	(I)	(J)	(K)
M6*40MM Bolt	M6*65MM Bolt	M6*55MM Bolt	M6:Nut	Washer
Qty: 6	Qty: 2	Qty: 4	Qty:4	Qty:4



Tools Needed for Assembly



Allen key




Wrench

Step 2

(G)

M6*40MM Bolt

Qty:1

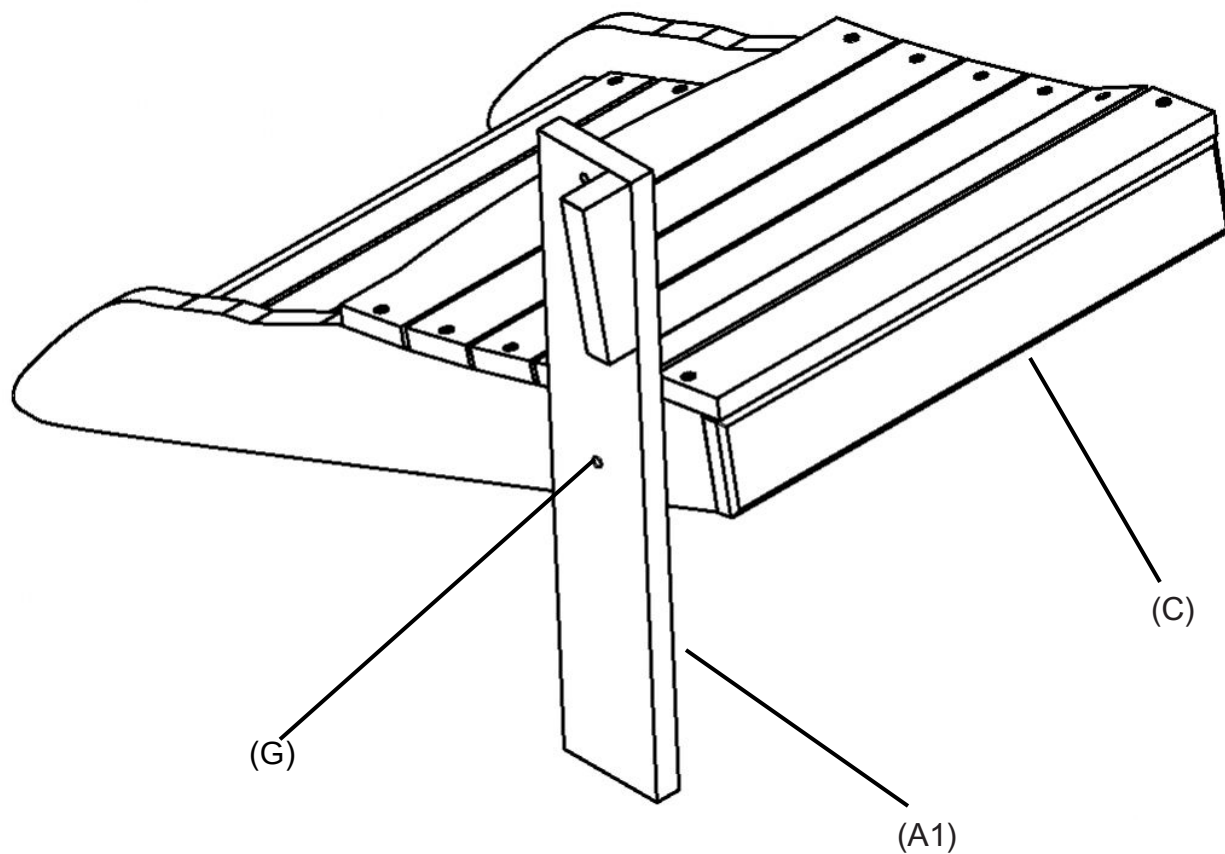


The right leg (A1) is connected with the seat part (C) and the screw (G) * 1

Step 3

(G)




M6*40MM Bolt


Qty:1

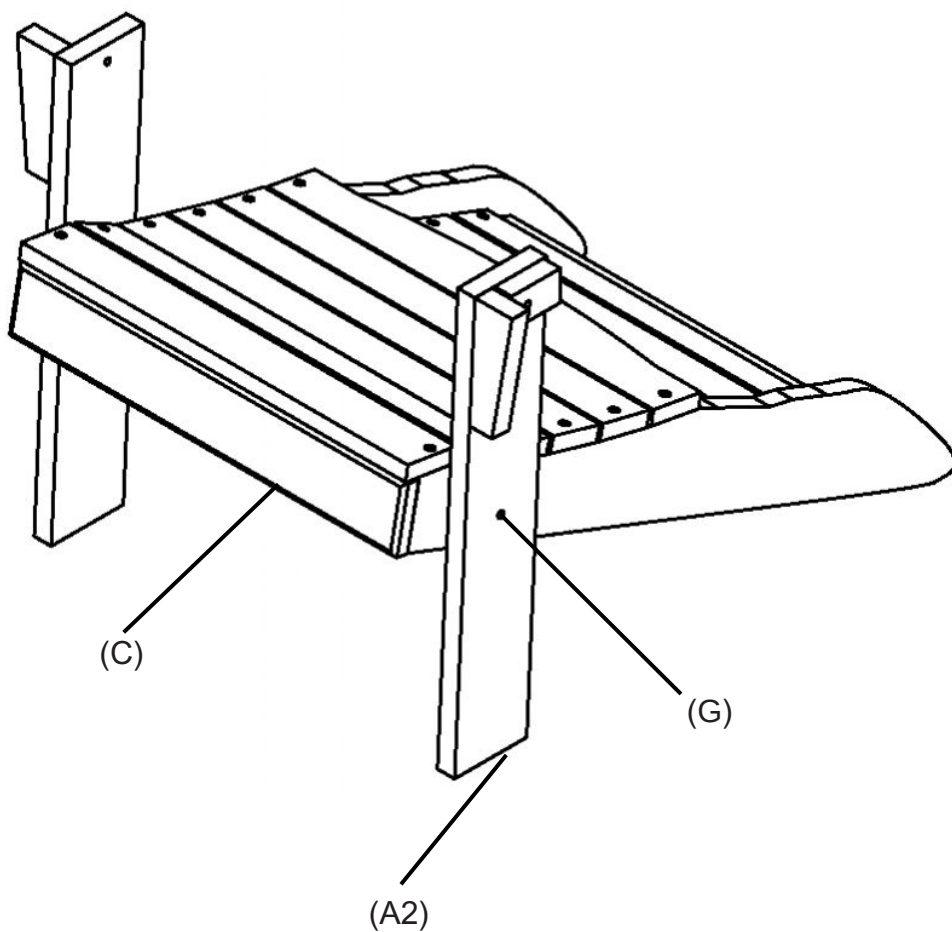

The left leg (A2) is connected with the seat part (C) and the screw (G) * 1




Step 4

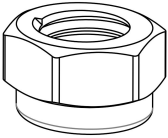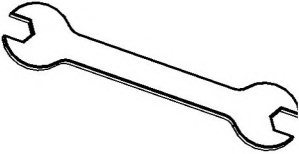
(I) M6*55 MM Bolt Qty:1 	(J) M6:Nut Qty: 1 	(K) M6:Washer Qty: 1 
		

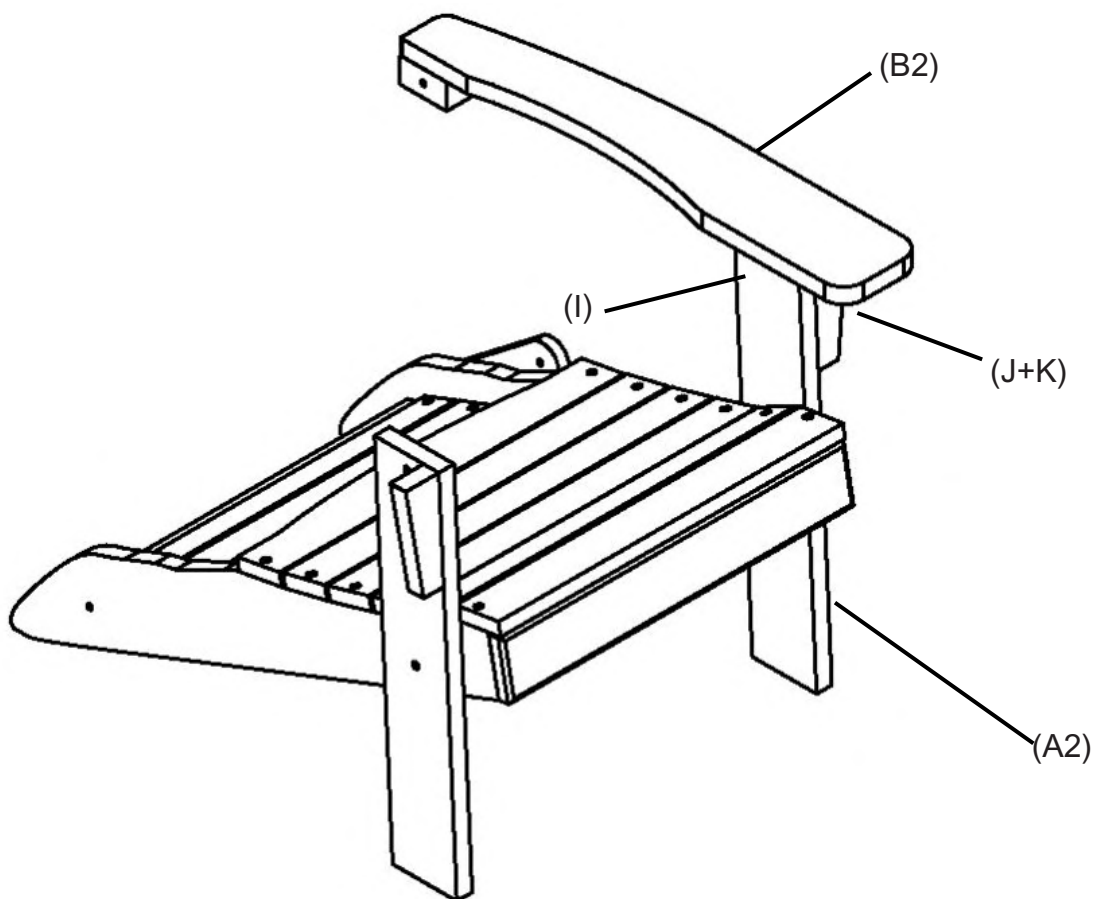

Attach the left armrest(B2) to the left leg(A2), secure with the bolt (I)x1,(J)x1 and (K)x1



Step 5

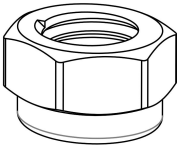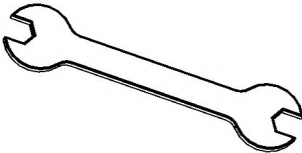(I) M6*55 MM Bolt Qty:1 	(J) M6:Nut Qty: 1 	(K) M6:Washer Qty: 1 
		

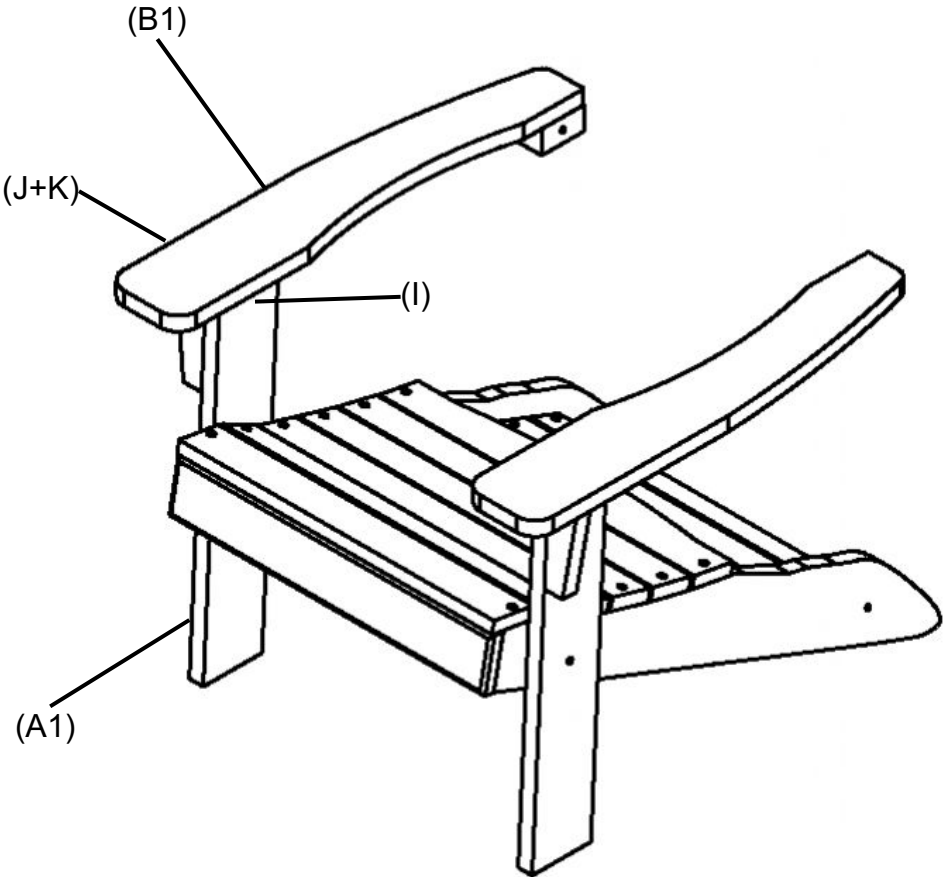

Attach the right armrest(B1)to the right leg(A1) secure with the bolt(I)x1,(J)x1 and(K)x1

Step 6

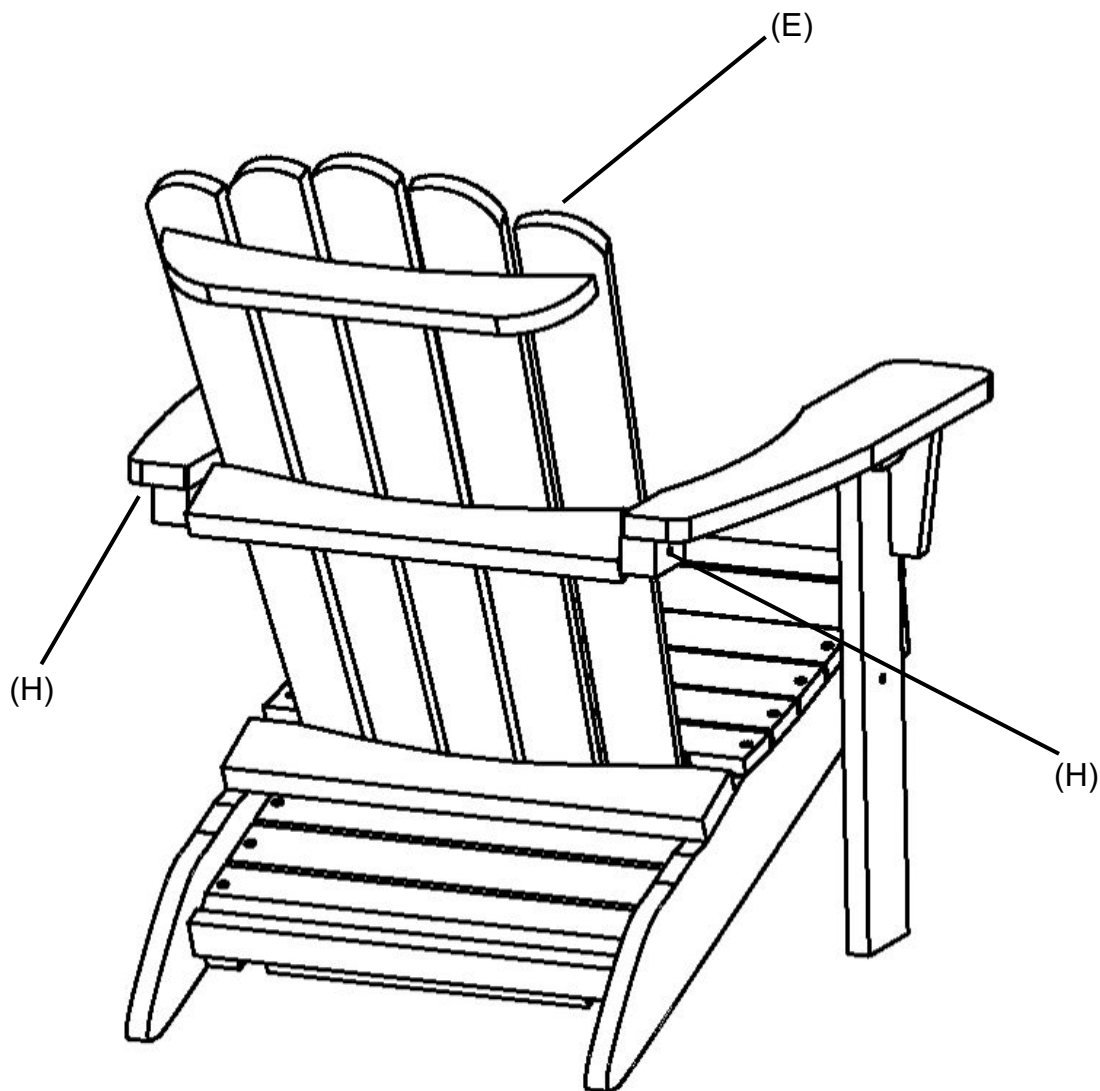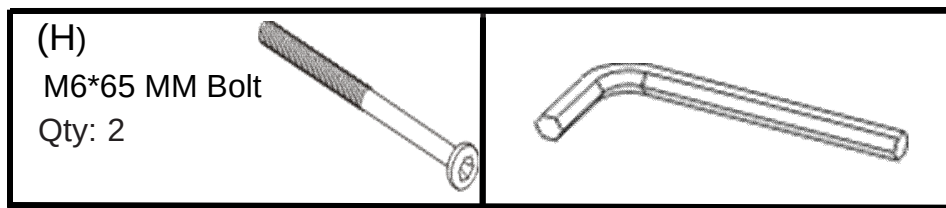


Attach backrest(E) to the assembled seat(C), secure with bolt (H)x2

Step 7

(G)



M6*40 MM Bolt


Qty: 2

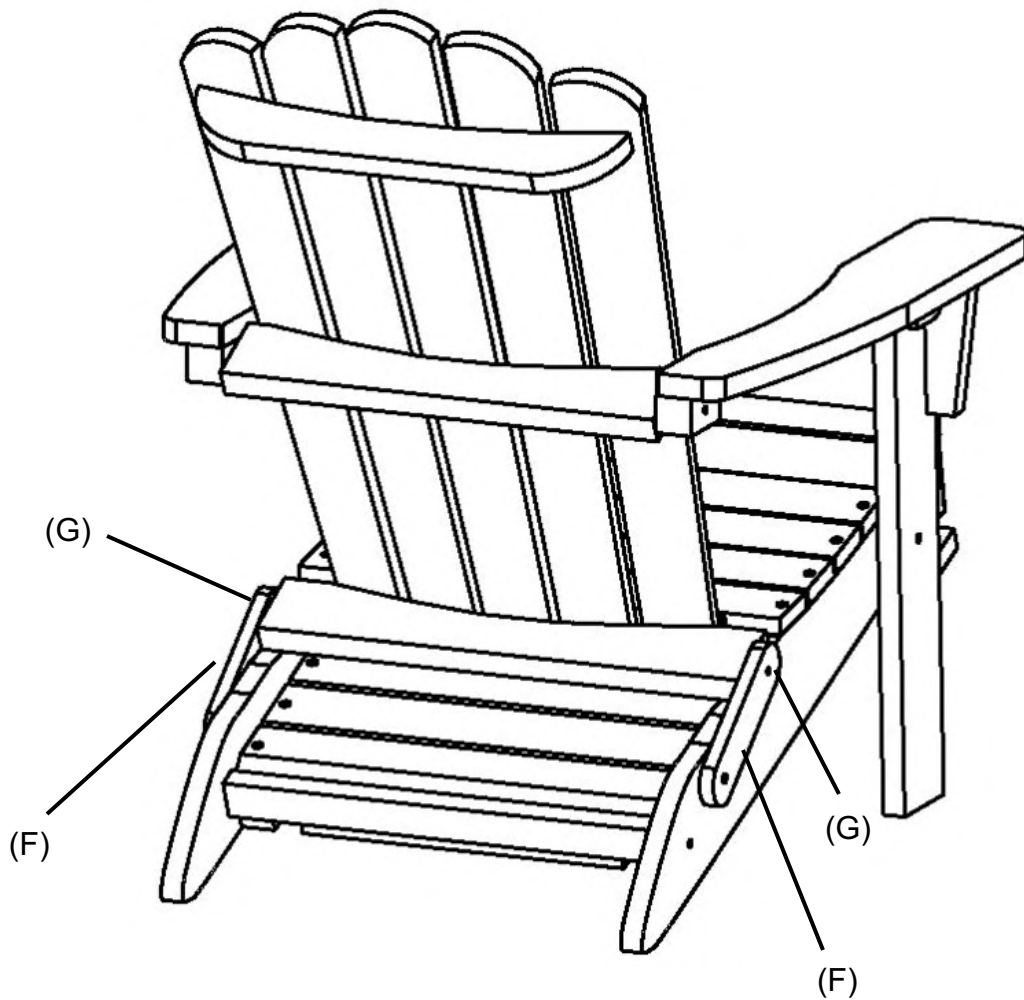

Attach the movable support (F)x2 to the lower backplate, secure with bolt (G)x2

Step 8

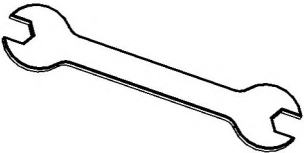(I) M6*55 MM Bolt Qty: 2 	(J) M6:Nut Qty: 2 	(K) M6:Washer Qty: 2 
		

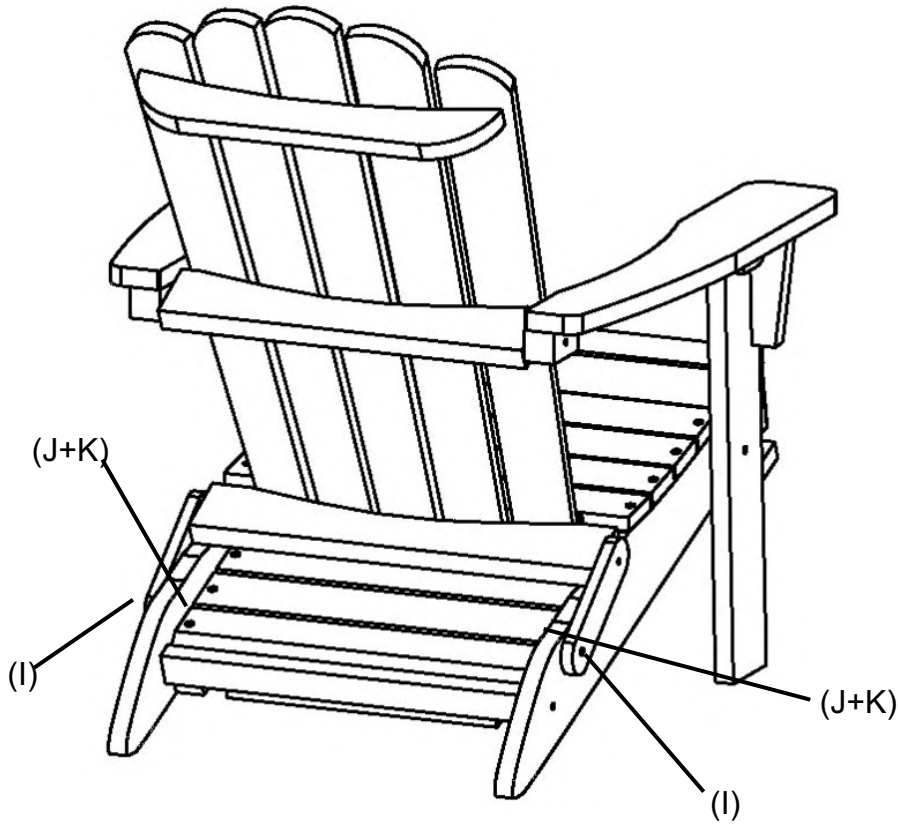


Attach the movable support (H)x2 to the seat frame C secure with bolt (K)x2,(L)x2 and (N)X2

Step 9

(G)

M6*40 MM Bolt

Qty: 2

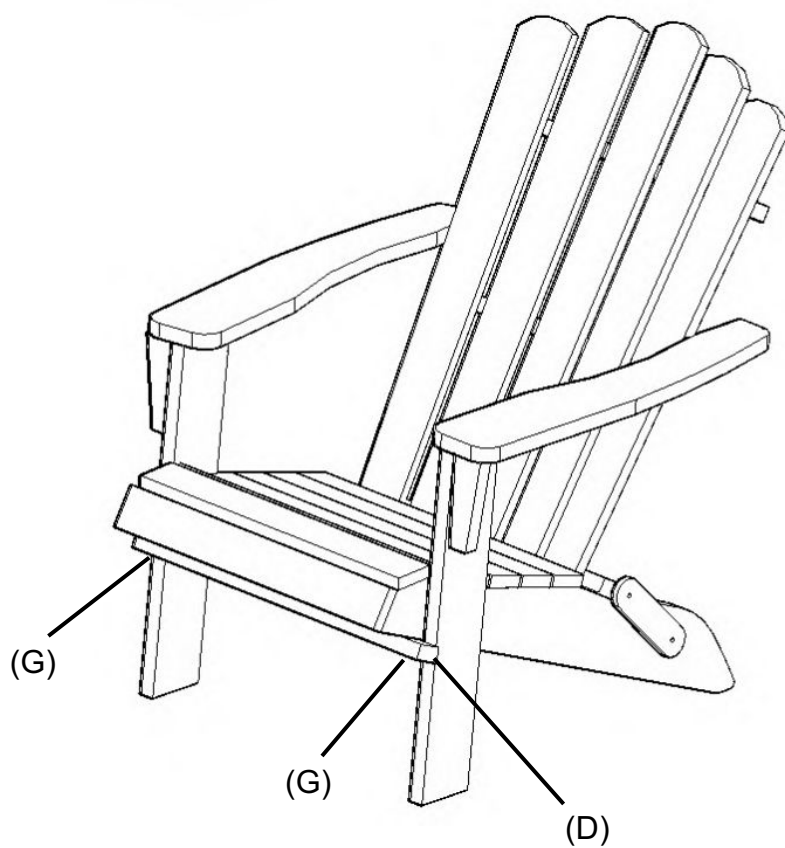

Attach the front fixed plate(D) into the seat frame, secure with bolt (G)x2