


VANITY TOP INSTALLATION INSTRUCTIONS

Unpacking the Vanity Top




ATTENTION! Please inspect this product thoroughly prior to installation. For technical assistance or to report damage, please contact us.

After opening the box, remove the packing materials. Take care that the vanity top remains still seated in the box and does not come up with any of the packing material as it may drop back down and cause damage to the product. Support the vanity top firmly while removing it from the box. Do not set the vanity top down unsupported. Once properly installed, your vanity top will be supported on the cabinet and breakage will be very unlikely.

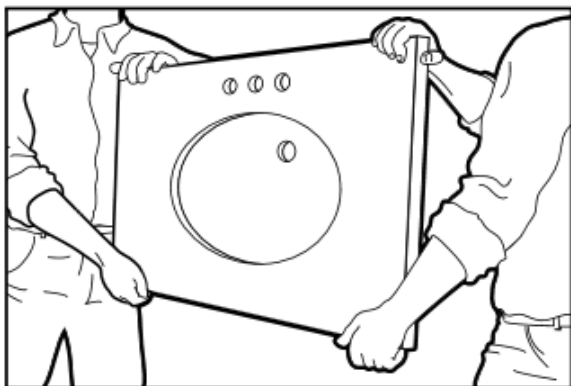

CORRECT

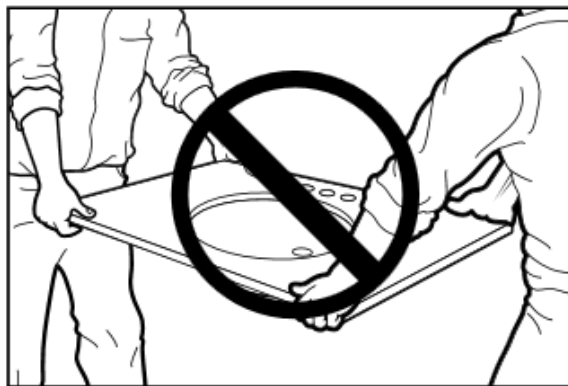

NOT CORRECT

TOOLS and MATERIALS NEEDED

- cloth towels
- caulk
- caulk edging tool
- caulking gun
- construction adhesive or silicone

VANITY TOP INSTALLATION

BEFORE YOU BEGIN PLEASE READ THESE SAFETY PRECAUTIONS

Consult professional help if you are not familiar with installing bathroom cabinetry and working with associated plumbing hardware and tools. Installing a vanity cabinet and vanity top will require more than one person.

We recommend the water lines and drain be roughed in prior to installing the unit. The plumbing and vanity should be installed by an experienced plumber.

Step 1: Prepare vanity cabinet

- Remove the black gasket between the top and vanity base
- Clean top of cabinet base of debris with a cloth
- Clean floor beneath where vanity will sit and ensure floor is level
- Level vanity cabinet, side-to-side, front to back and diagonally
- Secure vanity cabinet to the wall
- Trial fit vanity top on vanity cabinet to ensure correct size, fit and it is level
- Natural stone is heavy and requires adequate support

Step 2: Install faucet

- While supporting the vanity top carefully, install the faucet set according to the manufacturer's instructions

Step 3: Install the vanity top

- Apply a ¼ inch continuous bead of Construction Adhesive or Silicone evenly along the top of the vanity cabinet
- Gently place the vanity top on the cabinet. This may require two people
- Vanity top must be flush with the back of the cabinet. Standard size tops are designed with a 1/2-inch overlap on each side of the cabinet except the back of the cabinet
- Ensure vanity top is correctly positioned before Construction Adhesive or Silicone dries or becomes permanent (follow adhesive manufacturer's instructions)
- Have a soft cloth ready to wipe off any excess sealant should it compress over the edge and onto the finished sides and allow it to dry according to adhesive manufacturer's instructions (24 hours recommended)

CARE AND CLEANING – QUARTZ MARBLE / GRANITE

Our Marble/Granite tops are factory polished to a smooth gloss finish and are sealed for added protection. In order to maintain the surface and keep it looking fresh and natural, we recommend the following procedures:

1. For regular cleaning, use a damp cloth with warm water, rinse and dry thoroughly to prevent streaks.
2. Wipe off any spills immediately. Liquid spills; such as shaving cream, toothpaste, perfume, cologne, nail polish remover, hair coloring and perm products, shampoo, drain and toilet bowl cleaner, alcohol, medications, etc... should be cleaned up promptly.
3. NEVER use abrasive cleaners, tub and tile cleaner, toilet cleaner, or rough cleaning pads. These types of cleaners can etch or dull stone surfaces. If necessary, a soft buffing pad can be used.
4. Do not stand on the marble/granite top to fix overhead lights or other items. Do not place extremely heavy items on the top.