


# Hall tree

**Assembly Instructions - Please keep for future reference**

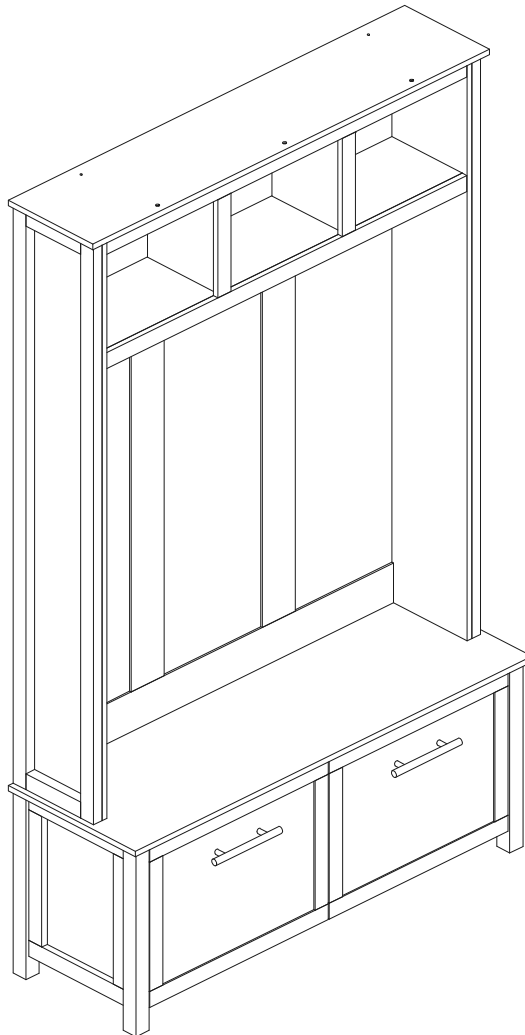

## Dimensions

Width-76.61inch

Depth-15.55inch

Height-47.24inch

| WARNING                                                                             |                                                                                                                                                 |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>This product is NOT a Clothing Storage Unit (CSU).<br/>DO NOT use it for clothing storage.<br/>Improper use may cause furniture tipover.</p> |

**Important-Please read these instructions fully before starting assembly**




# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

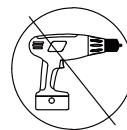

power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightened properly.


**WARNING**  
**In order to help prevent overturning –**  
**please follow these instructions**

To help prevent product toppling over please follow the below steps:-

Use the anti-tip strap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


### Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

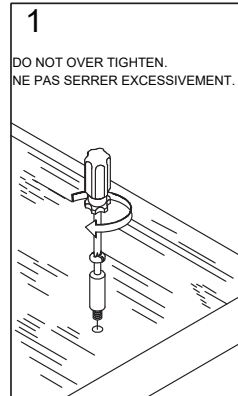

### Step 2


Push the male camlock into the entry hole.

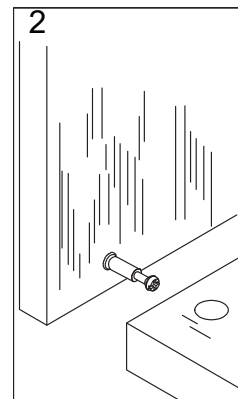

### Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

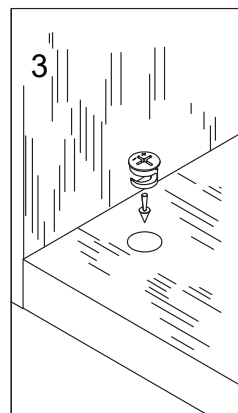


### Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

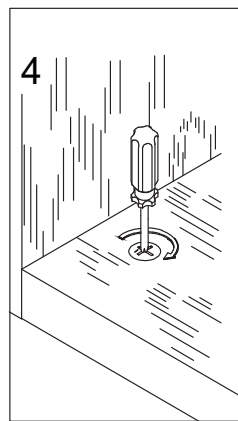









# Assembly Instructions

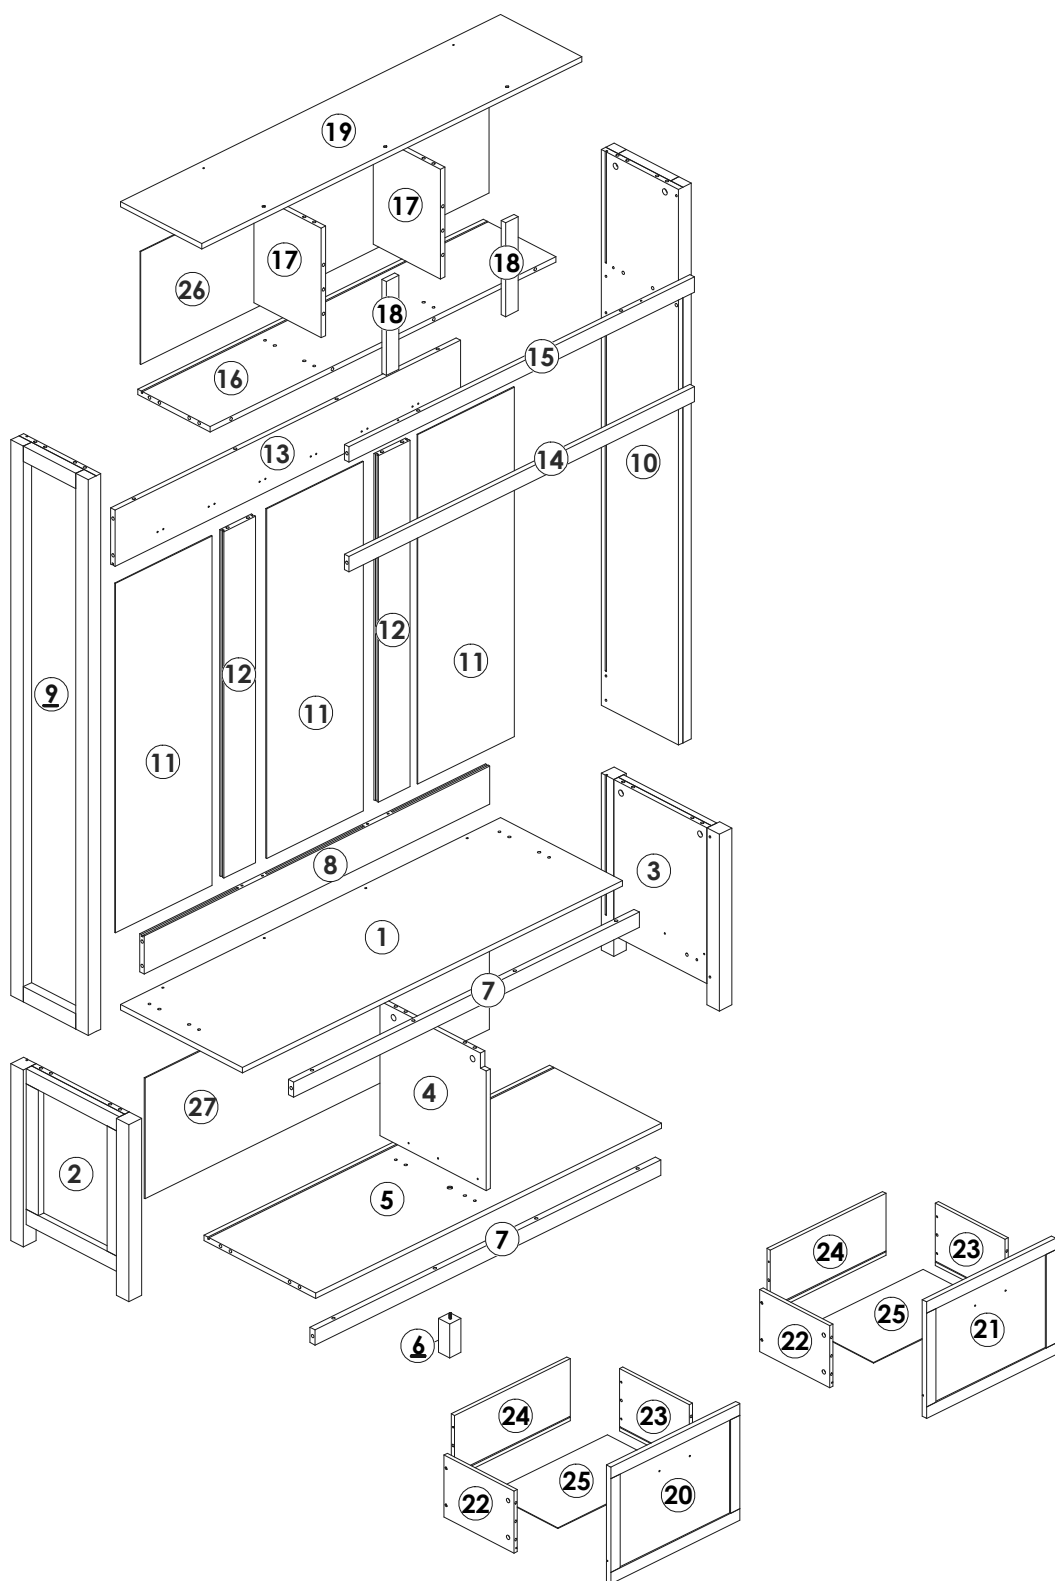

# Assembly Instructions

Please check you have all the panels listed below














## BOX1: N721P366136/N721P508747
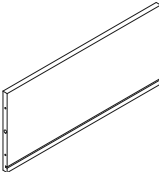
|                                                                                                            |                                                                                                            |                                                                                                              |                                                                                                         |                                                                                                              |
|------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| <br>463x382x40mm<br>② x1  | <br>463x382x40mm<br>③ x1  | <br>353x344x14mm<br>④ x1    | <br>99x36x36mm<br>⑥ x1 | <br>287x218x14mm<br>①⑦ x2 |
| <br>300x216x14mm<br>②② x2 | <br>300x216x14mm<br>②③ x2 | <br>484.5x216x14mm<br>②④ x2 | <br>hardware kit x1   |                                                                                                              |

# Components - Panels

Please check you have all the panels listed below



## BOX2: N721P366137/N721P508748
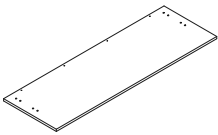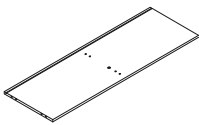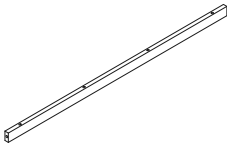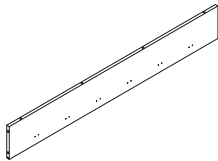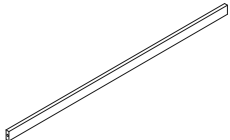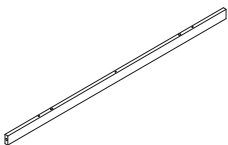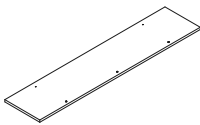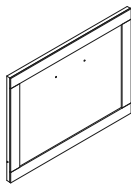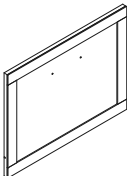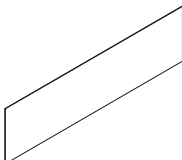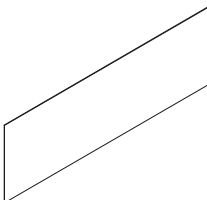
|                                                                                                                  |                                                                                                                   |                                                                                                                    |                                                                                                                     |                                                                                                                    |
|------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
|  <p>1200x395x14mm<br/>① x1</p>   |  <p>1091x362x14mm<br/>⑤ x1</p>   |  <p>1091x41x17mm<br/>⑦ x2</p>     |  <p>1091x100x14mm<br/>⑧ x1</p>    |  <p>1455x250x40mm<br/>⑨ x1</p>  |
|  <p>1455x250x40mm<br/>⑩ x1</p> |  <p>915x305x2.5mm<br/>⑪ x3</p>   |  <p>907x100x14mm<br/>⑫ x2</p>    |  <p>1091x147x14mm<br/>⑬ x1</p>    |  <p>1091x41x14mm<br/>⑭ x1</p>   |
|  <p>1091x41x14mm<br/>⑮ x1</p>  |  <p>1091x235x14mm<br/>⑯ x1</p> |  <p>245x40x14mm<br/>⑰ x2</p>    |  <p>1200x263x14mm<br/>⑱ x1</p>  |  <p>541x405x18mm<br/>⑳ x1</p> |
|  <p>541x405x18mm<br/>㉑ x1</p> |  <p>493x293x2.5mm<br/>㉒ x2</p> |  <p>1099x295x2.5mm<br/>㉓ x1</p> |  <p>1099x361x2.5mm<br/>㉔ x1</p> |                                                                                                                    |

# Components - Fittings





Please check you have all the fittings listed below

Note : The quantities below are the correct amount to complete the assembly . In some cases more fittings may be supplied than are required,(N721P366136/N721P508747).


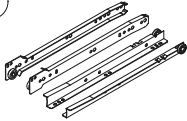
|                                                                                                                                 |                                                                                                                                |                                                                                                                              |                                                                                                                             |                                                                                                                                 |
|---------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <p>(A)</p>  <p>Ø6*34mm<br/>Cam Bolt x 76+2</p> | <p>(B)</p>  <p>Ø15*9mm<br/>Cam lock x76+2</p> | <p>(C)</p>  <p>8*30mm<br/>Dowel x 46+2</p>  | <p>(D)</p>  <p>5*38mm<br/>screw x 21+2</p> | <p>(E)</p>  <p>3*12mm<br/>Screw x 24+2</p>   |
| <p>(F)</p>  <p>3*15mm<br/>Screw x 38+2</p>     | <p>(G)</p>  <p>Back panel buckle x38+2</p>    | <p>(H)</p>  <p>5*20mm<br/>Handle x 2set</p> | <p>(I)</p>  <p>Clothes-Hook x 6</p>       | <p>(J)</p>  <p>3.5*12mm<br/>Screw x 12+2</p> |
| <p>(K)</p>  <p>300mm<br/>Drawer slides x 2</p> | <p>(L)</p>  <p>Ø20<br/>PVC x28+2</p>          | <p>(M)</p>  <p>Anti-Tip Kit x 2set</p>      | <p>(N)</p>  <p>Screwdriver x 1</p>        |                                                                                                                                 |

# Assembly Instructions

## Step 1

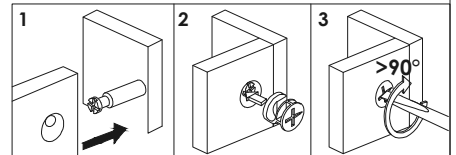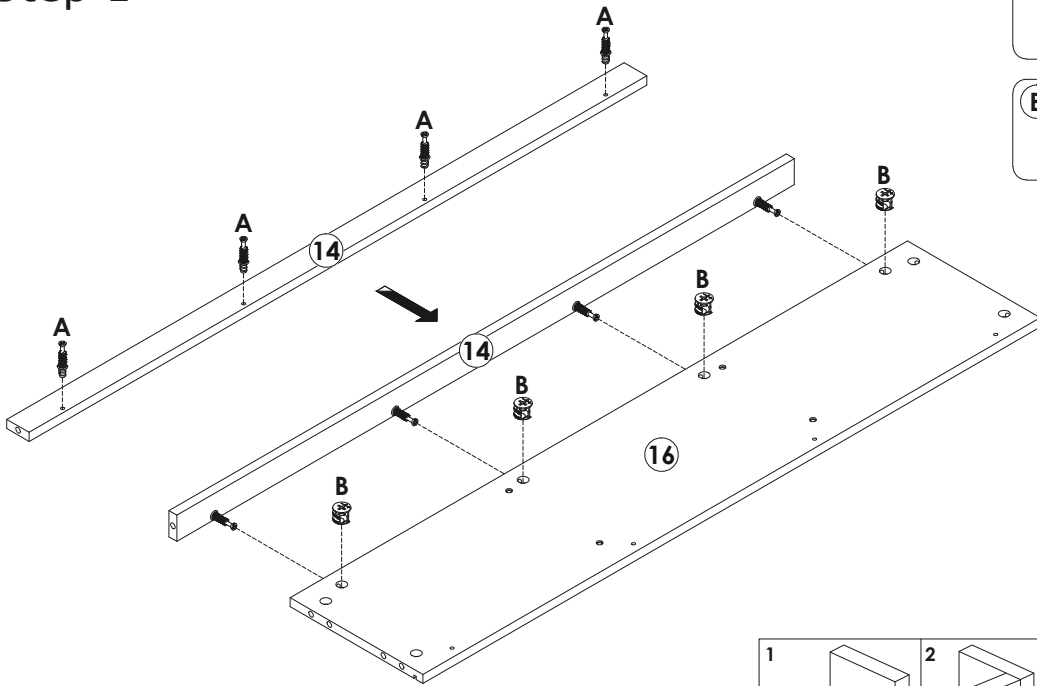

## Step 2

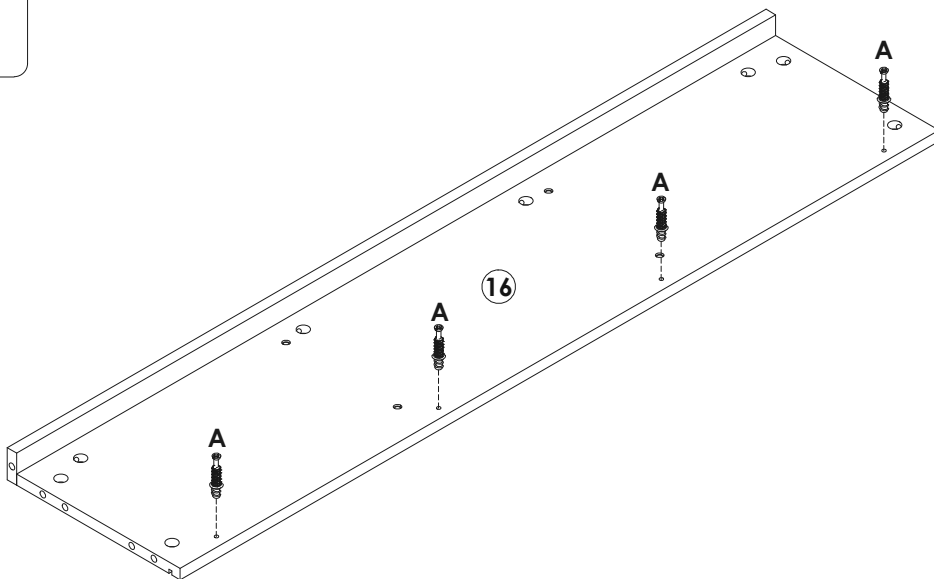


# Assembly Instructions

## Step 3



A



A x 14

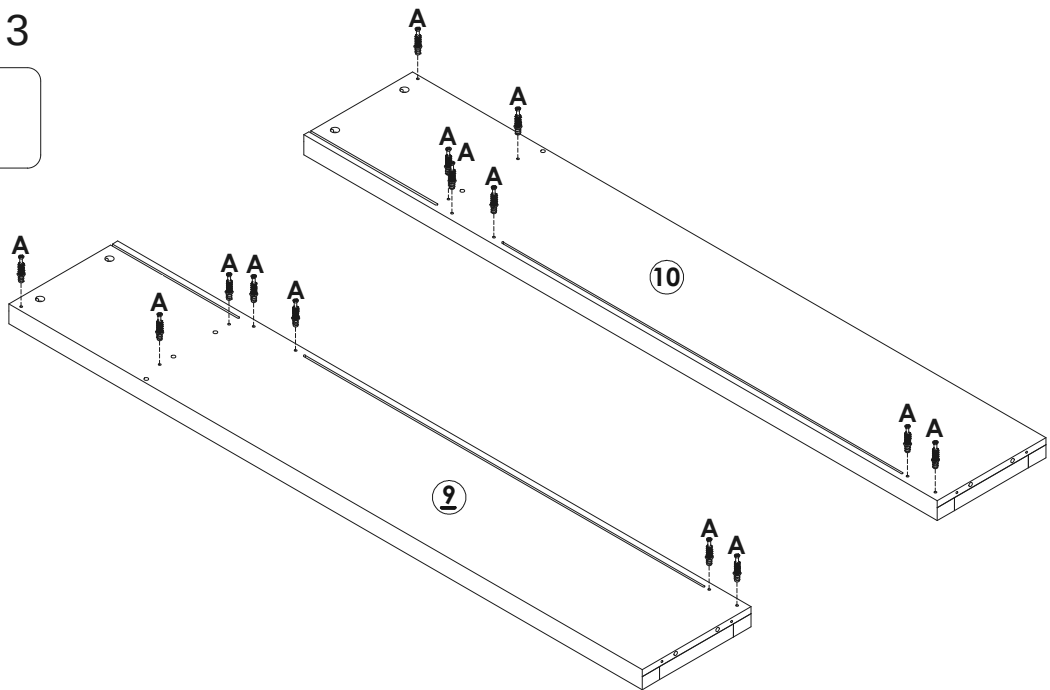

## Step 4

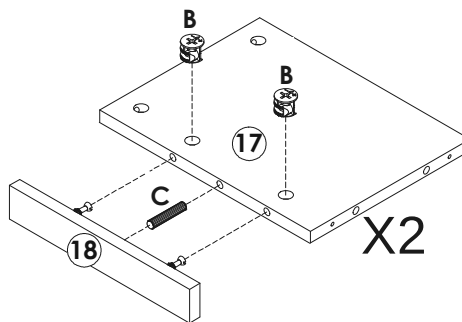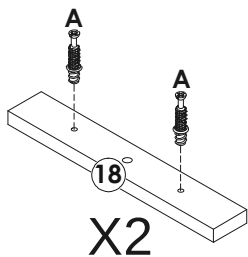

A



A x 4

B




B x 4

C




C x 2

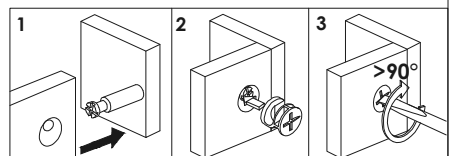


# Assembly Instructions


## Step 5

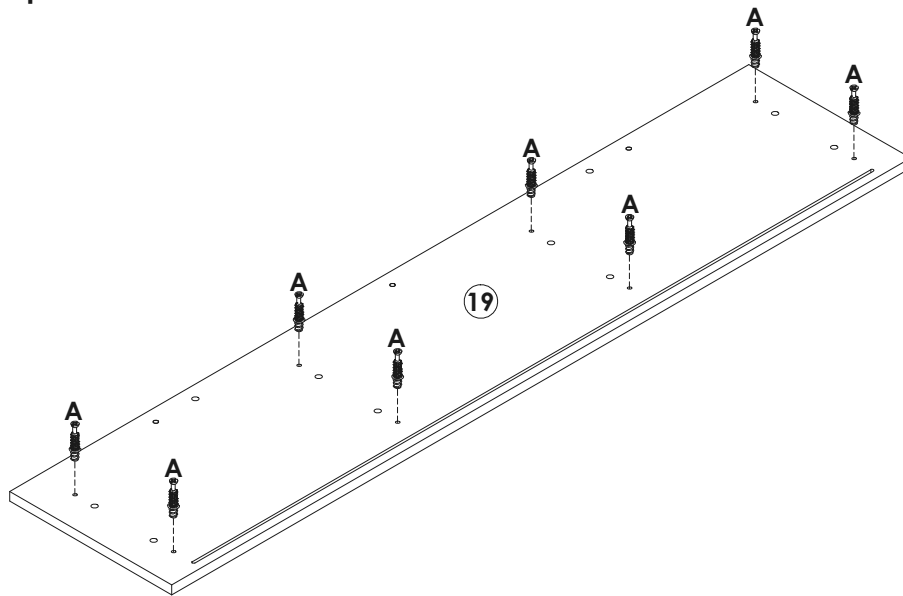

## Step 6





 **180°**  
Please flip carefully.

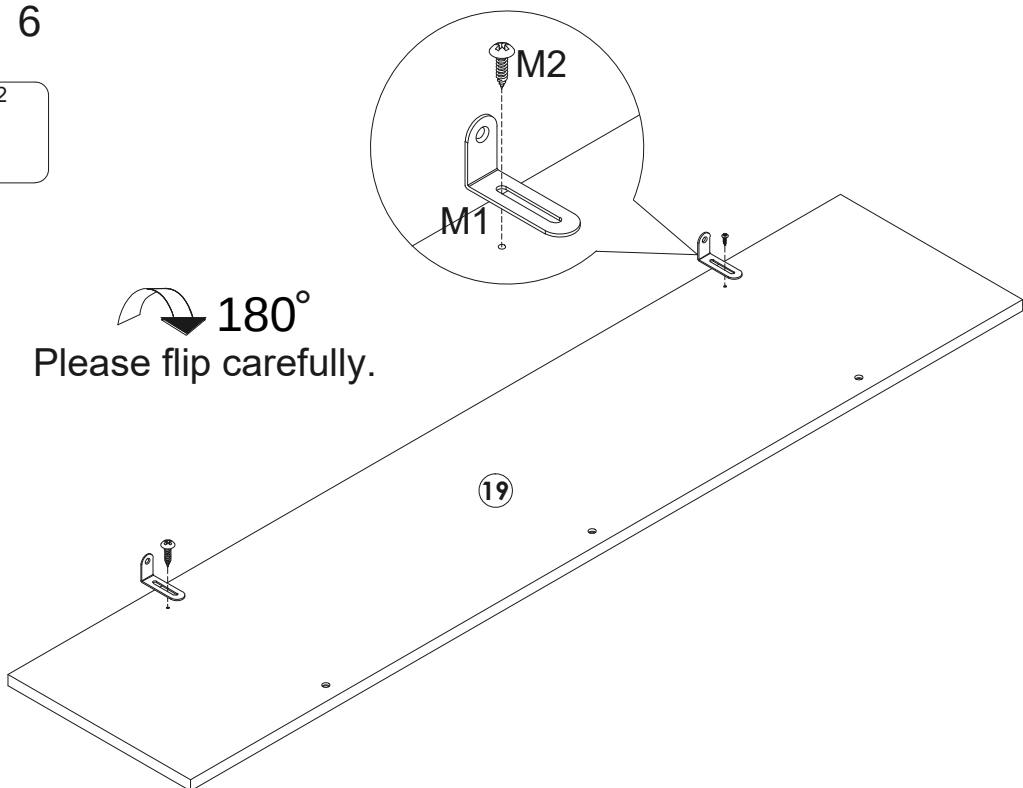


# Assembly Instructions


## Step 7

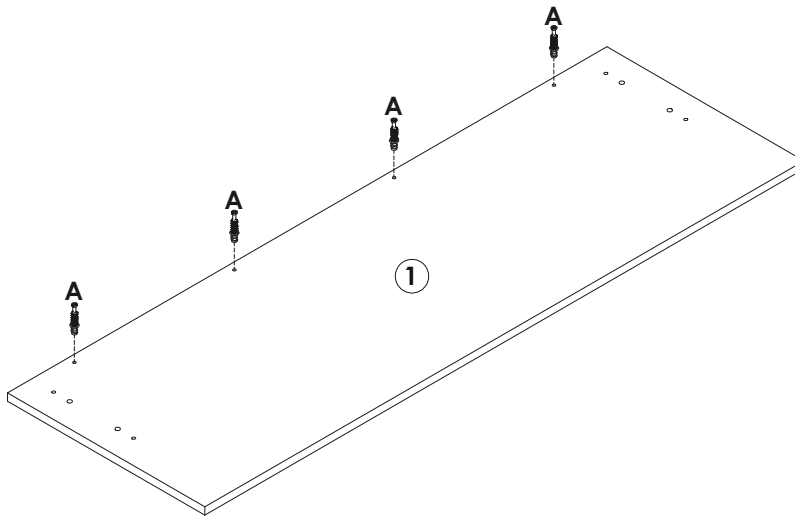

## Step 8





Please flip carefully.



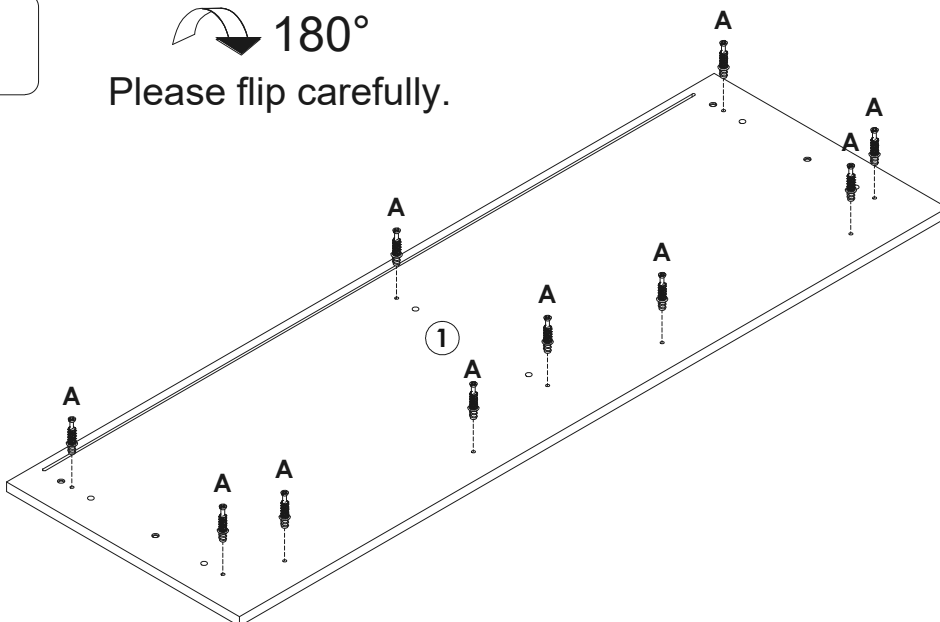


# Assembly Instructions

## Step 9

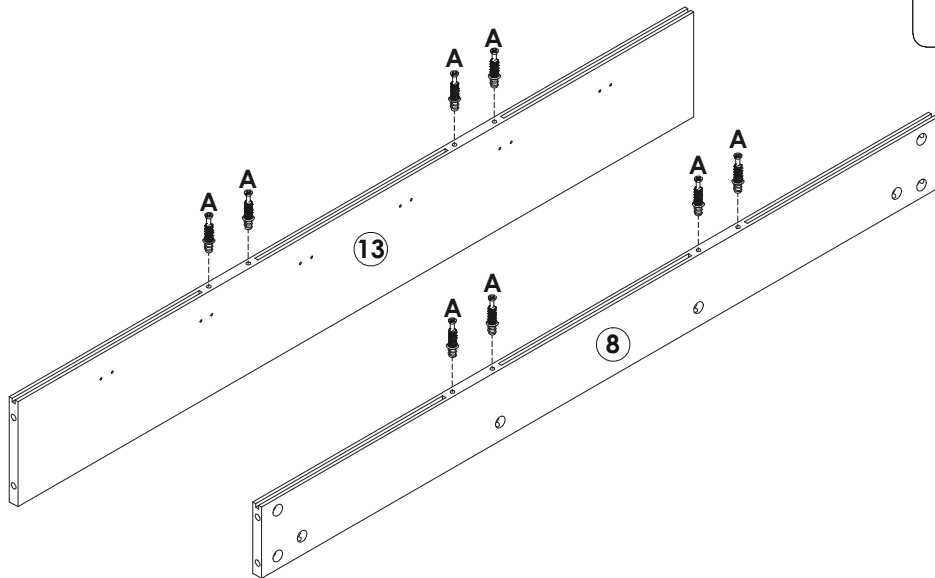


## Step 10

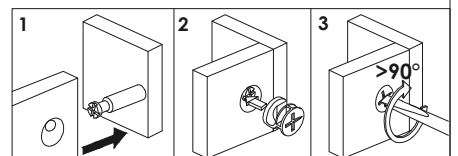
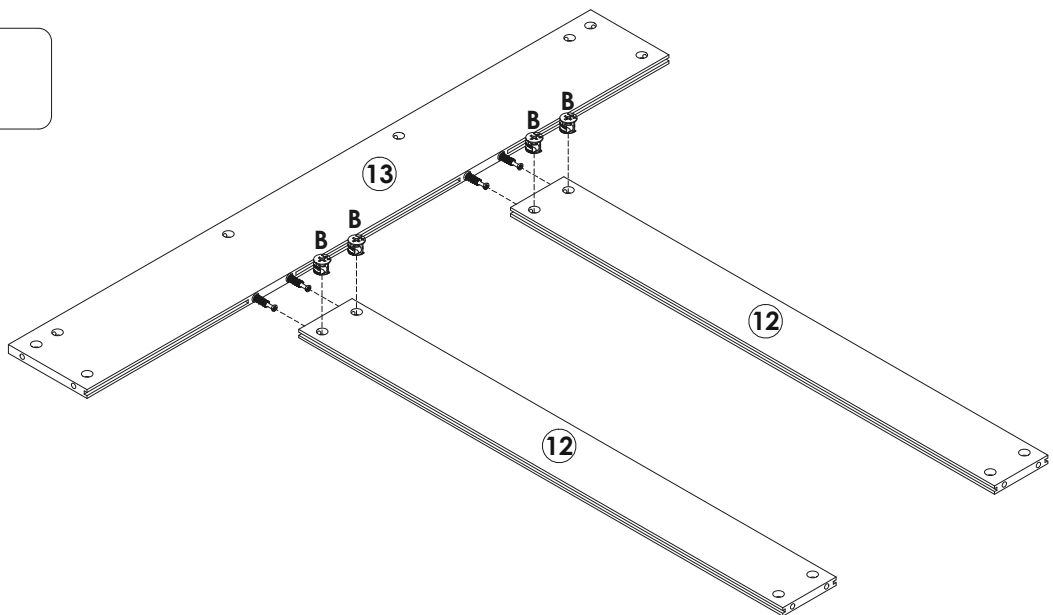



# Assembly Instructions

## Step 11

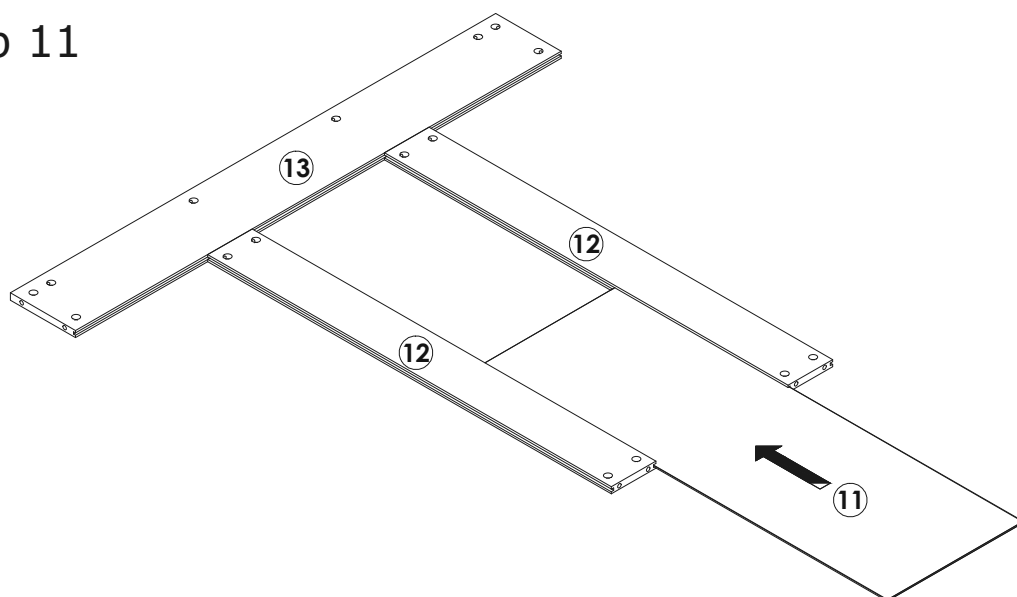


## Step 12

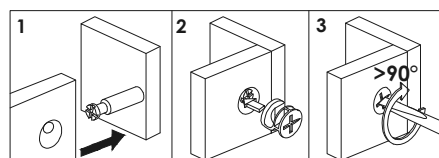
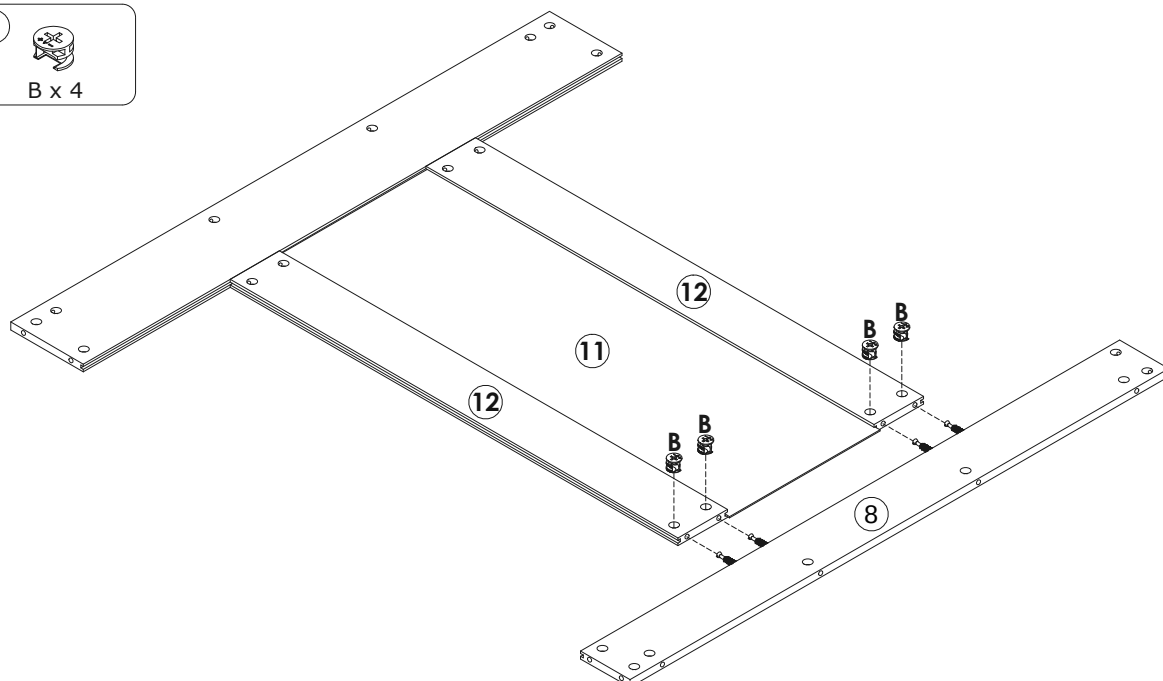



# Assembly Instructions


## Step 13

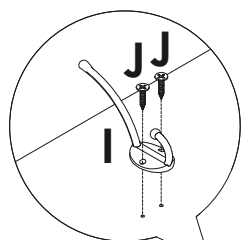



 **180°**  
Please flip carefully.

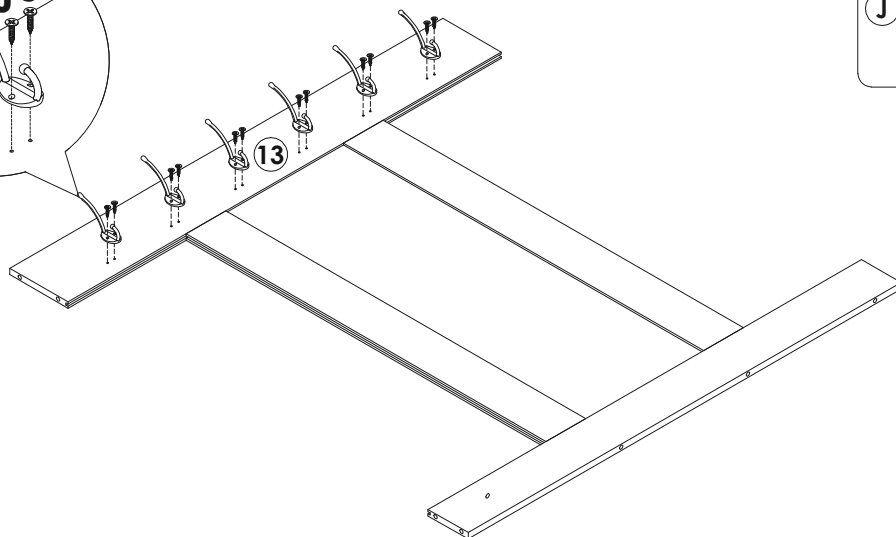

## Step 14




 **90°**  
"Requires 2 people to assemble,  
Please flip carefully."

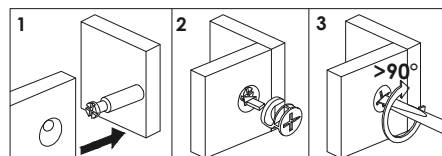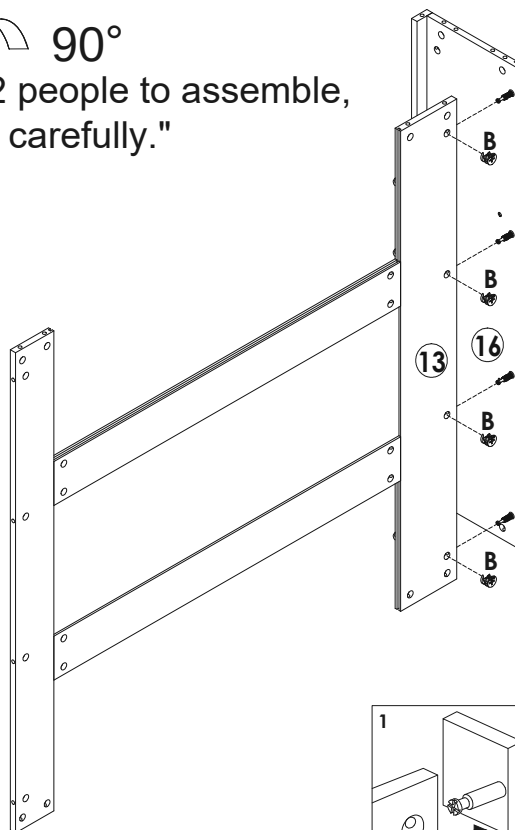

# Assembly Instructions





## Step 15

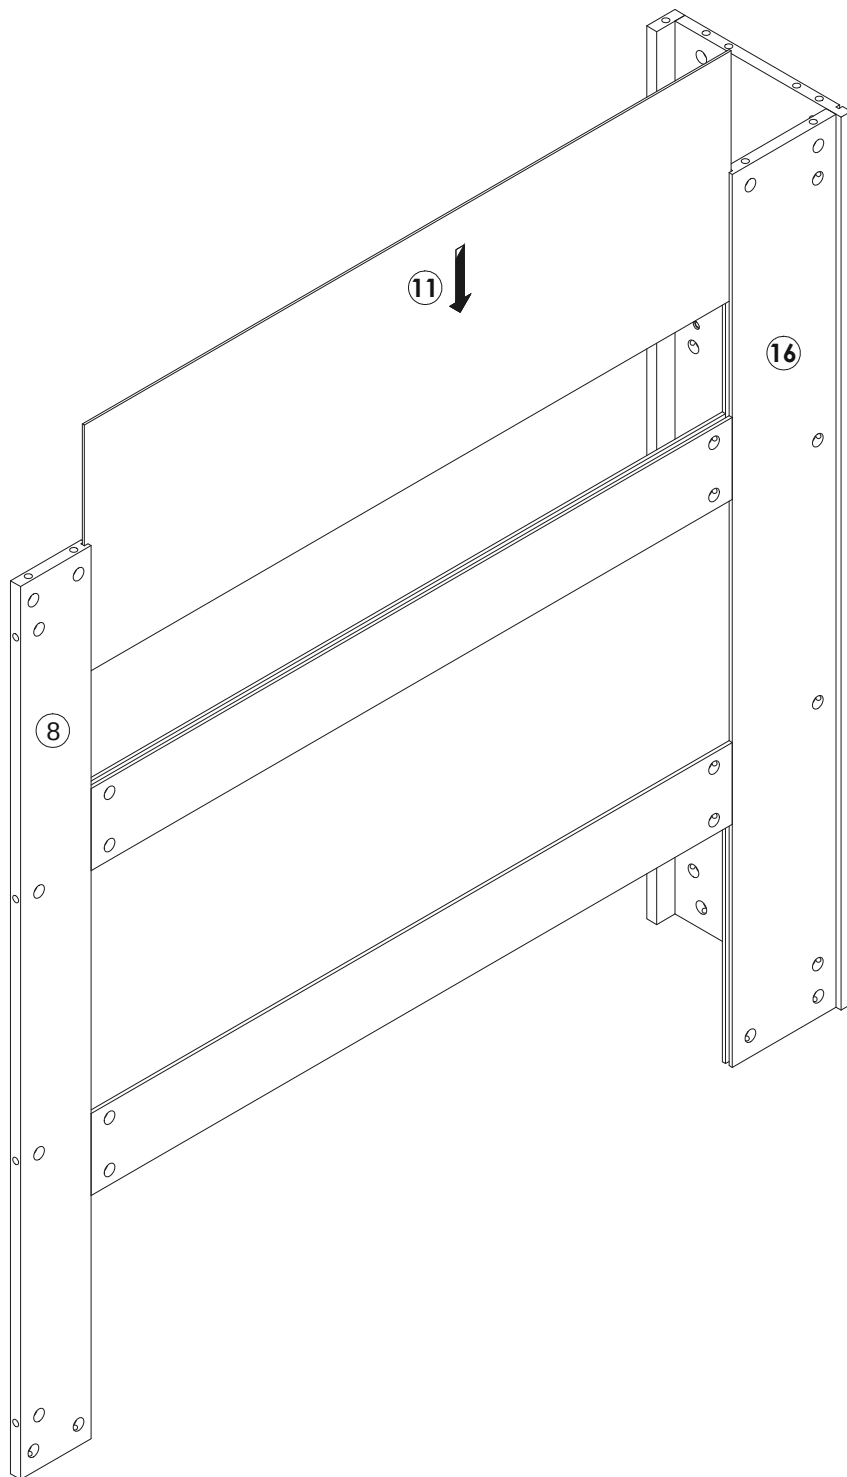

# Assembly Instructions



## Step 16

"Requires 2 people to assemble,  
Please be careful."

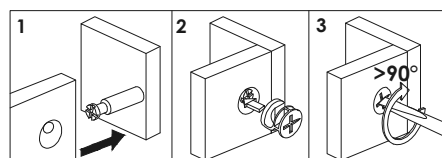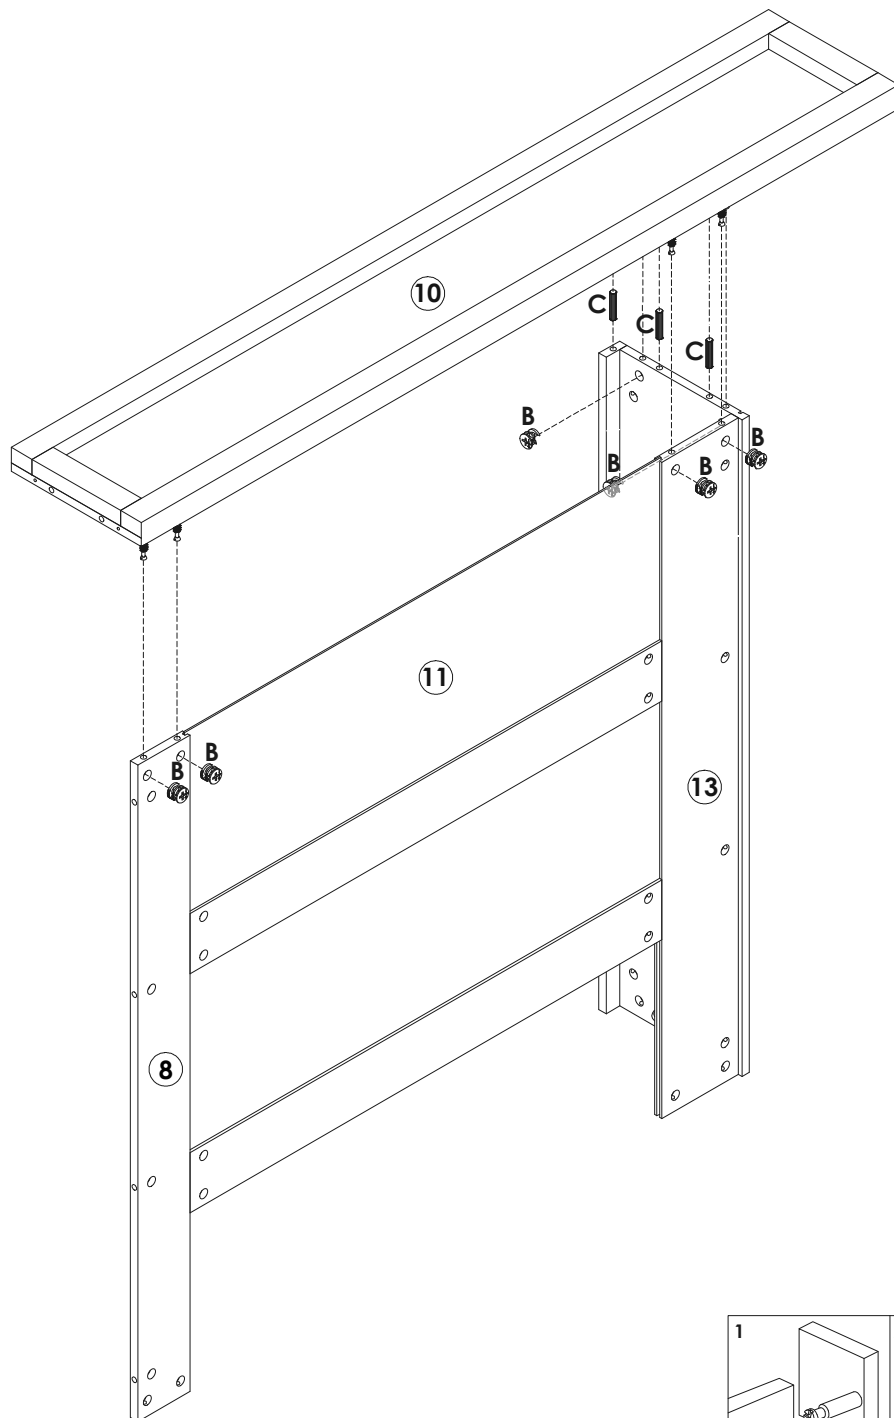


# Assembly Instructions

## Step 17



"Requires 2 people to assemble,  
Please flip carefully."


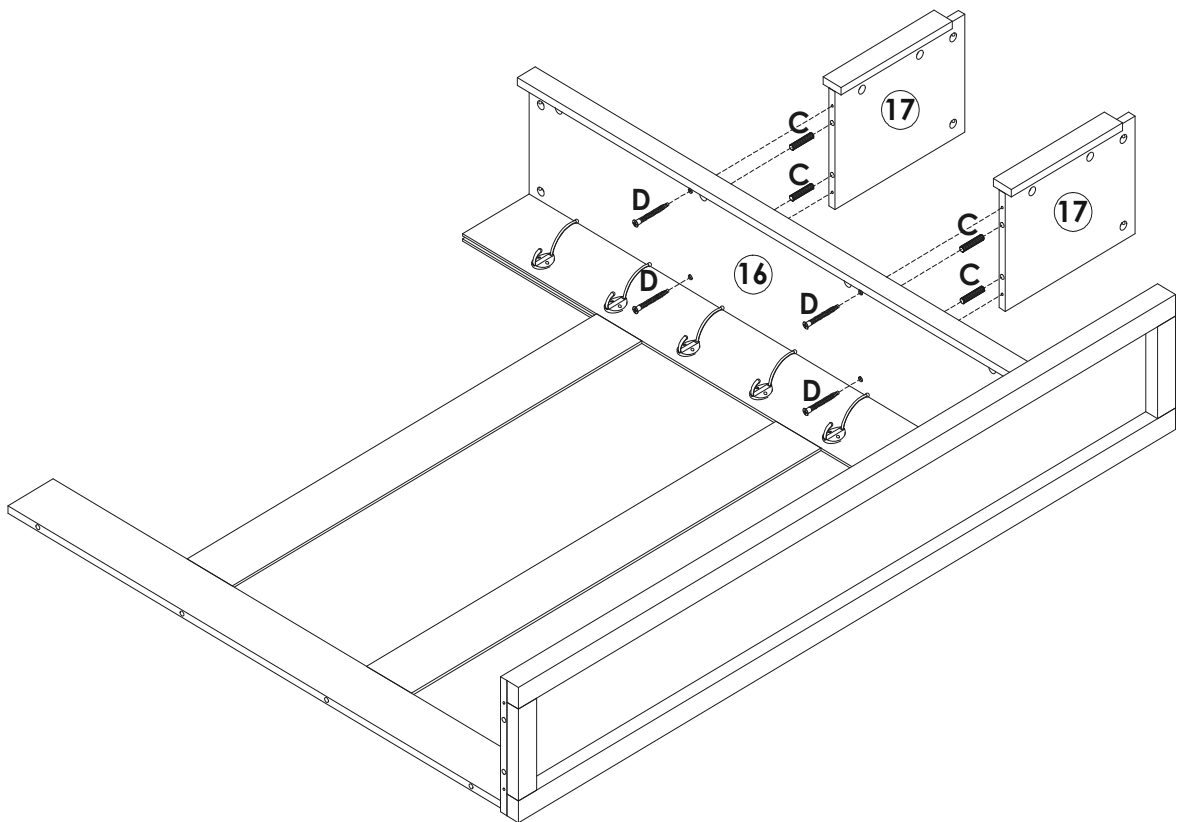


# Assembly Instructions

## Step 18







"Requires 2 people to assemble,  
Please flip carefully."

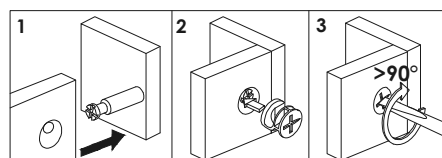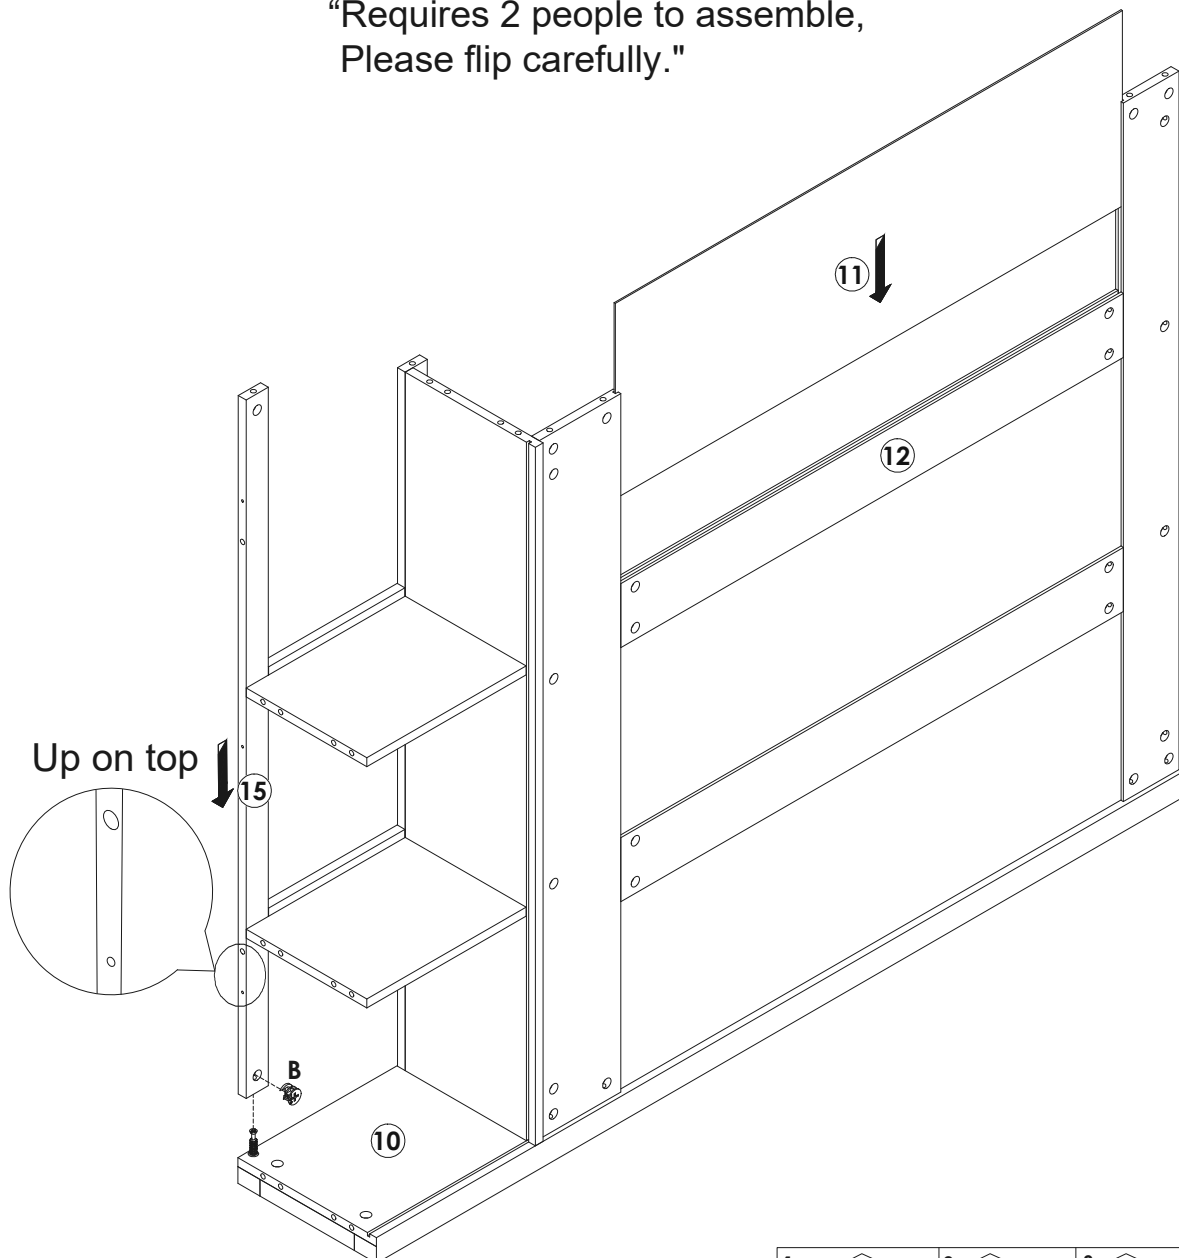

# Assembly Instructions

## Step 19

"Requires 2 people to assemble,  
Please be careful."

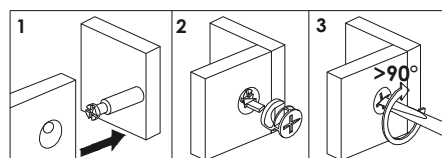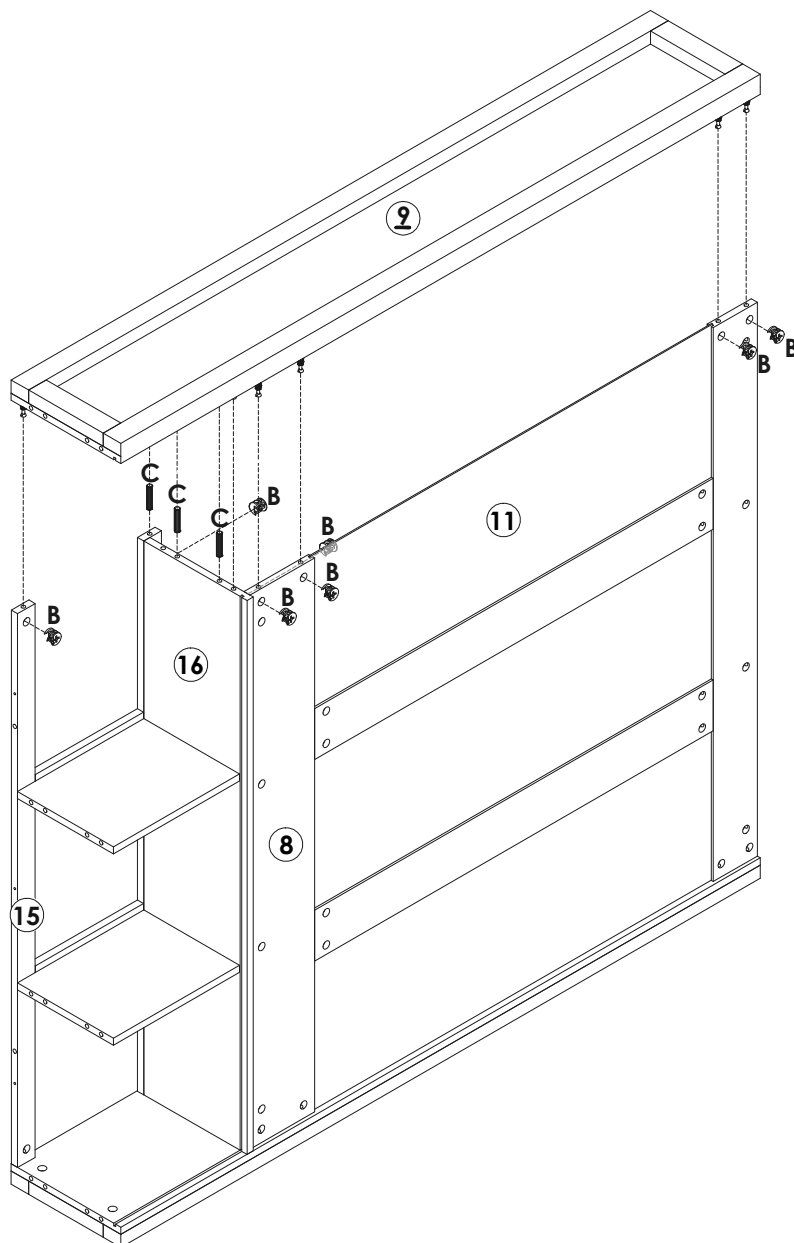


# Assembly Instructions

## Step 20



90°






"Requires 2 people to assemble,  
Please flip carefully."

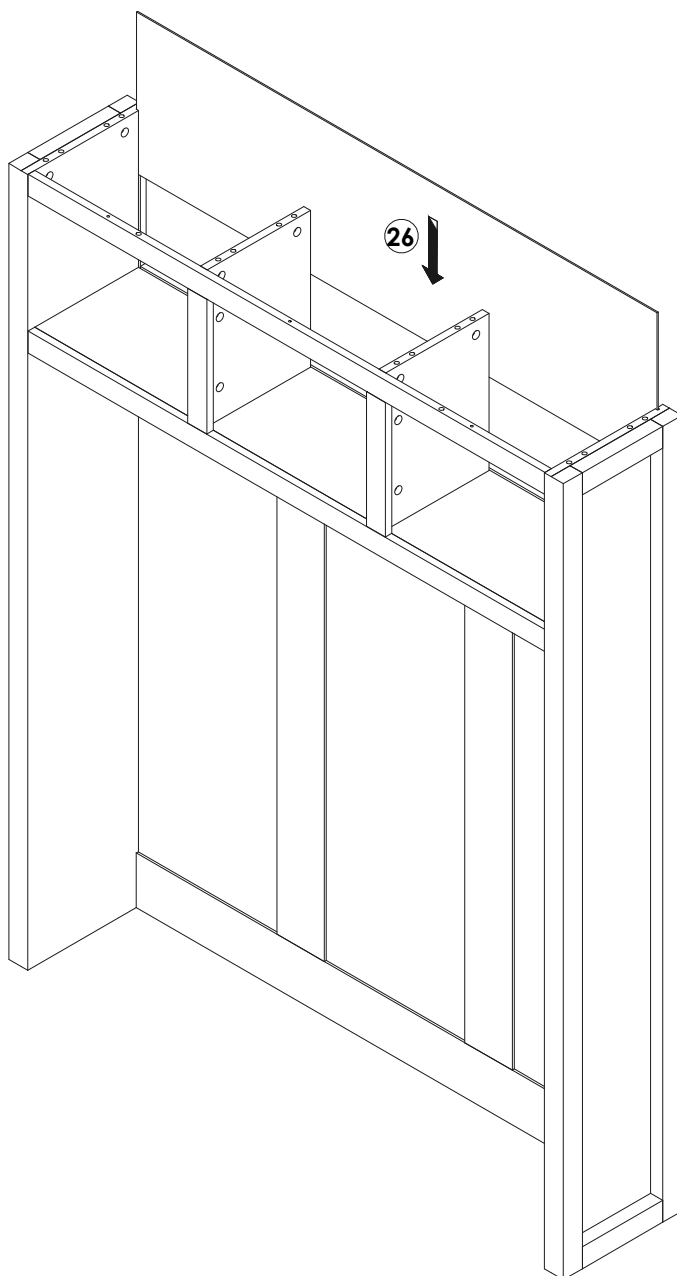

# Assembly Instructions




## Step 21

"Requires 2 people to assemble,  
Please be careful."

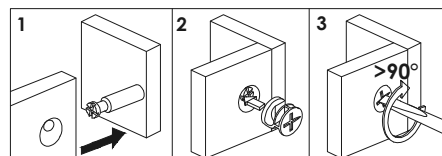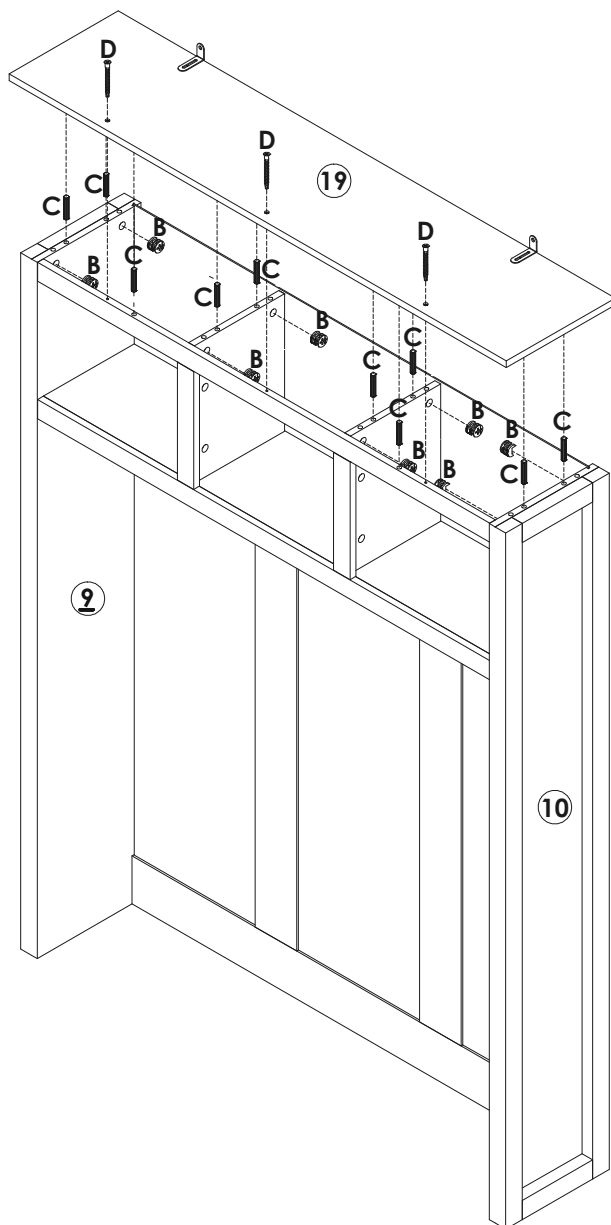

# Assembly Instructions






## Step 22

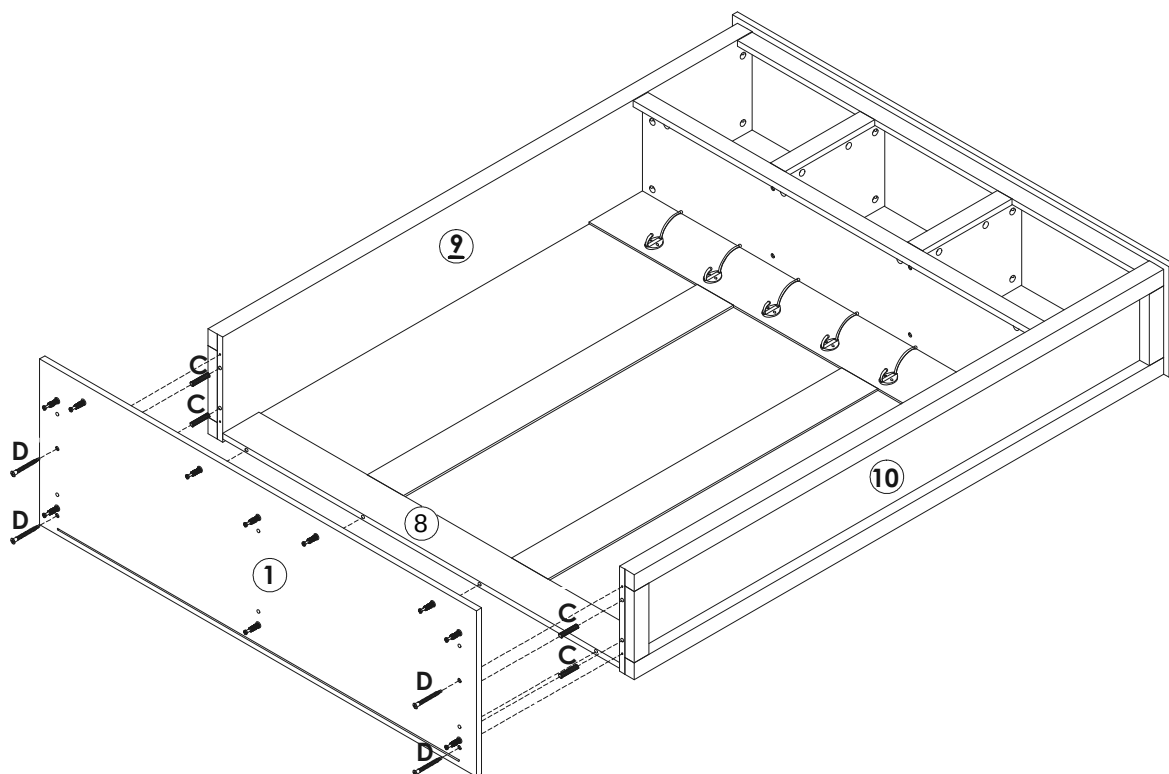



# Assembly Instructions

## Step 23

"Assemble as shown."

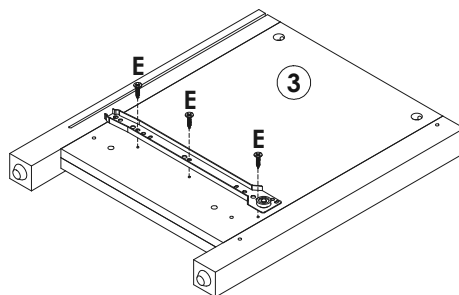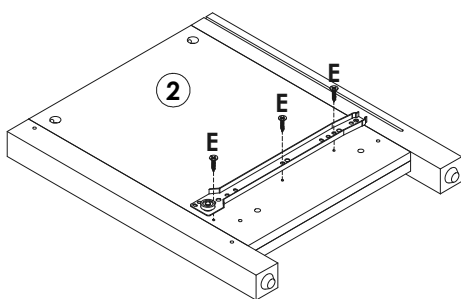
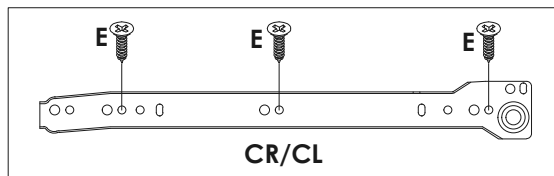


## Step 24


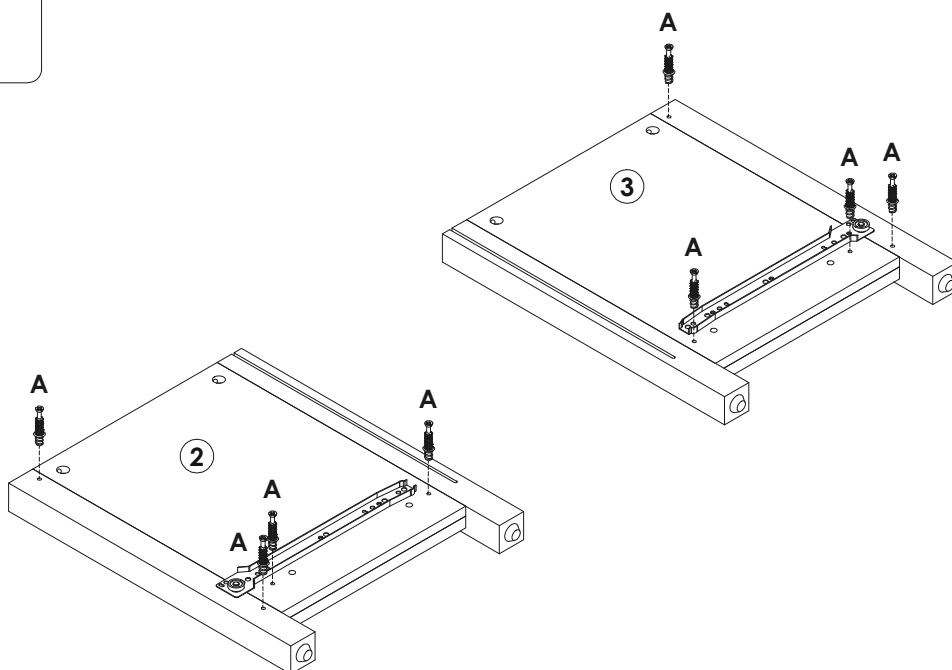



# Assembly Instructions

## Step 25

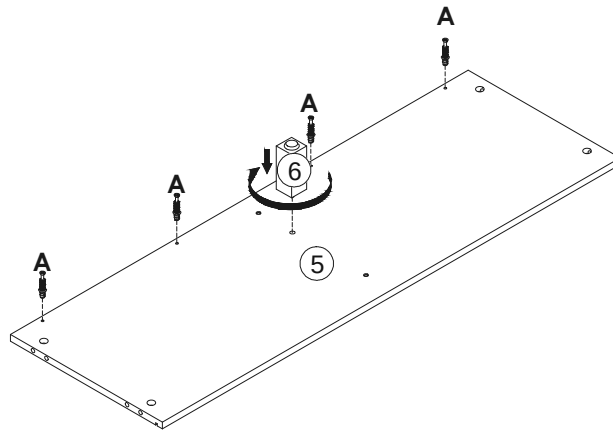

## Step 26

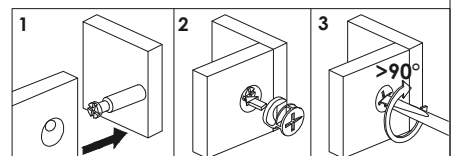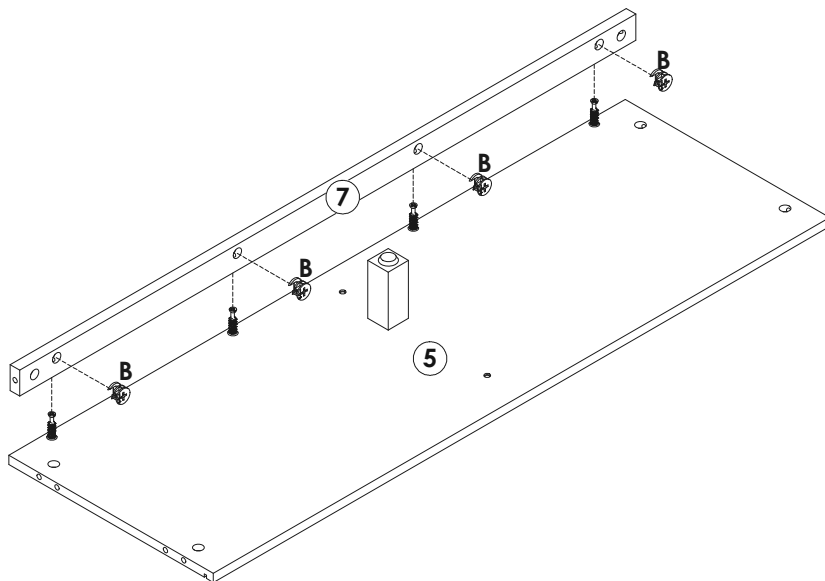




# Assembly Instructions

## Step 27




"Assemble as shown."



Turn over part ④ to install on the both sides.


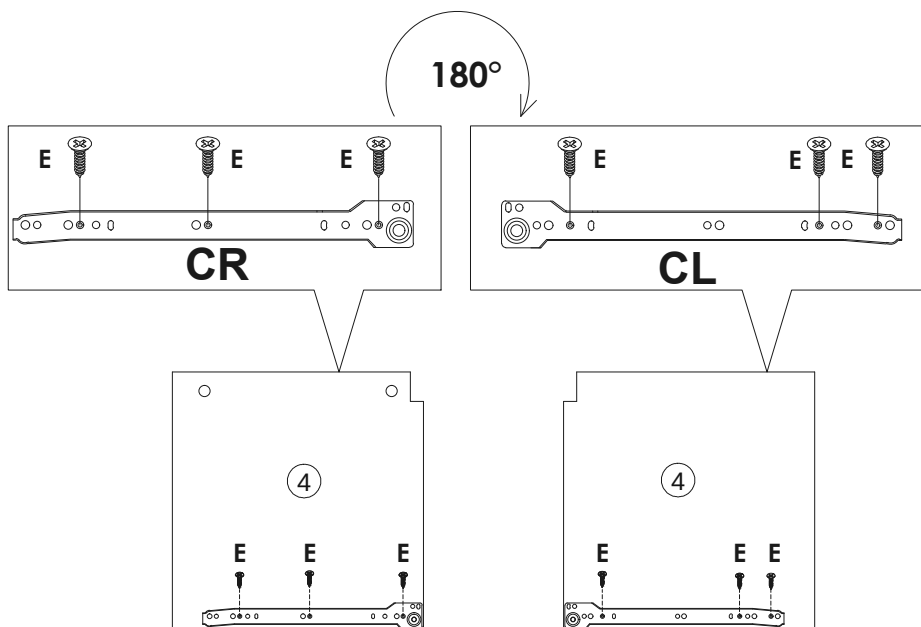




## Step 28


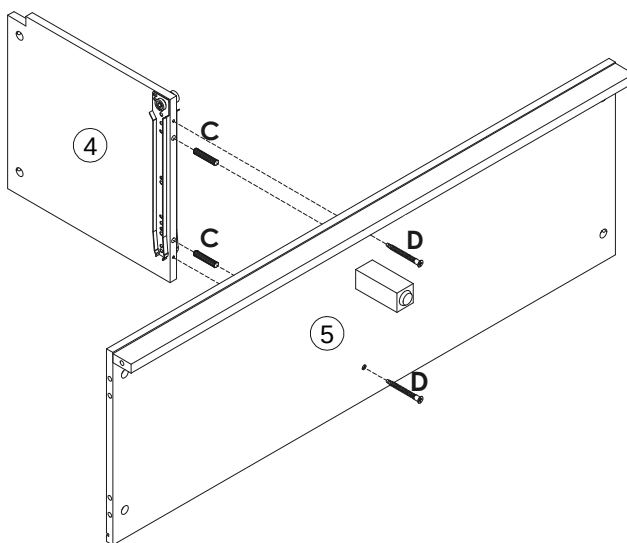




# Assembly Instructions

## Step 29

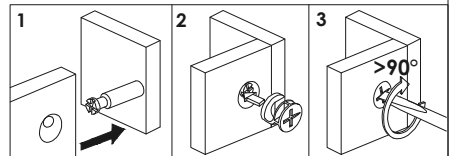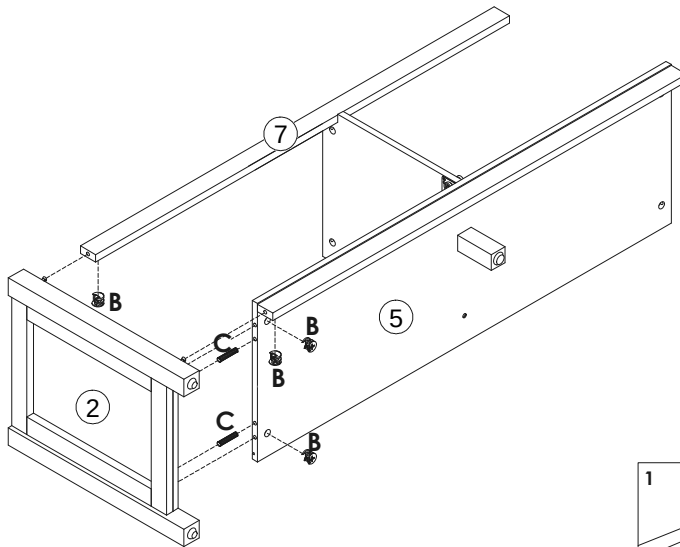

## Step 30

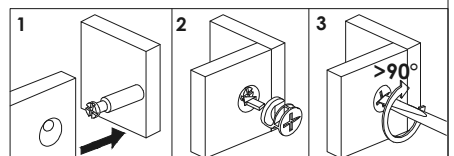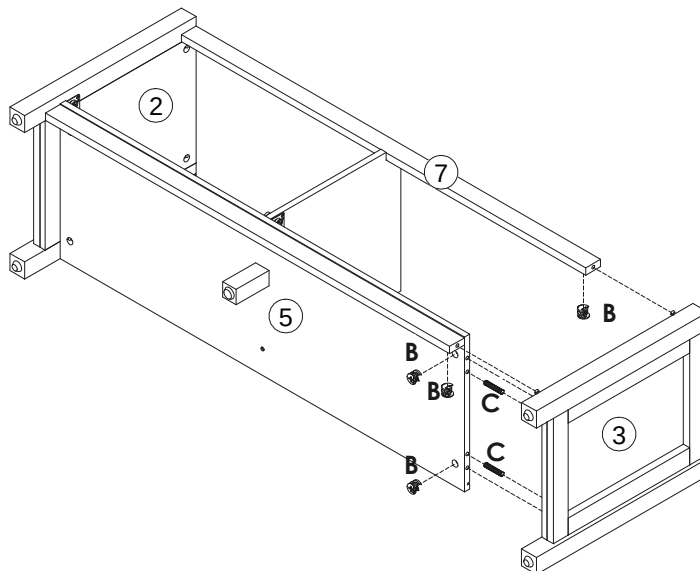


# Assembly Instructions

## Step 31







"Requires 2 people to assemble,  
Please flip carefully."

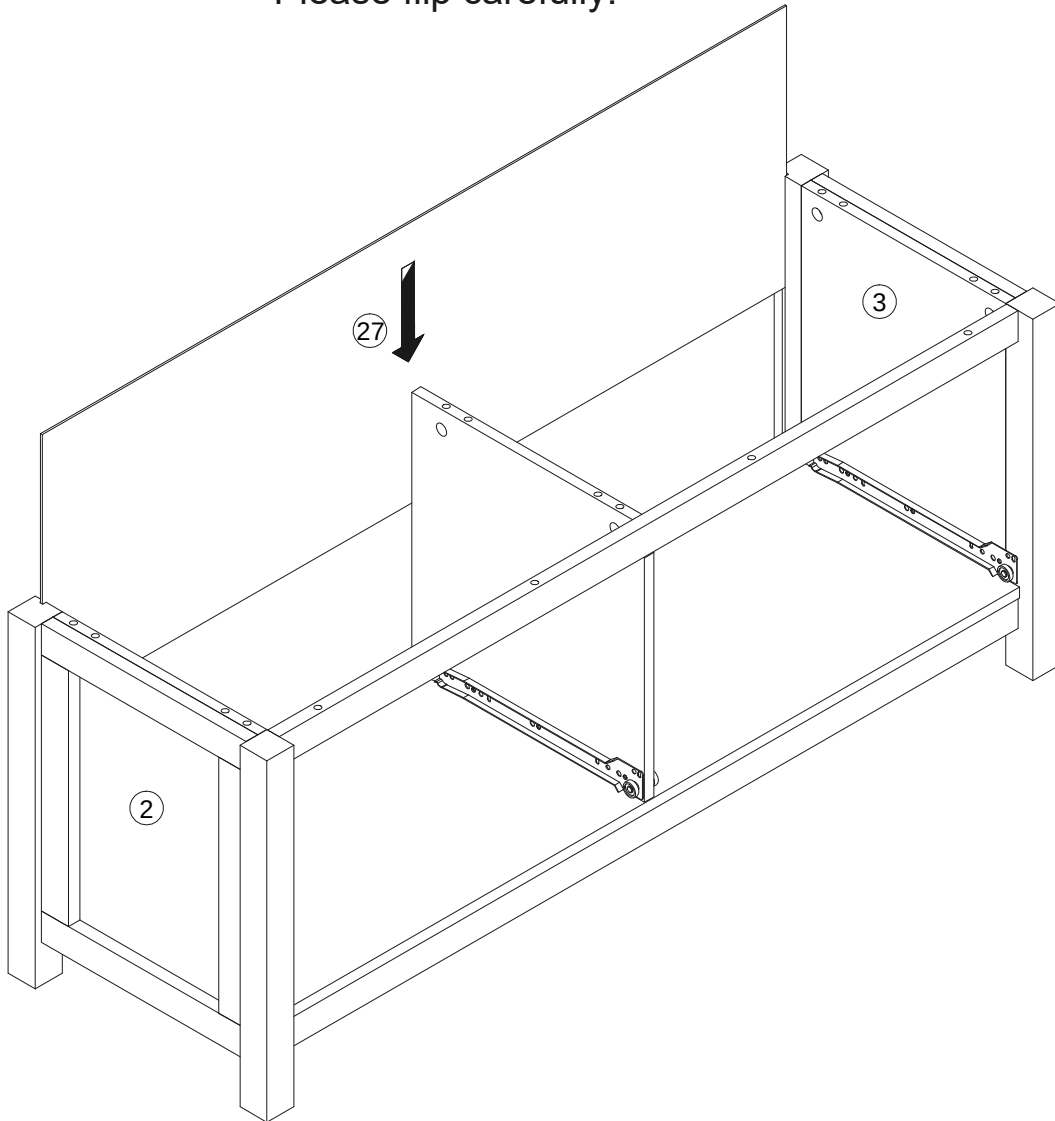

# Assembly Instructions




## Step 32

"Requires 2 people to assemble,  
Please flip carefully."

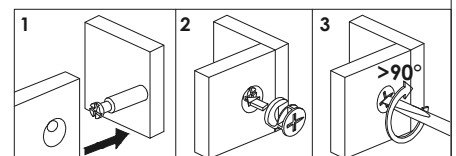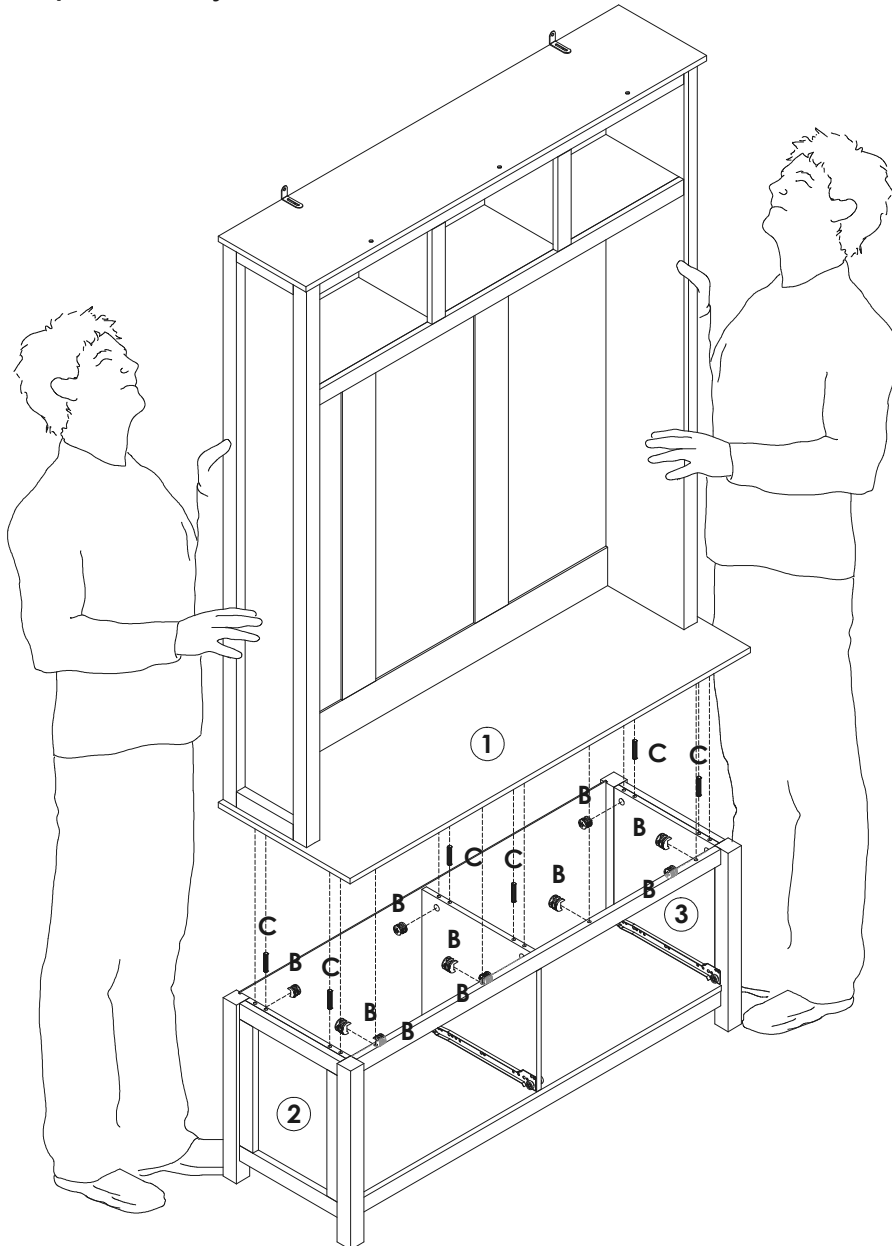



# Assembly Instructions

## Step 33

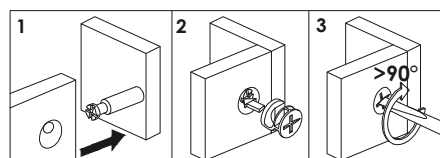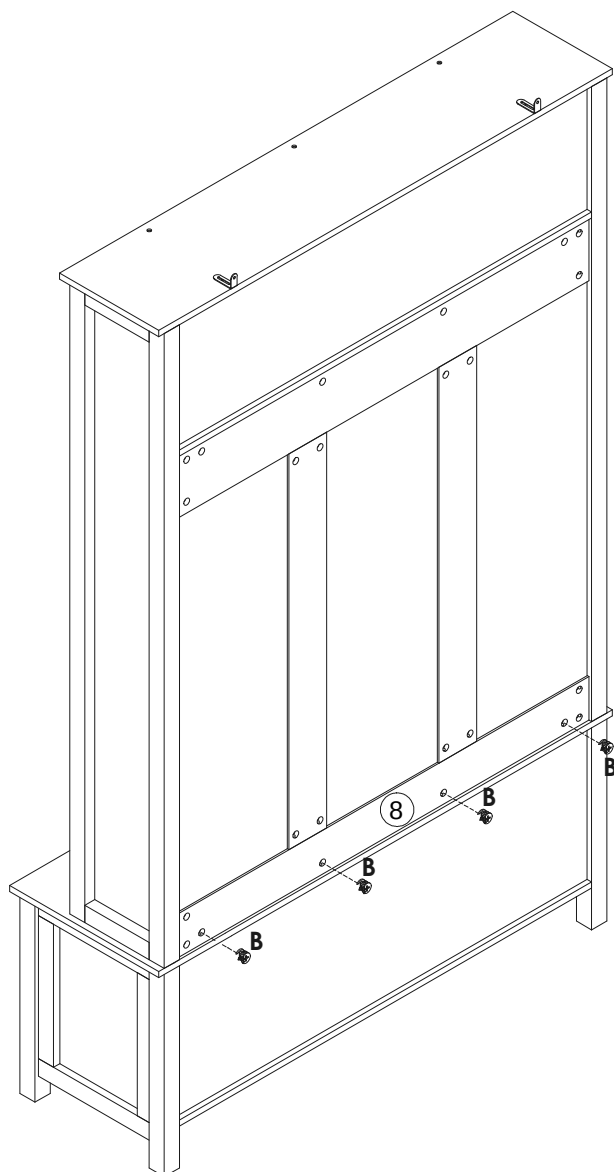

# Assembly Instructions





## Step 34

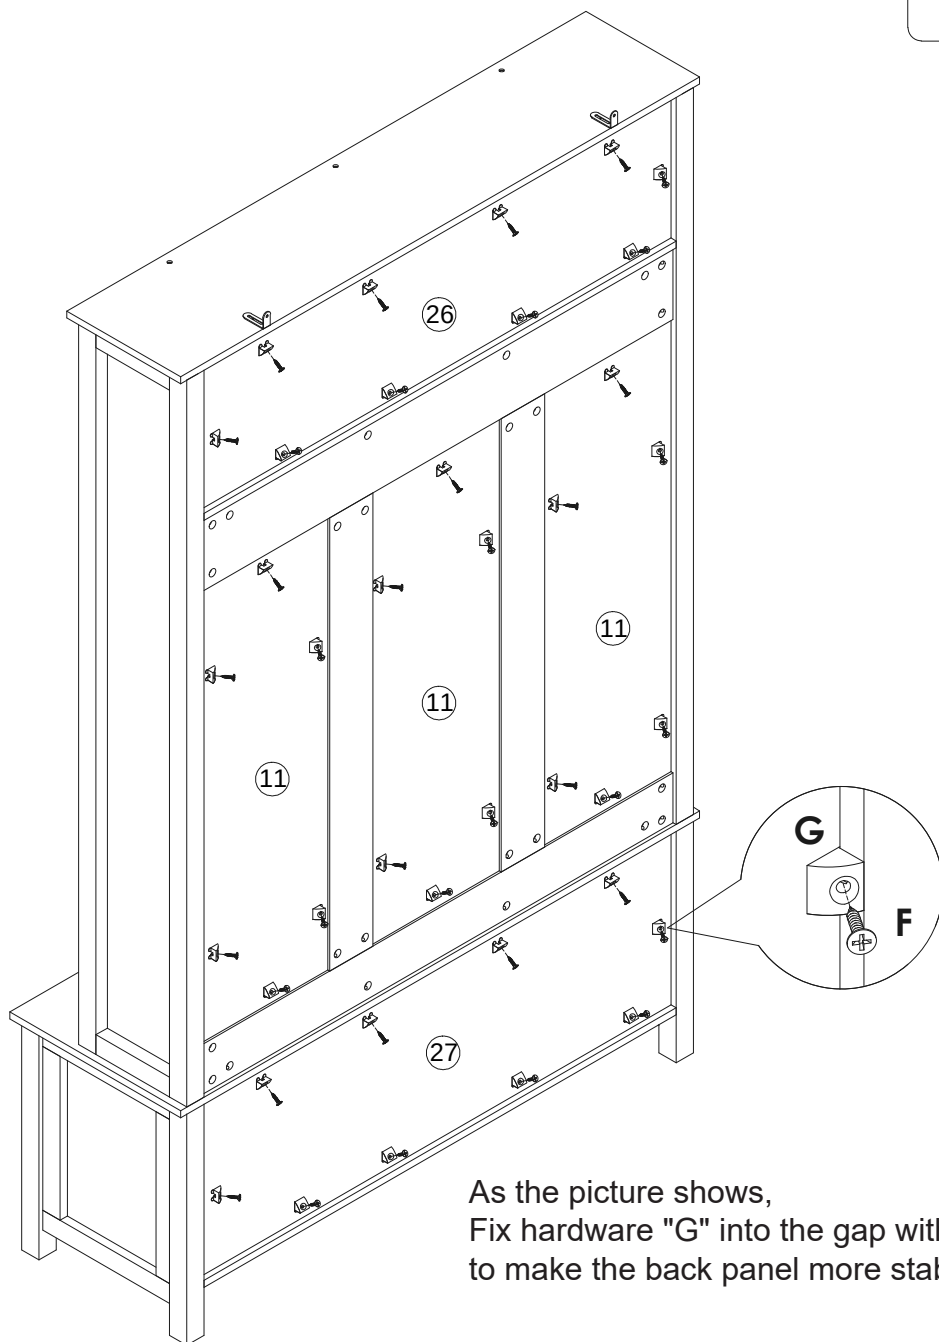



As the picture shows,  
Fix hardware "G" into the gap with screws  
to make the back panel more stable.

# Assembly Instructions

## Step 35


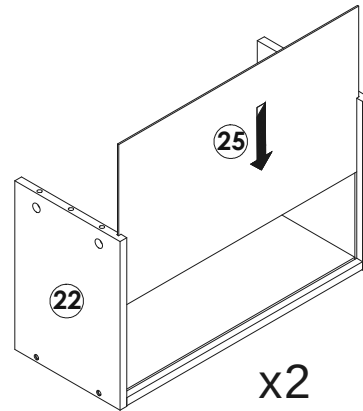
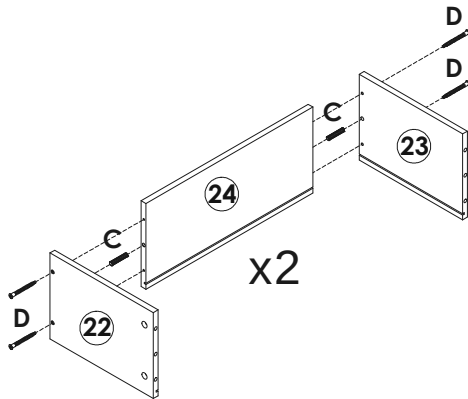




## Step 36

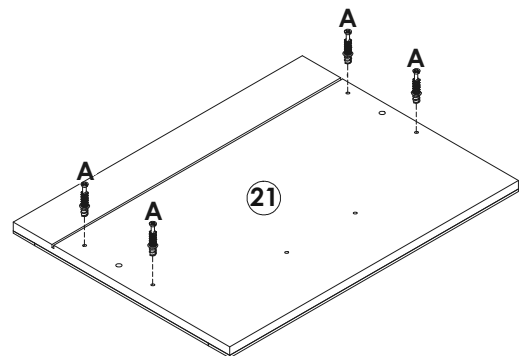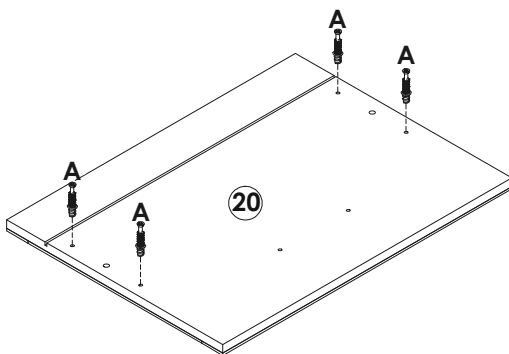




# Assembly Instructions

## Step 37

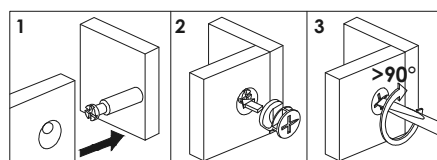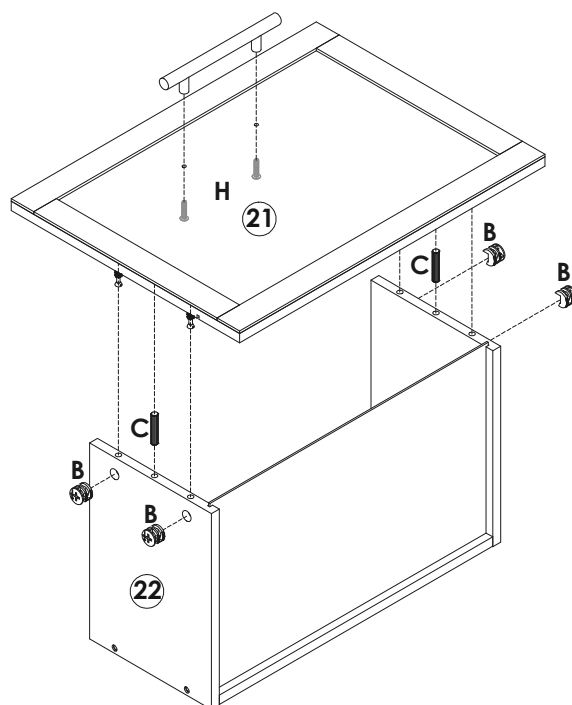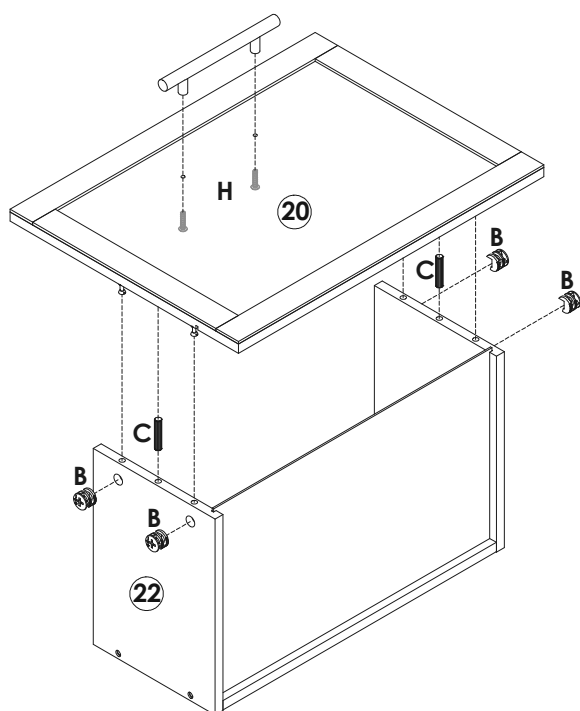




# Assembly Instructions

## Step 38


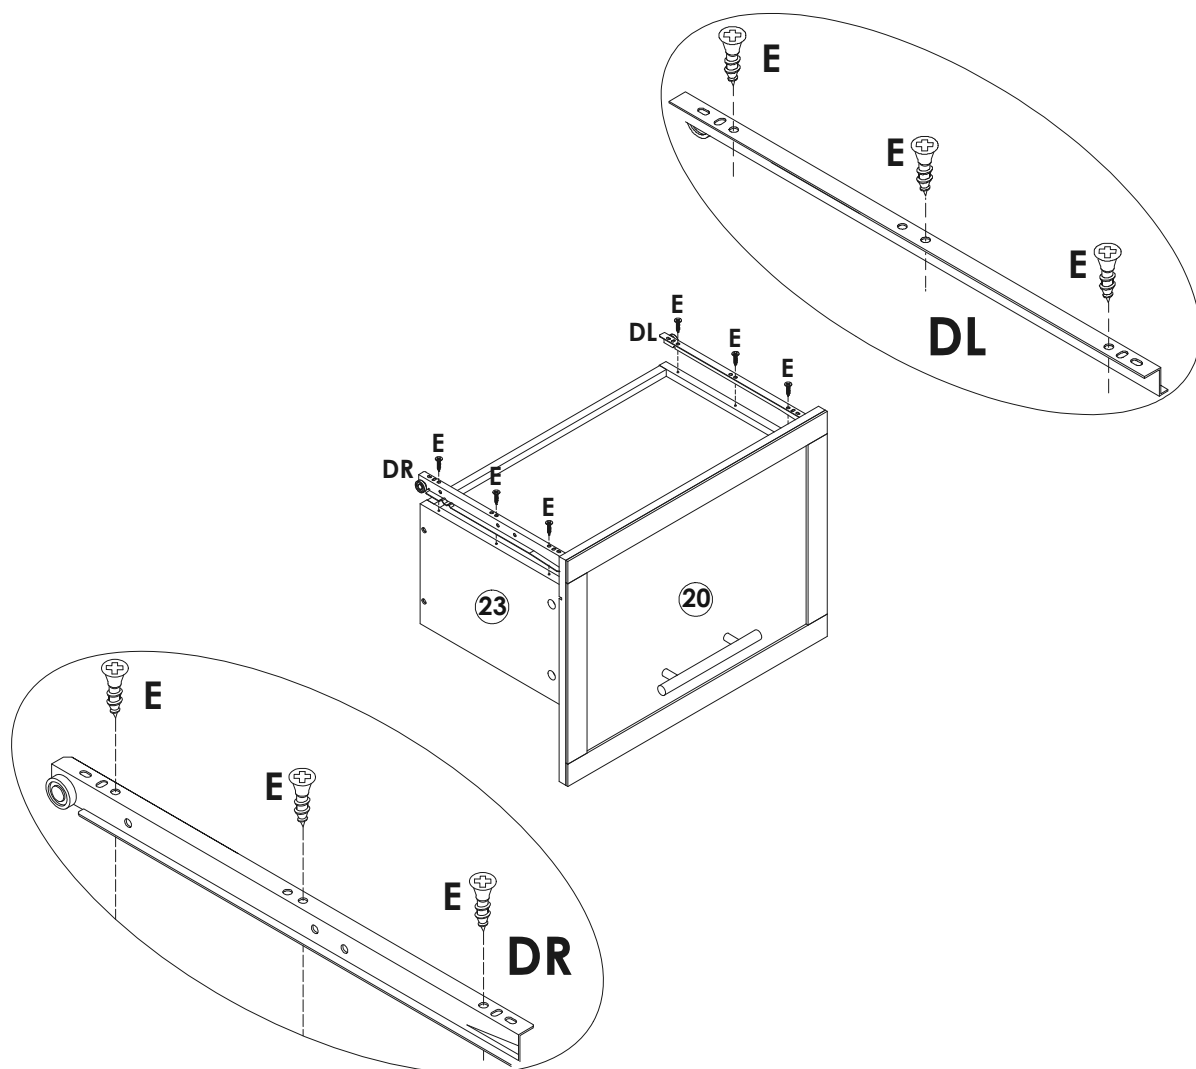




# Assembly Instructions



## Step 39

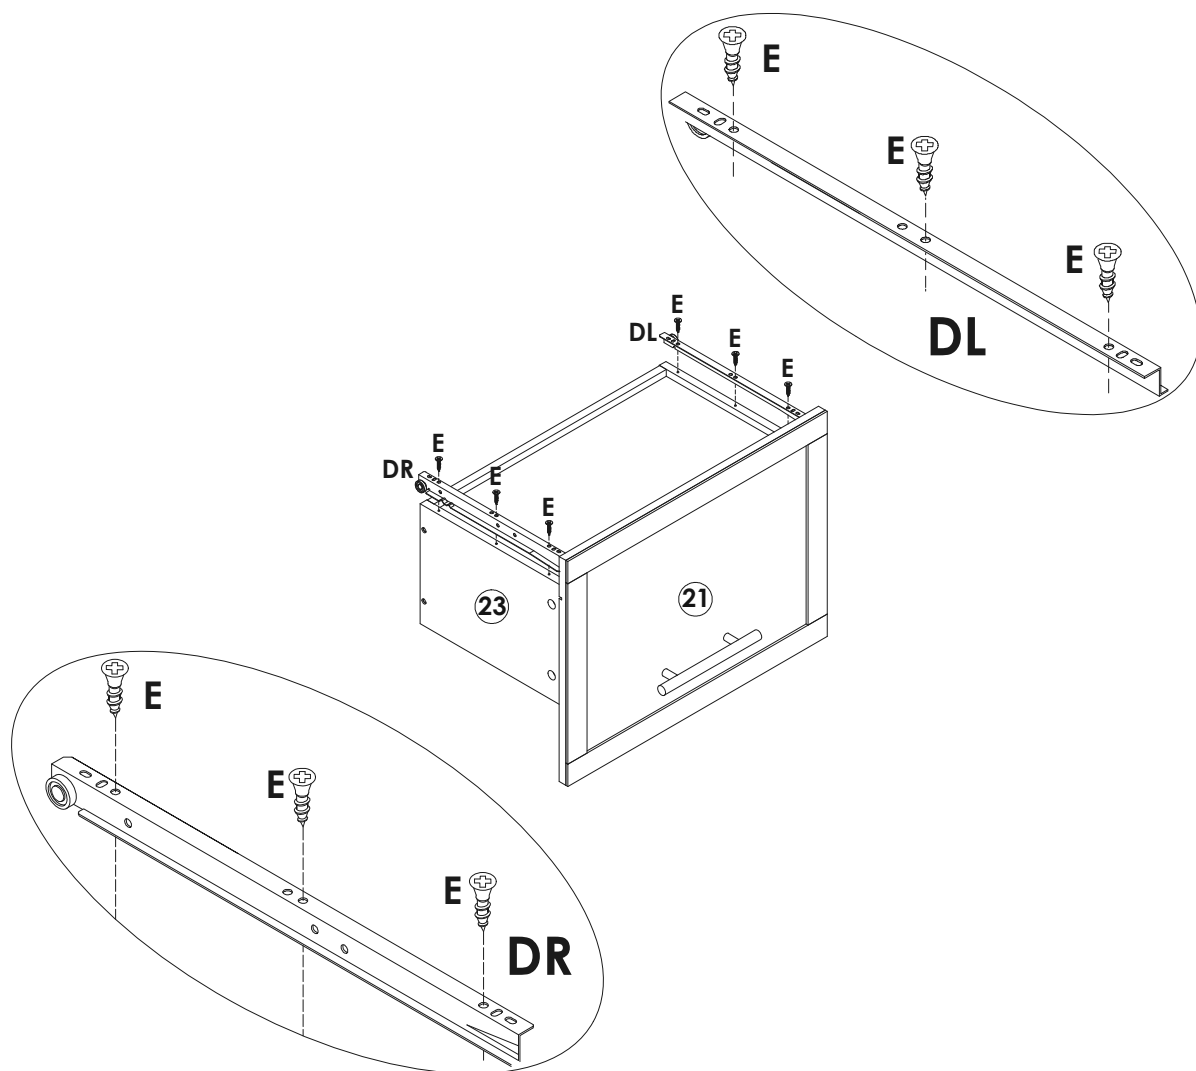


## Step 39

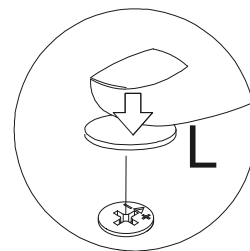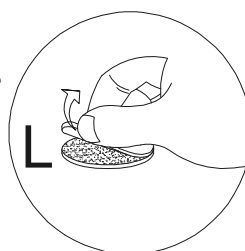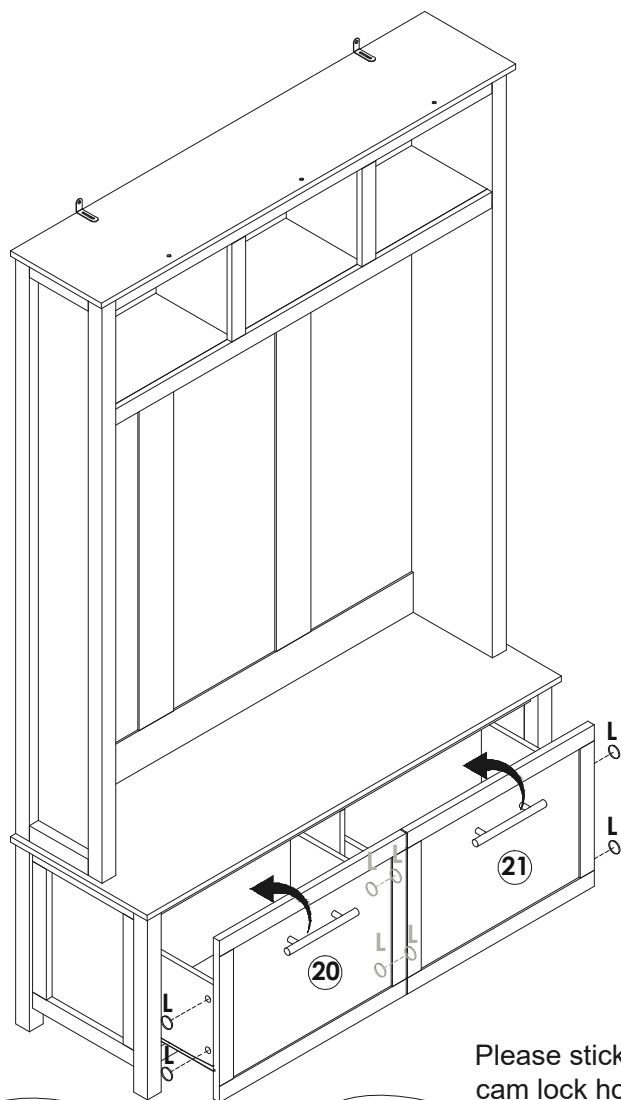




Please stick the hardware "L" on the exposed cam lock hole that makes your product more beautiful.

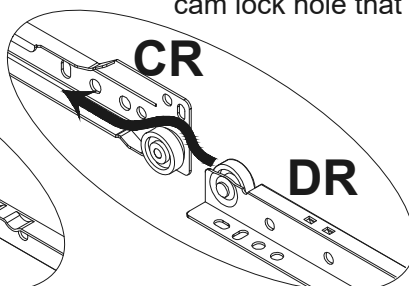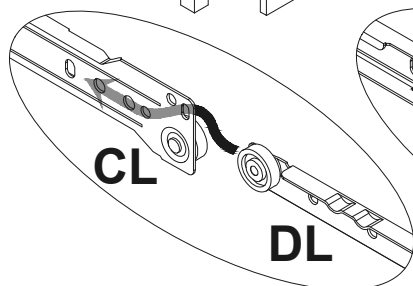

## Step 40





**WALL**

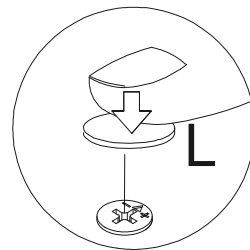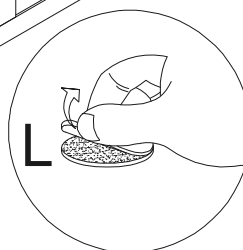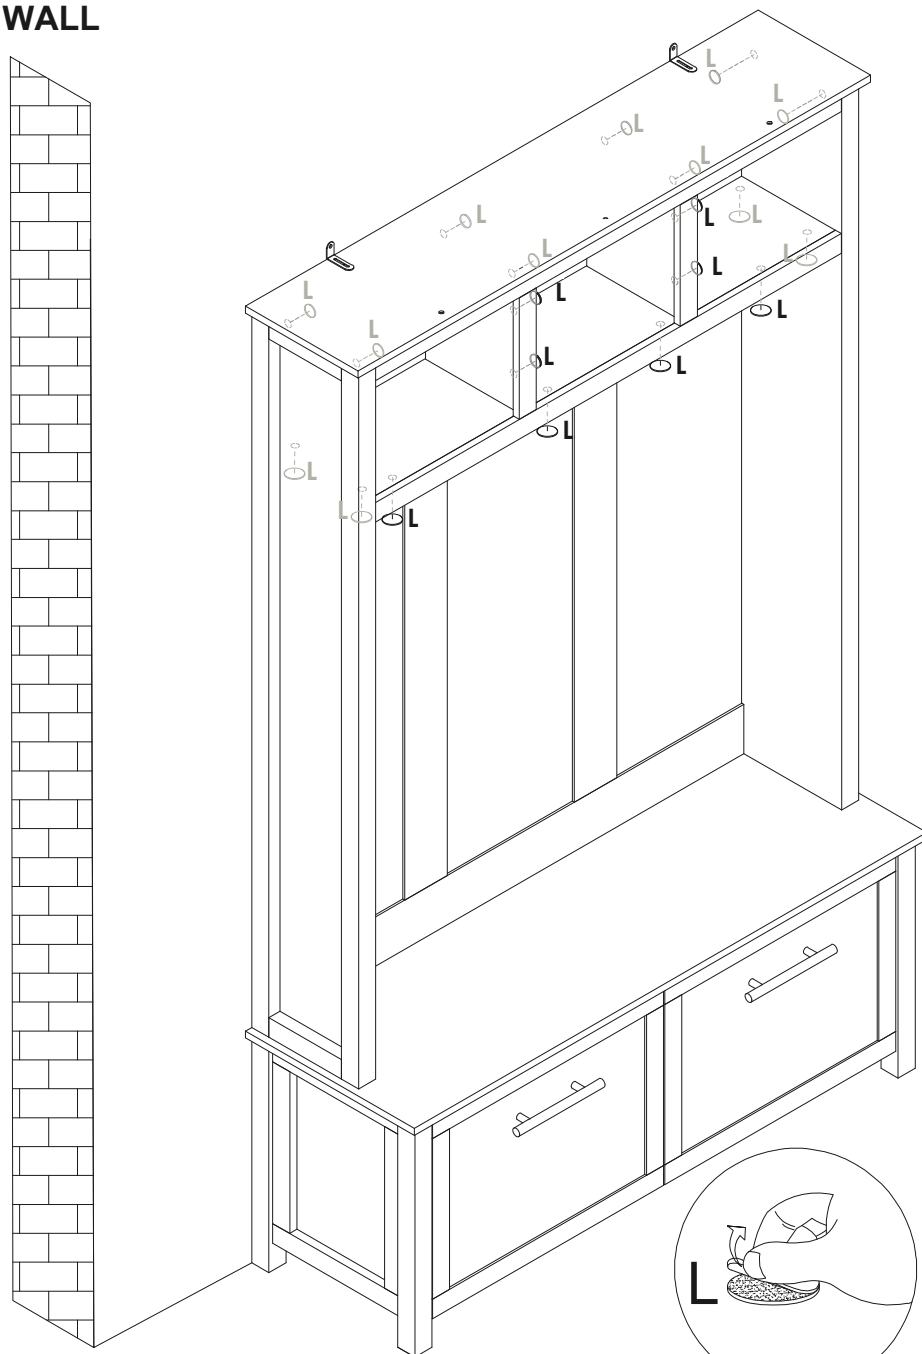

Please stick the hardware "L" on the exposed cam lock hole that makes your product more beautiful.

## Step 41

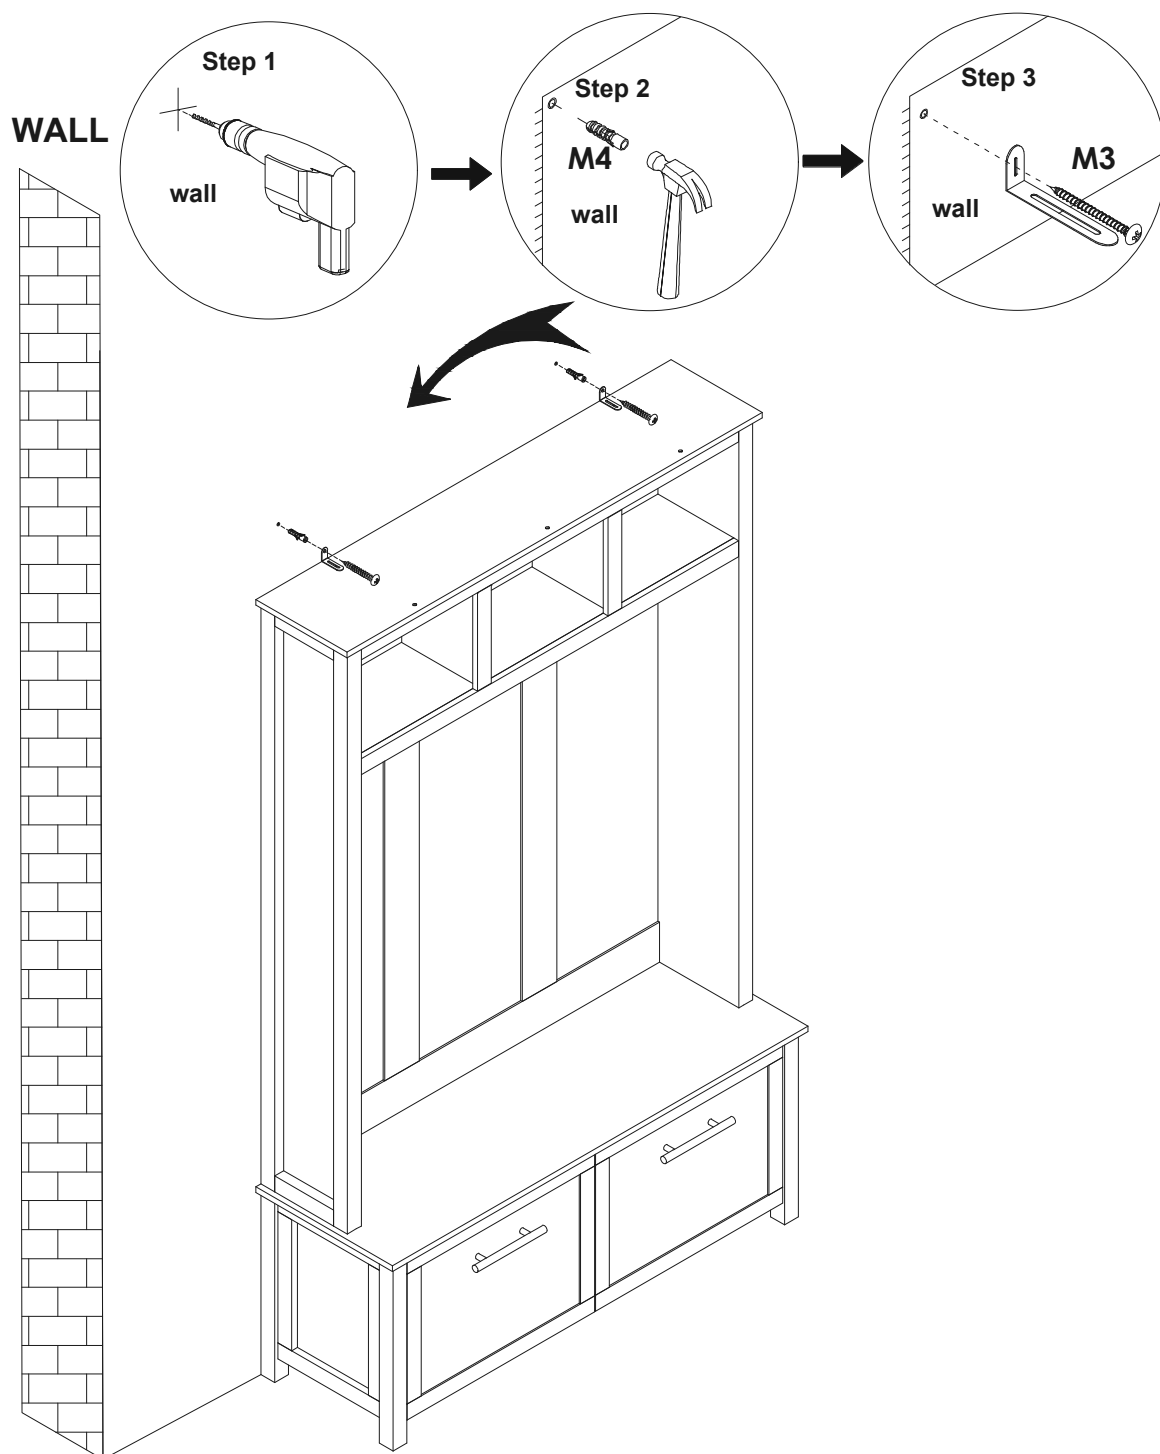

# COMPLETED

WALL

