



NO-DIG JUMBO REED FENCING

4 ft. H x 8 ft. L

INSTALLATION GUIDE

Enhance your outdoor space with natural beauty and privacy. Our No-Dig Jumbo Reed Fencing is designed to attach easily to an existing support structure—**no digging required!**

RECOMMENDED MATERIALS



UV-Resistant
Zip Ties



Galvanized
Wire



Measuring
Tape



Wire Cutters
or Scissors



Gloves

EASY INSTALLATION STEPS



- 1 MEASURE YOUR AREA**
Measure the length and height of your installation area.

Each panel is approximately
4 ft. high x 8 ft. long
(covers up to 32 sq. ft.).



- 2 PREPARE THE SUPPORT**
Ensure your existing fence, frame, posts, or structure is secure and clear of any debris.



- 3 UNROLL THE FENCING**
Carefully unroll the Jumbo Reed Fencing panel.
The fencing is pre-assembled and woven—no assembly required.




- 4 POSITION THE PANEL**
Place the panel against the support structure.
Align the top edge to the desired height.



- 5 SECURE THE TOP**
Attach the top of the panel using zip ties or wire.
Secure every 12–18 inches.



- 6 SECURE SIDES, BOTTOM & THROUGHOUT THE FENCE**
Attach the sides, bottom, and throughout the fence (including the middle) every 12–18 inches for a secure installation.

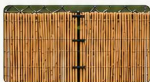

- 7 CONNECT ADDITIONAL PANELS**
Line up additional panels side by side and connect using zip ties or wire every 12–18 inches.
Adjust stretch as needed to achieve approximately 8 ft. in length.



IMPORTANT: This product must be attached to an existing support structure. It is not designed to stand alone. Supports sold separately.

RECOMMENDED ATTACHMENT SPACING



= Recommended Attachment Point

Add additional attachment points in windy areas for extra stability.

PRODUCT DETAILS



Size:
Approximately 4 ft. H x 8 ft. L



Coverage:
Up to 32 sq. ft.



Reed Diameter:
Approximately 1/4" – 3/8"



Material:
Sustainably harvested freshwater reed woven with durable vinyl-coated wire



Weight:
Approximately 8 lbs.



Color:
Natural



Installation:
Zip ties or wire



Support Required:
Yes – attaches to existing fence, frame, posts, or structure

INSTALLATION TIPS

- Stretch the panel gently during installation to achieve approximately 8 ft. in length.
- Do not overtighten zip ties or wire.
- Natural reed will vary in color and diameter—this is normal.
- Secure every 12–18 inches on the top, sides, bottom and throughout the fence (including the middle) for best results.
- Add extra attachment points in windy areas for additional stability.



Natural. Beautiful. No Dig. Easy to Install.

Thank you for choosing Backyard X-Scapes!