




# Product Installation Instructions

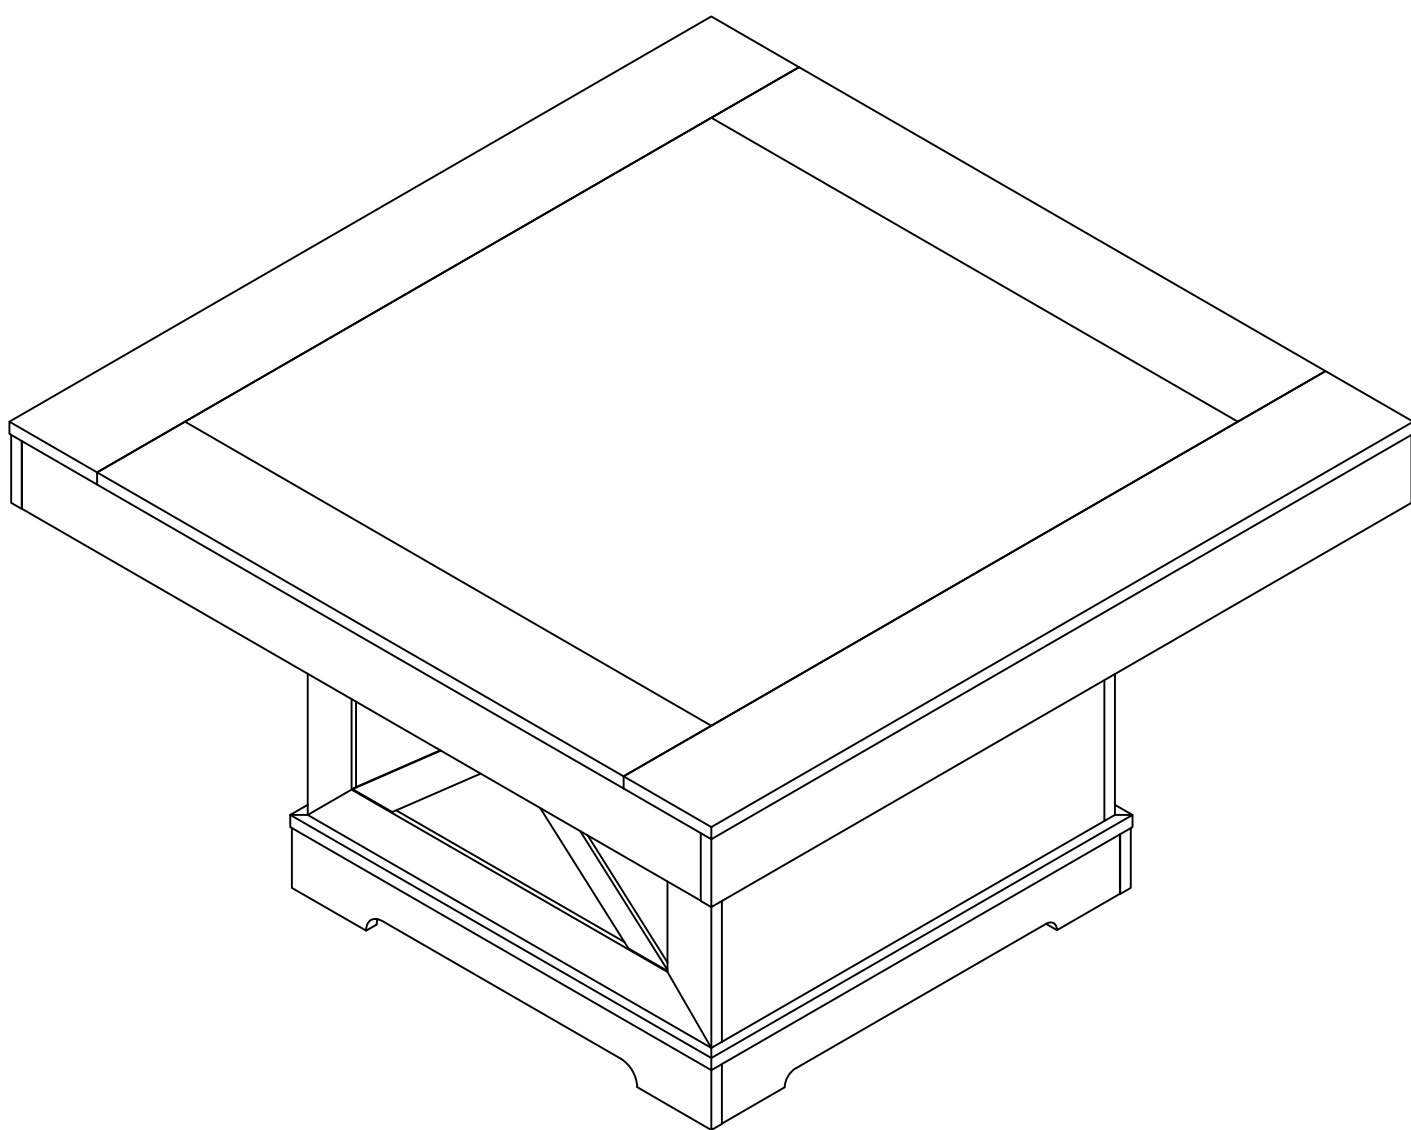


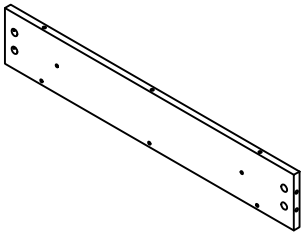


1x2

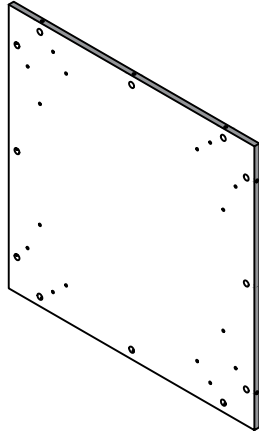


2x1

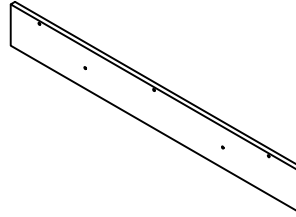


3x2

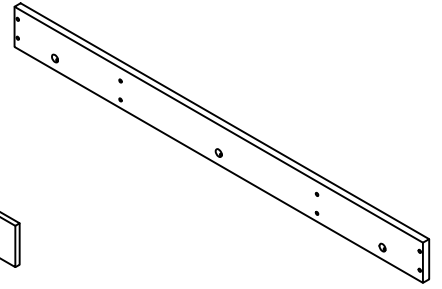


4x2

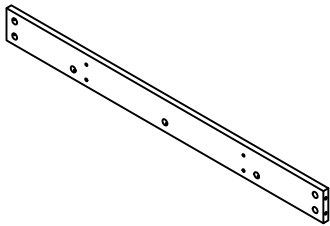


5x2

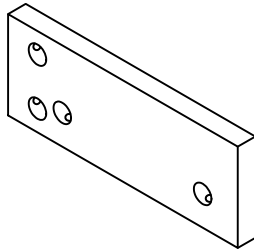


6x8

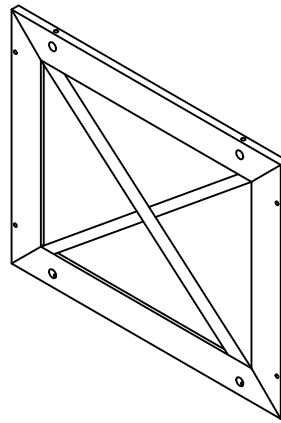


7x2

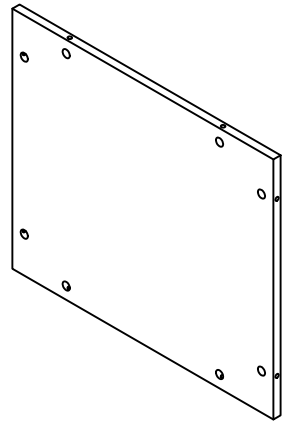


8x2

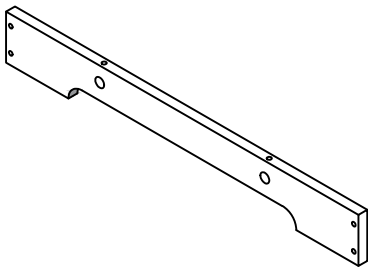

9x2

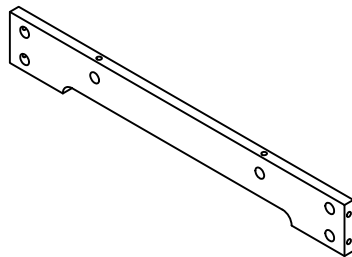


10x2

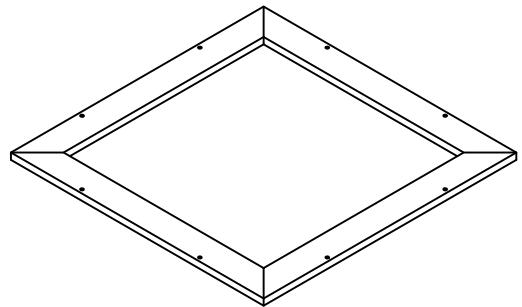

11x1


**A**

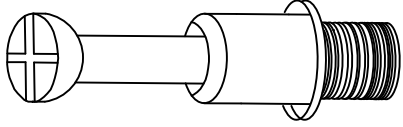

Two In One Screw  
(6x28mm)

112 Pcs  
+4 Pcs

**B**

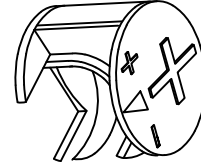

Two In One Nut  
(10x12mm)



112 Pcs  
+4 Pcs

**C**



Non-slip pads

8 Pcs  
+2 Pcs

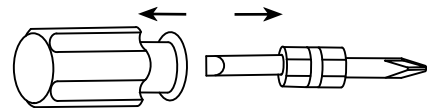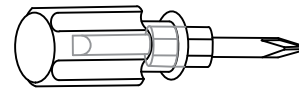


Double-head screwdriver, use as required


1 pcs

2

# Product structure decomposition

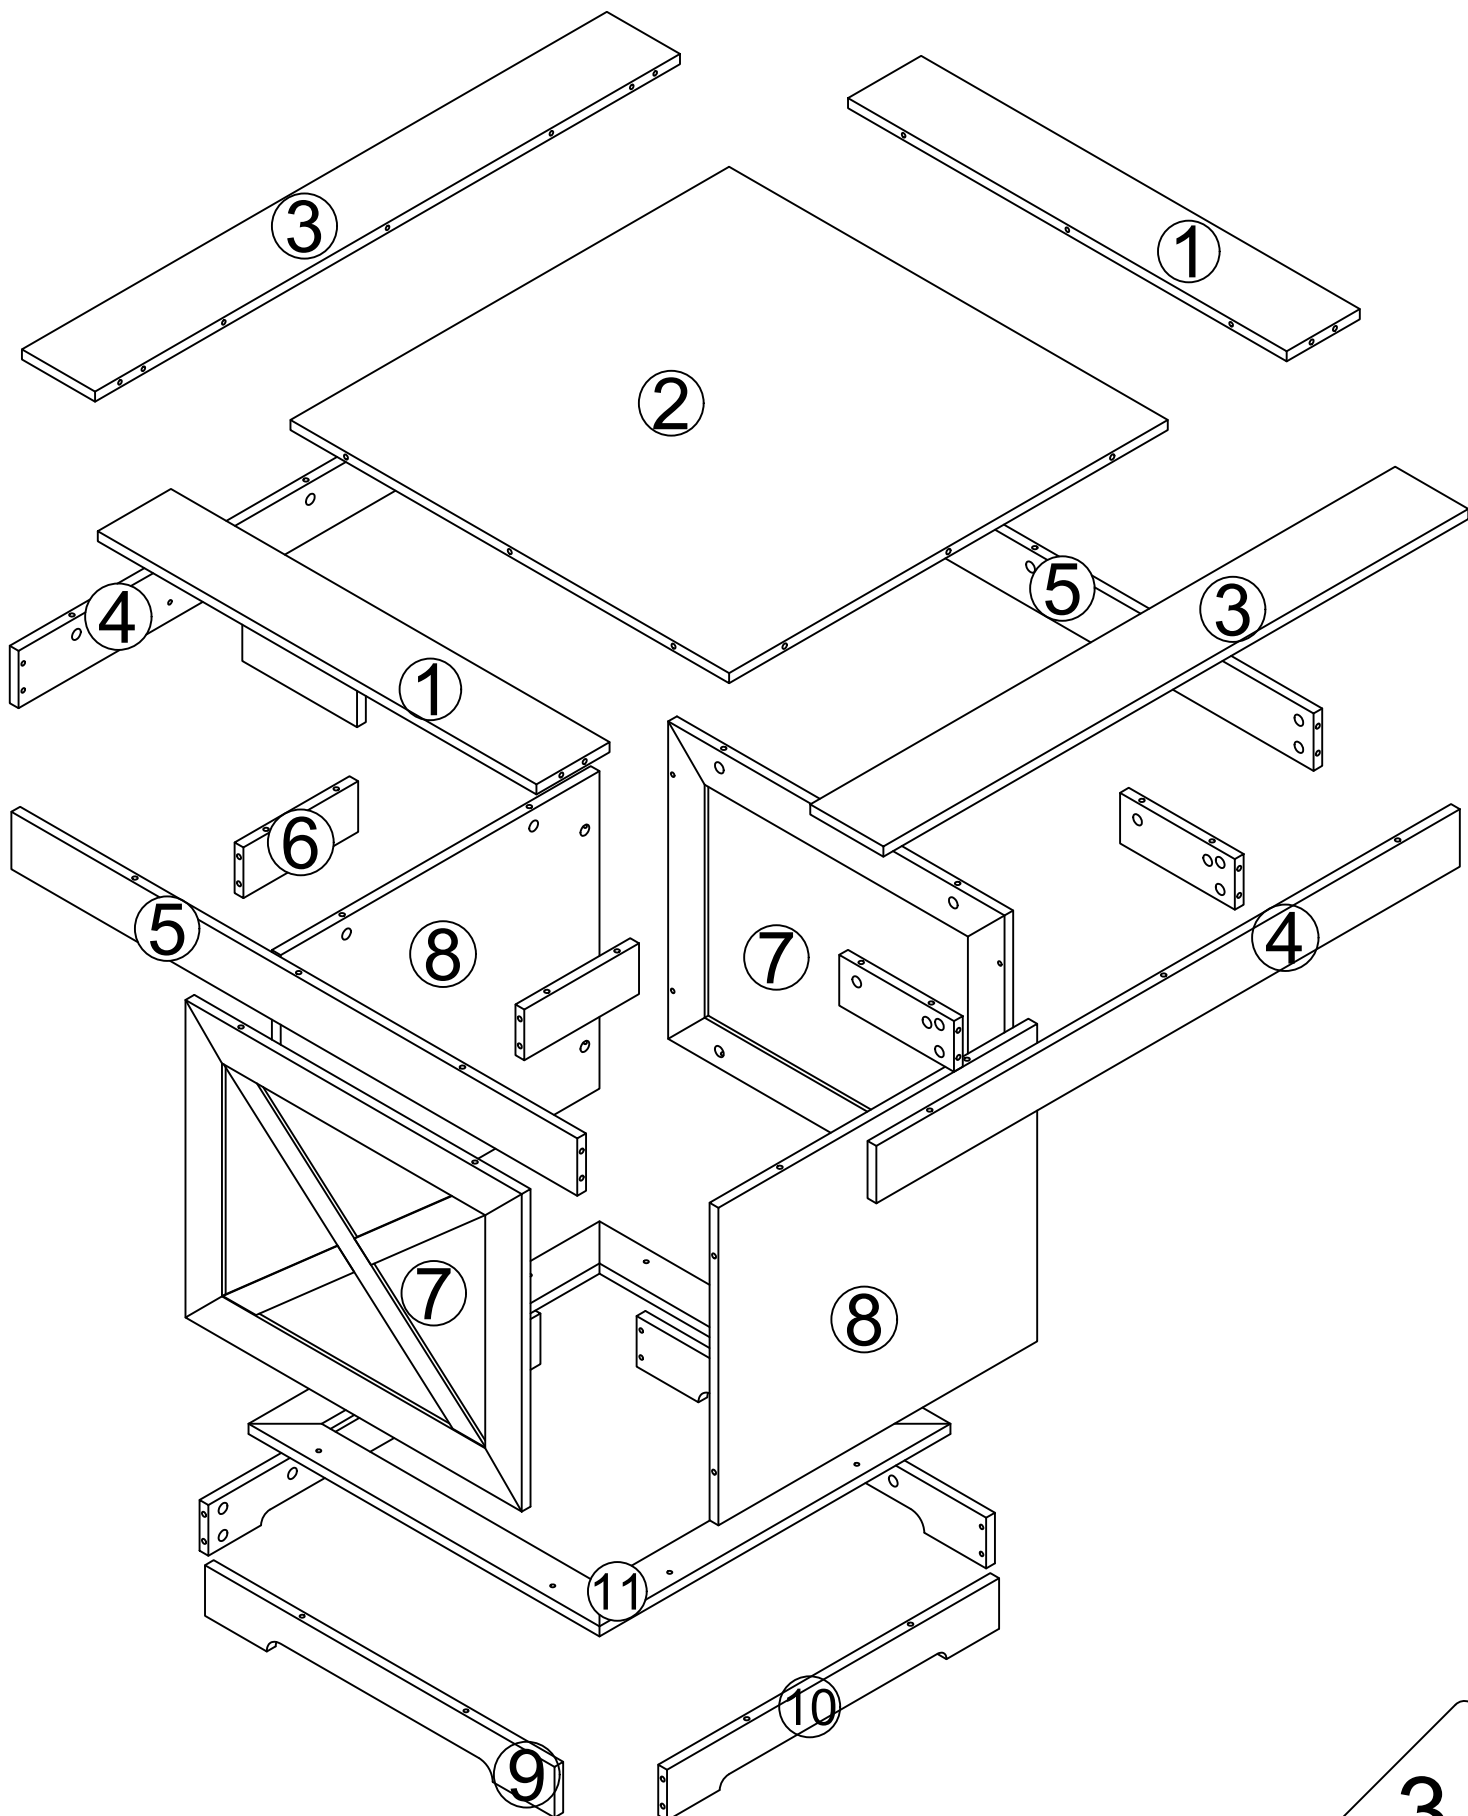


A

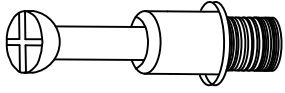


80 Pcs

B

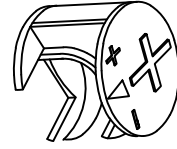


72 Pcs

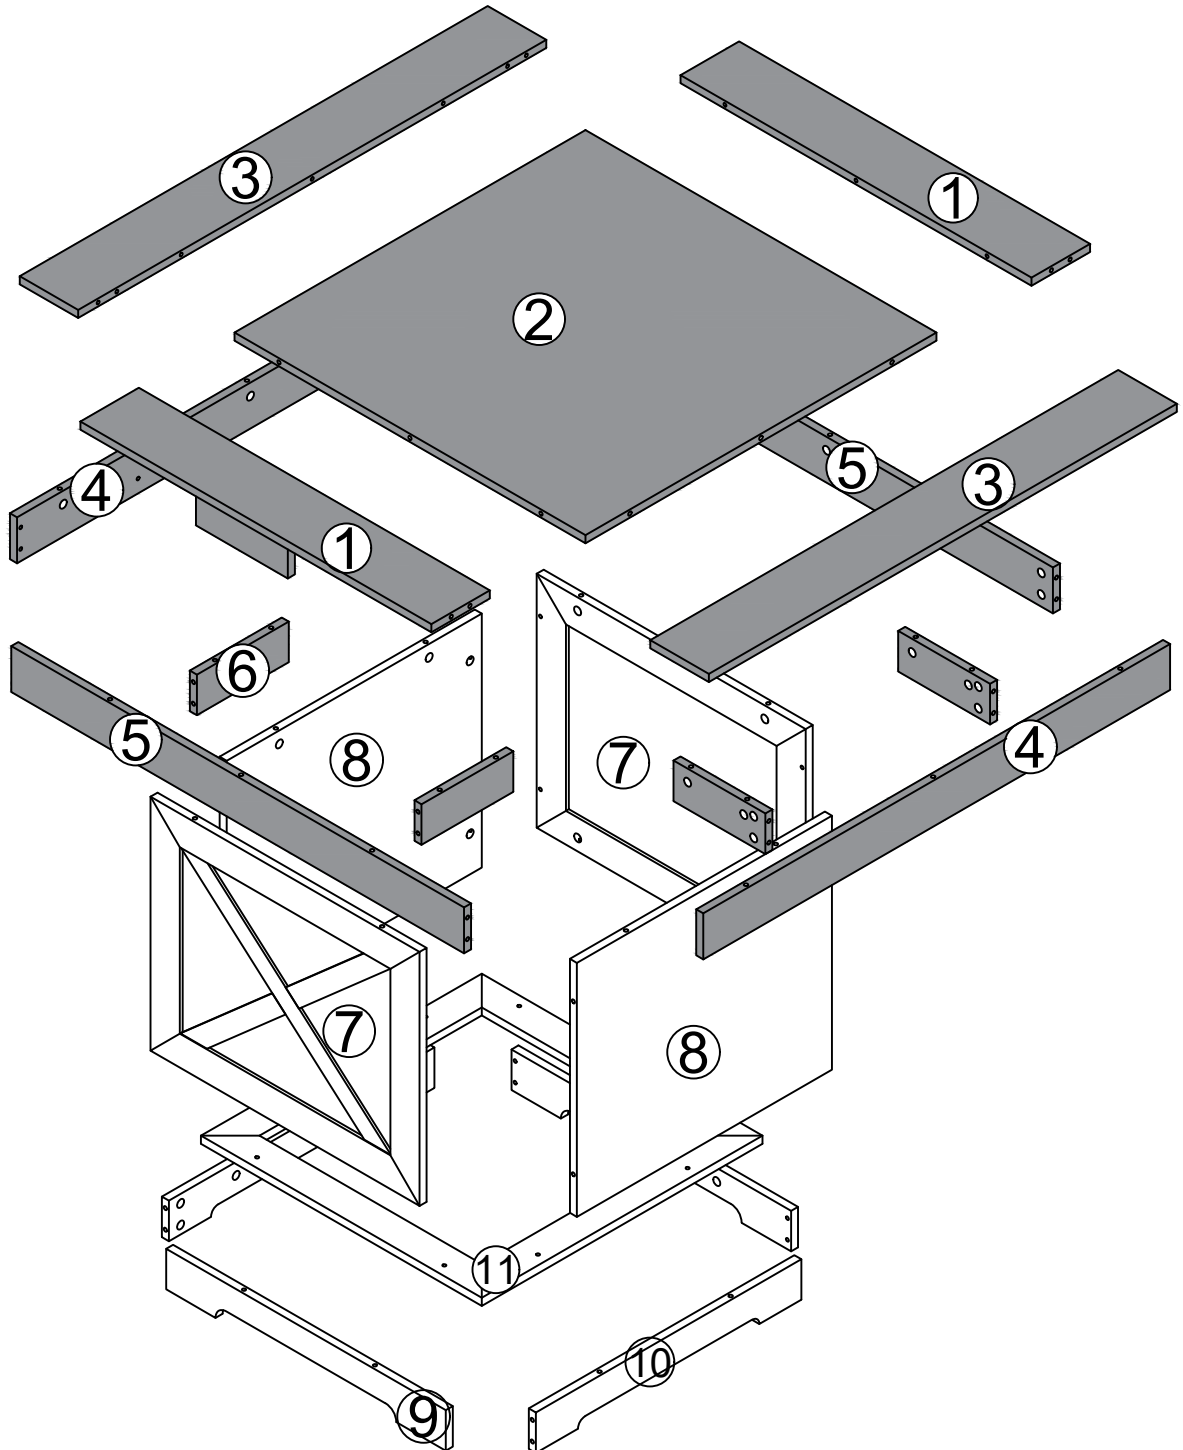


# Use parts A and B



Step1

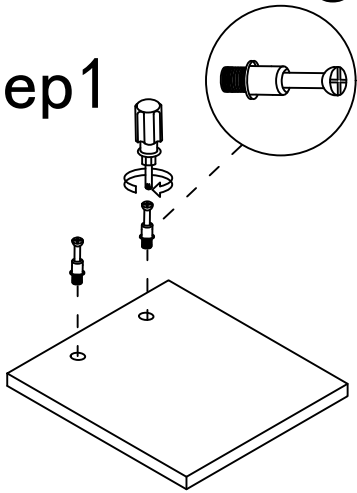


Step2

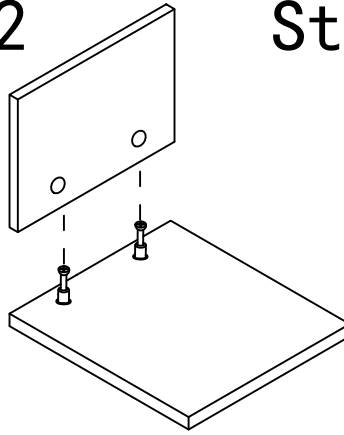

Step3

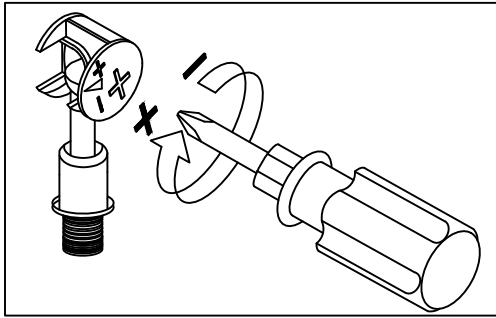
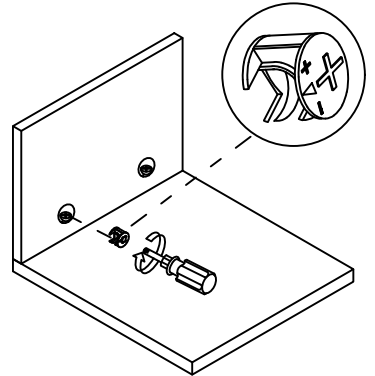


Use a screwdriver to lock in the direction of the "+" sign

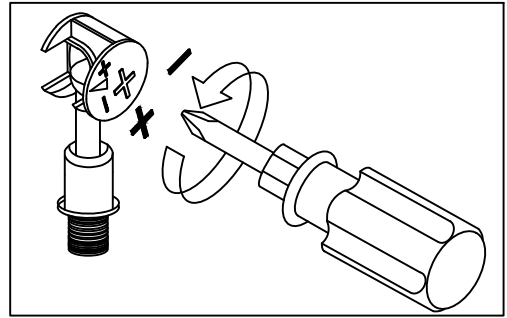


Disassemble along the direction of "-" sign



Step 1

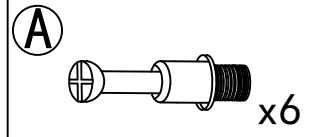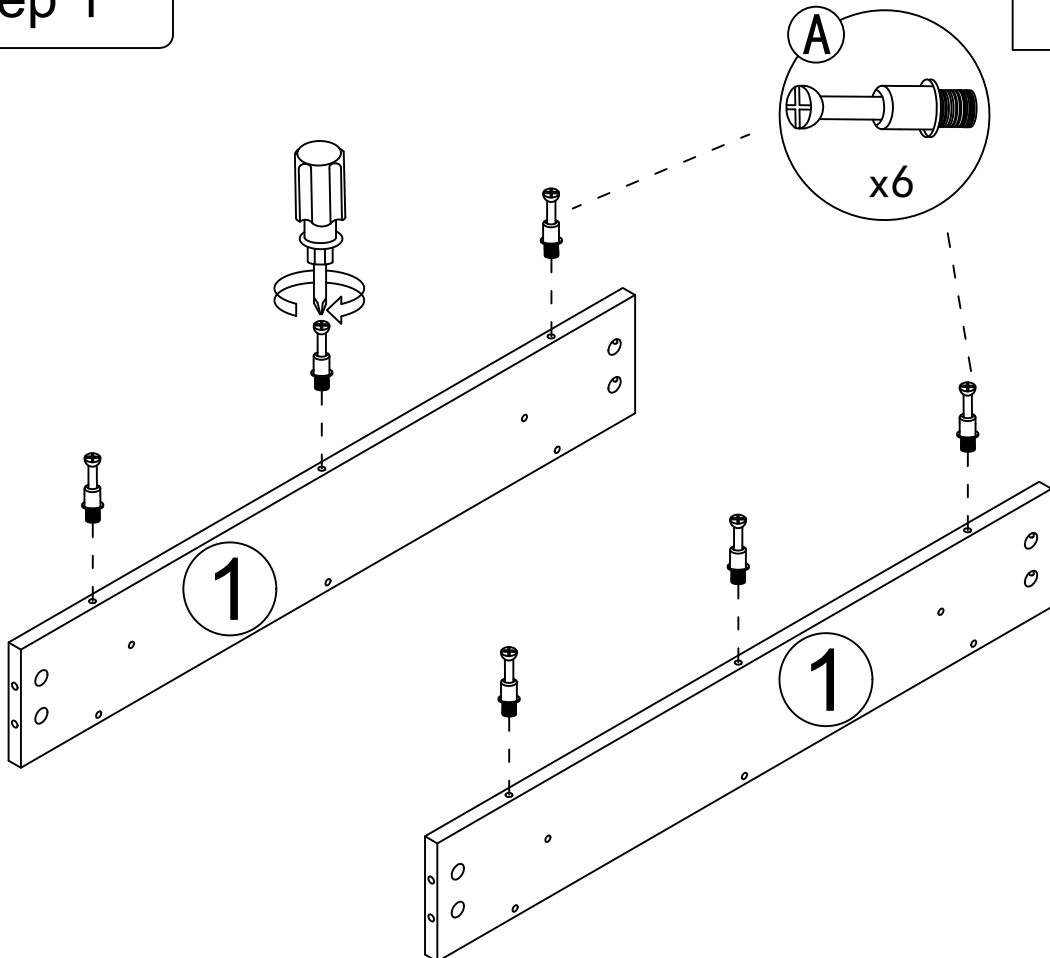

Step 2

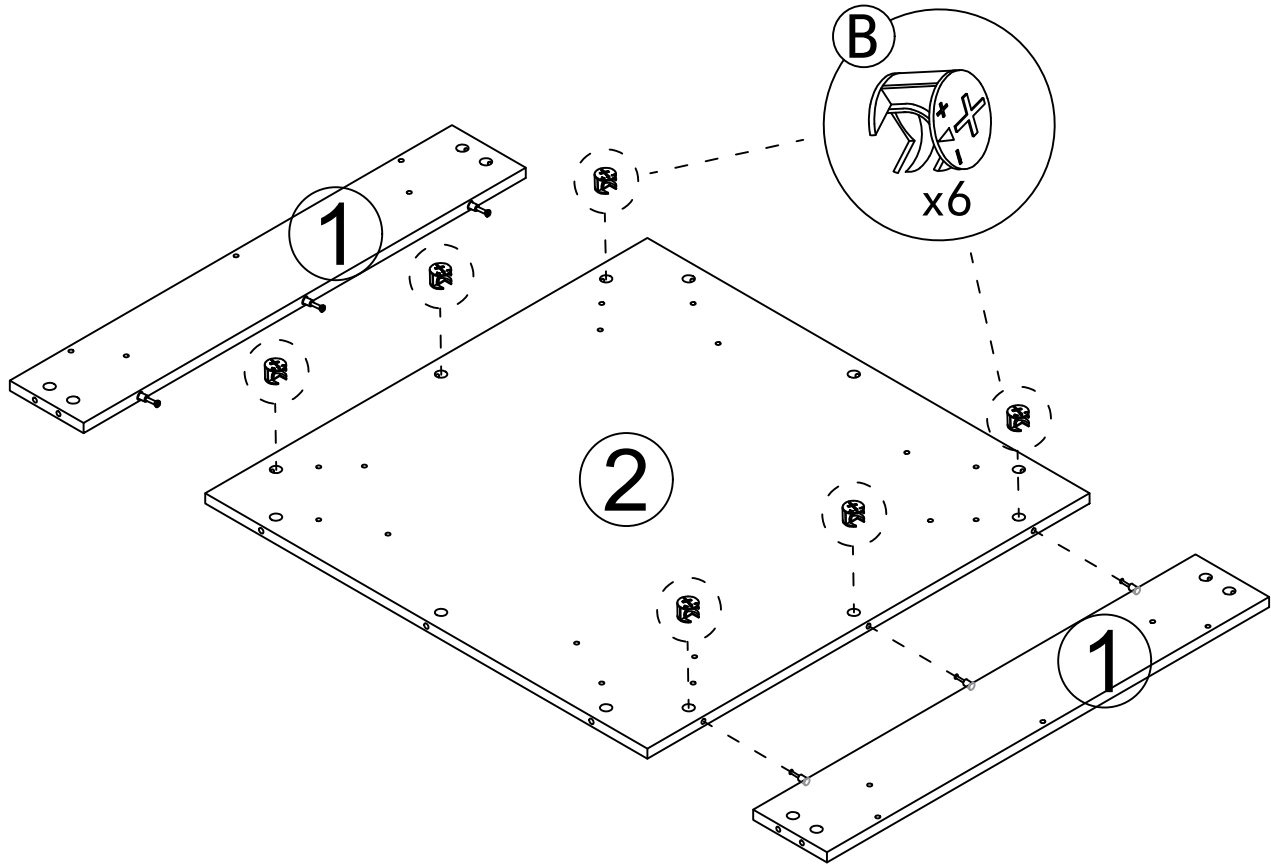

Step 3

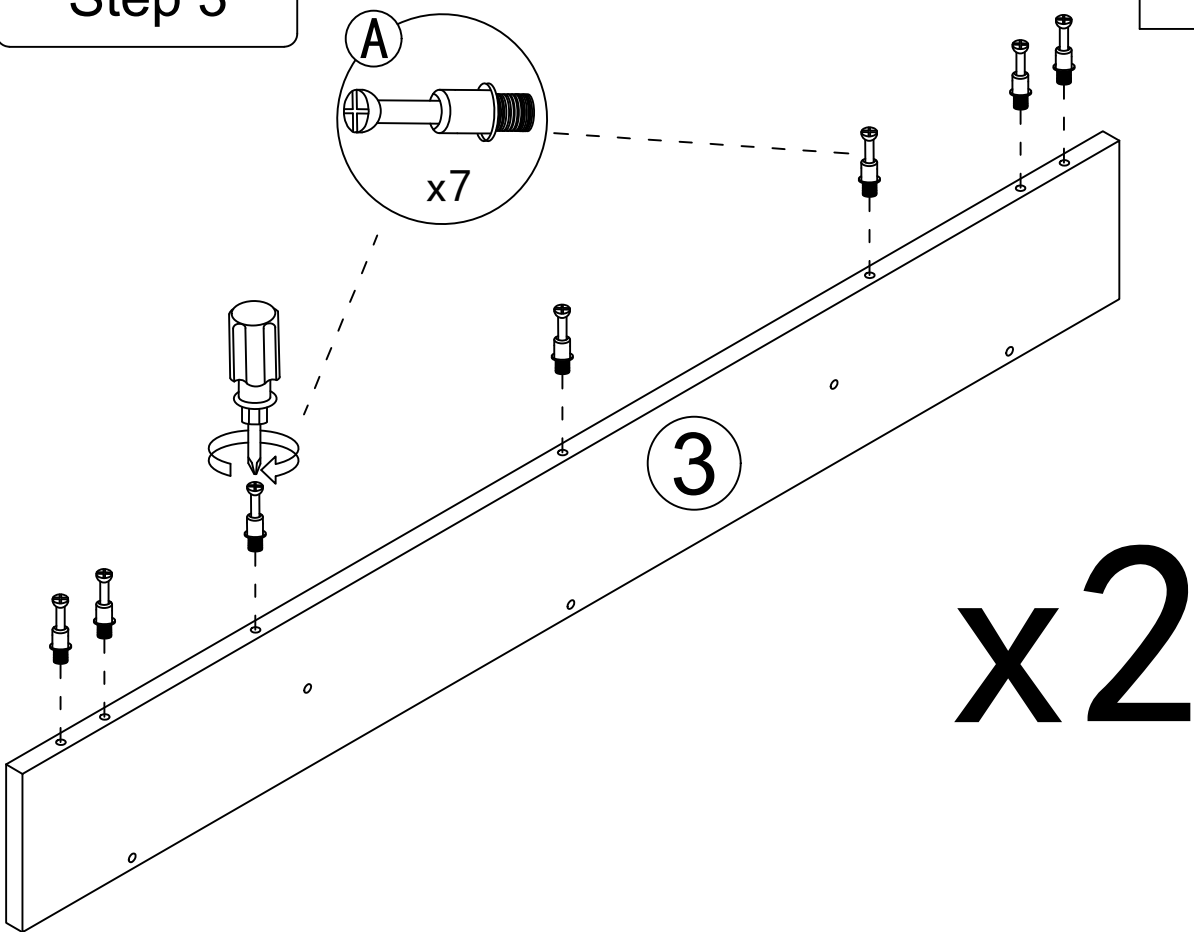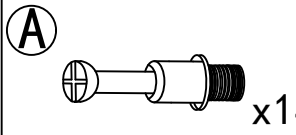


# Step 4

**B**



x14

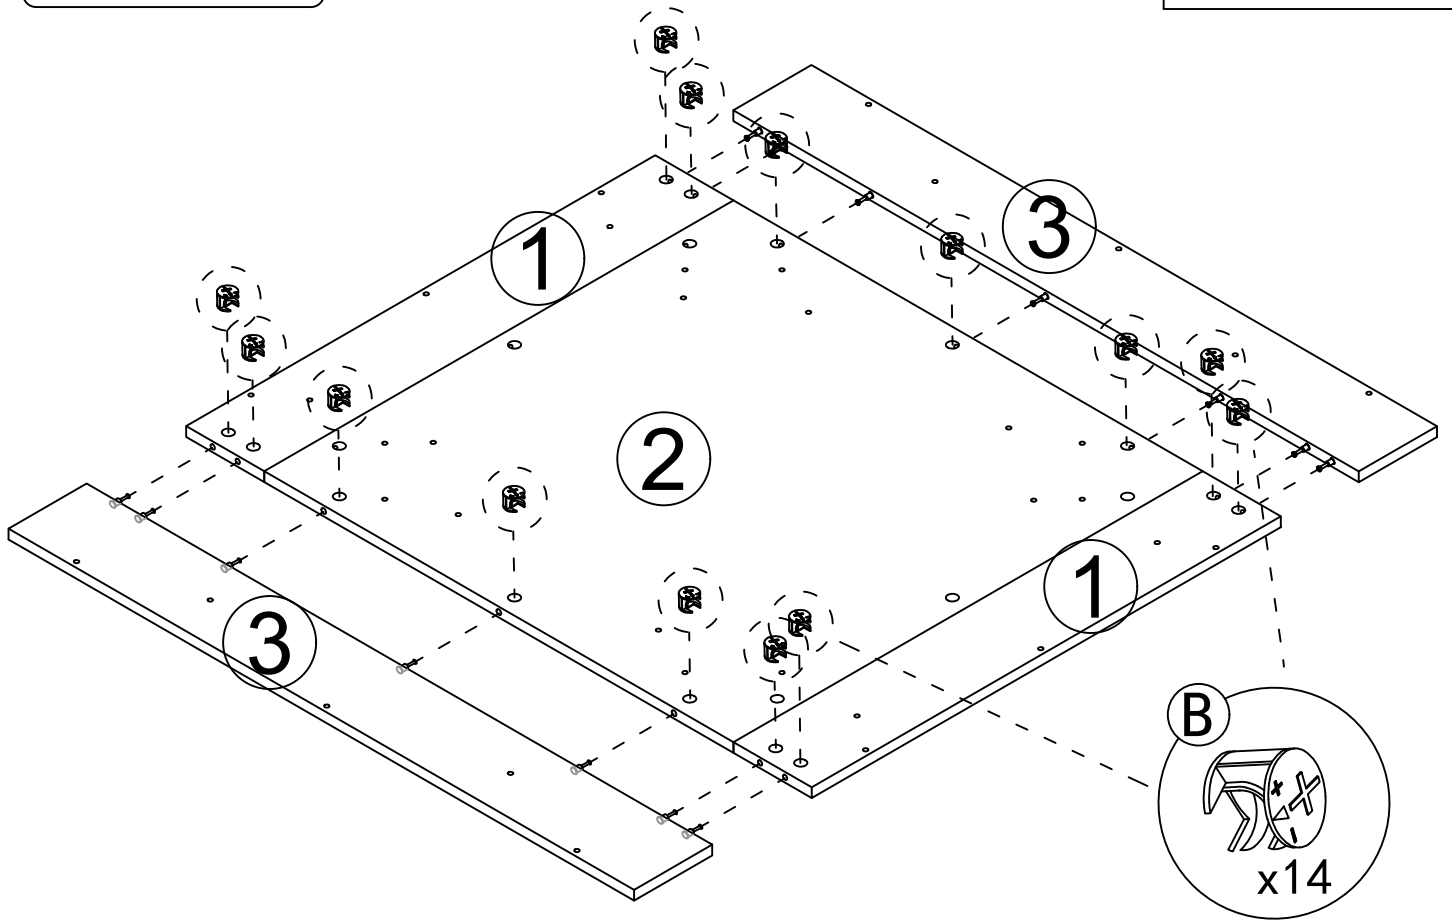


**B**





x14

# Step 5

**A**

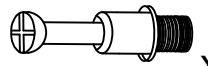



x36

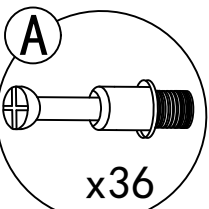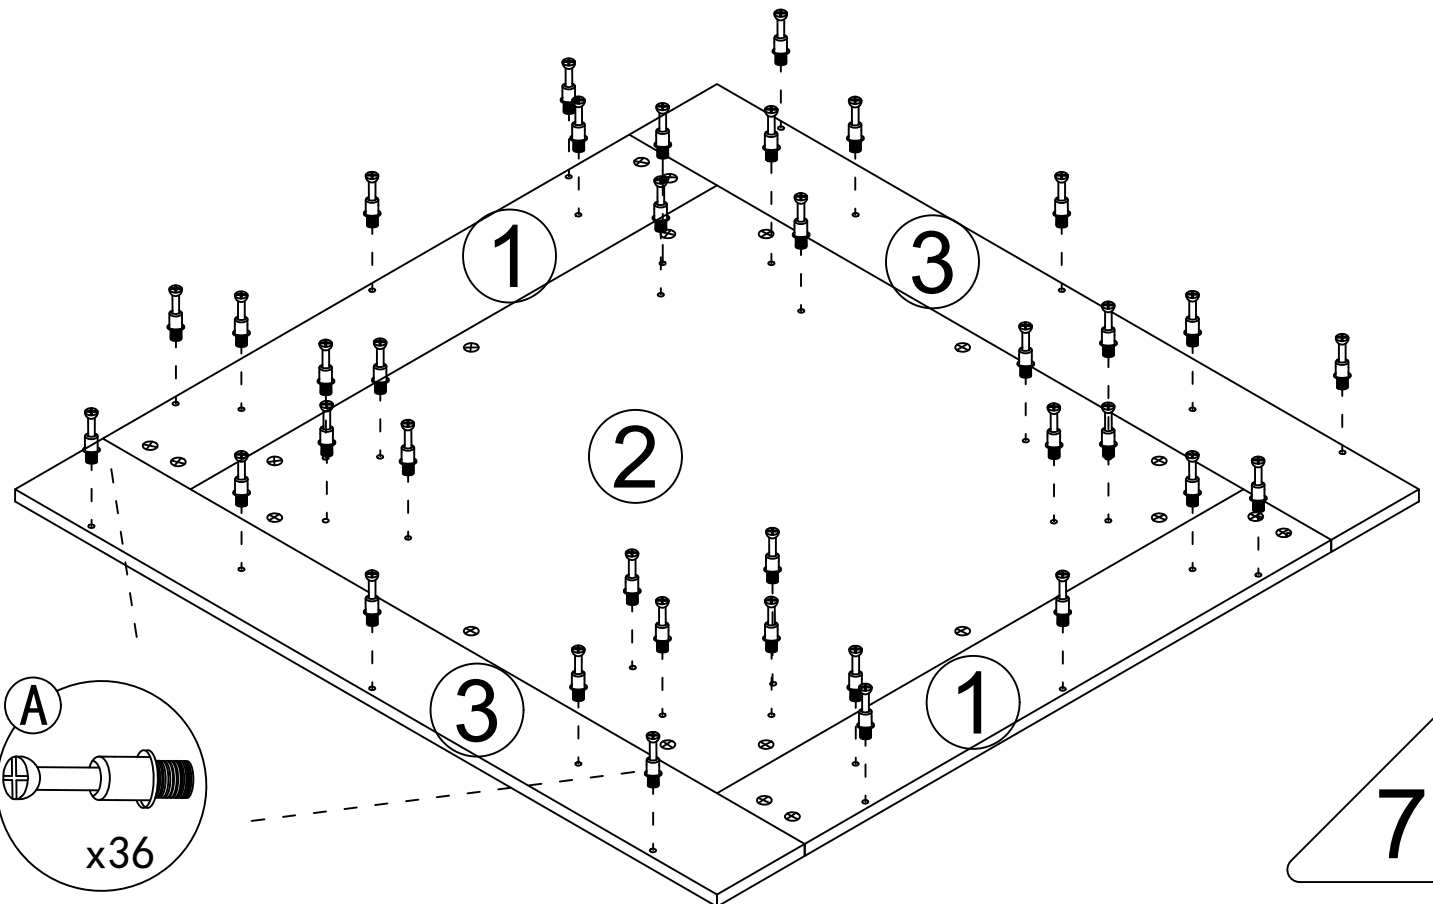



x36

7

Step 6

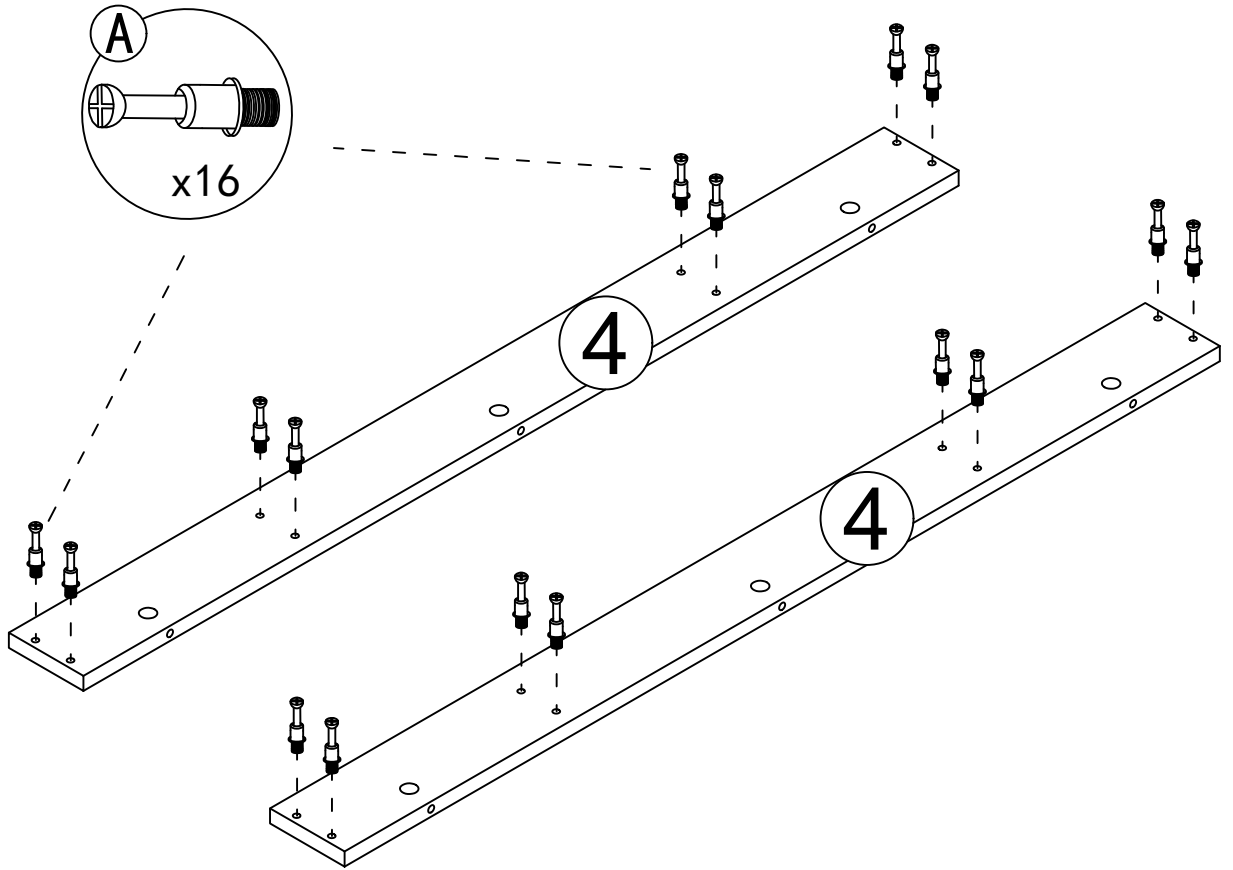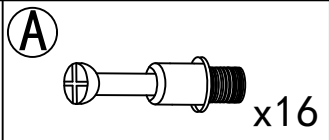


Step 7

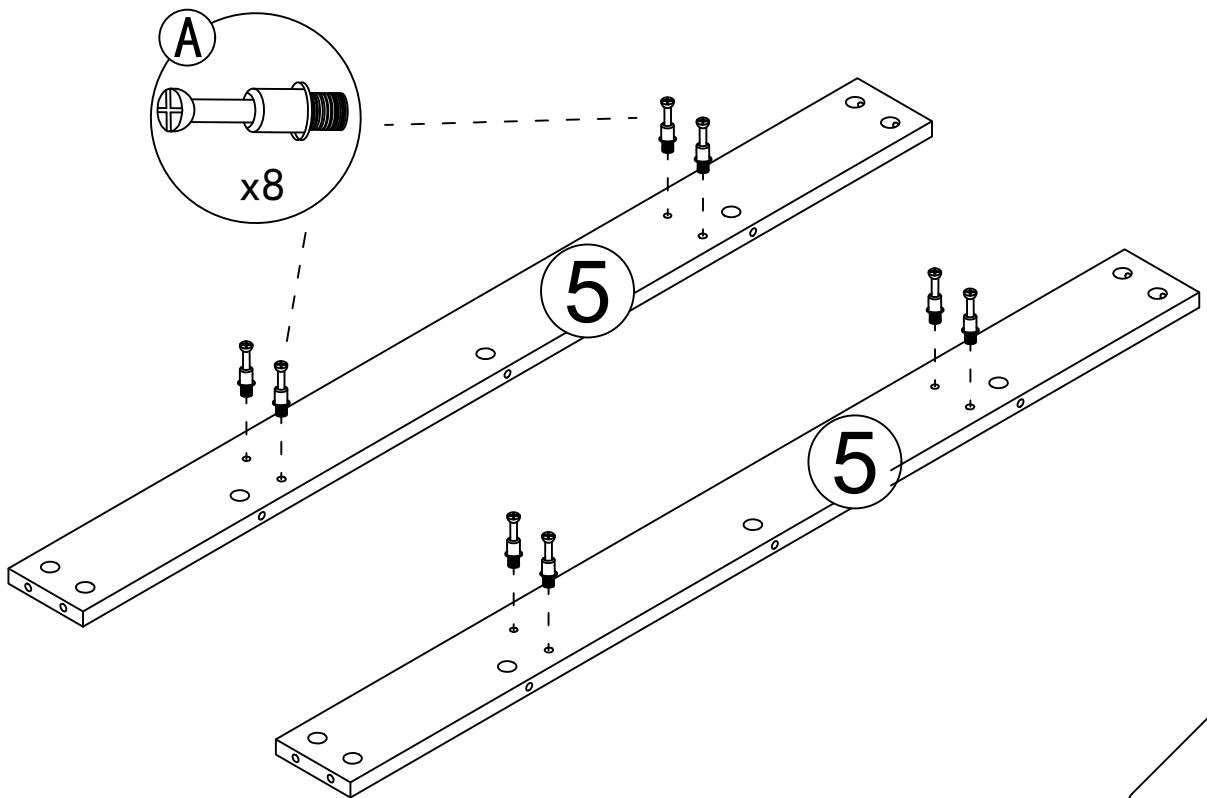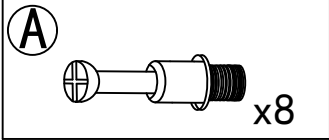


Step 8

**B**  x4

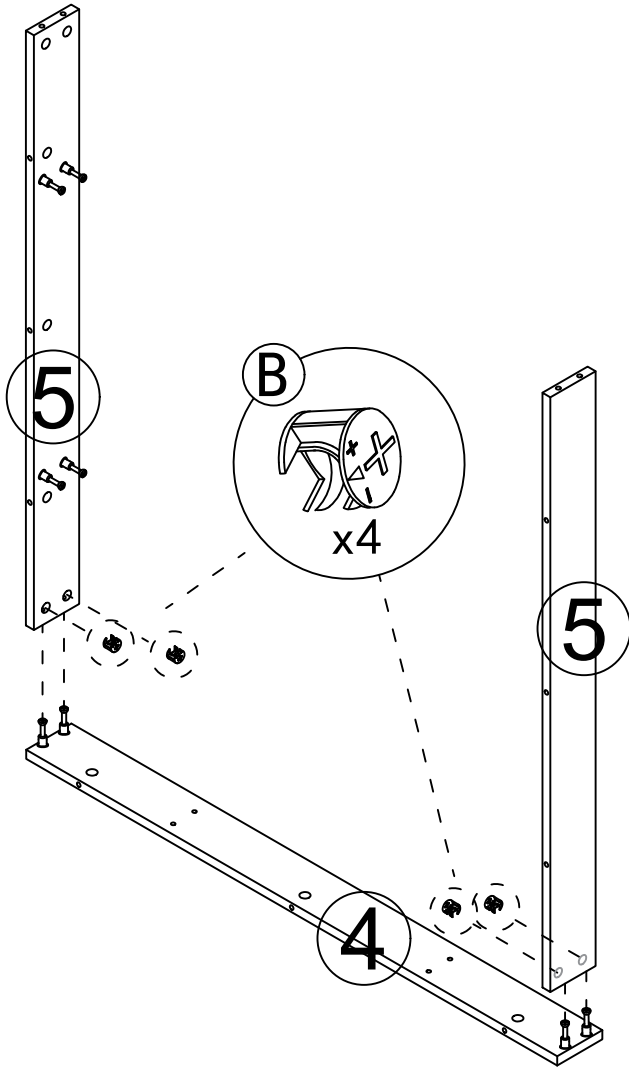


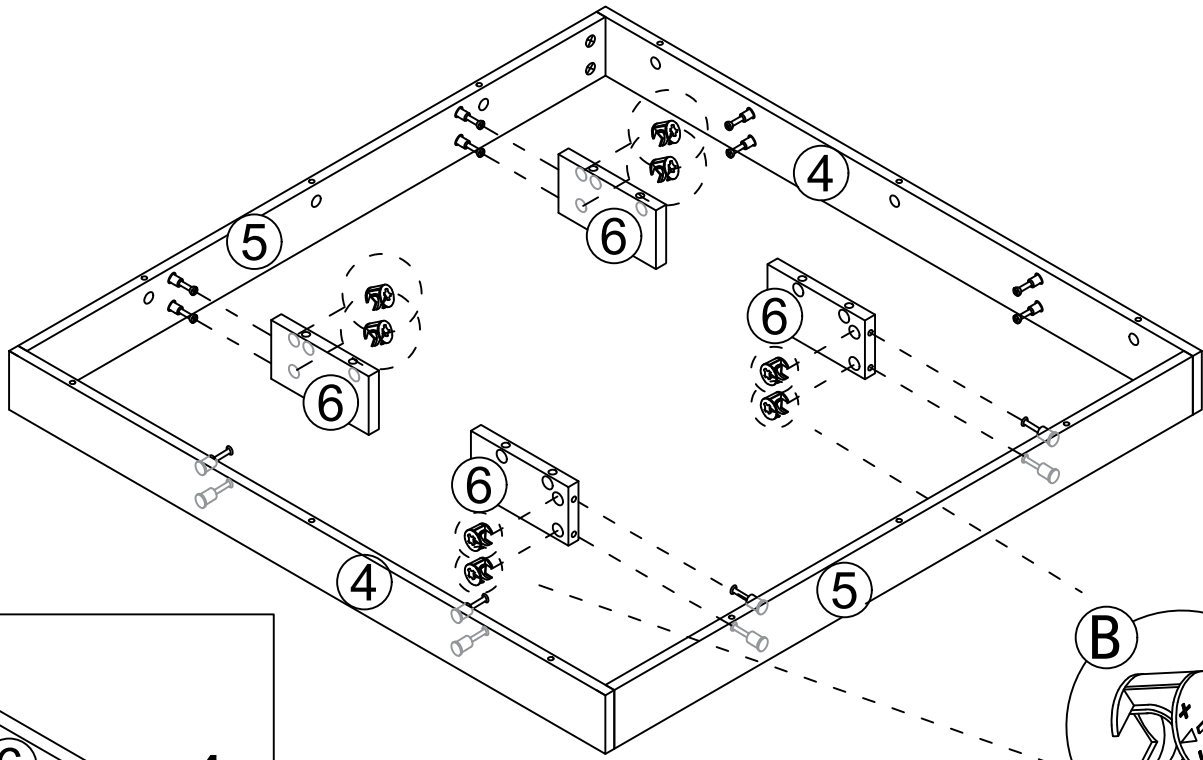
Step 9


**B**  x4

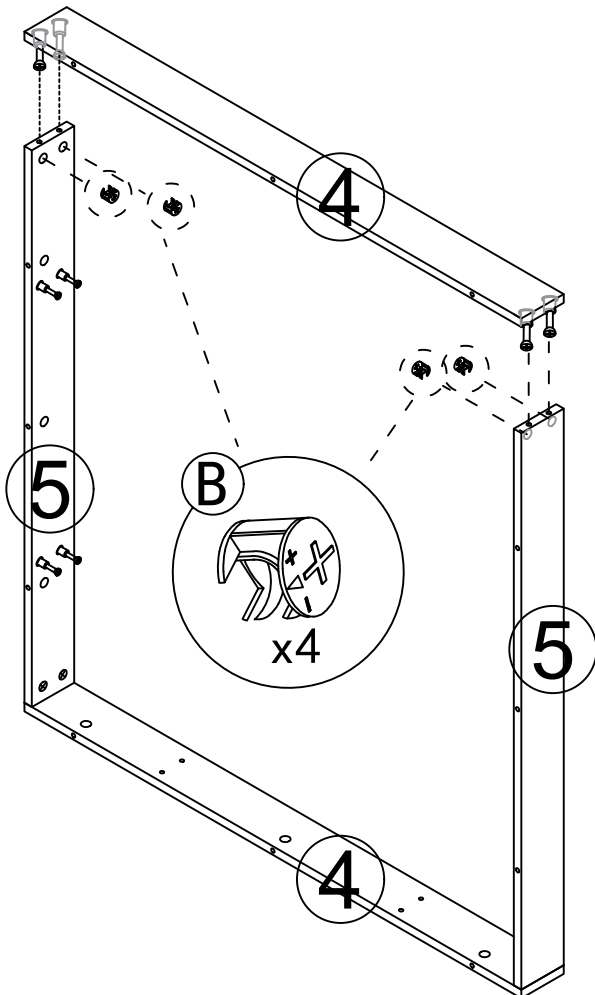


Step 10

**(B)**  x8

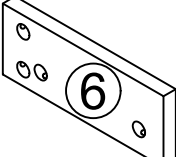



 x4

**(B)**  x8

Step 11

**(B)**  x8

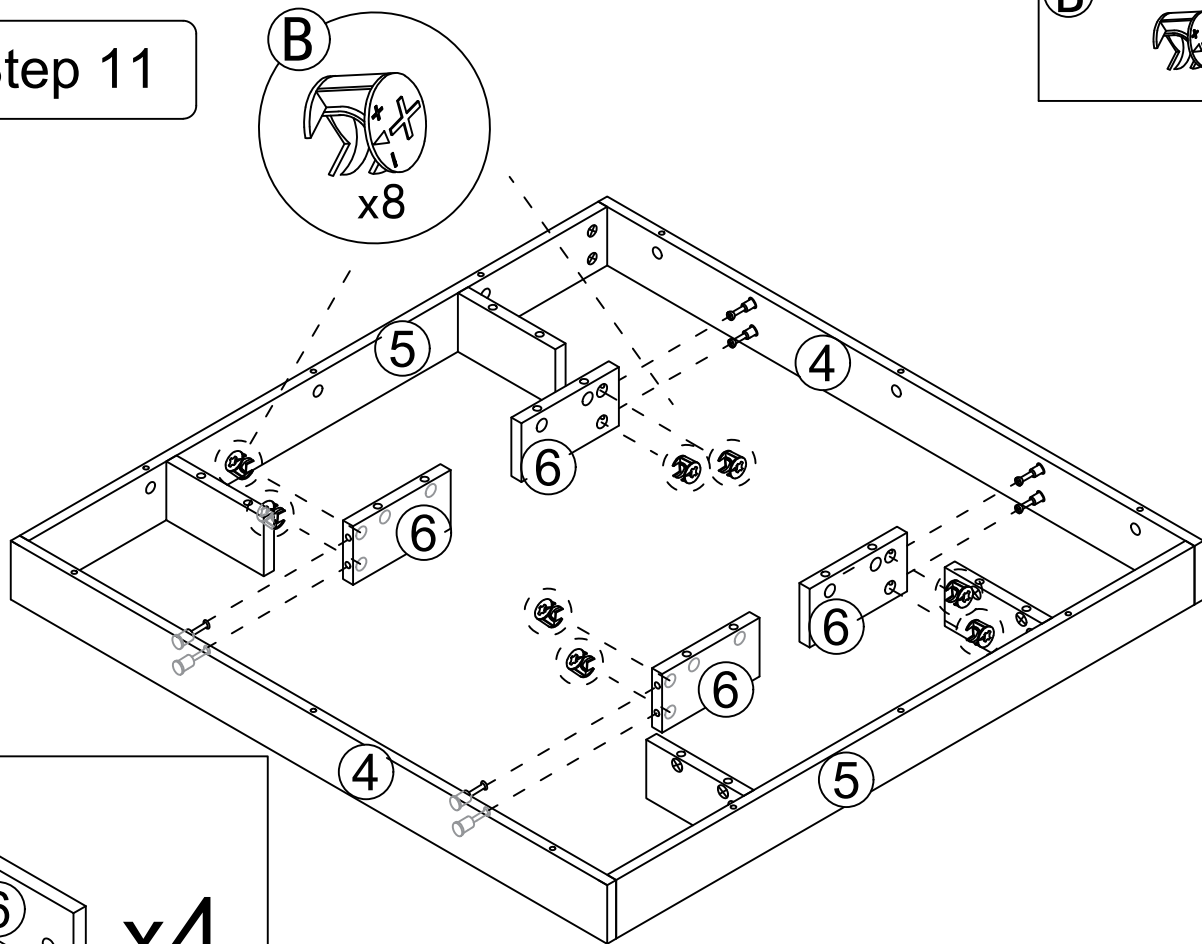


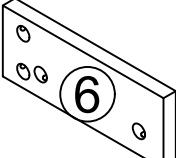 x4

10


Step 12

Attention, the hole is facing downwards

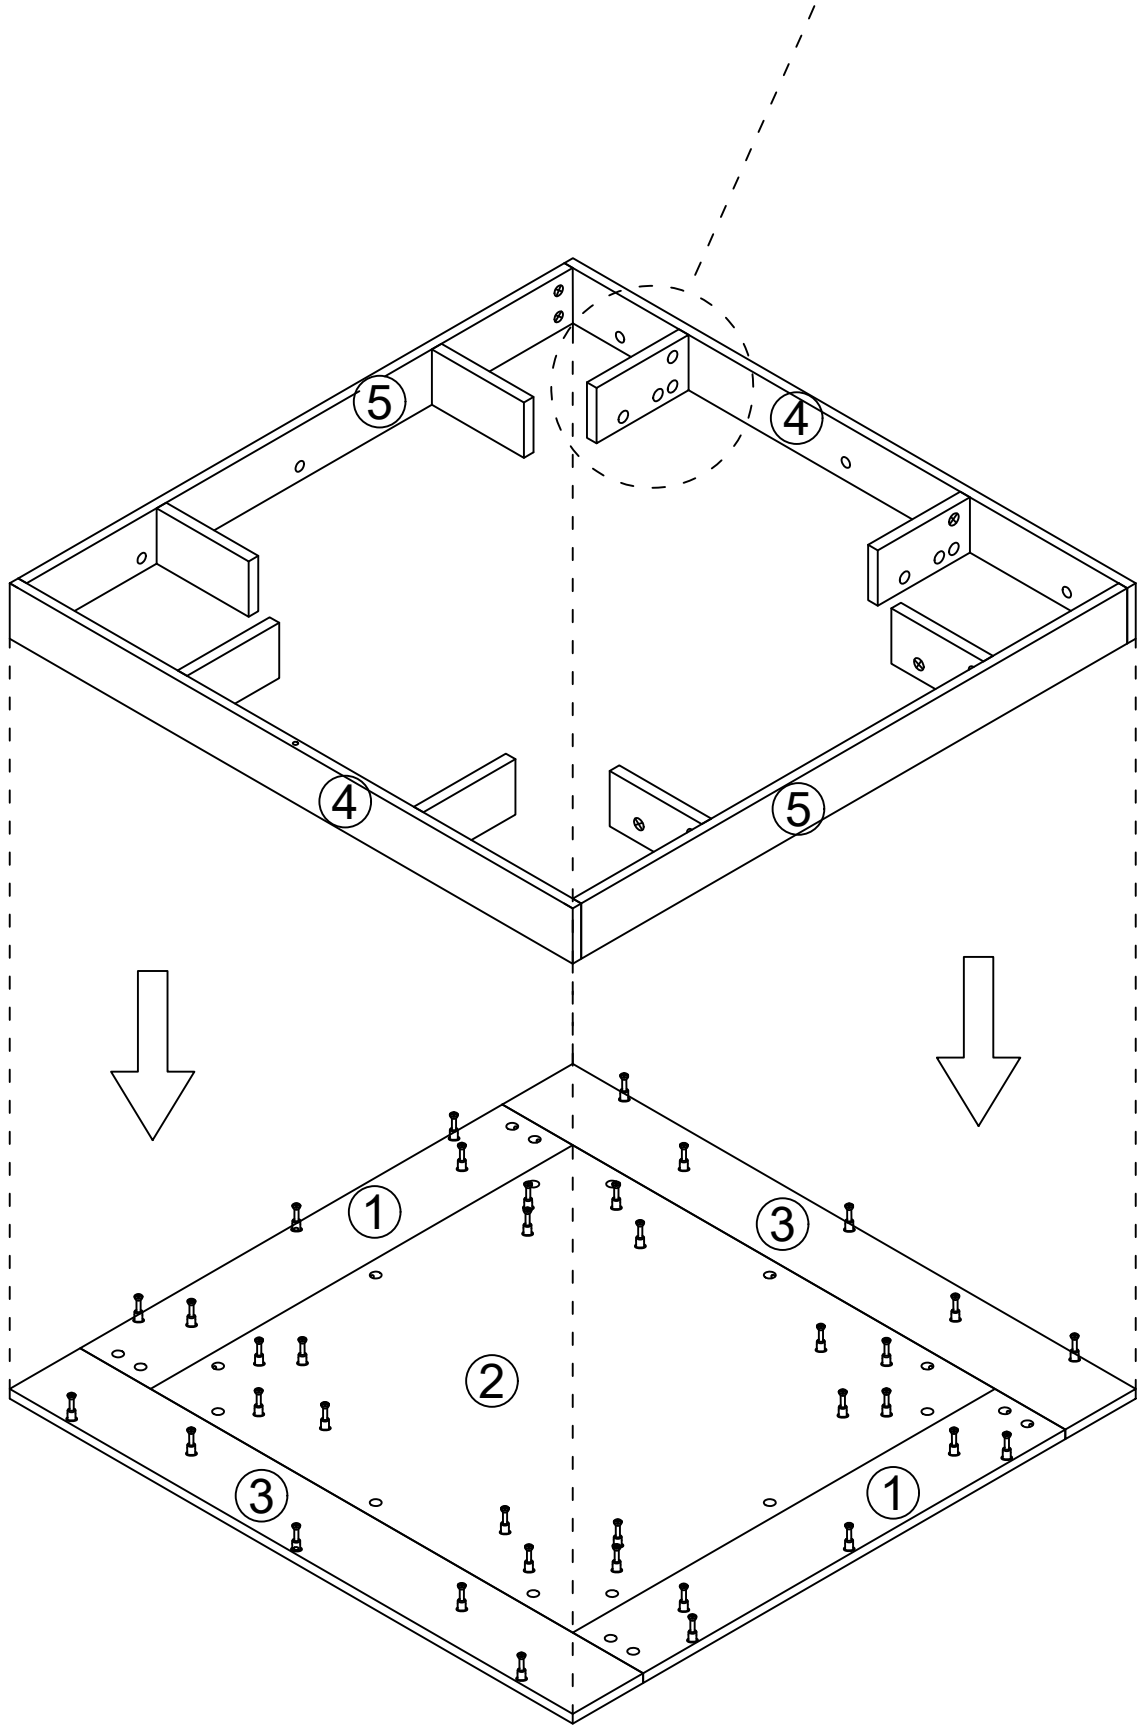


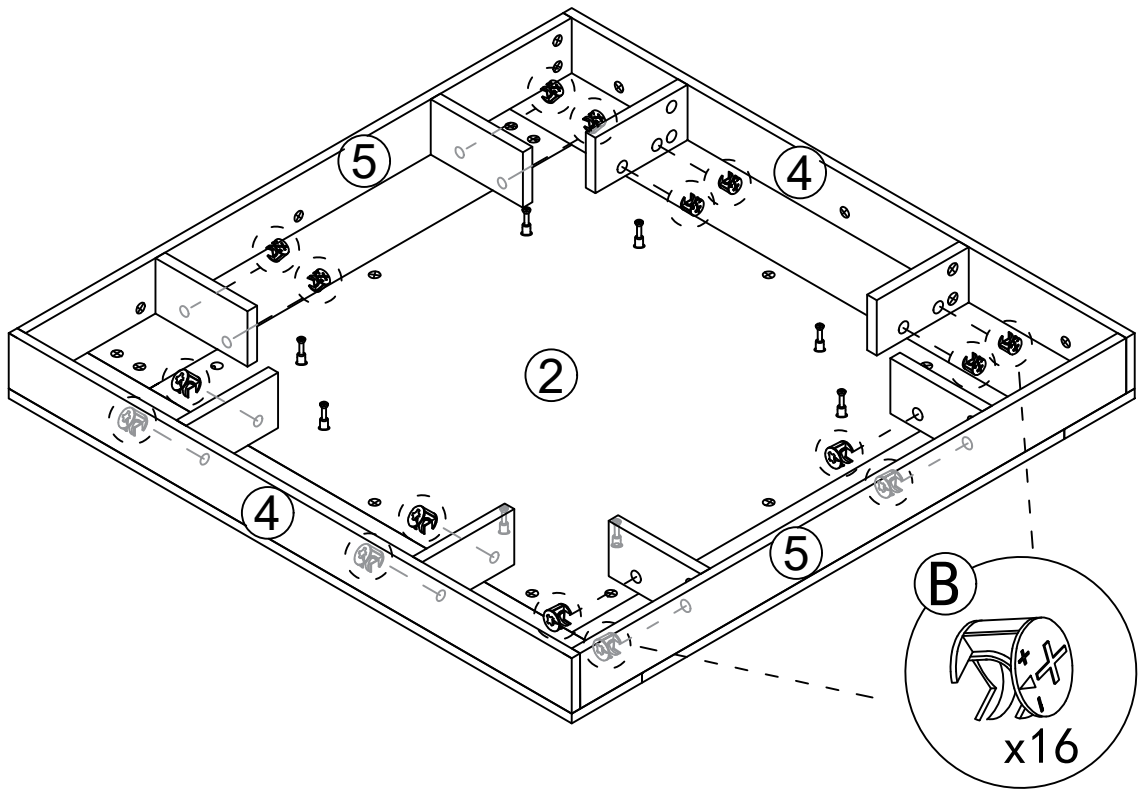
Step 13

**B**  x12

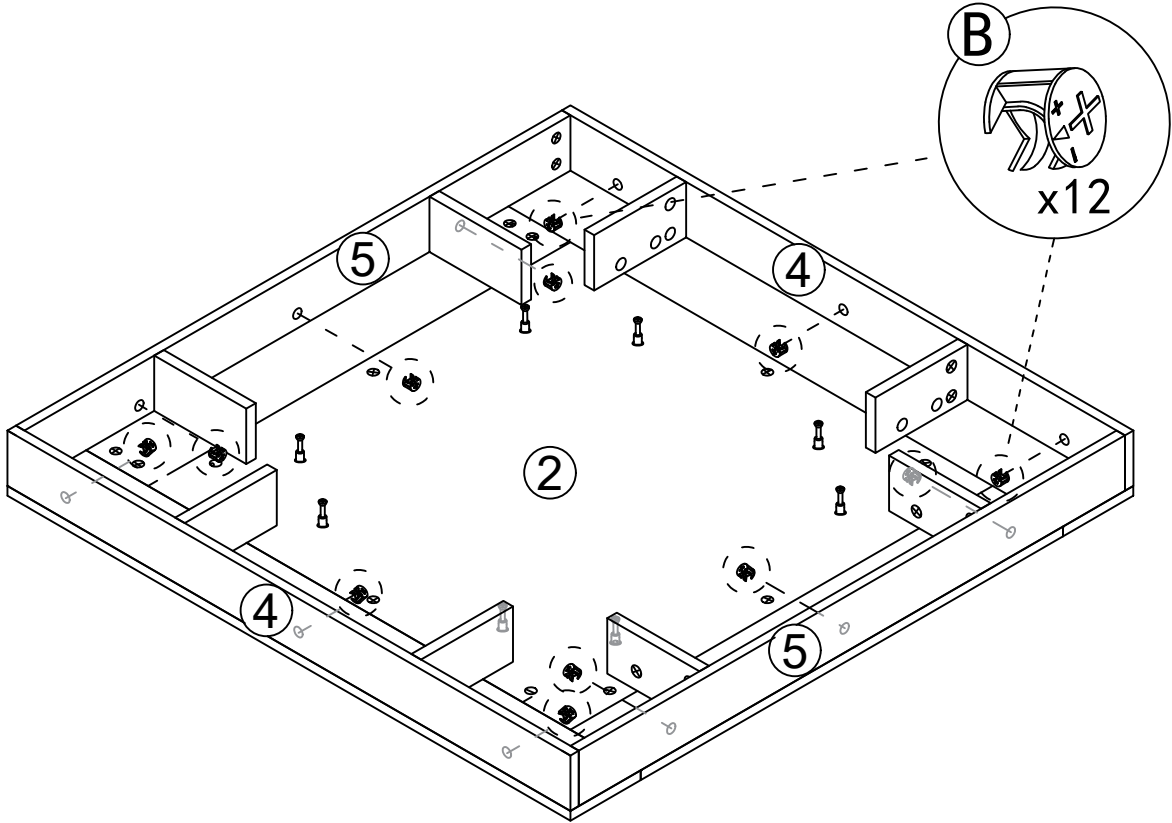


Step 14

**B**  x16




A

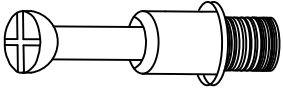


32 Pcs



B

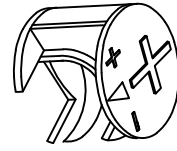

40 Pcs


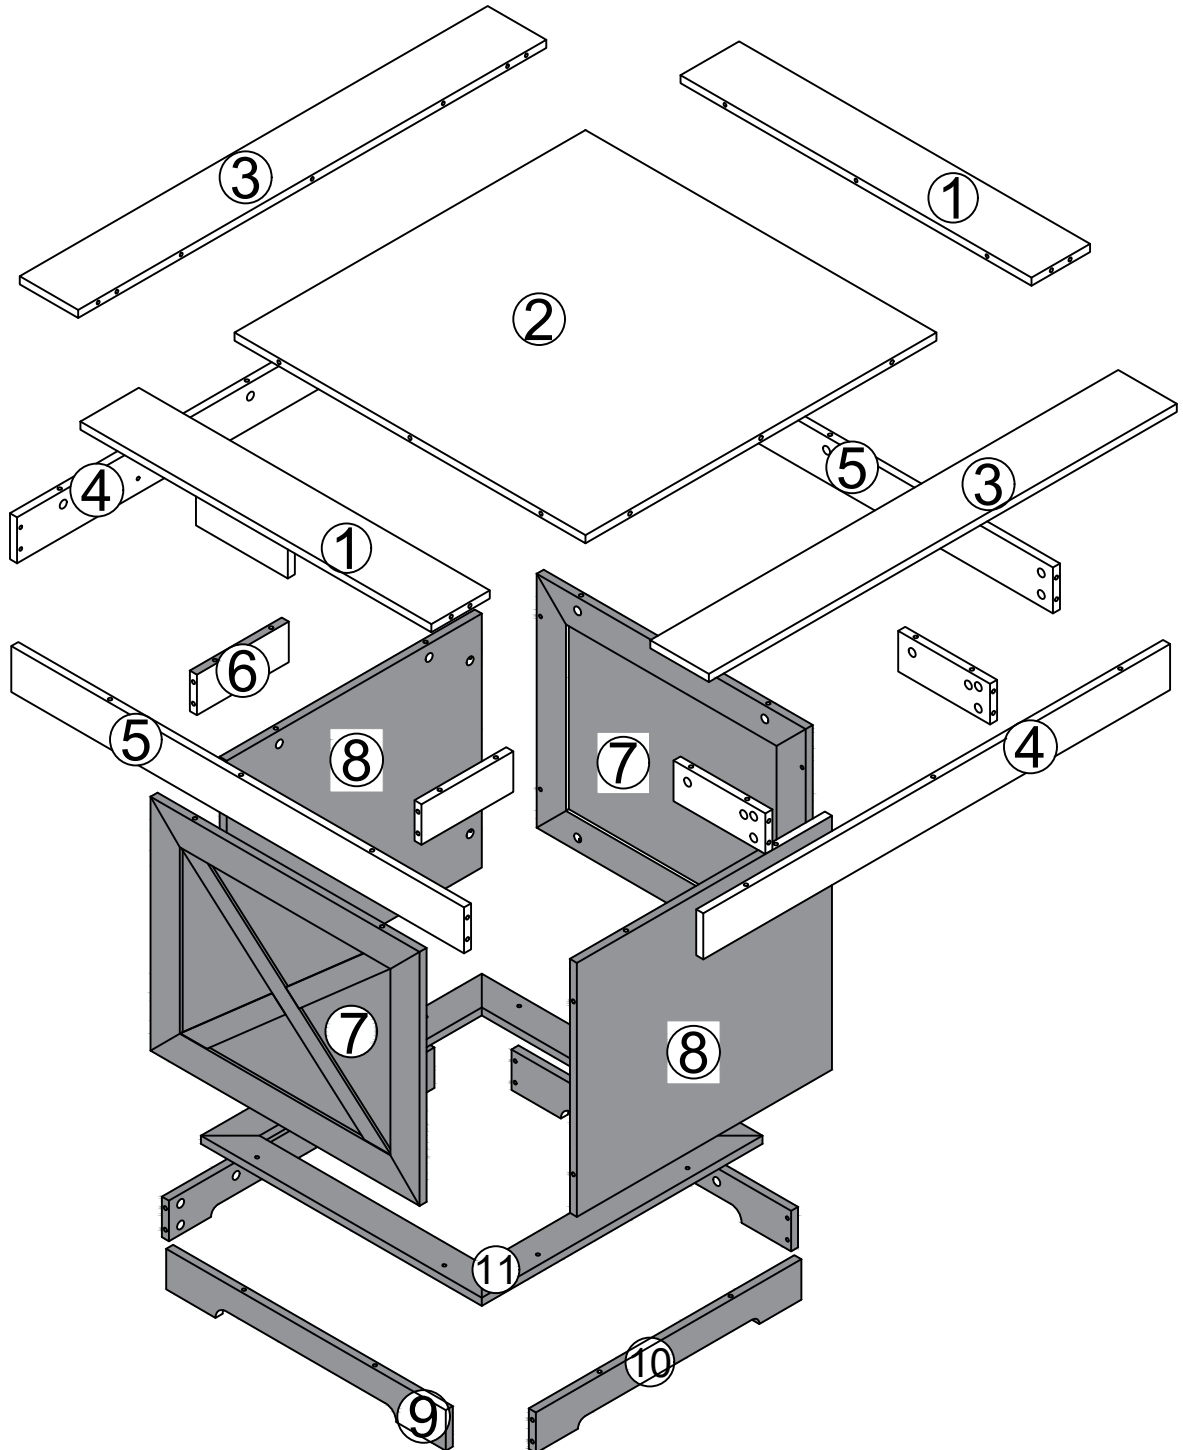


Step 15

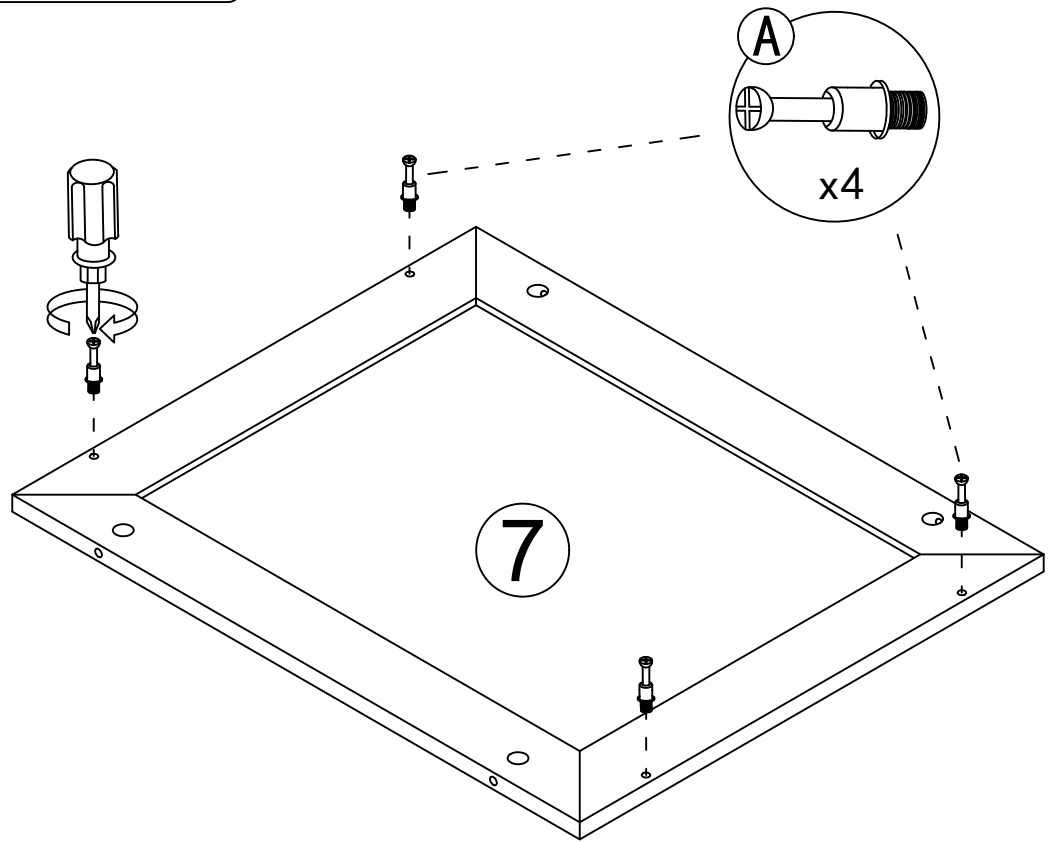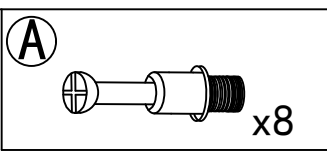

x2

Step 16

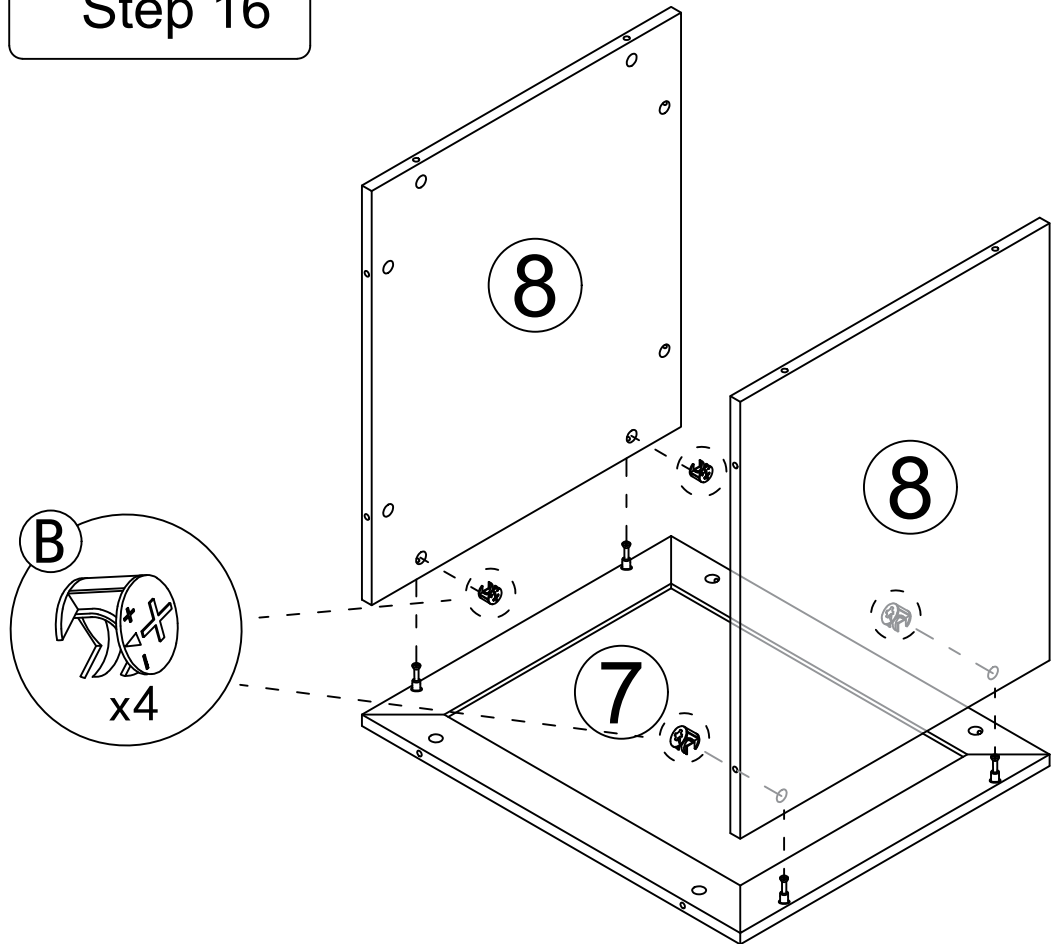
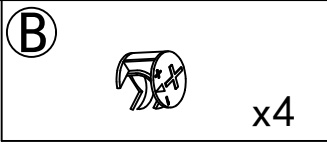


Step 17


B



x4

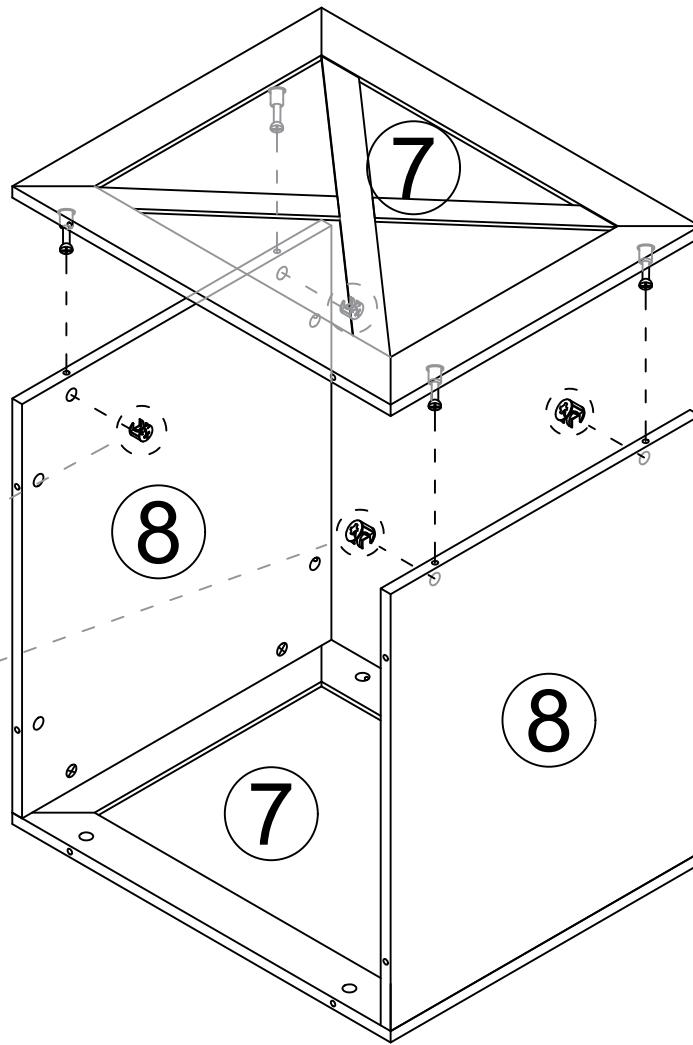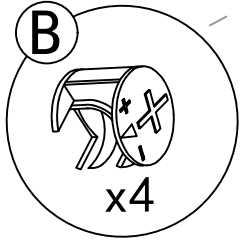

Step 18

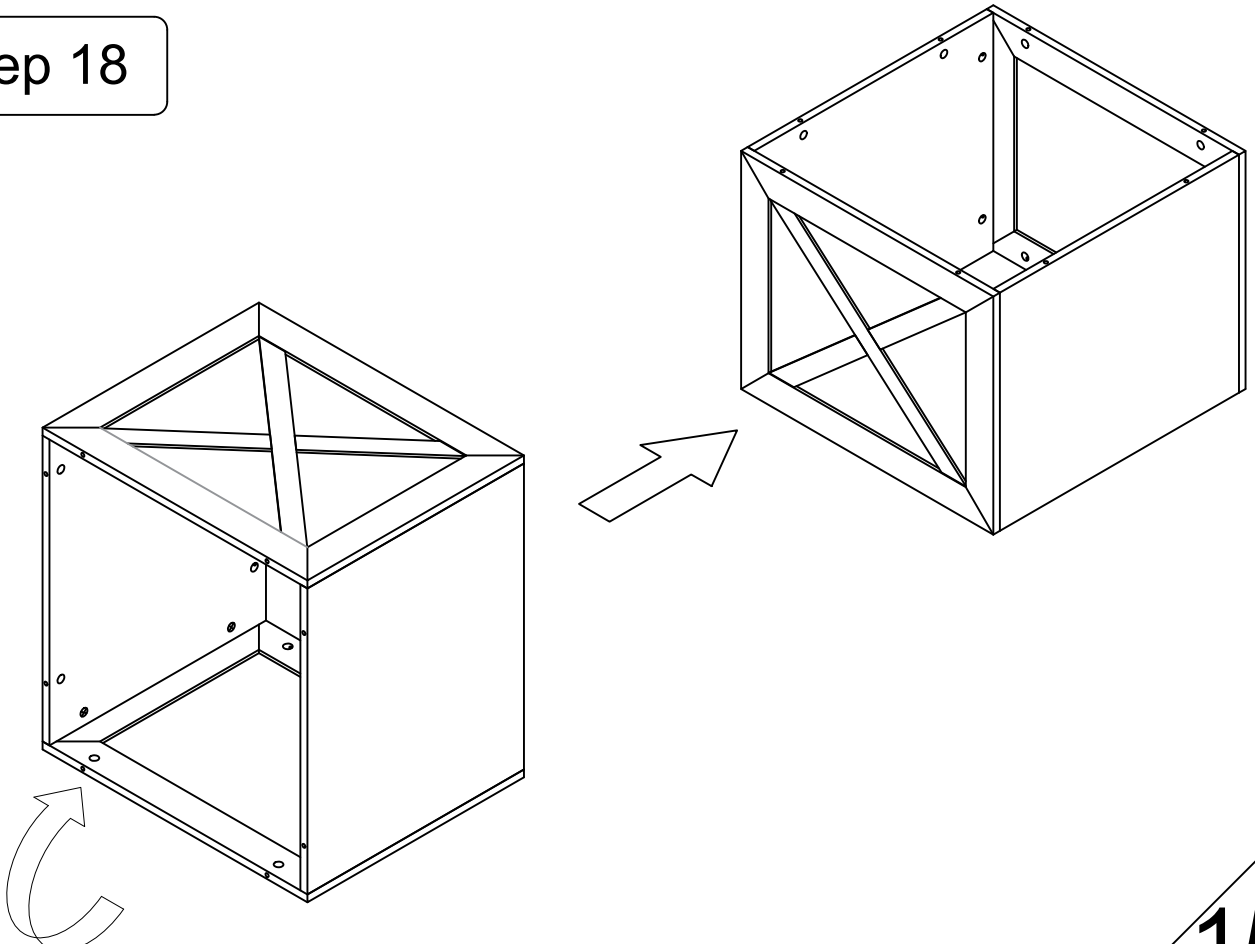


Step 19



B





x8

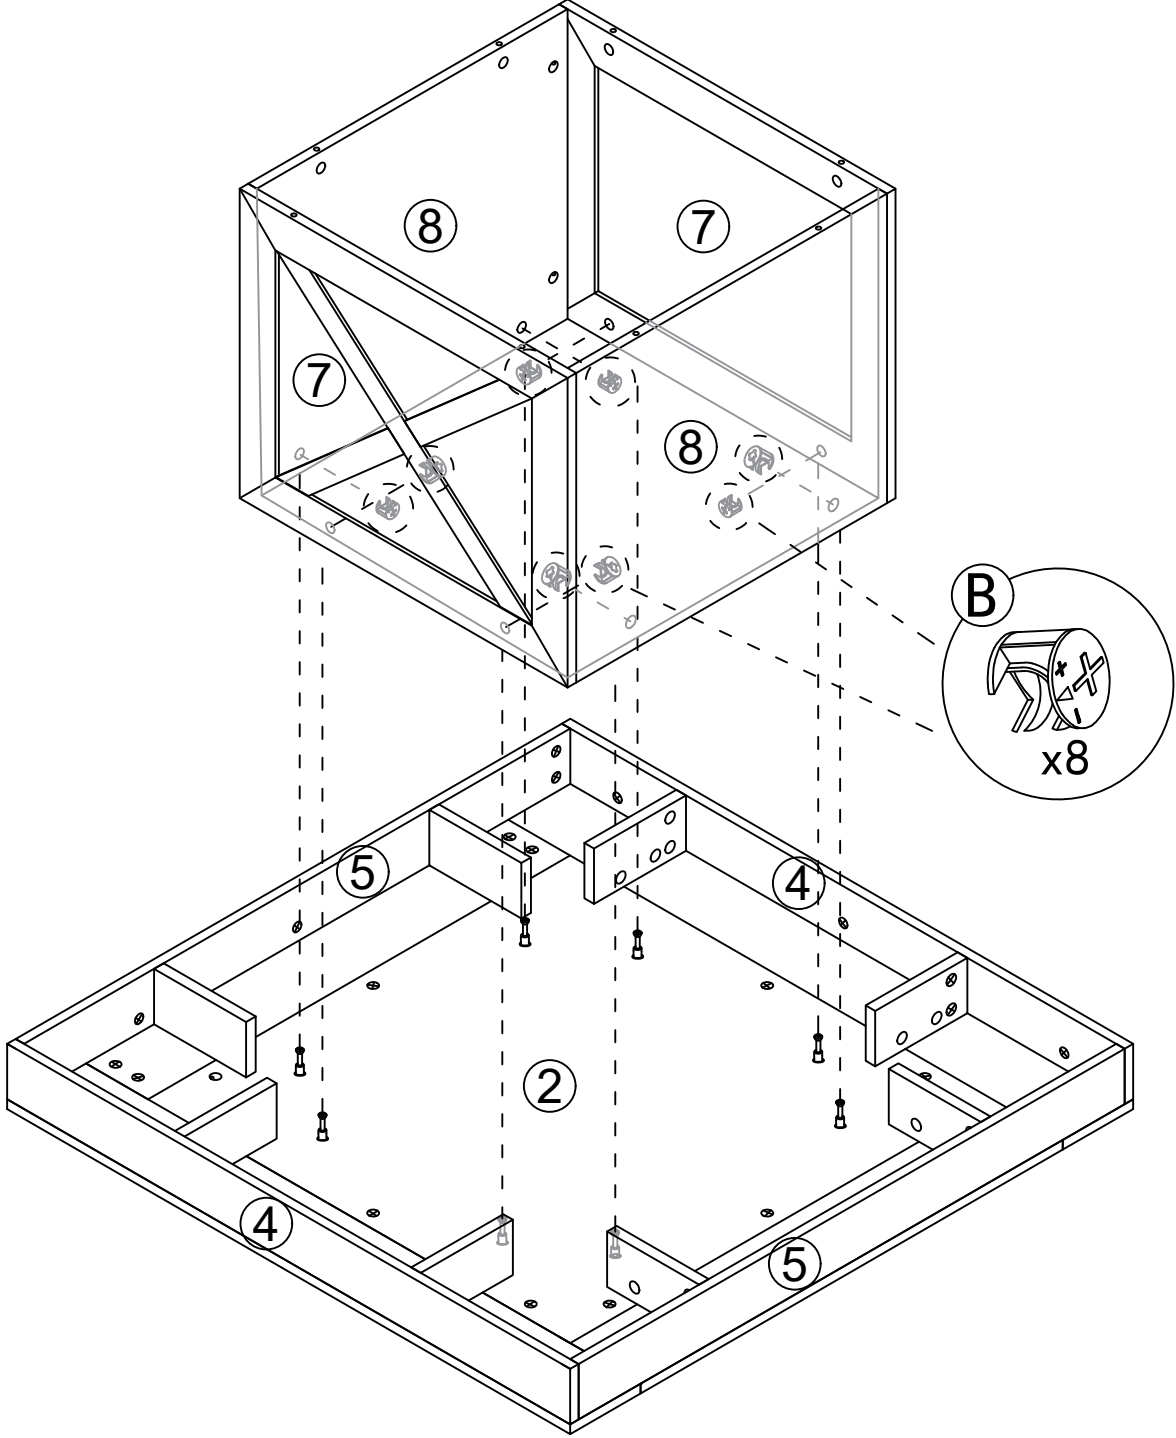

Step 20

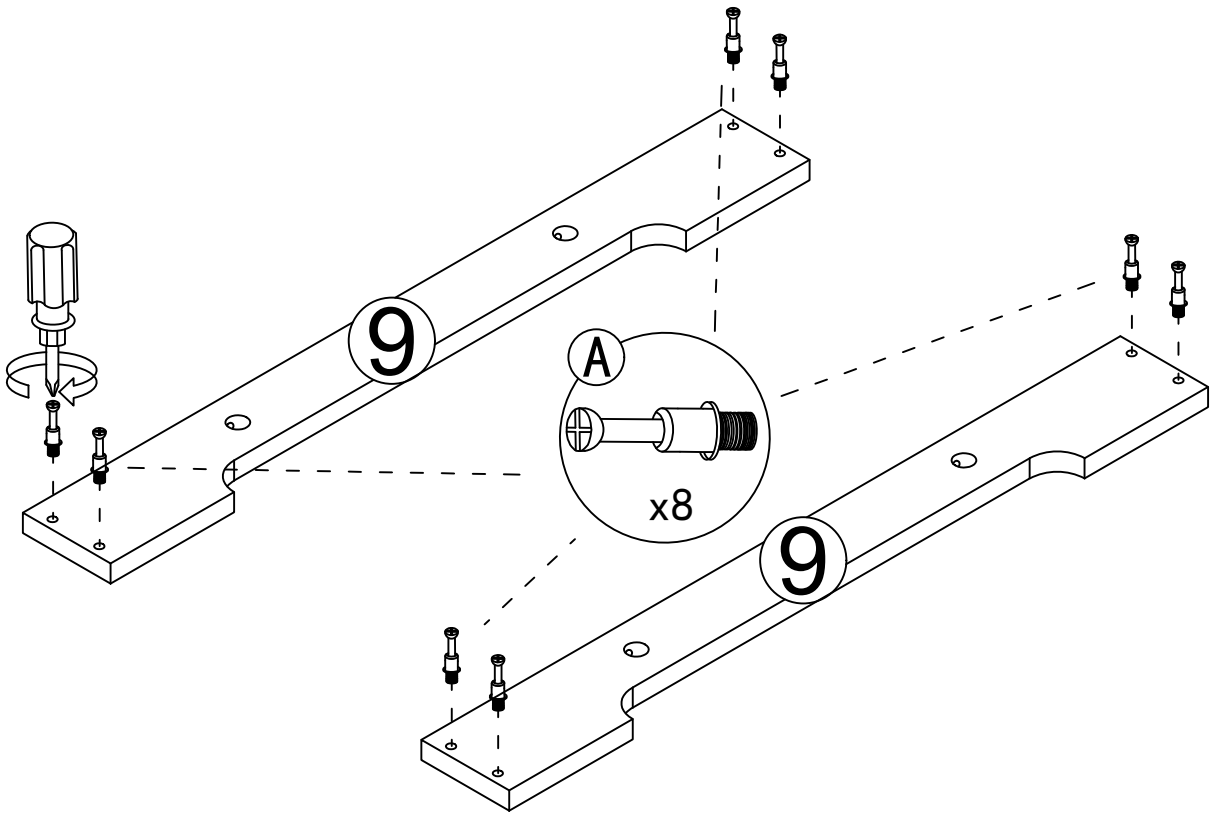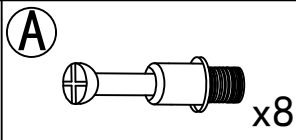

Step 21

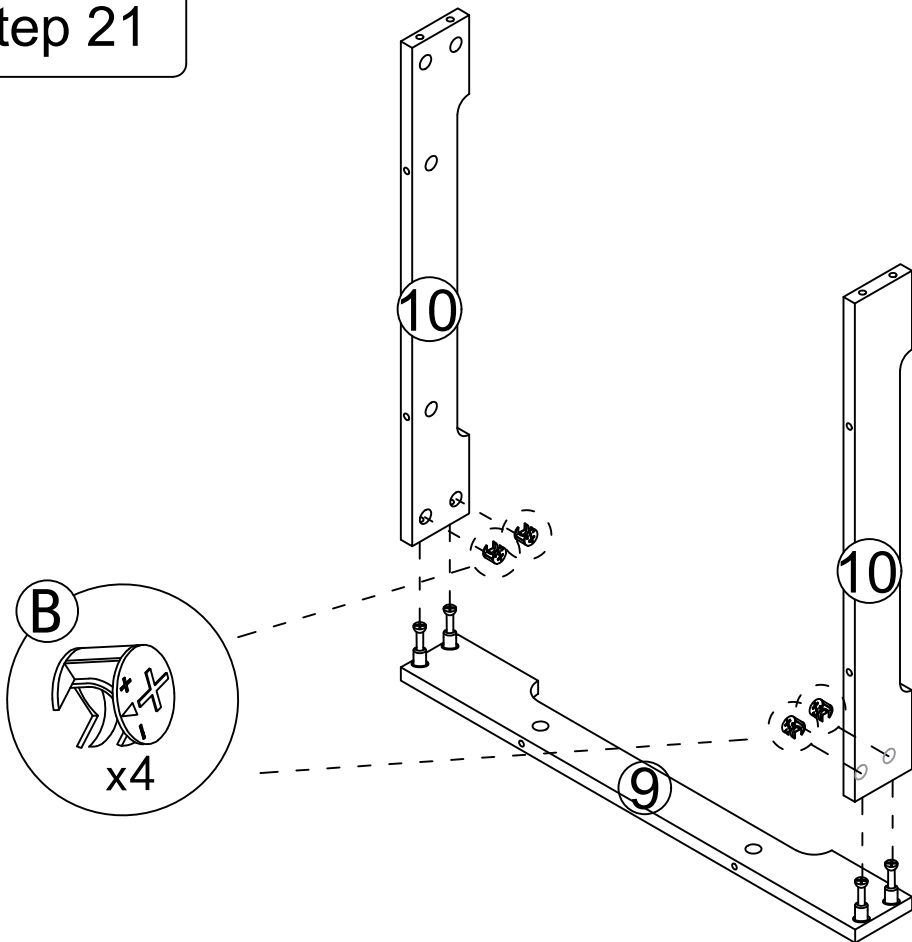
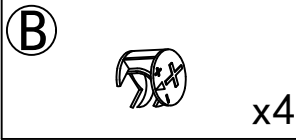


# Step 22

(B)




x4

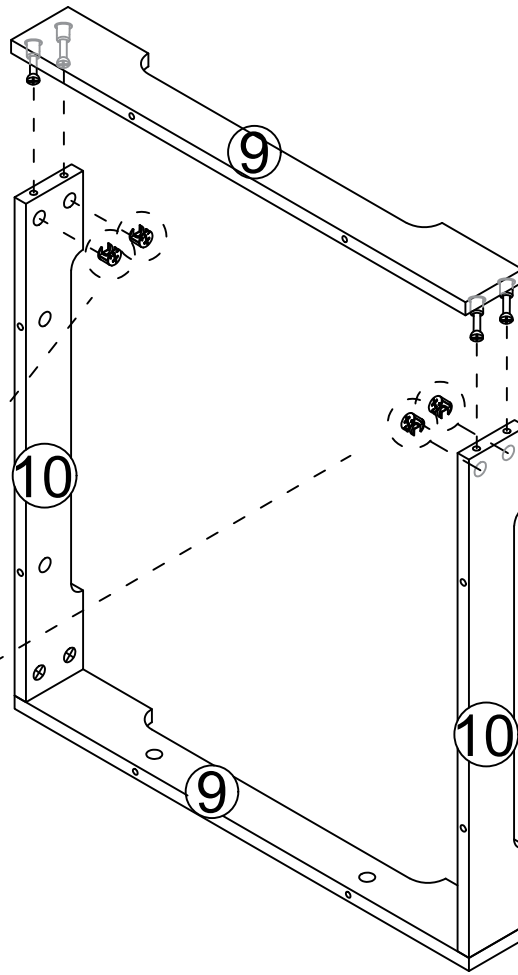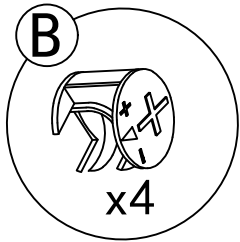


# Step 23

(A)

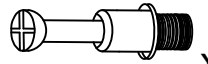

x8

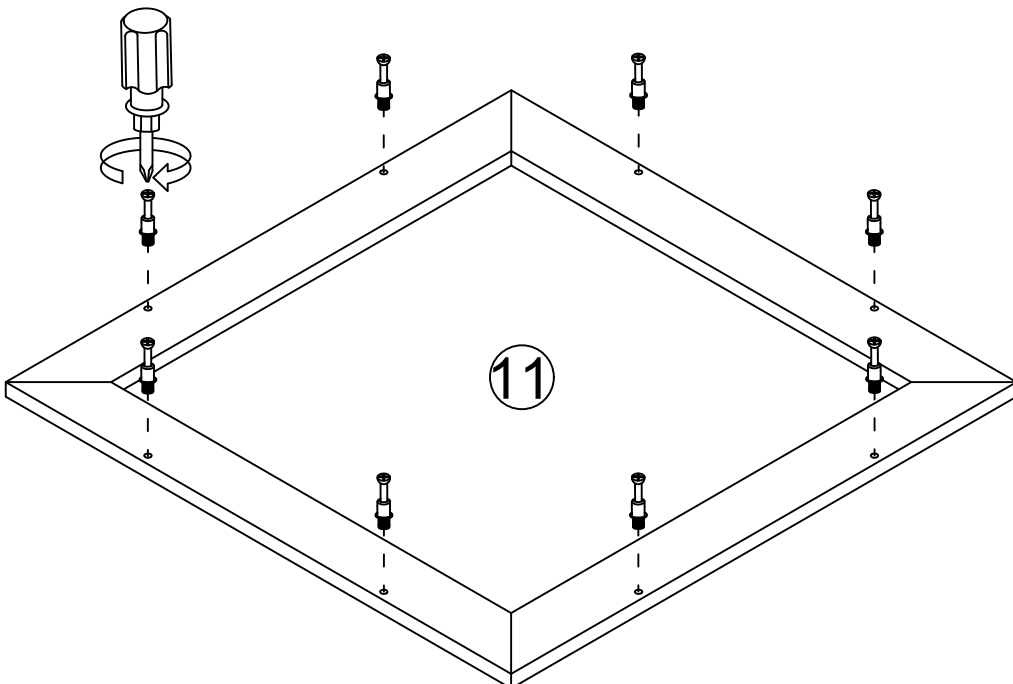


Step 24


B





x8

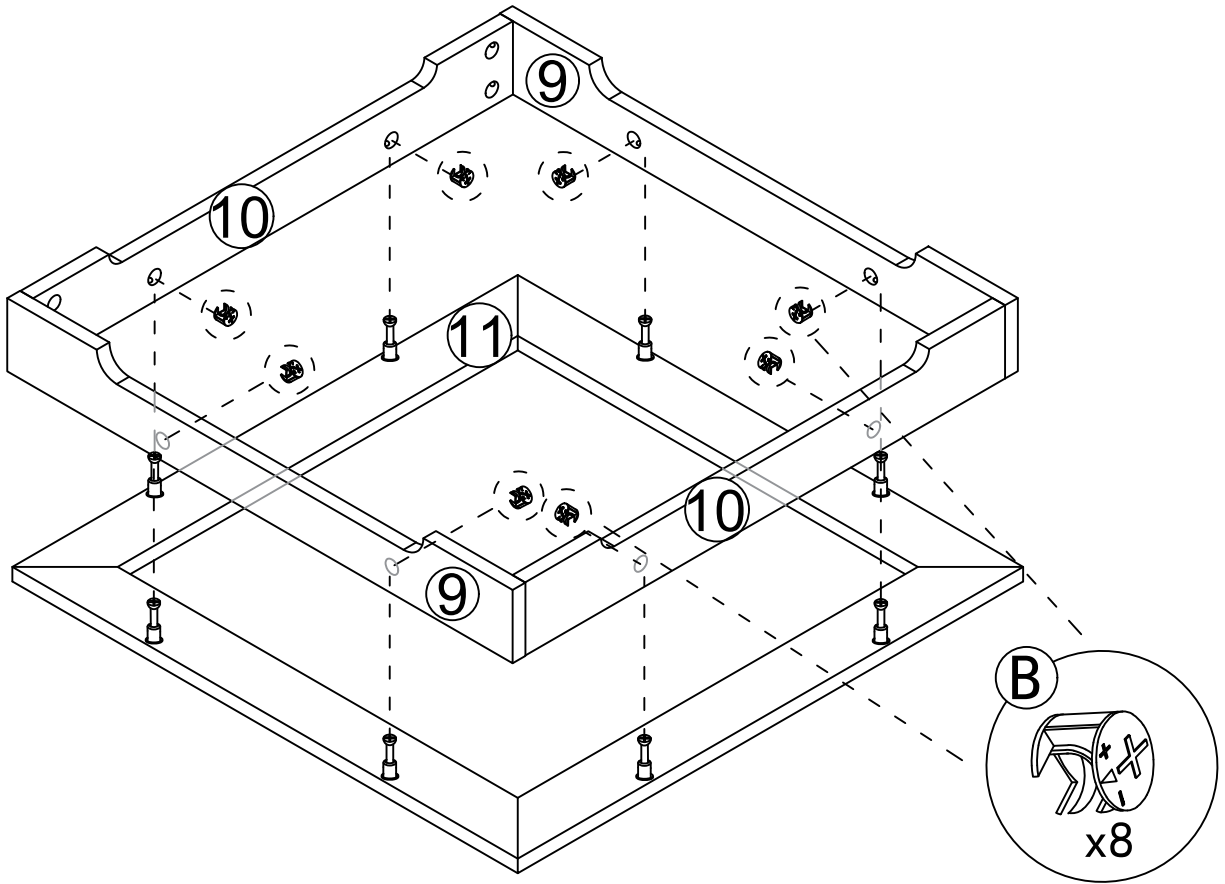



Step 25

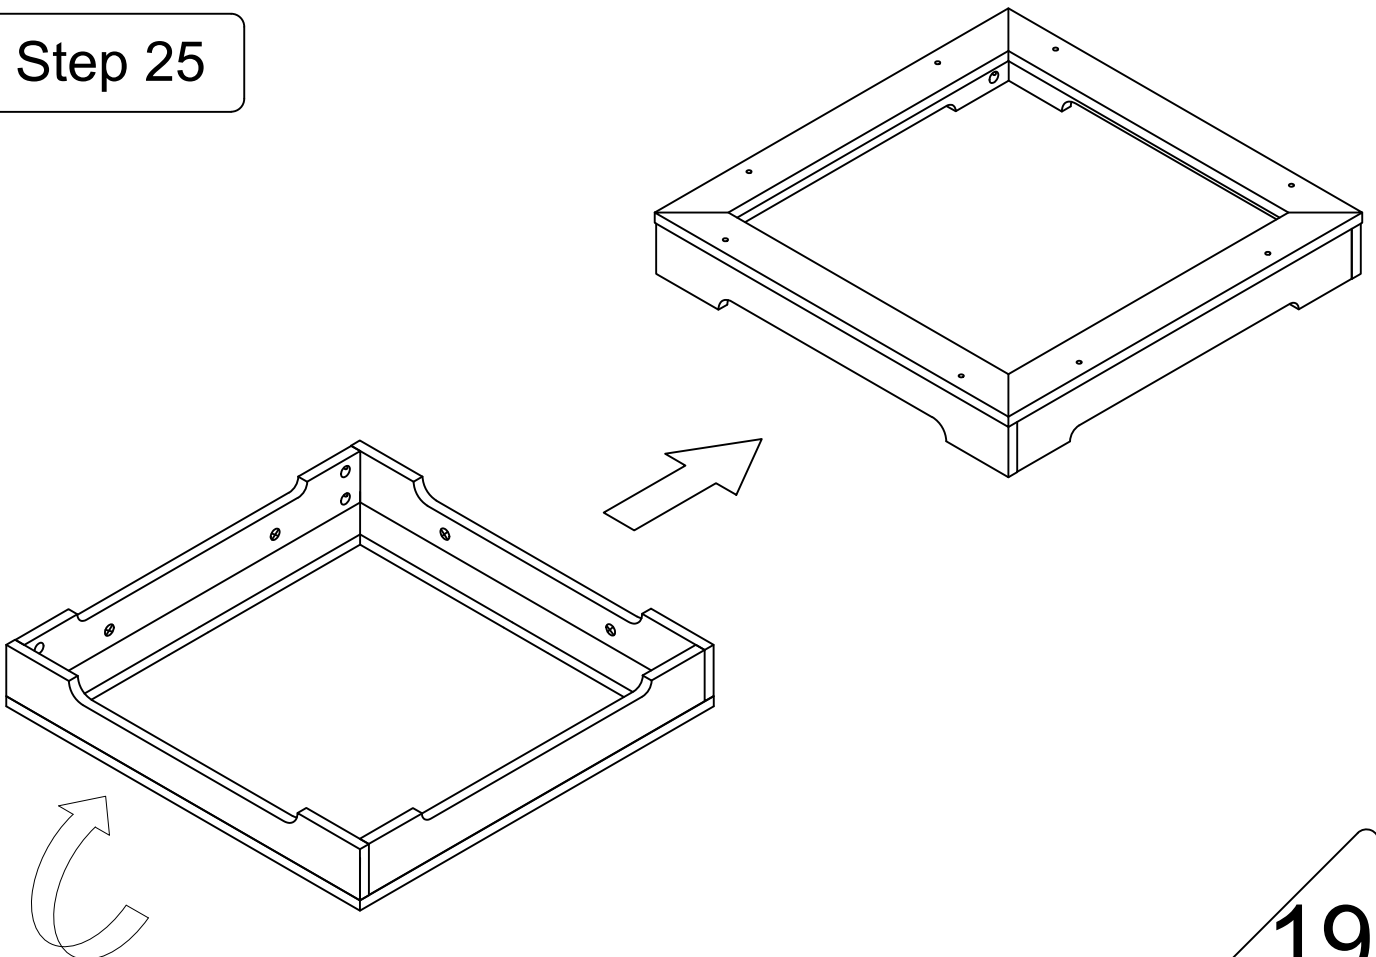

Step 26

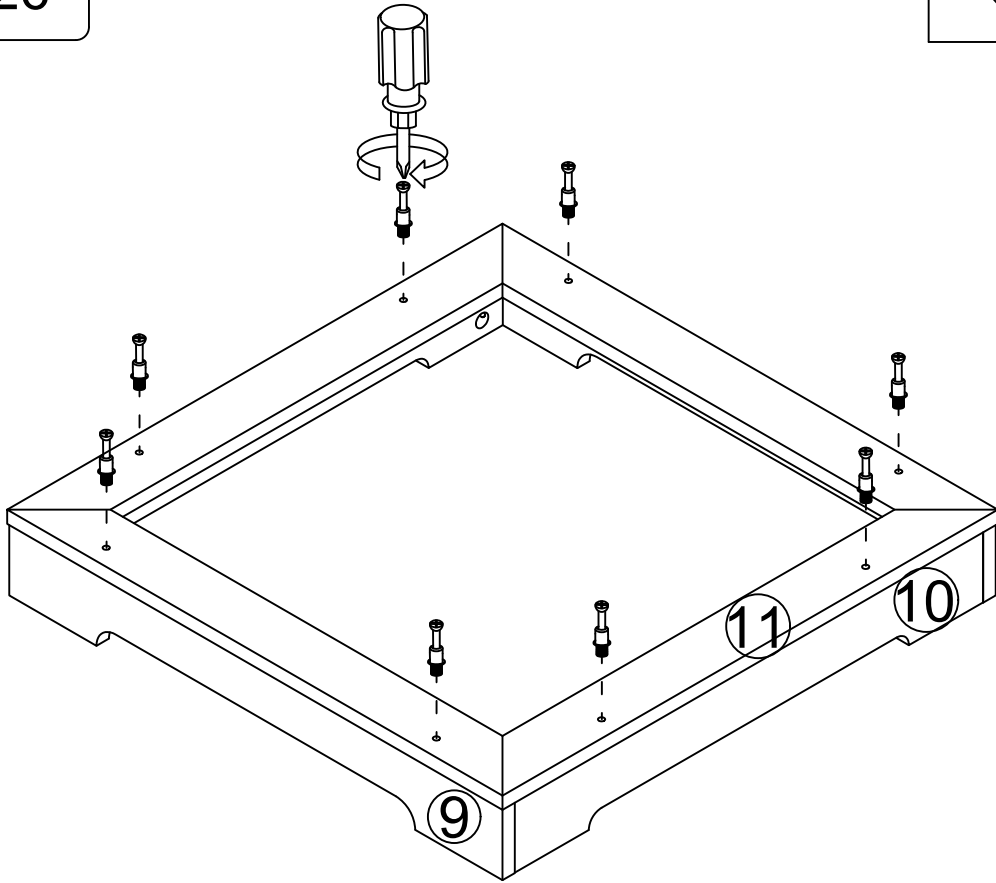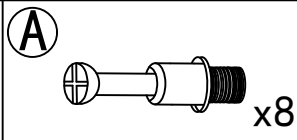

Step 27

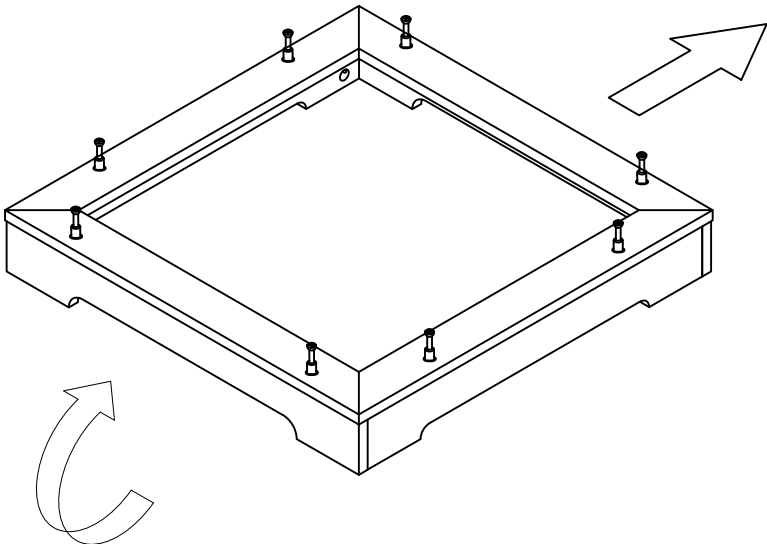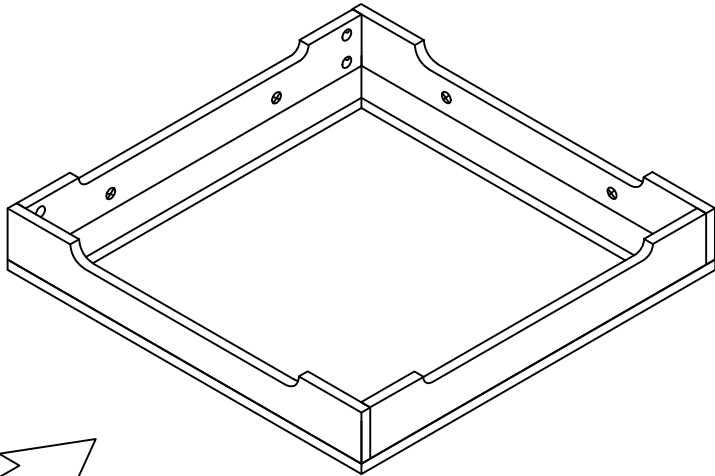


Step 28


B




x8



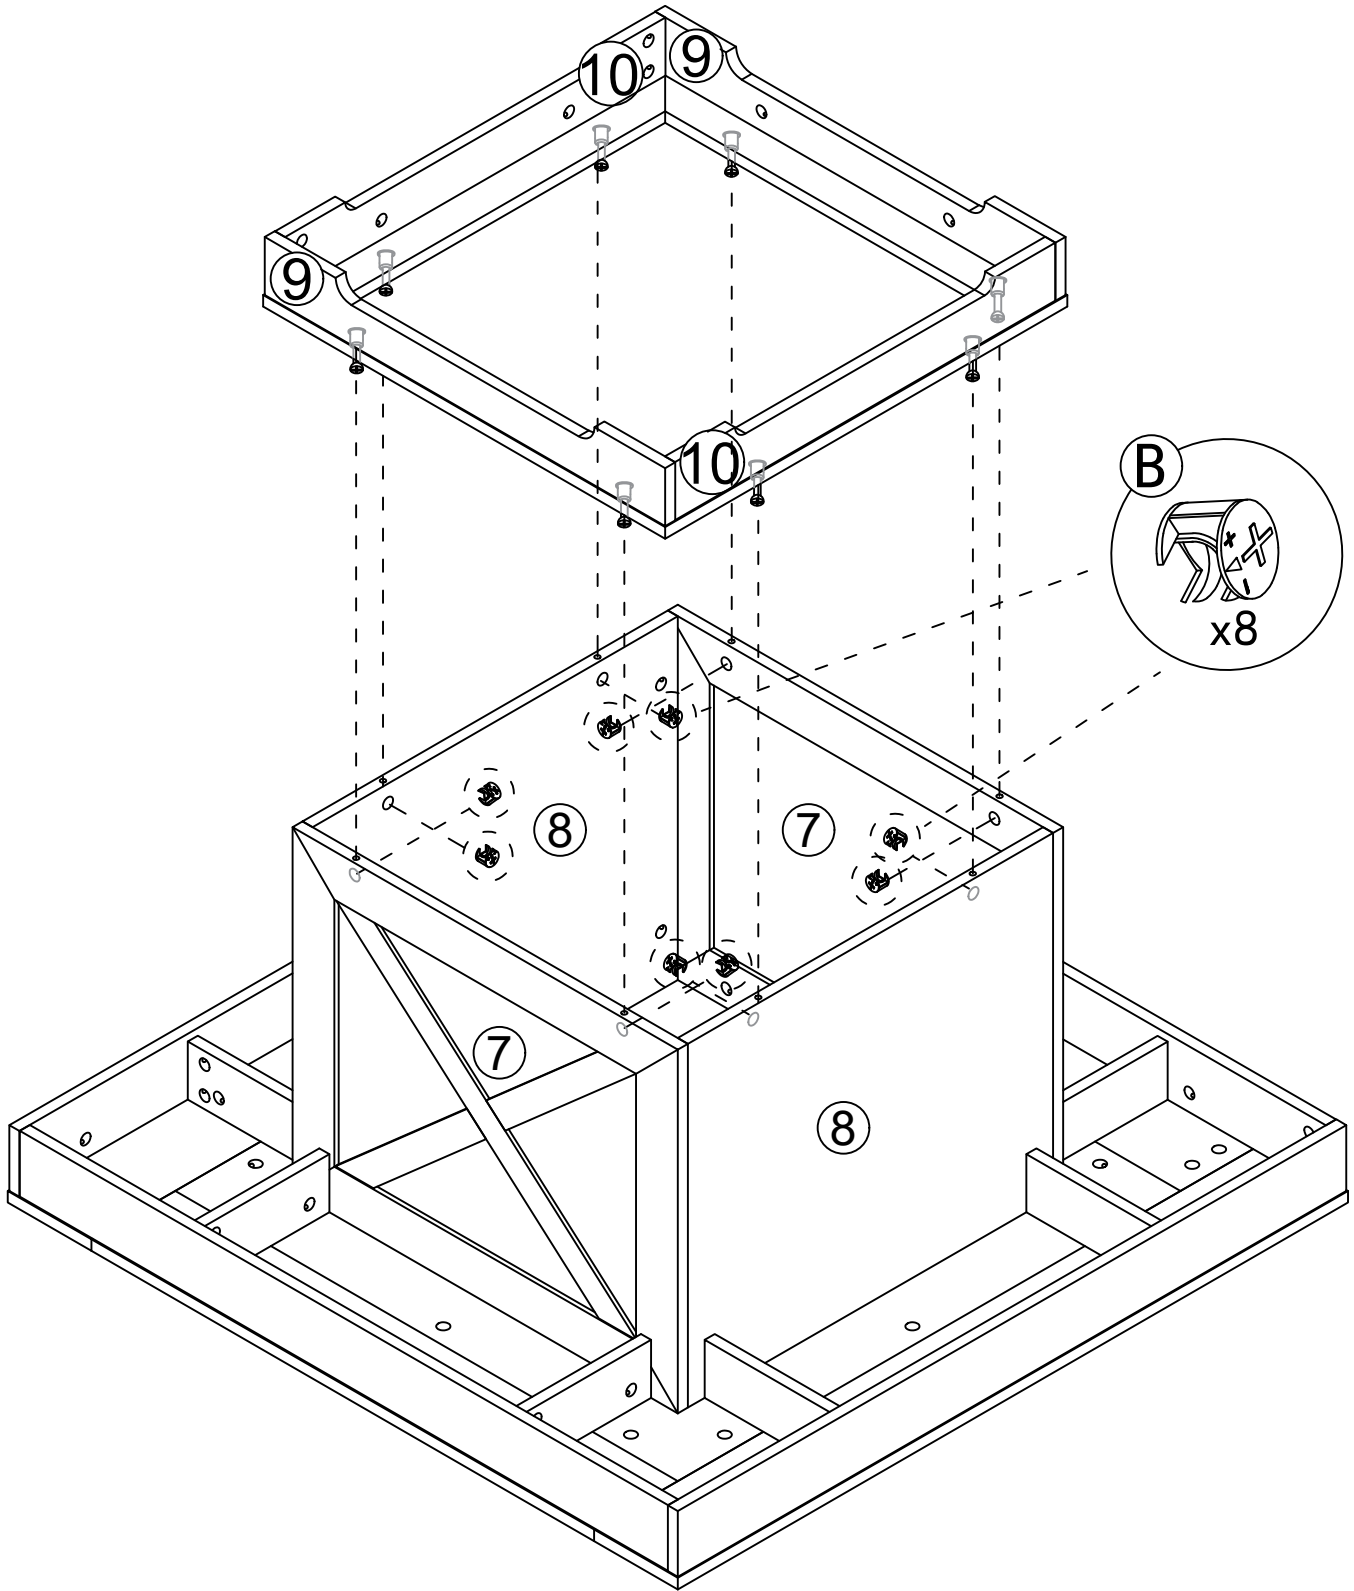


# Step 29

**C**  x8  
Tear off release paper and stick the black foot pad on the board

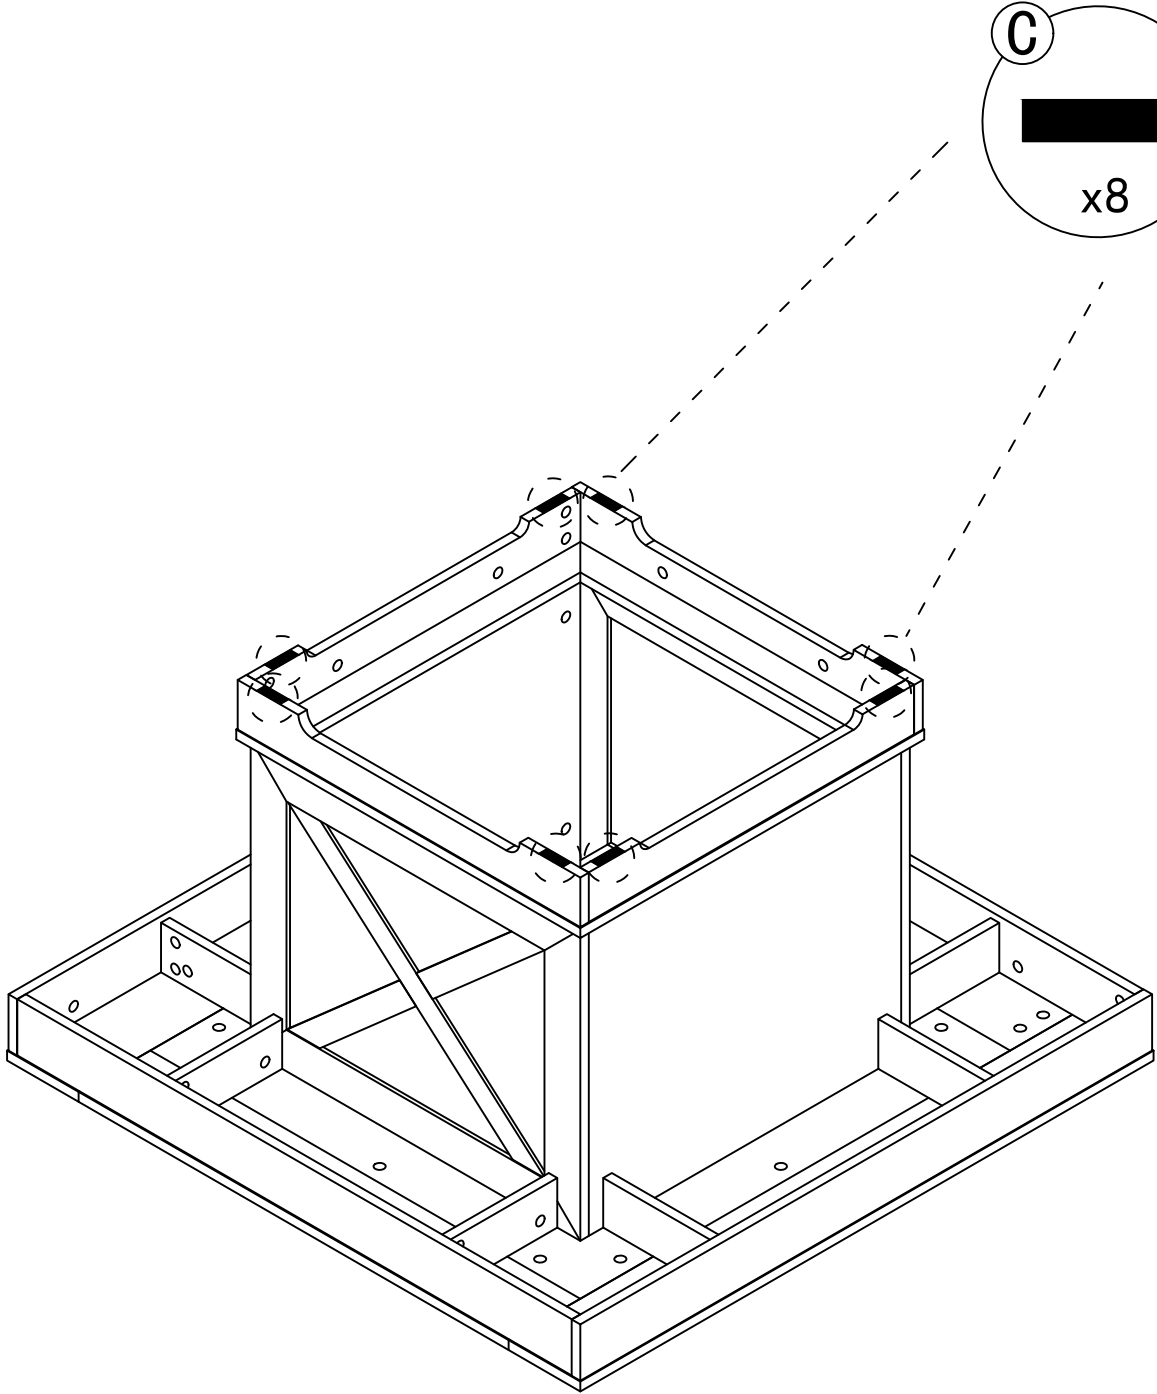

Step 30

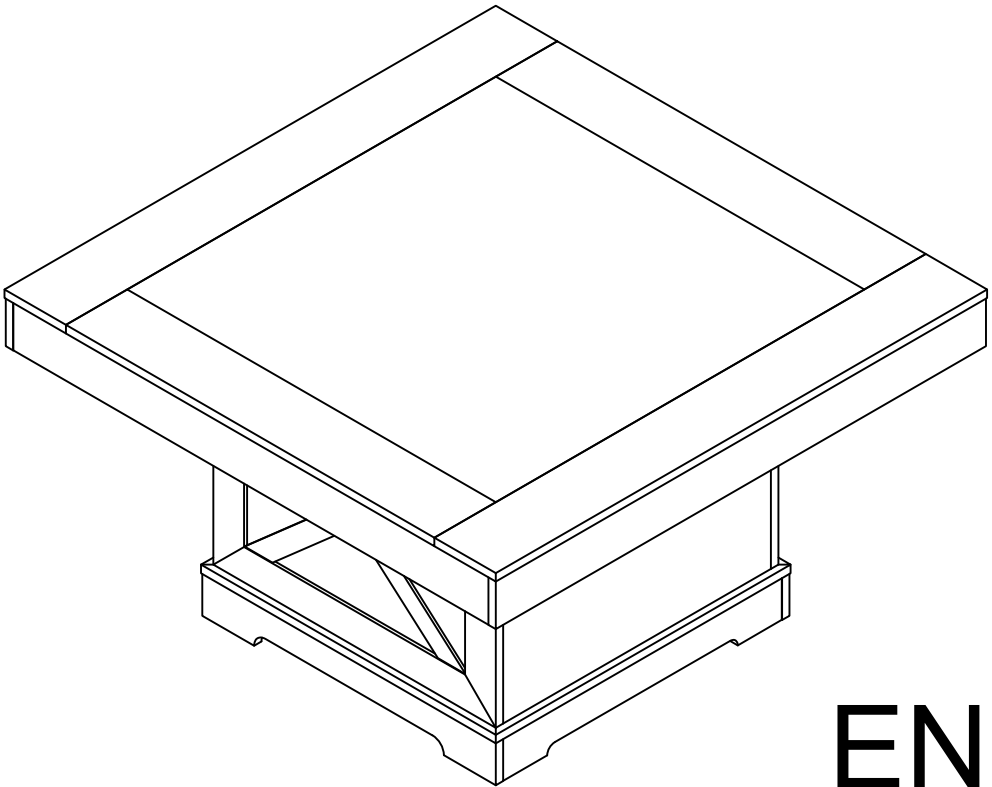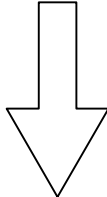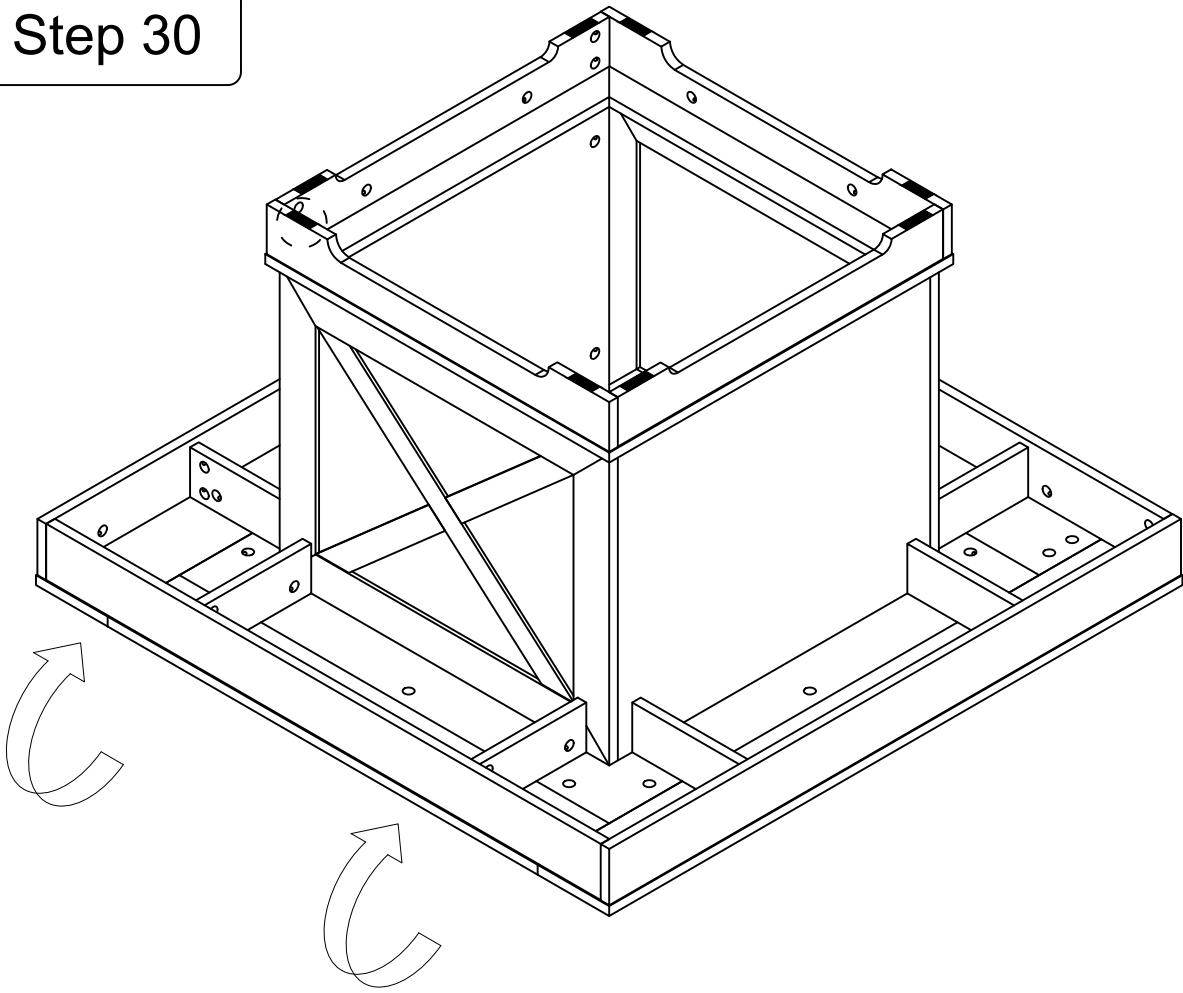

**END**